













Assembly Instructions

Caution : You must read this before you proceed


Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

QUEEN BED

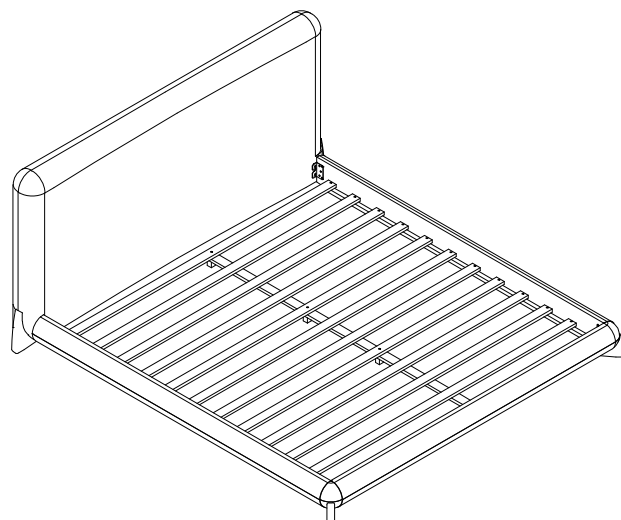


REQUIRED
ASSEMBLY TOOLS



NO POWER
TOOLS NEEDED



2 PERSON
ASSEMBLY

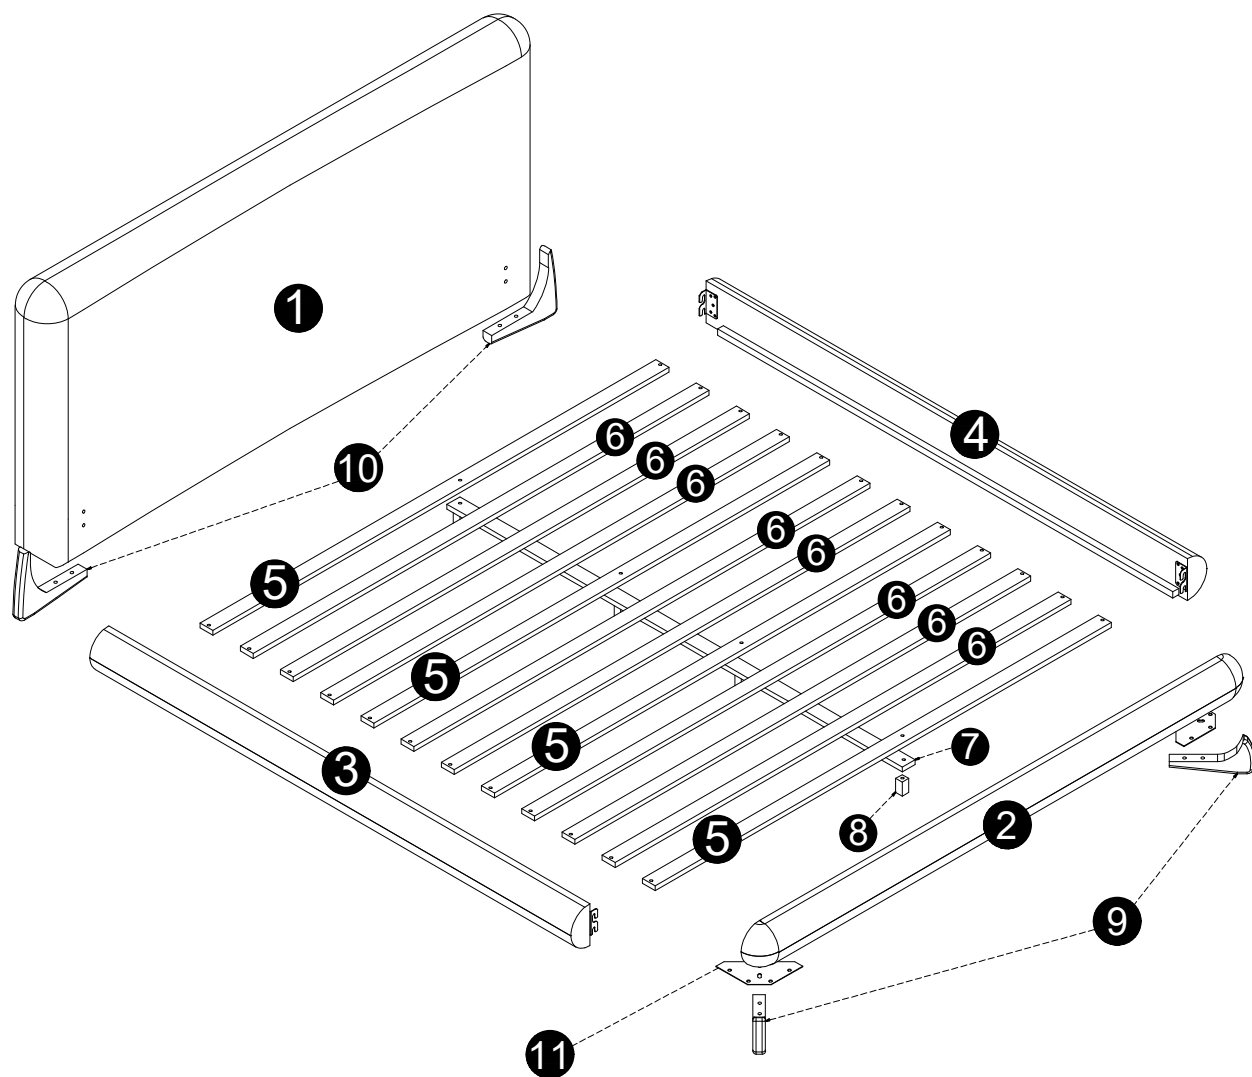


PARTS

N757P333874

BOX : 1/2

check that you've received all parts
listed below

1 (1pc)

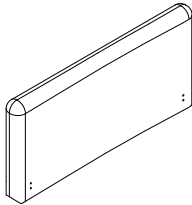

Head Board

5 (4pcs)



Slats

6 (8pcs)




Slats

8 (4pcs)




Support Legs

9 (2pcs)




Footboard Leg

10 (2pcs)

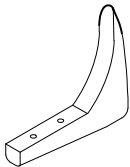

Headboard Leg

11 (2pcs)



Sheet metal

HARDWARE




PARTS

N757P333875

BOX : 2/2


check that you've received all parts
listed below

2 (1pc)

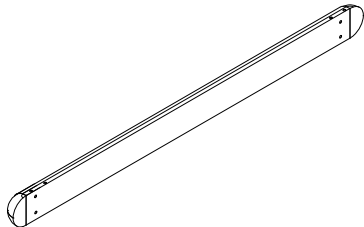


FootBoard

3 (1pc)

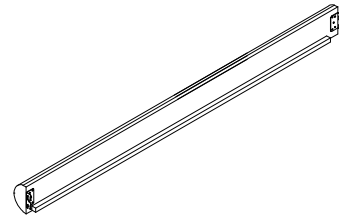


Side Board Left

4 (1pc)

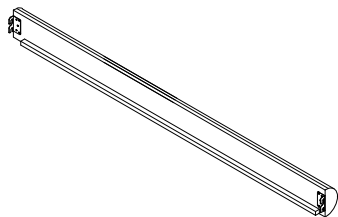







Side Board Right

7 (1pc)




Slats

HARDWARE LIST


NO	OUTLOOK	DESC	QTY
A		Bolts 5/16*20mm	4 + 1
B		Bolts 5/16*30mm	12 + 1
C		Bolts 5/16*60mm	8 + 1
D		Flat washer Ø19x1.5 mm	24 + 3
E		Spring washer Ø13x1 mm	24 + 3
F		Allen wrench 80x30x4 mm	1 + 1
G		Screws Ø4x30 mm	24 + 1

Hardware : Each of the above hardware including extra 1 pc



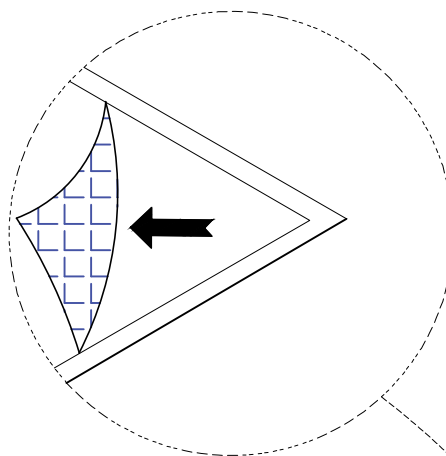


STEP 1

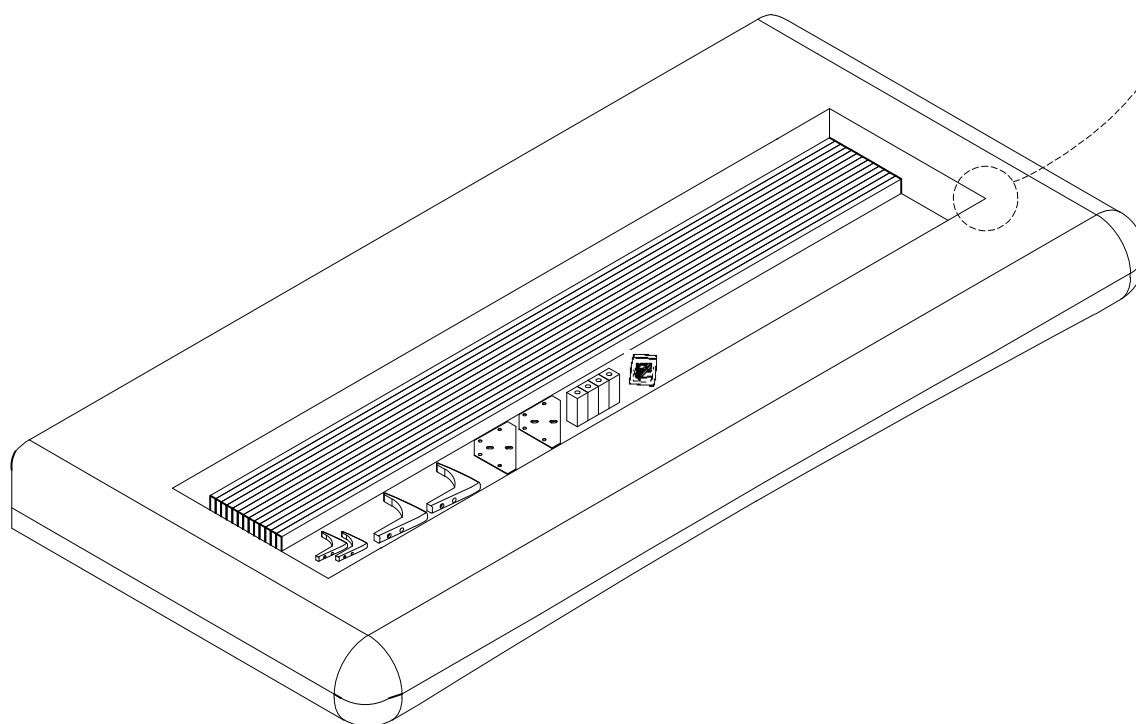


Open the black fabric and take out the details : 5 , 6 , 8 , 9 , 10 , 11 , hardware





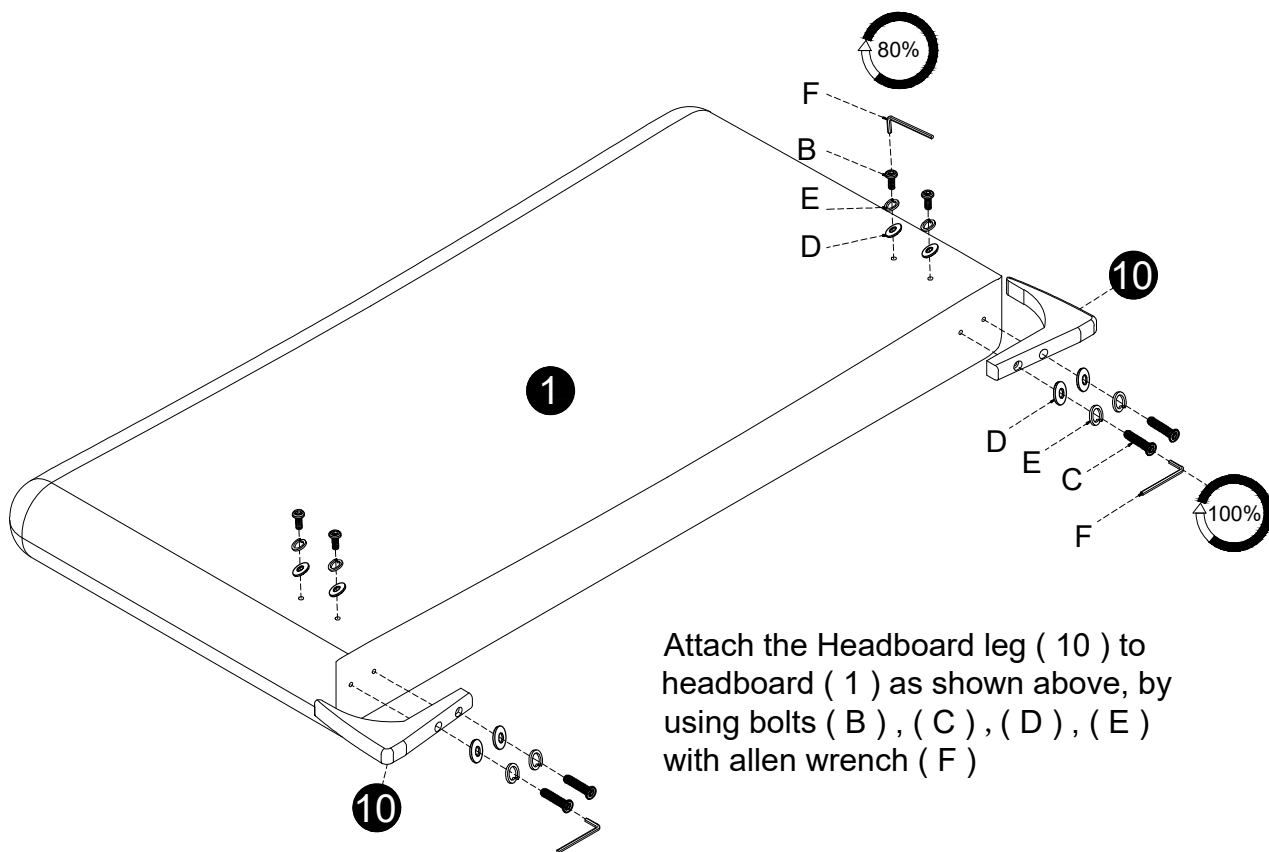


STEP 2

Bx4	Cx4	Dx8	Ex8	Fx1
				




STEP 3

Bx8	Dx8	Ex8	Fx1
			

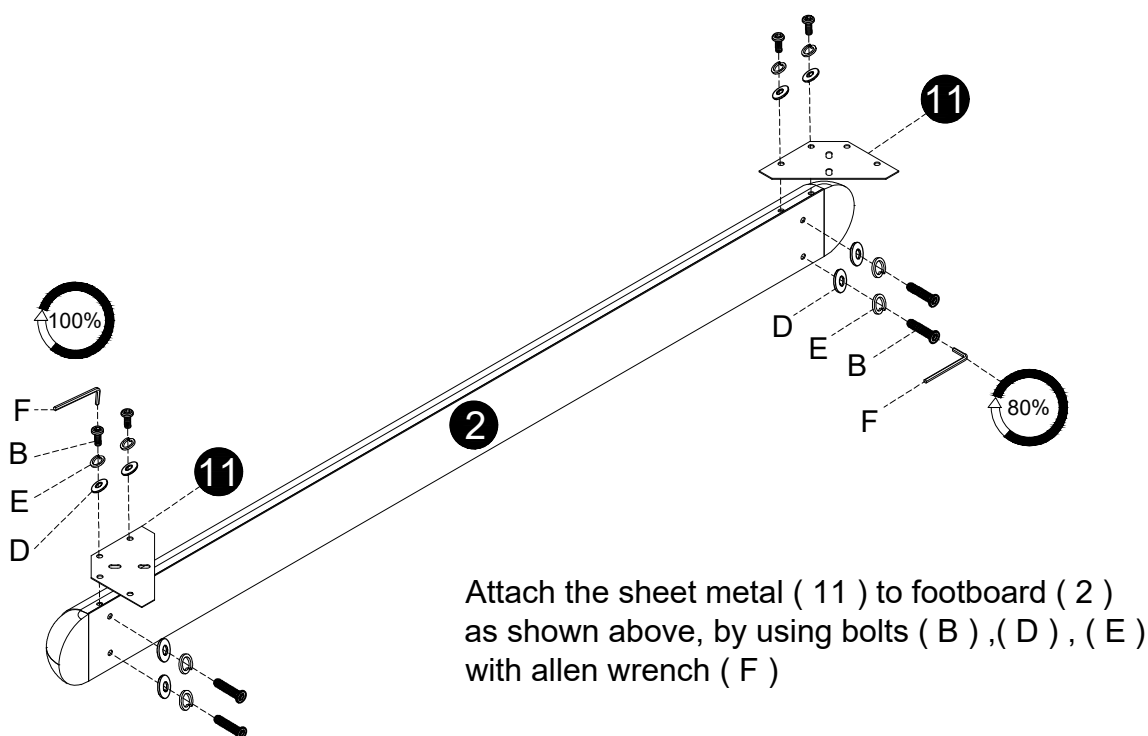


STEP 4

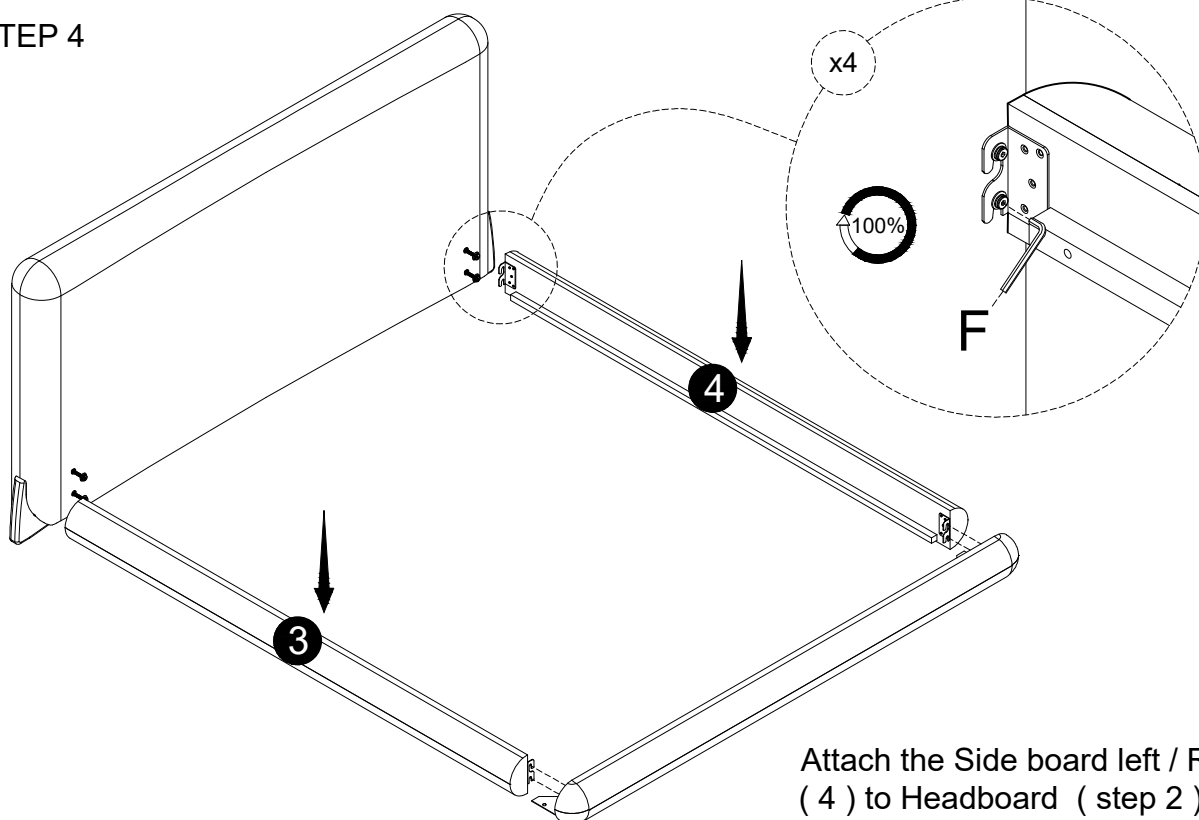

Attach the Side board left / Right (3) / (4) to Headboard (step 2) and footboard (step 3) as shown above, Tighten bolts with allen wrench (F)



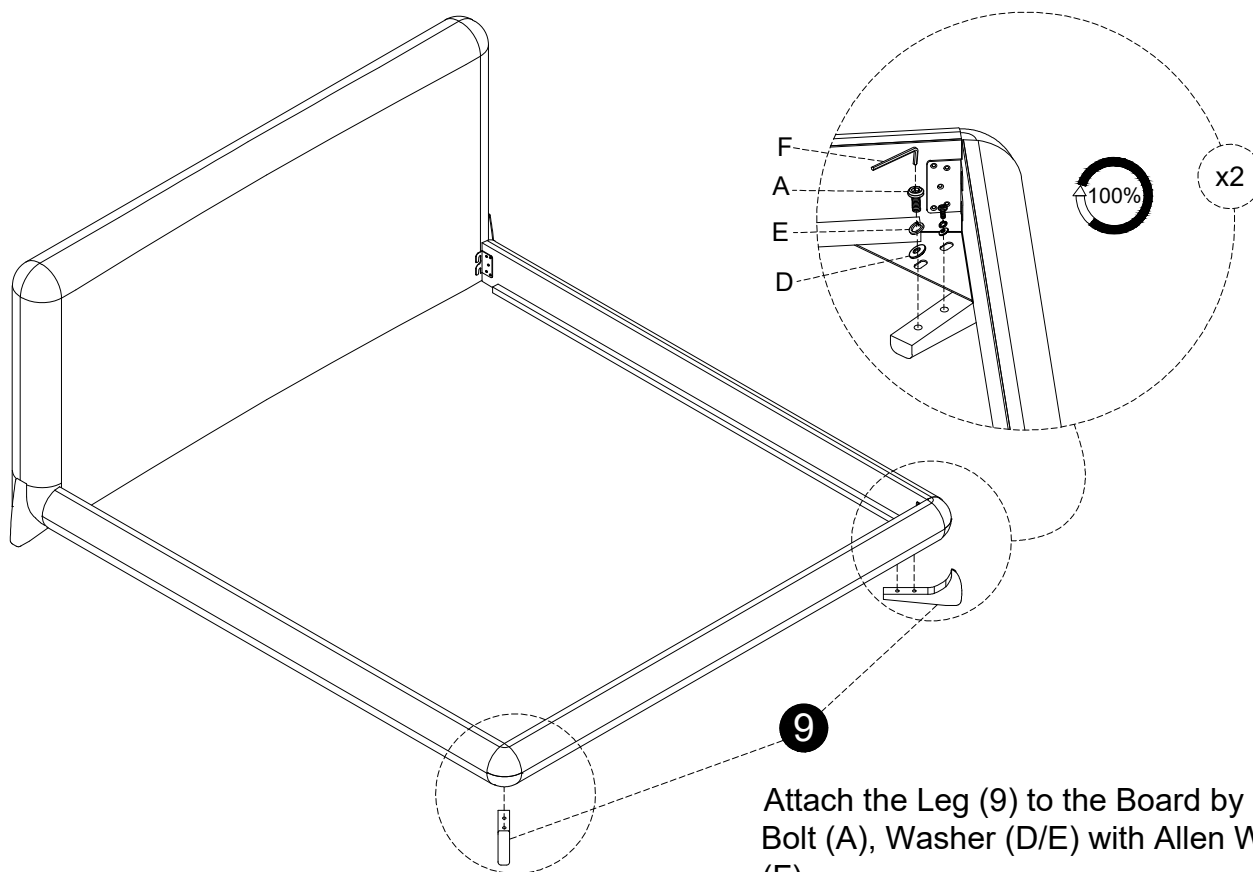


STEP 5


Ax4	Dx4	Ex4	Fx1



Attach the Leg (9) to the Board by using Bolt (A), Washer (D/E) with Allen Wrench (F)

STEP 6


Cx4	Dx4	Ex4	Fx1	Gx8
				

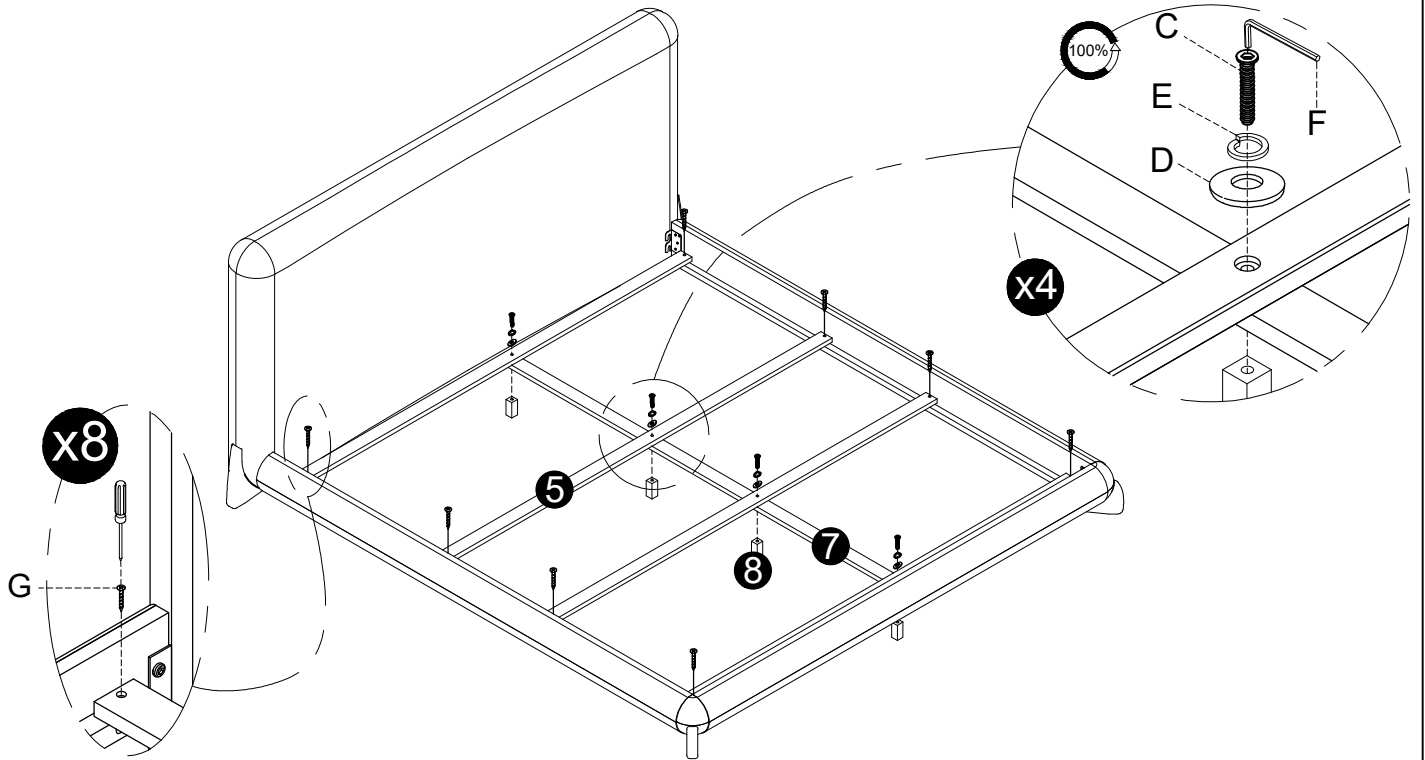

Align the mounting position on the slats (7) and the slats (5) on the support leg (8) and by using Bolts (C) , (D) , (E) with allen Wrench (F) after than using Screws (G) by screwdriver (Not provided)

STEP 7

Gx16

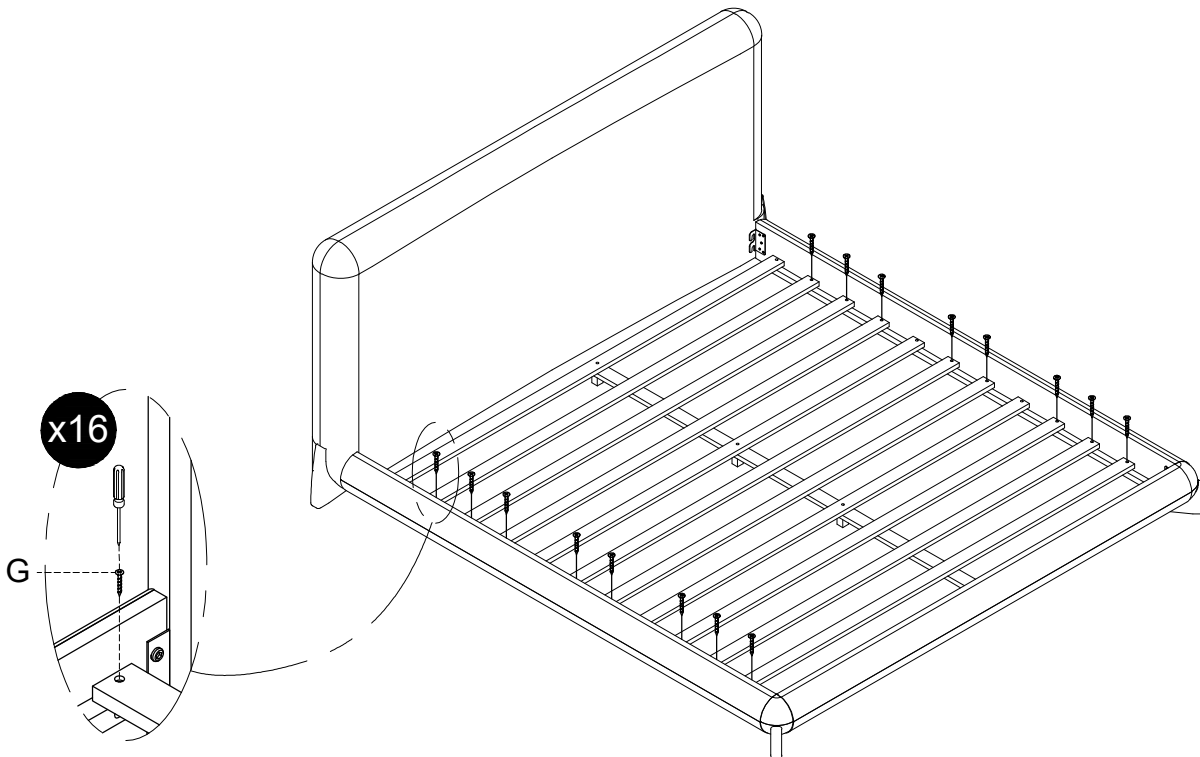

Attach all slats to the rail on side board by using Screws (G) and by screwdriver (Not provided)

