ASSEMBLY INSTRUCTIONS


ITEM NO: 194S1108DGY/TPE/BUE-1 **Accent Chair**


Legs and hardware are stored in the bottom of the seat, please take them out for assembly. A Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

PART	DRAWING	DESCRIPTION	QTY
Α		Chair Back	1 PC
В		Chair Seat	1 PC
С		Seat Cushion	1 PC
D	9999	Metal Leg 3-5/32"x3-5/32"x7-1/2"	4 PCS

PART	DRAWING	DESCRIPTION	QTY
1		Bolt Ø5/16"×1-1/2"	6 PCS
2		Bolt Ø5/16"×1"	8 PCS
3	O	Spring Washer Ø5/16"	14 PCS
4	0	Flat Washer Ø5/16"×3/4"	14 PCS
5		Allen Key M4	1 PC

STEP 1:

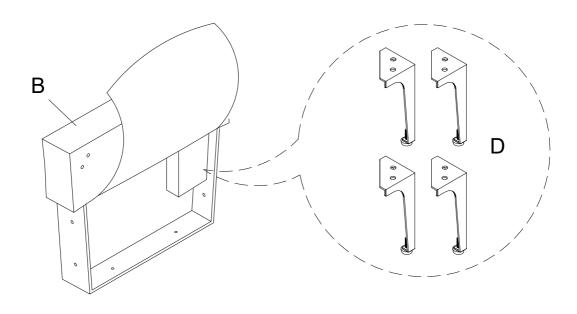




MADE IN VIETNAM Page: 1/3

ASSEMBLY INSTRUCTIONS


ITEM NO: 194S1108DGY/TPE/BUE-1
Accent Chair

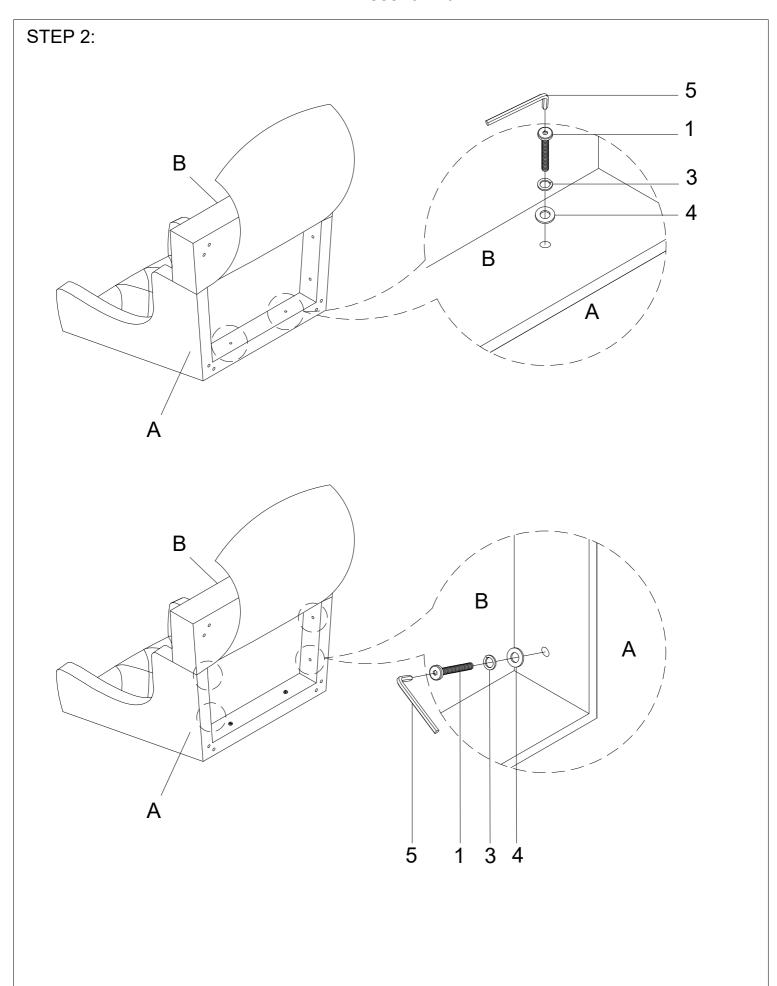


ASSEMBLY INSTRUCTIONS

ITEM NO: 194S1108DGY/TPE/BUE-1
Accent Chair



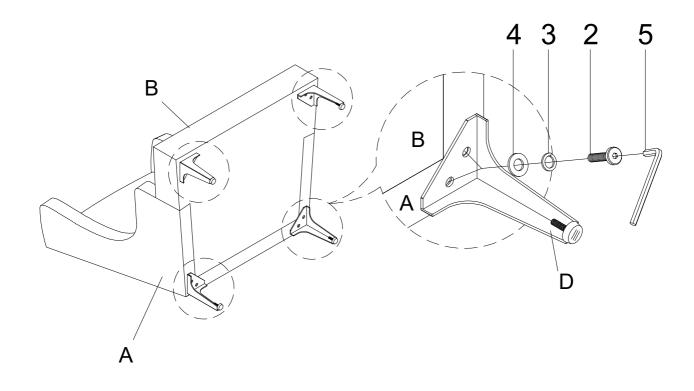

COMPLETED

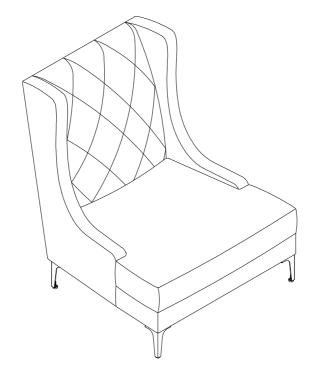

Care Instruction for Chenille Furniture:

In order to maintain the original appearance of your chenille furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets.
 Sunlight and/or exposure to heating and air conditioning outlets will fade/damage chenille.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connections are tight, Re-tighten if necessary

For item use on wooden floor,hard surfaces or carpets,it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.

MADE IN VIETNAM Page: 3/3