

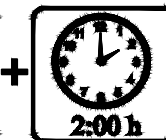
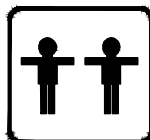


N725P366466
ASSEMBLY INSTRUCTIONS
36 INCHES BATH VANITY (COMBO)

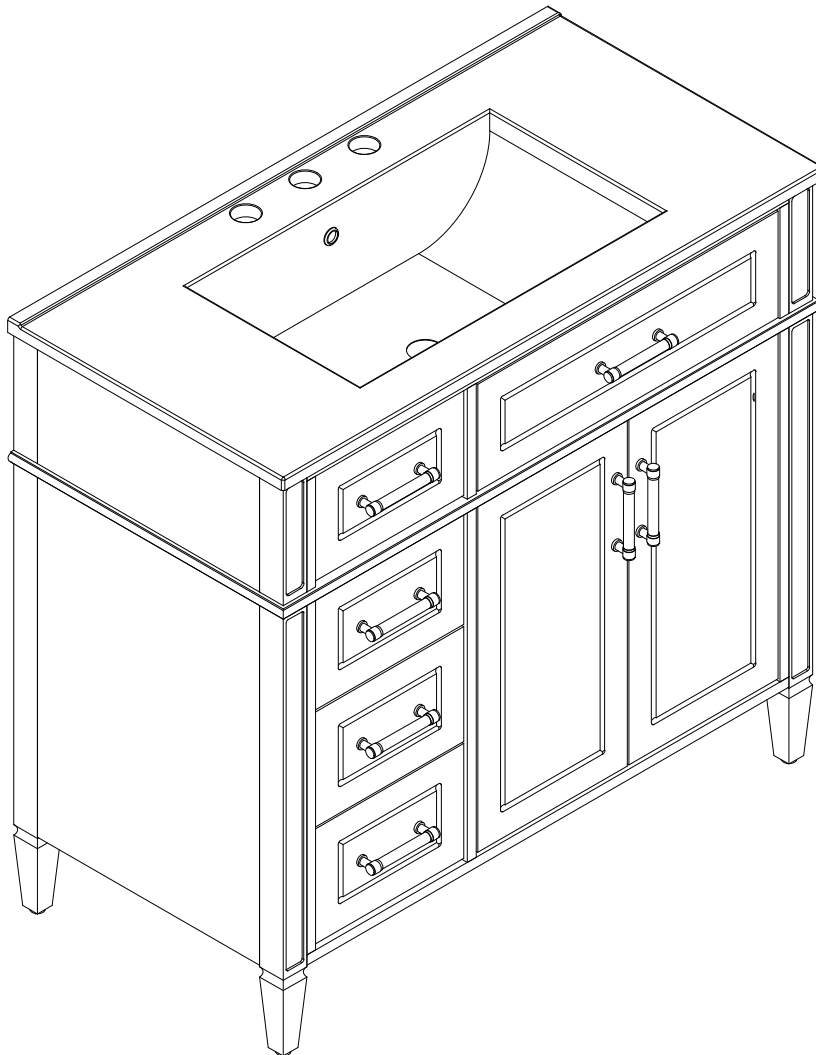


Thank you for purchasing this quality product. Be sure to check all parts material carefully for small parts which may have come loose inside carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present, "DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

- 
- * Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
 - * Please assemble on a clean soft surface to avoid damage.



Tools Required



(Not Included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation

Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.







. Please do not over tighten screws or bolts until the assembly is completed.

. Keep children and animal away from the work area, small parts could choke if swallowed.


. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.




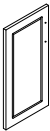
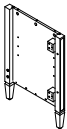


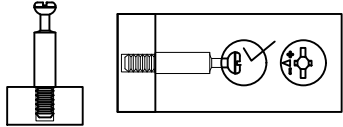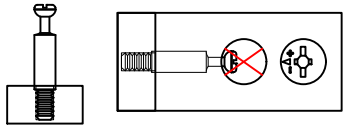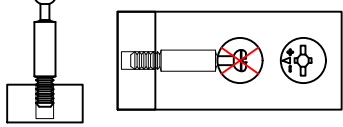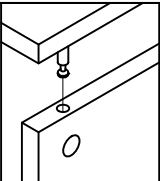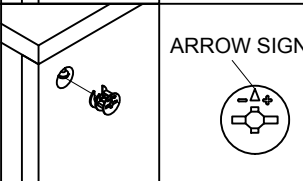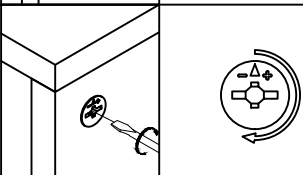





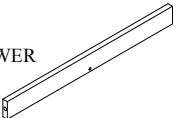
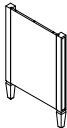
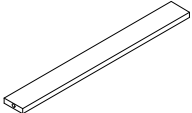
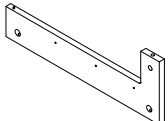
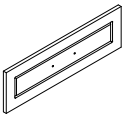
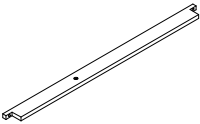
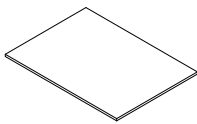
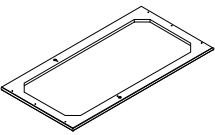
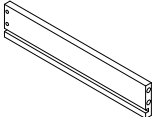
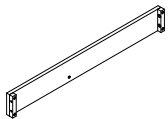
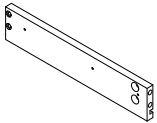
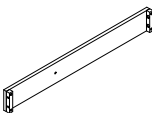
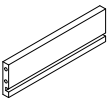
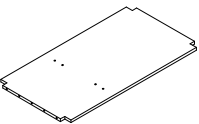
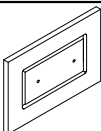
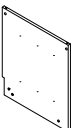
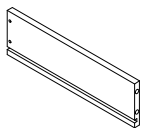
Cam Lock Assembly Instructions







	Insert Cam Bolt into hole as shown in diagram A.
	Make sure not to insert the Cam Bolt. Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

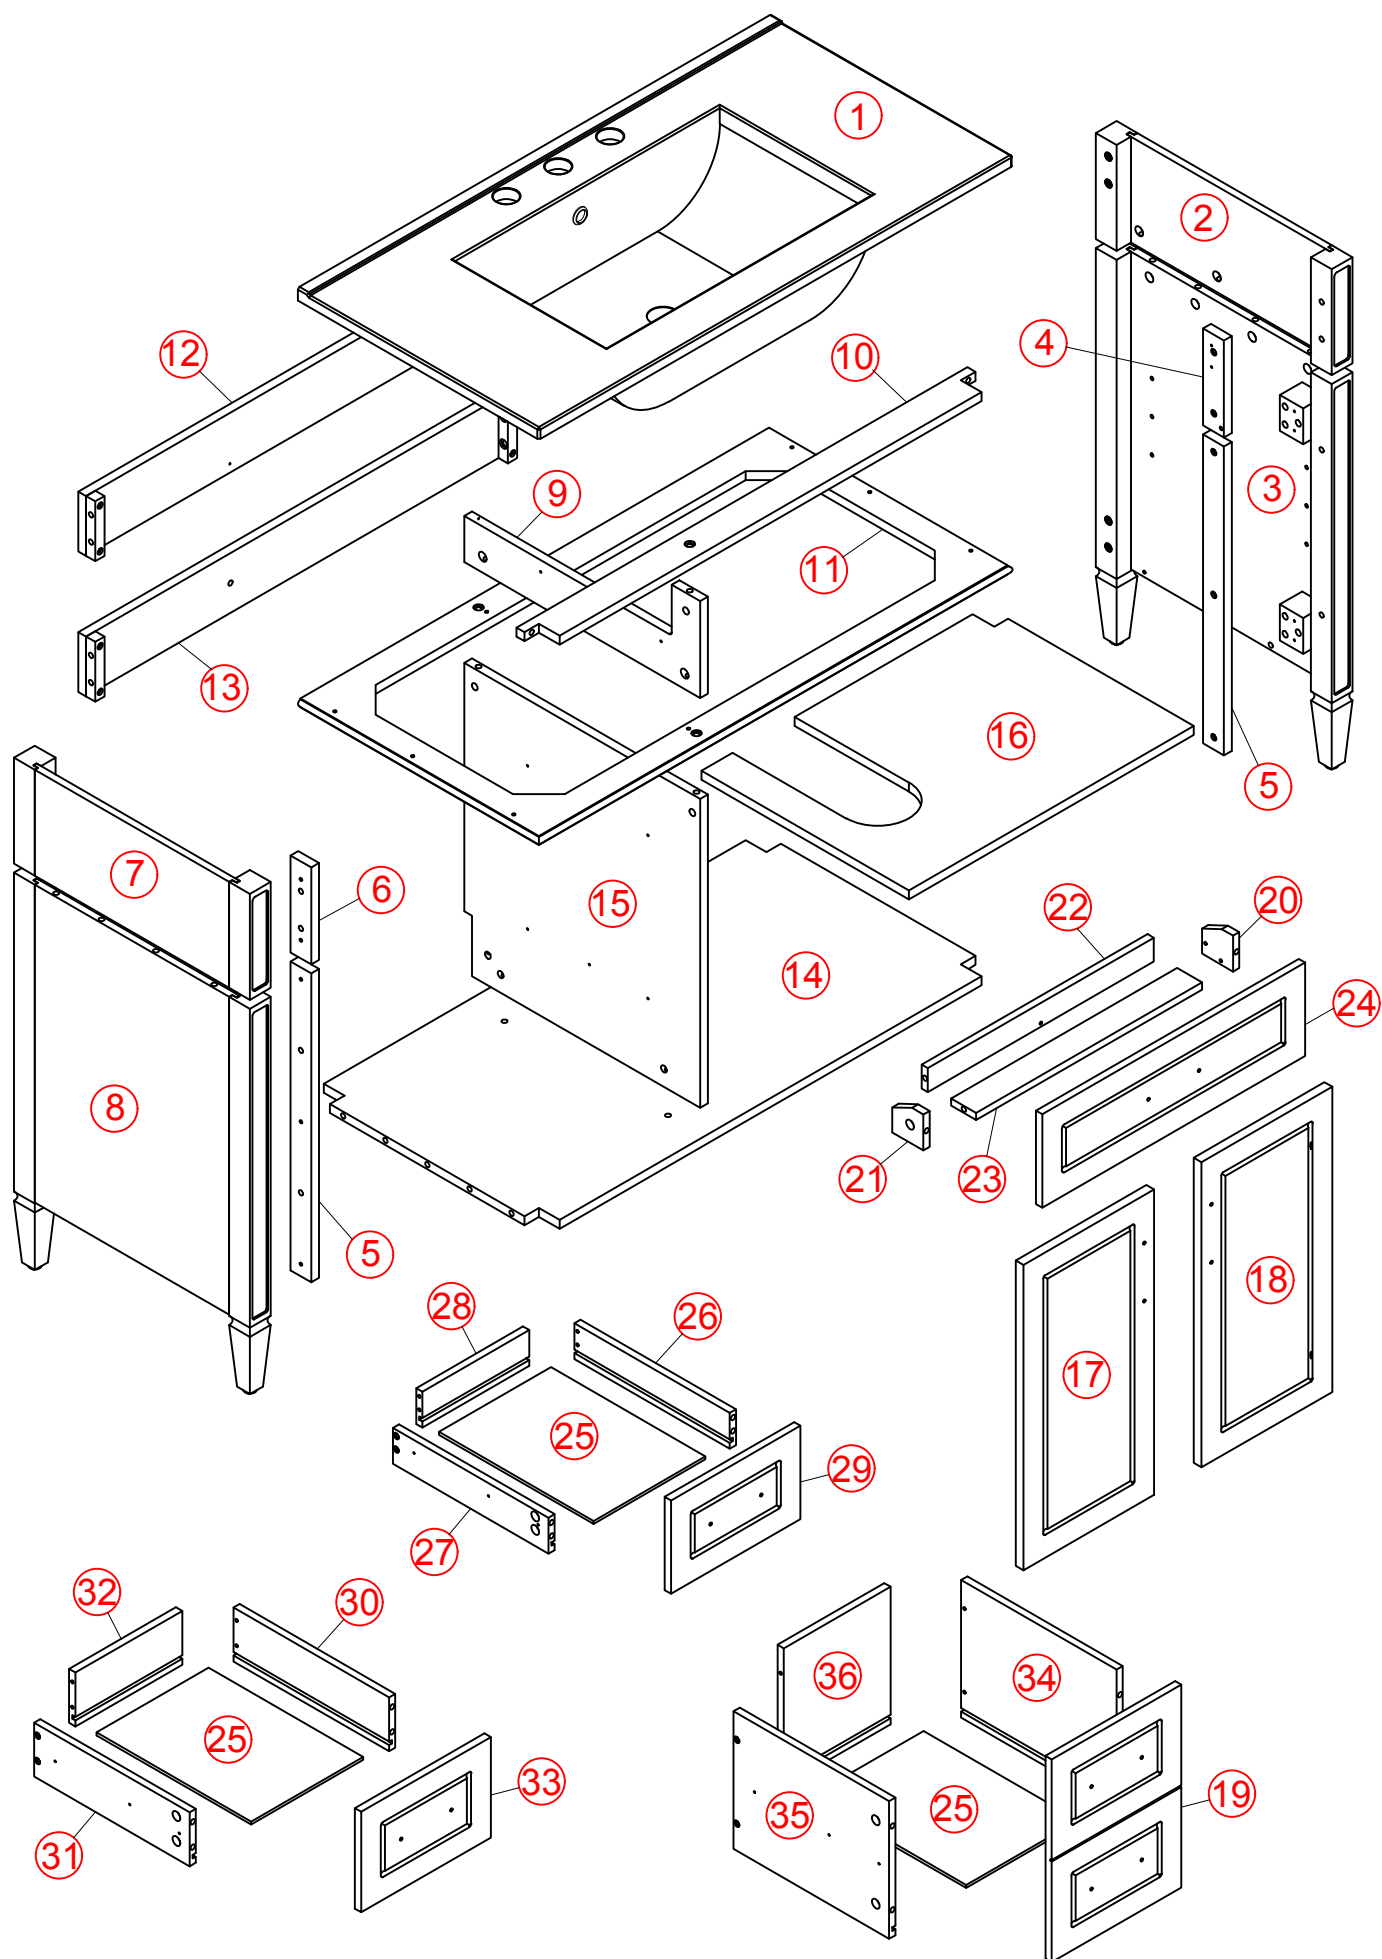PRODUCT DETAILS



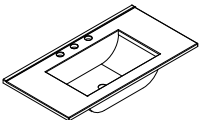

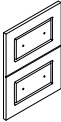
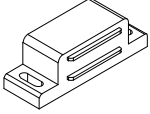



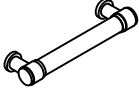

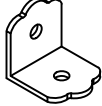

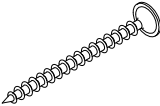


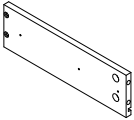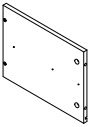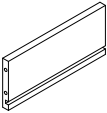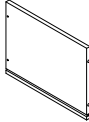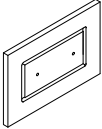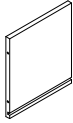
PARTS LIST


①	SINK (LAVABO)		1PC	①6	SHELF		1PC
②	RIGHT HIP UP		1PC	①7	LEFT DOOR PANEL		1PC
③	LOWER RIGHT HIP		1PC	①8	RIGHT DOOR PANEL		1PC
④	TOP RIGHT SIDE BAR		1PC	①9	DRAWER FACE 3		1PC
⑤	LOWER SIDE BAR		2PCS	②0	RIGHT-TURN DRAWER SIDE		1PC
⑥	TOP LEFT SIDE BAR		1PC	②1	LEFT-TURN DRAWER SIDE		1PC
⑦	LEFT HIP UP		1PC	②2	BACK BOARD OF FLIP-UP DRAWER		1PC
⑧	LOWER LEFT HIP		1PC	②3	FLIP-UP DRAWER BOTTOM		1PC
⑨	TOP PARTITION		1PC	②4	FLIP-OFF DRAWER FRONT		1PC
⑩	FRONT HORIZONTAL BAR		1PC	②5	DRAWER BOTTOM		3PCS
⑪	MIDDLE FRAME		1PC	②6	RIGHT DRAWER SIDE 1		1PC
⑫	TOP BAR		1PC	②7	LEFT DRAWER SIDE 1		1PC
⑬	LOWER HORIZONTAL BAR		1PC	②8	BACK BOARD OF DRAWER 1		1PC
⑭	BOTTOM BOARD		1PC	②9	DRAWER FACE 1		1PC
⑮	LOWER PARTITION		1PC	③0	LEFT DRAWER SIDE 2		1PC

31	RIGHT DRAWER SIDE 2		1PC	34	RIGHT DRAWER SIDE 3		1PC
32	BACK BOARD OF DRAWER 2		1PC	35	RIGHT DRAWER SIDE 3		1PC
33	DRAWER FACE 2		1PC	36	BACK BOARD OF DRAWER 3		1PC






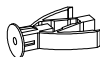


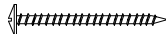




HARDWARE LIST

A	A1 : D300MM		3SETS	H	M6*30MM		10PCS
	A2 : D300MM			I	3.5*15MM		30PCS
B	3.5*10MM		42PCS	J	L45MM		3PCS
C	M4*25MM		10PCS	K	M4*20MM		14PCS
D	Ø 8 * 30MM		8PCS	L	L110MM		7PCS
E	Ø5*35MM		41PCS	M	L22MM		1PC
F	Ø 15*10MM		41PCS	N	M4*50MM		12PCS
G	M6*50MM		6SETS				


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

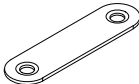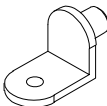



HARDWARE LIST

⓪	Ø 10*10MM		12PCS	
Ⓟ	HINGES		4PCS	
Ⓠ	L 45MM		3PCS	
Ⓡ	L 15MM		6PCS	
Ⓢ	3.5*12MM		12PCS	
Ⓣ		  	  	2SETS
Ⓤ	L4*58MM		1PC	
Ⓥ	HANDLE		1PC	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)





STEP 1

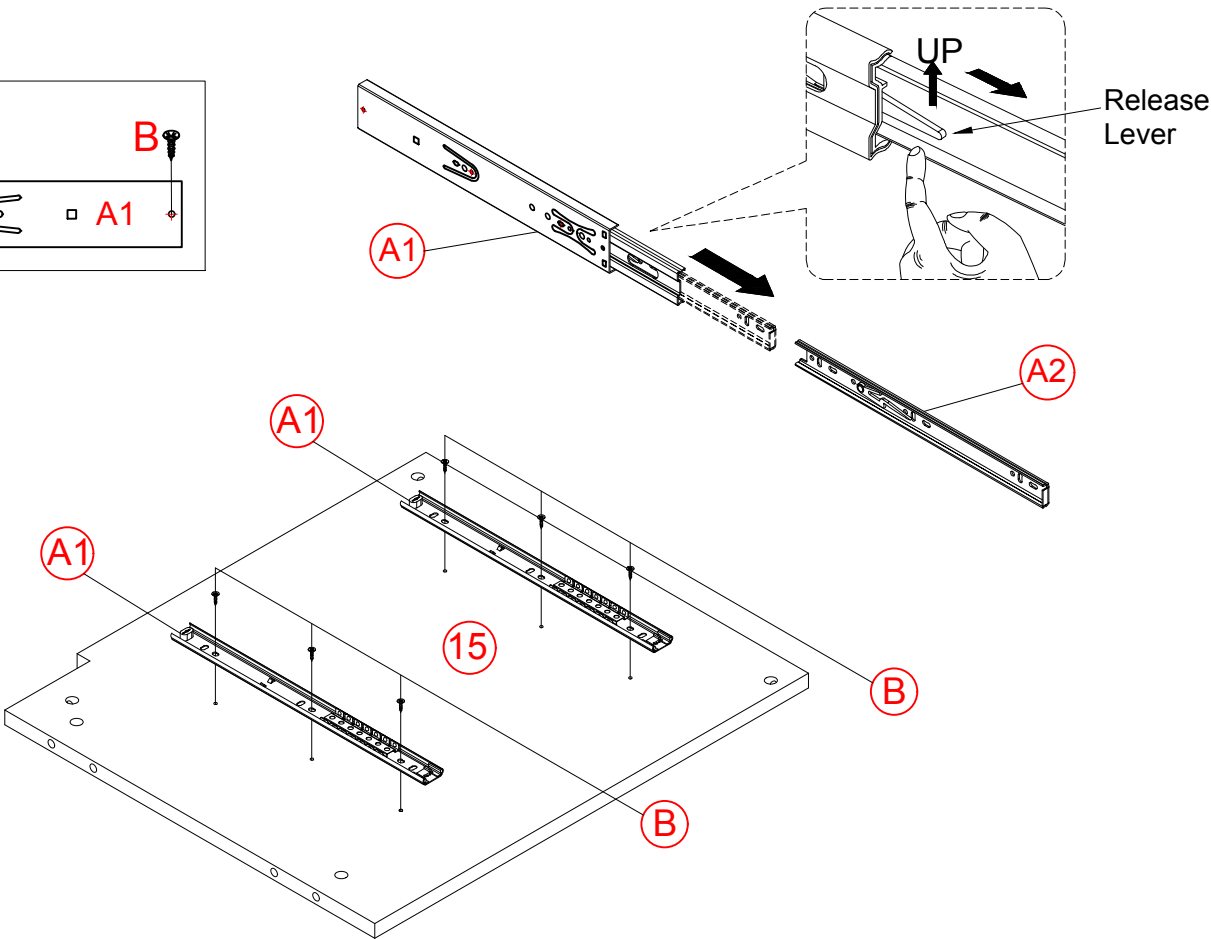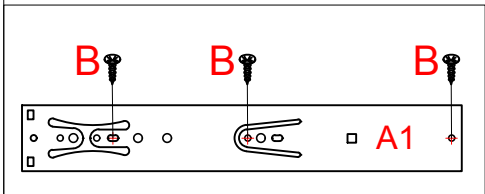






(A)	L45*300MM	2PCS	(B)	3.5*10MM	6PCS
------------	-----------	------	------------	----------	------

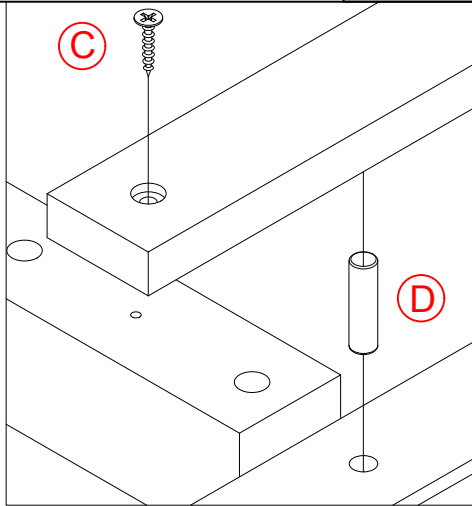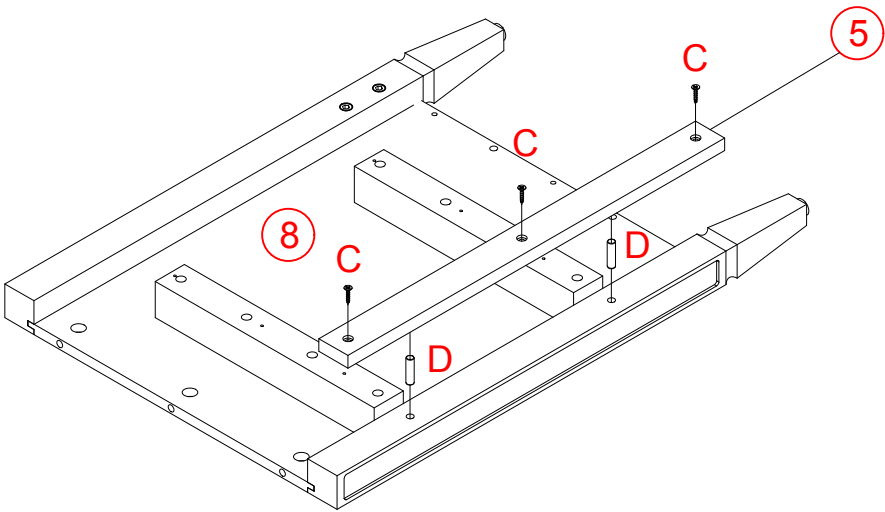


STEP 2




(C)	M4*25MM	3PCS	(D)	Ø 8 * 30MM	2PCS
------------	---------	------	------------	------------	------

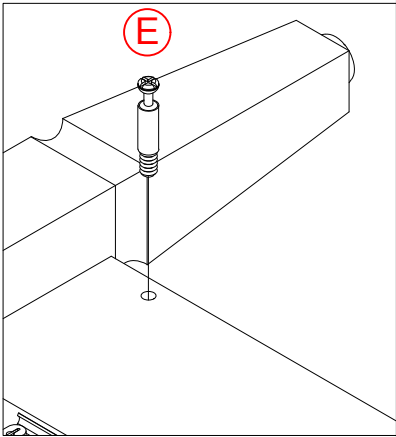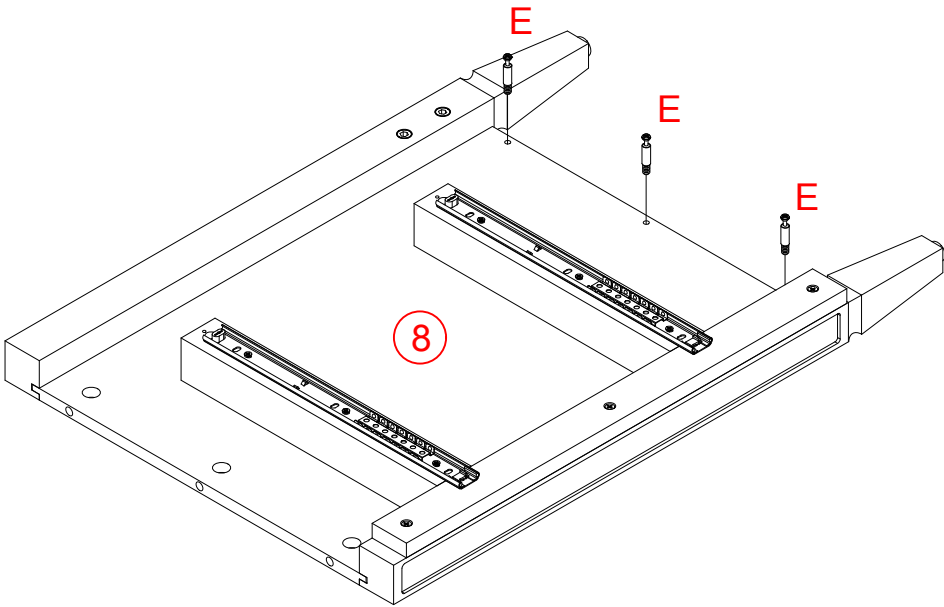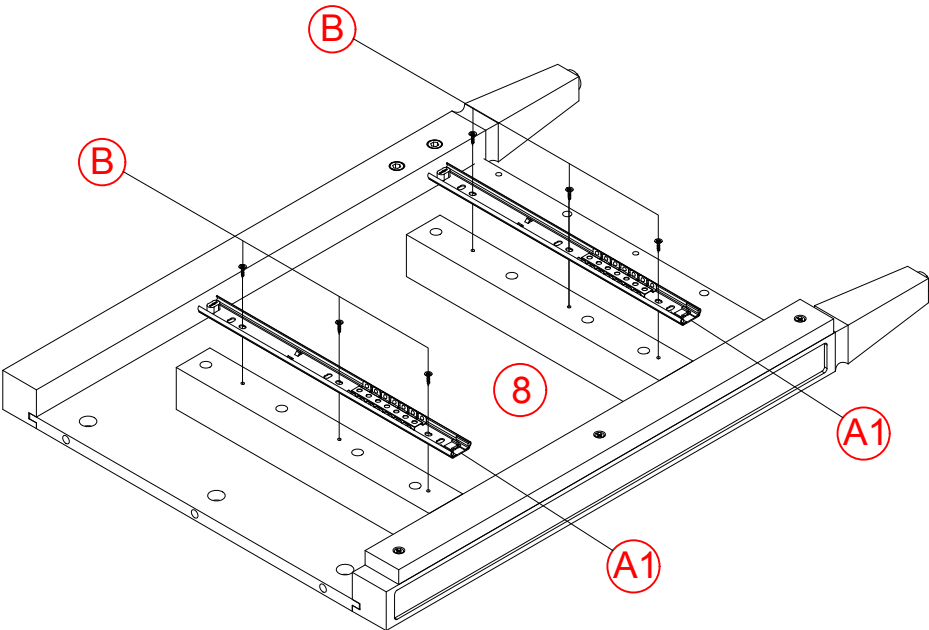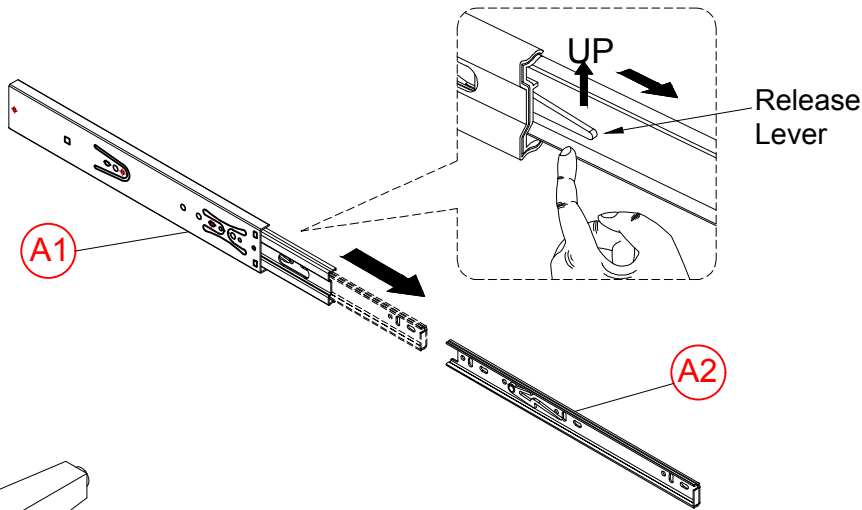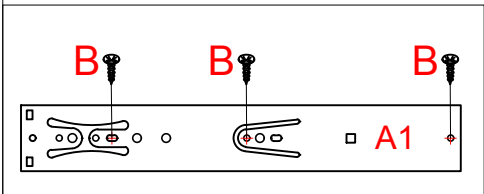

STEP 3




Ⓔ	Ø5*35MM		3PCS
Ⓐ	L45*300MM		2PCS
Ⓑ	3.5*10MM		6PCS

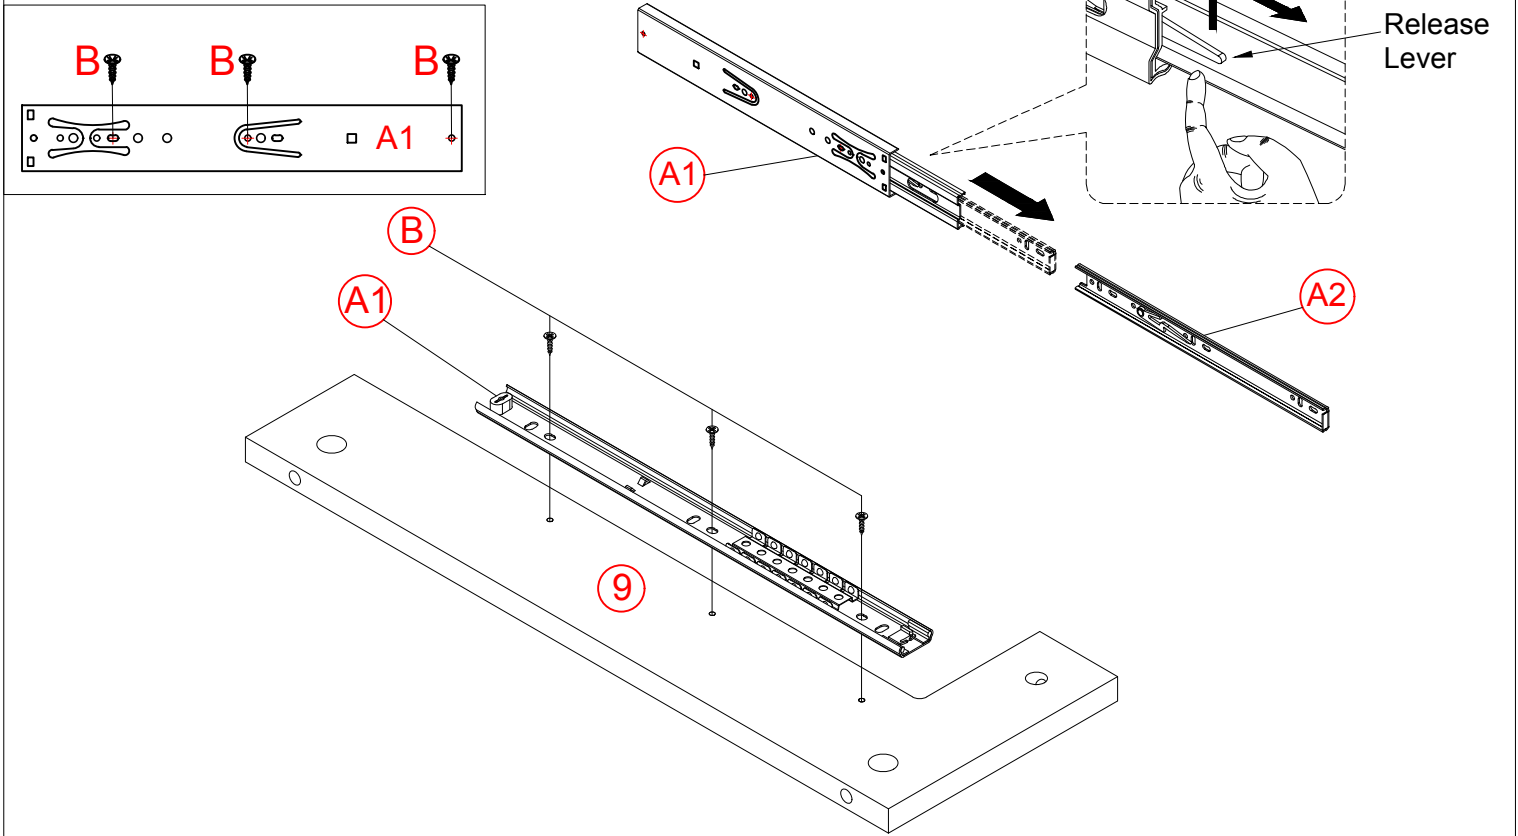STEP 4




(A)	L45*300MM		1PC	(B)	3.5*10MM		3PCS
-----	-----------	---	-----	-----	----------	---	------

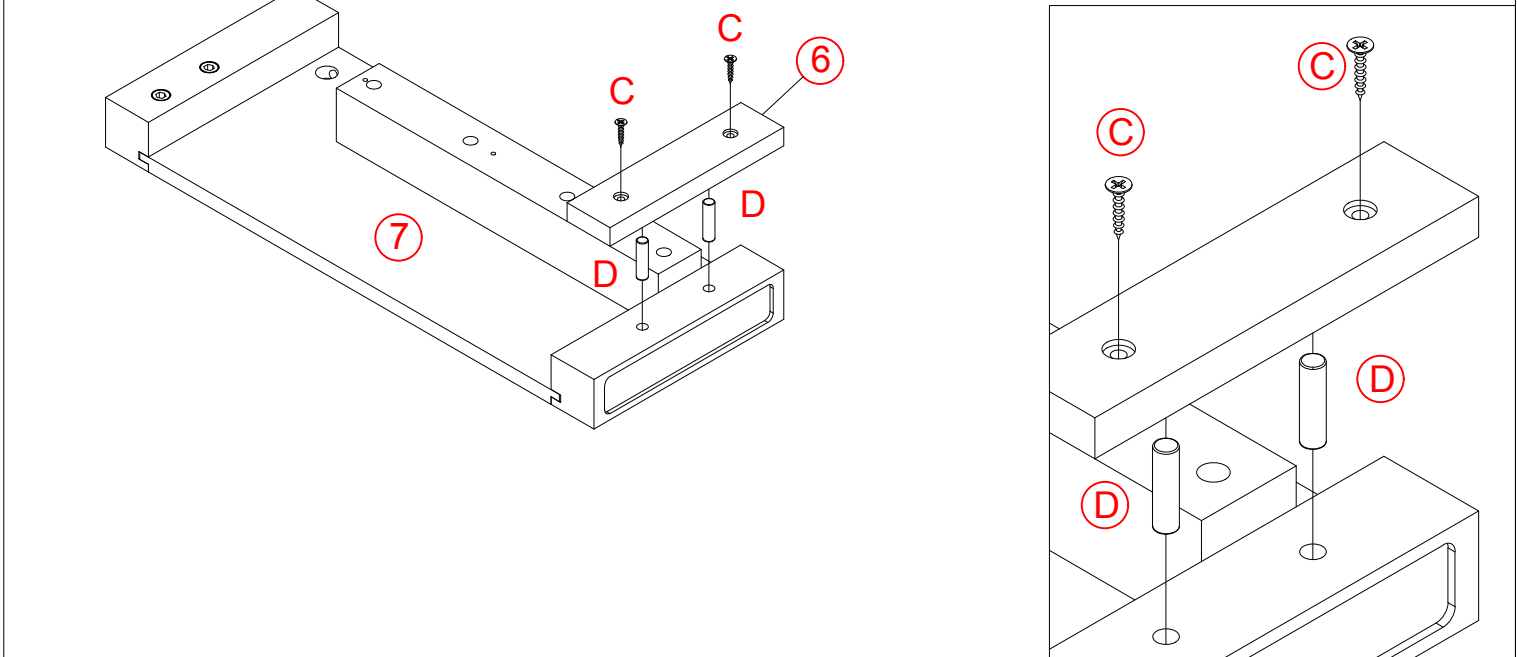

STEP 5




(C)	4*25MM		2PCS	(D)	Ø 8 * 30MM		2PCS
-----	--------	---	------	-----	------------	---	------

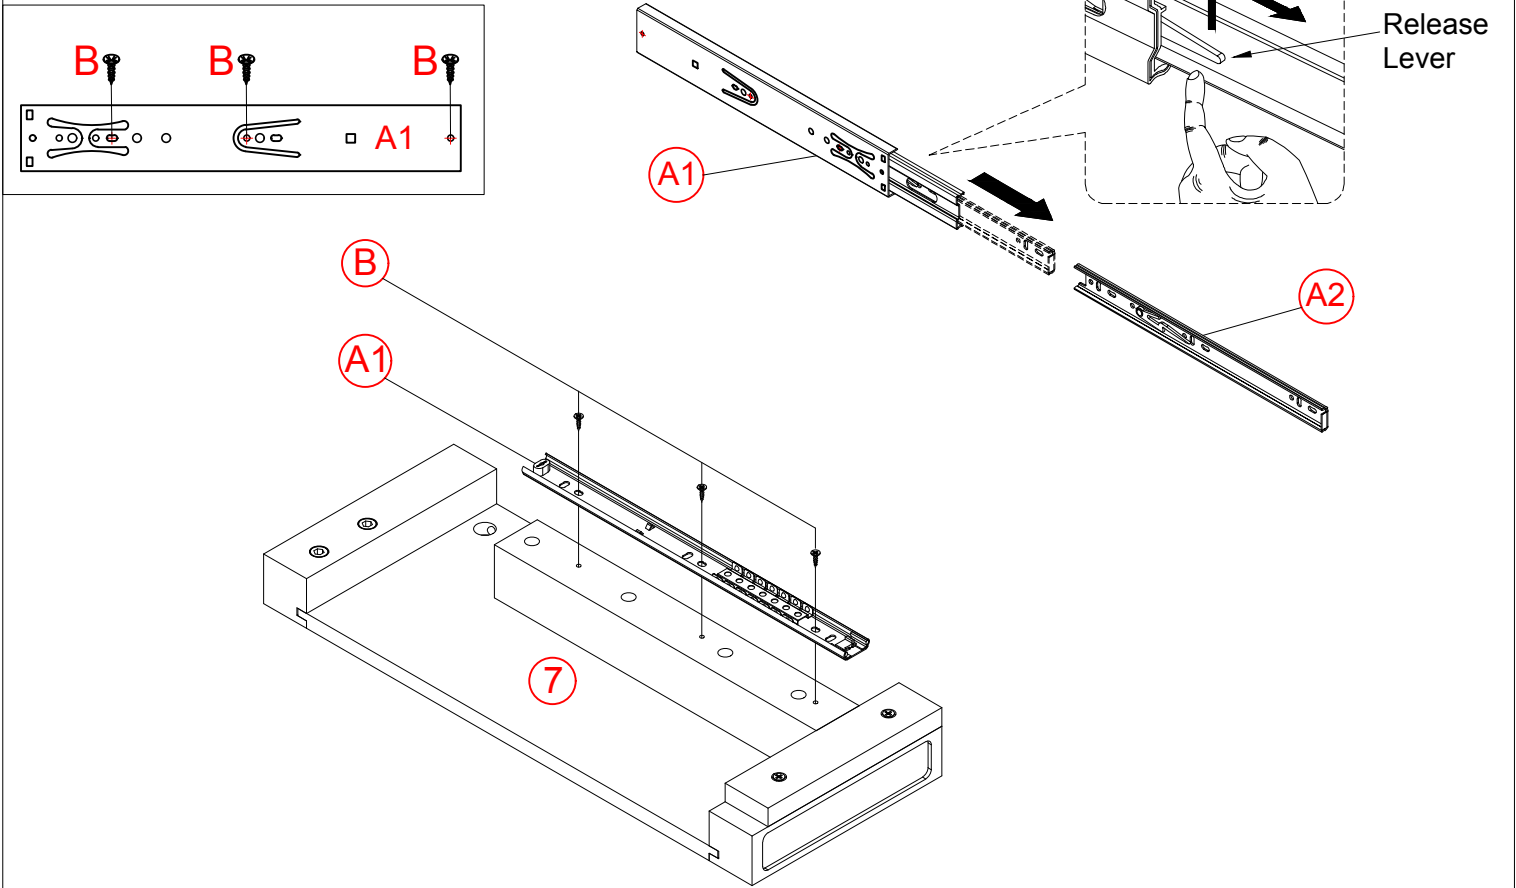

STEP 6





(A)	L45*300MM		1PC	(B)	3.5*10MM		3PCS
-----	-----------	---	-----	-----	----------	---	------

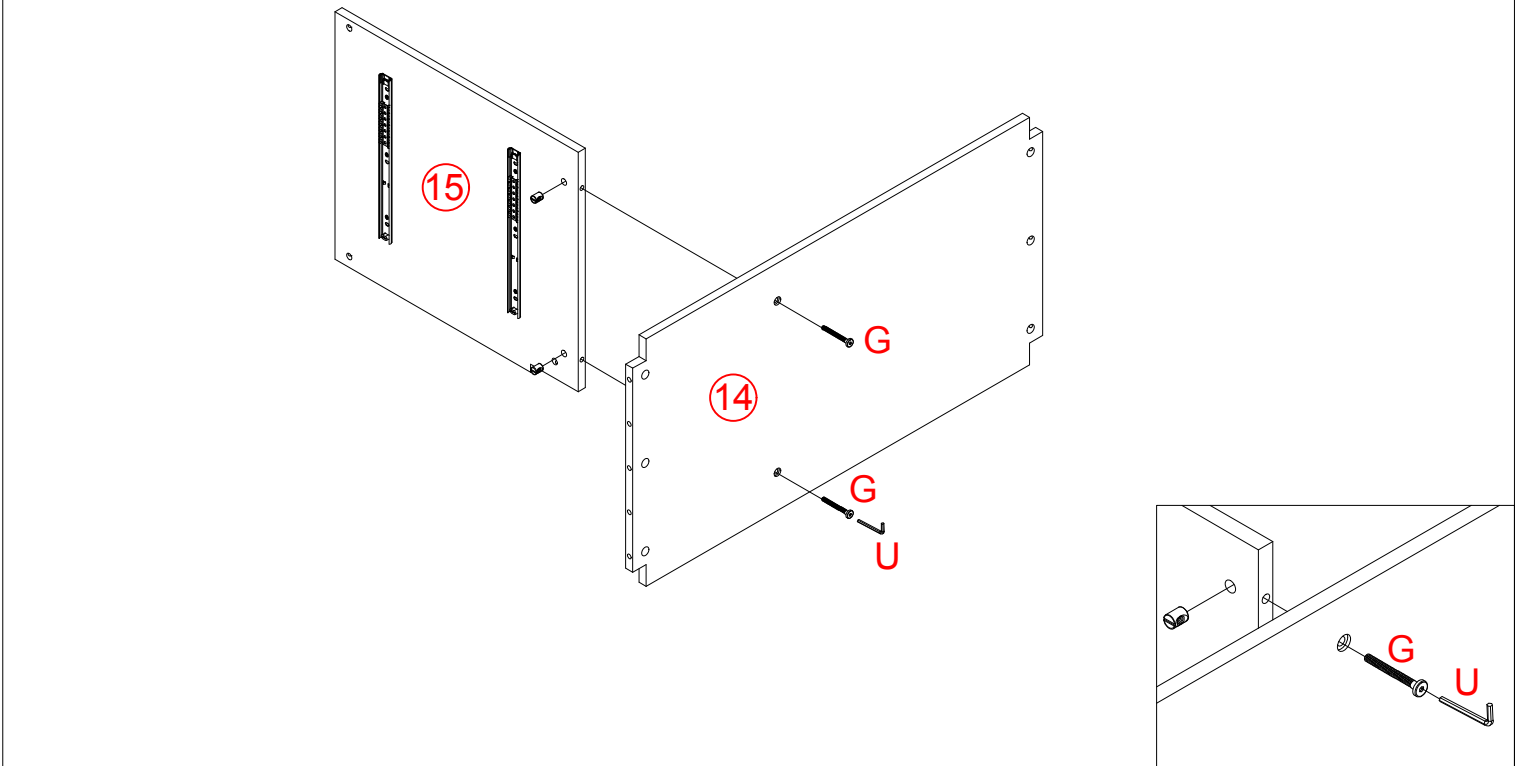STEP 7





(G)	M6*50MM		2SETS	(U)	L4*58MM		1PC
-----	---------	---	-------	-----	---------	---	-----

STEP 8

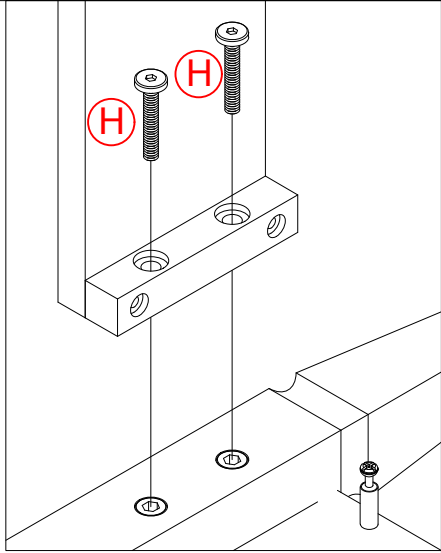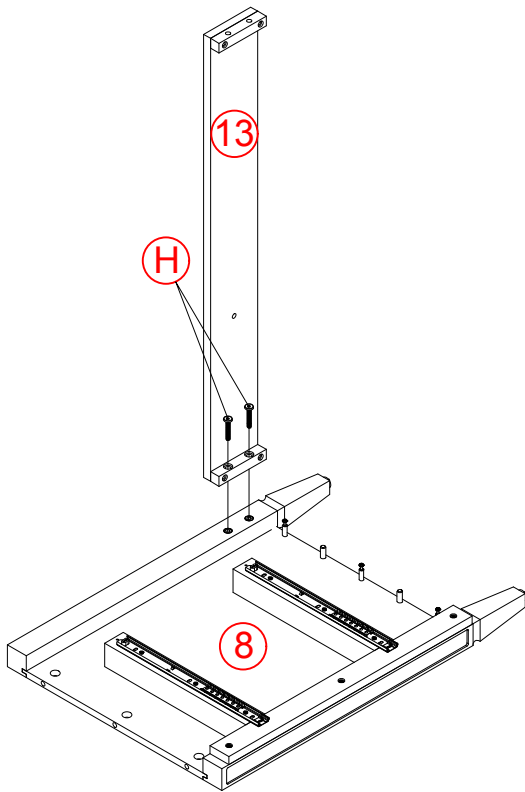



(H)	M6*30MM		2PCS
-----	---------	---	------

STEP 9

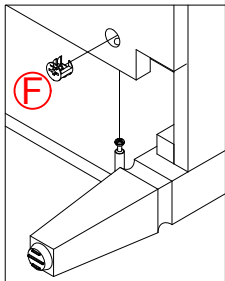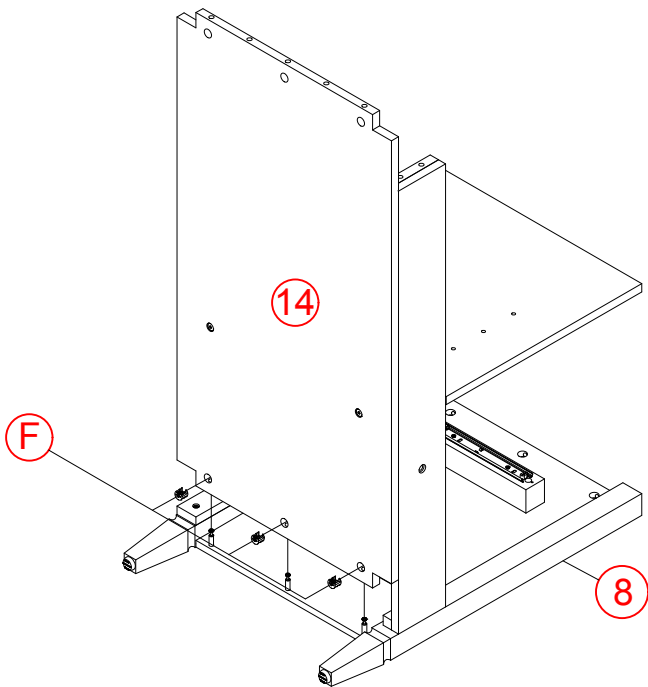



(F)	Ø 15MM		3PCS
-----	--------	---	------


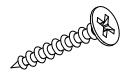

STEP 10

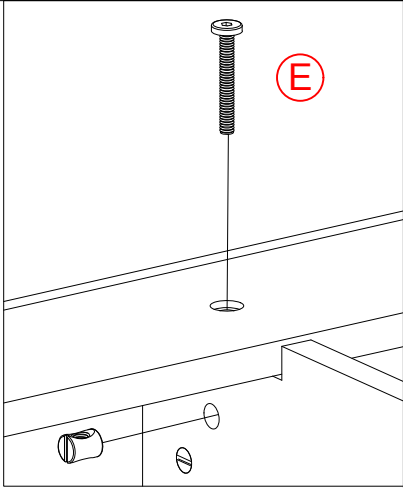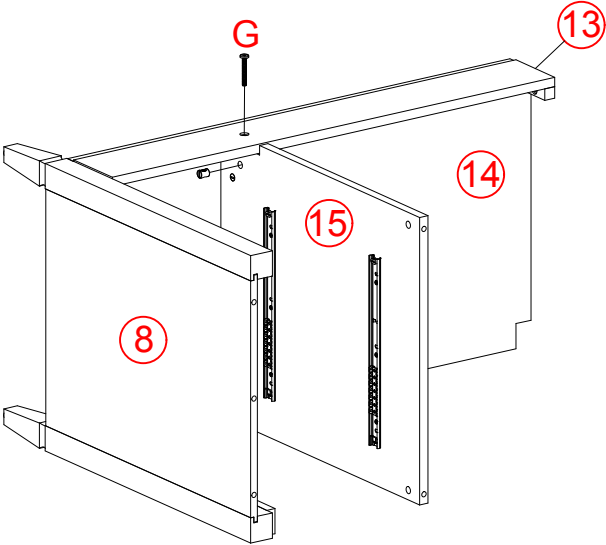



G	M6*50MM 	1SET
----------	---	------

STEP 11

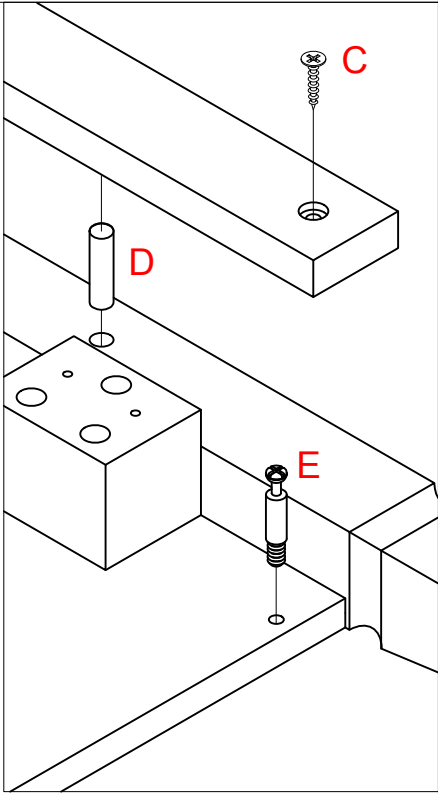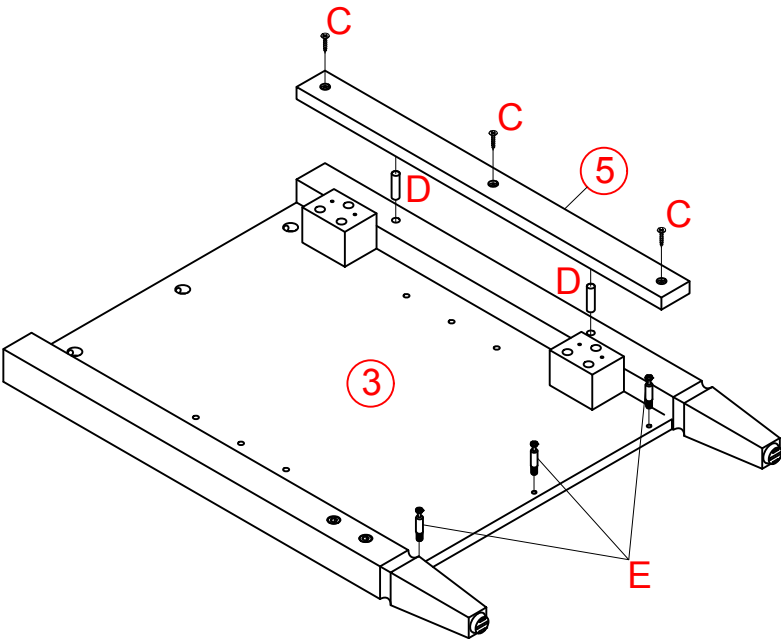




E	Ø5*35MM 	3PCS
C	4*25MM 	3PCS
D	Ø 8 * 30MM 	2PCS

STEP 12

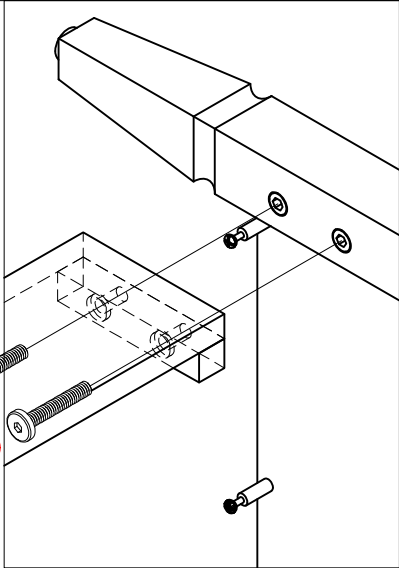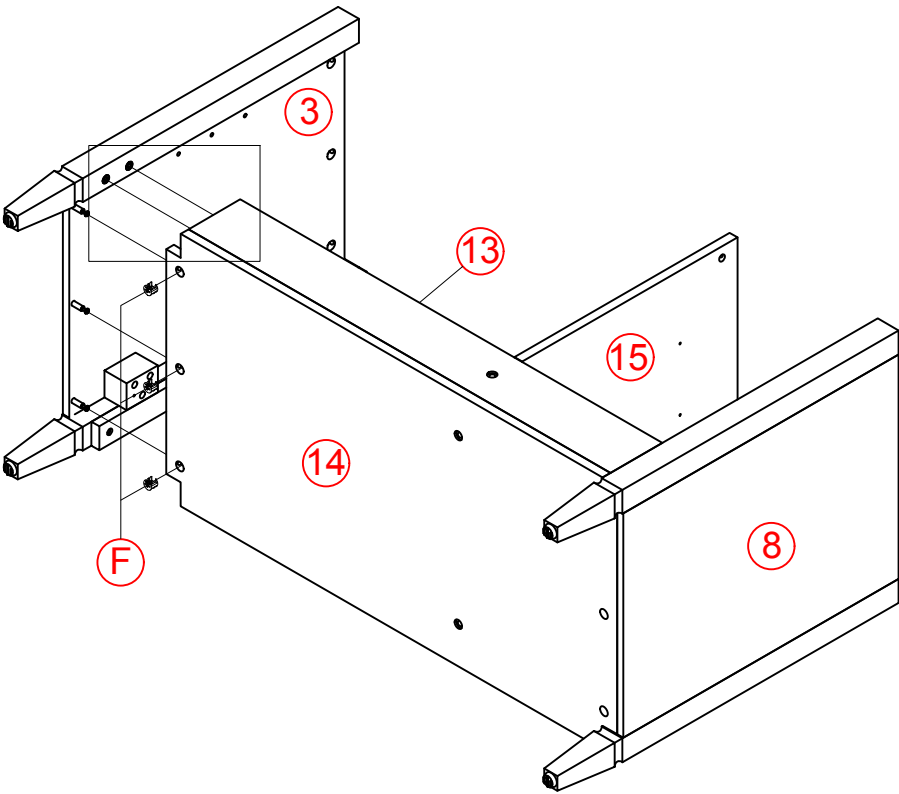



(F)	Ø 15MM		3PCS	(H)	M6*30MM		2PCS
-----	--------	--	------	-----	---------	--	------

STEP 13

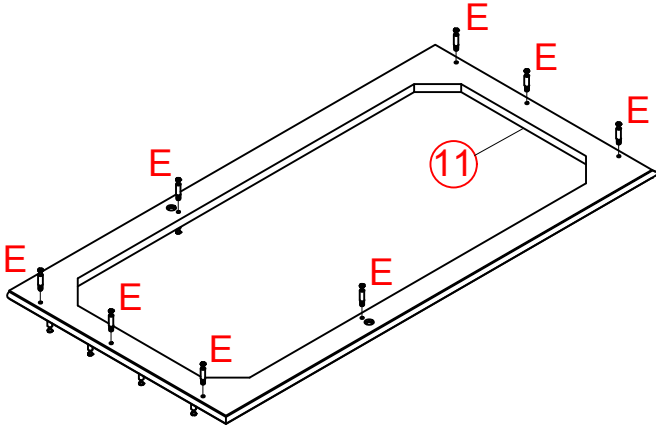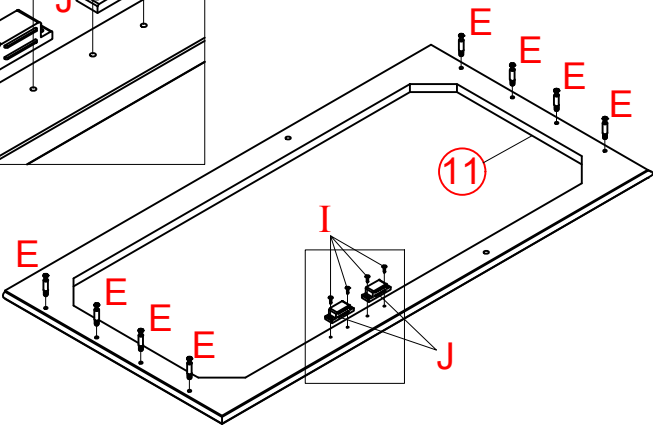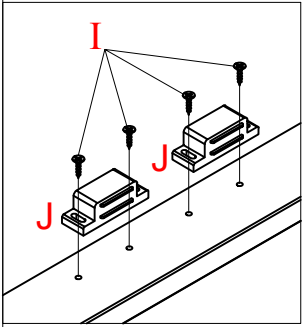



(I)	3.5*15MM		4PCS	(E)	Ø5*35MM		16PCS
(J)	L45MM		2PCS				

STEP 14

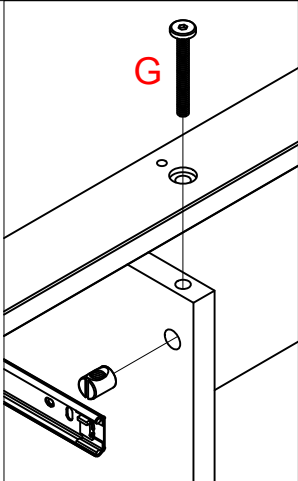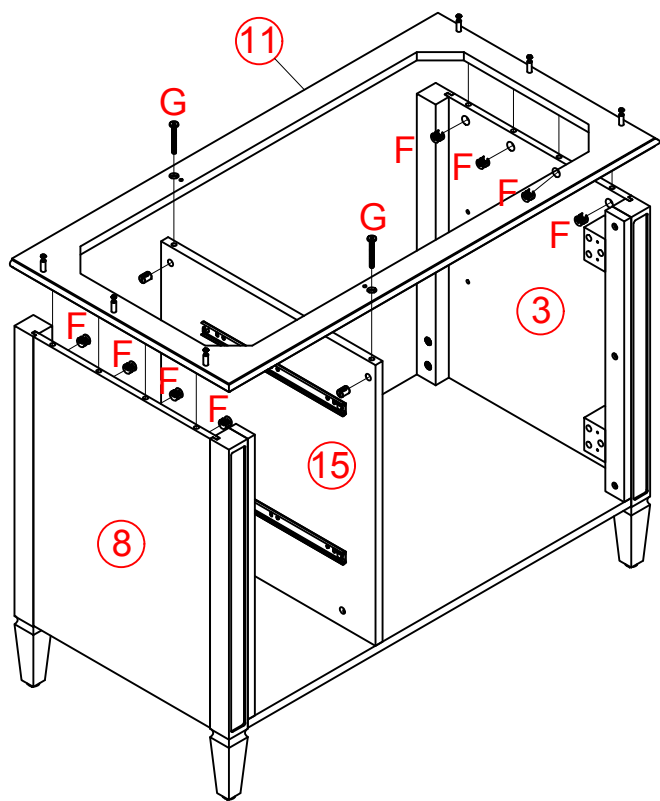


F	Ø 15MM		8PCS	G	M6*50MM		2SETS
----------	--------	--	------	----------	---------	--	-------



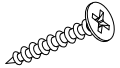

STEP 15

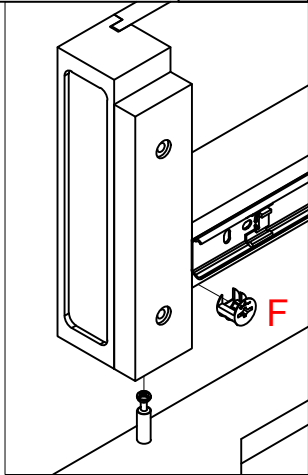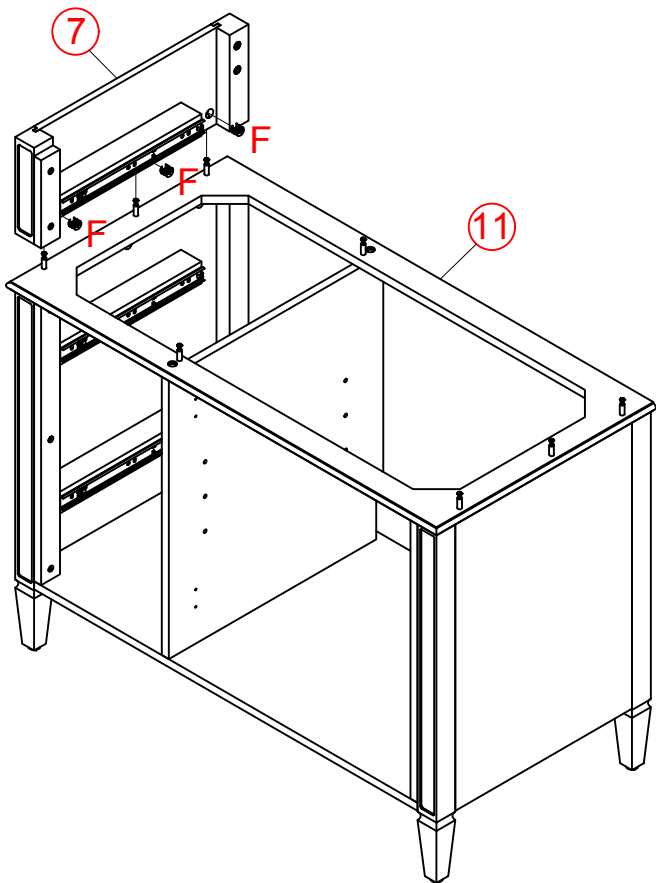


F	Ø 15MM		3PCS
----------	--------	--	------


STEP 16

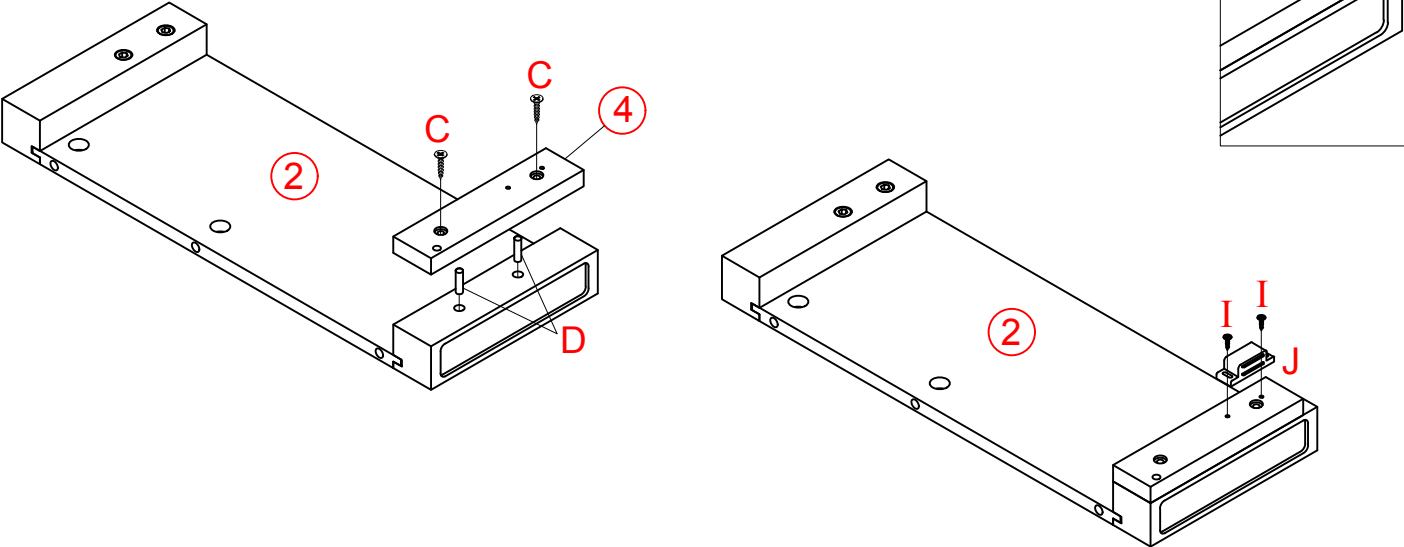




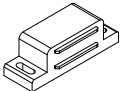
ⓐ	L45MM		1PC	ⓐ	3.5*15MM		2PCS
ⓐ	4*25MM		2PCS	ⓐ	Ø 8 * 30MM		2PCS

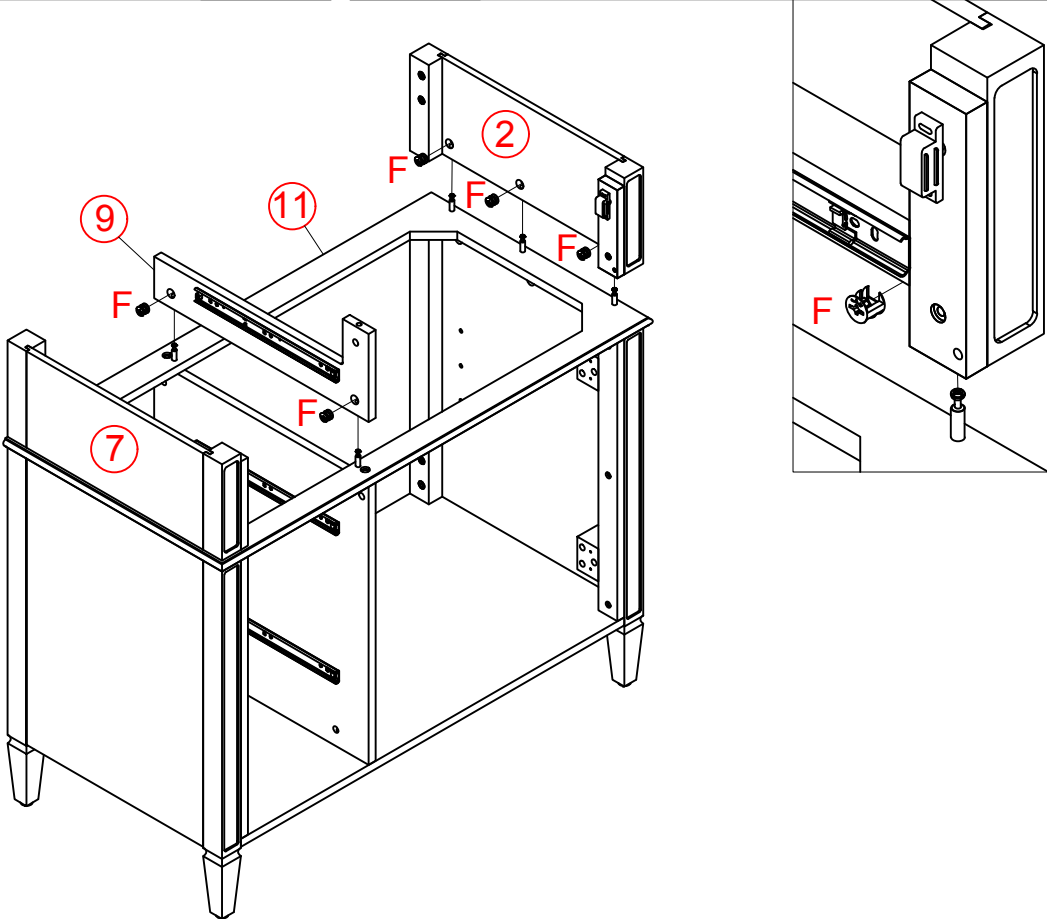


STEP 17

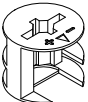


ⓐ	Ø 15MM		5PCS
---	--------	---	------

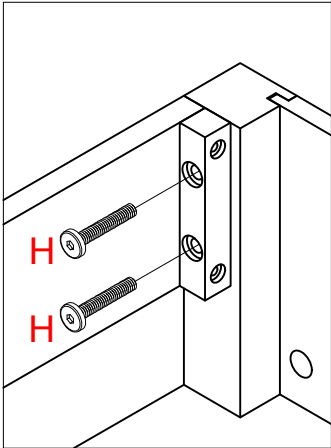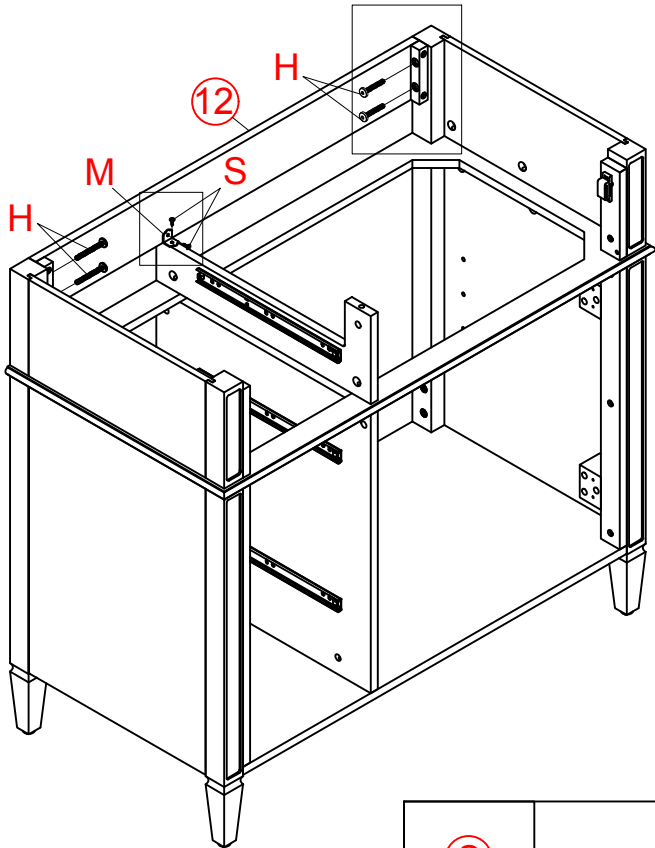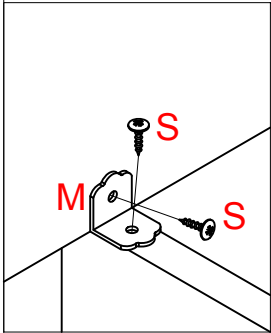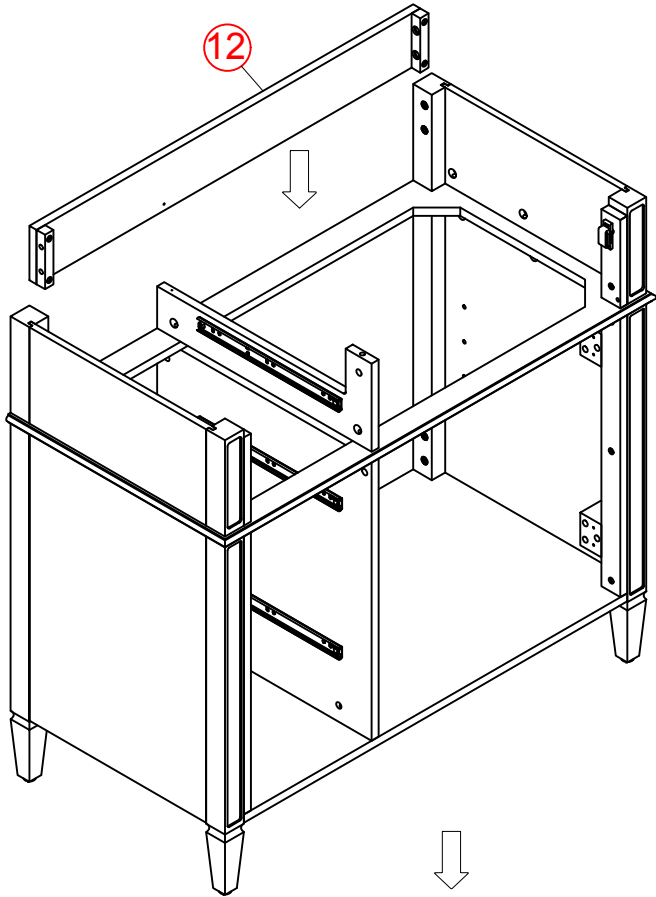
STEP 18




				(S)	3.5*12MM		2PCS
(H)	M6*30MM		4PCS	(M)			1PC

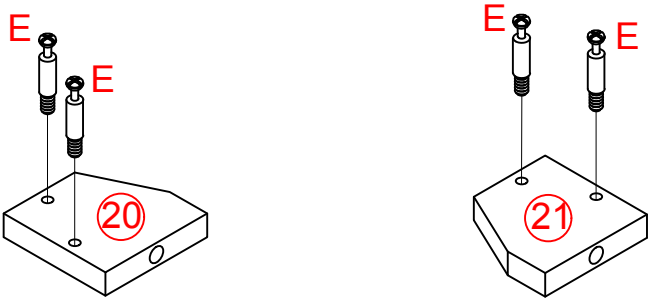

STEP 19




Ⓔ	Ø5*35MM		4PCS
---	---------	---	------

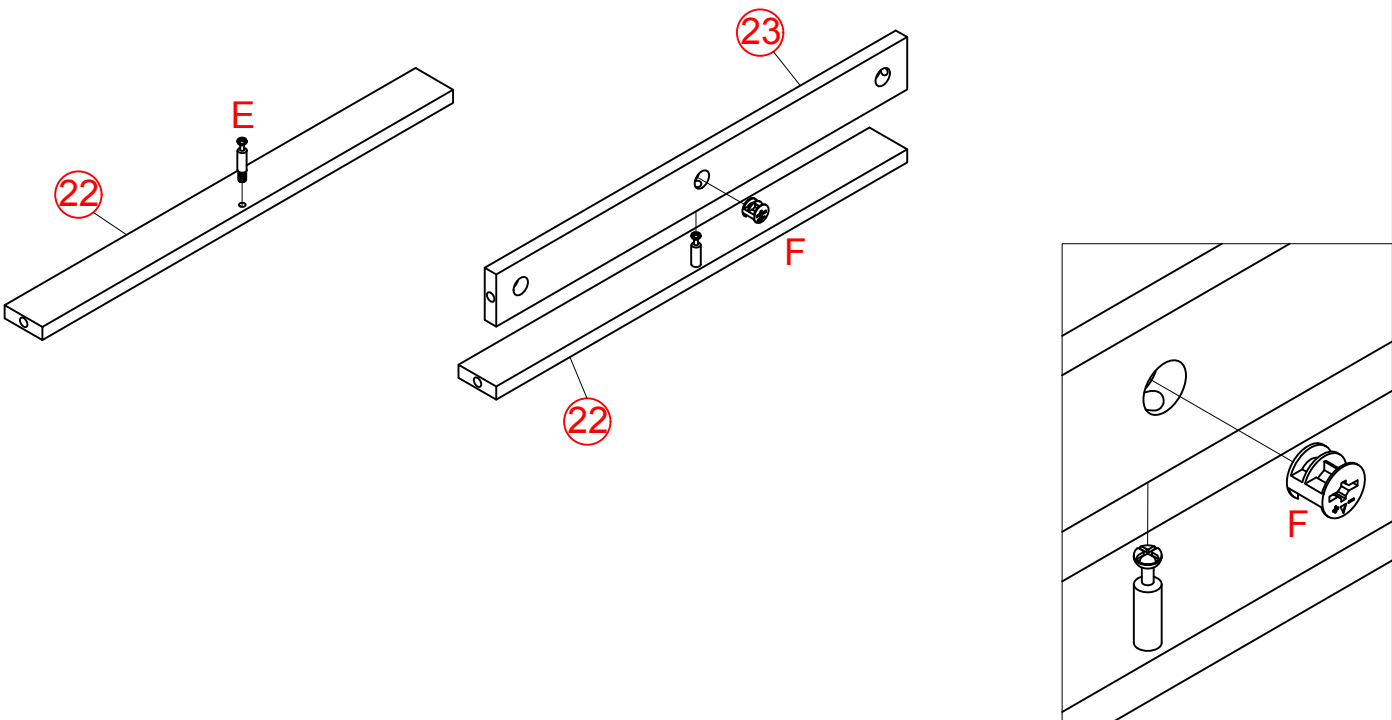STEP 20




Ⓔ	Ø5*35MM		1PC	Ⓕ	Ø 15MM		1PC
---	---------	---	-----	---	--------	---	-----


STEP 21

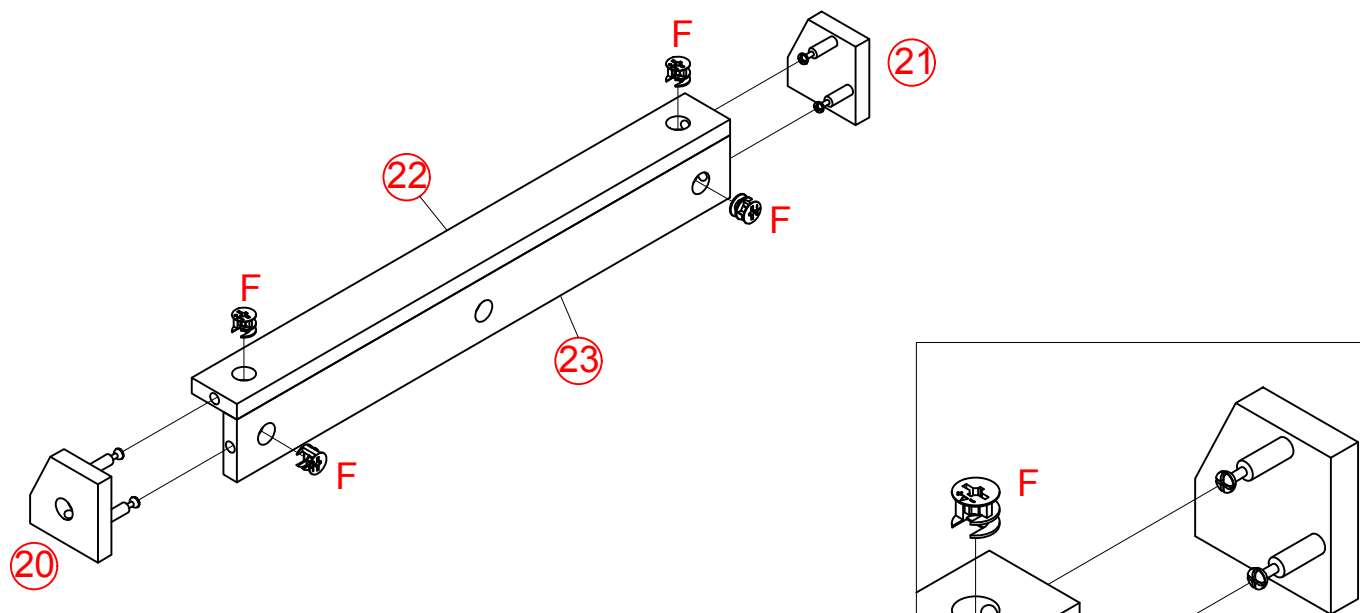

(F)	Ø 15MM		4PCS
-----	--------	--	------

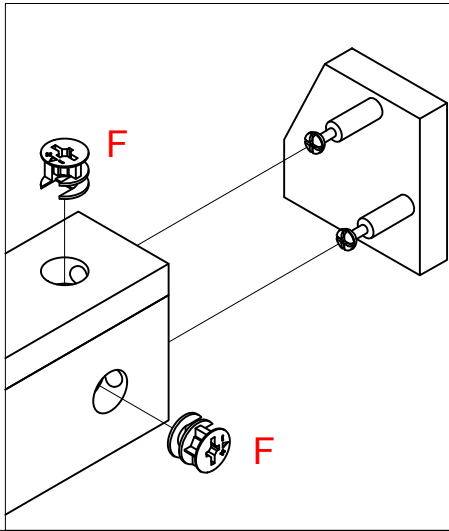



STEP 22

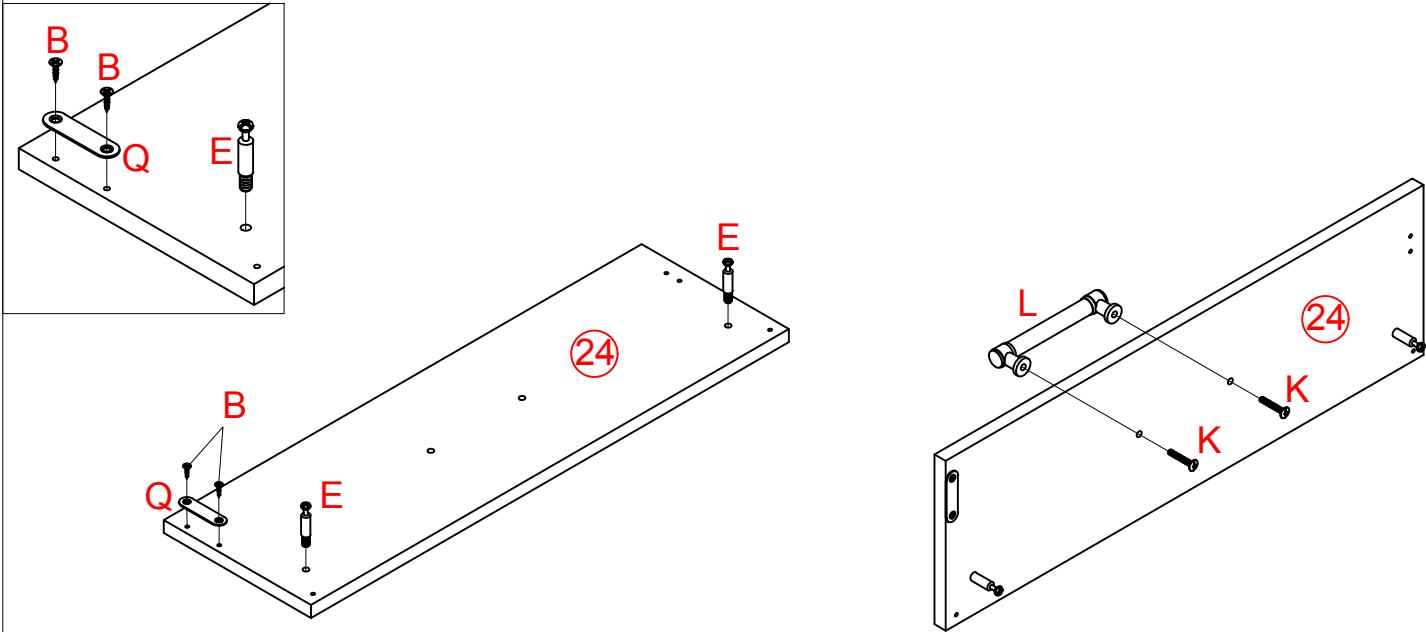


(E)	Ø5*35MM		2PCS
(Q)	L 45MM		1PC
(L)	L 110MM		1PC



(B)	3.5*10MM		2PCS
(K)	M4*20MM		2PCS


STEP 23

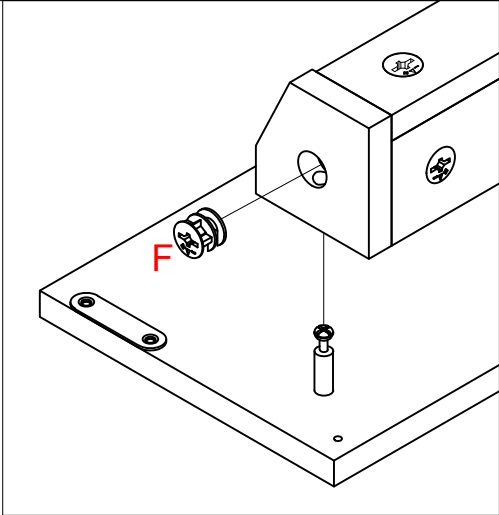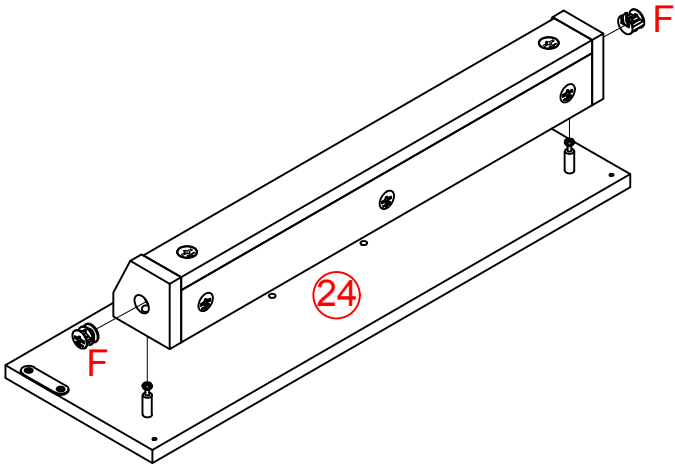



	Ø 15MM		2PCS
--	--------	---	------

STEP 24

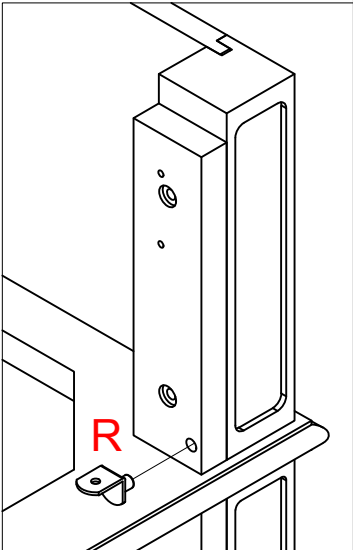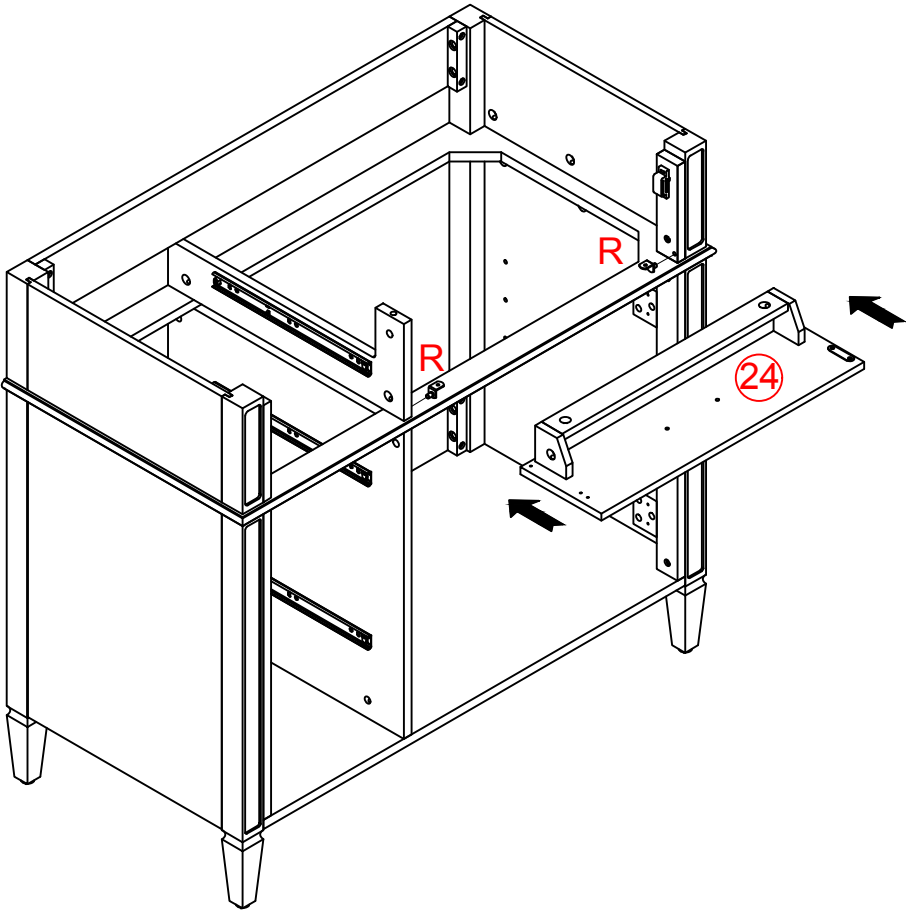


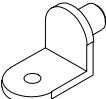
	L 15MM		2PCS
--	--------	---	------

STEP 25

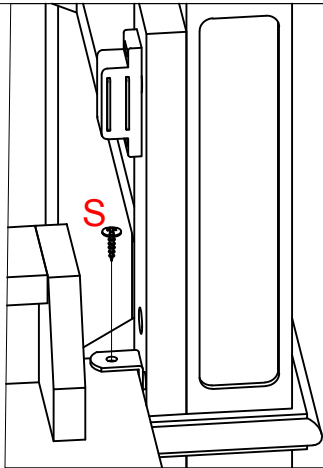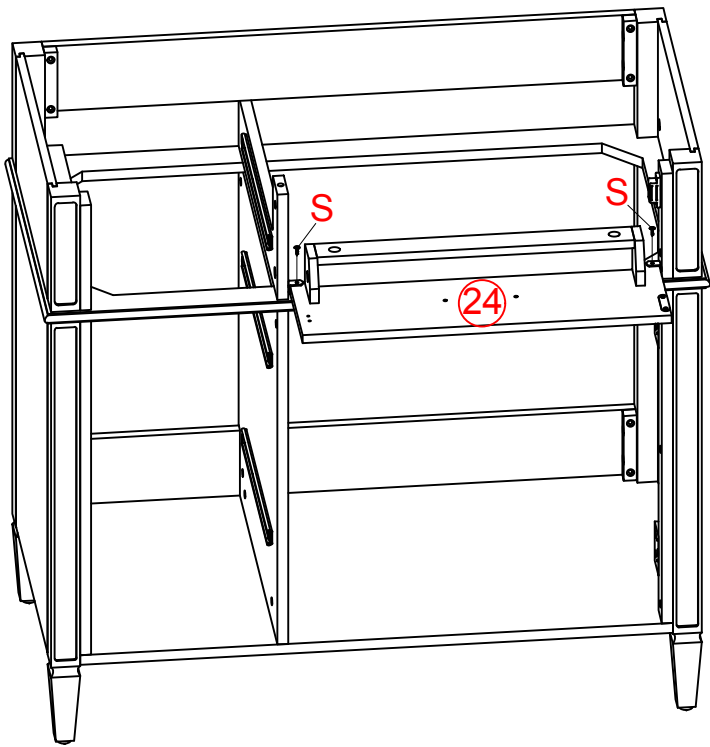



(S)	3.5*12MM		2PCS
-----	----------	---	------

STEP 26

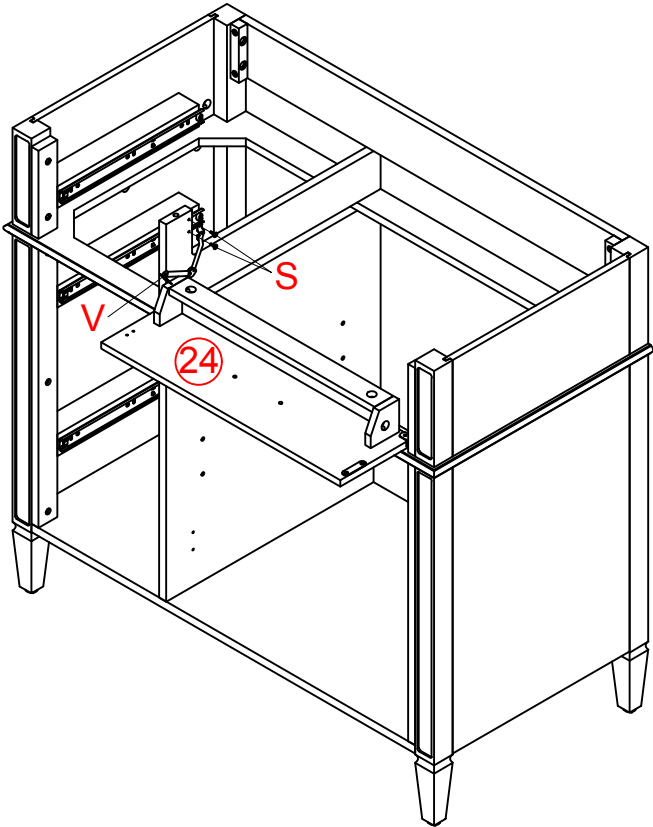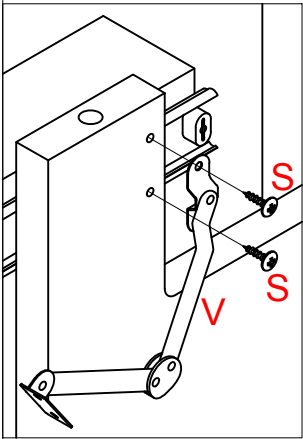



(V)	HANDLE		1PC	(S)	3.5*12MM		2PCS
-----	--------	---	-----	-----	----------	---	------

STEP 27

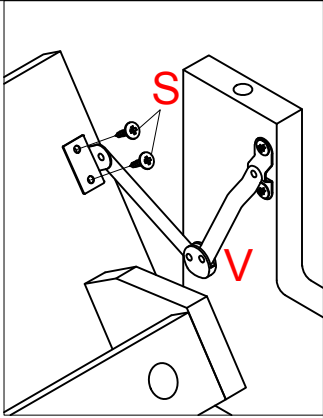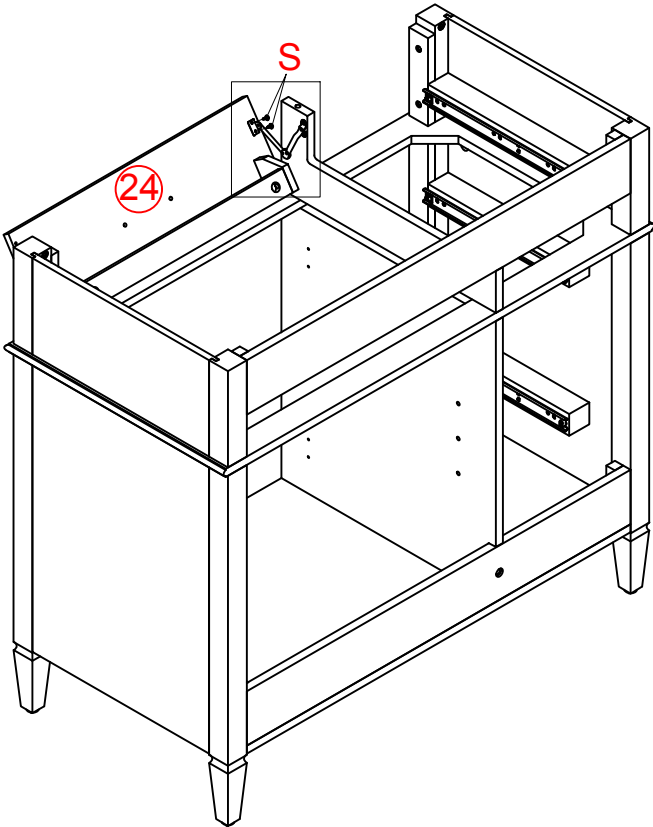



<div>Ⓢ</div>	3.5*12MM		2PCS
--------------	----------	---	------

STEP 28

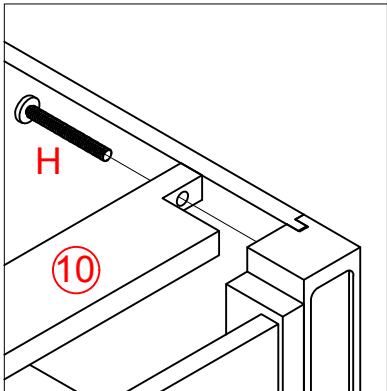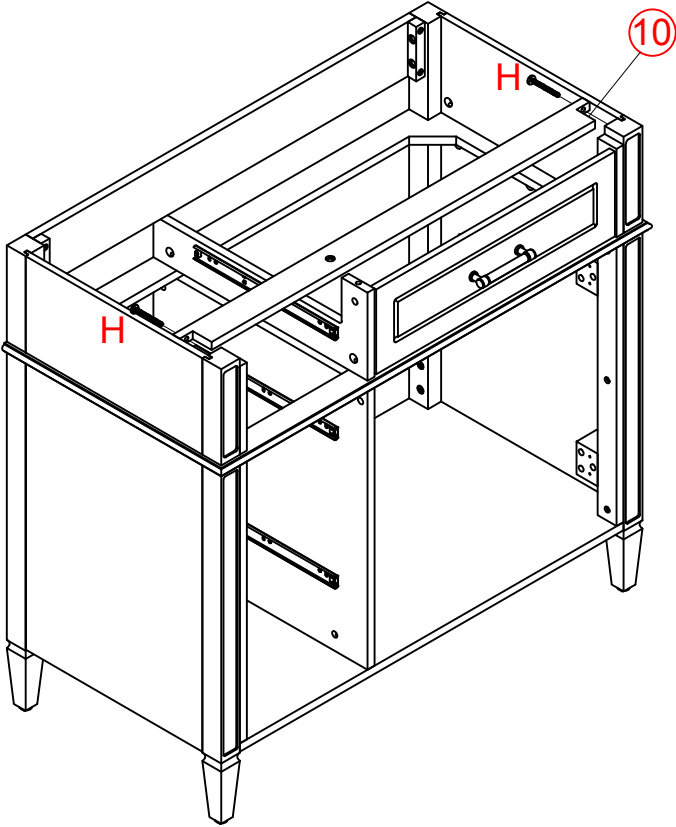



<div>ⓗ</div>	M6*30MM		2PCS
--------------	---------	---	------

STEP 29

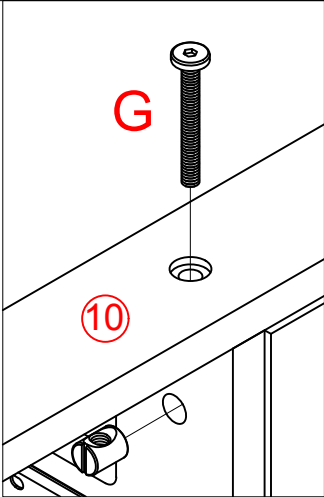
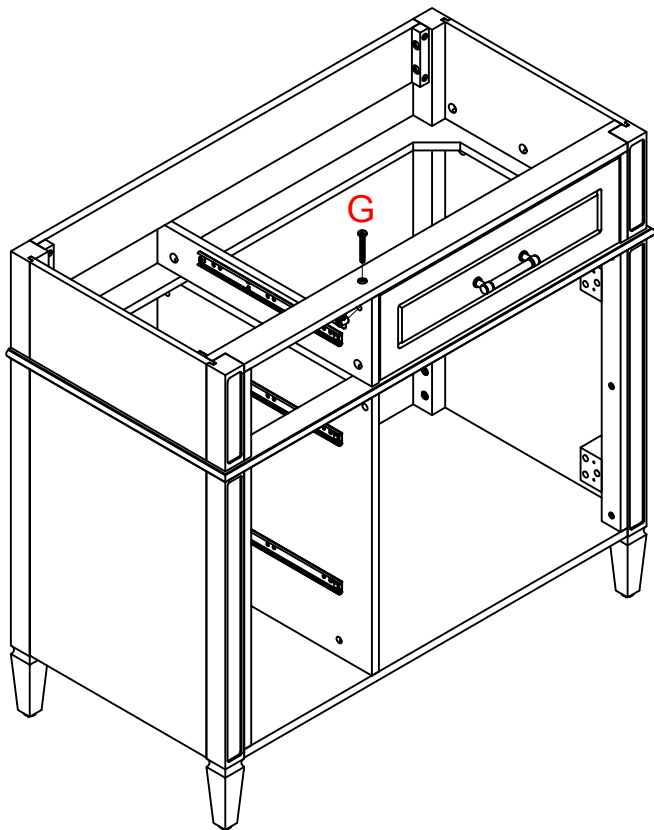




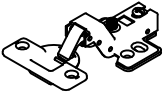

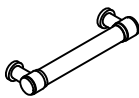

	M6*50MM 	1SET
--	---	------

STEP 30

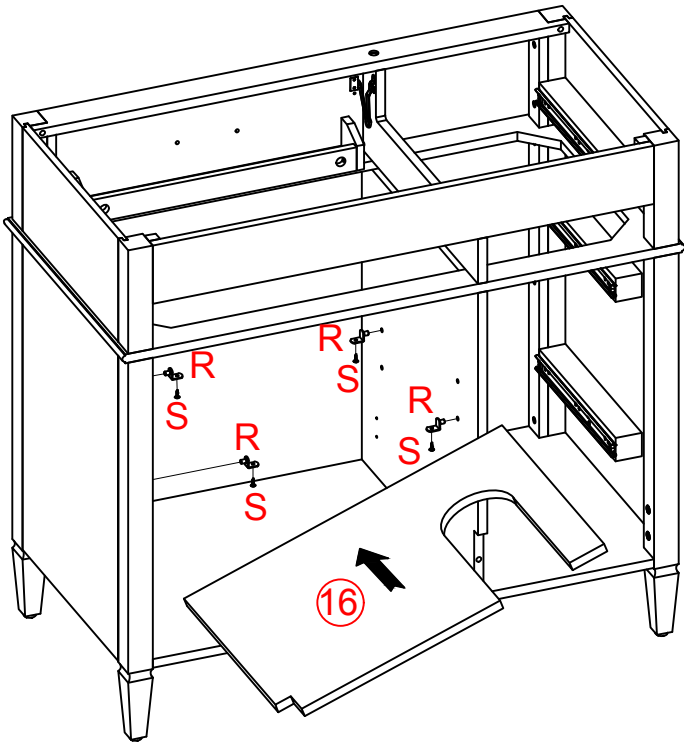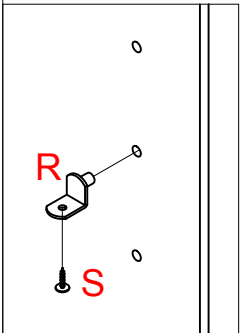








	L 15MM 	4PCS		3.5*12MM 	4PCS
--	--	------	---	--	------

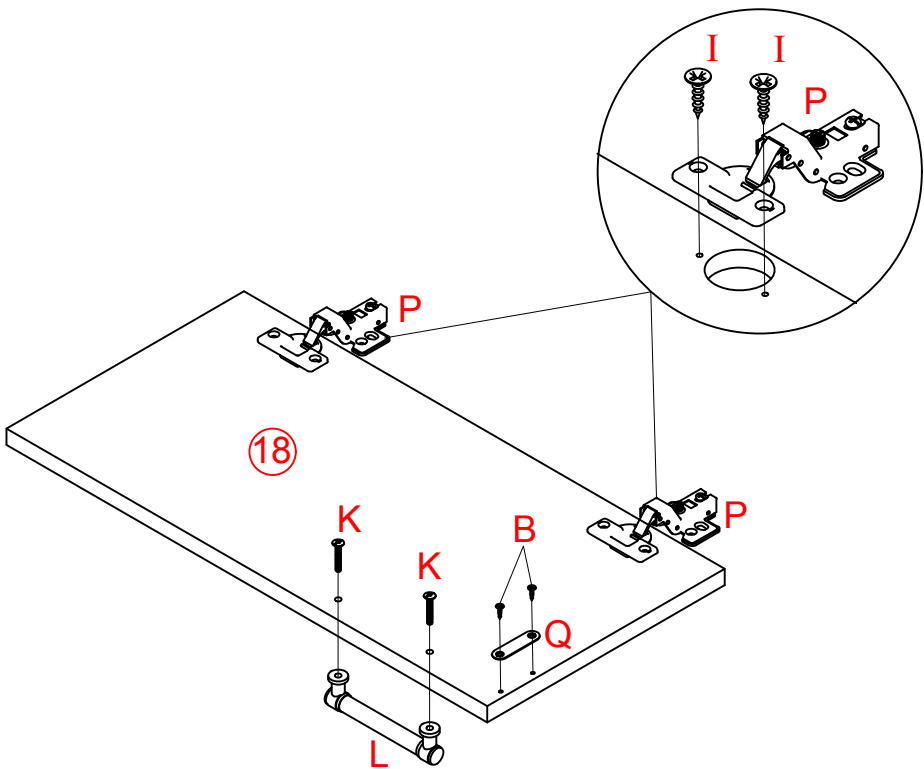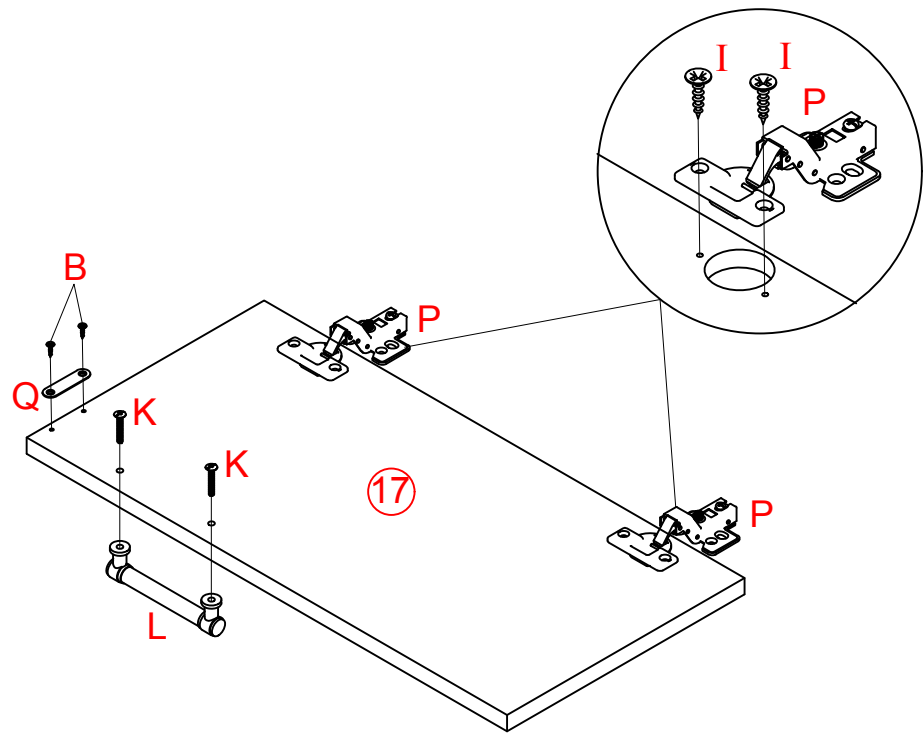

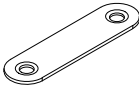Q	L 45MM		2PCS	B	3.5*10MM		4PCS
P	Ø 35MM		4PCS	I	3.5*15MM		8PCS
L	L 110MM		2PCS	K	M4*20MM		4PCS


STEP 32

Three-way adjustable hinge for perfectly aligned doors
1.TO ADJUST DOOR FORWARD OR BACKWARD.
2.TO ADJUST DOOR TO RIGHT ORTO LEFT.
3.TO ADJUST DOOR UP OR DOWN.

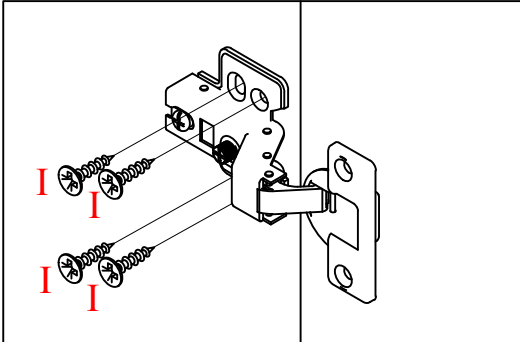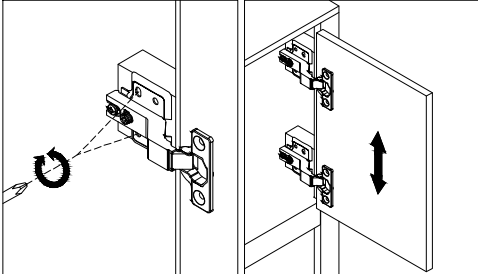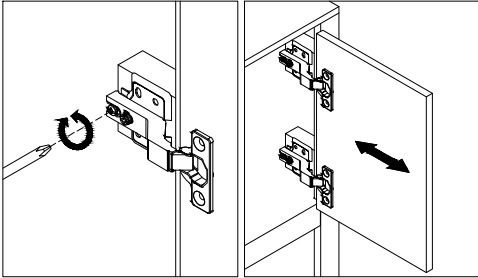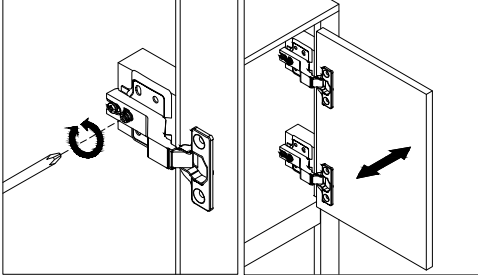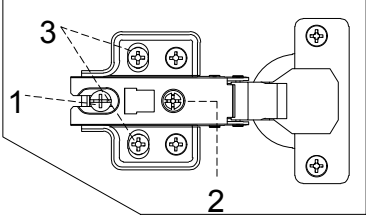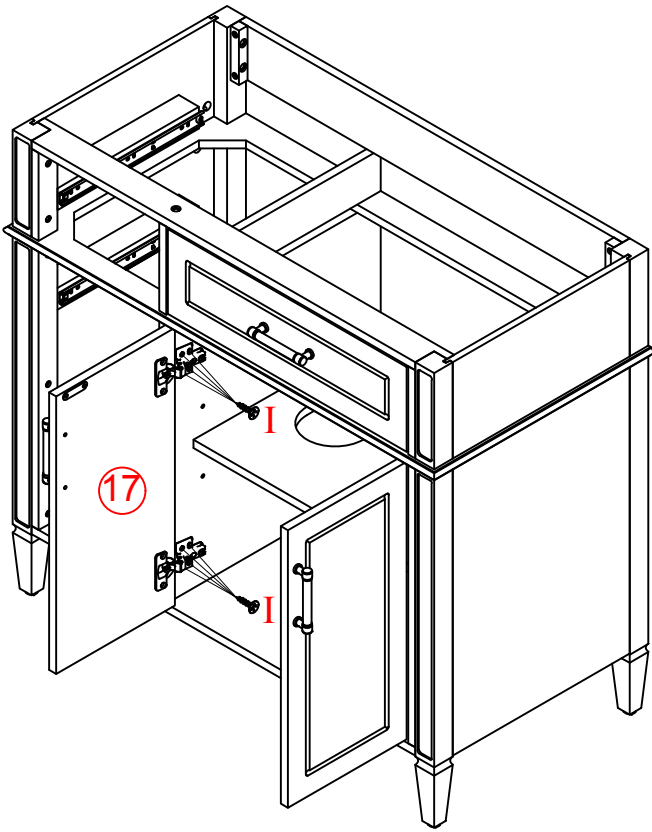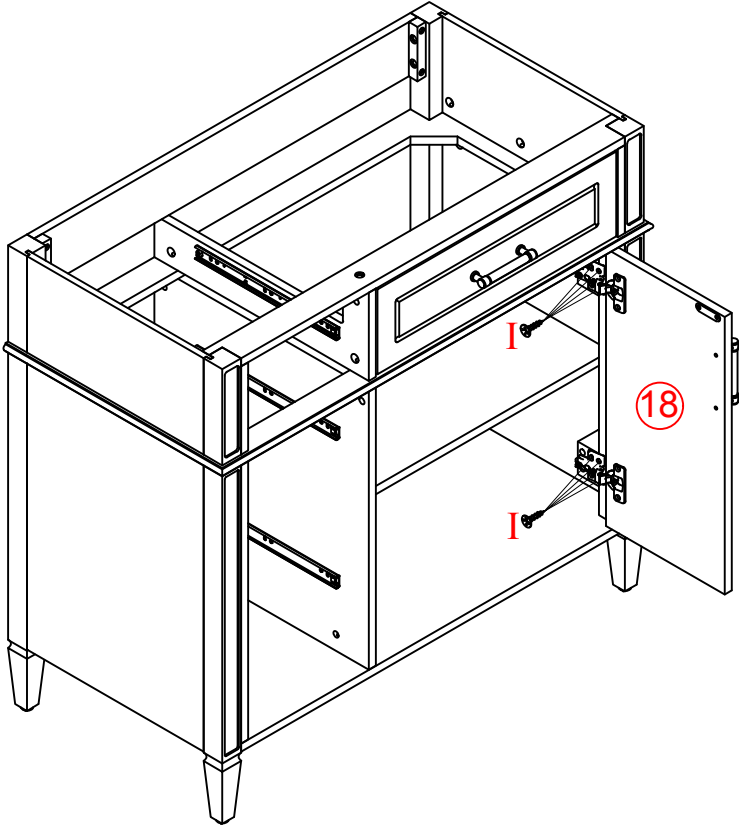

I	3.5*15MM	16PCS
---	----------	-------


STEP 33

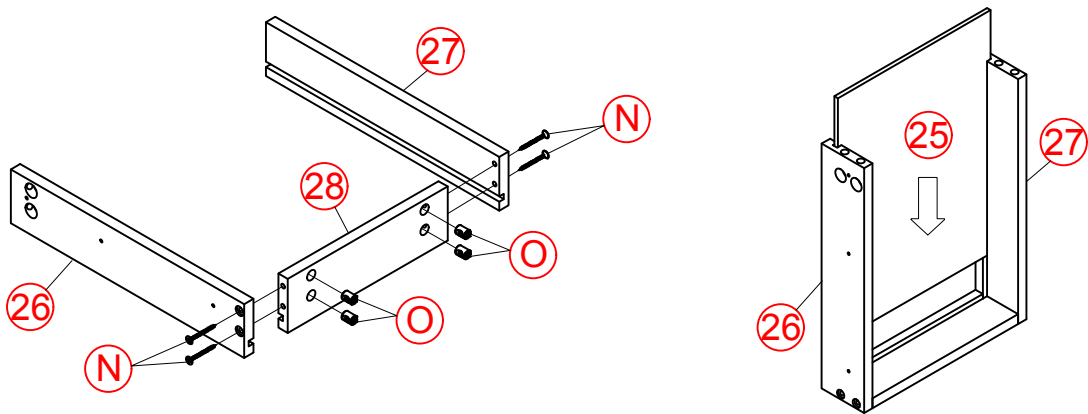
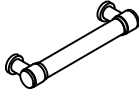




(N)	M4*50MM		4PCS
-----	---------	---	------

(O)	Ø 10*10MM		4PCS
-----	-----------	---	------


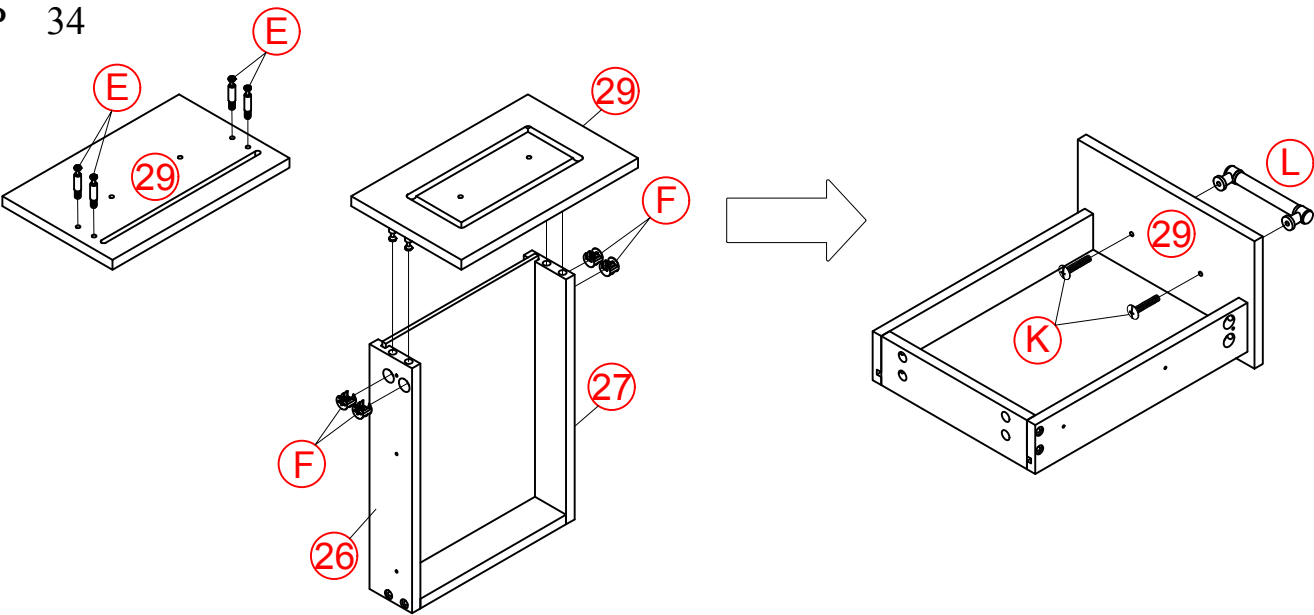
STEP 34




(E)	Ø5*35MM		4PCS
(L)	L 110MM		1PC

(F)	Ø 15MM		4PCS
(K)	M4*20MM		2PCS


STEP 35

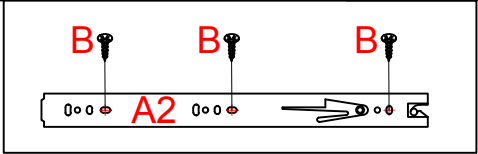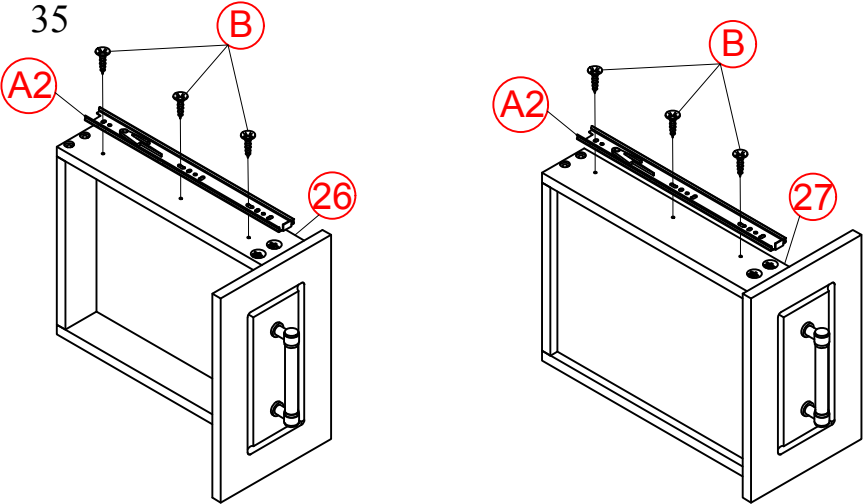

(A)	L45*300		2PCS
-----	---------	---	------

(B)	M3.5*10MM		6PCS
-----	-----------	---	------


STEP 36

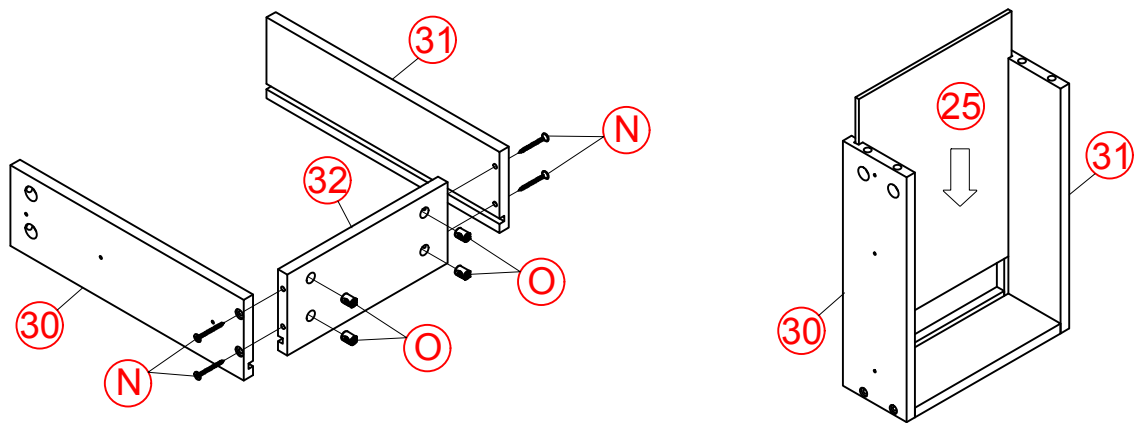
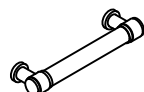




(N)	M4*50MM		4PCS
-----	---------	---	------

(O)	Ø 10*10MM		4PCS
-----	-----------	---	------

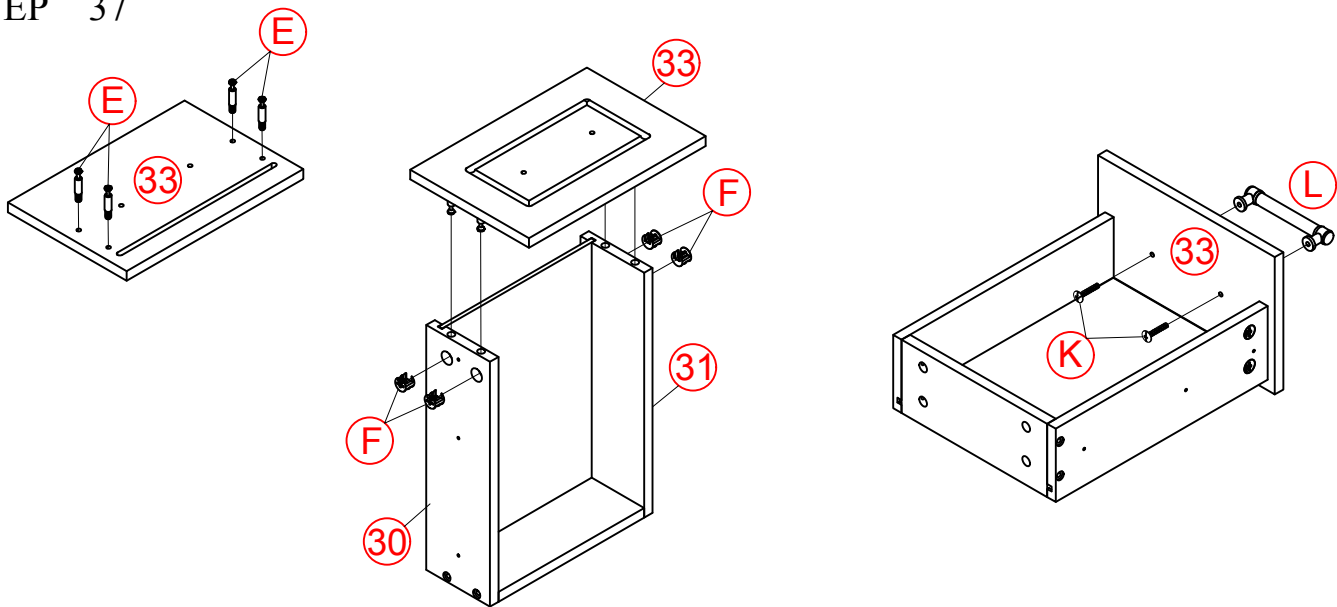
STEP 37




(E)	Ø5*35MM		4PCS
(L)	L 110MM		1PC

(F)	Ø 15MM		4PCS
(K)	M4*20MM		2PCS


STEP 38

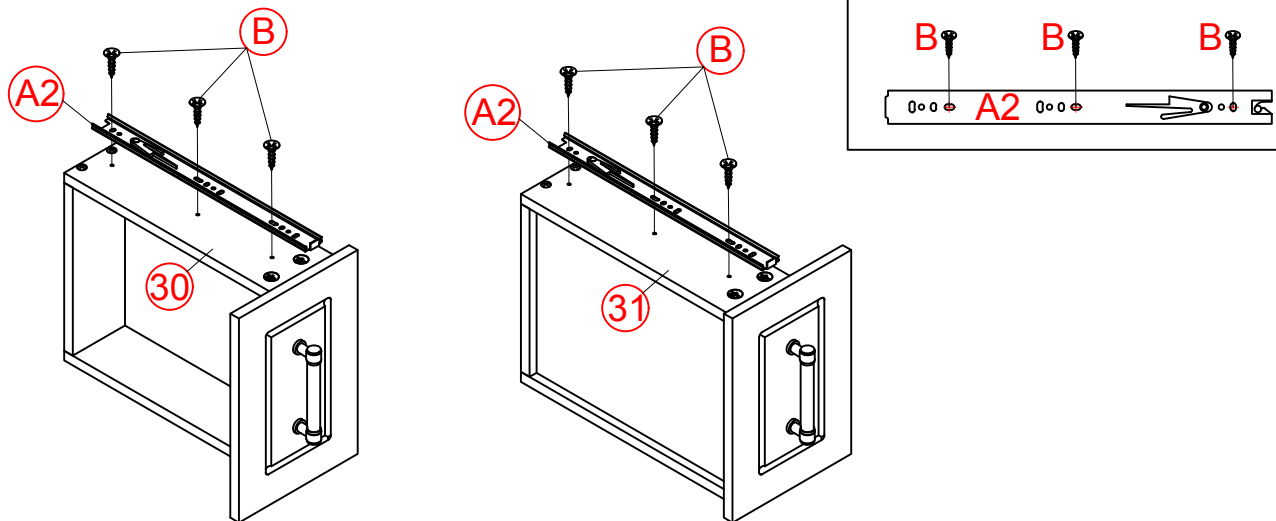

(A)	L45*300		2PCS
-----	---------	---	------

(B)	M3.5*10MM		6PCS
-----	-----------	---	------


STEP 39

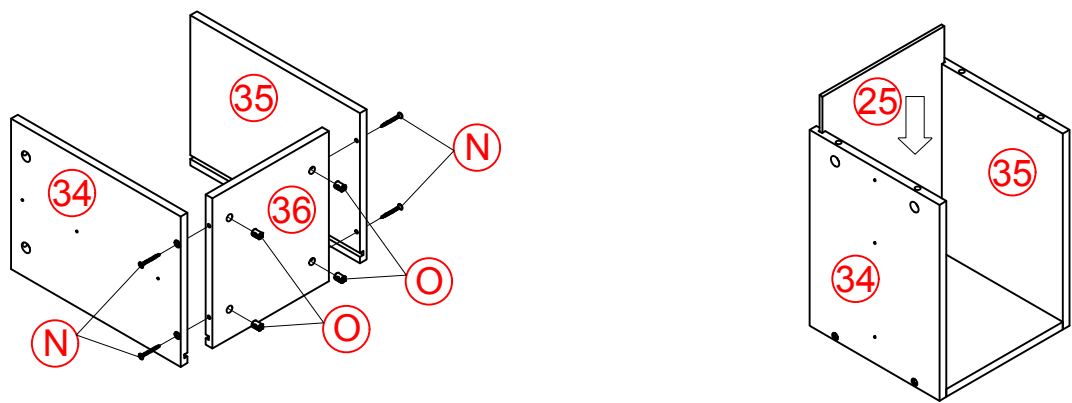
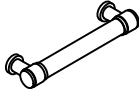




(N)	M4*50MM		4PCS
------------	---------	---	------

(O)	Ø 10*10MM		4PCS
------------	-----------	---	------


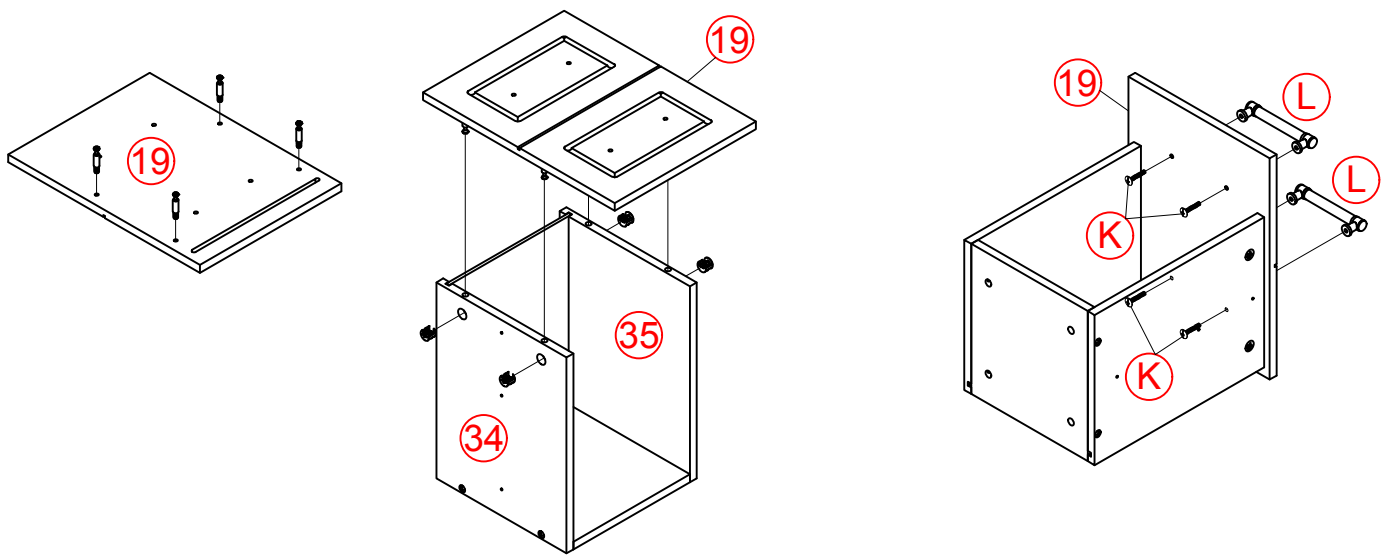
STEP 40




(E)	Ø5*35MM		4PCS
(L)	L 110MM		2PCS





(F)	Ø 15MM		4PCS
(K)	M4*20MM		4PCS

STEP 41

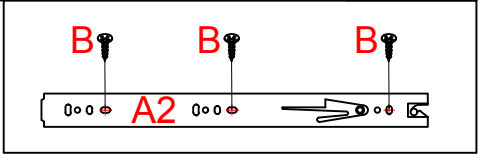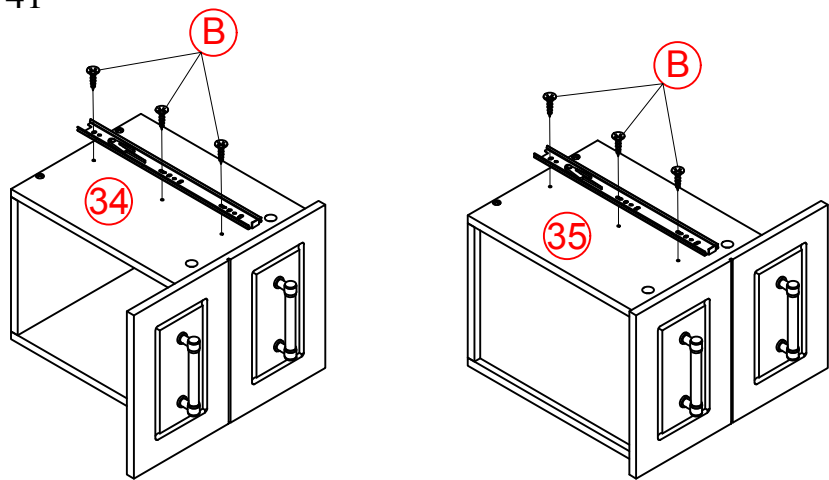


(A)	L45*300		2PCS
------------	---------	---	------

(B)	M3.5*10MM		6PCS
------------	-----------	---	------

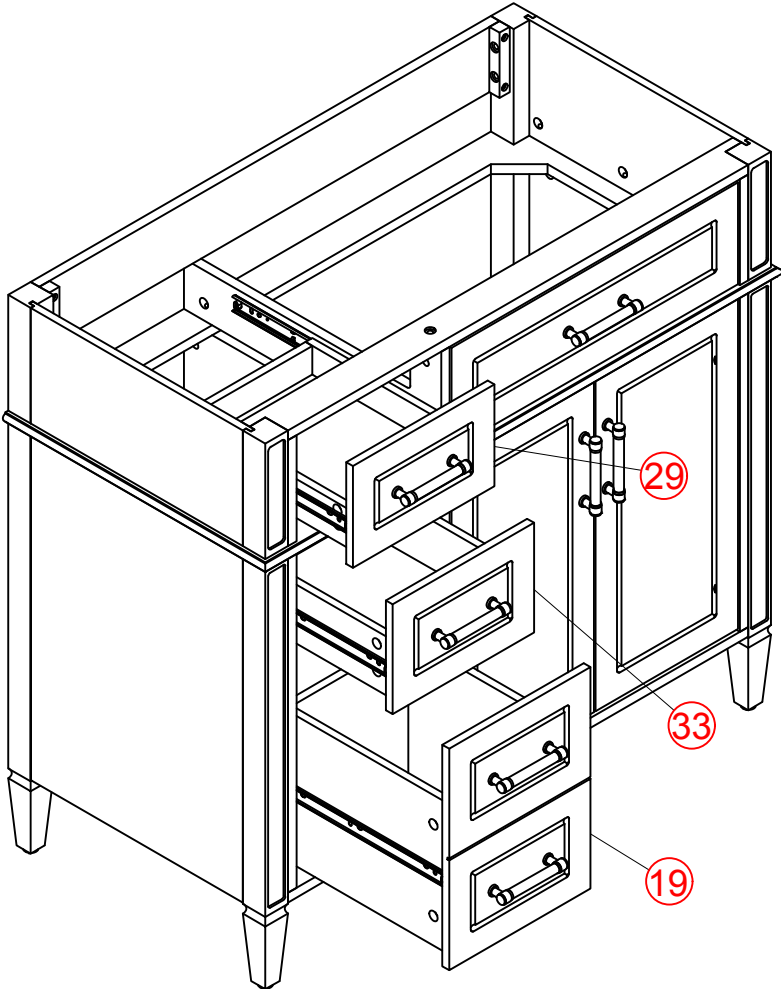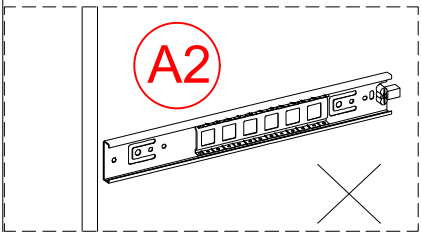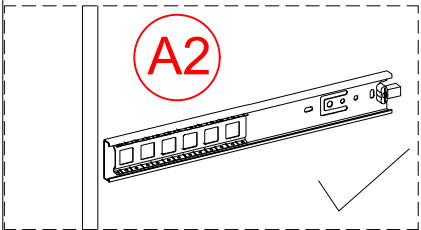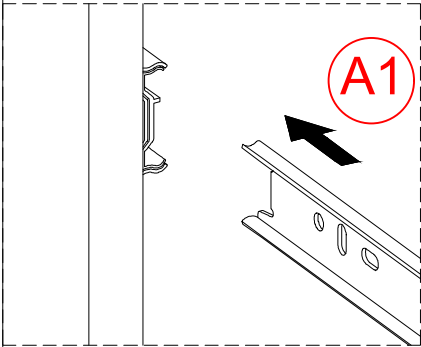


STEP 43

To install the Top (1) to the vanity (2).
Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.

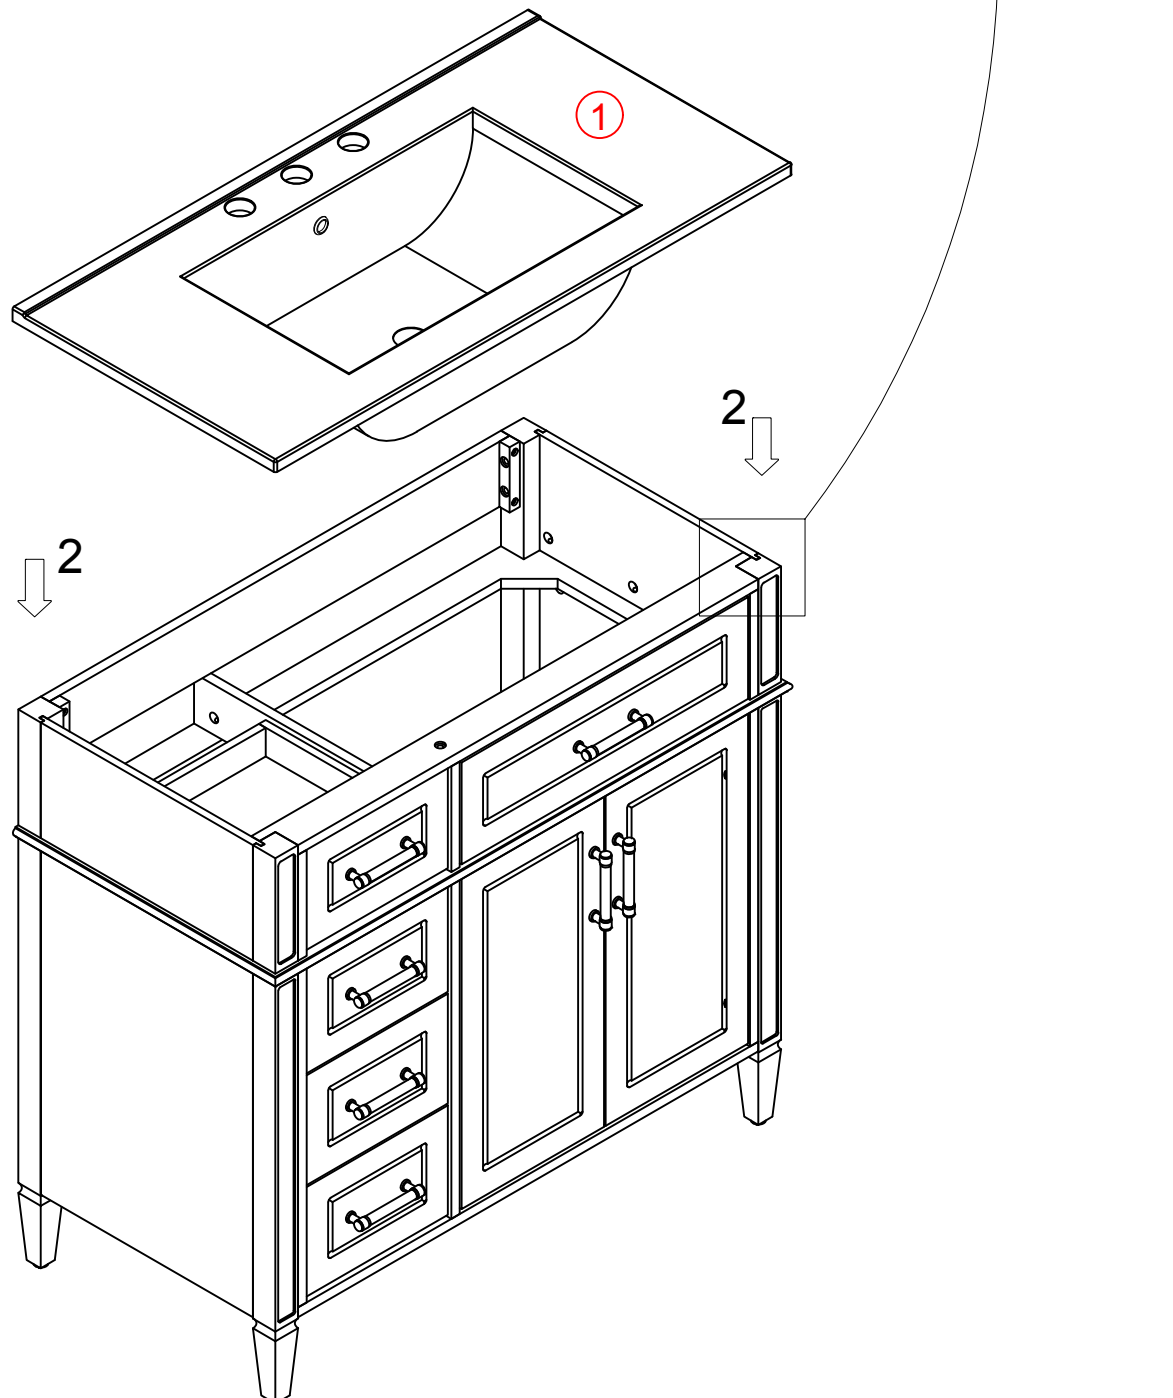


STEP 44

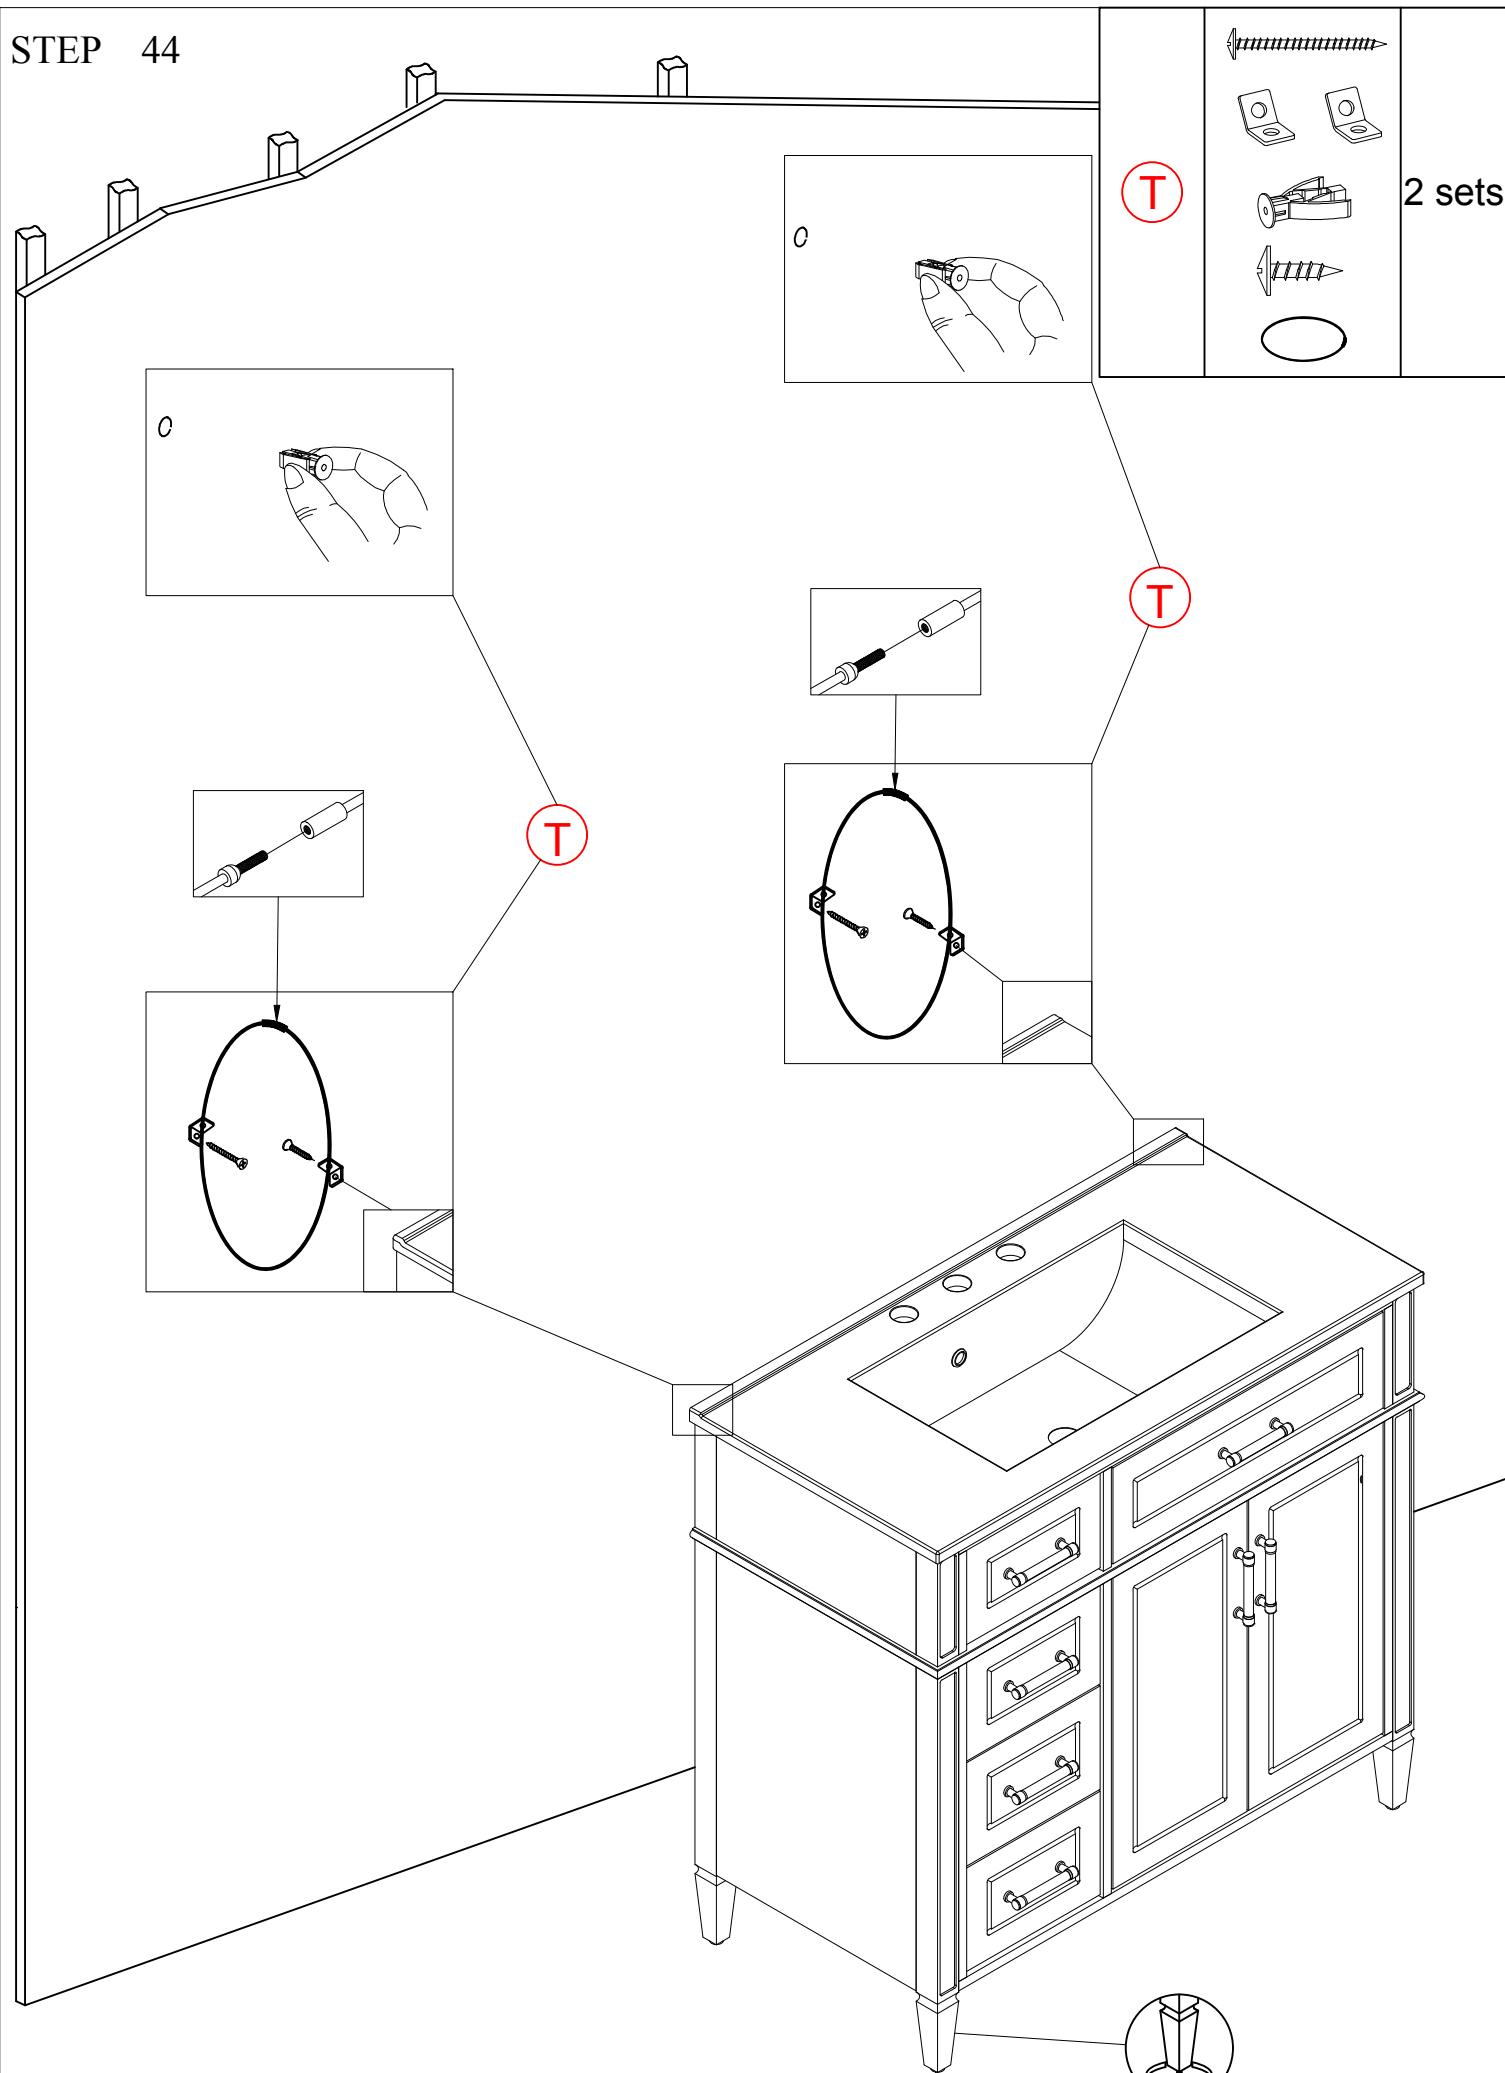

Rotate counterclockwise to increase the length of Floor Leveler, and raise that corner. Rotate clockwise to lower that corner.

HINGE ADJUSTMENTS

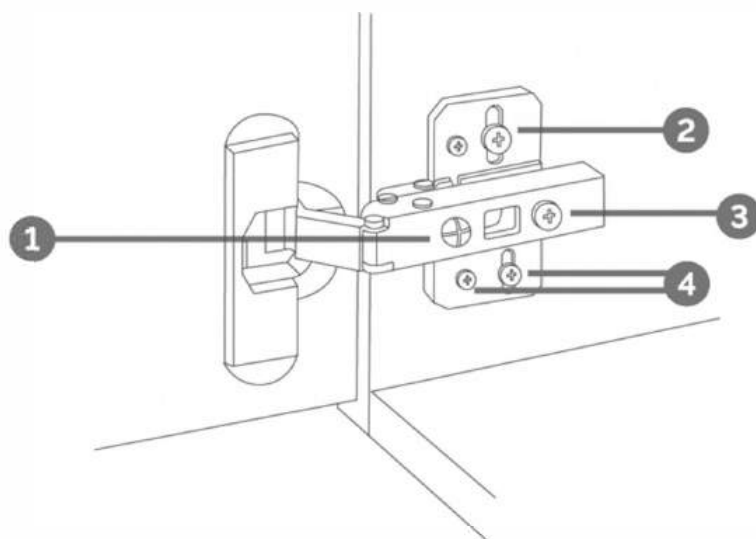


1 Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

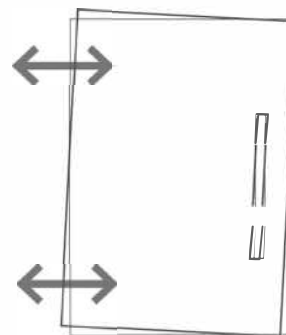


2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

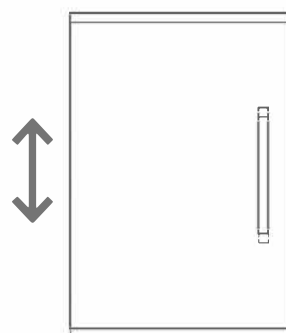

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

