


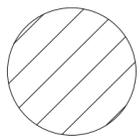
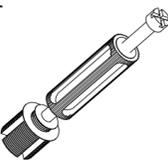


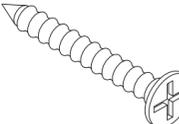

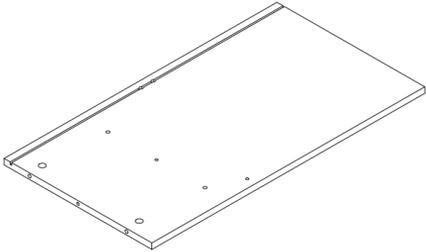
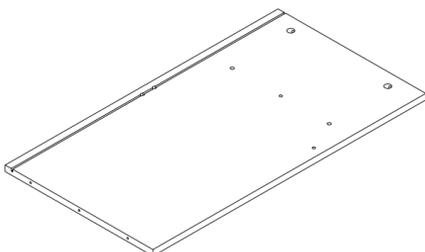
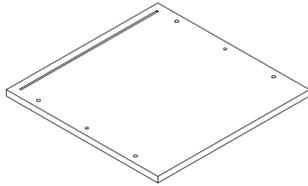
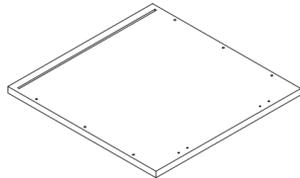
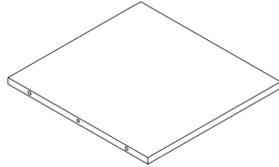

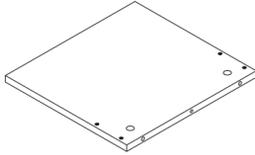



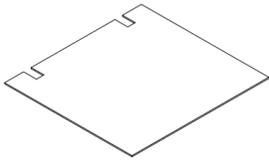
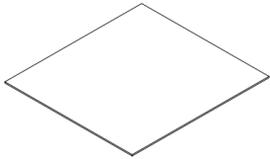
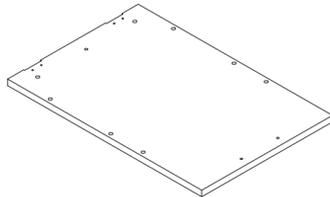


K  2PCS	L  4PCS	M 3.5*25  8PCS	N  2PCS	O  2PCS	P 8*40  2PCS	Q 4*50  2PCS	R  8PCS	A  22PCS	B  22PCS	C 8*40  5PCS	D 7*50  10PCS	E  6PCS	F 3*12  6PCS	G 3.5*14  +2PCS 10PCS	H 3.5*35  4PCS	I 96mm  1PCS	J 4*18  2PCS
---	---	--	--	---	--	--	---	---	--	--	--	---	--	--	--	--	--


<p>1</p> <p>720*390(mm) 28.35*15.35(inch) 1PC</p> 	<p>2</p> <p>720*390(mm) 28.35*15.35(inch) 1PC</p> 	<p>3</p> <p>400*400(mm) 15.75*15.75(inch) 1PC</p> 	<p>4</p> <p>382*391(mm) 15.04*15.39(inch) 1PC</p> 	<p>5</p> <p>350*369(mm) 13.78*14.53(inch) 1PC</p> 
<p>6</p> <p>350*70(mm) 13.78*2.76(inch) 1PC</p> 	<p>7</p> <p>320*342(mm) 12.6*13.46(inch) 1PC</p> 	<p>8</p> <p>310*50(mm) 12.2*1.97(inch) 1PC</p> 	<p>9</p> <p>333*50(mm) 13.11*1.97(inch) 1PC</p> 	<p>10</p> <p>333*50(mm) 13.11*1.97(inch) 1PC</p> 
<p>11</p> <p>280*110(mm) 11.02*4.33(inch) 1PC</p> 	<p>12</p> <p>280*110(mm) 11.02*4.33(inch) 1PC</p> 	<p>13</p> <p>336*361(mm) 13.23*14.21(inch) 1PCS</p> 	<p>14</p> <p>336*361(mm) 13.23*14.21(inch) 1PCS</p> 	<p>15</p> <p>510*345(mm) 20.08*13.58(inch) 1PC</p> 
<p>16</p> <p>305*310*330(mm) 12*12.2*13(inch) 1PC</p> 				

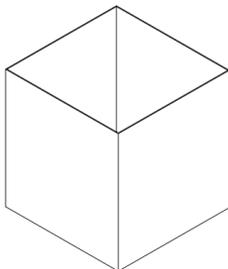


Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

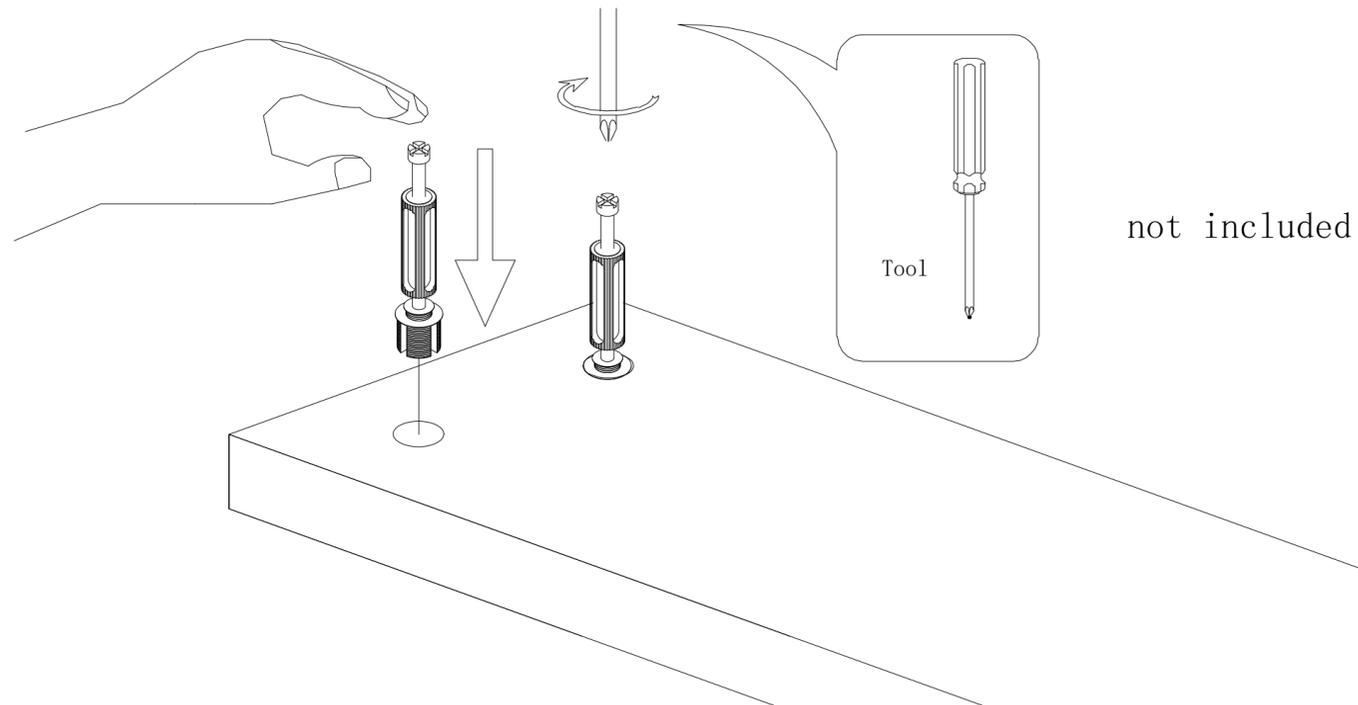

II

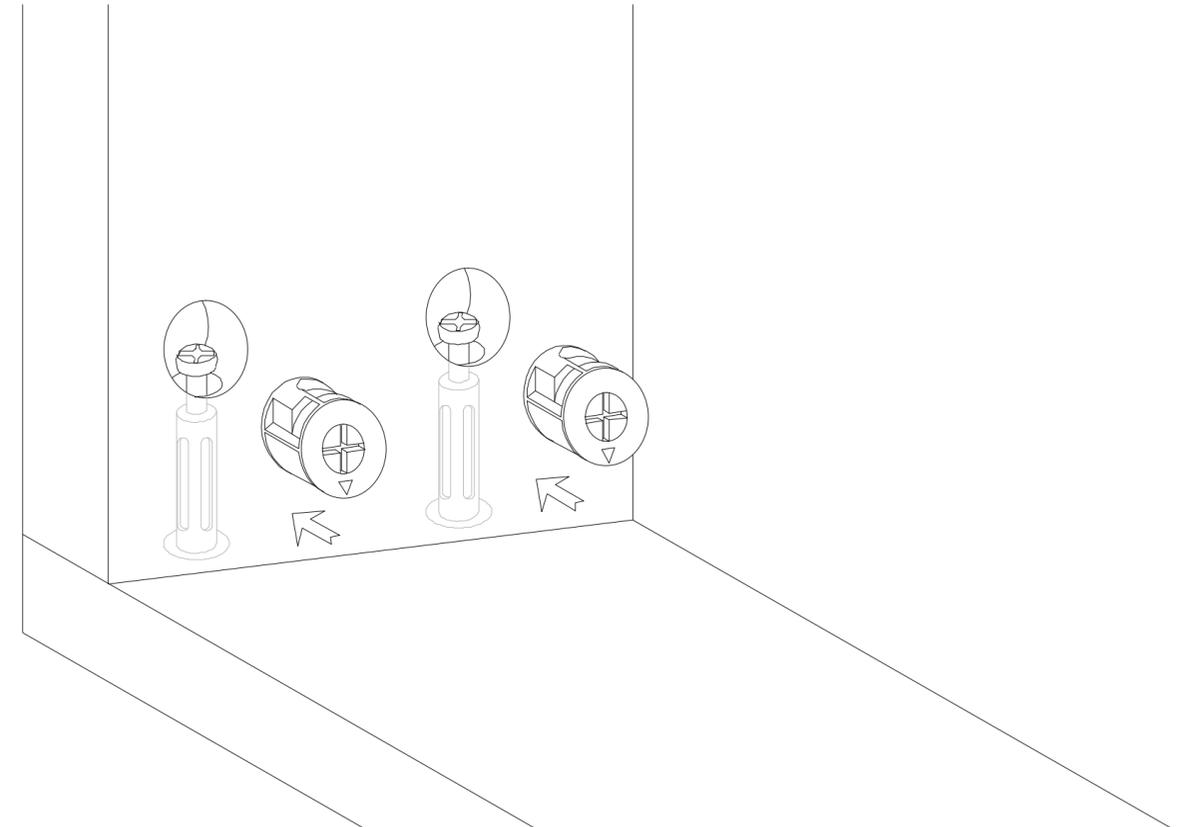

III








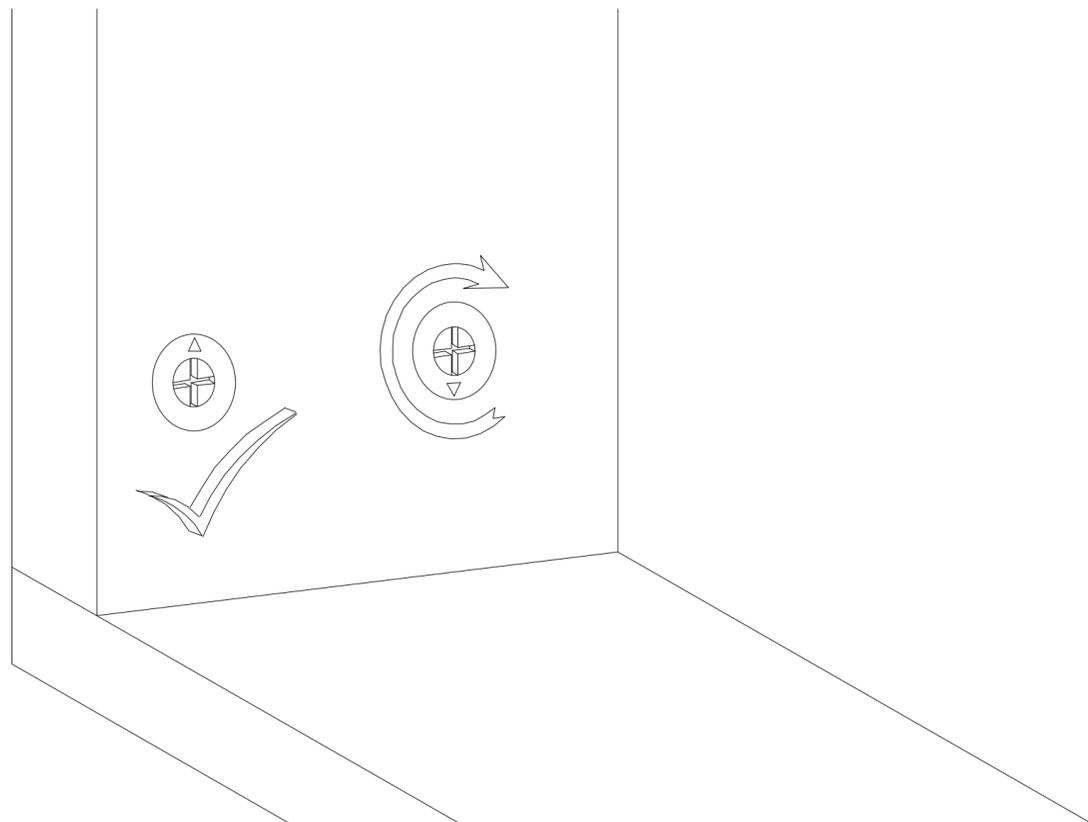




IV




Please scan QR code for assembly video.

1

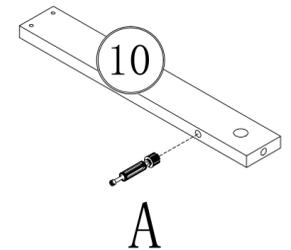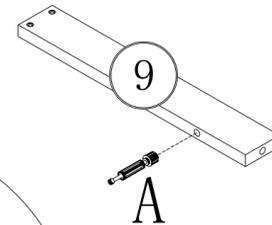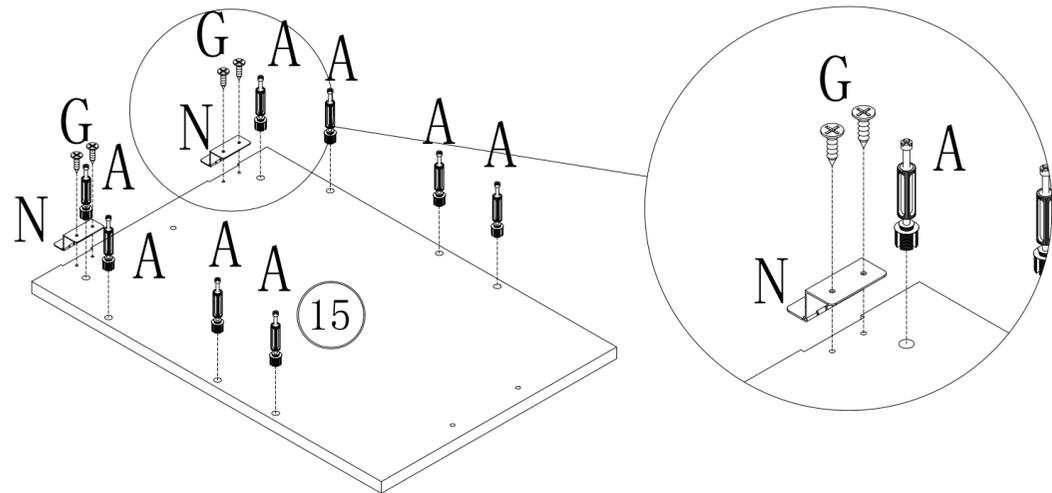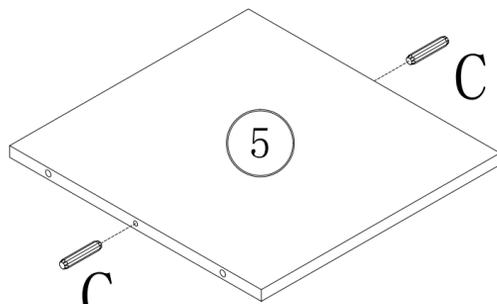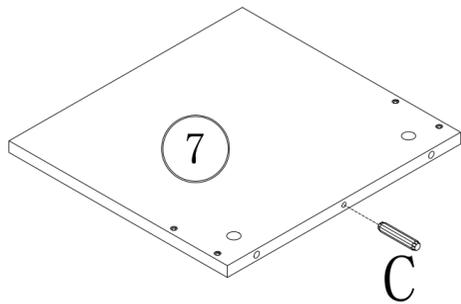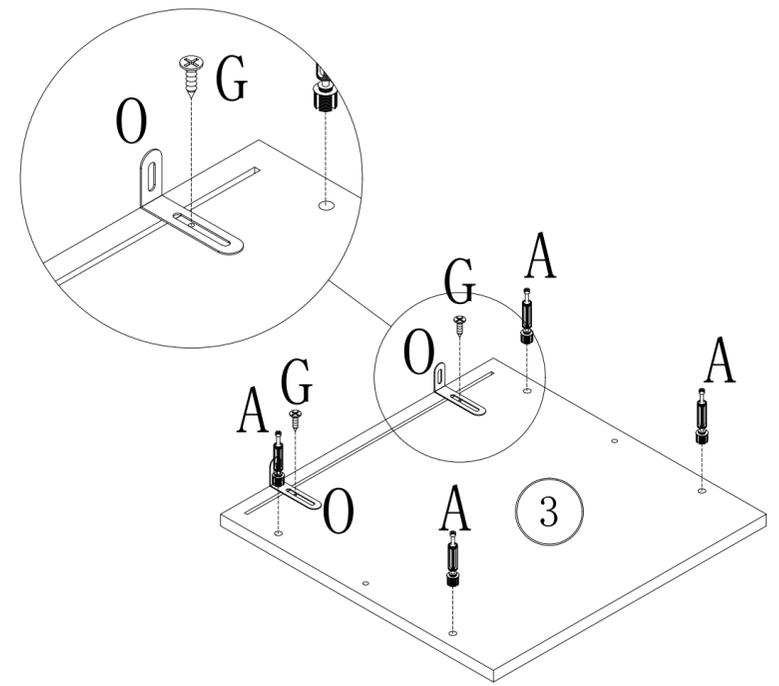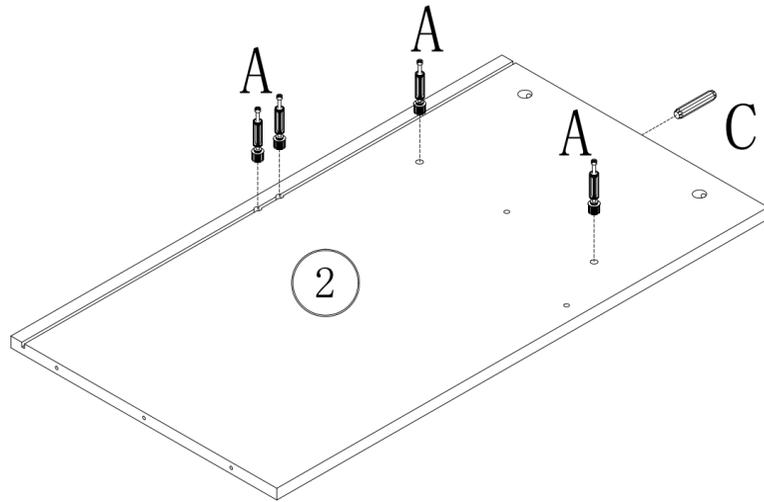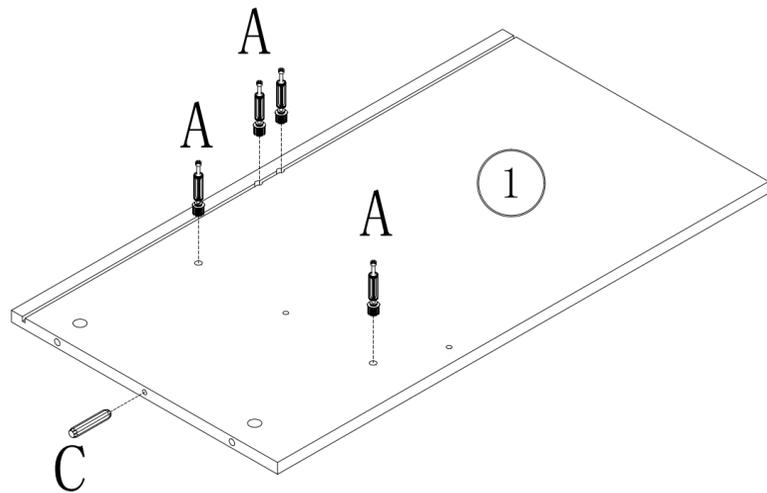

	A*22
	C*5
	G*6

	N*2
	O*2


put A on board

put C on board

- | | | | | | |
|---|---|---|---|---|---|
| ① | ② | ③ | ⑨ | ⑩ | ⑮ |
| ① | ② | ⑤ | ⑦ | | |

2

Make sure the arrow on the screw align to the hole on the side.

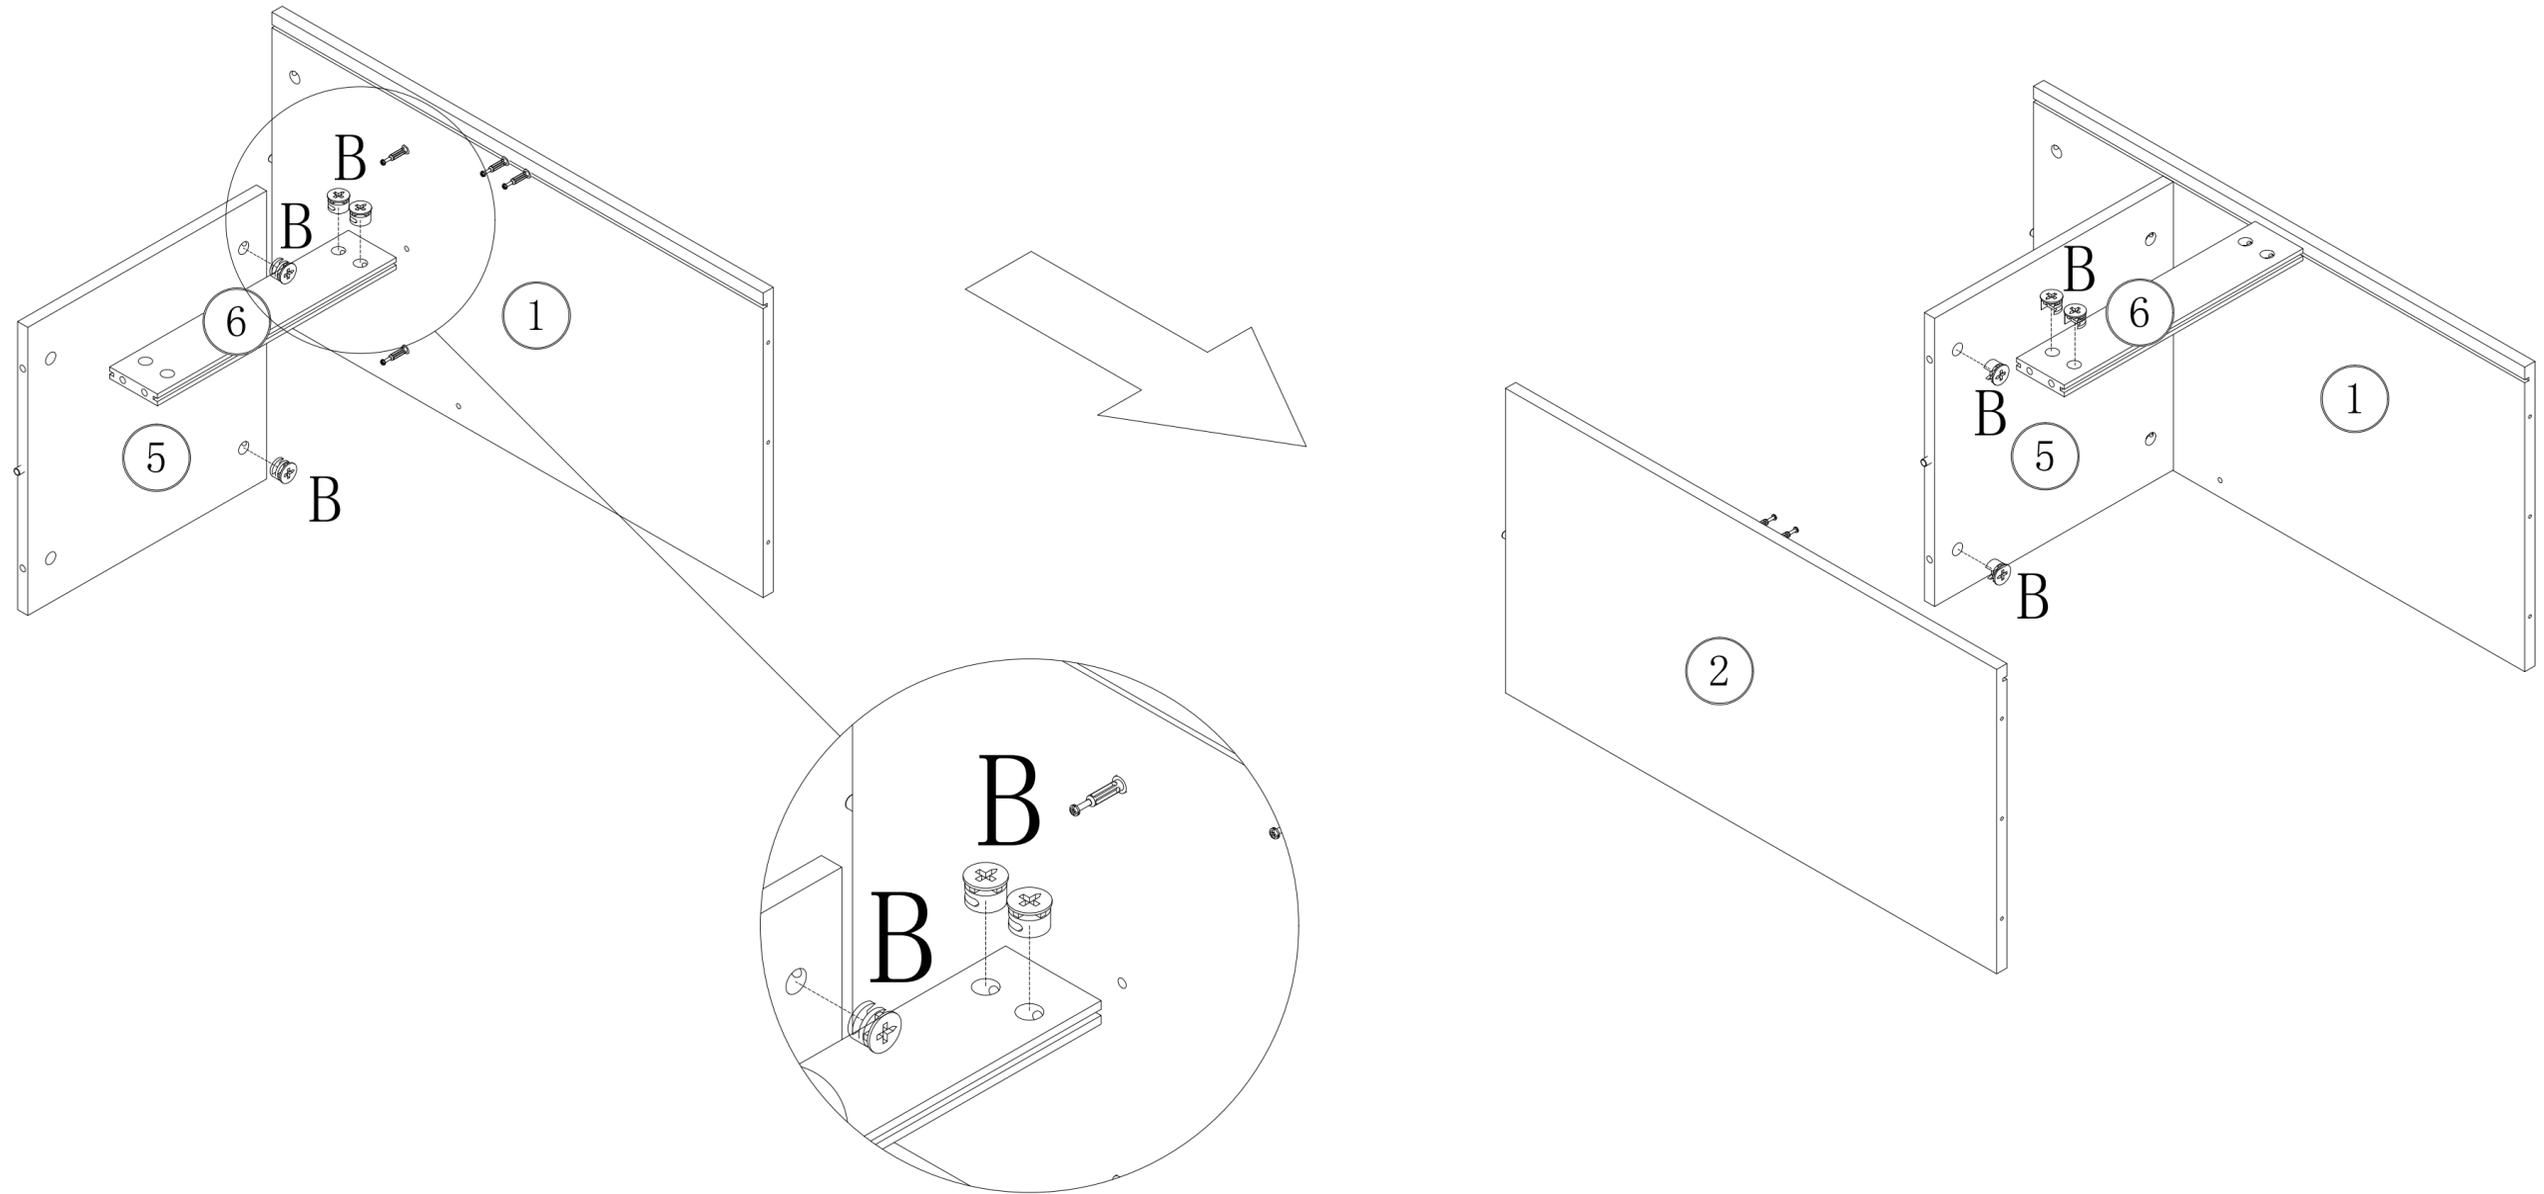

B*8




put B on board

5

6

3

Make sure the arrow on the screw align to the hole on the side.

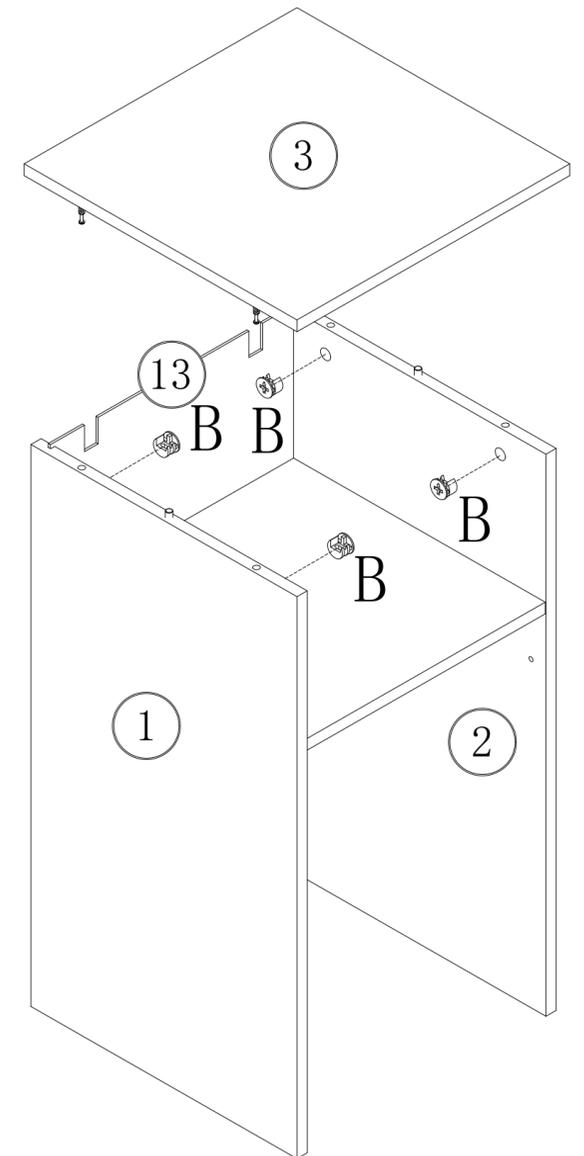
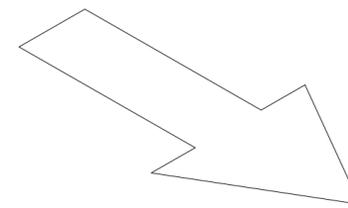
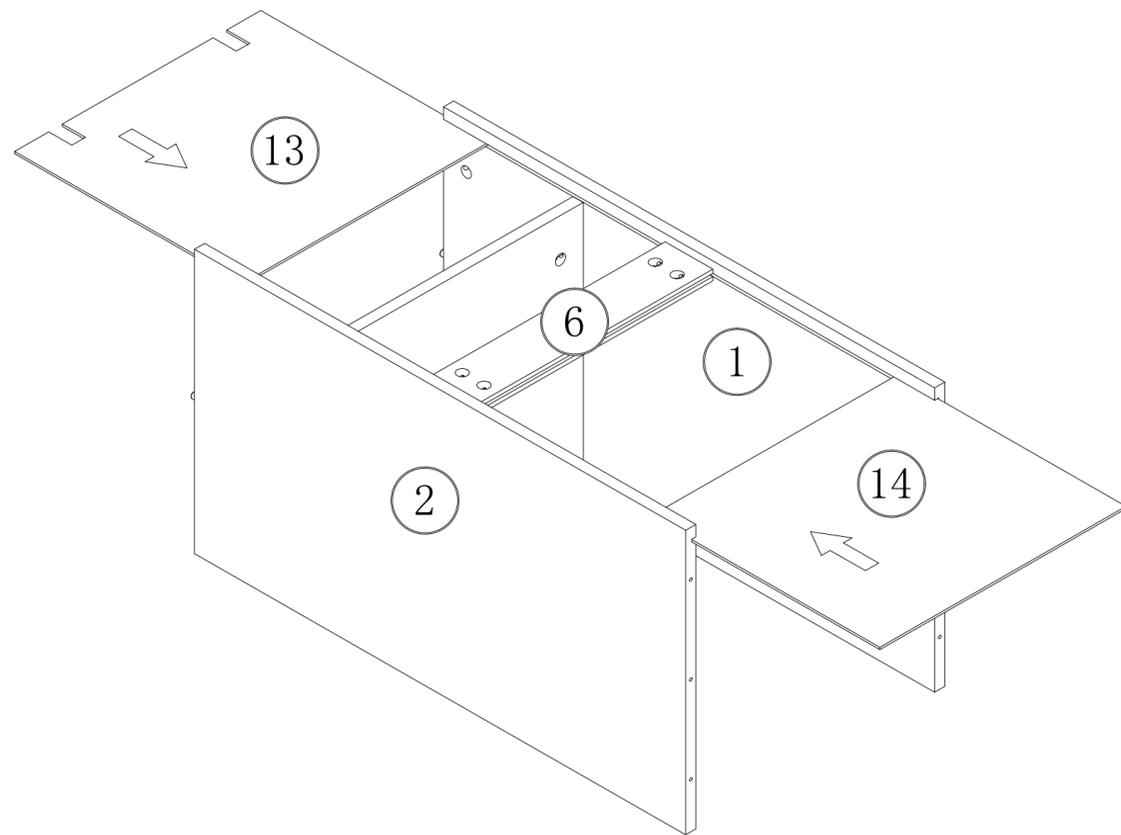


put B on board 1 2



B*4

4

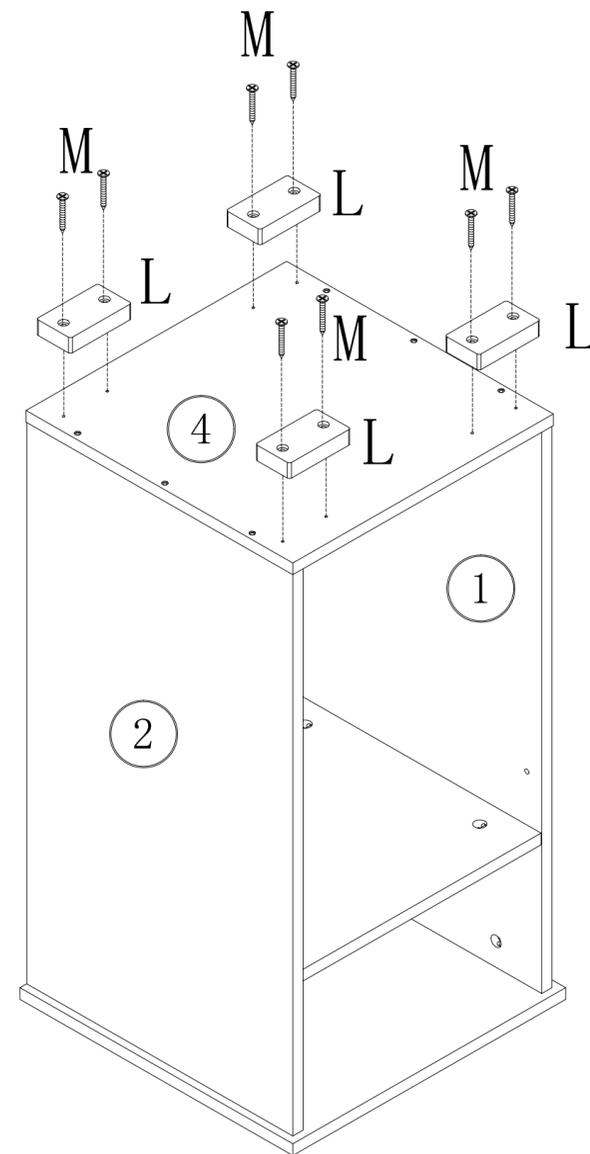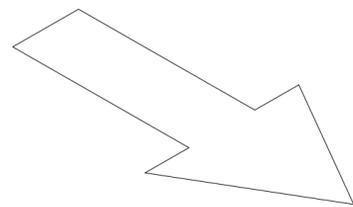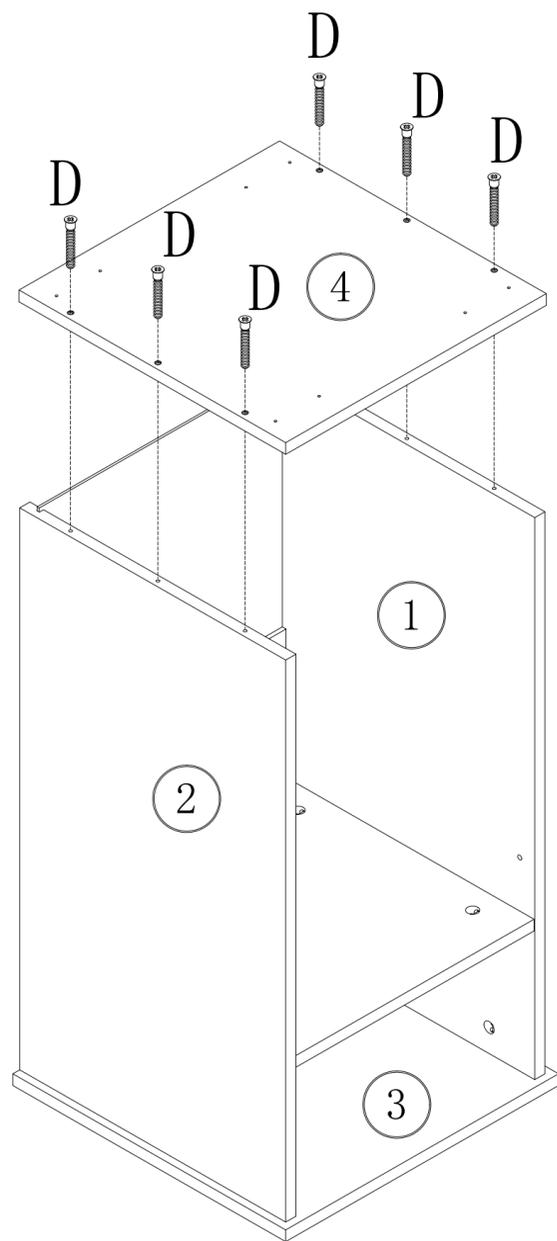

D*6









L*4





M*8




5

Make sure the arrow on the screw align to the hole on the side.

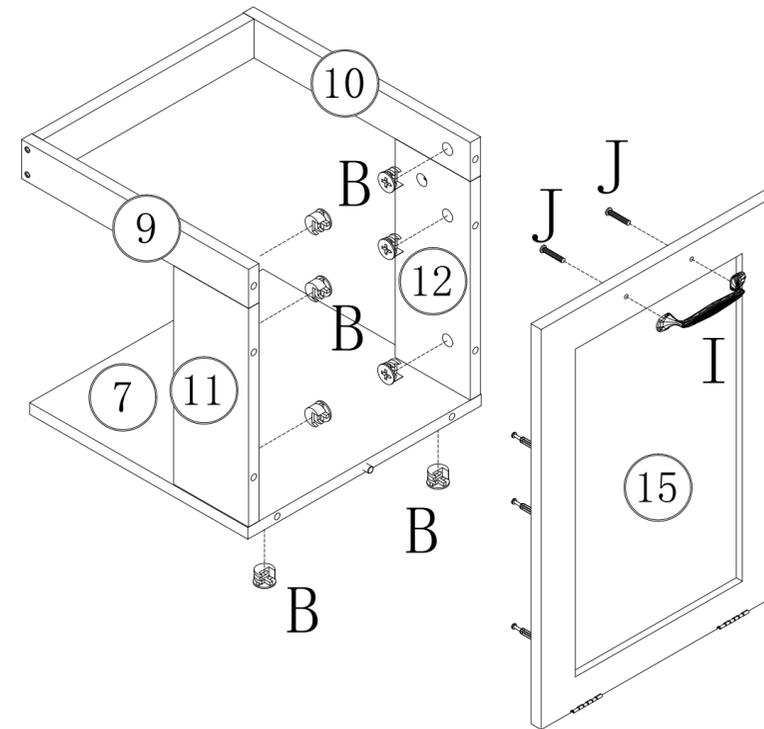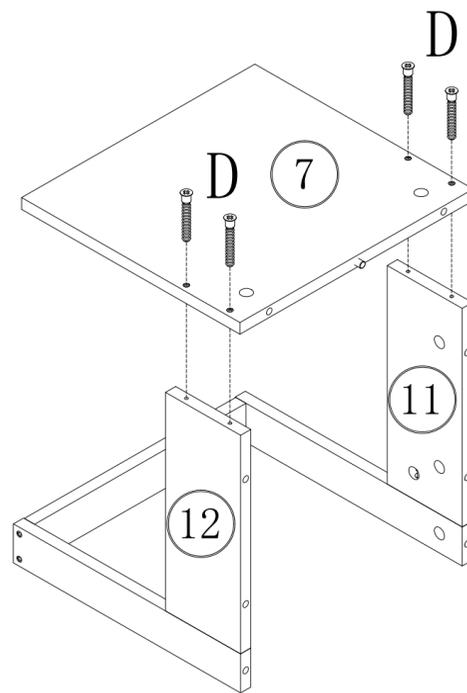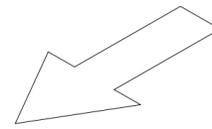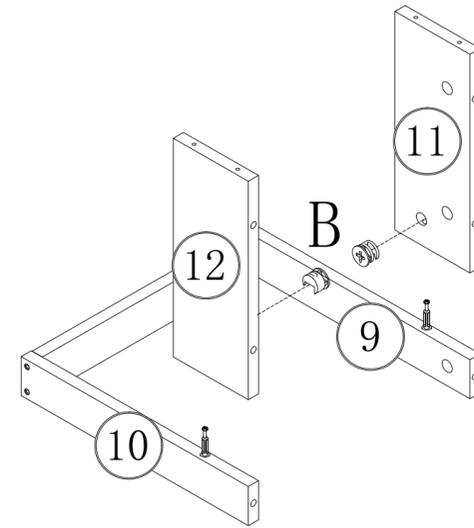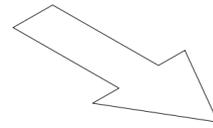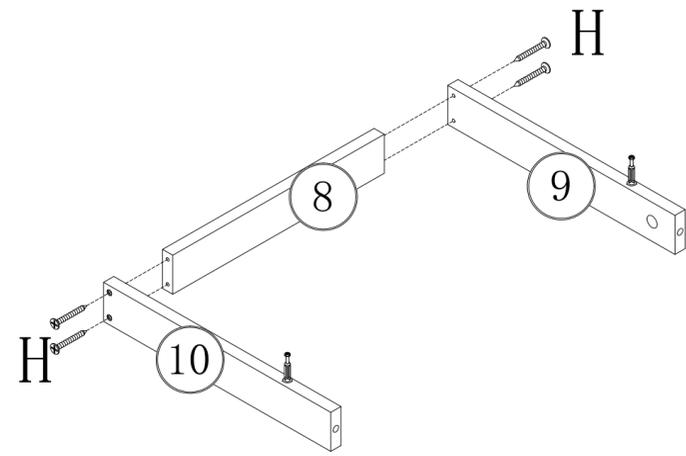


	B*10		
	D*4		I*1
	H*4		J*2



6

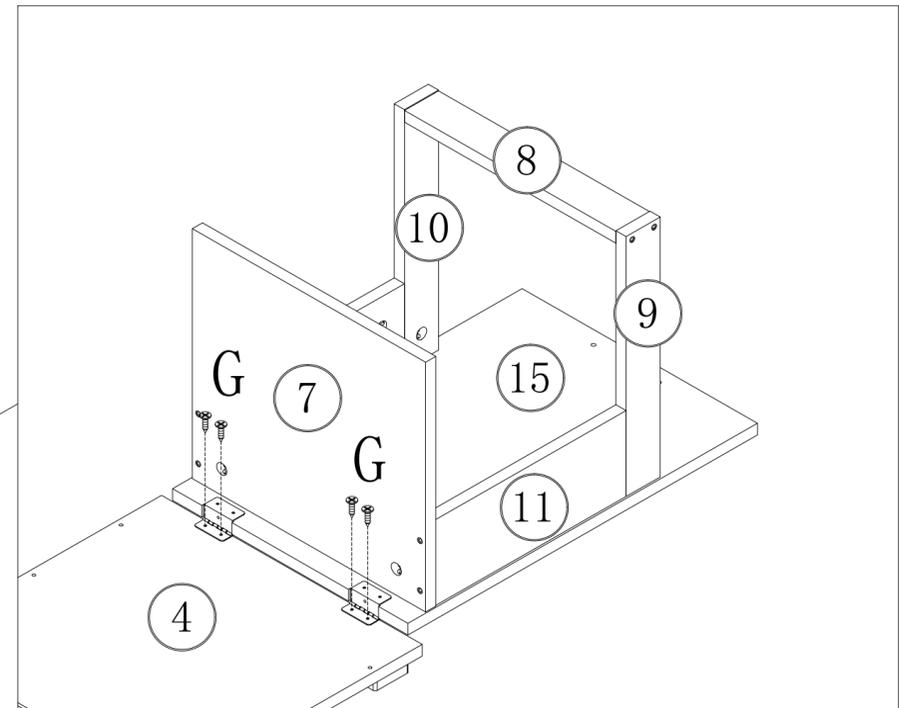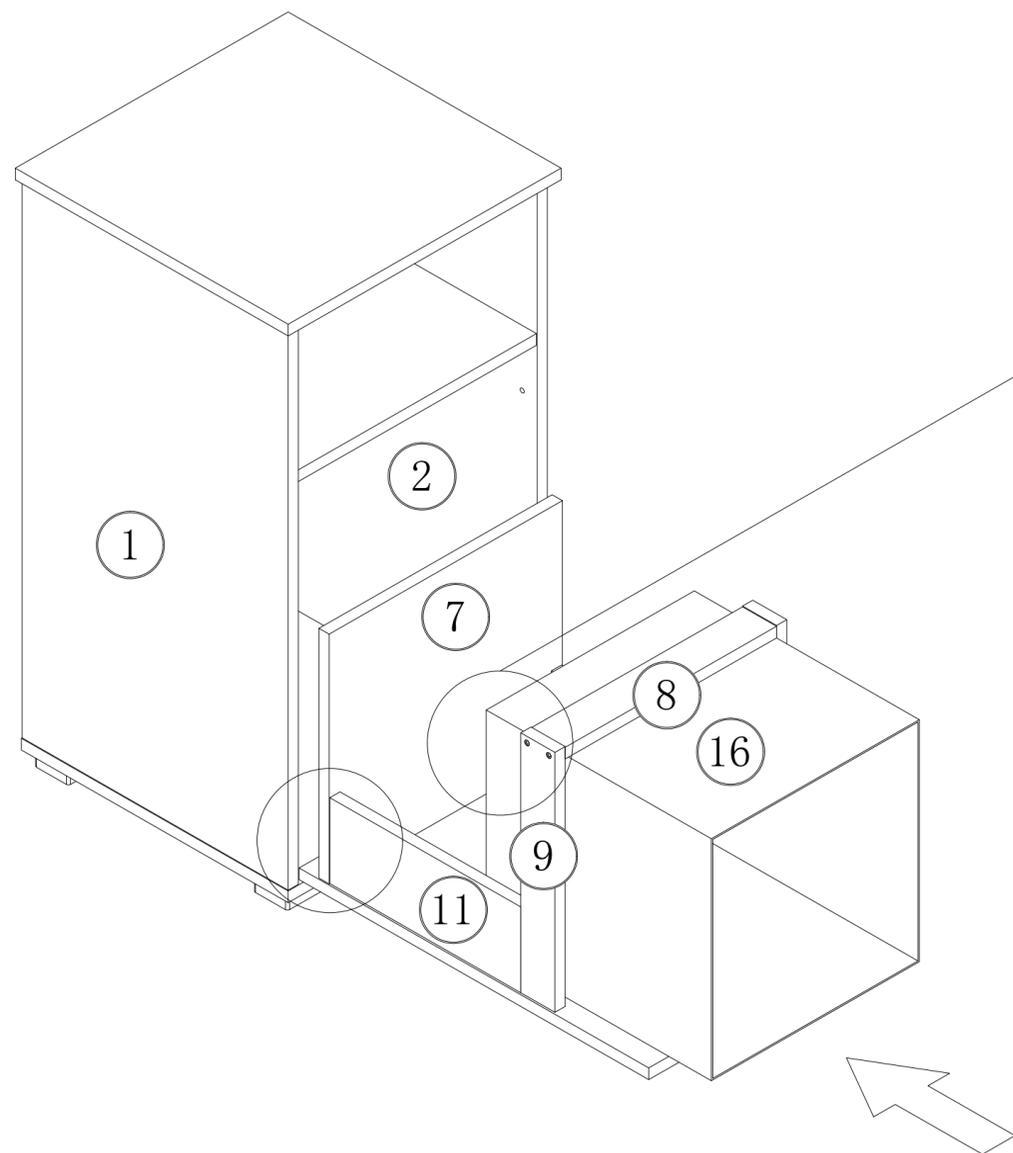


G*4

7

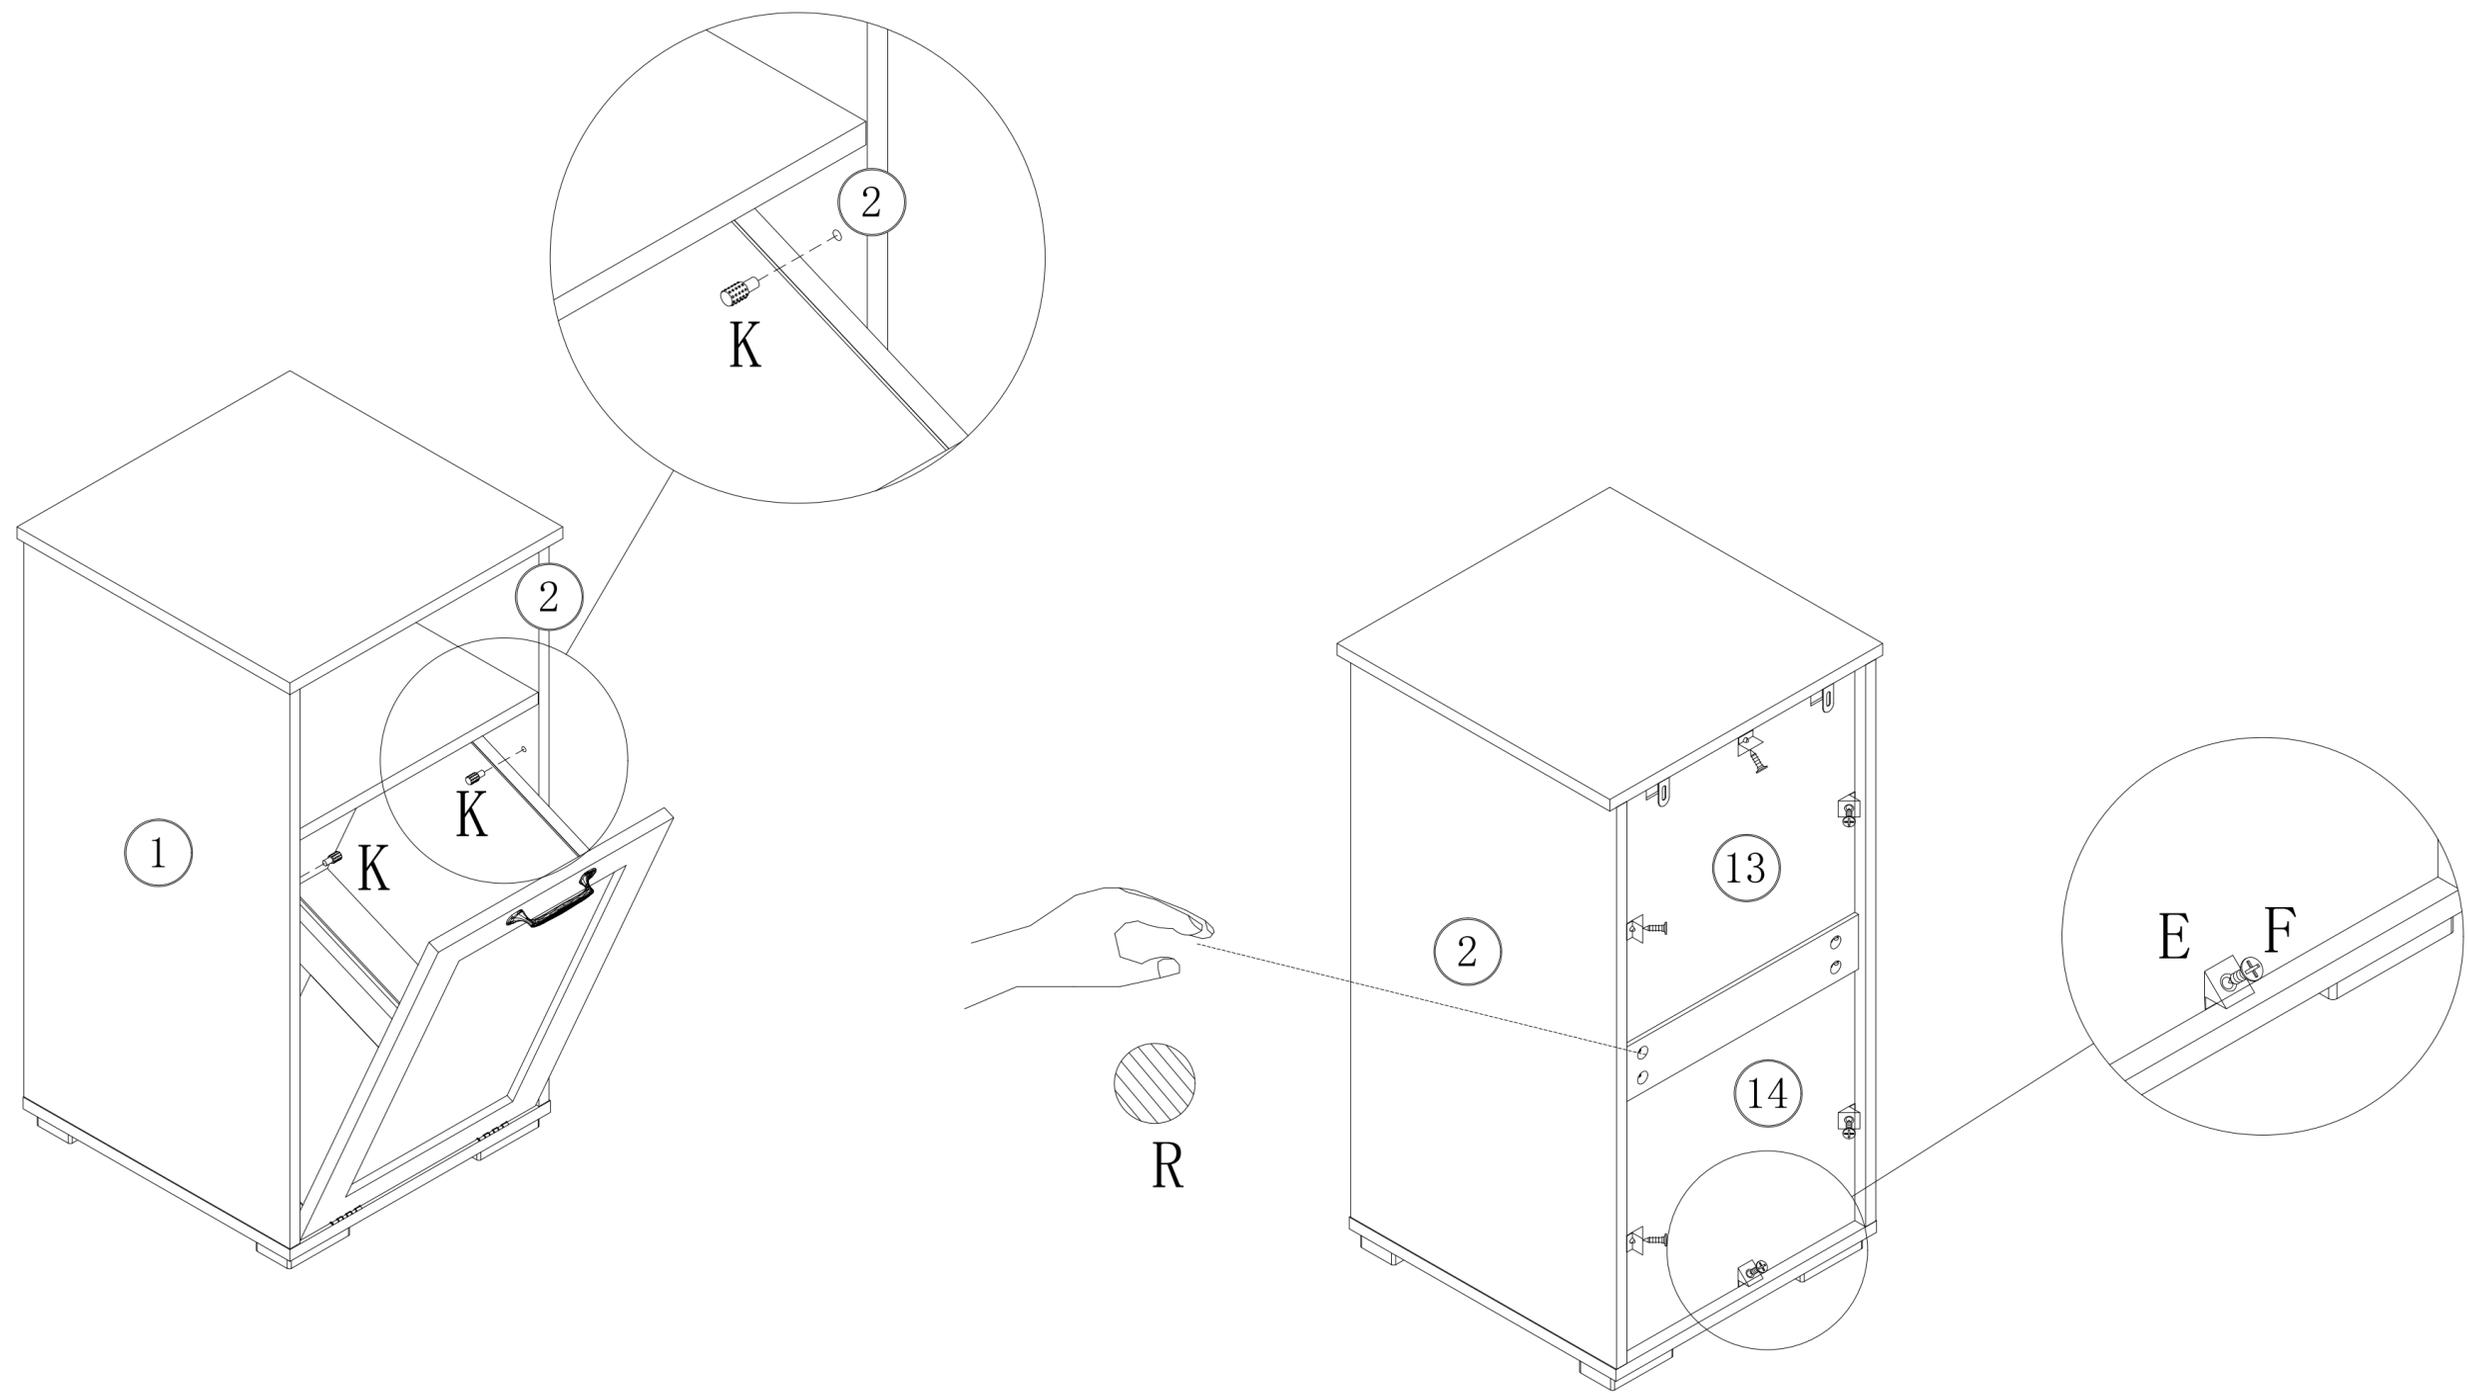


	K*2		E*6
	R*8		F*6

8

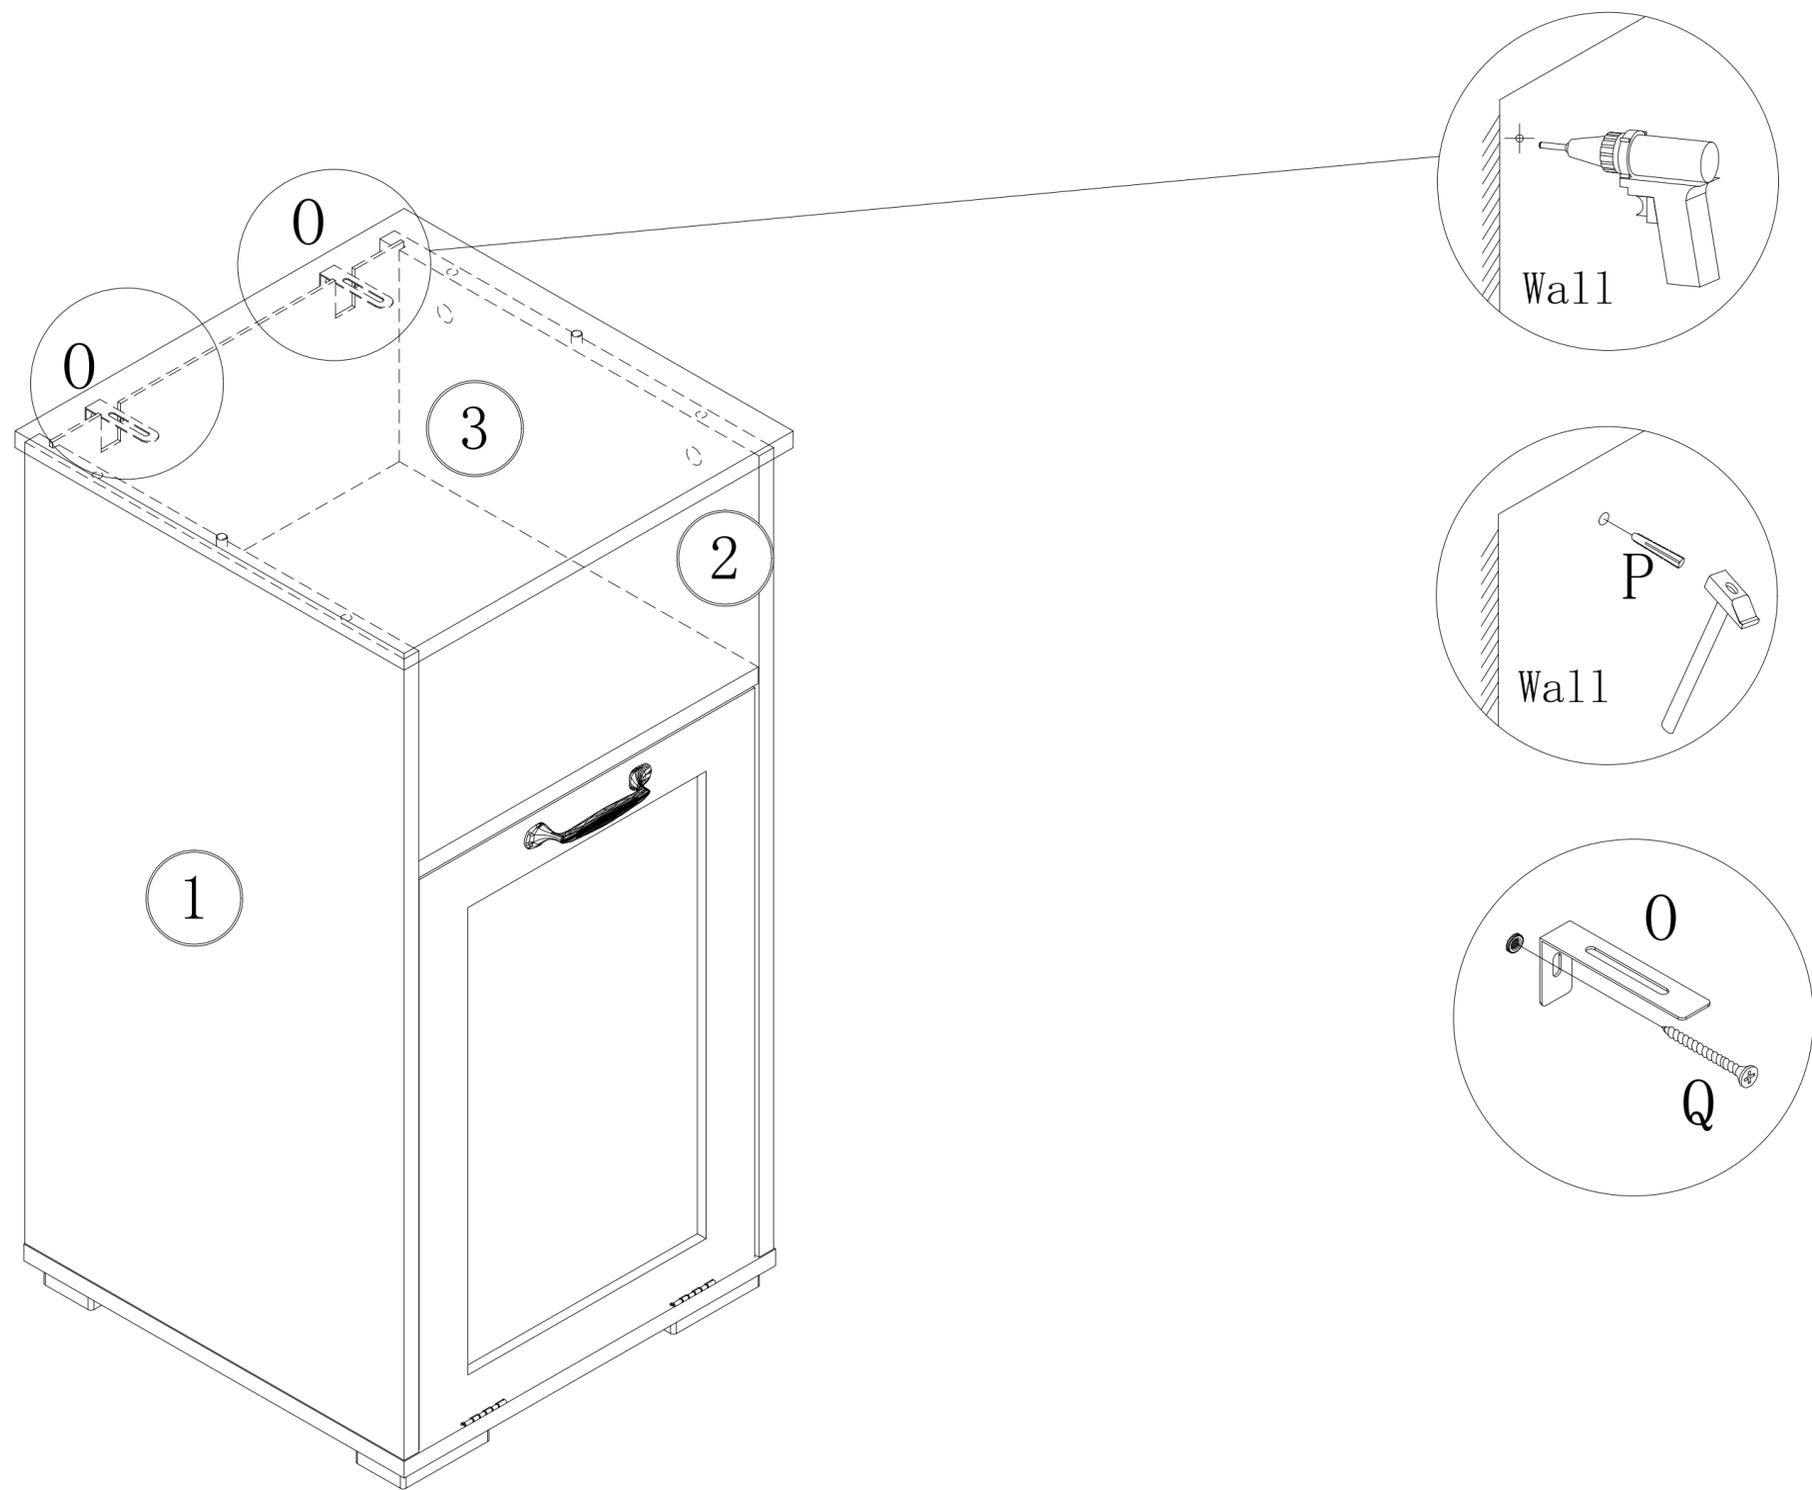

	P*2
	Q*2

9

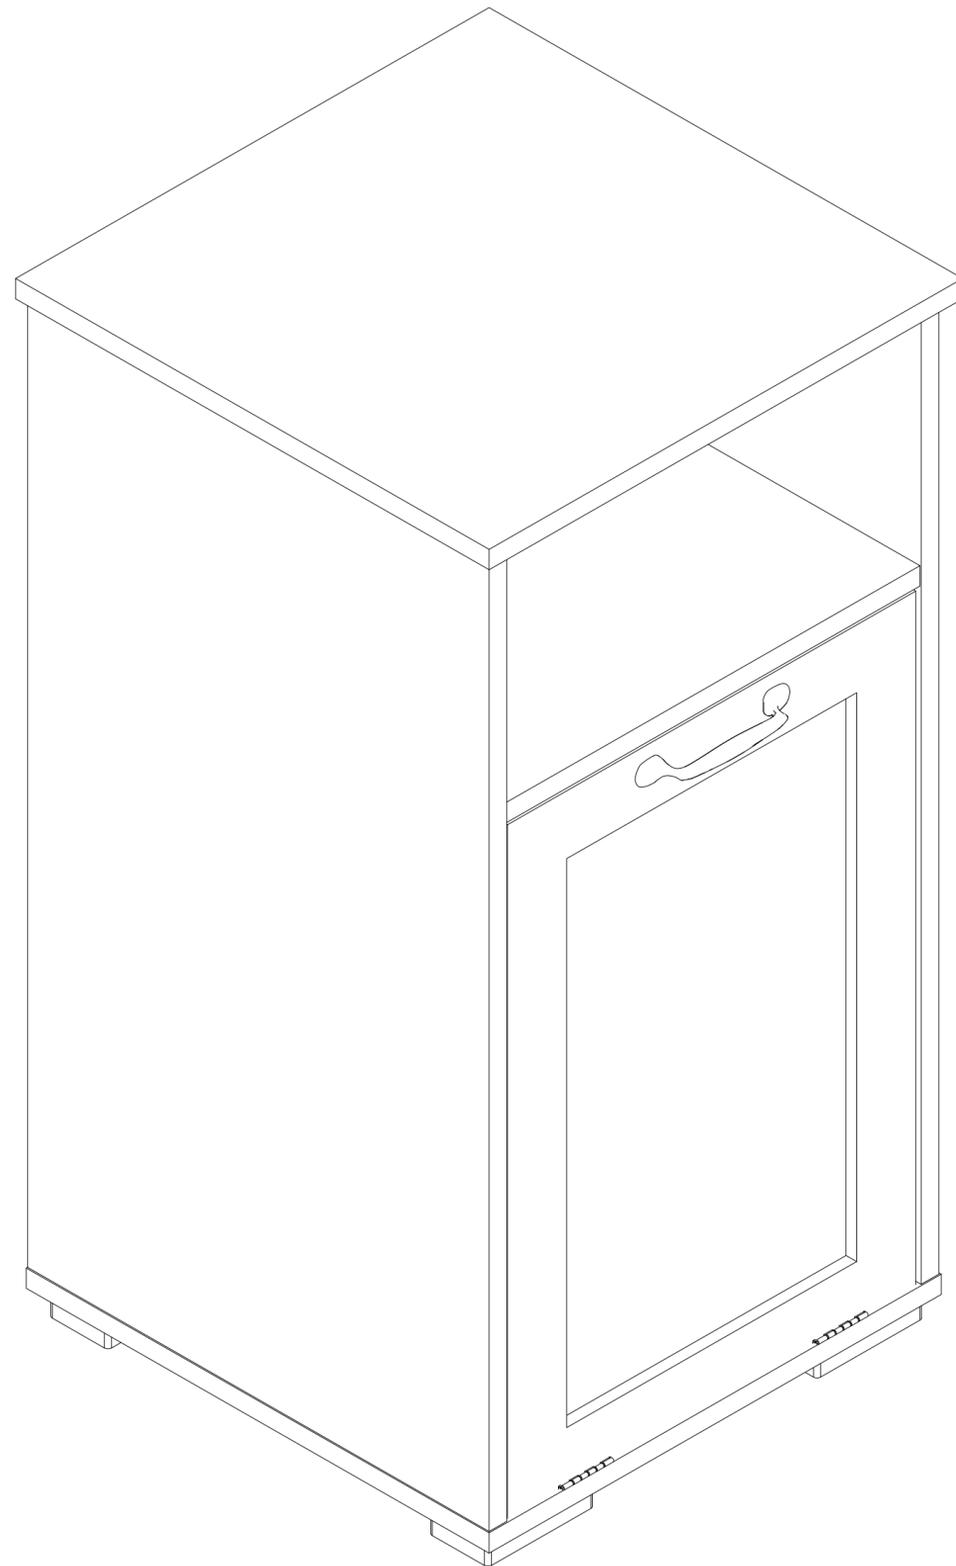

END