

ASSEMBLY INSTRUCTION INSTRUCTIONS DE MONTAGE


FULL / QUEEN BED



N733P367135 / N733P368653

Explosion diagram of components






















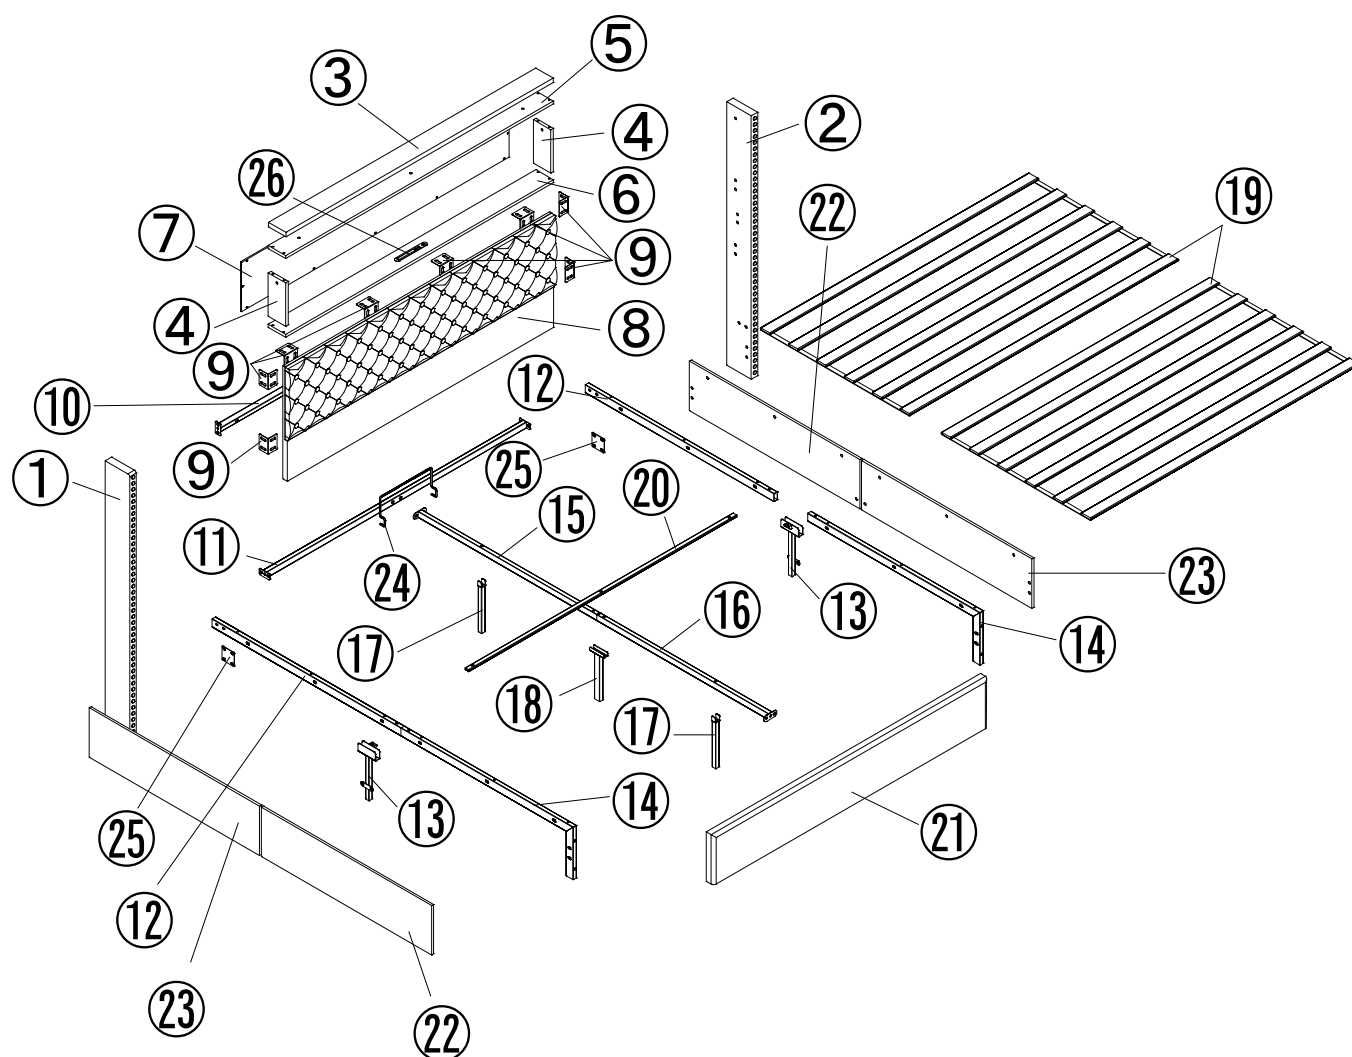
Diagramme d'explosion des composants



ASSEMBLY INSTRUCTION INSTRUCTIONS DE MONTAGE

PARTS LIST / LISTE DE PIÈCES

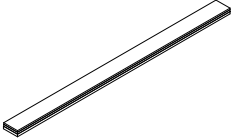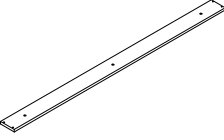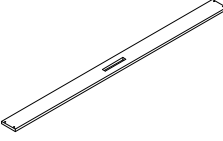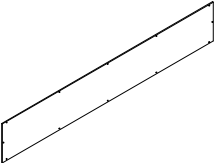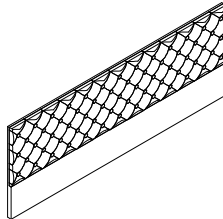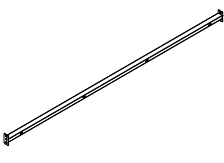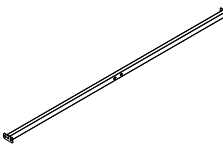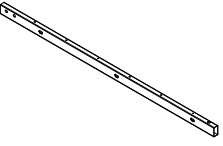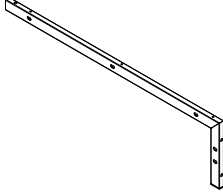
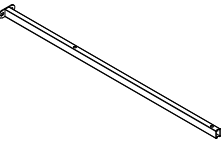
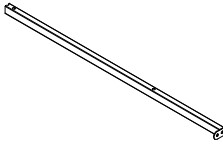

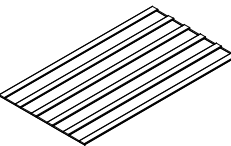
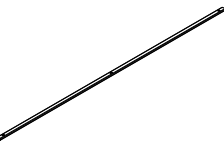
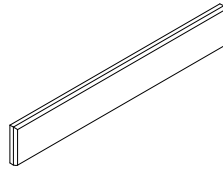
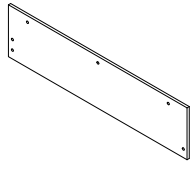
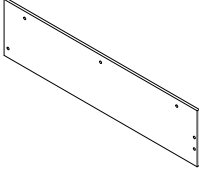
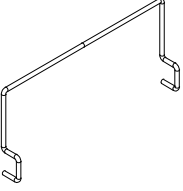

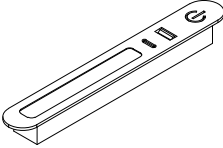
N733P367135 / N733P368653

				
①*1	②*1	③*1	④*2	⑤*1
				
⑥*1	⑦*1	⑧*1	⑨*8	⑩*1
				
⑪*1	⑫*2	⑬*2	⑭*2	⑮*1
				
⑯*1	⑰*2	⑱*1	⑲*2	⑳*1
				
㉑*1	㉒*2	㉓*2	㉔*1	㉕*2
				
㉖*1				

ASSEMBLY INSTRUCTION INSTRUCTIONS DE MONTAGE

PARTS LIST / LISTE DE PIÈCES

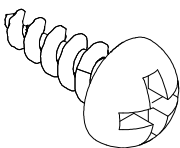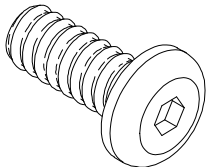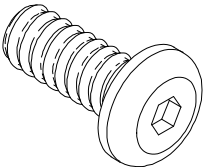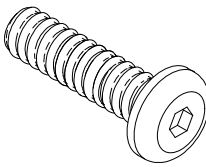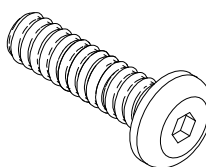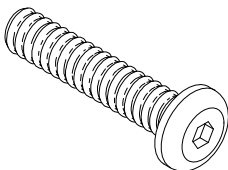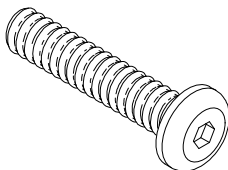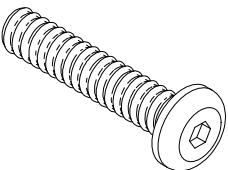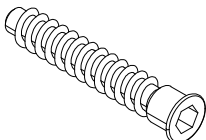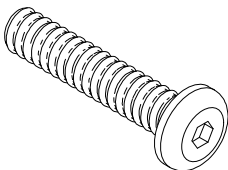N733P367135 / N733P368653


				
S5*16 A*12	M8*12 B*16	M8*16 C*36	M8*20 D*2	M8*35 E*22
				
M8*40 F*4	M8*45 G*8	M8*55 H*5	I*8	M8*30 J*3
				
M6 K*1	M8 L*1			

Please note that the shapes of screws B and C and D and E and F and G and H and J are similar. Please install according to the instructions and distinguish them!

Veuillez noter que les formes des vis B et C et D et E et F et G et H et J sont similaires. Installez-les selon les instructions et distinguez-les !


Before installation, insert the screws into the holes and tighten them, but do not tighten them to 100%, 70% to 80% is sufficient. Finally, after all screws are installed, tighten all screws to 100%. If you encounter these issues, such as if the holes cannot be aligned or some parts cannot be installed, please check if the screws are used correctly and adjust the tightness of the screws.

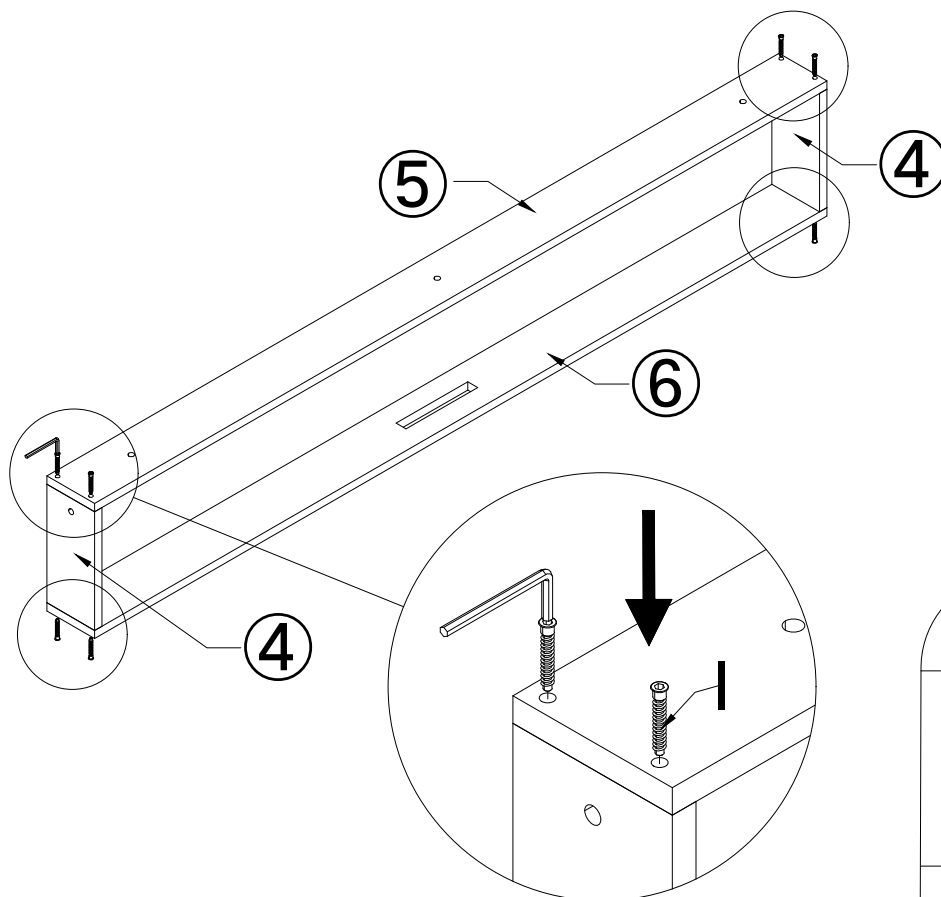Insérer la vis dans le trou avant la fin de l'assemblage, serrer la vis, mais ne pas serrer à 100%, 70% ~ 80% est correct. Enfin, une fois que toutes les vis sont bien serrées, toutes les vis sont serrées à 100%. Si vous rencontrez ces problèmes, par exemple si les trous ne sont pas alignés ou si certaines pièces ne peuvent pas être montées, vérifiez que les vis sont utilisées correctement et Ajustez leur serrage.




STEP 1/ÉTAPE 1

④*2, ⑤*1
⑥*1



I*8

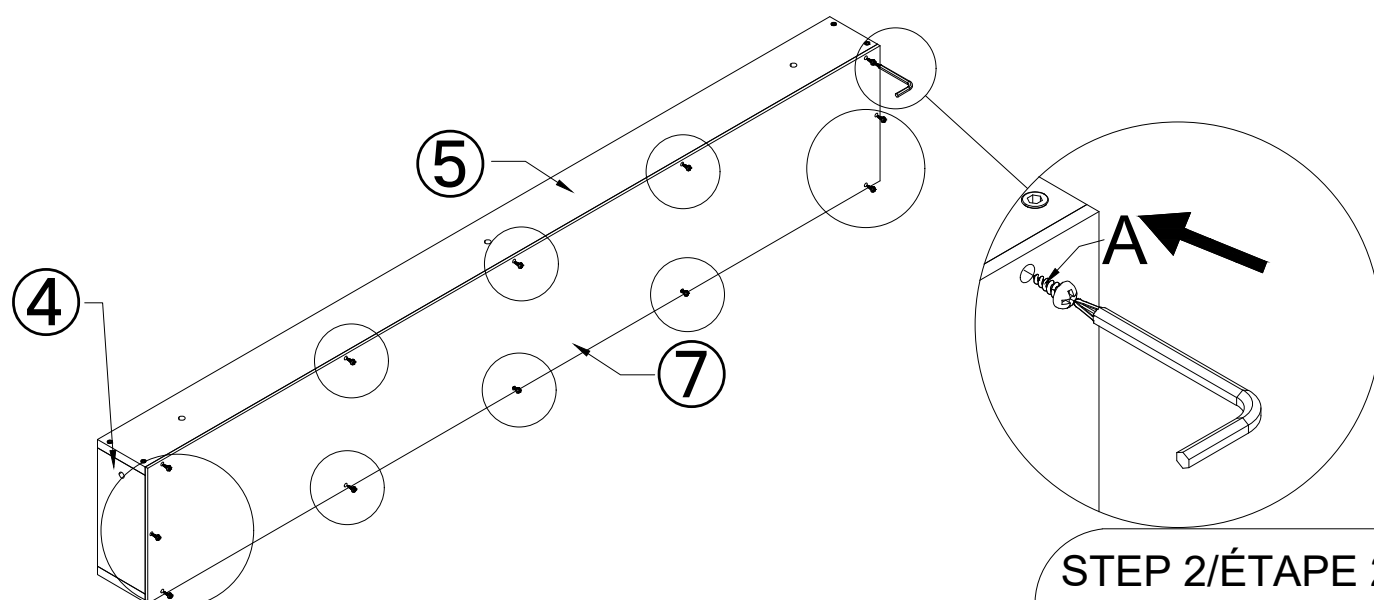


STEP 2/ÉTAPE 2

⑦*1



A:S5*16

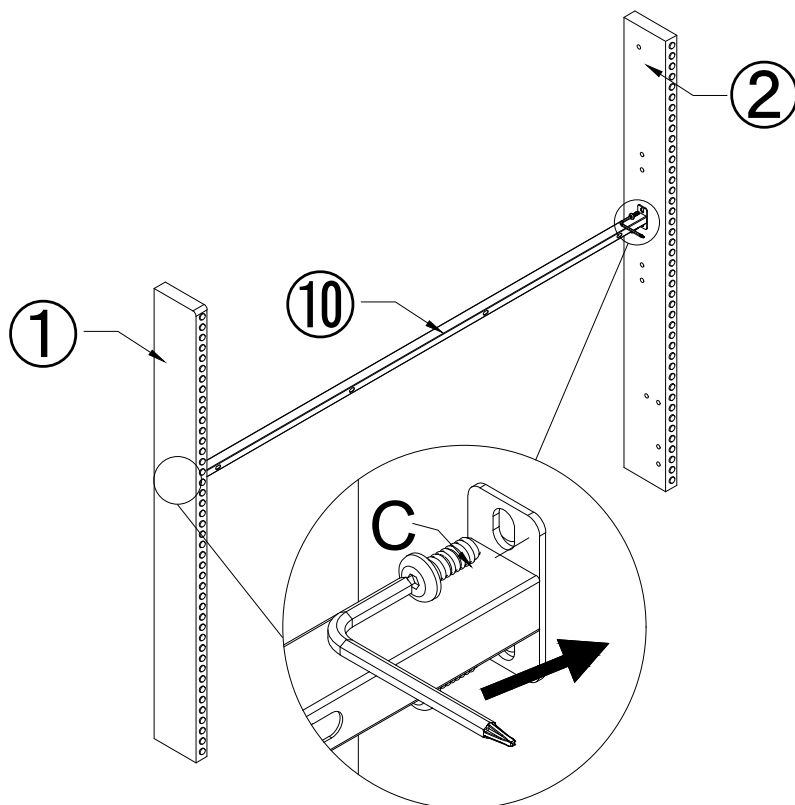A*12




STEP 3/ÉTAPE 3

①*1, ②*1,
⑩*1




C:M8*16

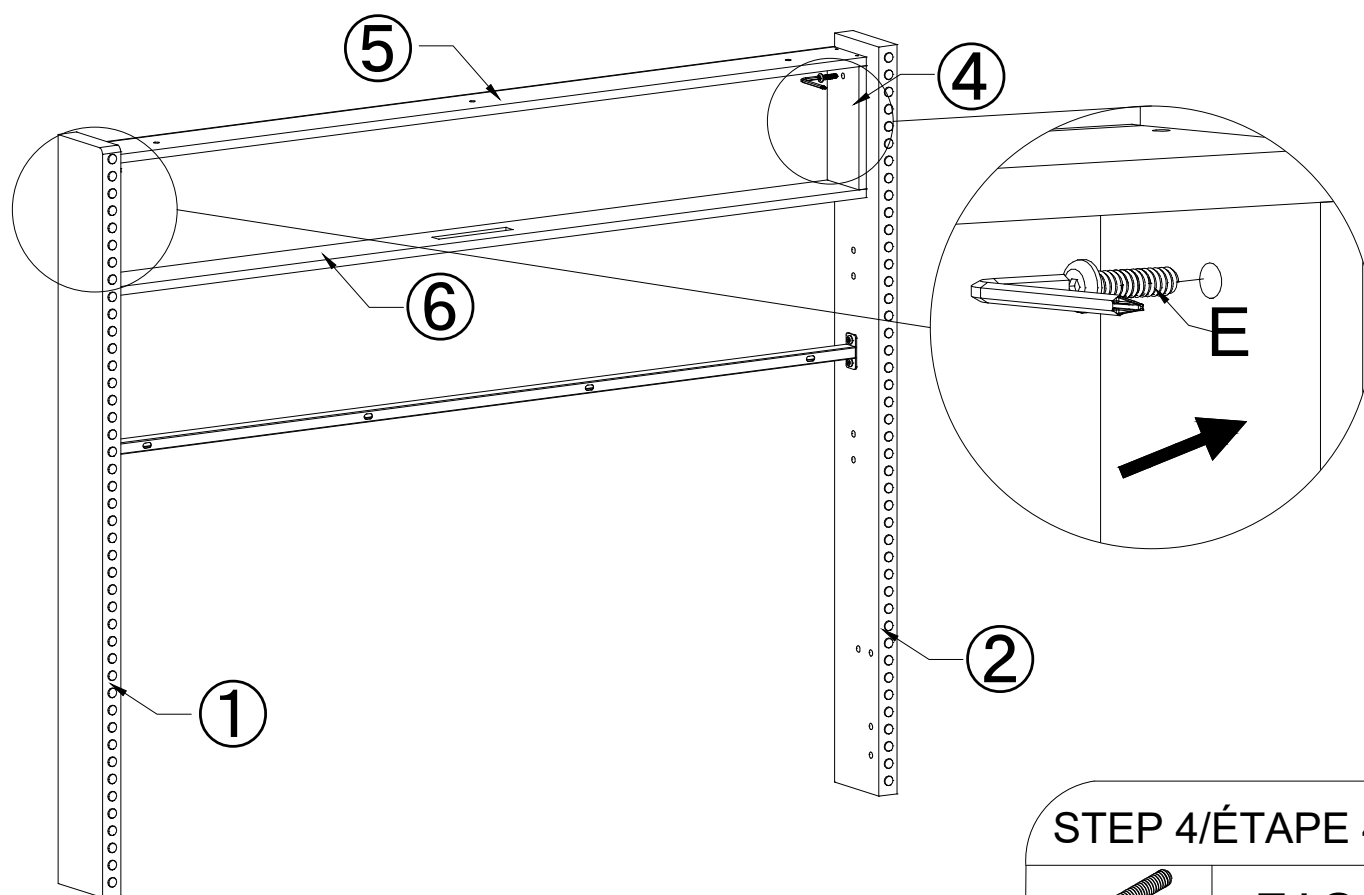C*4






STEP 4/ÉTAPE 4



E:M8*35

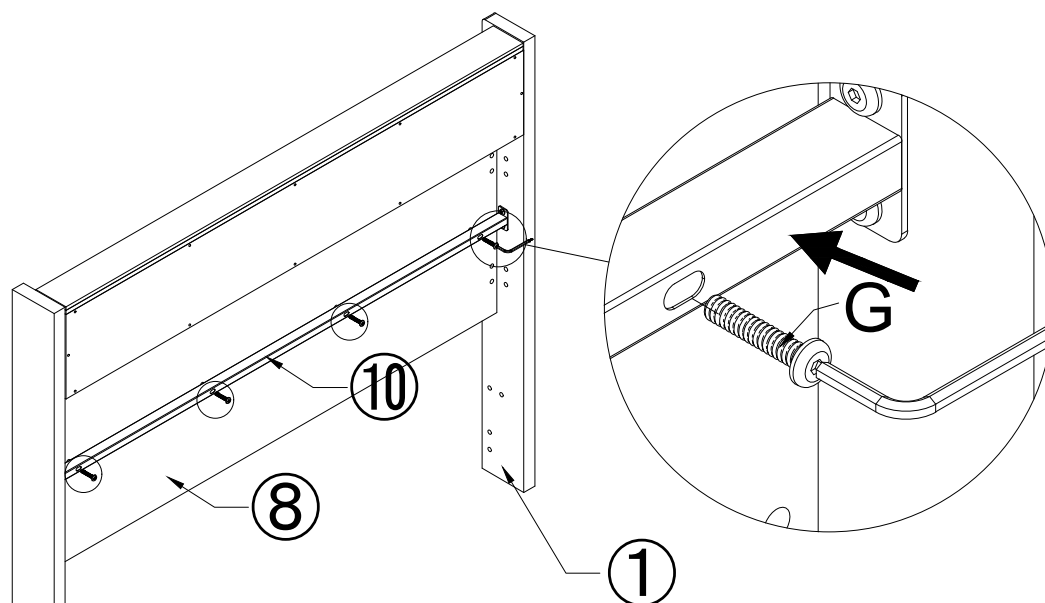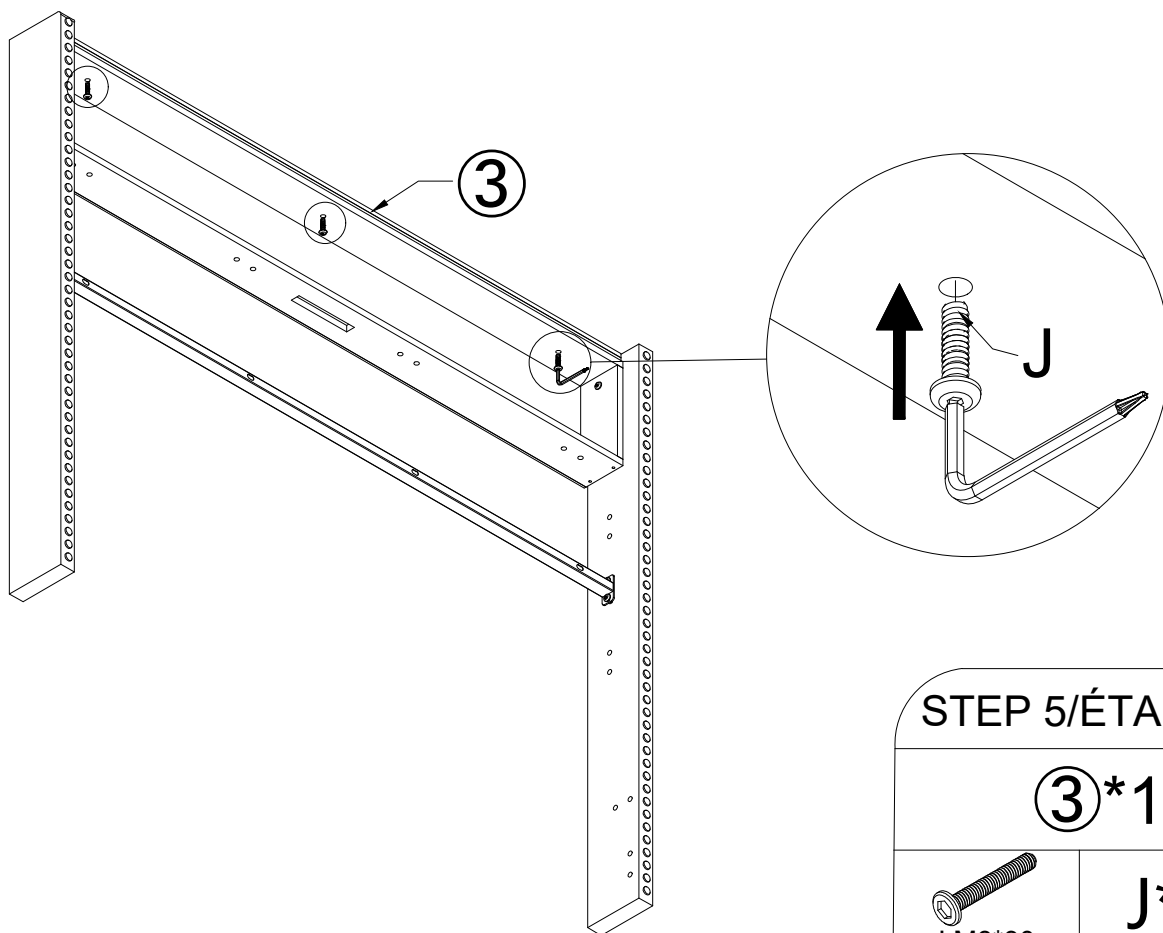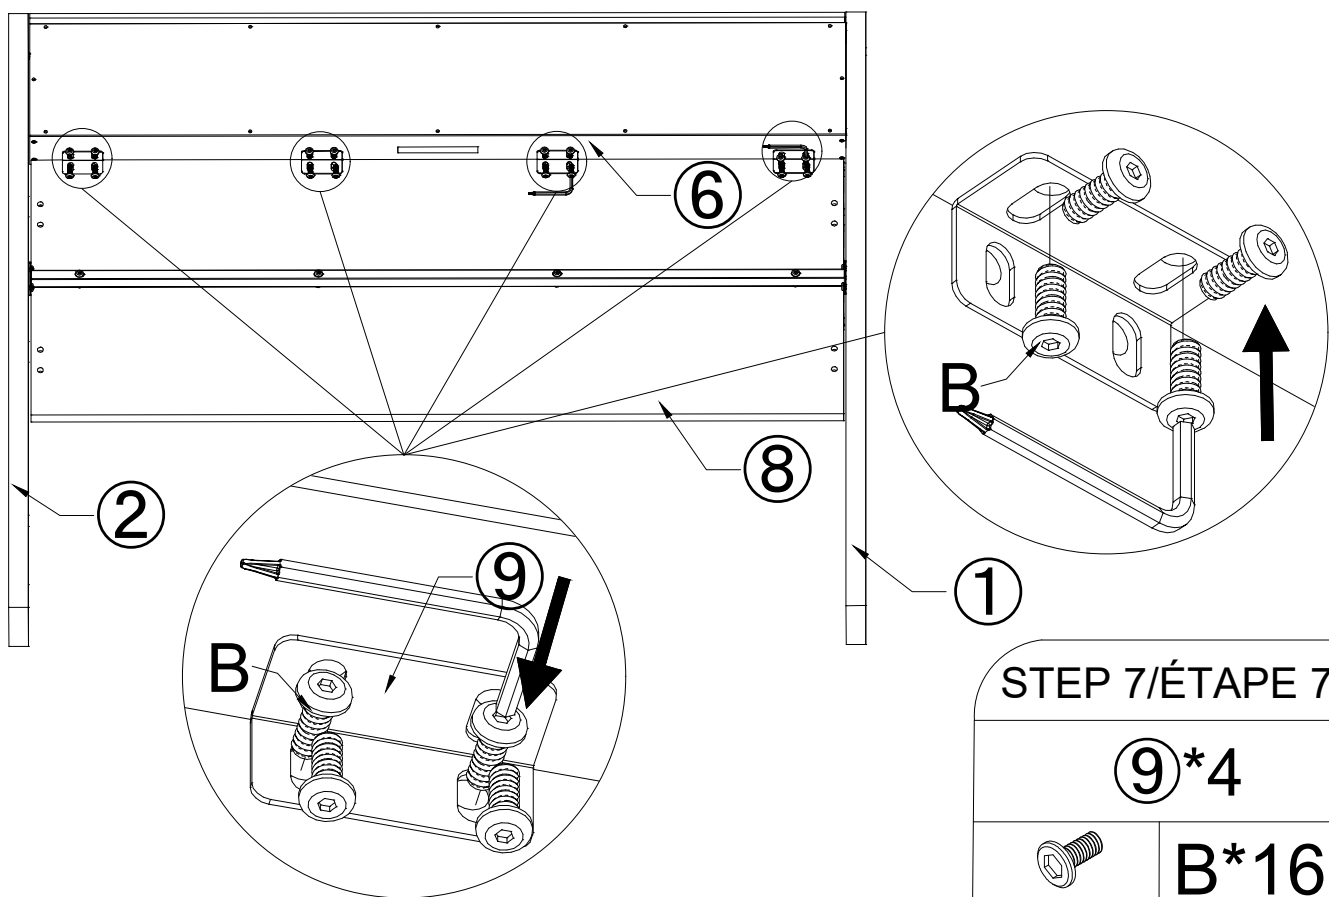E*2






STEP 7/ÉTAPE 7

⑨*4



B:M8*12

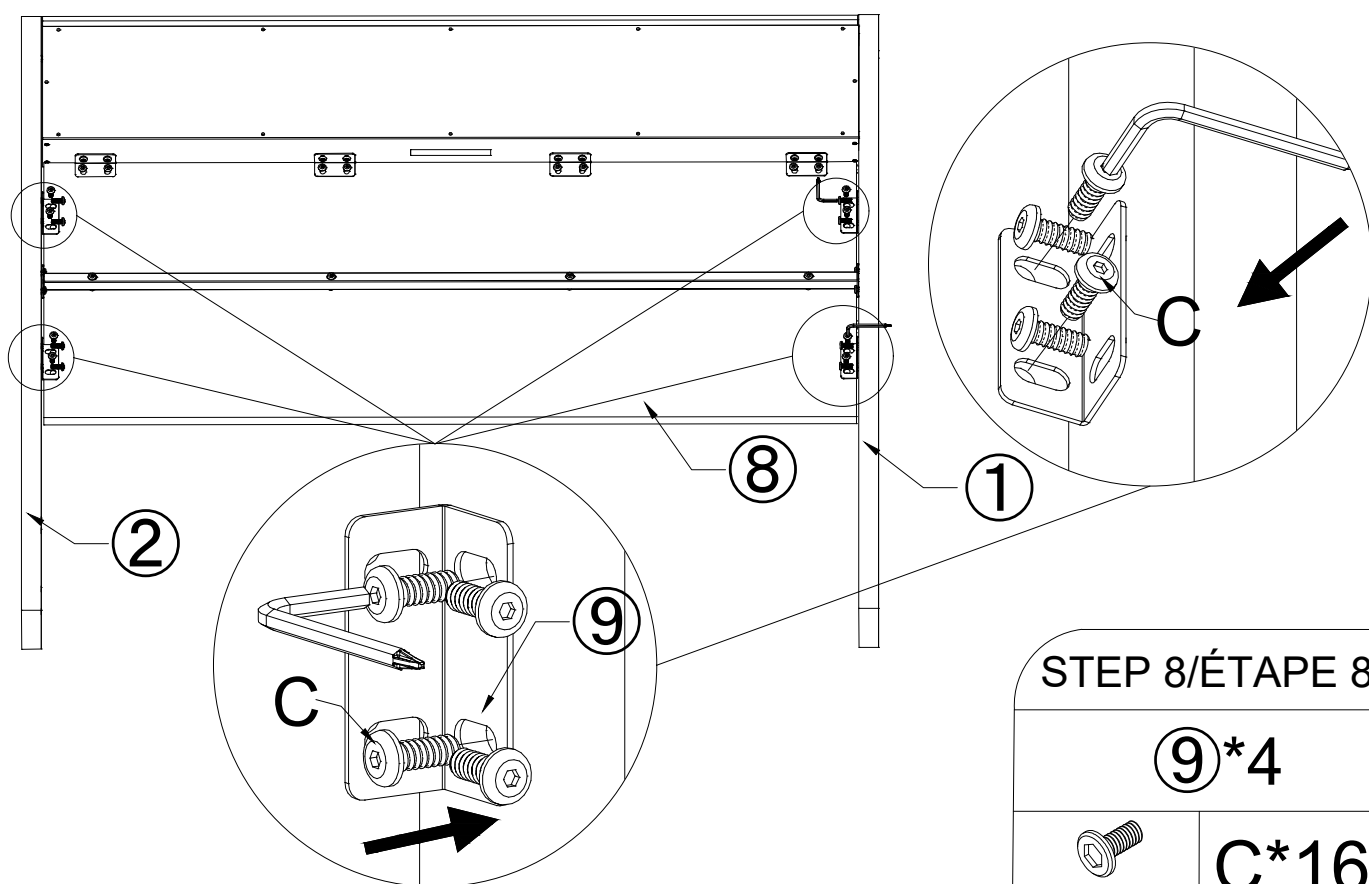B*16




STEP 8/ÉTAPE 8

⑨*4



C:M8*16

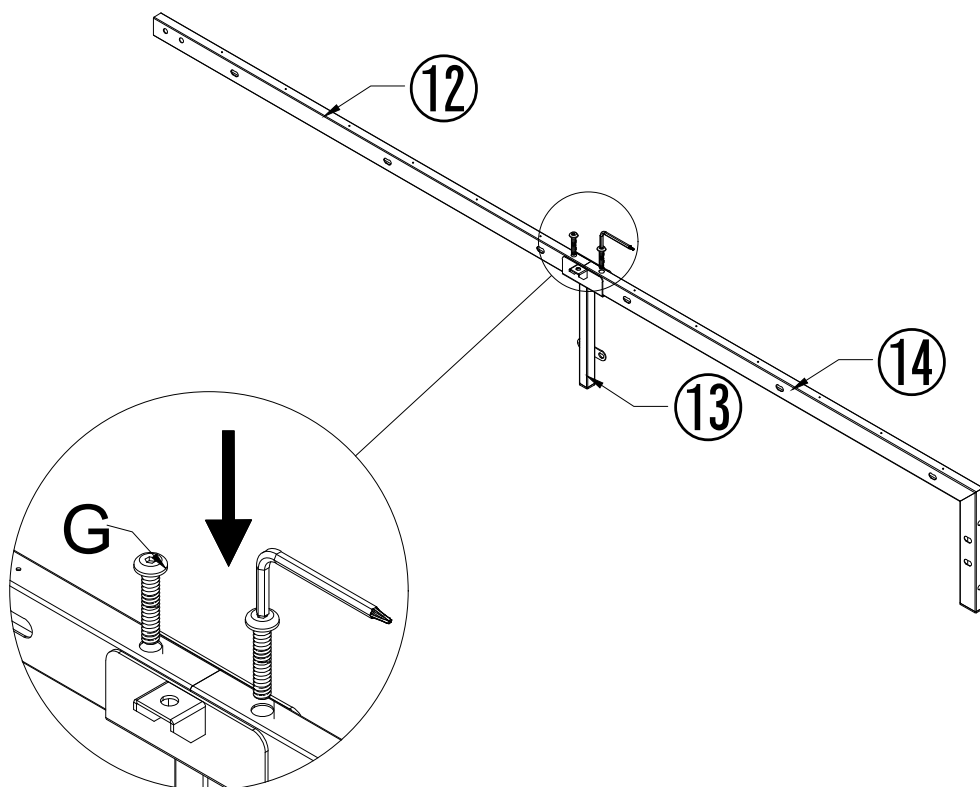C*16




X2

STEP 9/ÉTAPE 9

⑫*2, ⑬*2,
⑭*2



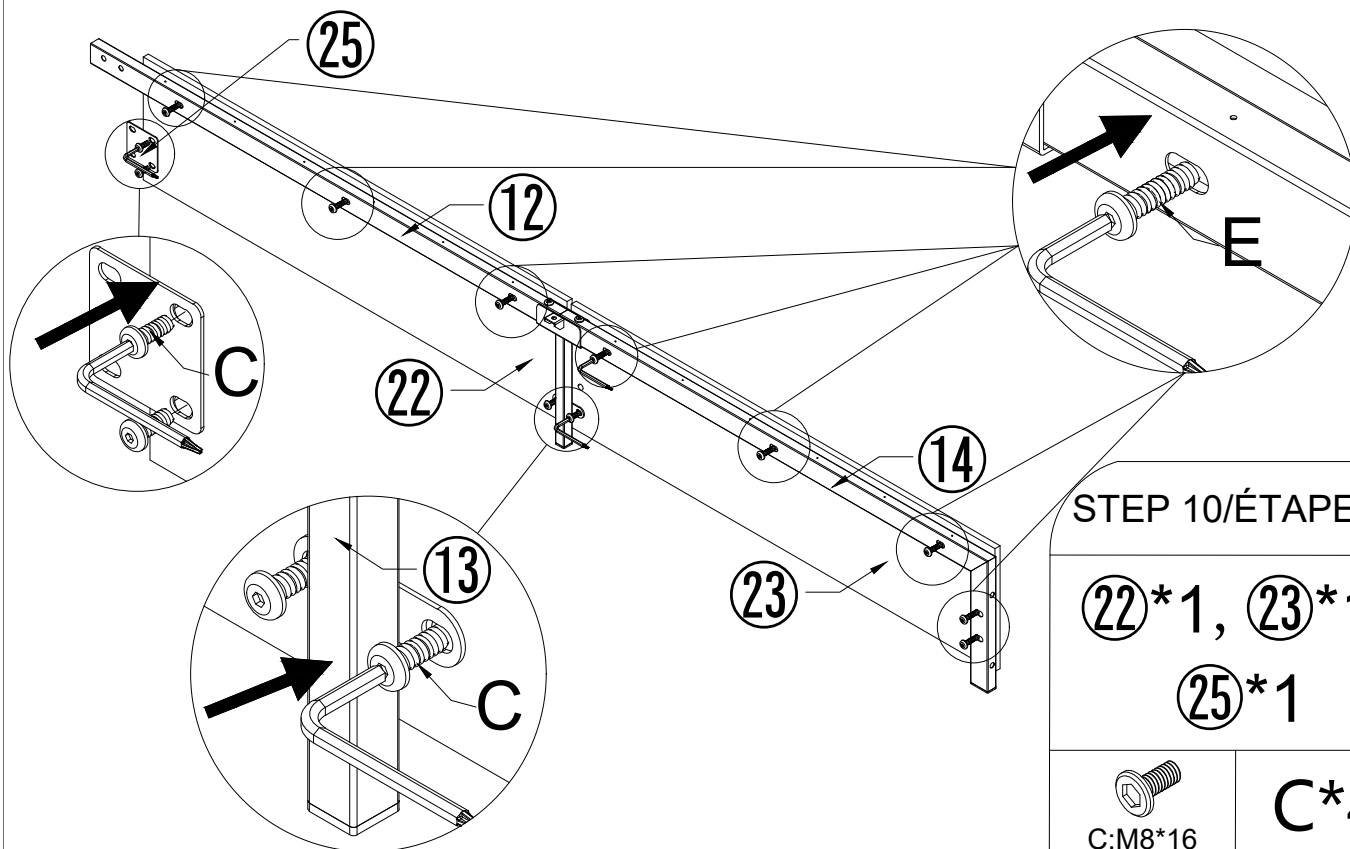G*4




STEP 10/ÉTAPE 10

⑫*1, ⑬*1,
⑭*1




C: M8*16

C*4



E: M8*35

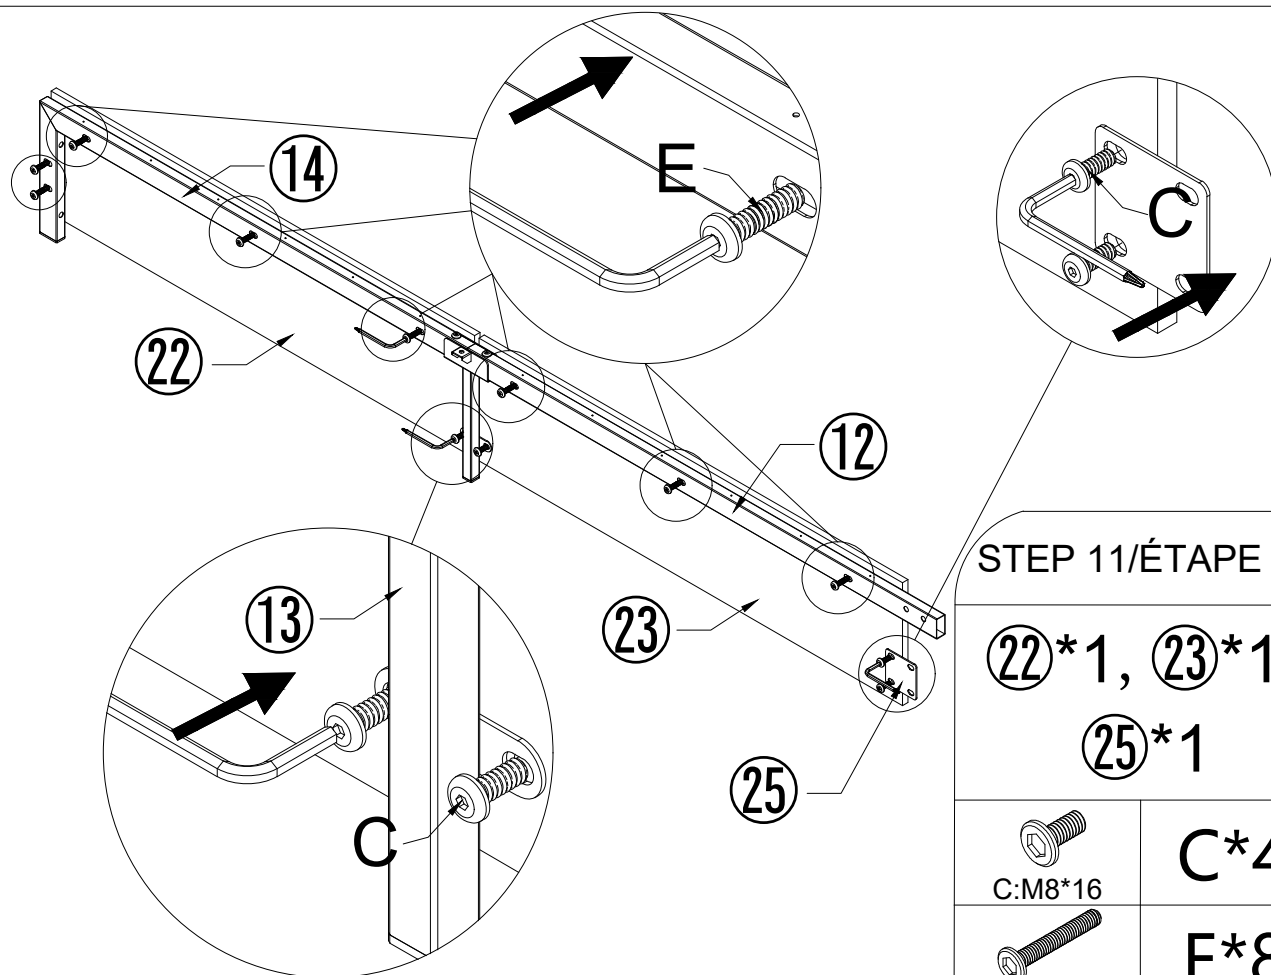E*8



STEP 11/ÉTAPE 11

②②*1, ②③*1,
②⑤*1



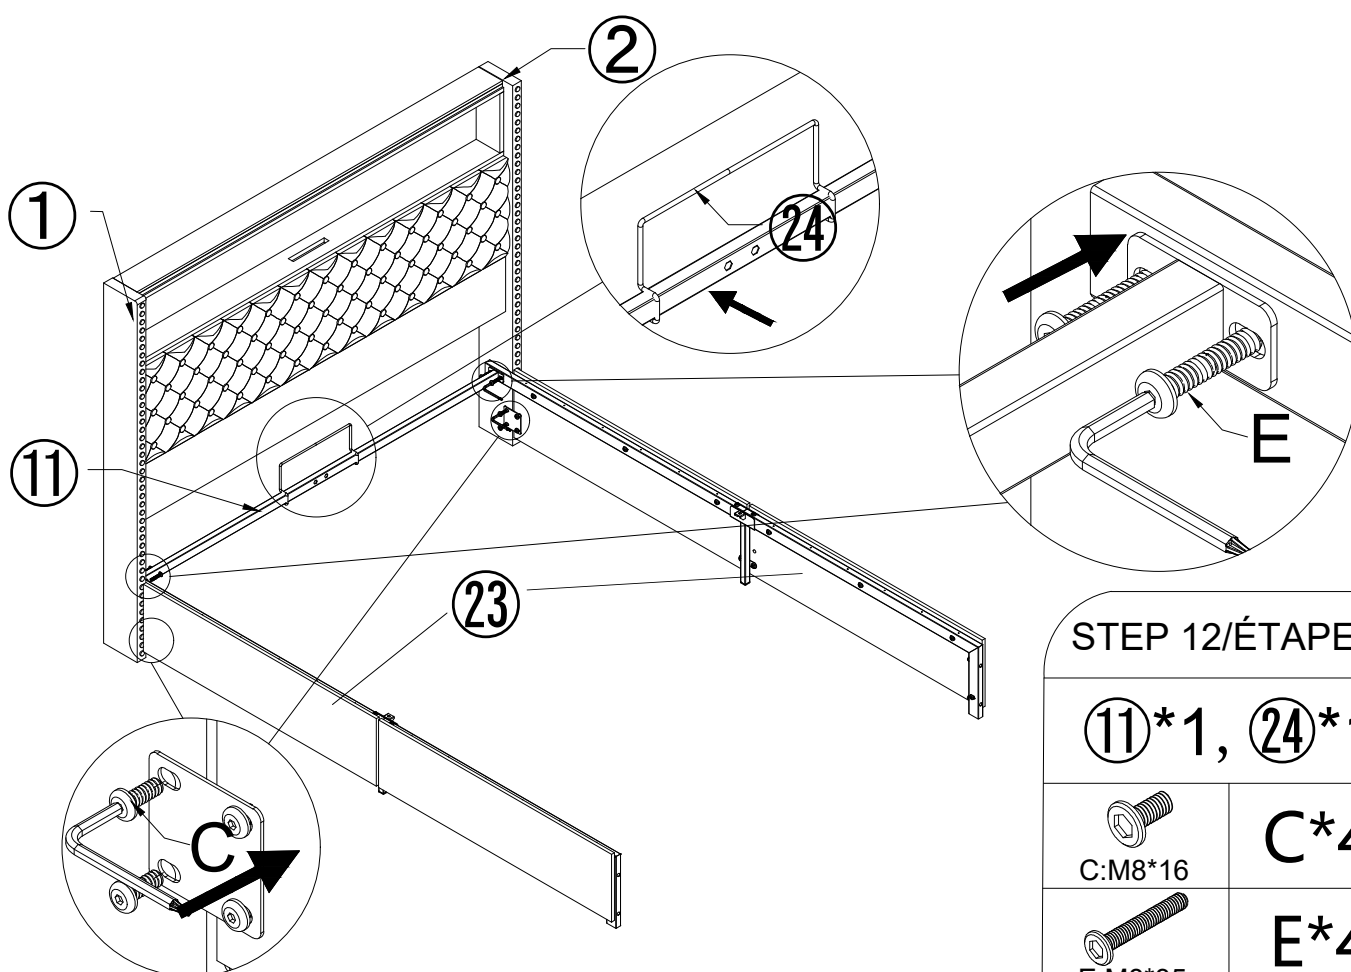
C:M8*16

C*4



E:M8*35

E*8



STEP 12/ÉTAPE 12

①①*1, ②④*1



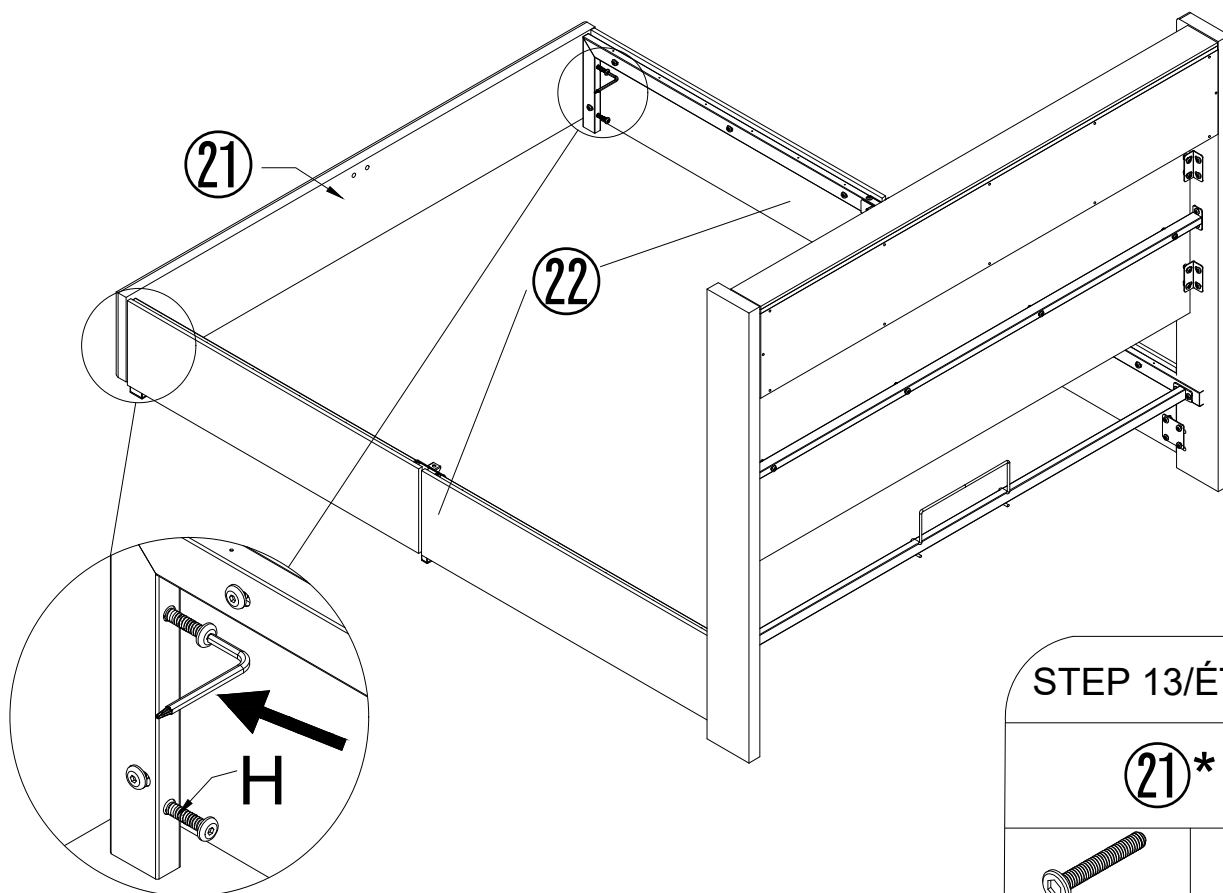
C:M8*16

C*4



E:M8*35

E*4




STEP 13/ÉTAPE 13

②①*1




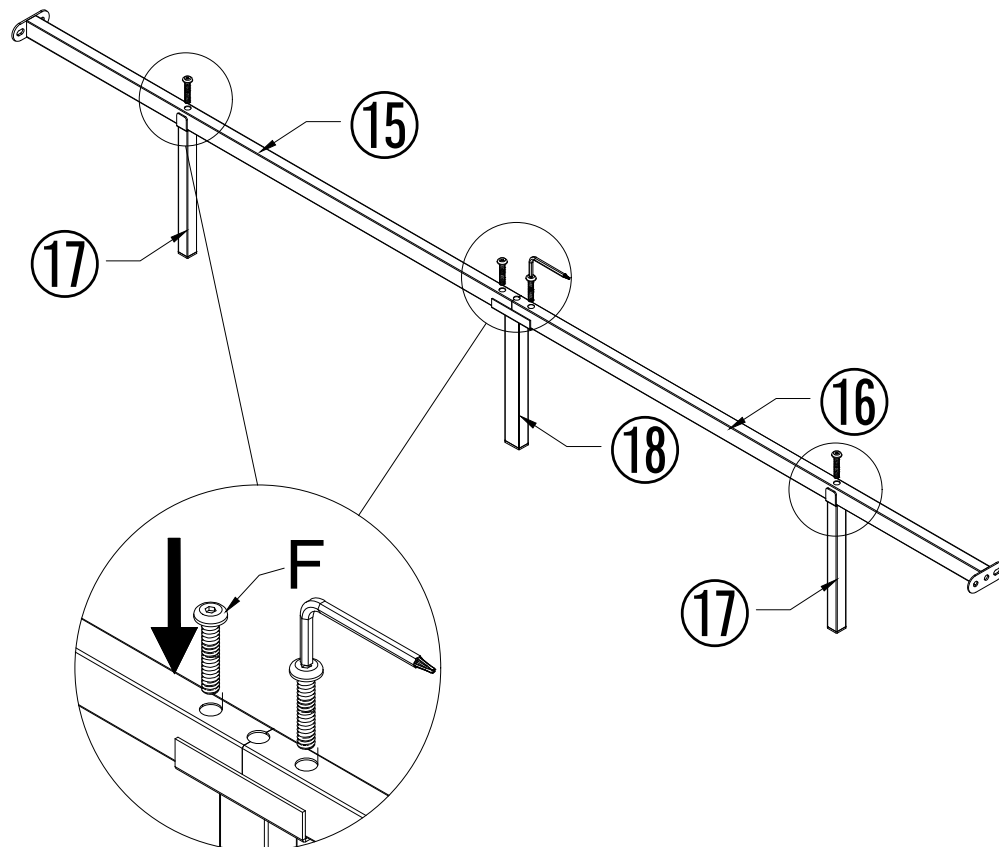H*4




STEP 14/ÉTAPE 14

①⑤*1, ①⑥*1,
①⑦*2, ①⑧*1



F*4

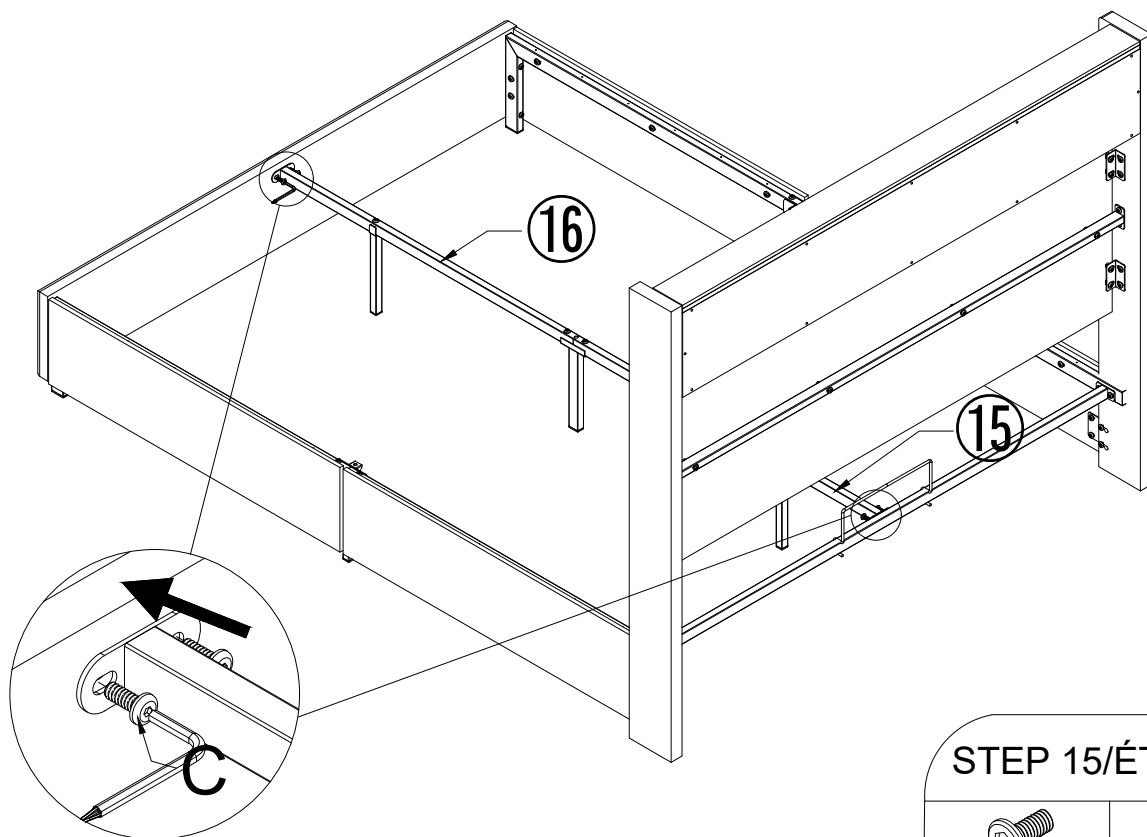


STEP 15/ÉTAPE 15



C:M8*16

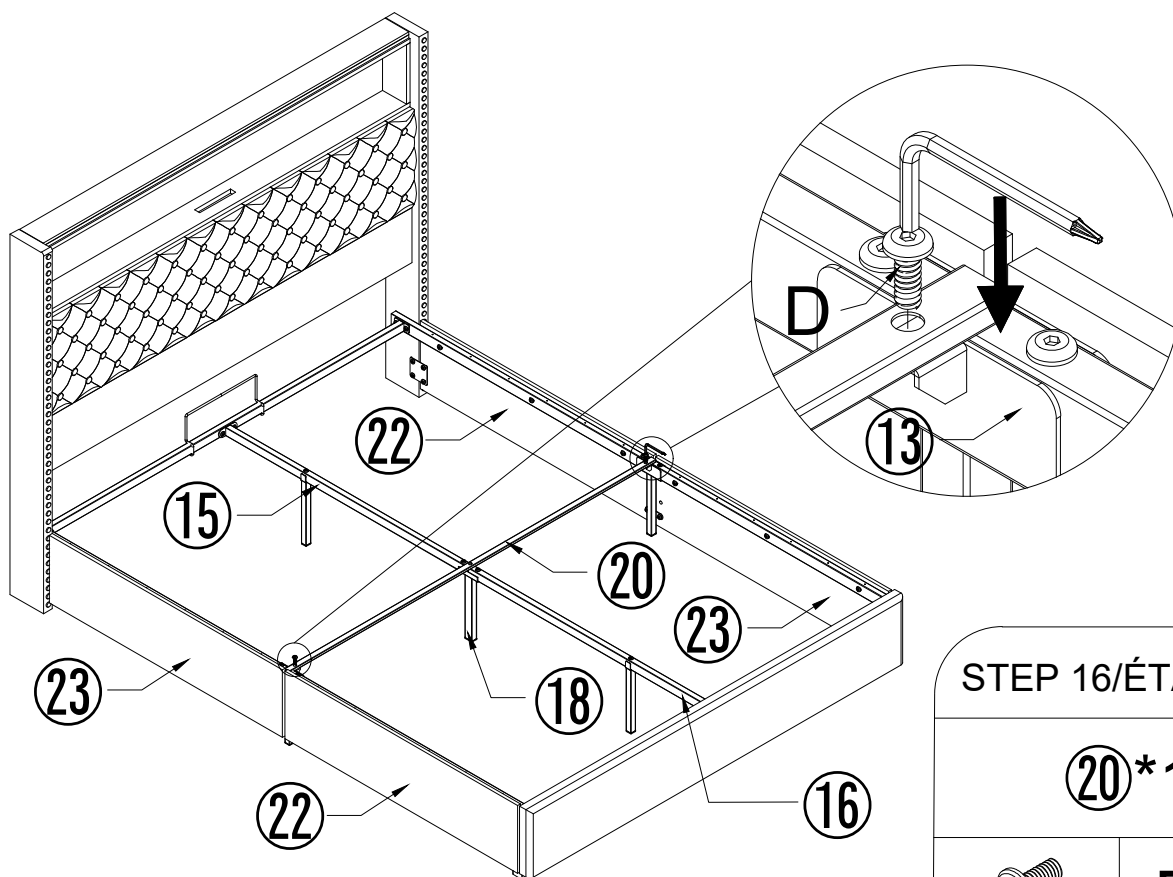C*4




STEP 16/ÉTAPE 16

20*1



D:M8*20

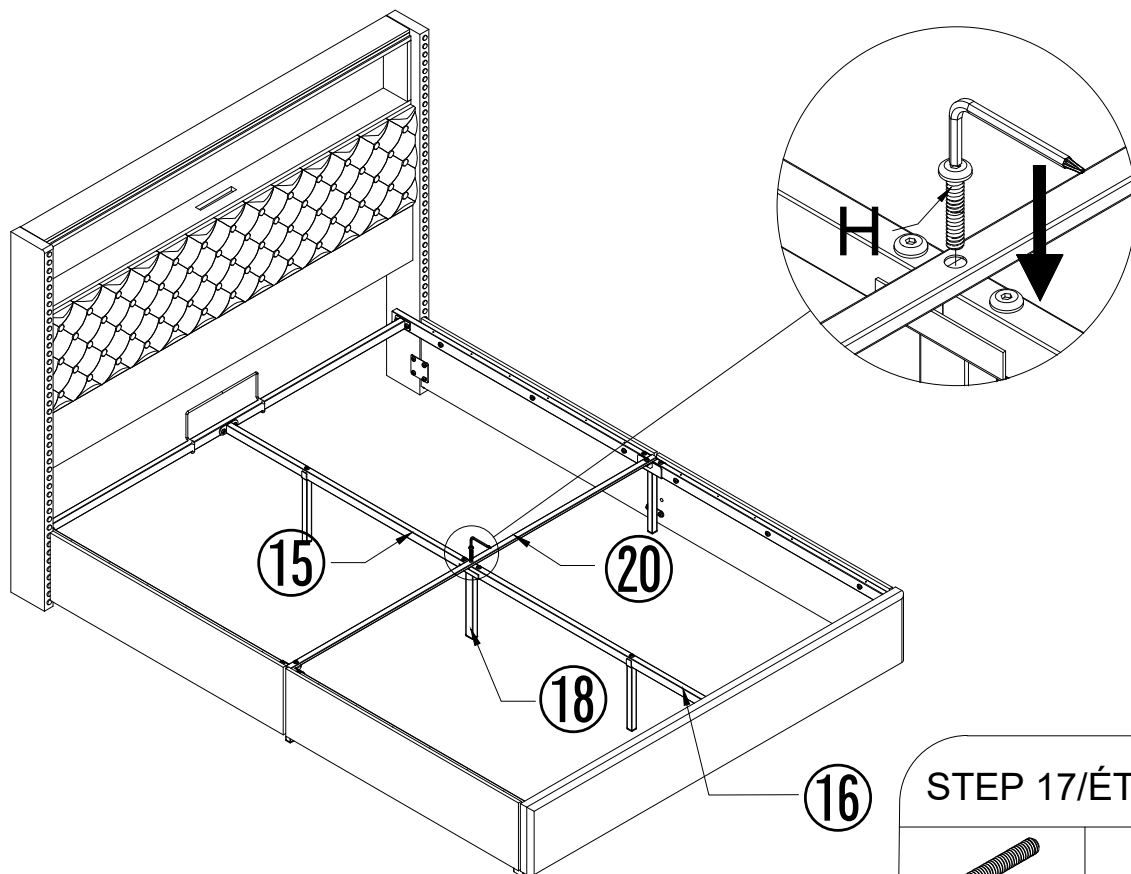D*2




STEP 17/ÉTAPE 17



H*1

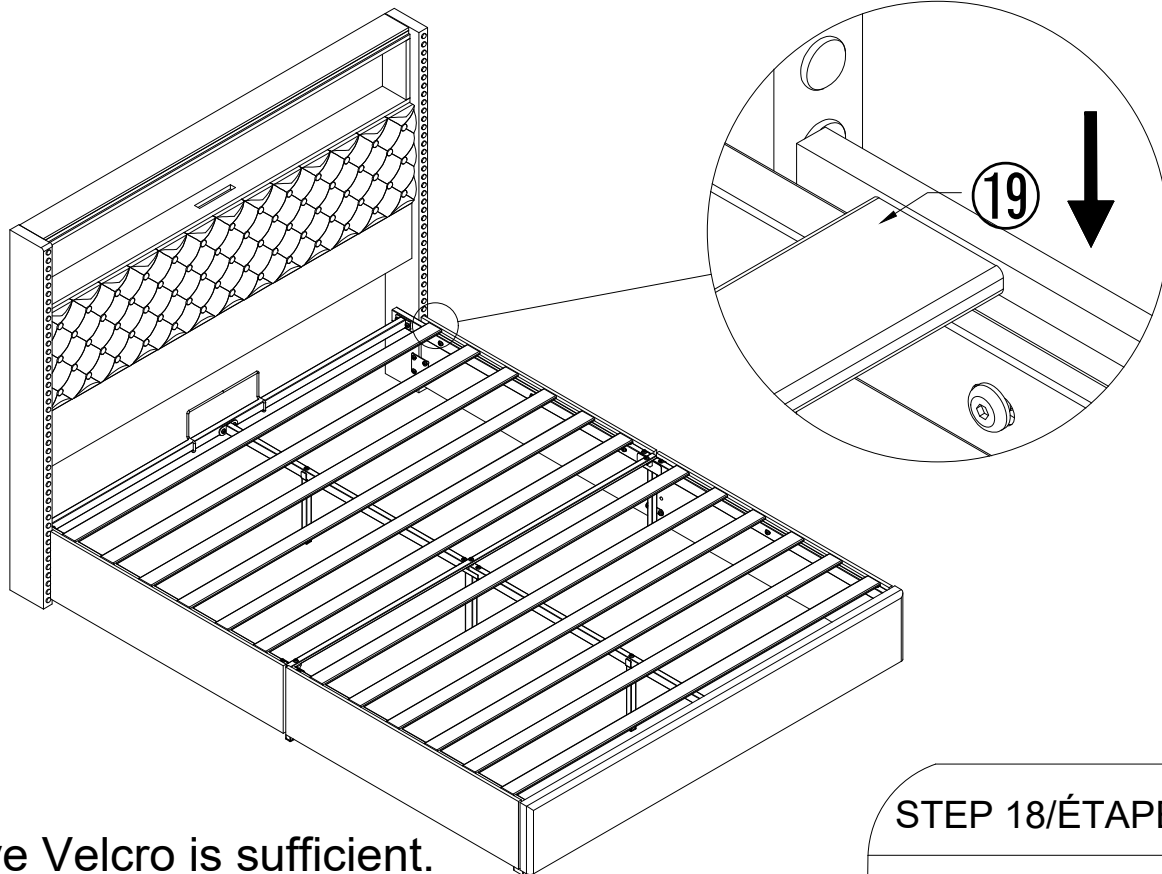
H:M8*55



STEP 18/ÉTAPE 18


⑪*2

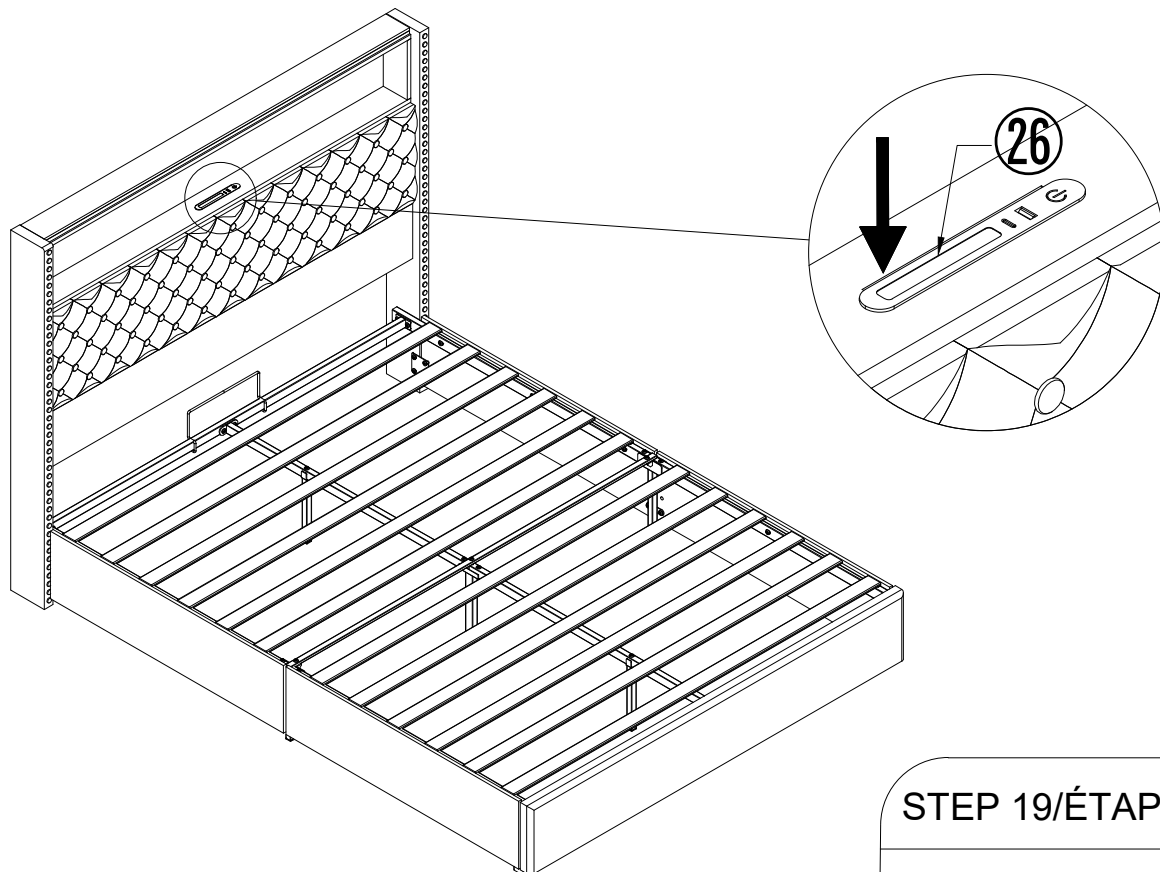Adhesive Velcro is sufficient.
Coller le sticker magique est correct.



STEP 19/ÉTAPE 19

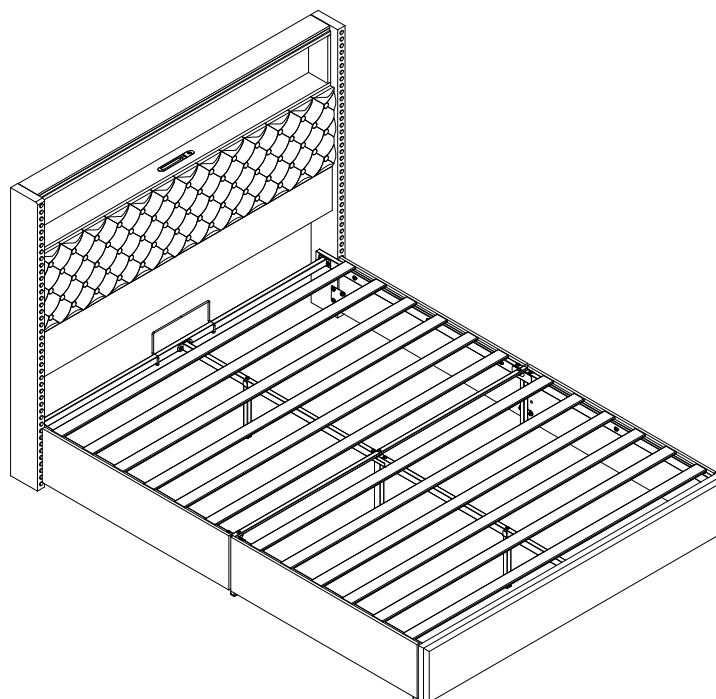②⑥*1



Congratulations, installation is complete!
Félicitations, l'installation est terminée !