

































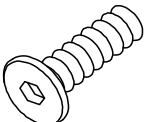
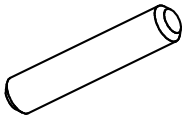
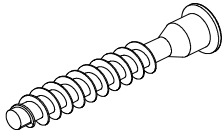
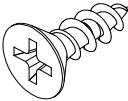

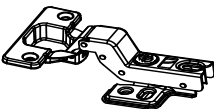
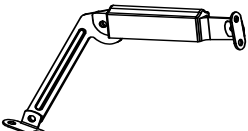
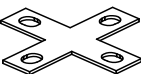
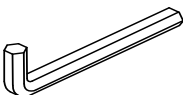
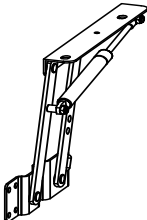

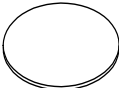
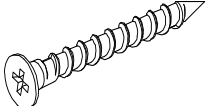
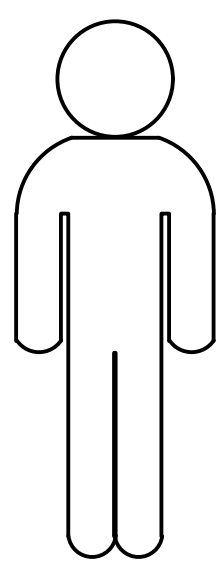

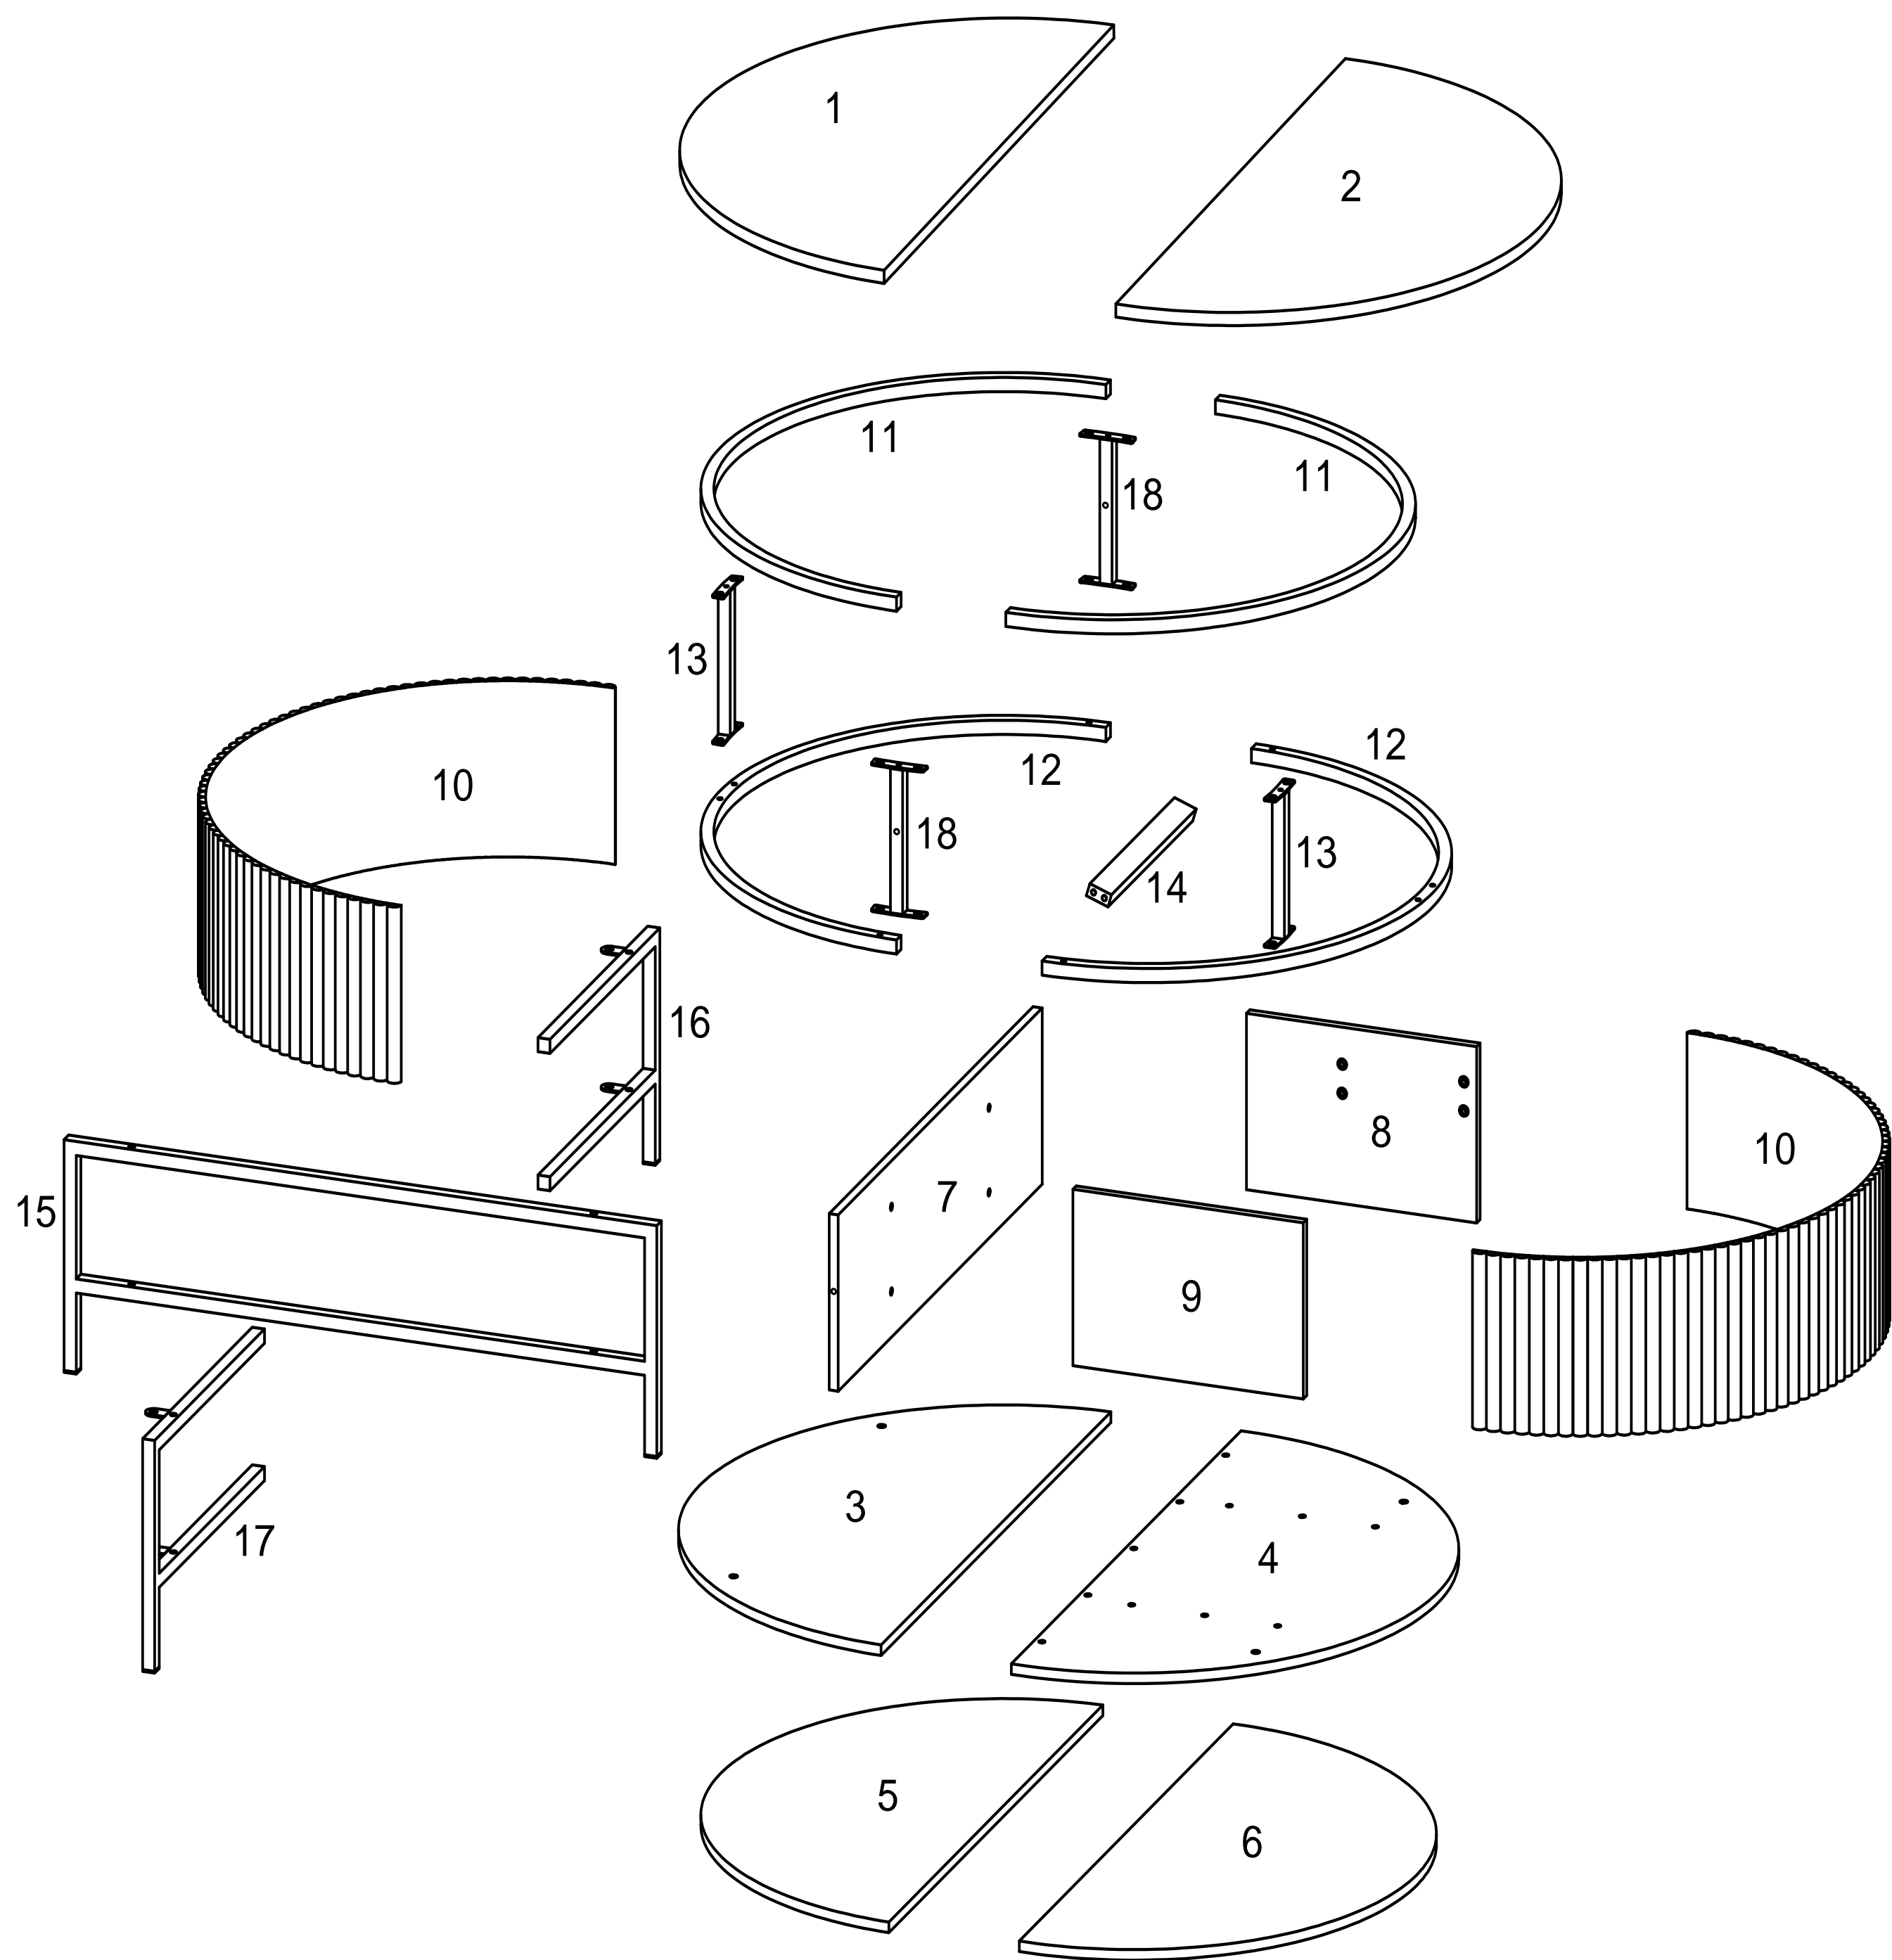


B01CT-005HSM

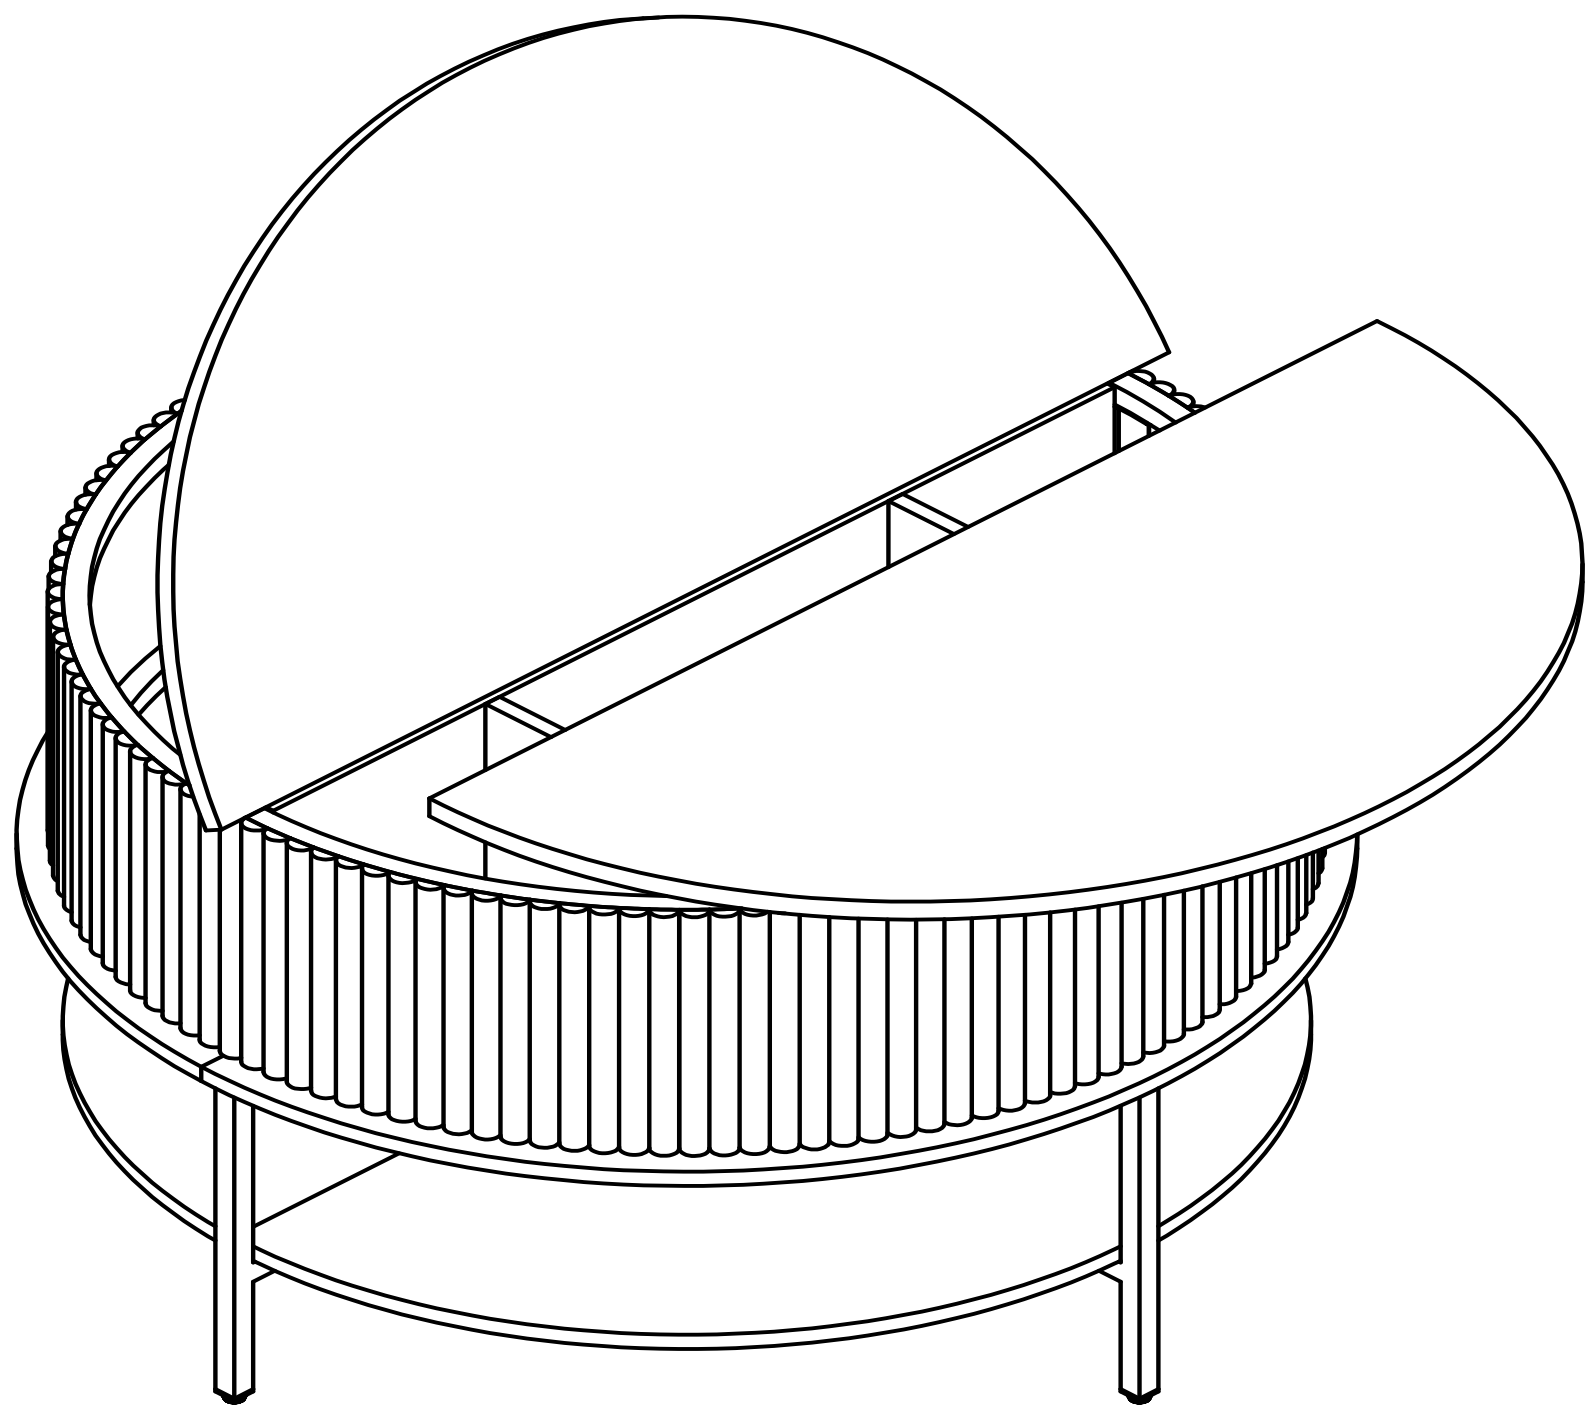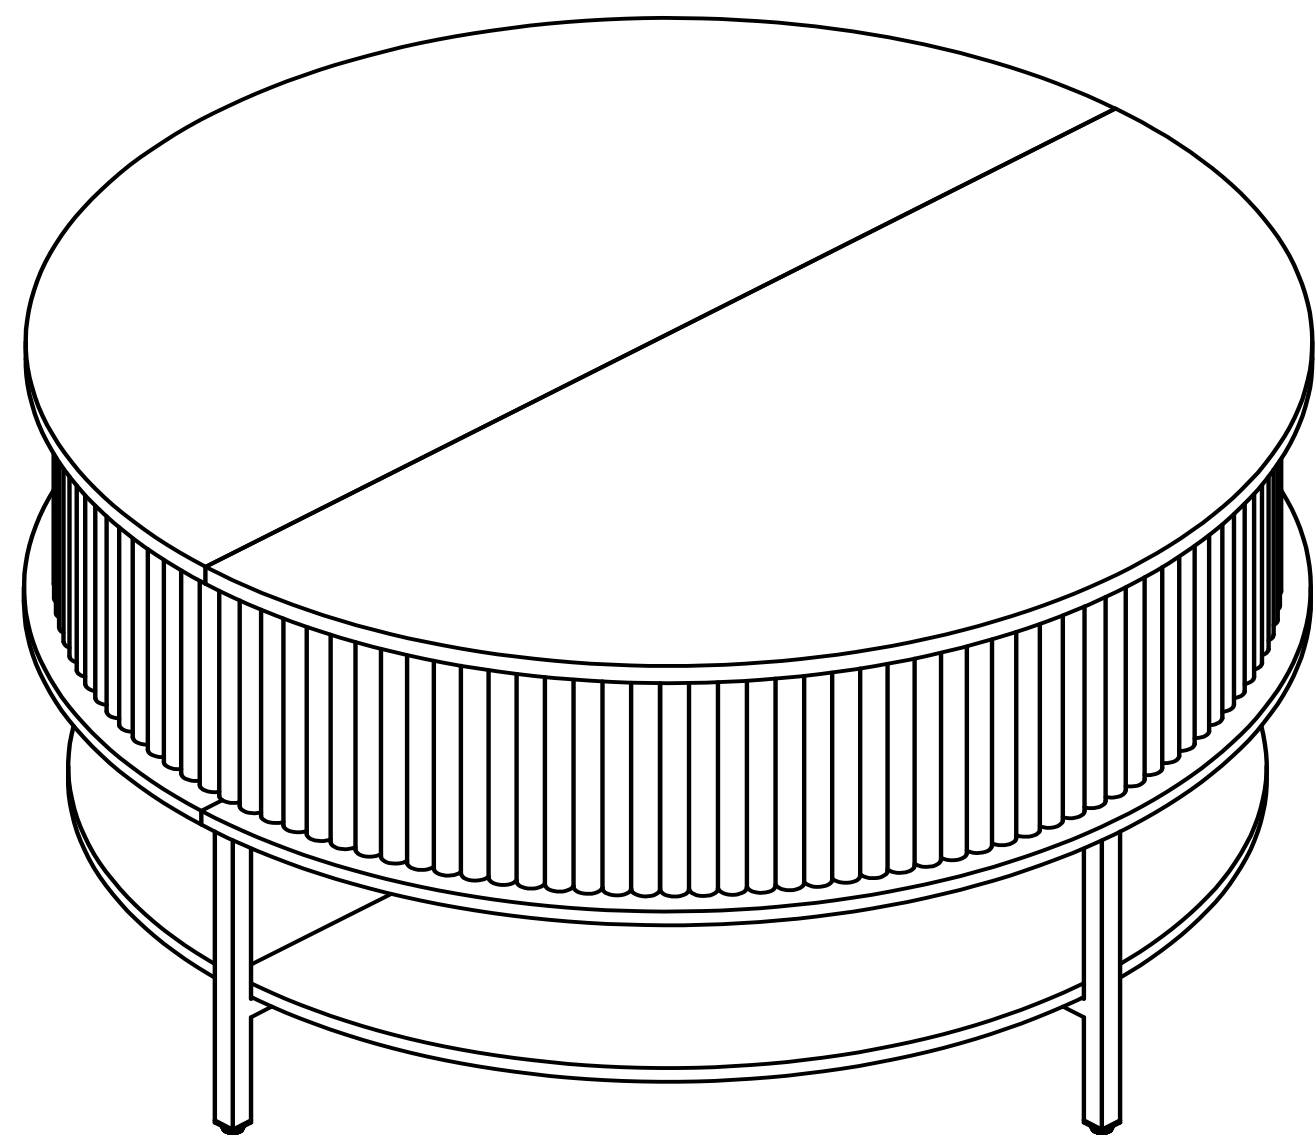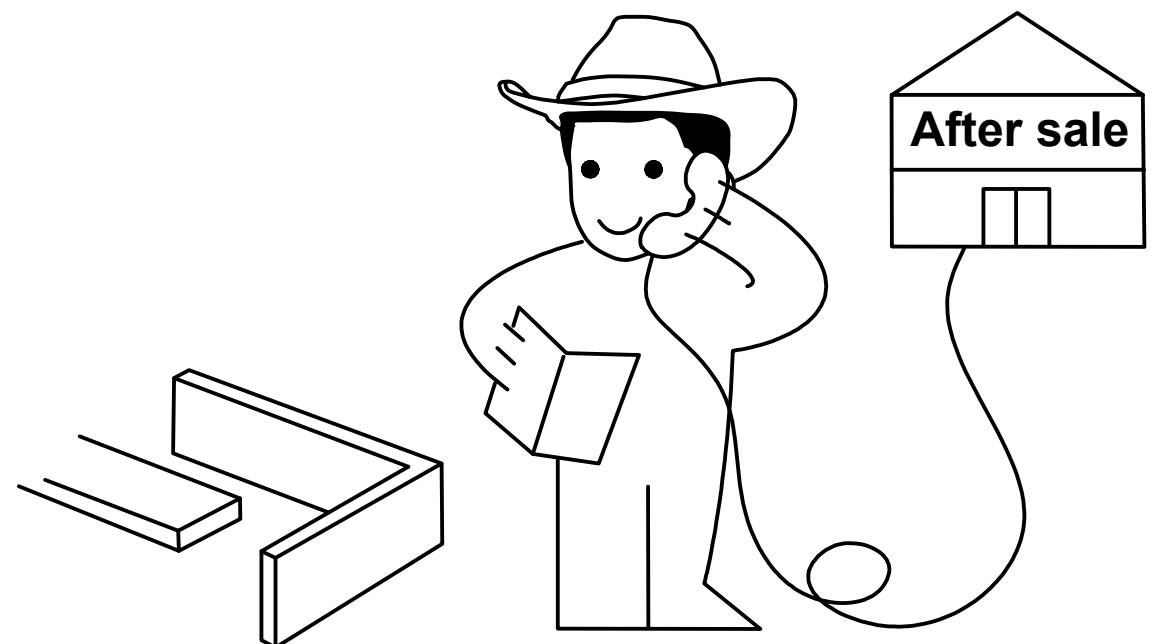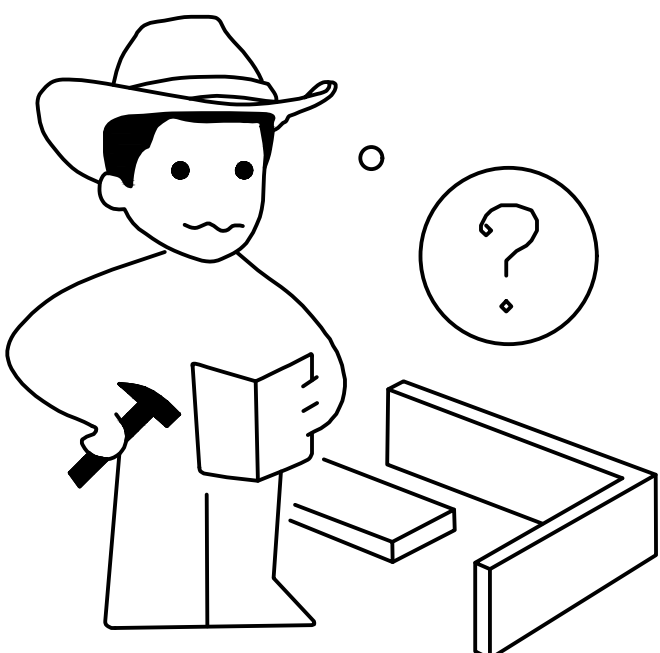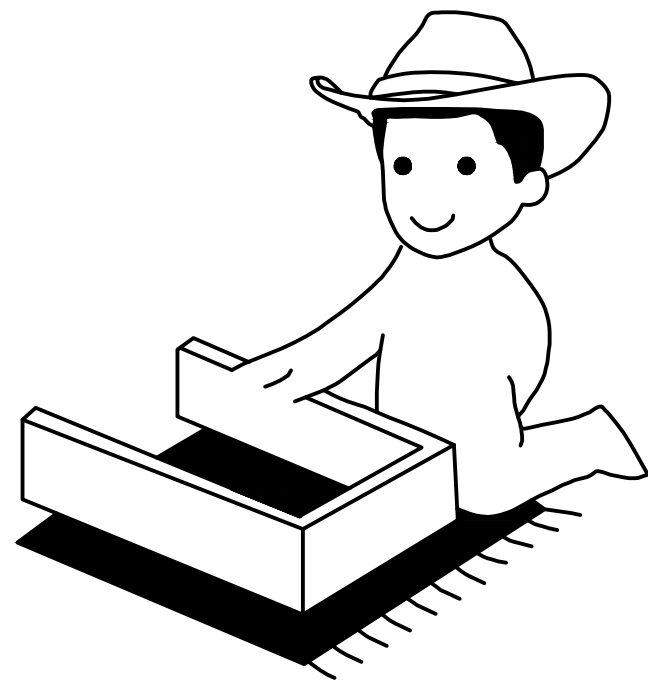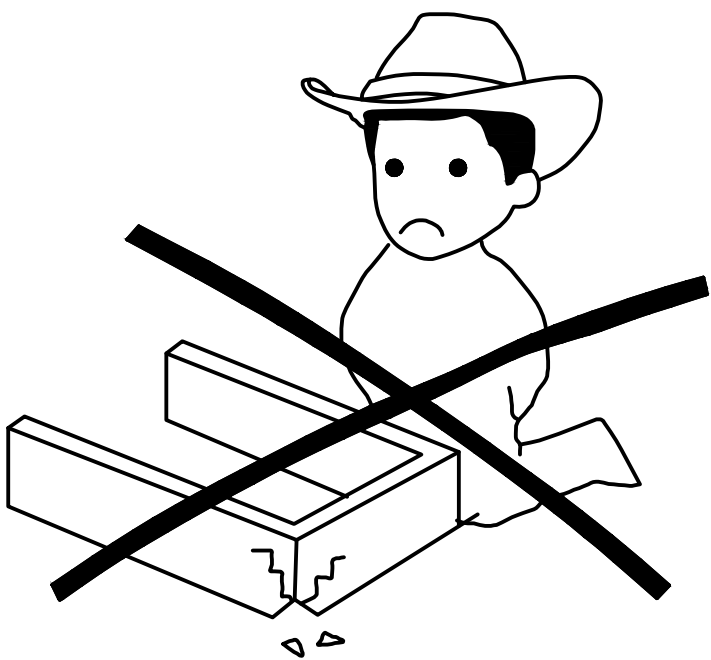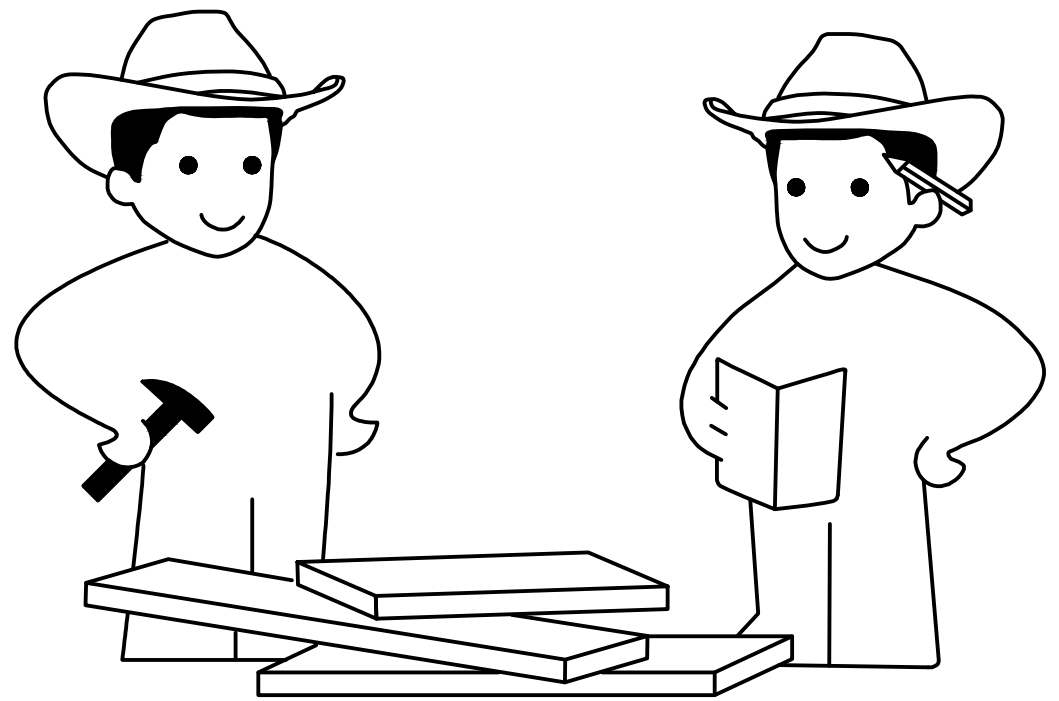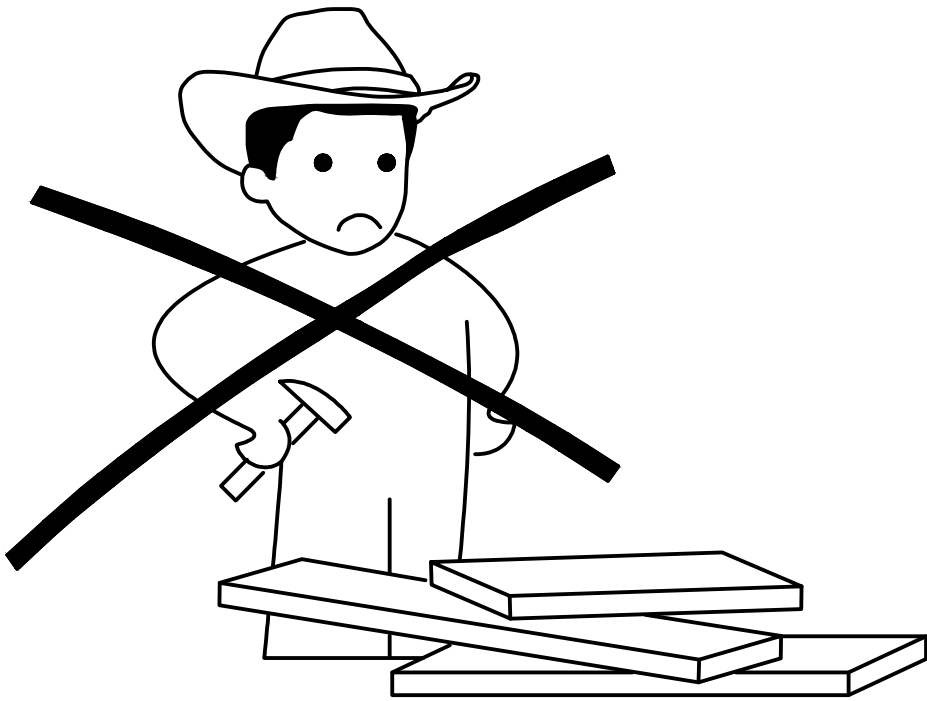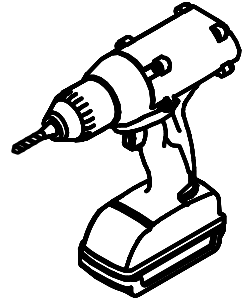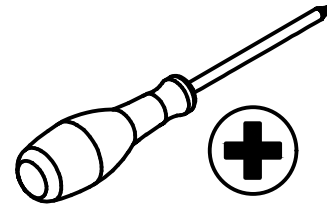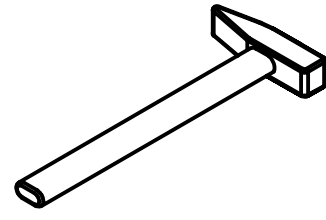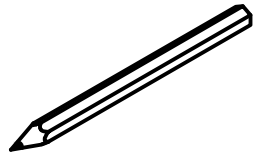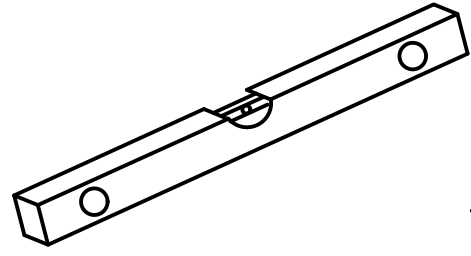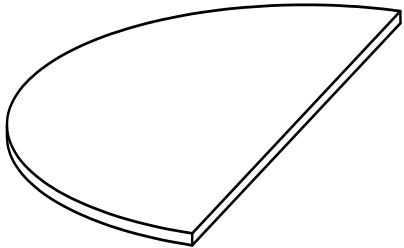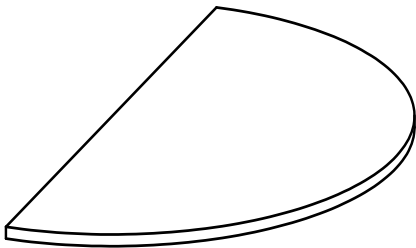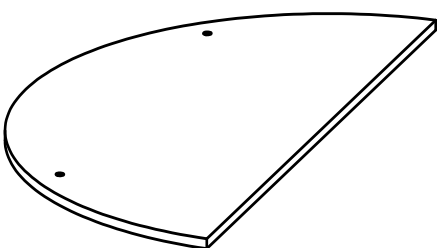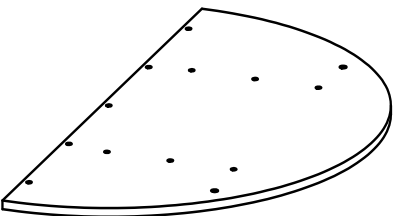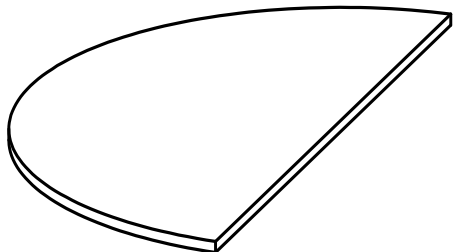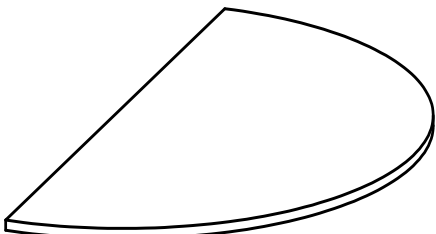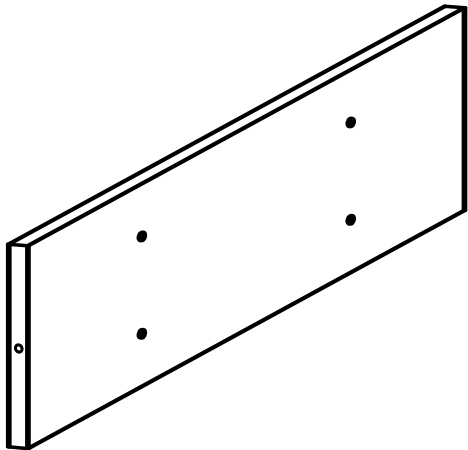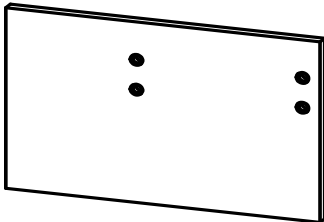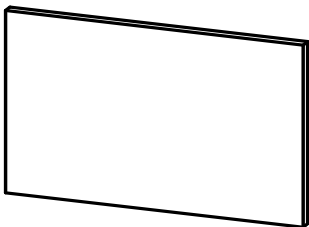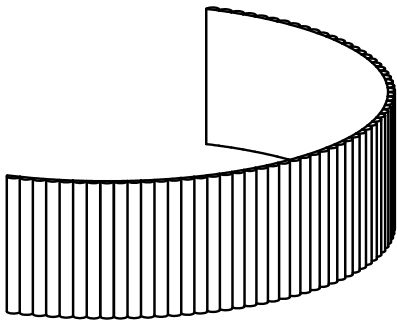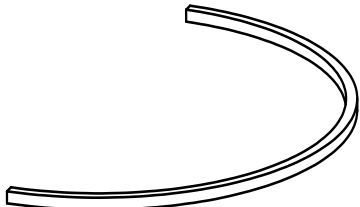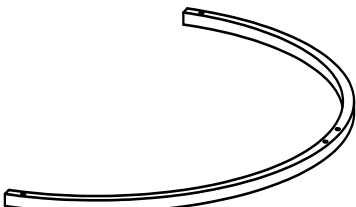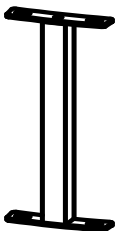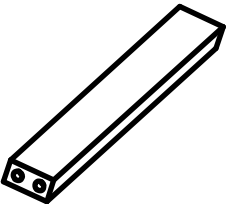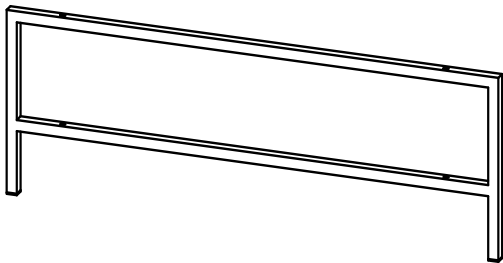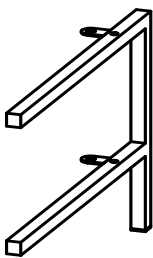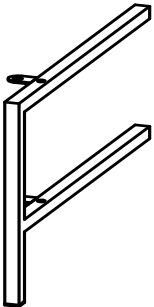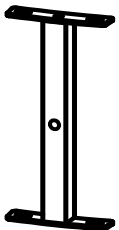

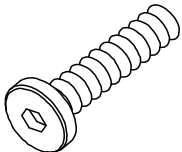


<b>1×1*pc</b>  		<b>2×1*pc</b>  		<b>3×1*pc</b>  		<b>4×1*pc</b>  	
<b>5×1*pc</b>  		<b>6×1*pc</b>  		<b>7×1*pc</b>  		<b>8×1*pc</b>  	
<b>9×1*pc</b>  		<b>10×2*pcs</b>  		<b>11×2*pcs</b>  		<b>12×2*pcs</b>  	
<b>13×2*pcs</b>  		<b>14×1*pc</b>  		<b>15×1*pc</b>  		<b>16×1*pc</b>  	
<b>17×1*pc</b>  		<b>18×2*pcs</b>  					
<b>A×8*pcs (+2)</b>   M6×25mm	<b>B×4*pcs (+2)</b>   M6×20mm	<b>C×40*pcs (+2)</b>   M6×10mm	<b>D×4*pcs (+2)</b>   M6×25mm	<b>E×4*pcs (+2)</b>   Ø8×30mm	<b>F×11*pcs (+2)</b>   6×48mm	<b>G×16*pcs (+2)</b>   3.5×12mm	<b>H×4*pcs</b>  
<b>I×2*pcs</b>  	<b>J×1*pc</b>  	<b>k×2*pcs</b>  	<b>L×1*pc</b>   4mm	<b>M×1*pc</b>  	<b>N×1*pc</b>  	<b>O×4*pcs</b>  	<b>P×2*pcs (+2)</b>   4×35mm

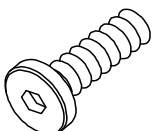

×2

1

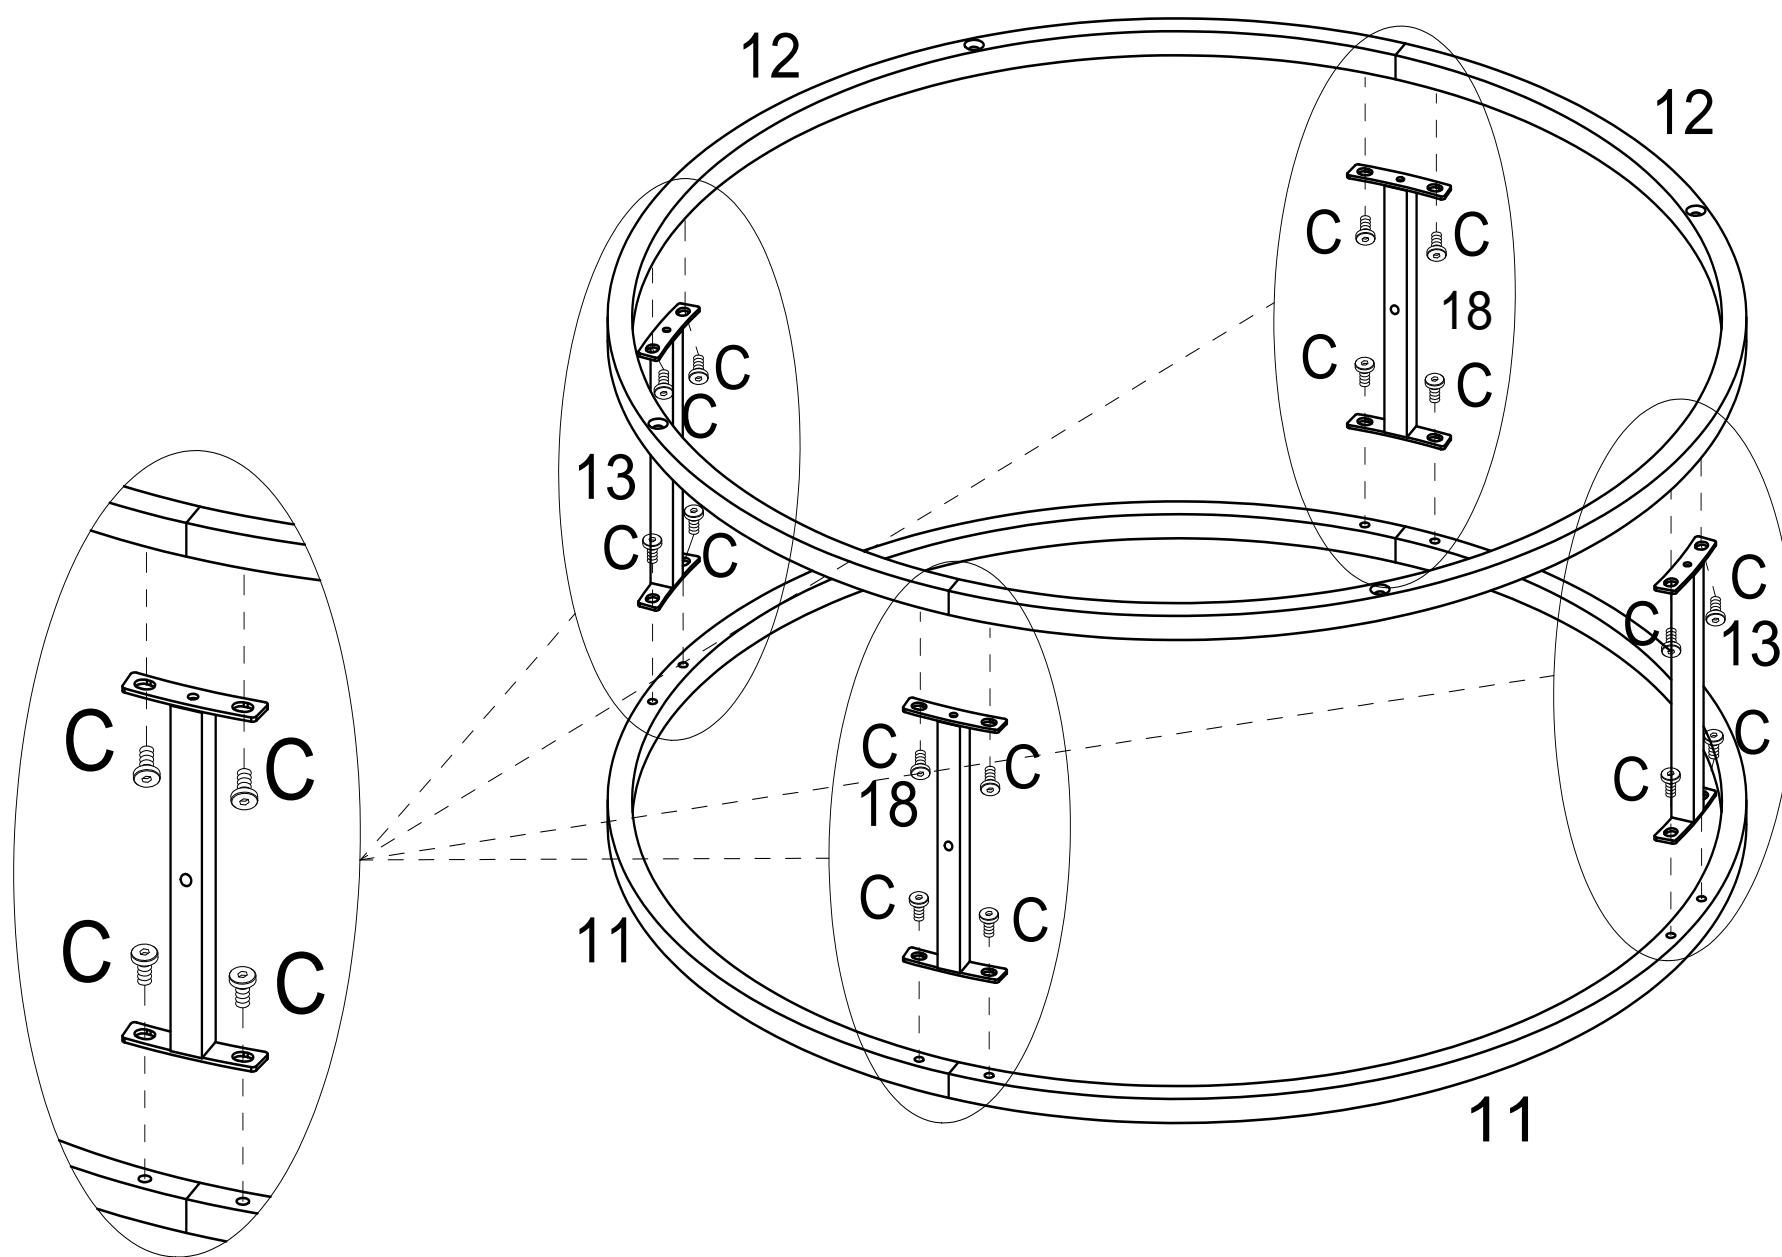


As shown in the figure, assemble the curved steel pipes 11 and 12 into a circle, then use steel pipes 13 and 18 to connect the two circles vertically.

Note: Use steel pipe 18 to connect the joints of the two circles.

Cx16 

Lx1 

2

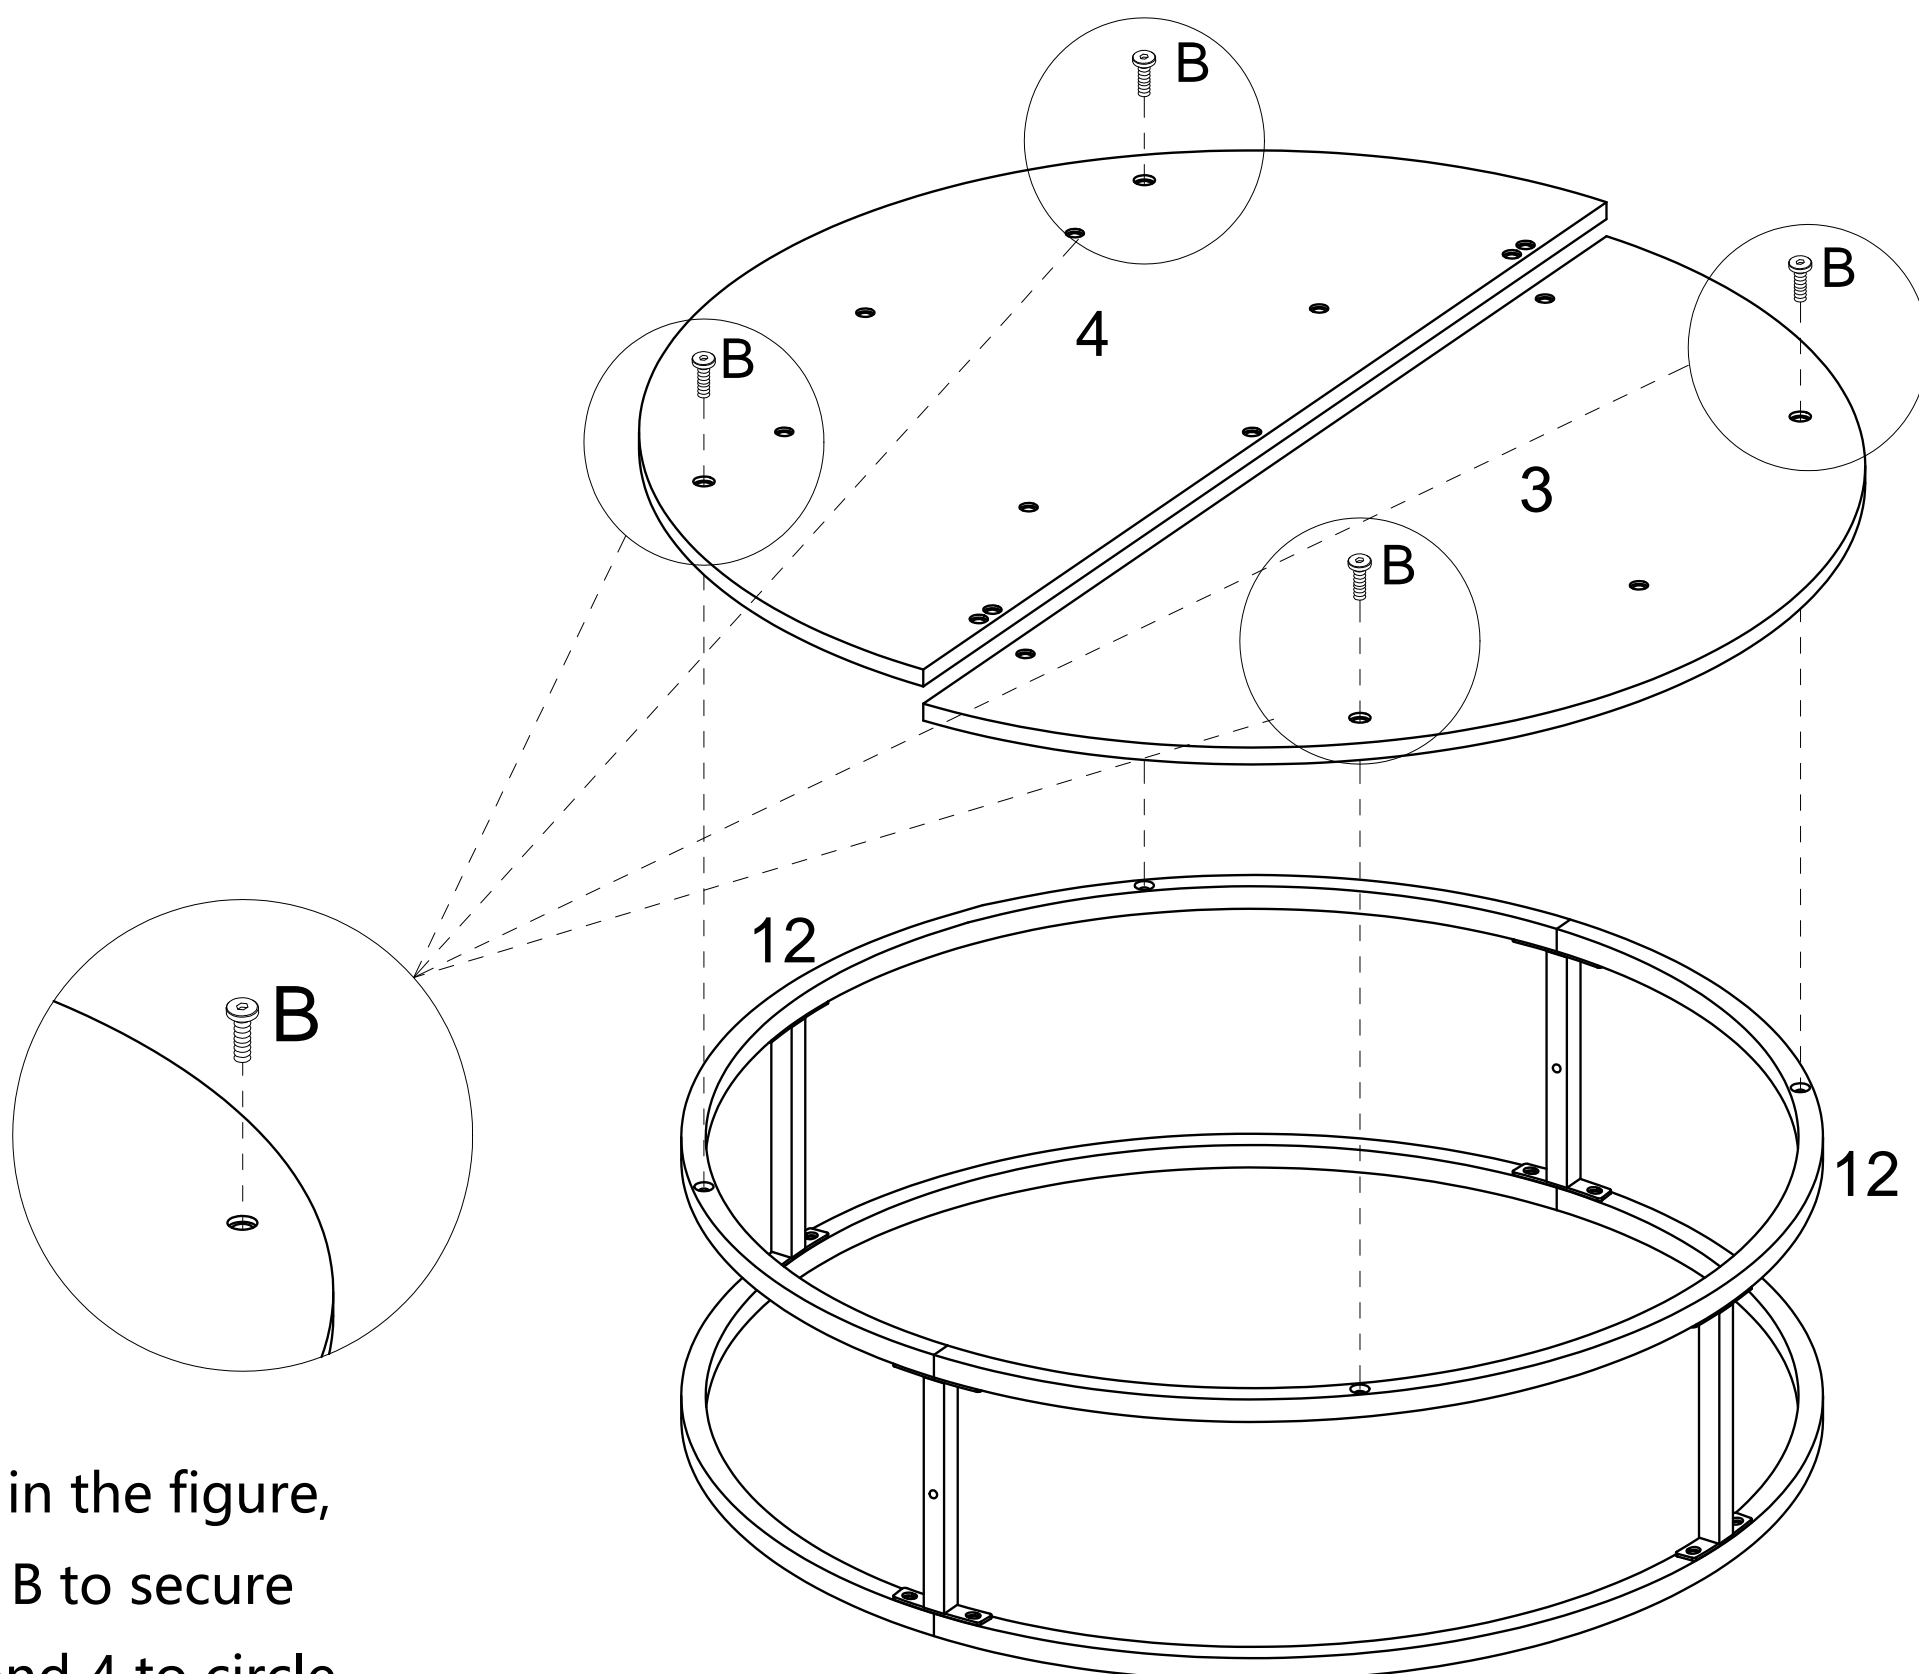


As shown in the figure, use screw B to secure panels 3 and 4 to circle 12.

Bx4 


Lx1 

# 3


As shown in the figure, panel 7 is connected vertically to panel 4 using screw F. Note: Before connecting the two panels, use a wooden stick for positioning.

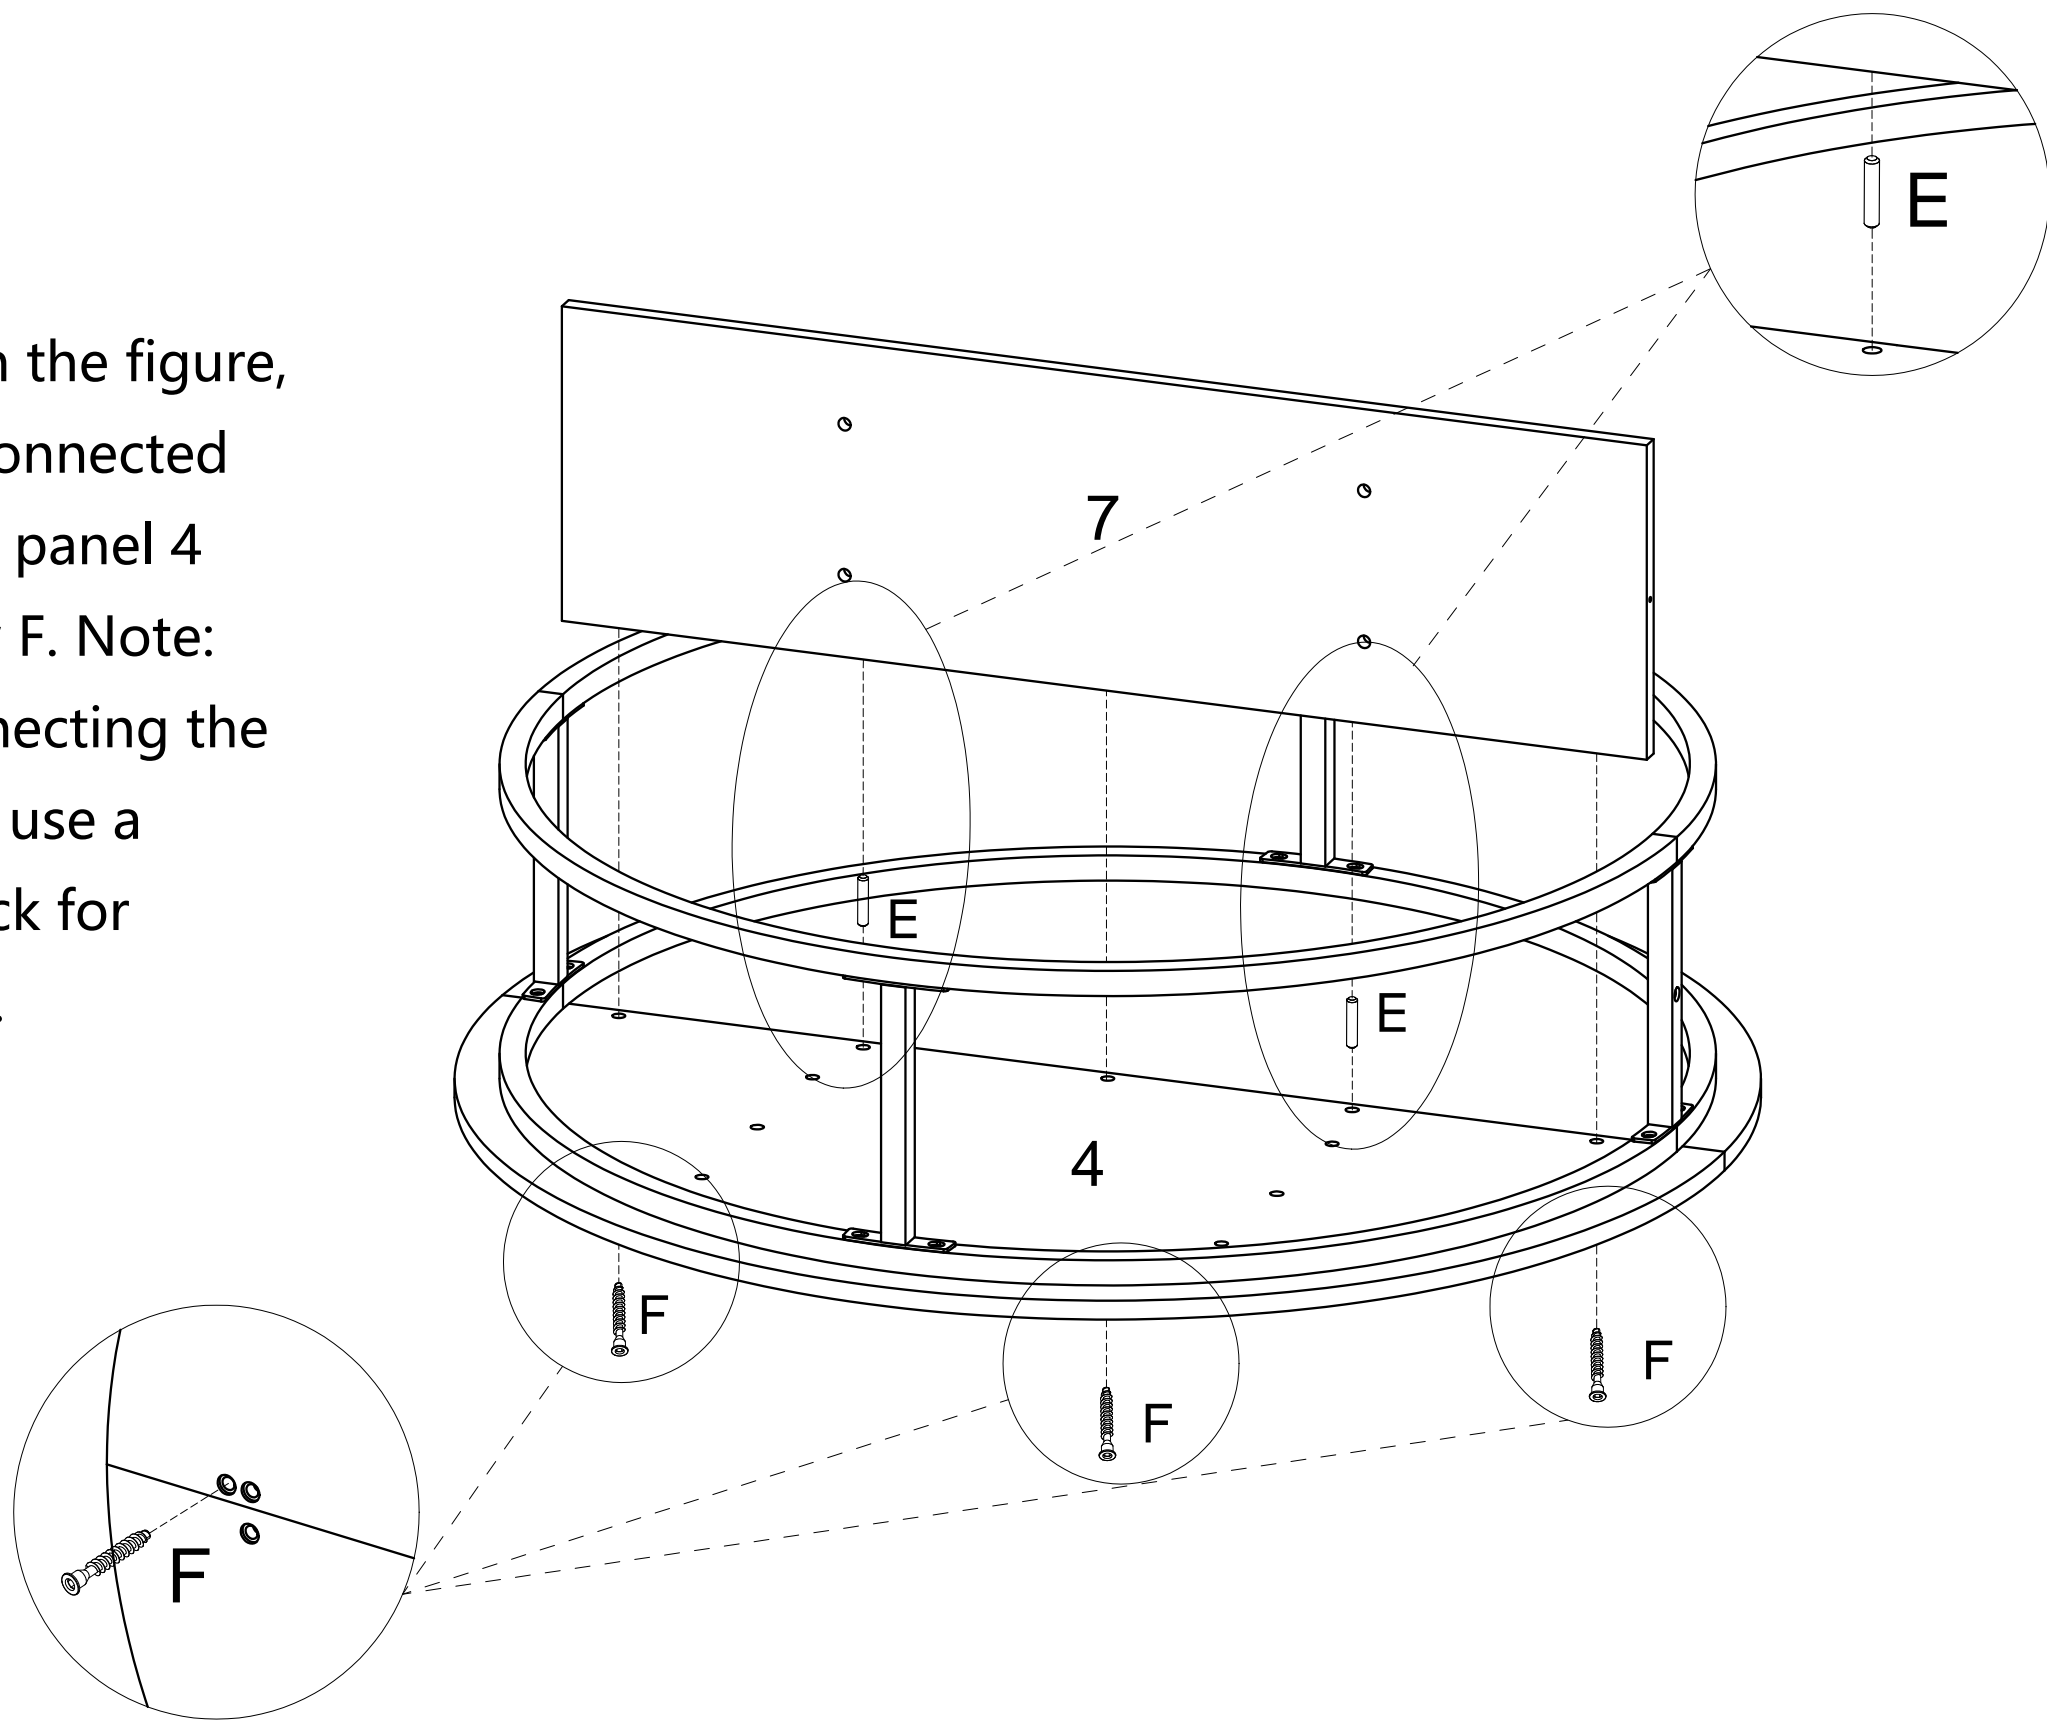


E×2



F×3




L×1




# 4


As shown in the figure, use screw F to connect panel 9 and panel 8 vertically to panel 4. Note: Before connecting the panels, use a wooden stick to position the panels.

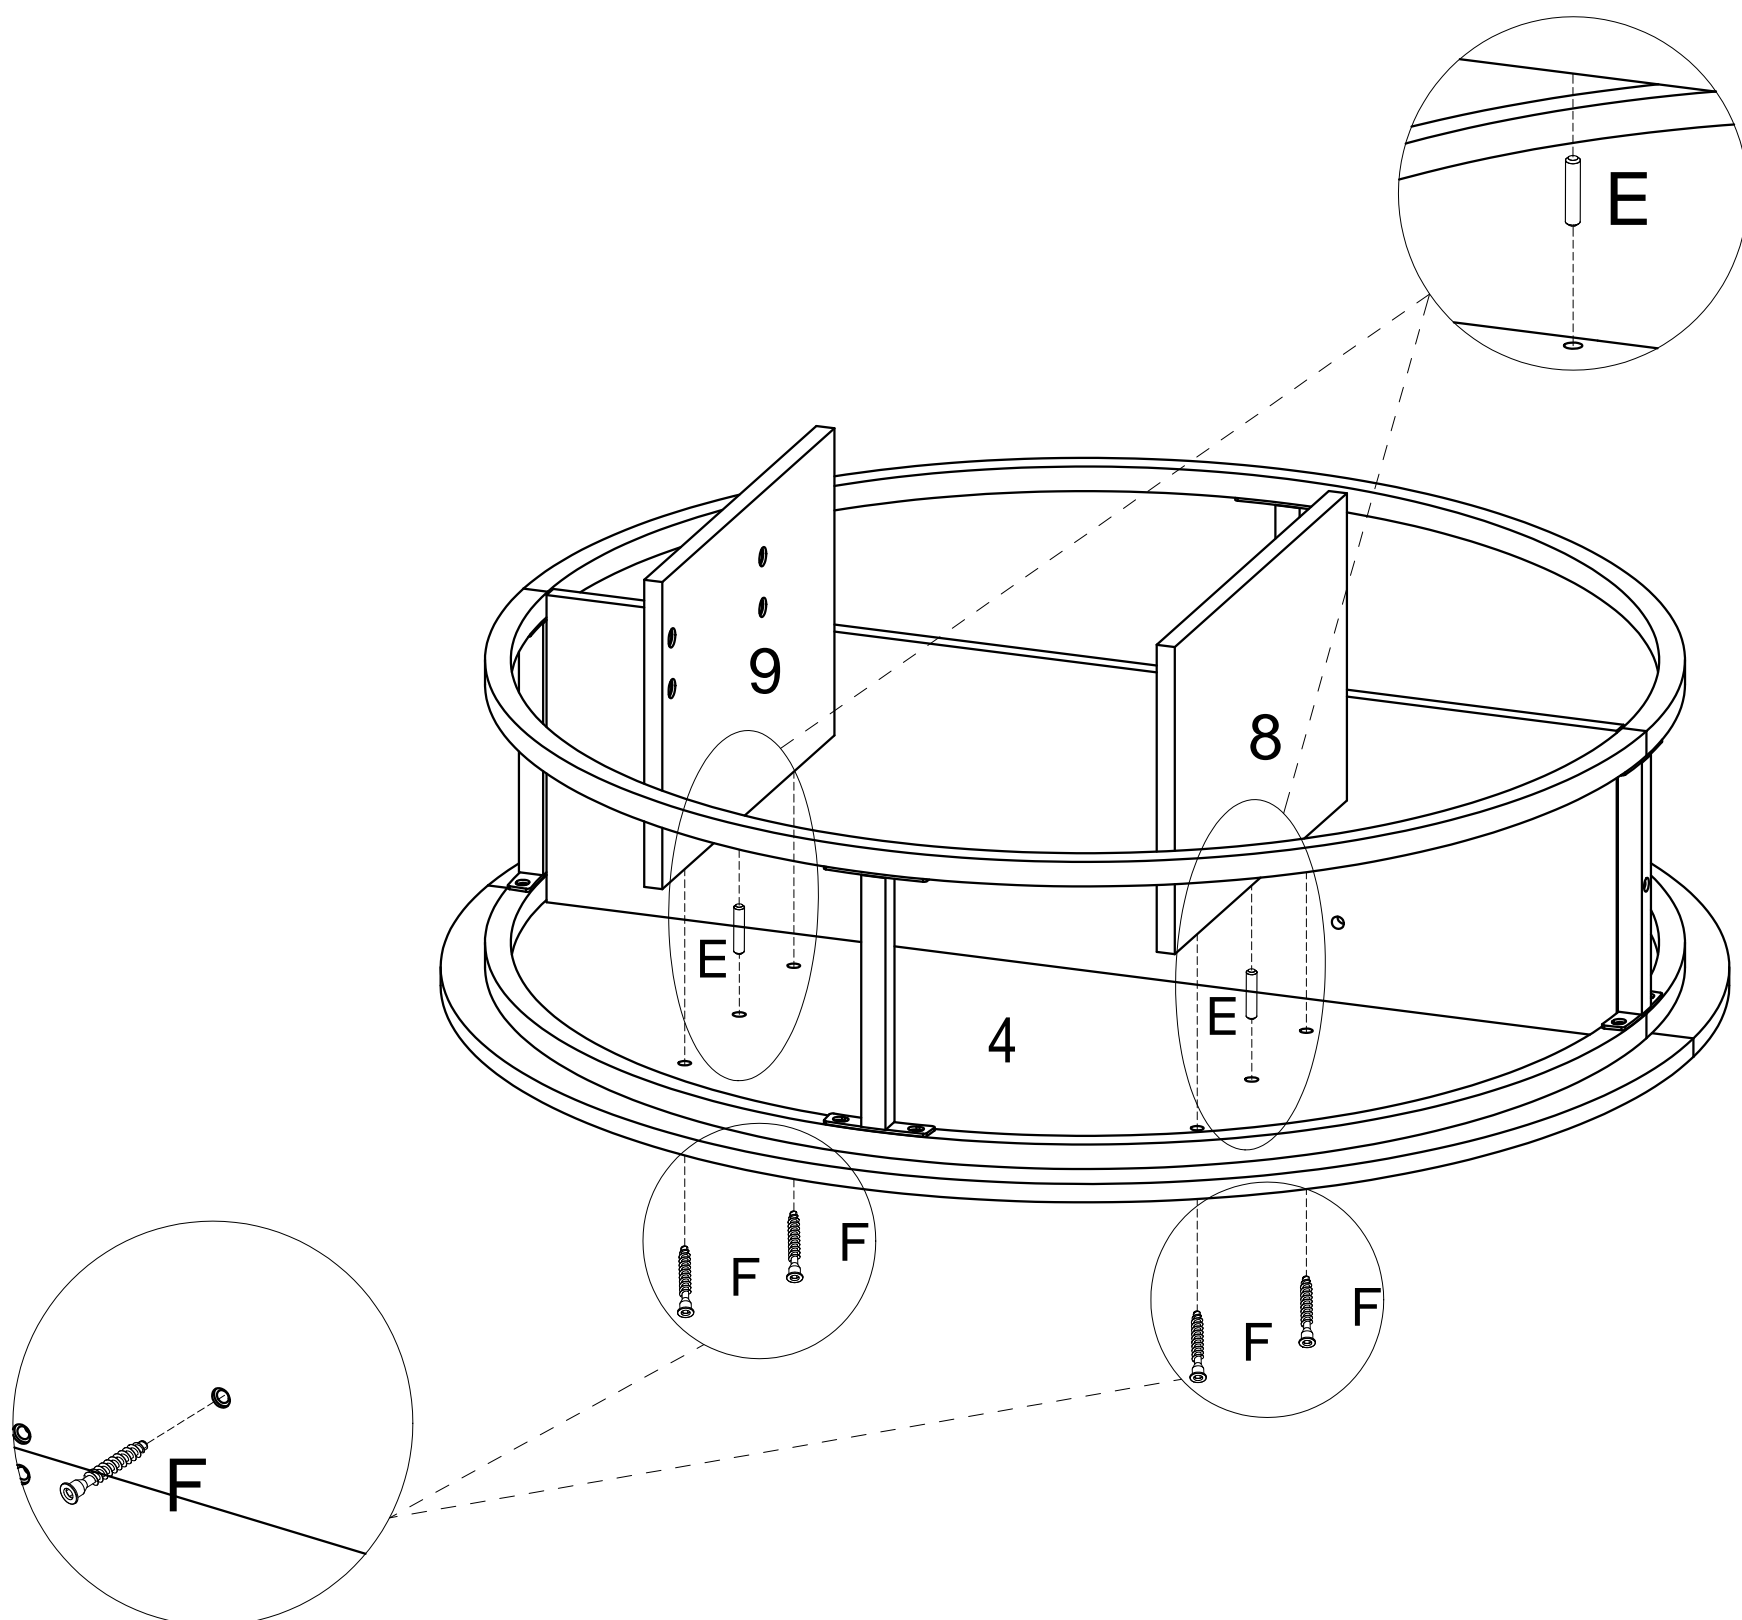


E×2



F×4








L×1




5

As shown in the figure, use screw F to connect panel 7 to panels 8 and 9. Then use screw P to connect panel 7 to the

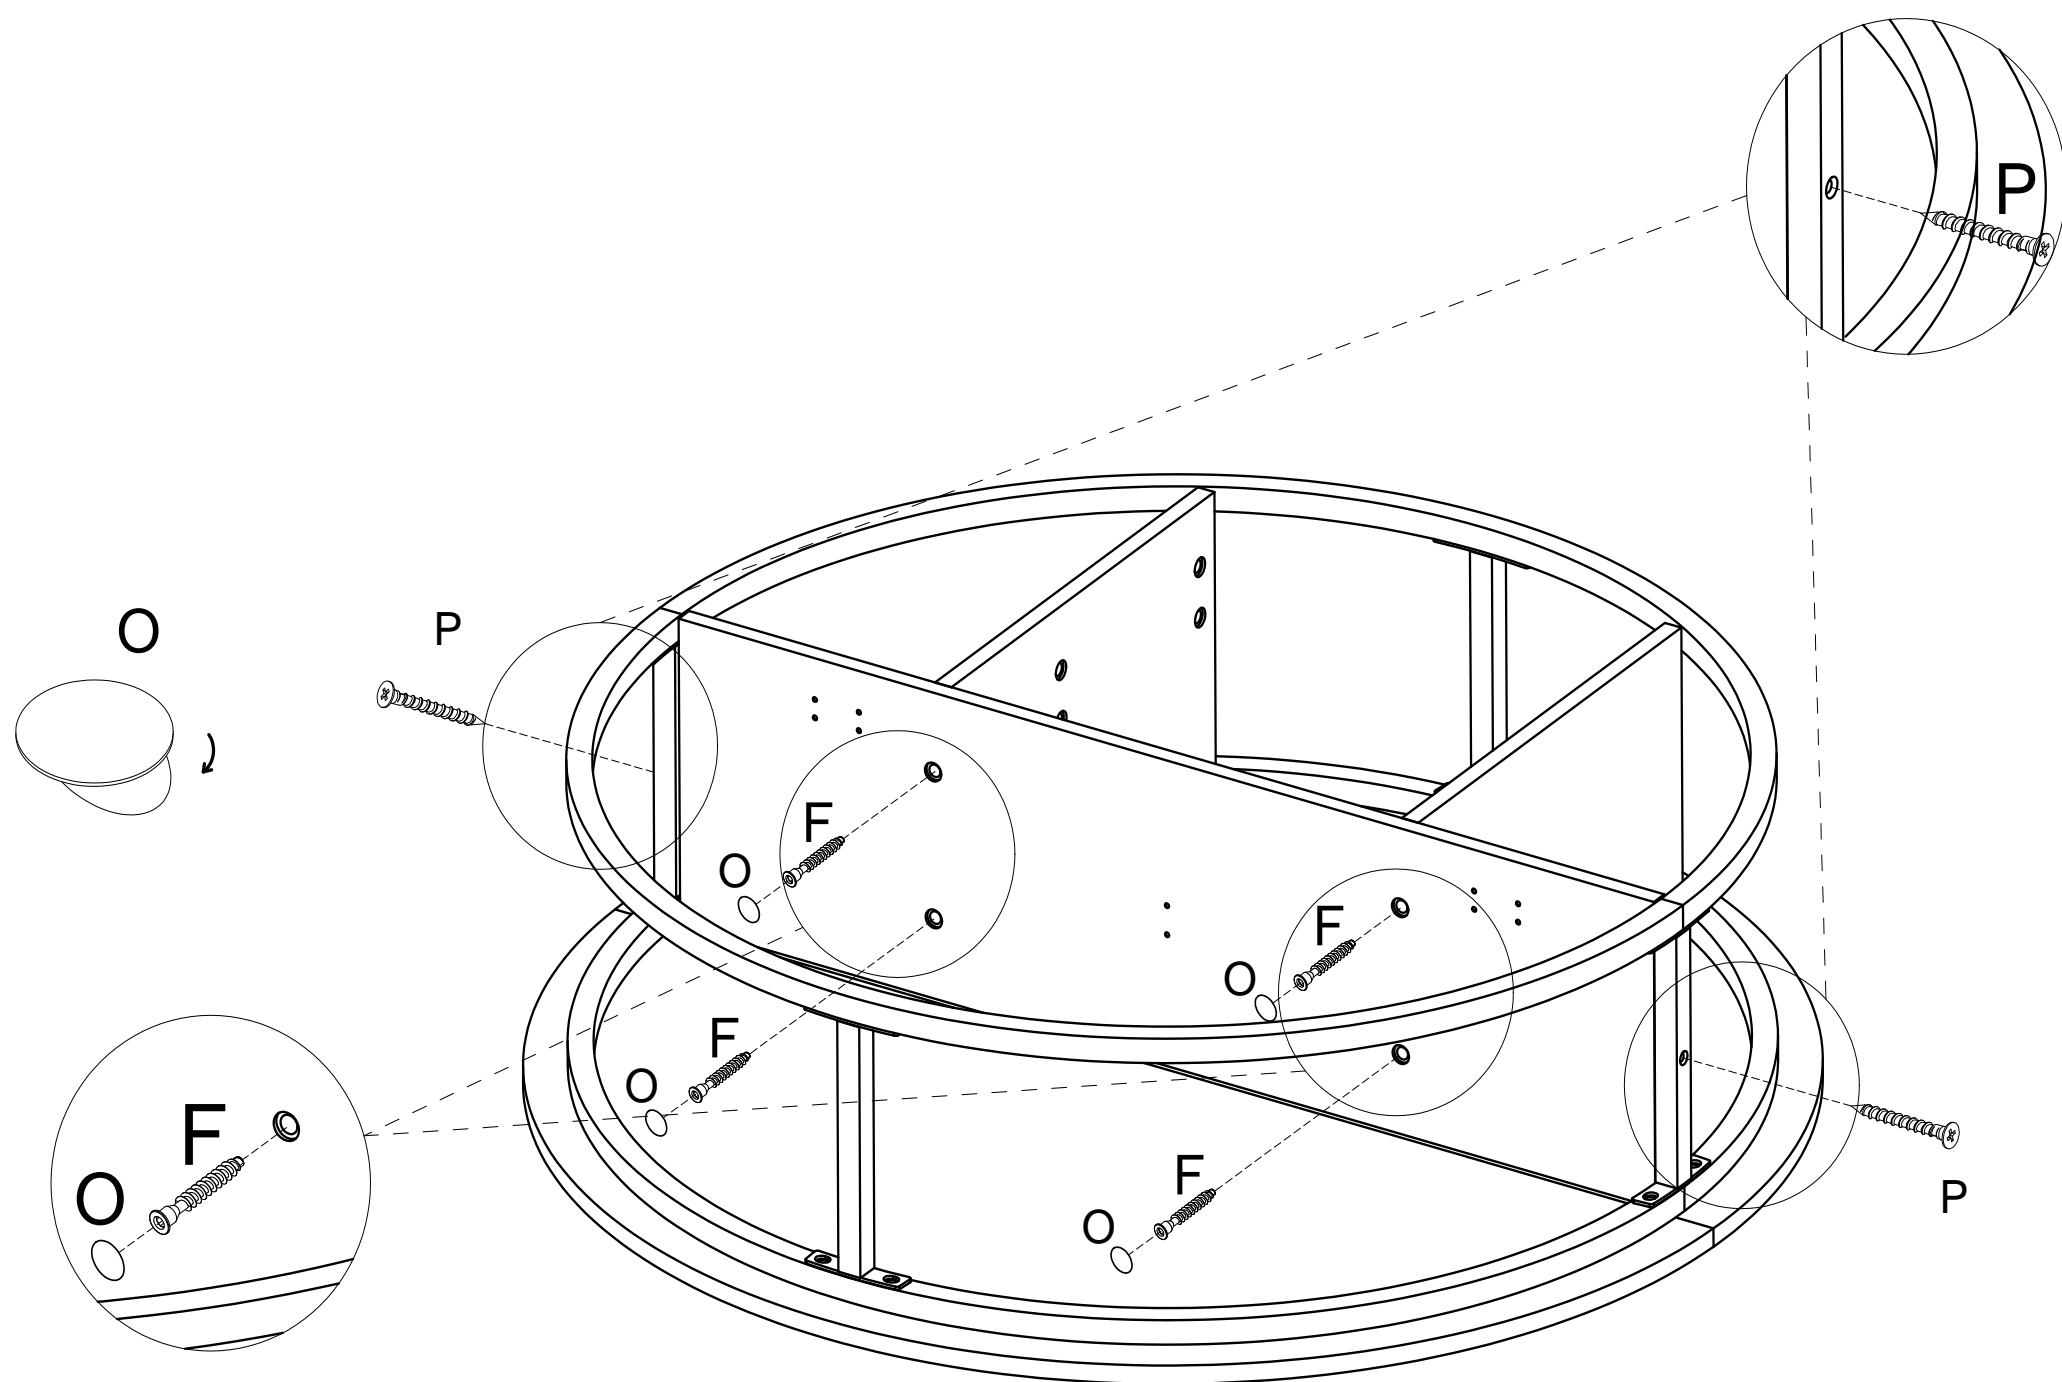

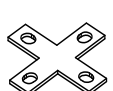
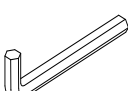

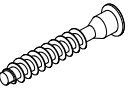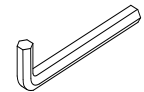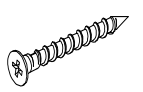
<b>F×4</b> 	<b>L×1</b> 	<b>O×4</b> 	<b>P×2</b> 
--------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------


6

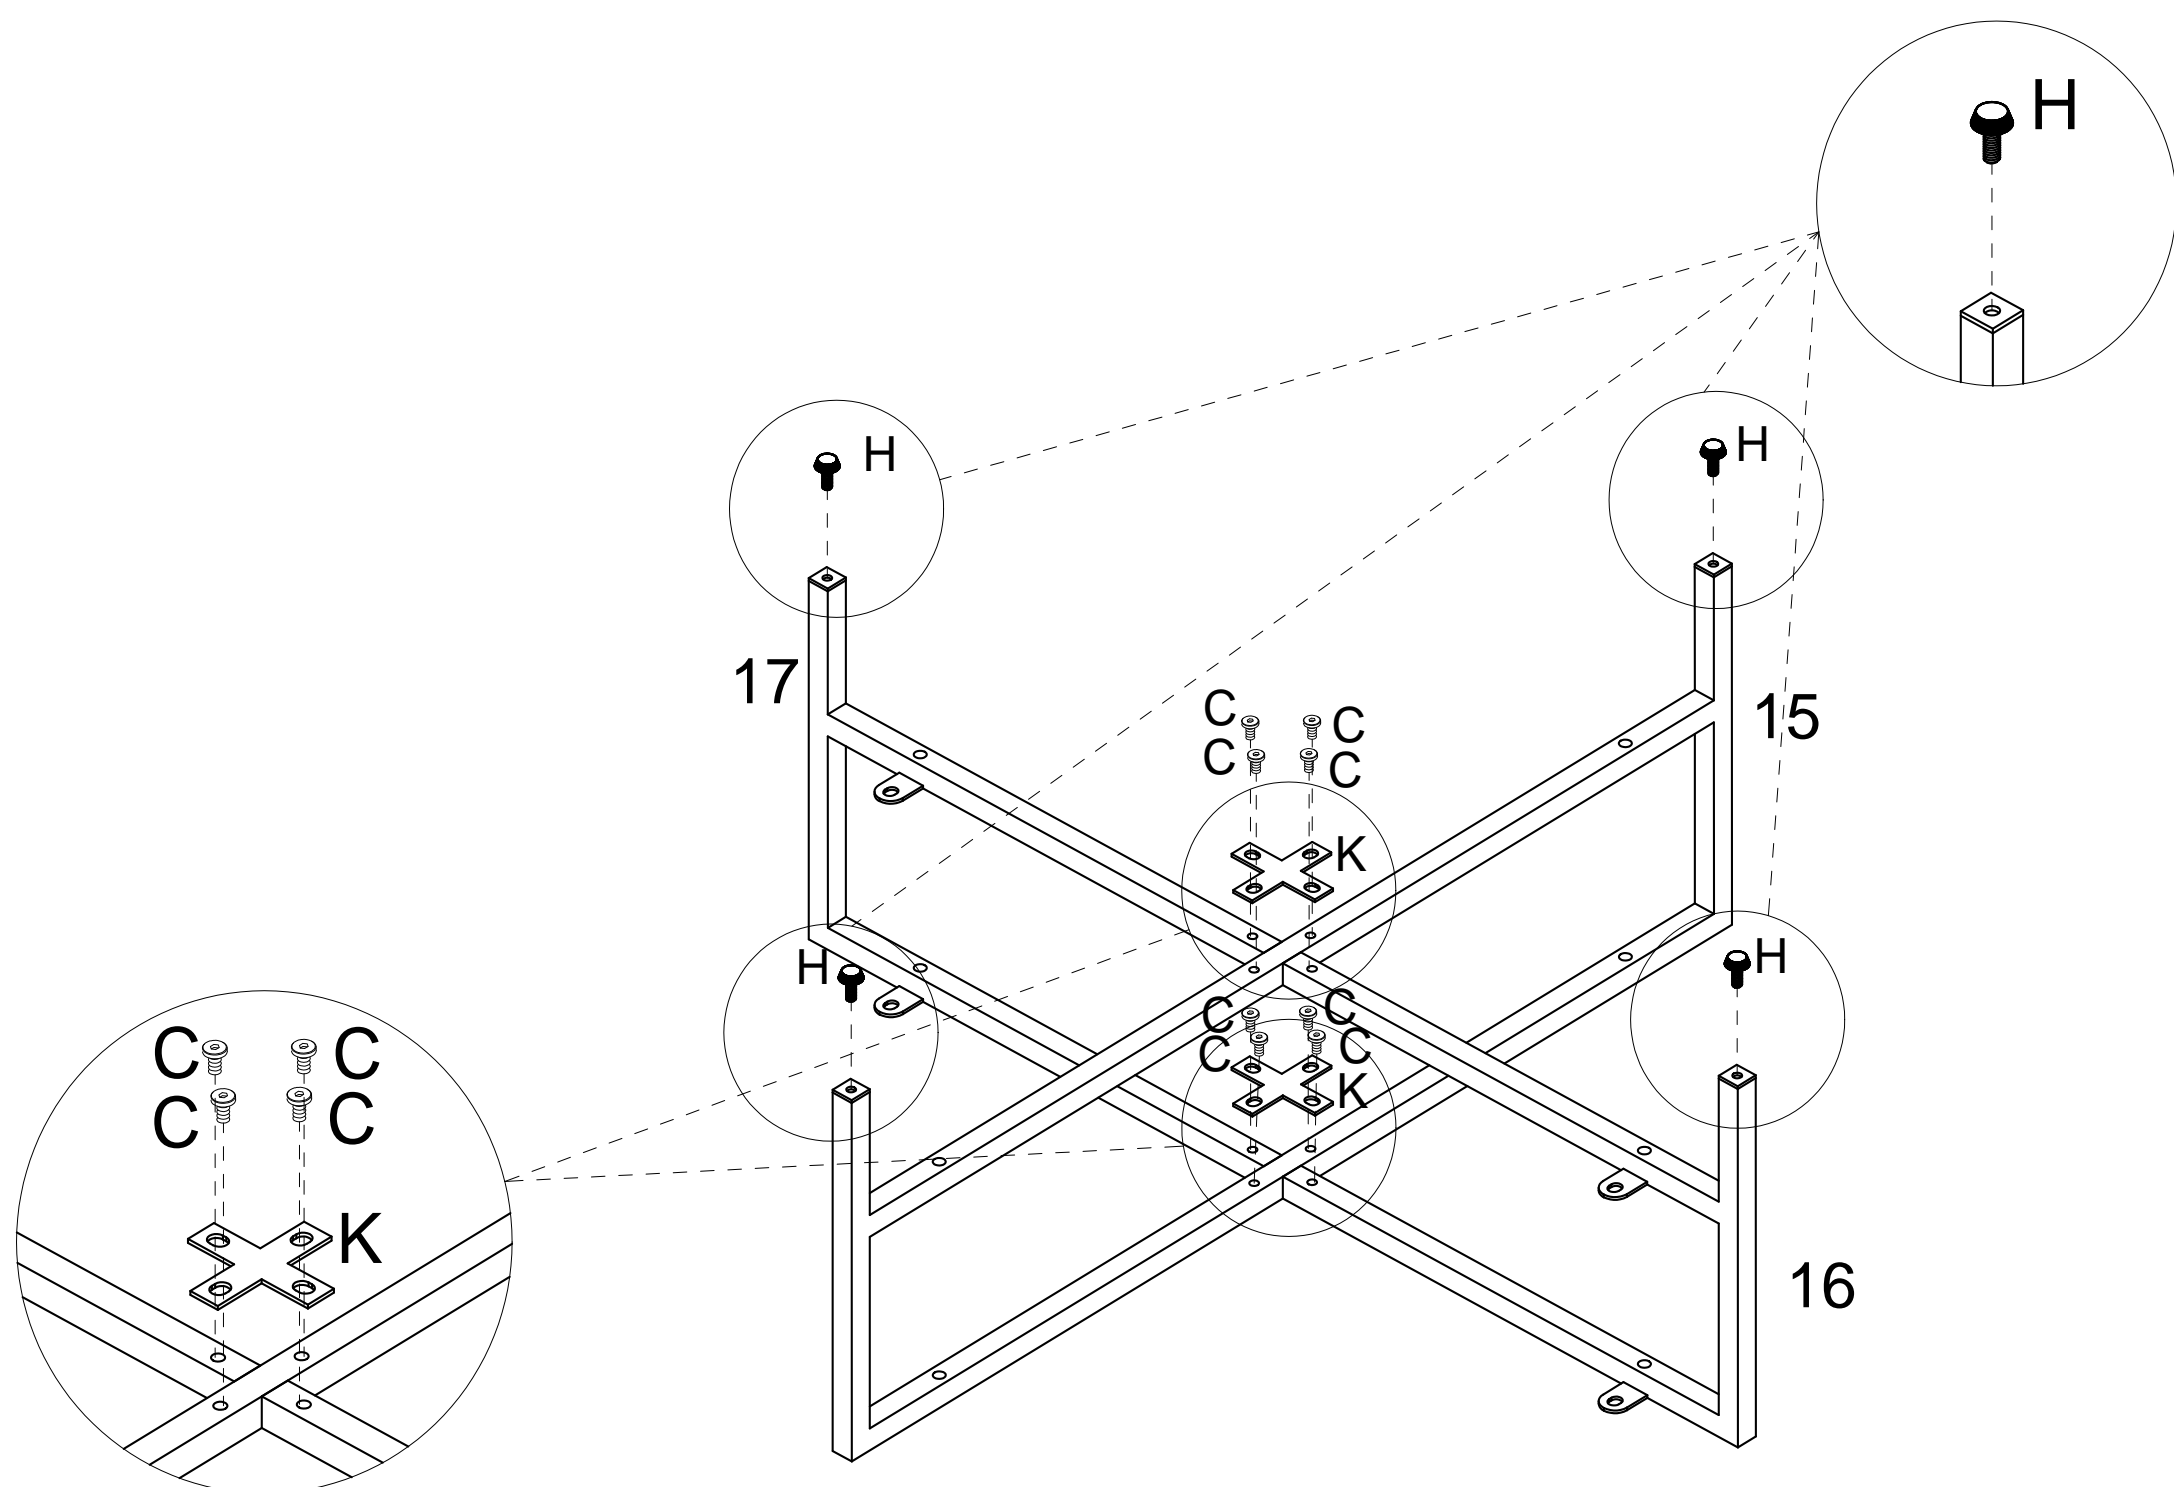

As shown in the figure, use screw C and accessory K to connect steel pipe frames 15, 16, and 17 in a cross pattern to form table legs. Then install adjustable foot pads H on the four protruding table legs.


<b>C×8</b> 	<b>H×4</b> 	<b>K×2</b> 	<b>L×1</b> 
--------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------

7

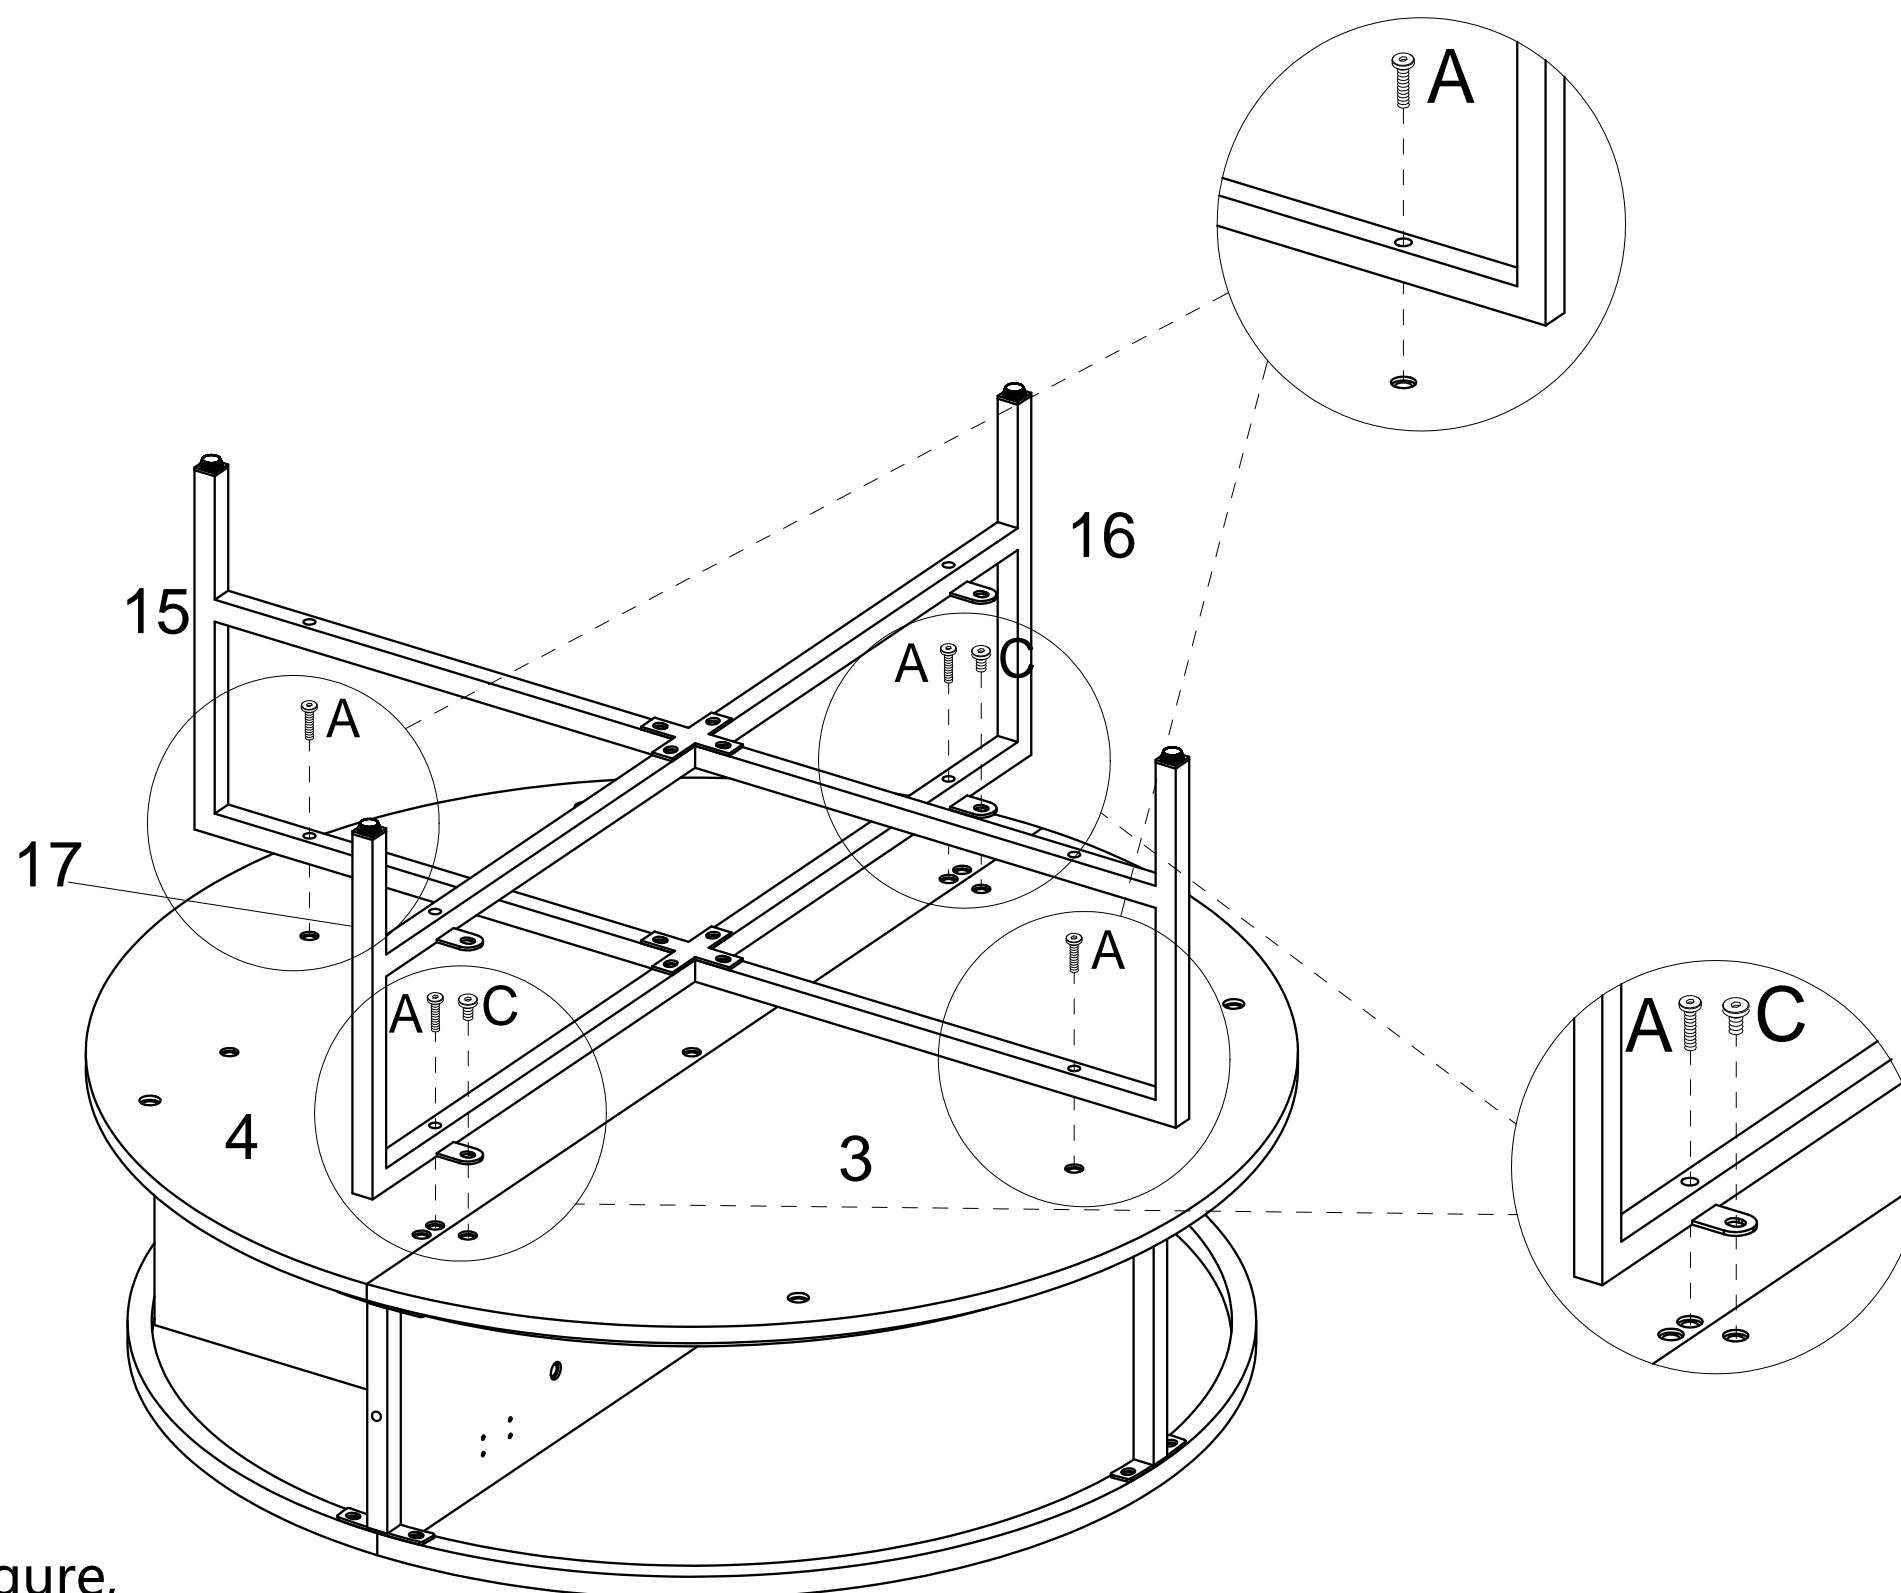


As shown in the figure,  
connect the assembled table  
leg frame to panels 3 and 4  
using screws A and C.


A×4




C×2



L×1




8

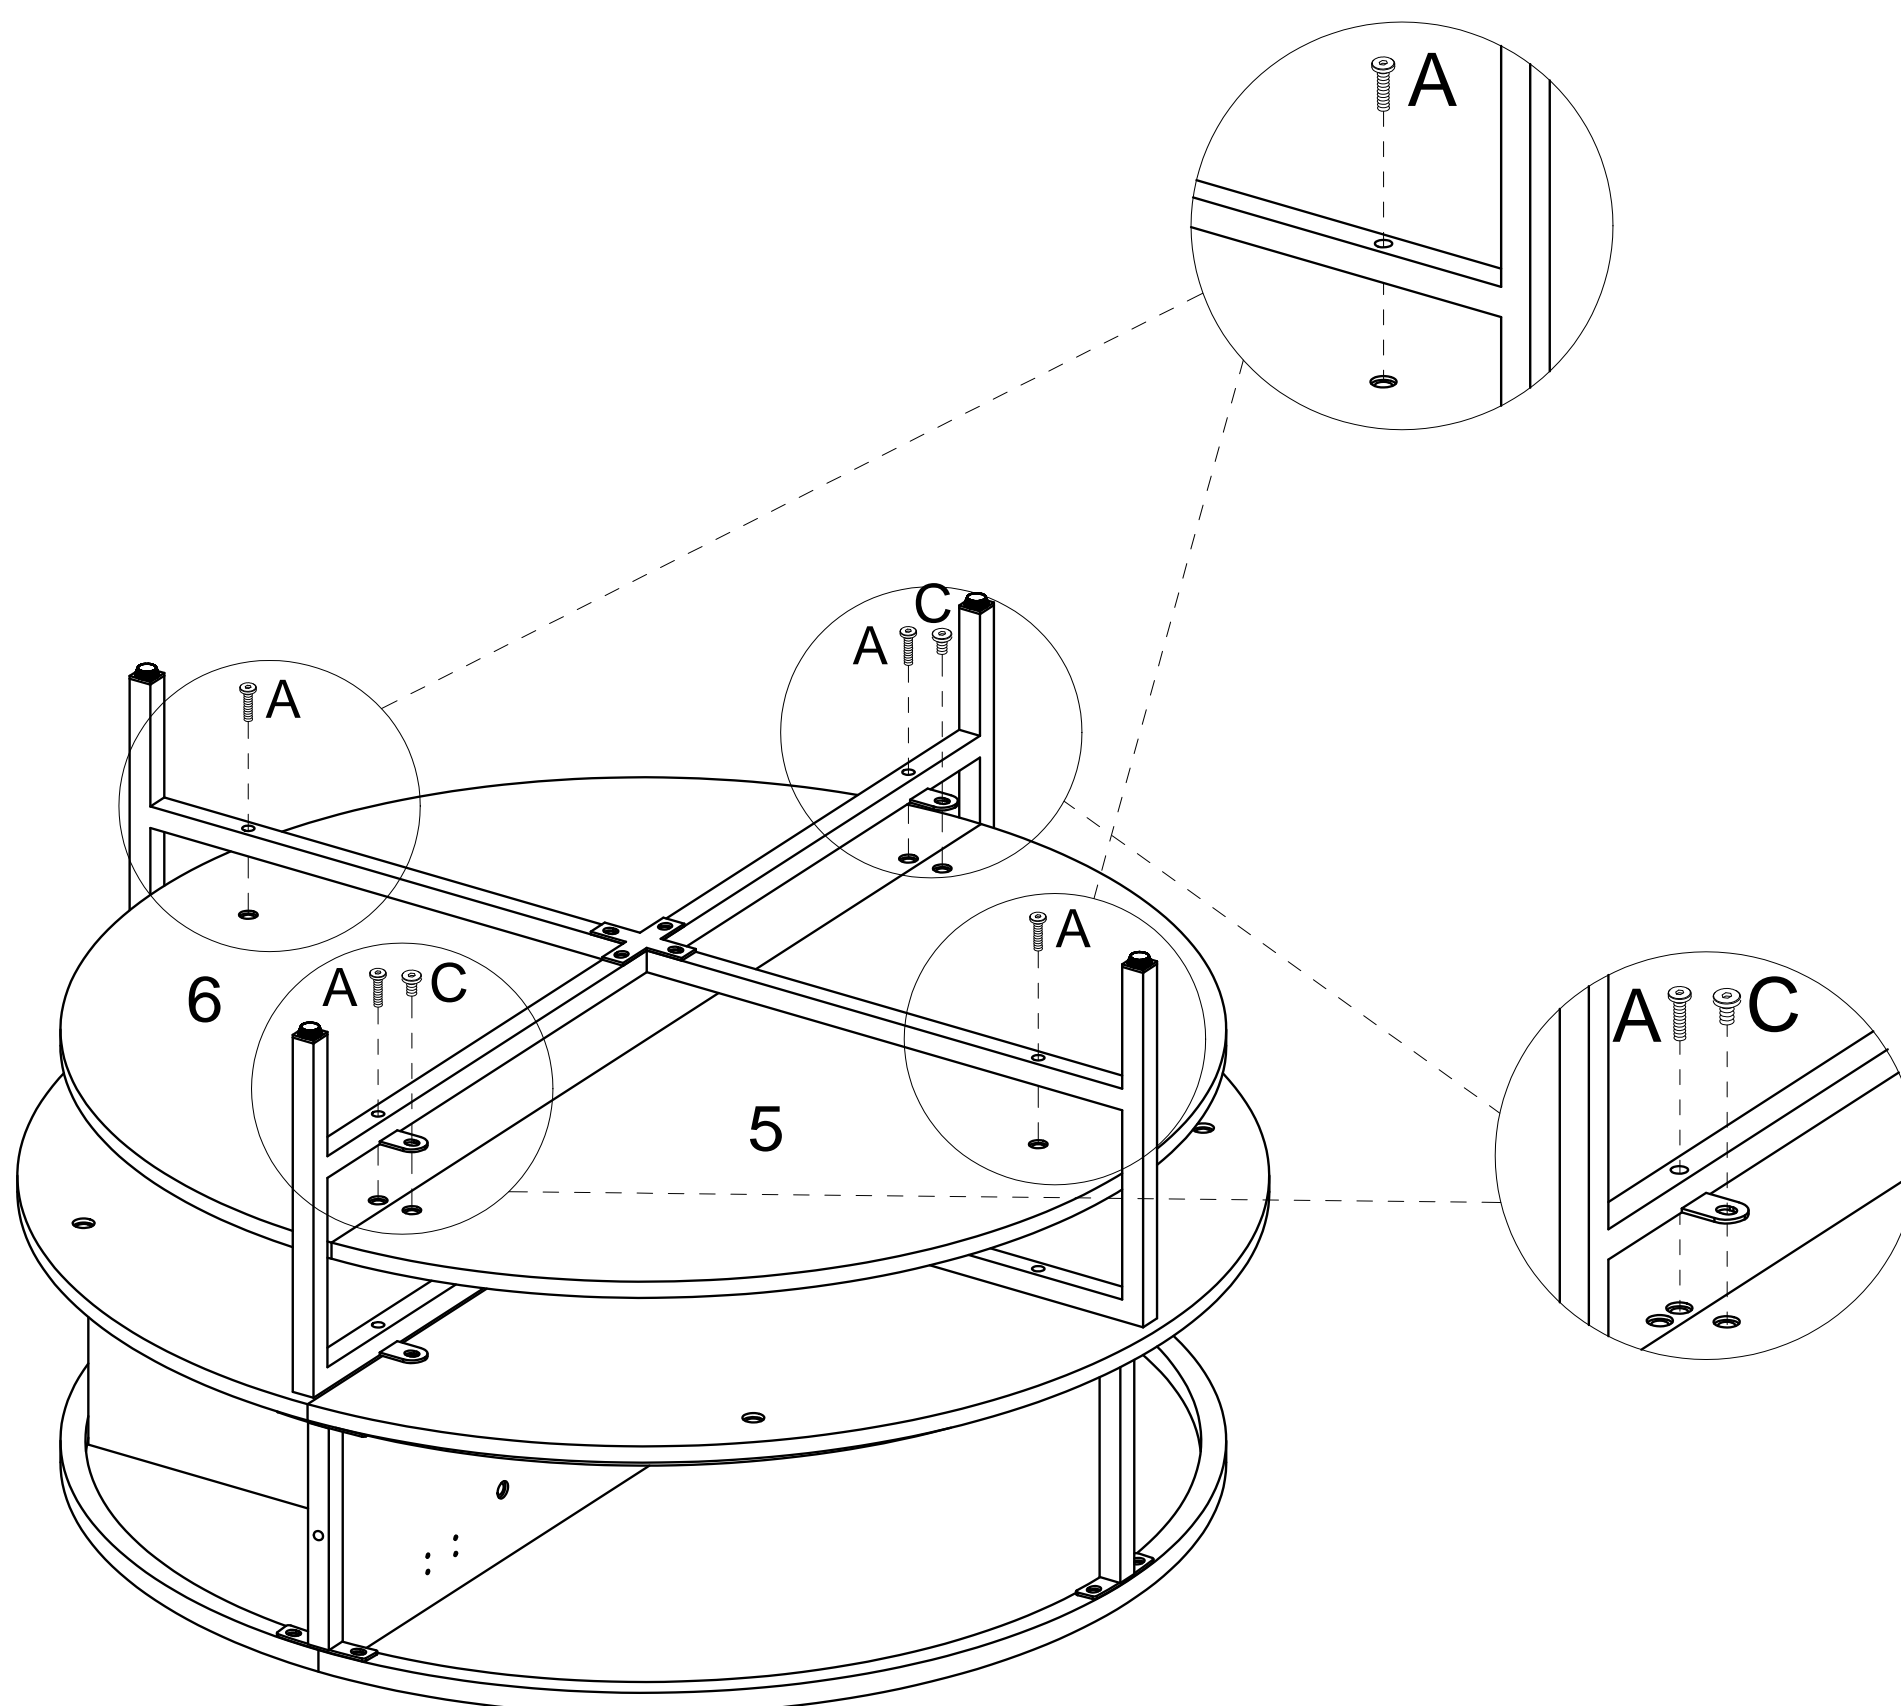


As shown in the figure, use screw A and screw C to  
connect panel 5 and panel 6 to the inside of the table  
leg frame.


A×4



C×2




L×1






9

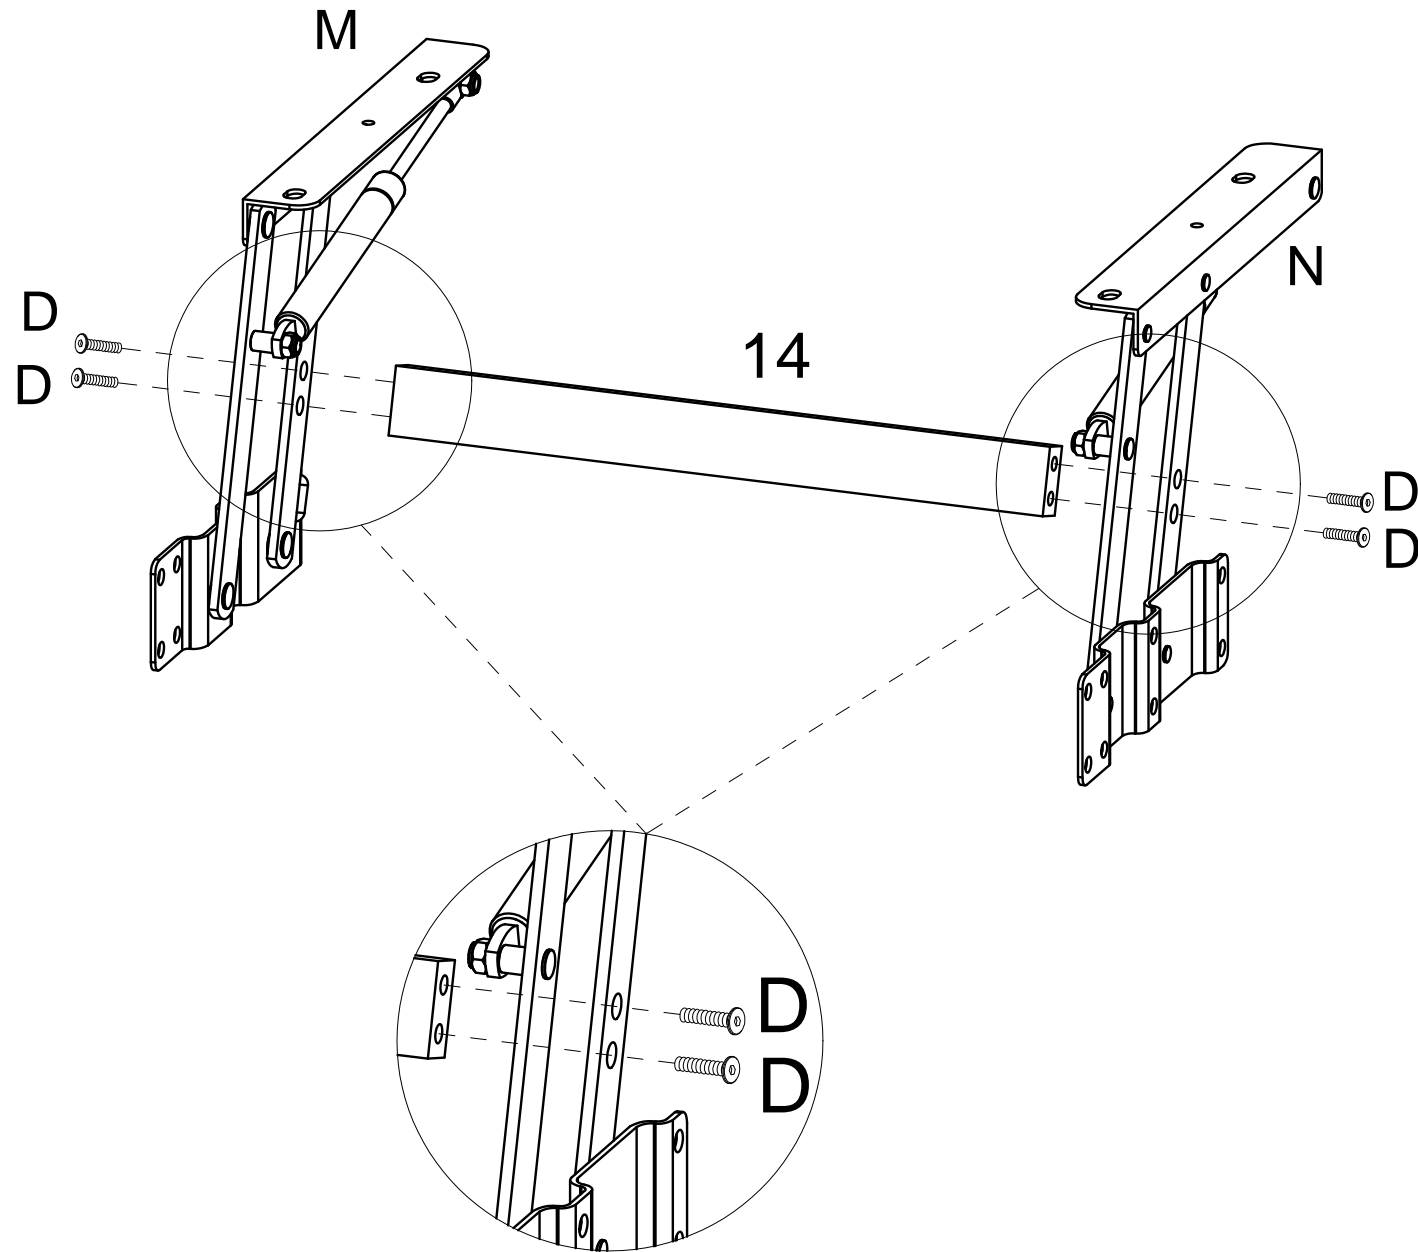


As shown in the figure, use screw D and accessory 14 to connect table lifters M and N together.

D×4



L×1




M×1



N×1



10

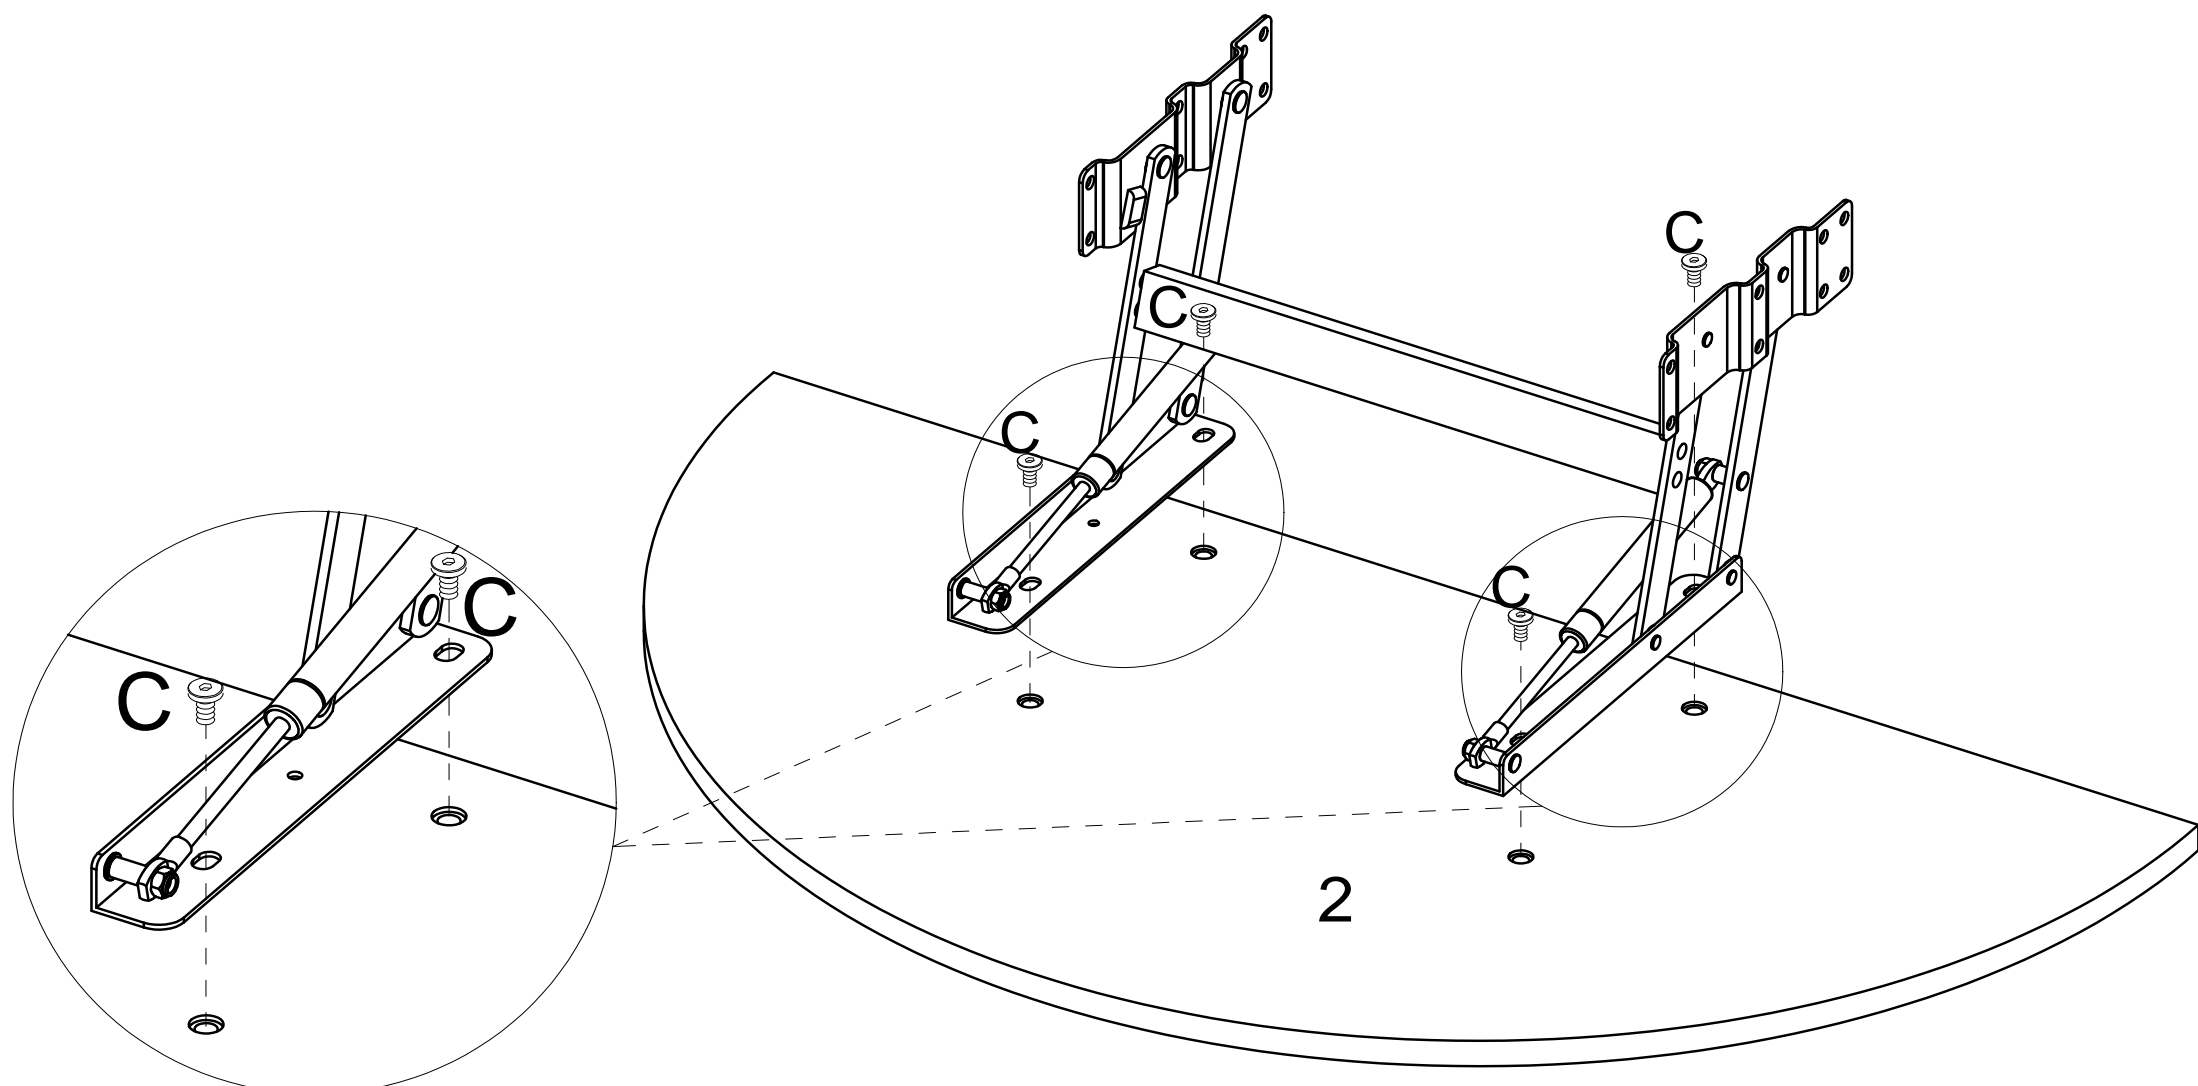

As shown in the figure, use screw C to connect the assembled desktop lift to panel 2.


C×4



L×1



11

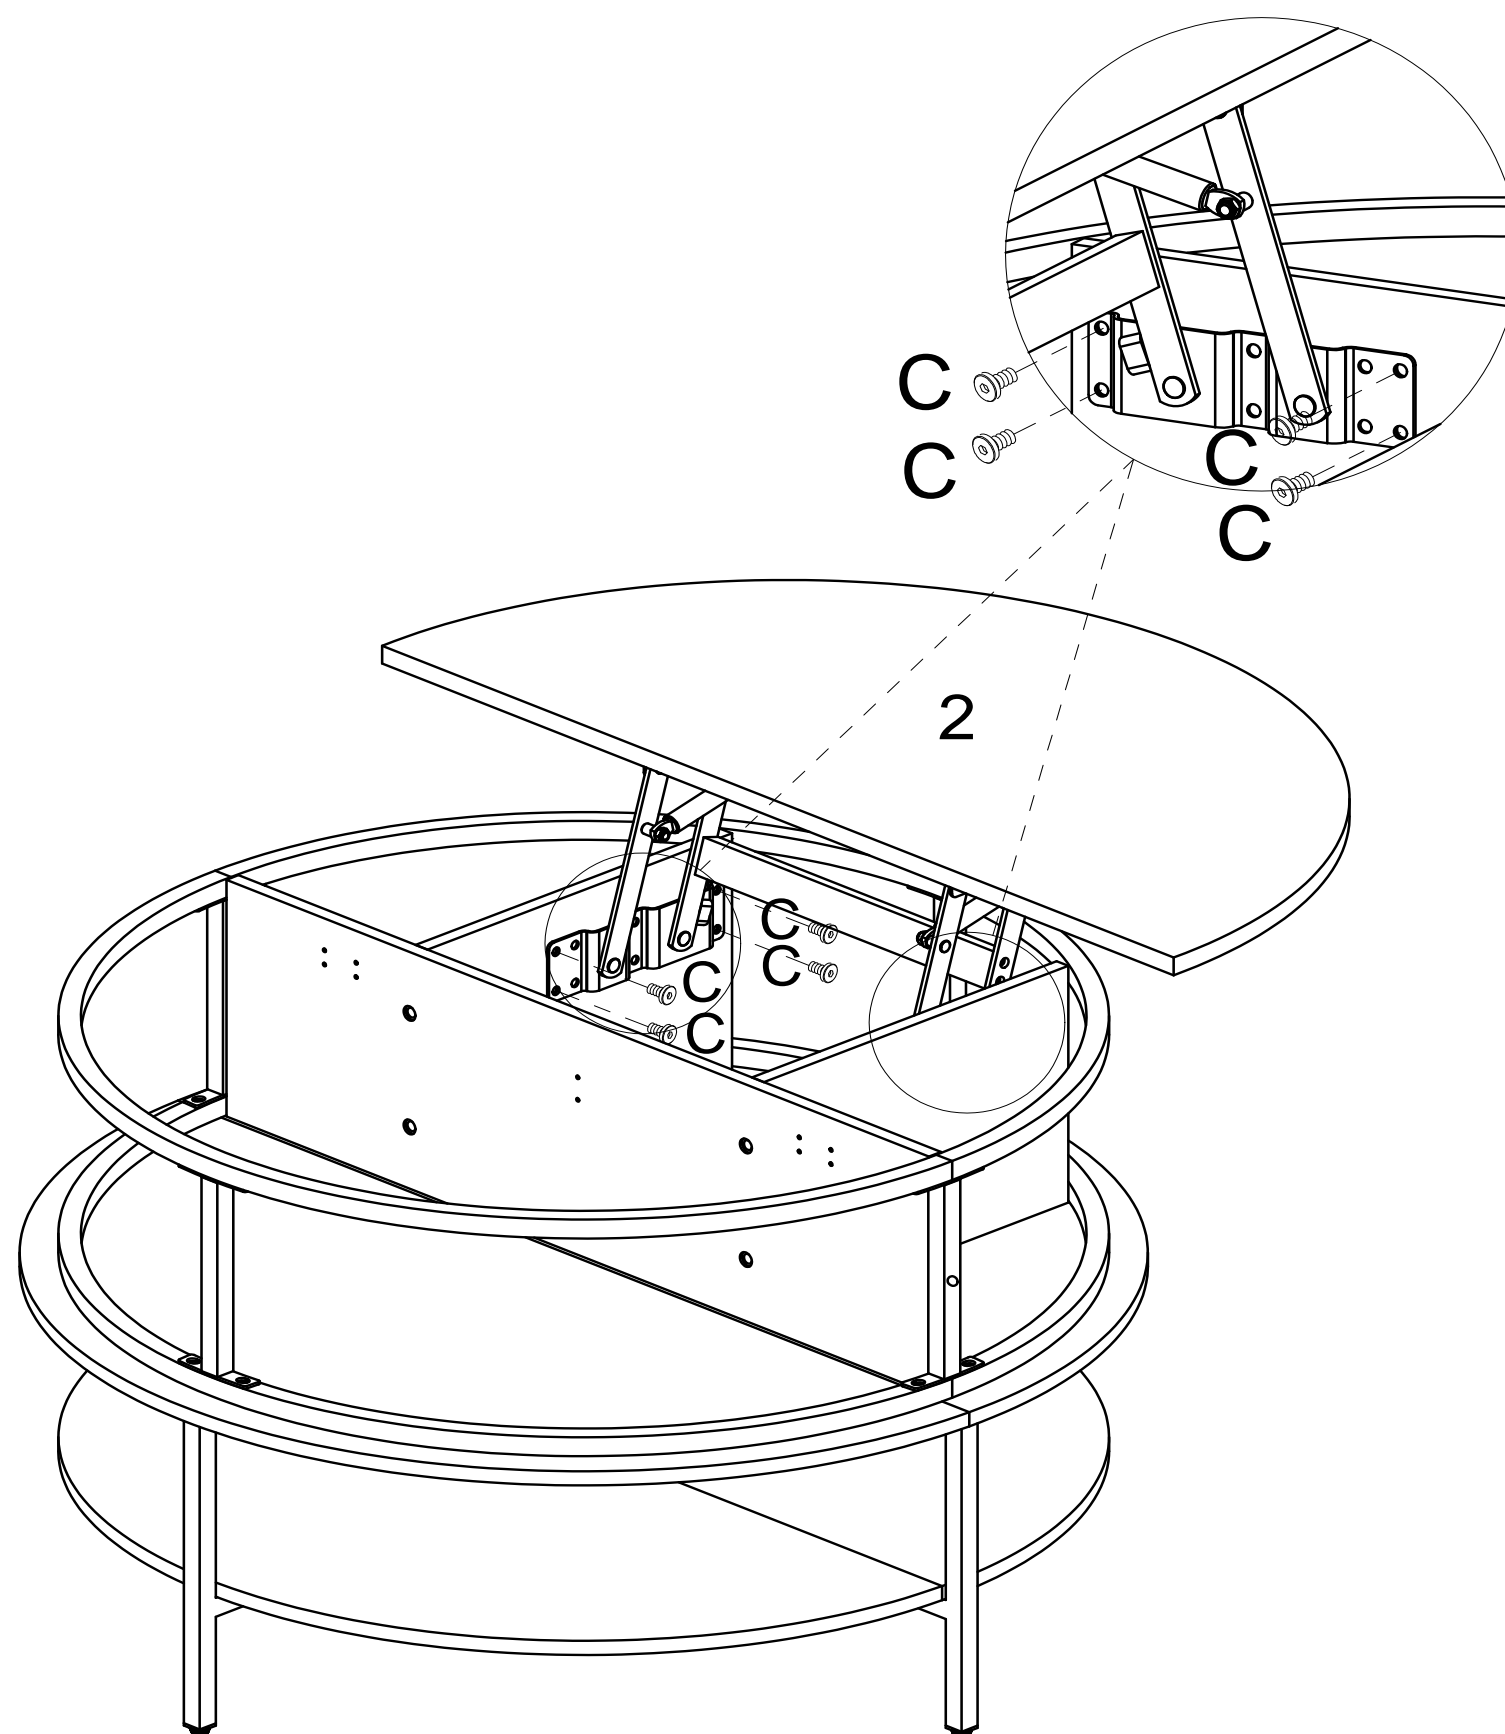


As shown in the figure, use screw C to connect the other end of the desktop lift to panels 8 and 9.

Cx8




Lx1




12

As shown in the figure, use screw G to connect hinges I and J to panel 1.

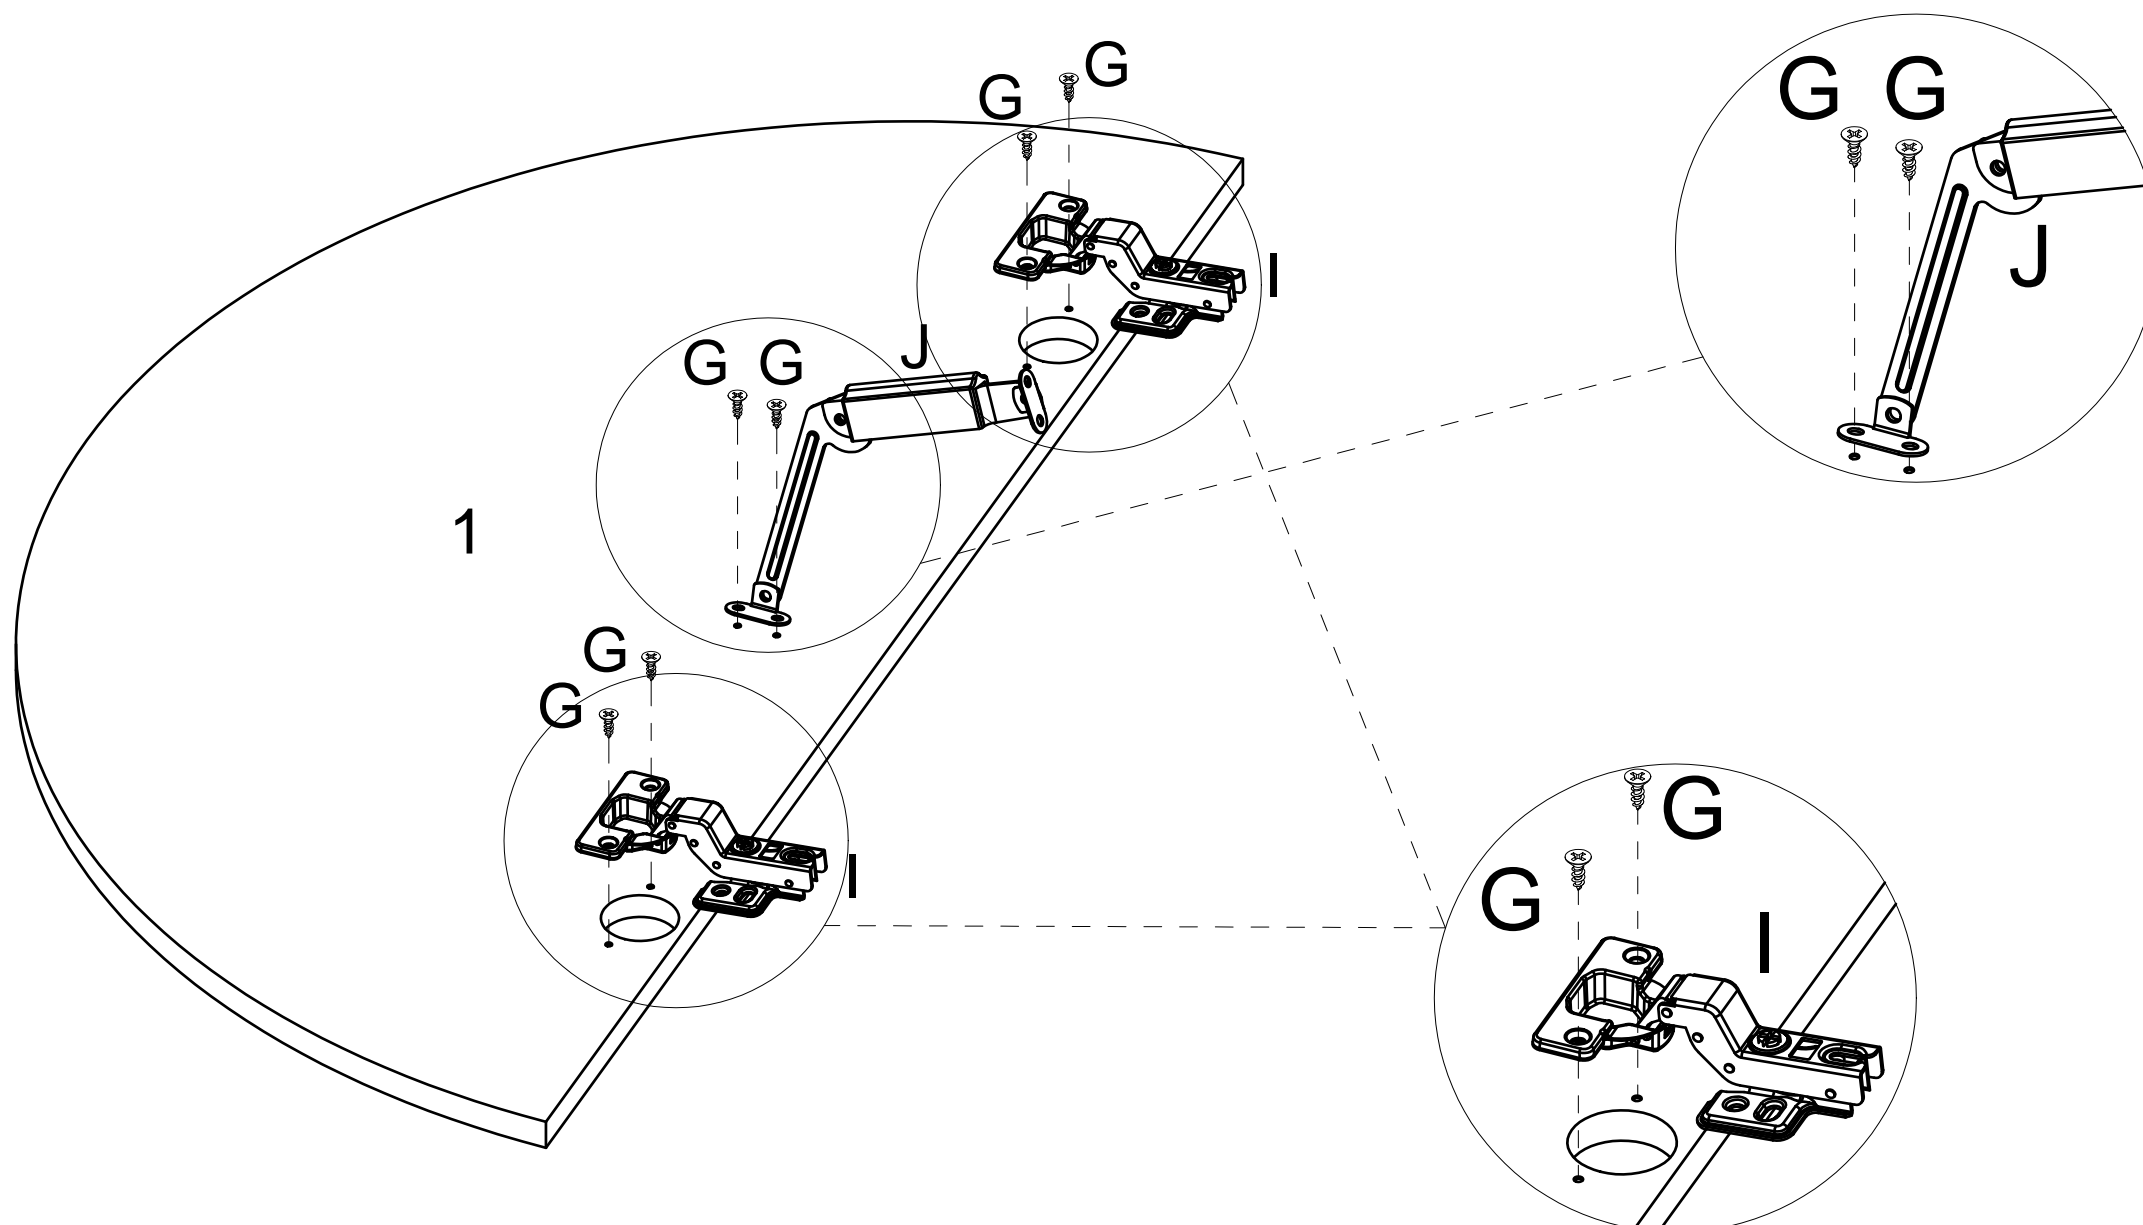

Gx6



Ix2




Jx1



13


As shown in the figure, connect the other ends of hinges I and J to panel 7.

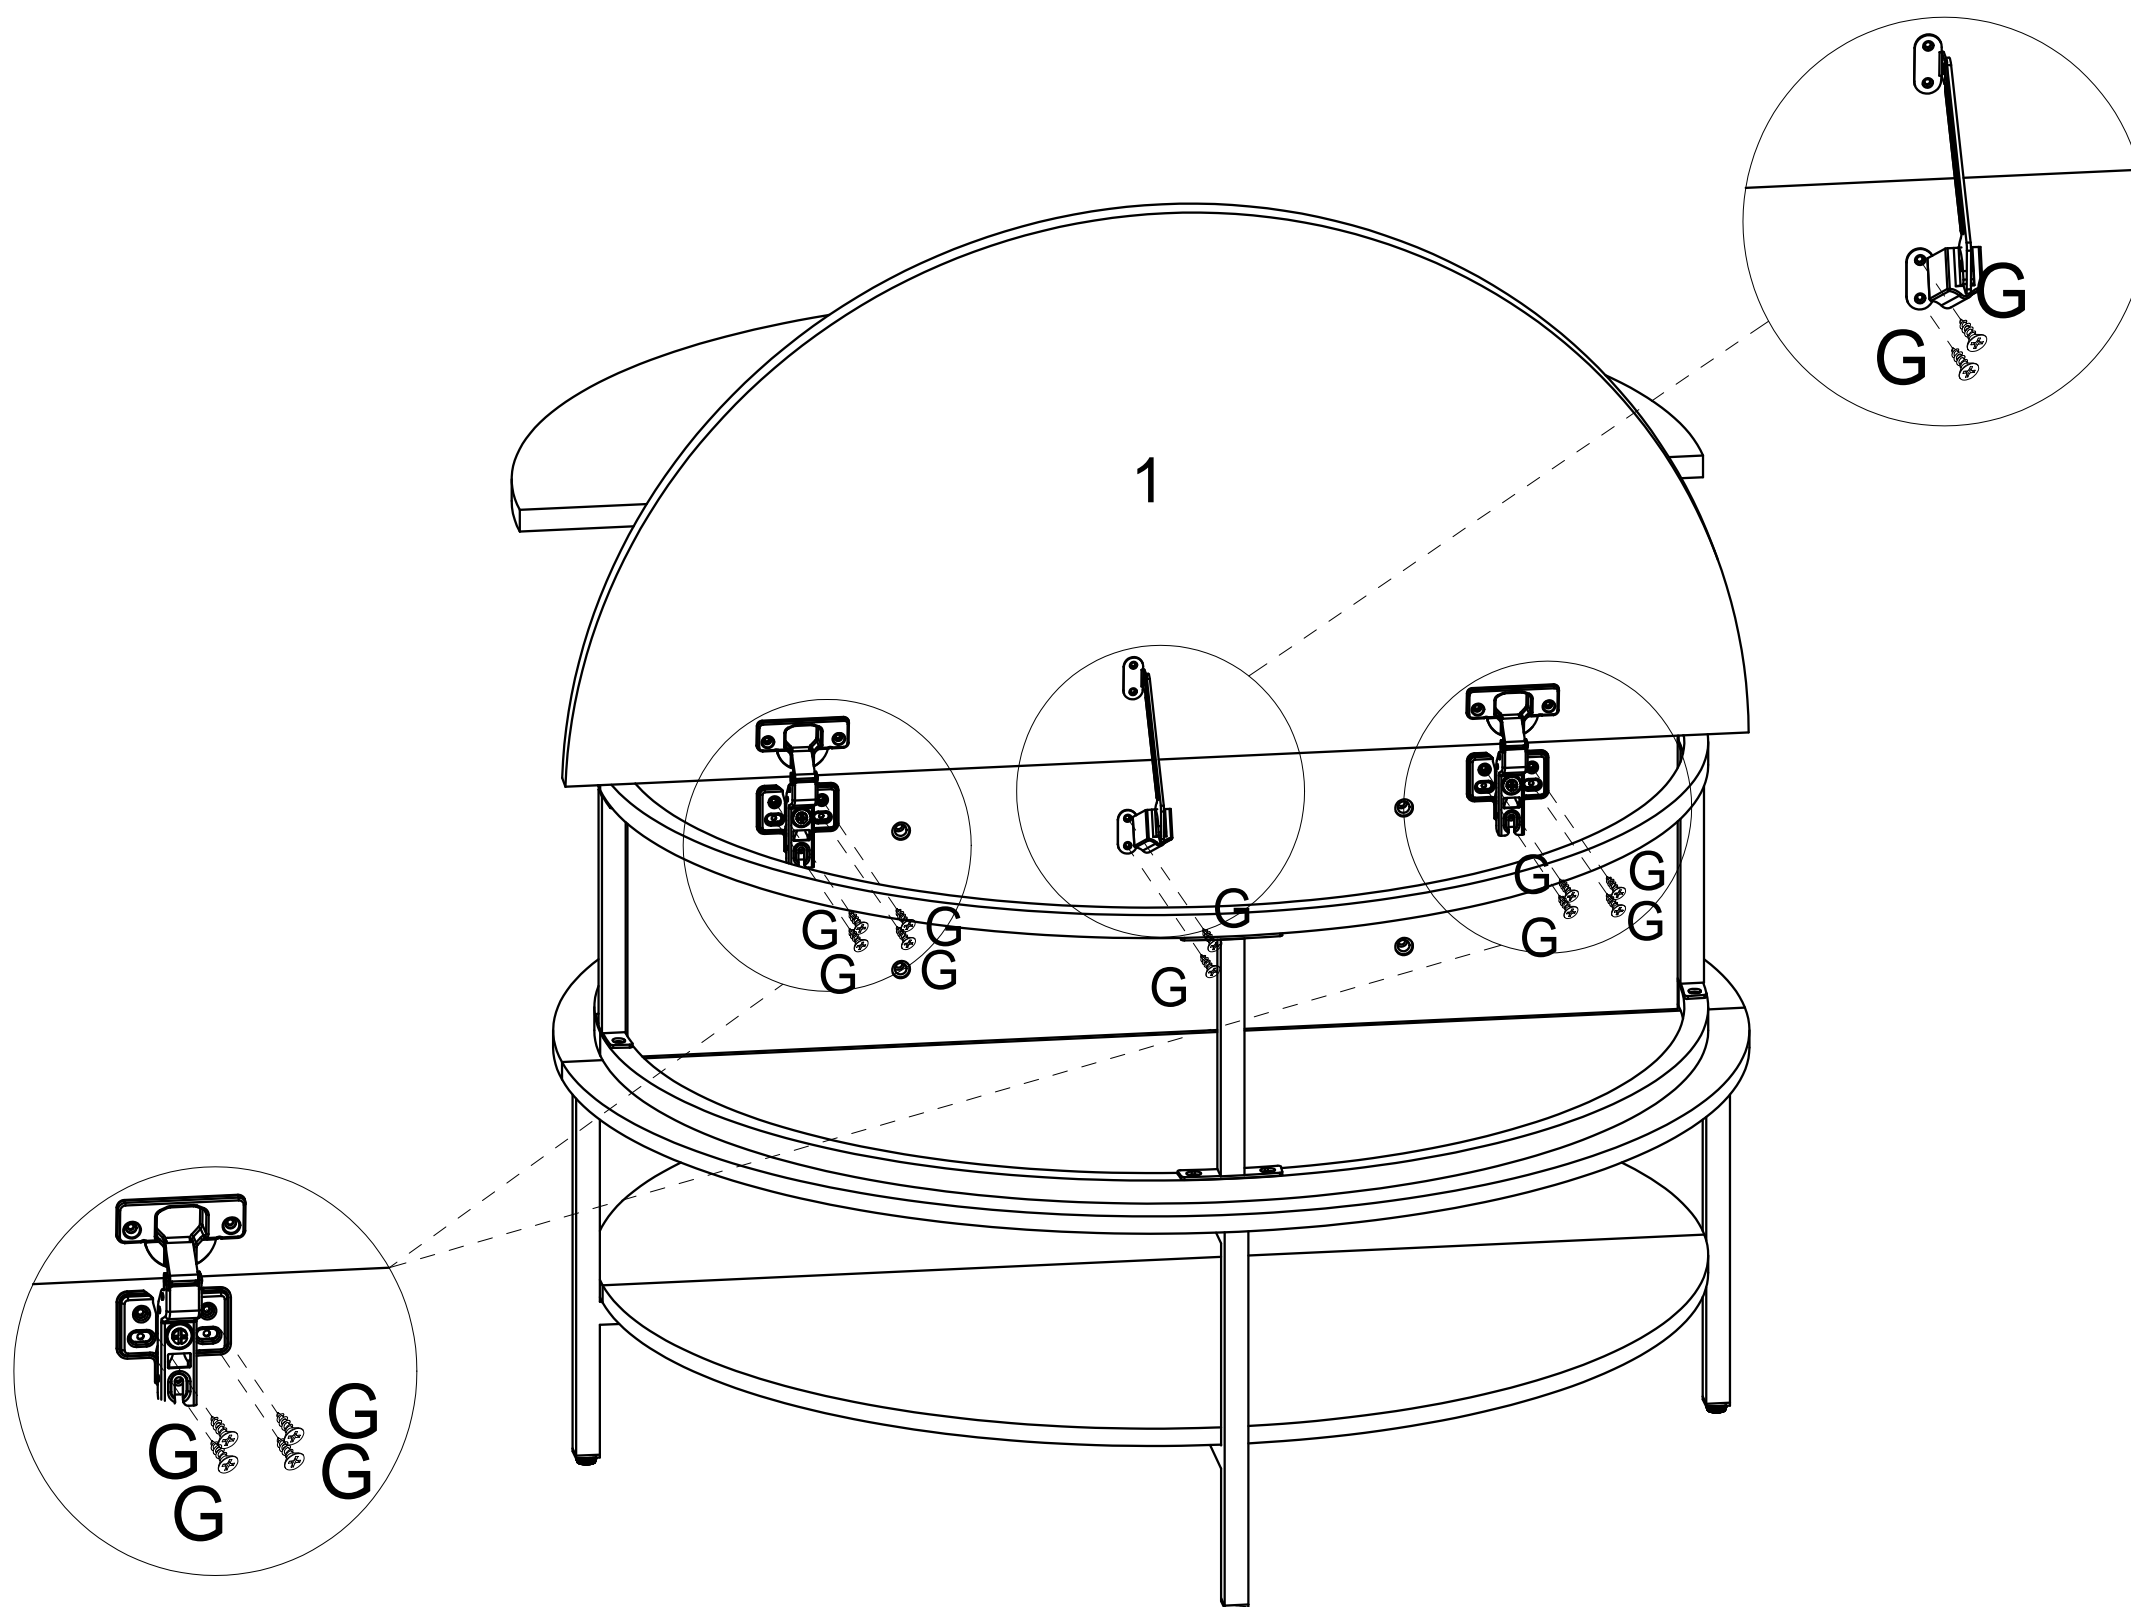

G×10 


14

As shown in the figure, wrap the soft panel 10 around

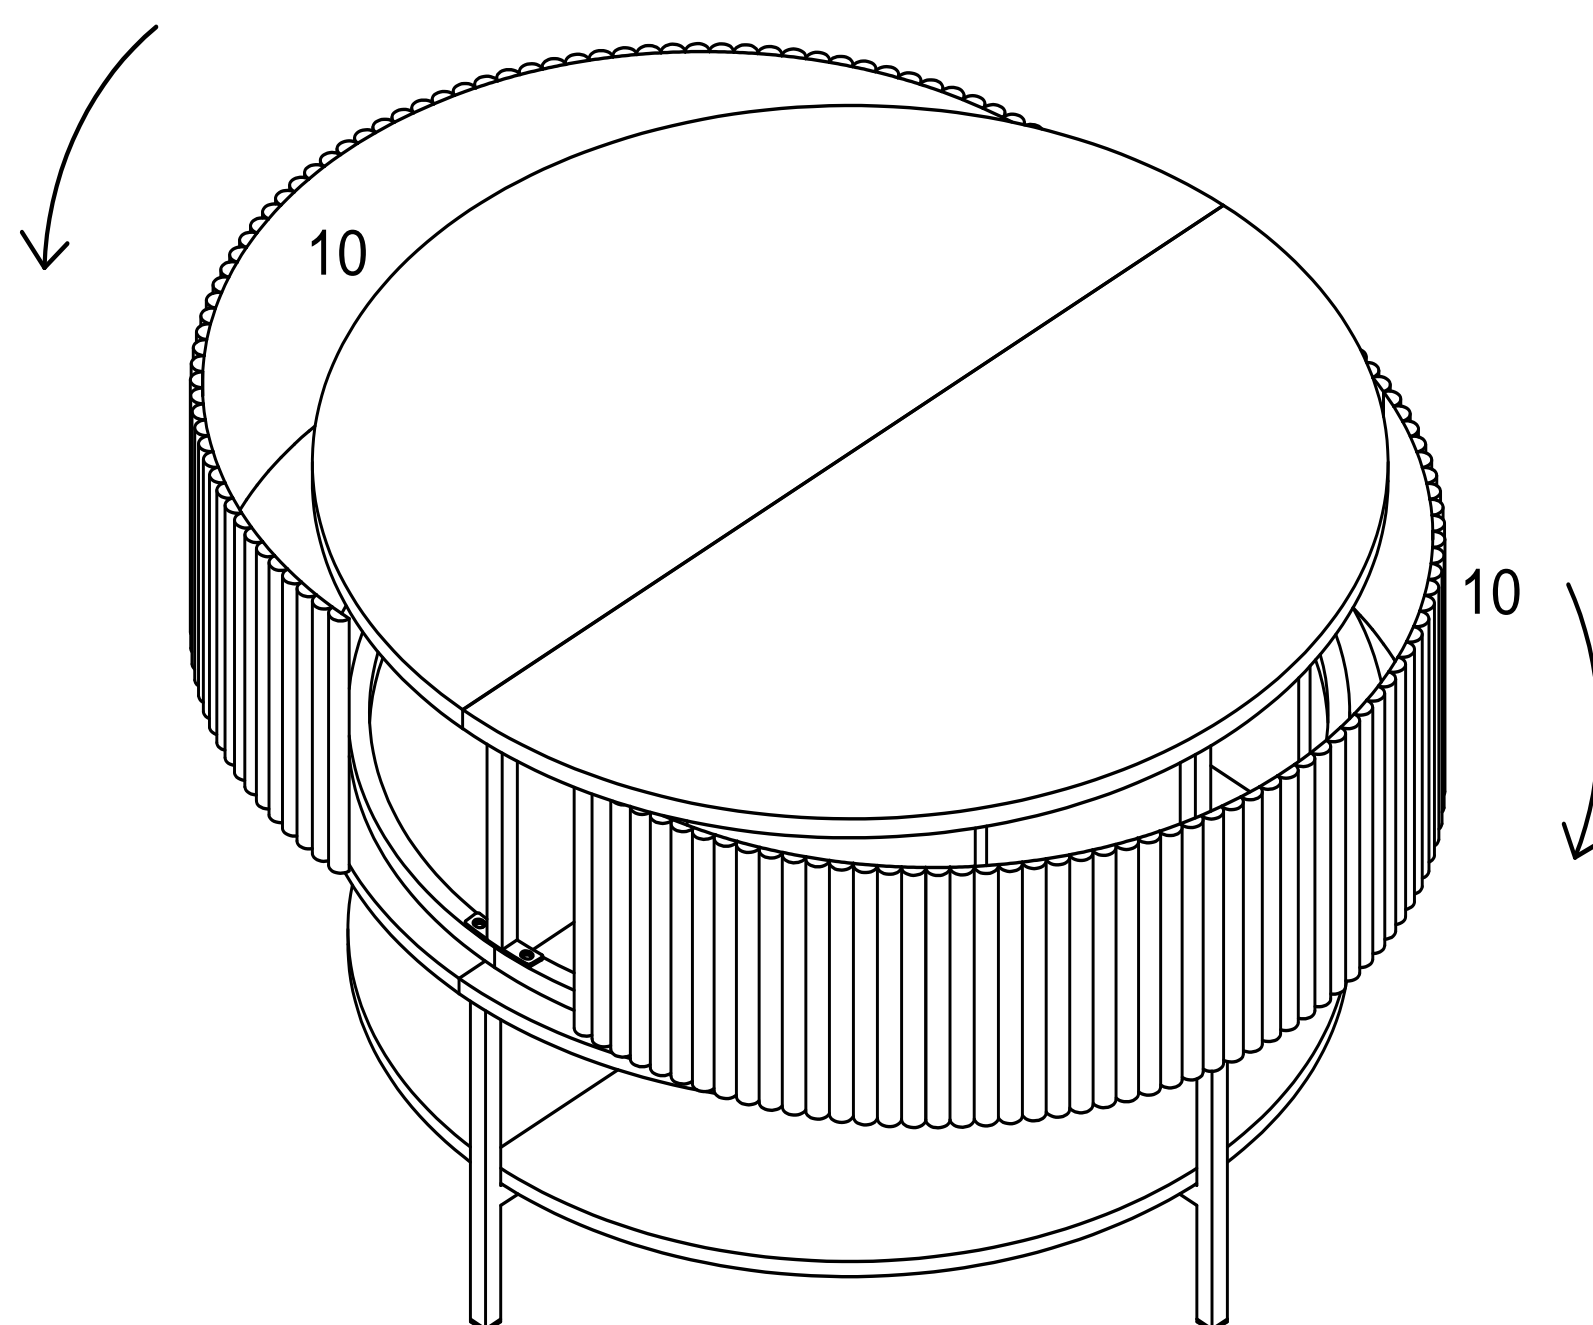

15

Adjust the foot pads to stabilize the coffee table.

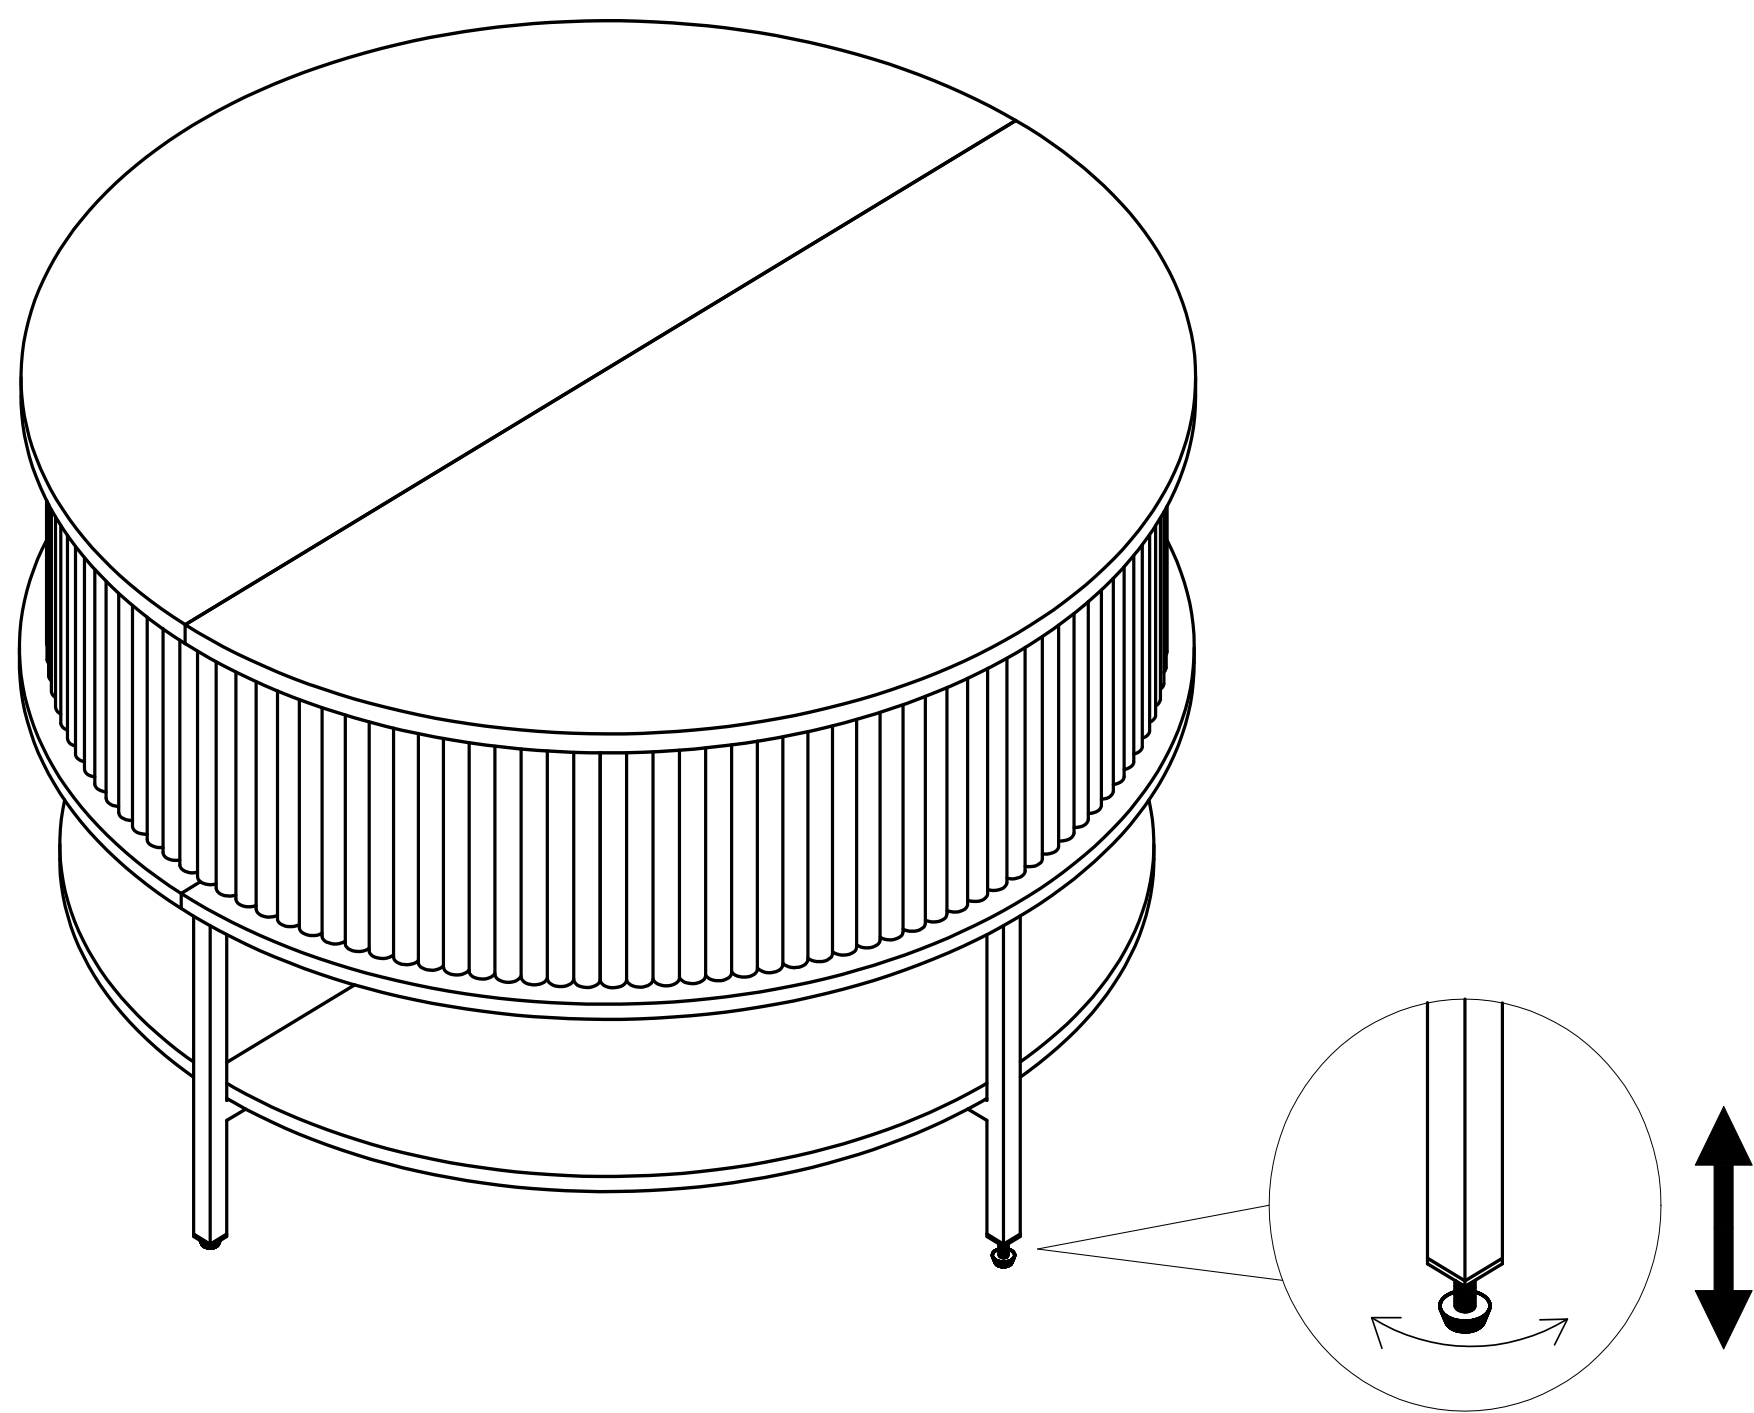

16

