

Product Assembly Instructions

Item # : LCNYBAWHBLK26 / LCNYBAWHOK26 Noely 26" Swivel Barstool
LCNYBAWHBLK30 / LCNYBAWHOK30 Noely 30" Swivel Barstool







Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment . Please identify and count all parts and compare with the HARDWARE LIST below.







Caution : Please read instructions carefully before unpacking assembly parts. Sharp , exposed staples can cause injury , therefore , for your protection , please remove any exposed staples used in packing.

*** Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance. ***

1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process , and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolt until the assembly is completed.
3. Please put all parts on a smooth , flat surface before assembly , and carefully follow the assembly steps to assemble your newly purchased correctly and efficiently.




PARTS LIST			
NO.	COMPONENT		QTY.
A	Backrest		1 pc
B	Seat Frame		1 pc
C	Swivel Base		1 pc
D	Footrest Ring		1 pc
E	Legs		4 pcs
F	Seat Cushion		1 pc

HARDWARE LIST			
NO.	COMPONENT		QTY.
1	JCBC Bolt M6 x 40mm		18 pcs
2	JCBC Bolt M6 x 30mm		4 pcs
3	Spring Washer		22 pcs
4	Flat Washer		18 pcs
5	CB Screw M4 x 38mm		4 pcs
6	Allen Wrench		1 pc


* Phillips screwdriver not included *

Step 1

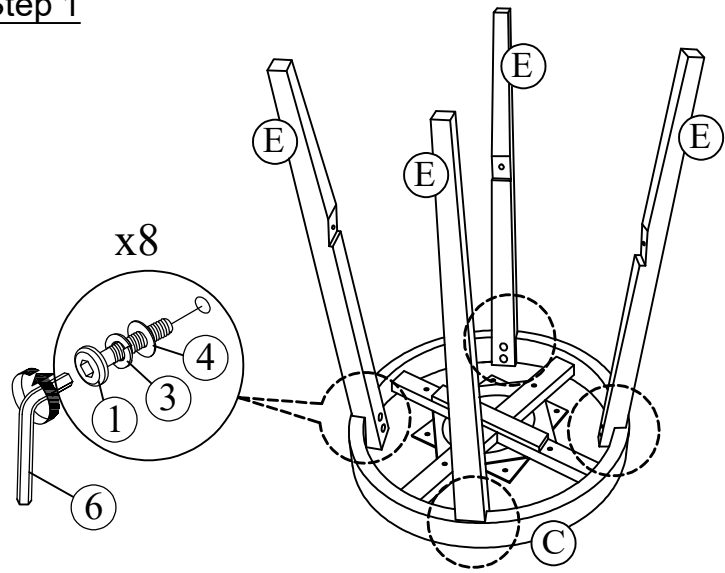


- 1) **Do not tighten all the bolts from this step.** Attach Legs (E) to the Swivel Base (C) using 8pcs JCBC Bolts (1) , 8pcs Spring Washers (3) and 8pcs Flat Washers (4). Loosely tighten with Allen Wrench (6).

Step 2

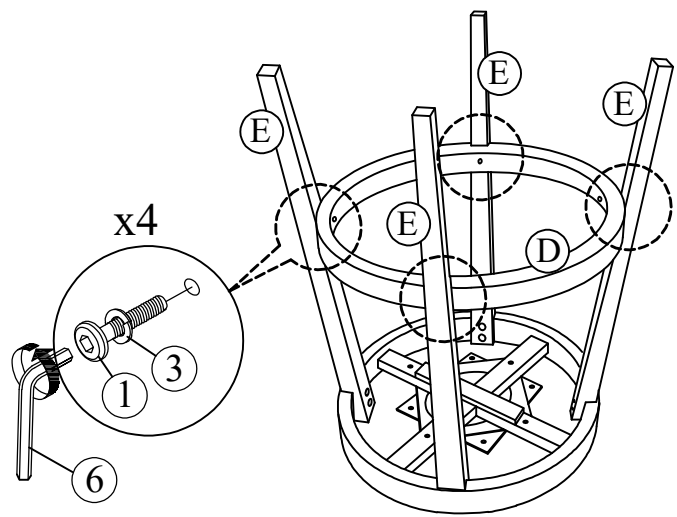


- 1) Attach Footrest Ring (D) to the Legs (E) using 4pcs JCBC Bolts (1) and 4pcs Spring Washers (3) and secure with Allen Wrench (6). Tighten all the bolts securely.

Step 3

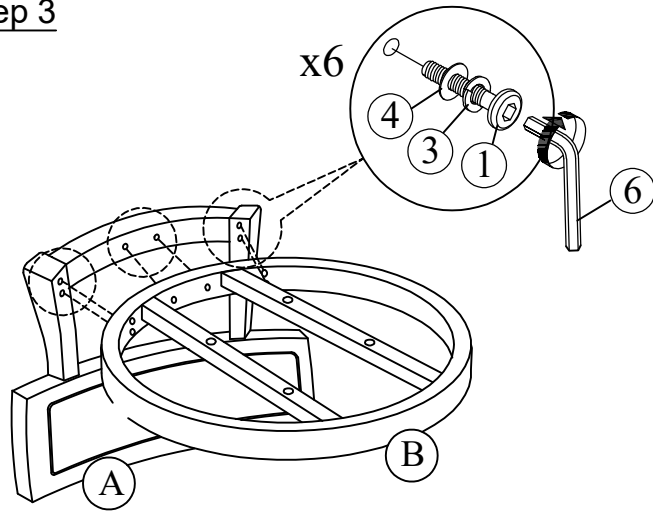


- 1) Attach Seat Frame (B) to the Backrest (A) using 6pcs JCBC Bolts (1) , 6pcs Spring Washers (3) and 6pcs Flat Washers (4) Tighten all bolts securely with Allen Wrench (6).

Step 4

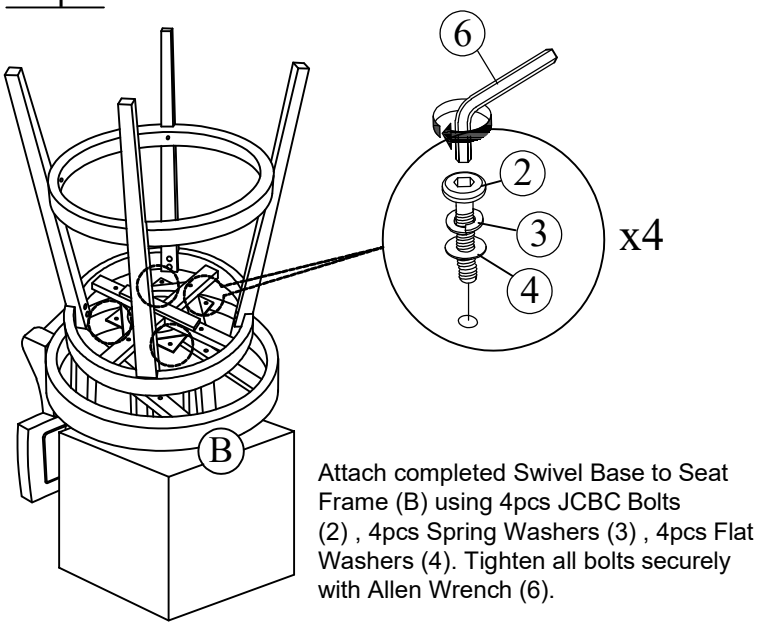

Attach completed Swivel Base to Seat Frame (B) using 4pcs JCBC Bolts (2) , 4pcs Spring Washers (3) , 4pcs Flat Washers (4). Tighten all bolts securely with Allen Wrench (6).

Step 5

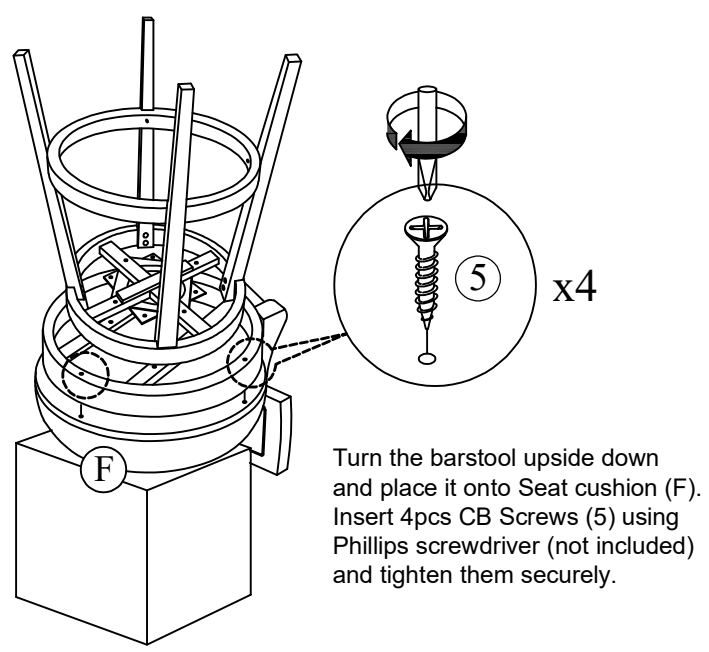

Turn the barstool upside down and place it onto Seat cushion (F). Insert 4pcs CB Screws (5) using Phillips screwdriver (not included) and tighten them securely.

