



ASSEMBLY INSTRUCTION
SKU CODE: (BW00334)















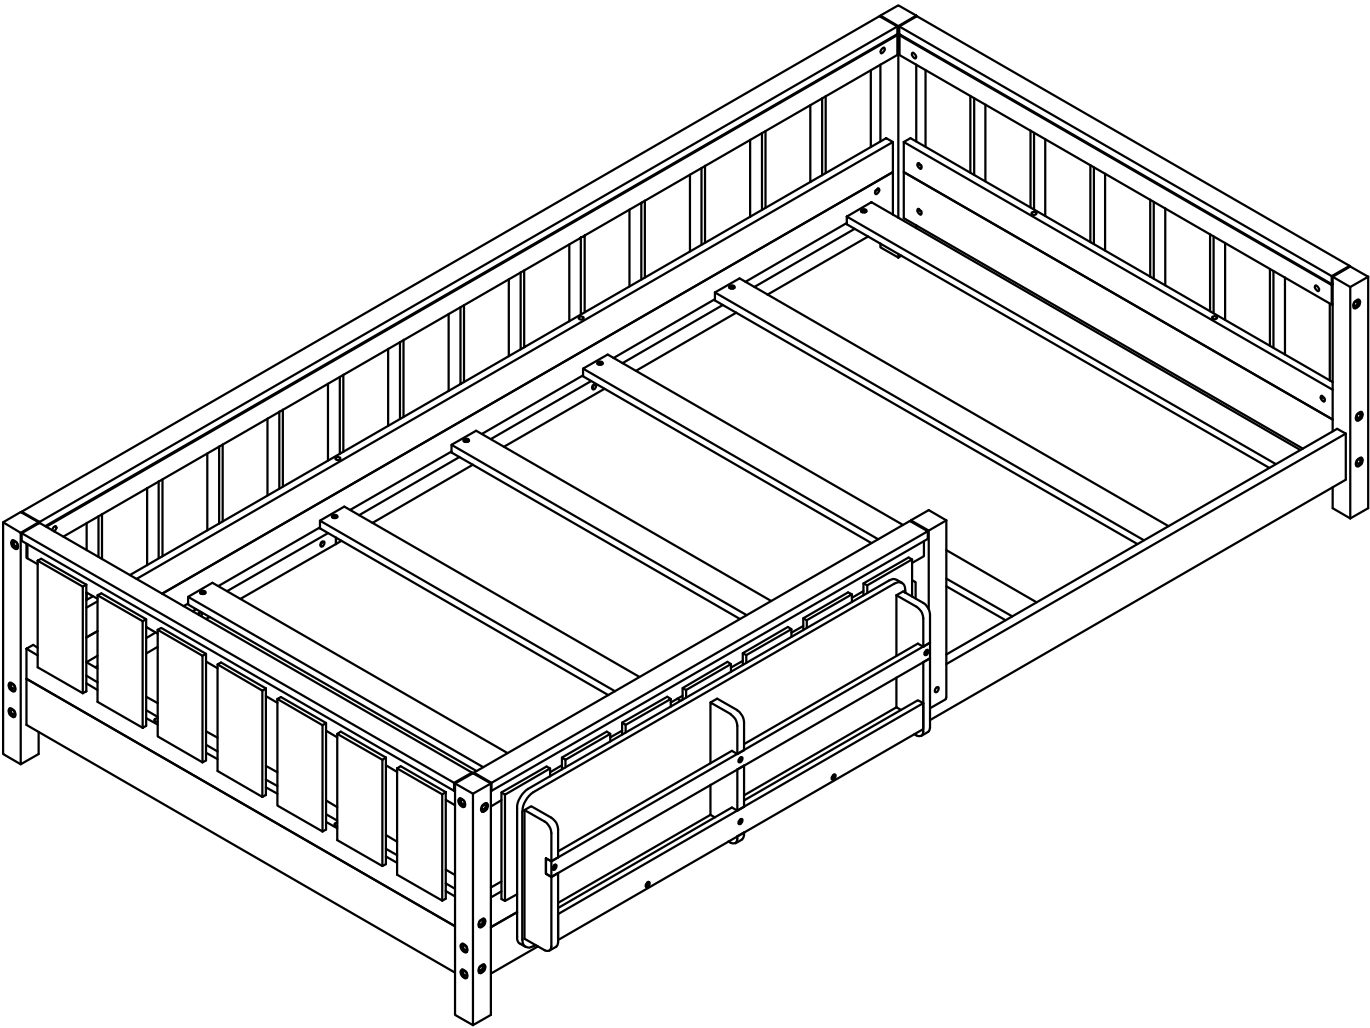


Bed type	Length	Width	Thickness
Twin Standard	75"	39"	6" max




This set is included 1 boxes if don't receive full 1 boxes please contact our customer service team.

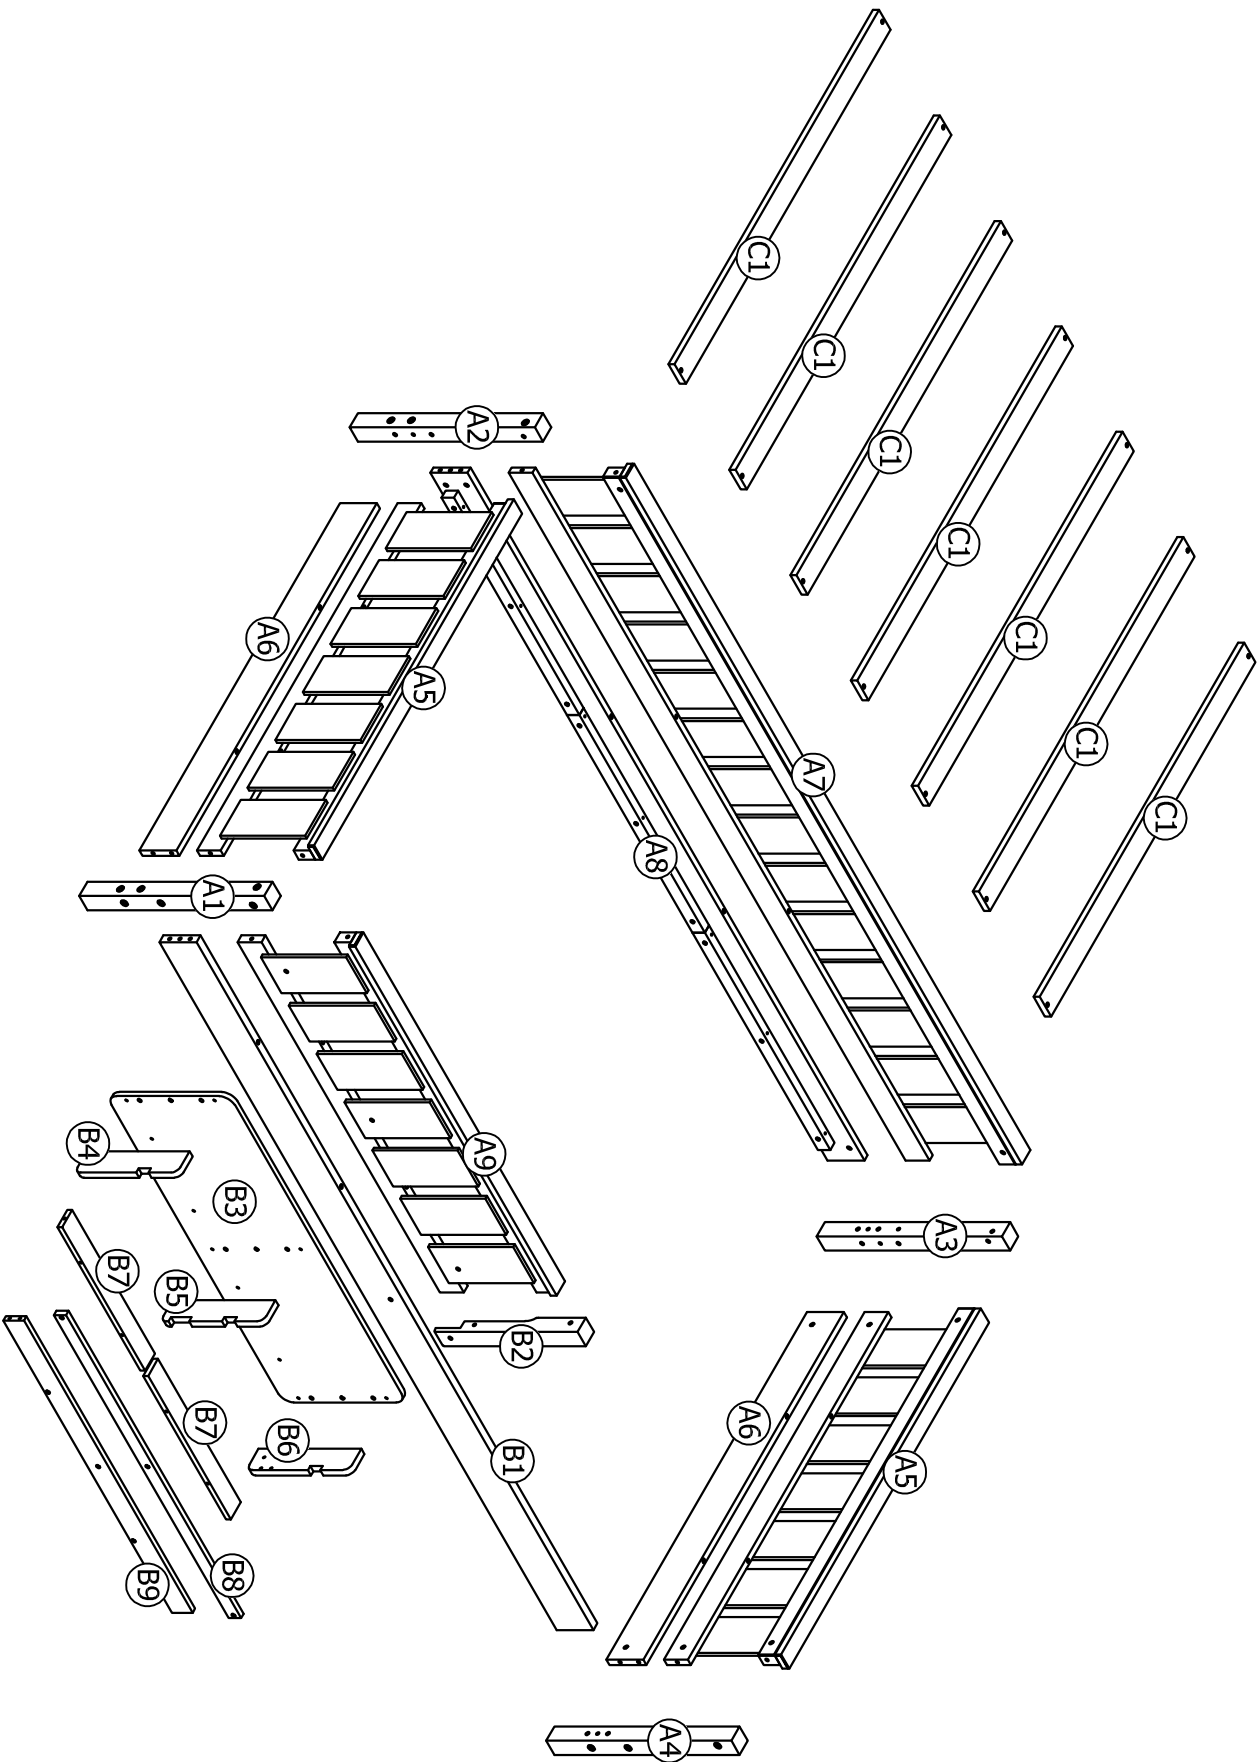


Part List (BW00334)

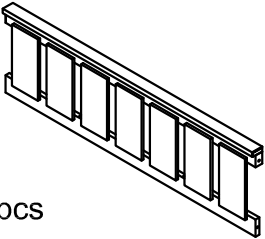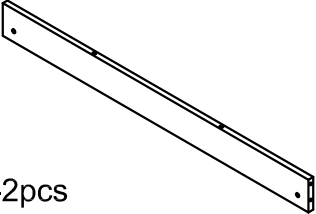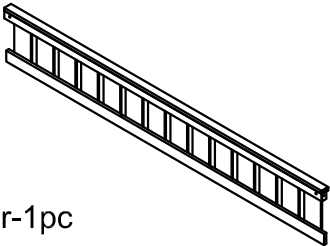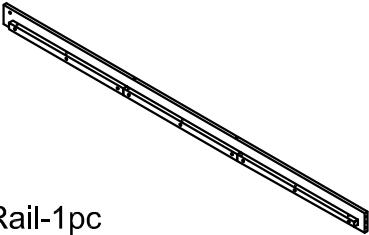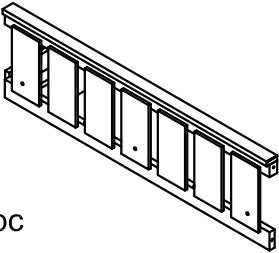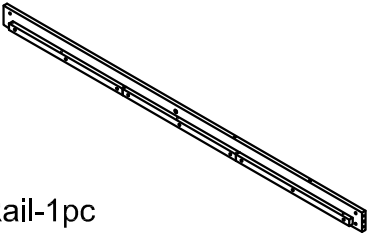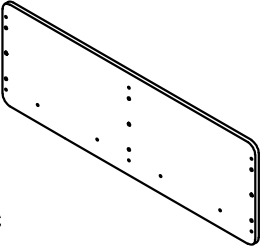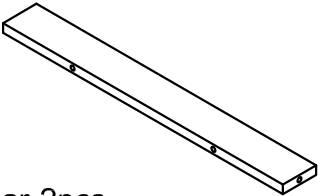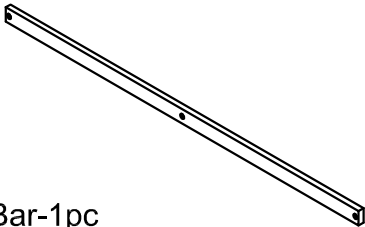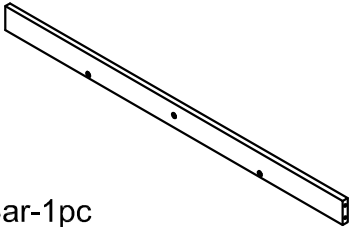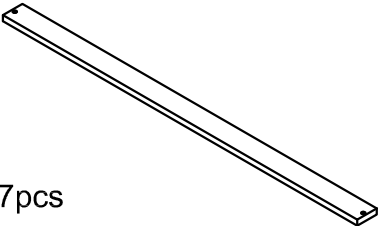A1 Leg-1pc 	A2 Leg-1pc 	A3 Leg-1pc 
A4 Leg-1pc 	A5 WoodBar-2pcs 	A6 WoodBar-2pcs 
A7 WoodBar-1pc 	A8 Side Rail-1pc 	A9 WoodBar-1pc 
B1 Side Rail-1pc 	B2 WoodBar-1pc 	B3 Panel-1pc 
B4 WoodBar-1pc 	B5 WoodBar-1pc 	B6 WoodBar-1pc 
B7 WoodBar-2pcs 	B8 WoodBar-1pc 	B9 WoodBar-1pc 
C1 Slats-7pcs 		

Hardware List (BW00334)

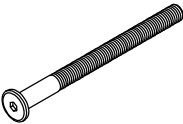

1  Bolts Ø1/4" x 80 mm - 32pcs	2  Ø1/4" x 13 mm Horizontal-Hole bolts - 24pcs	3  Wood dowel Ø8 x 30 mm -12pcs
4  Bolts Ø1/4" x 20 mm - 1pc	5  Ø1/4" x 15 mm Canopy head through - 1pc	6  Wood dowel Ø6 x 30 mm - 22pcs
7  Wood Screws M4 x 30mm- 22pcs	8  Bolts Ø1/4" x 25 mm - 6pcs	9  Bolts Ø1/4" x 35 mm - 3pcs
10  Allen Key - 1pc		



Assembly Tools Required (Not Included)

STEP 1:

X2

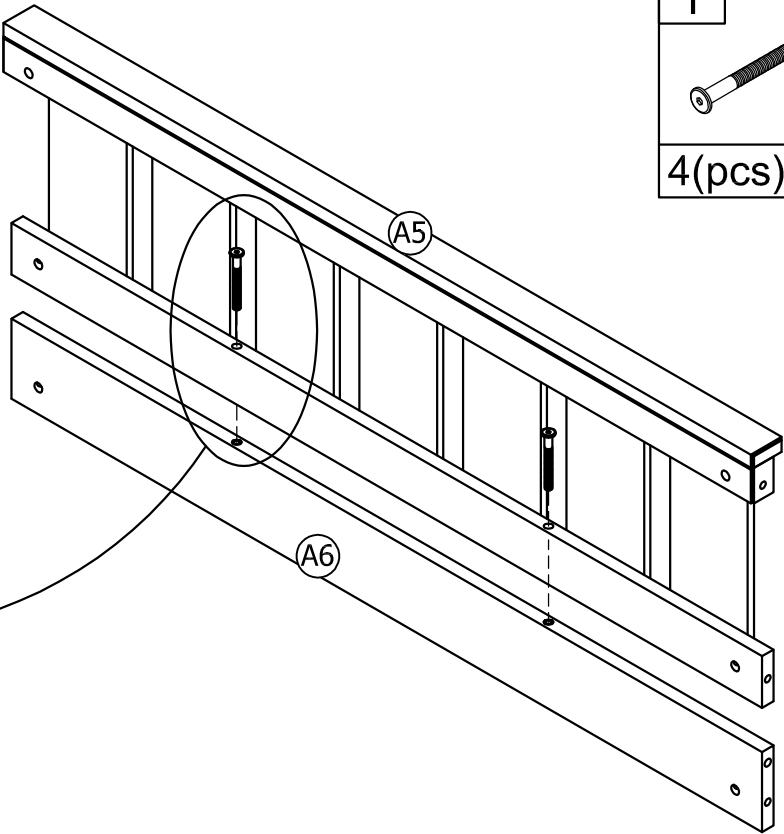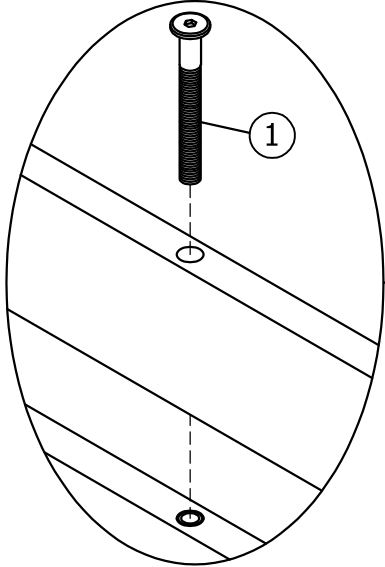


1



4(pcs)


STEP 2:

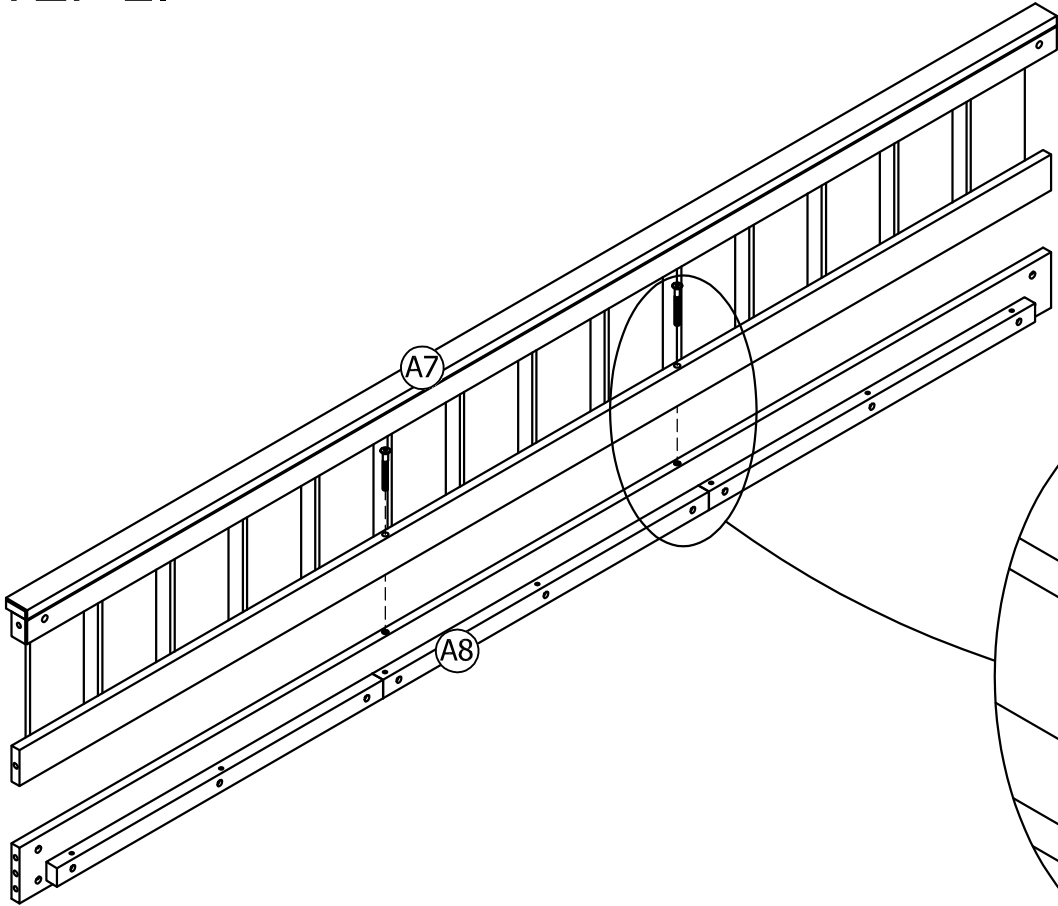

1




2(pcs)

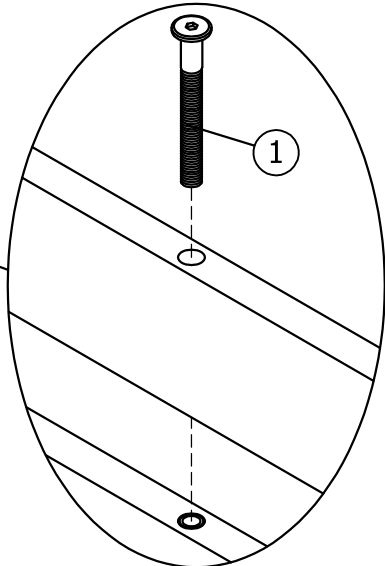

STEP 3:


1

2(pcs)

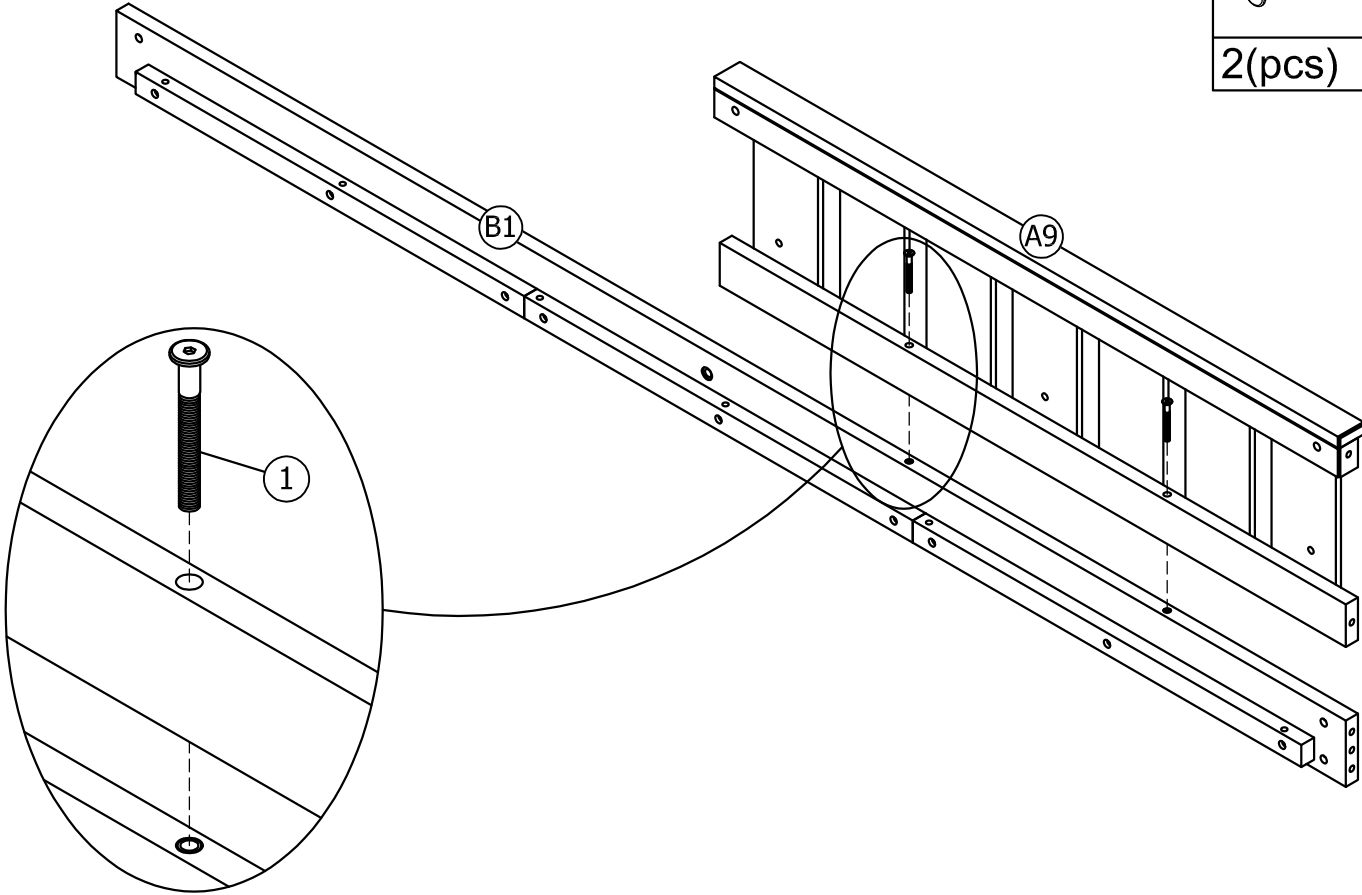


STEP 4:

1	2	3
		
1(pc)	1(pc)	1(pc)

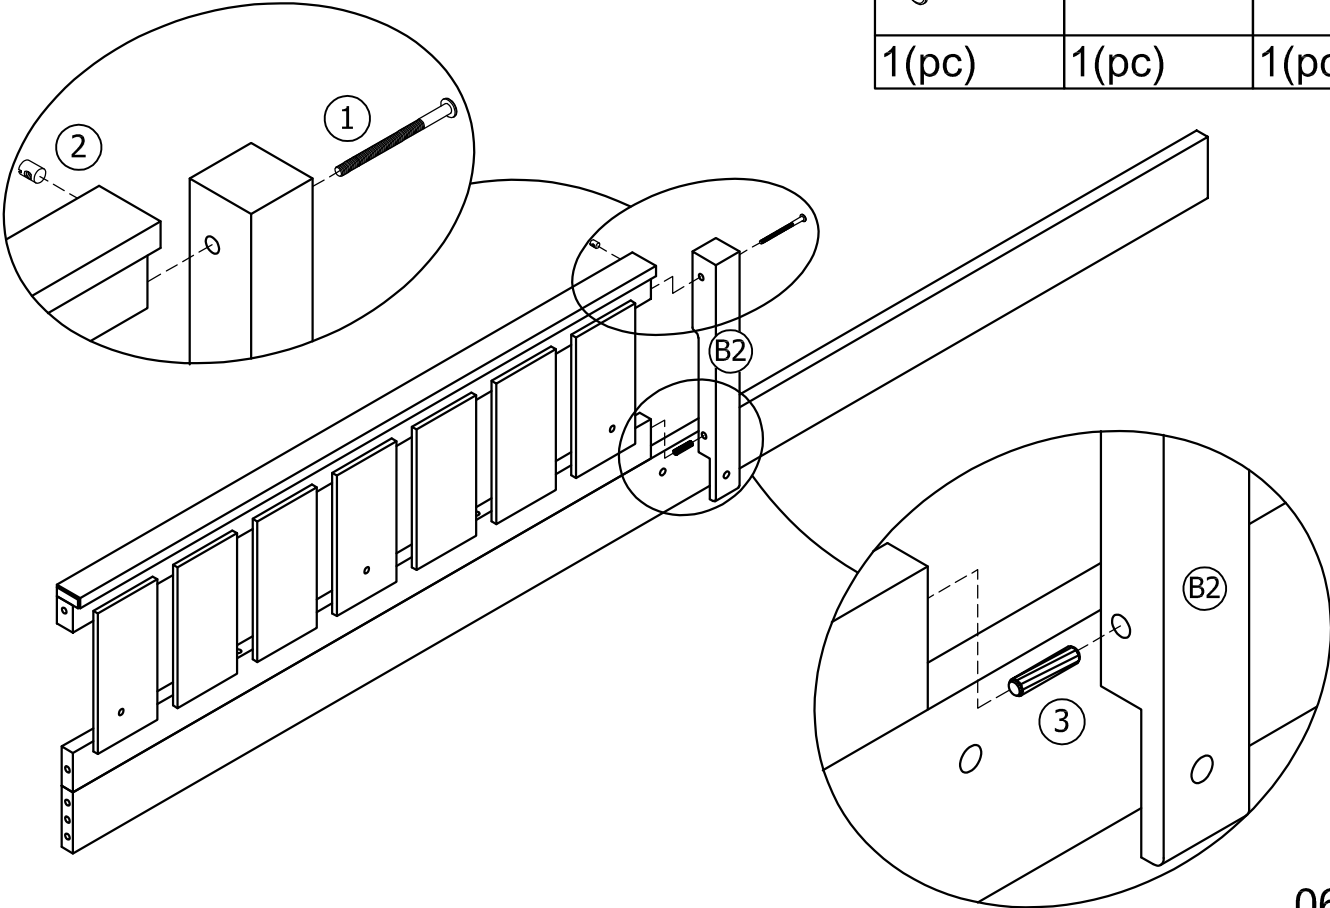


STEP 5:


4	5
	
1(pc)	1(pc)

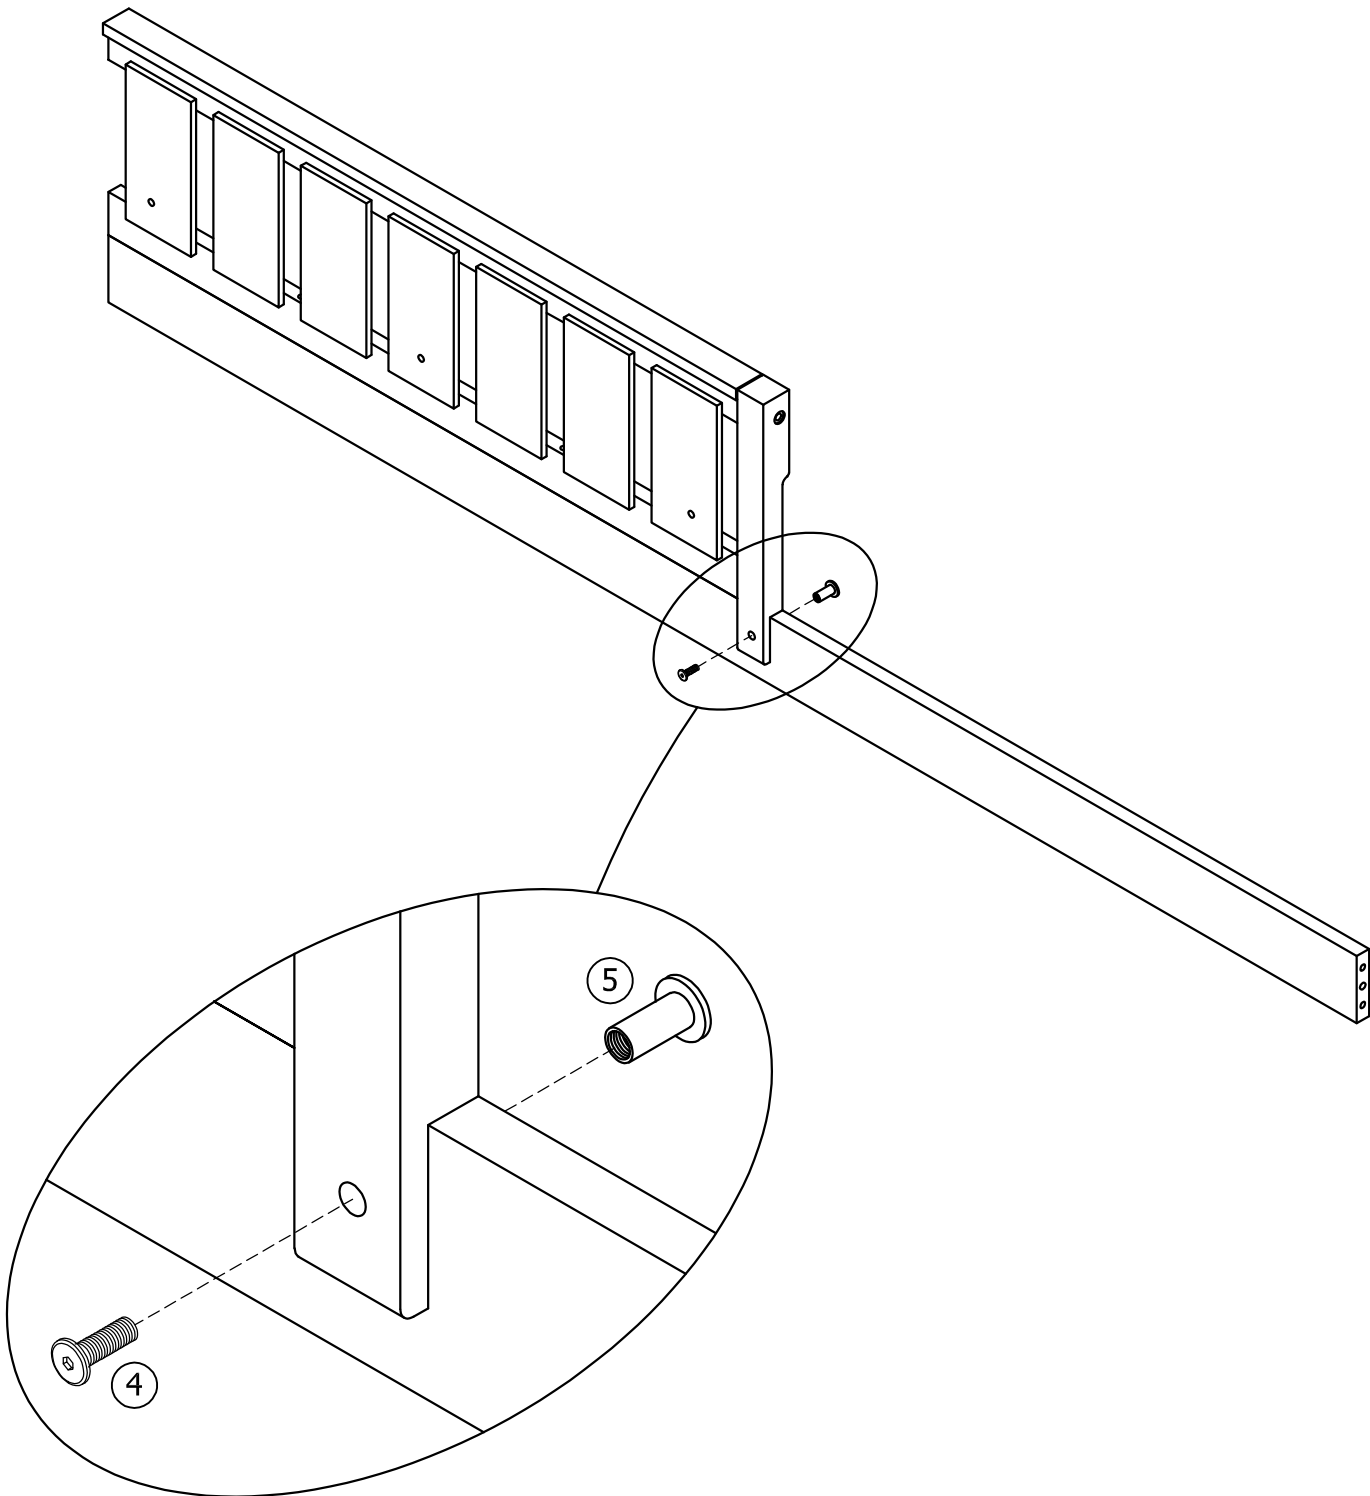


STEP 6:

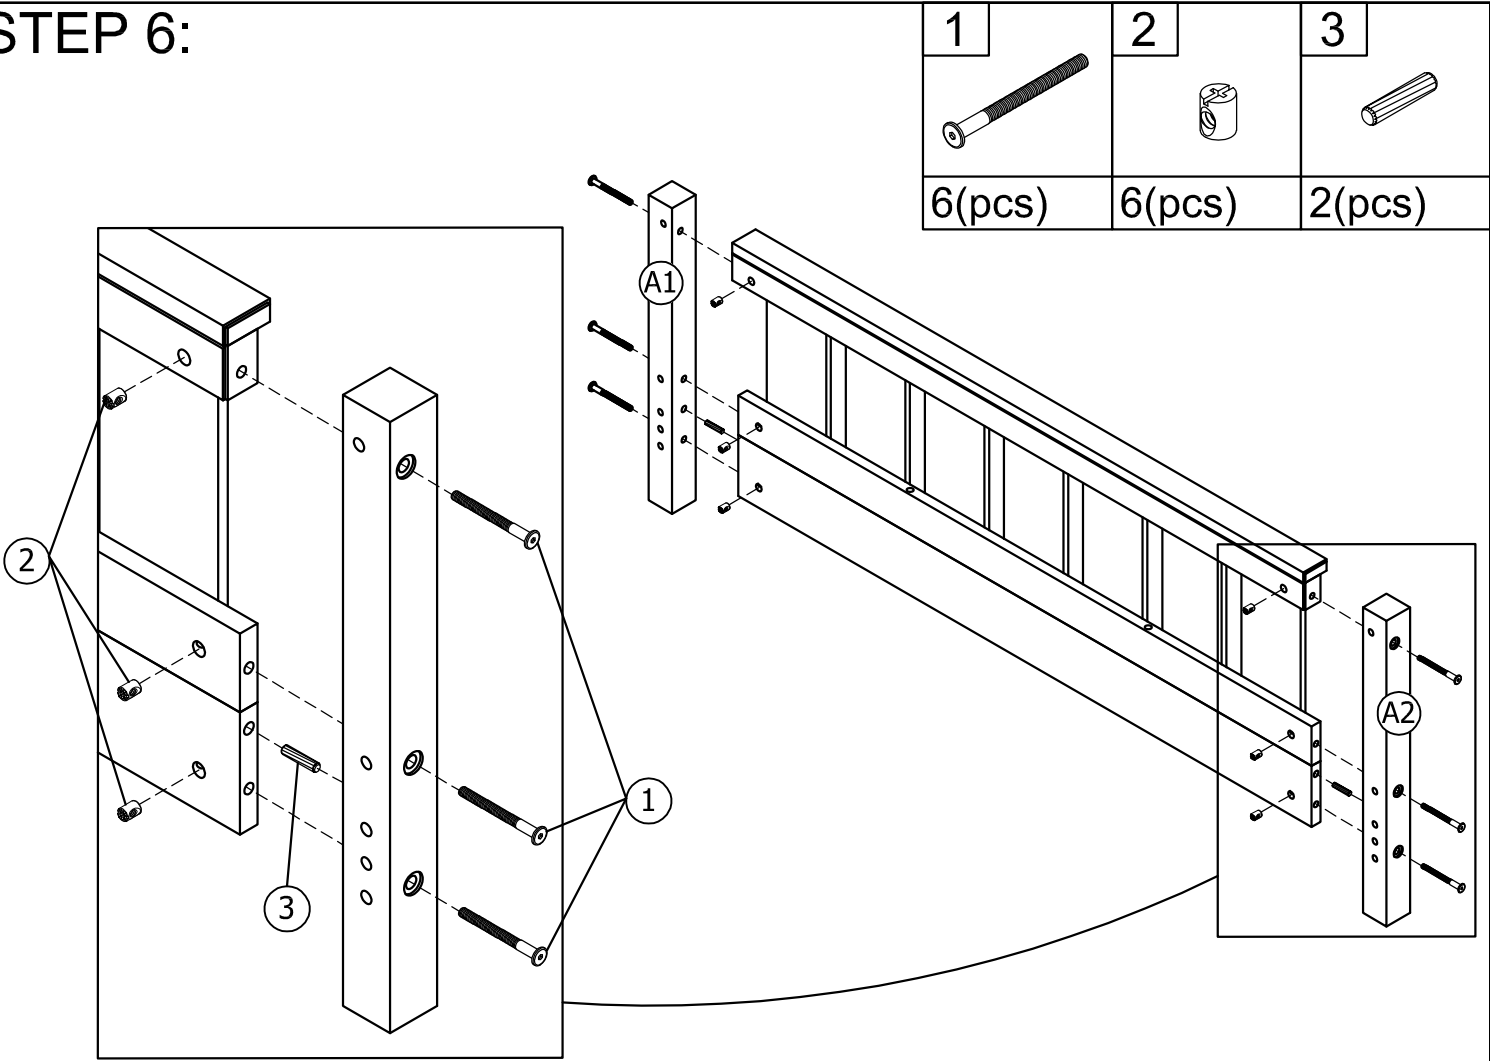


STEP 7:

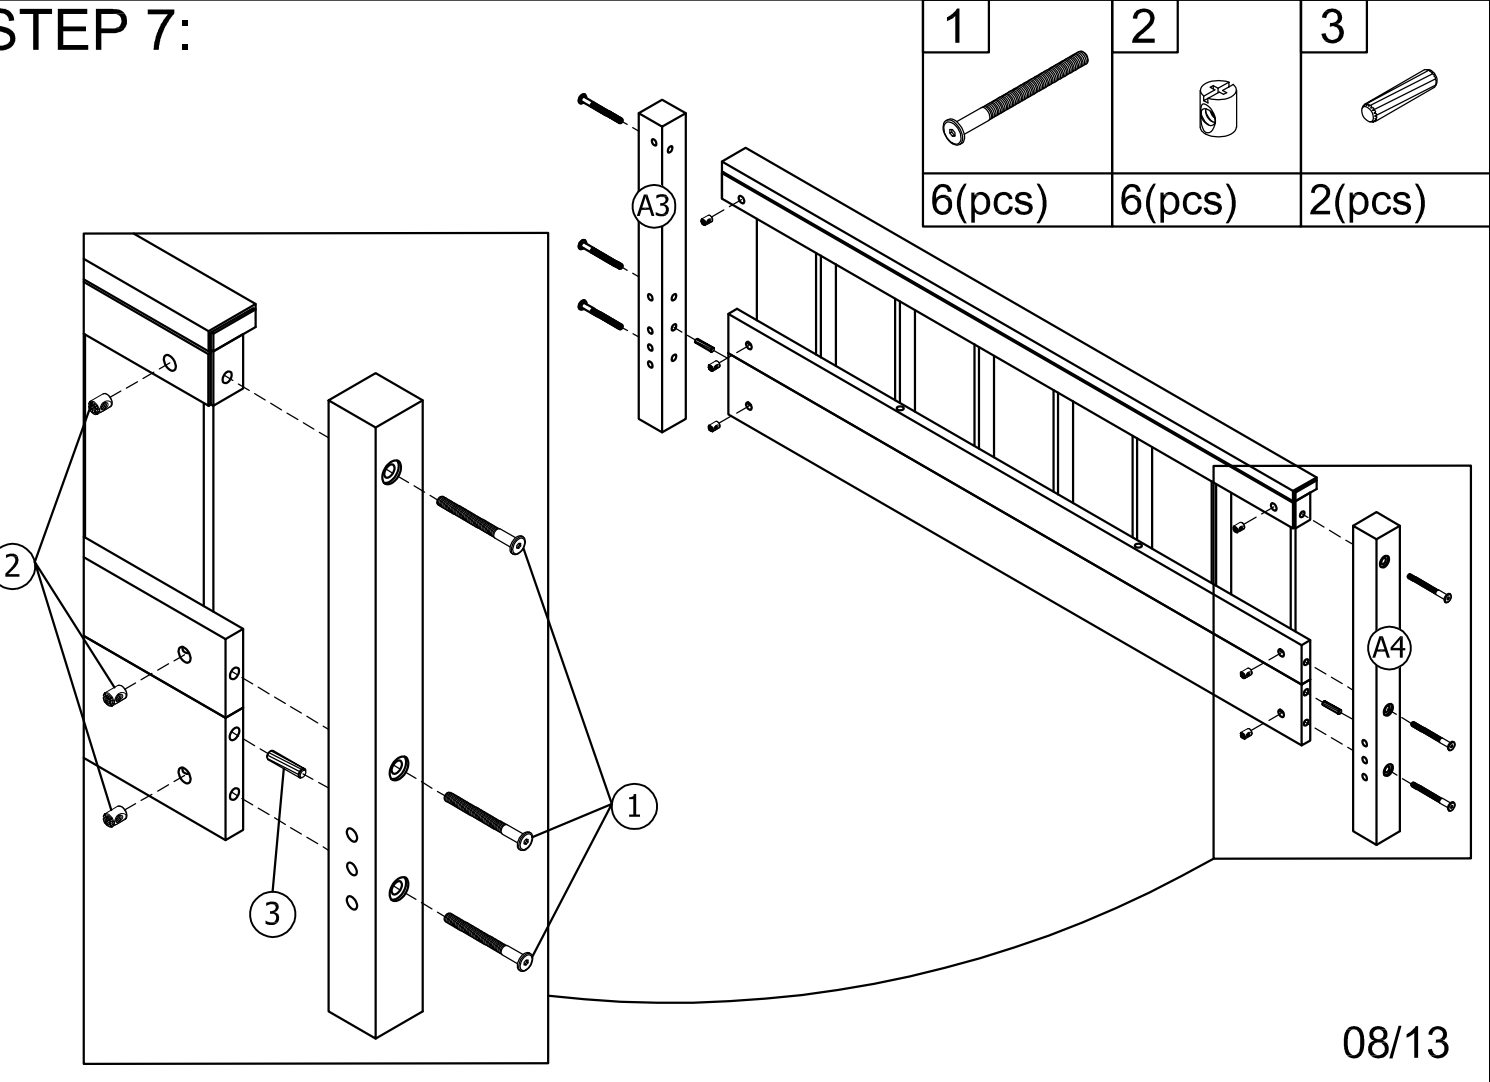


STEP 8:


1	2	3
		
11(pcs)	11(pcs)	7(pc)

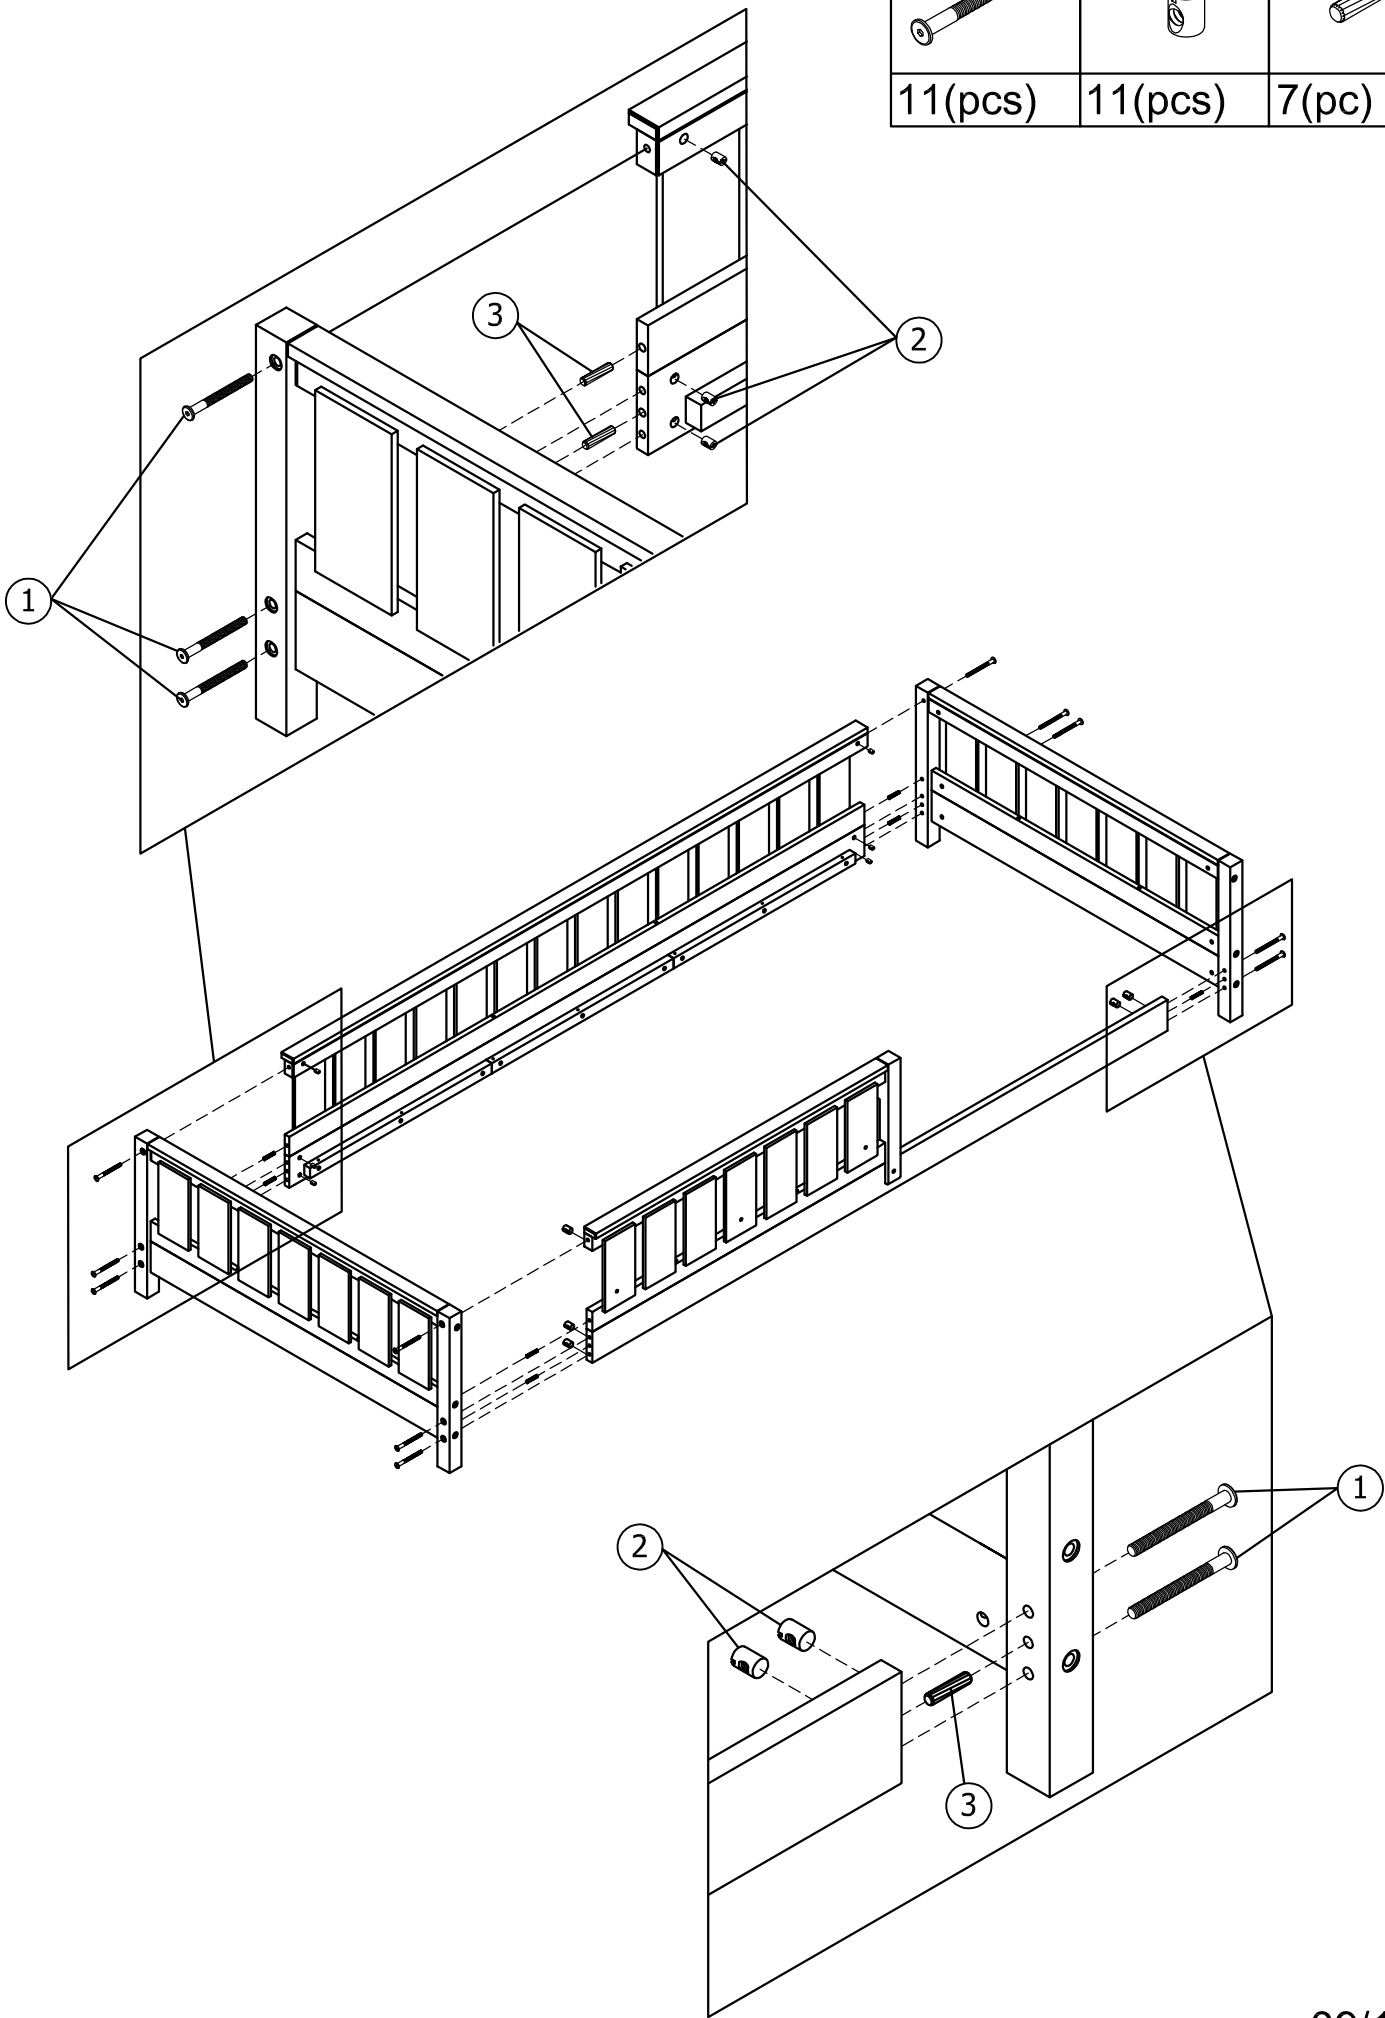


STEP 9:

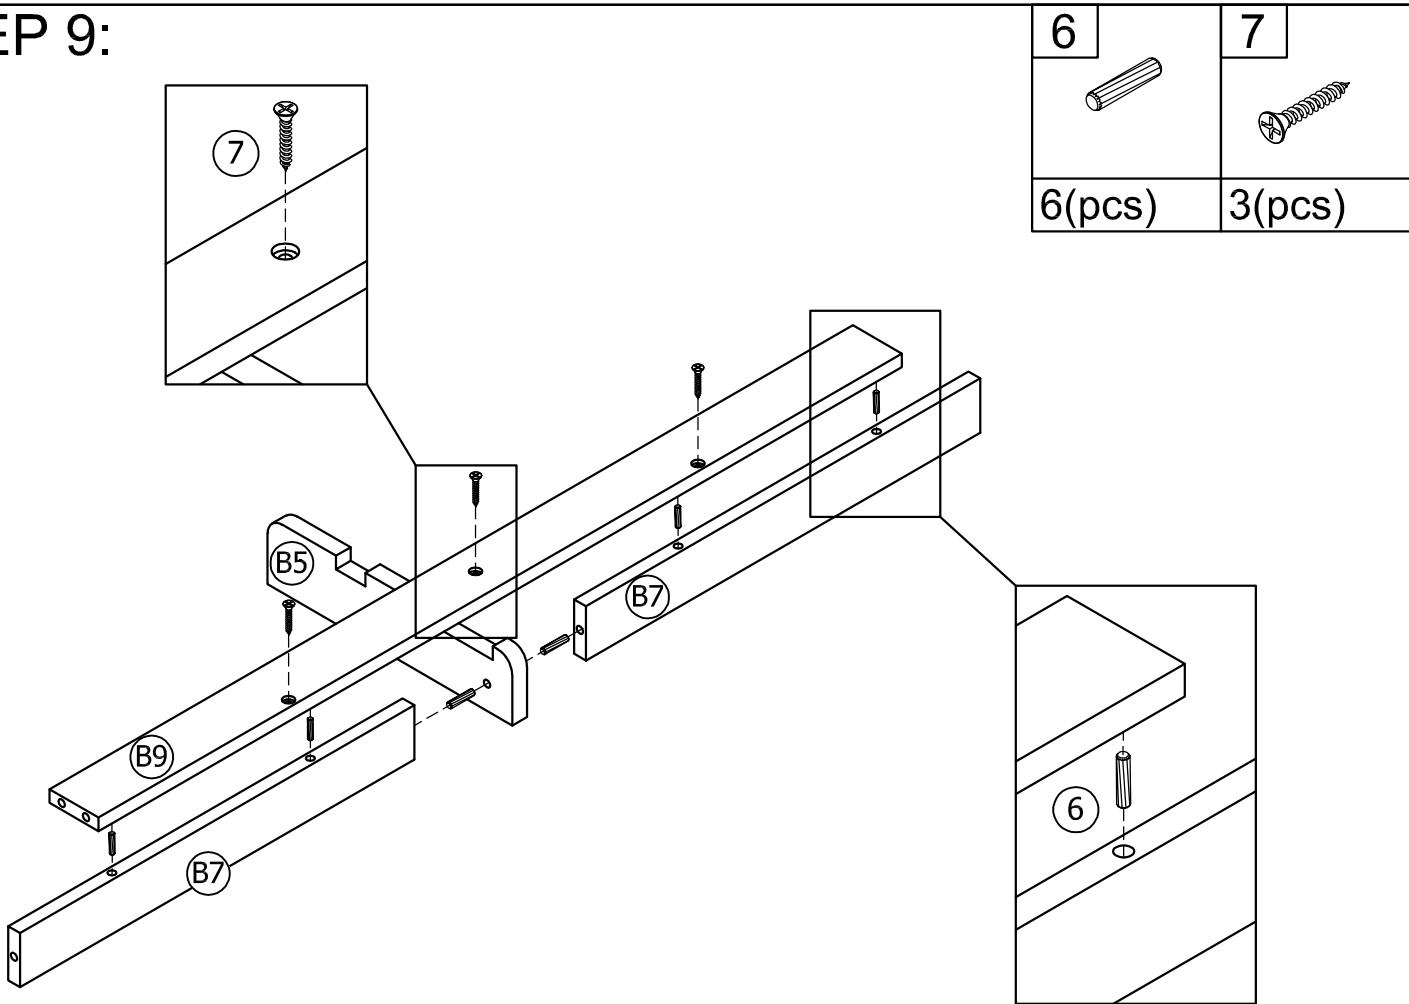

STEP 10:

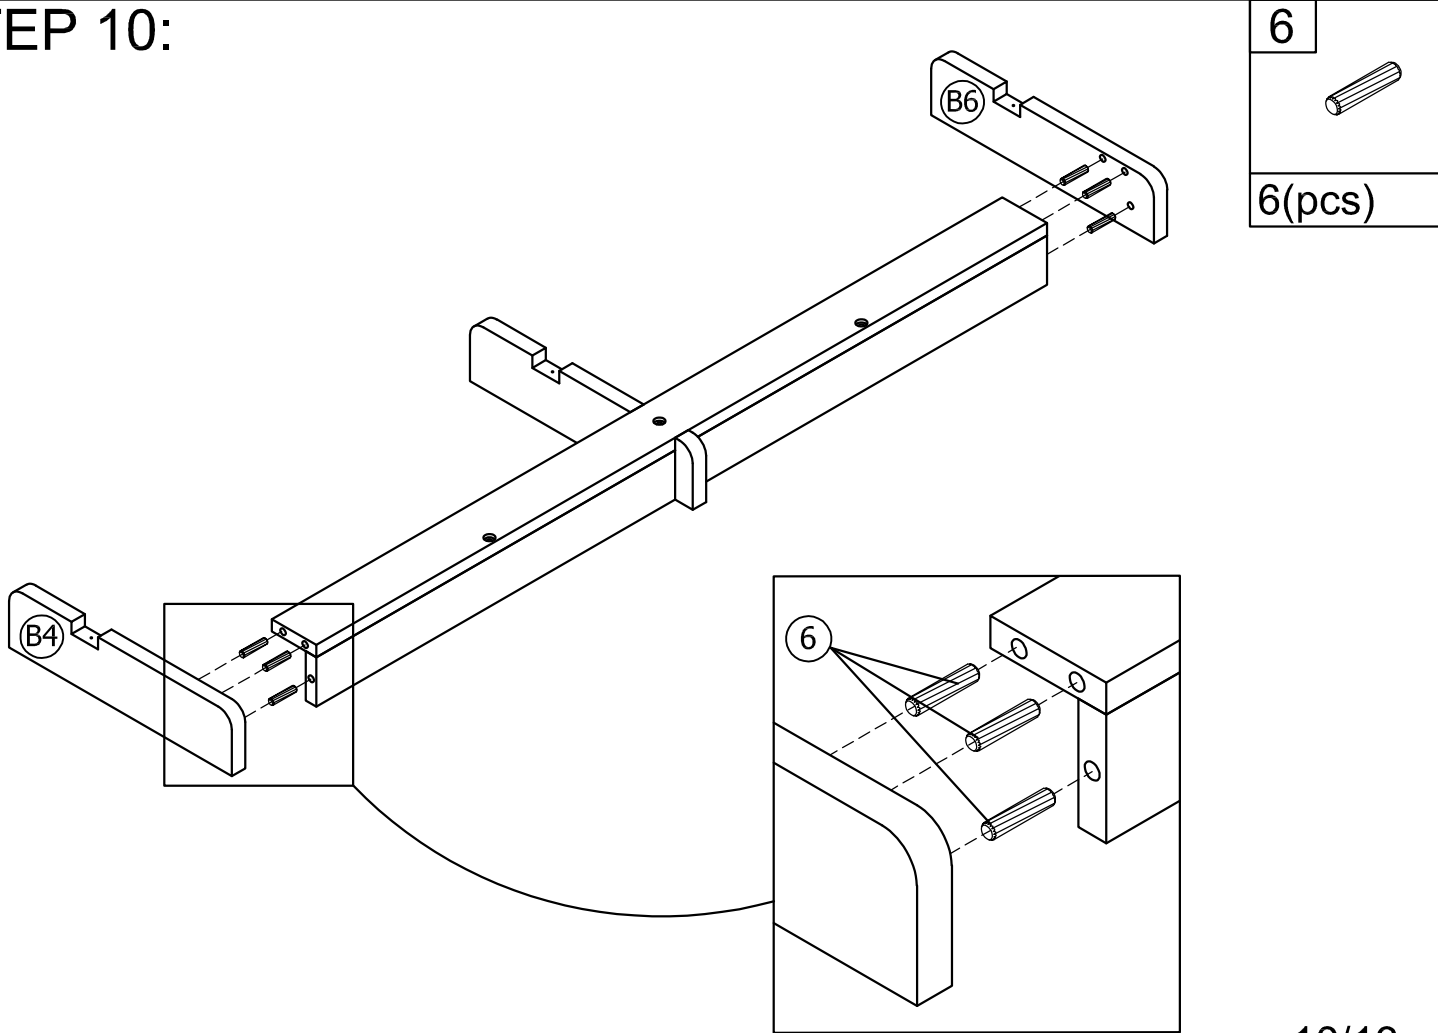

STEP 11:

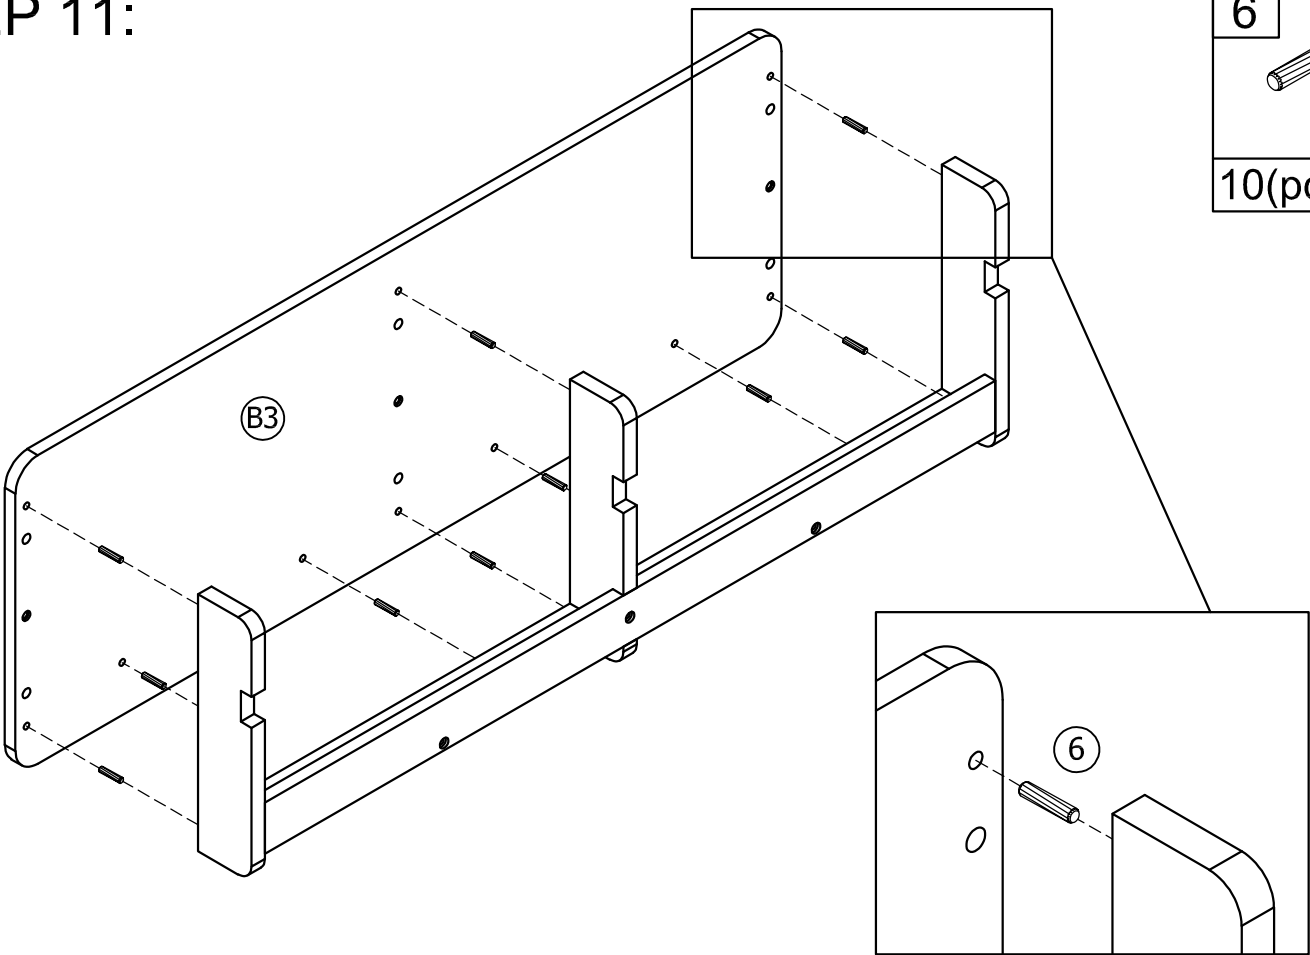


6



10(pcs)

STEP 12:

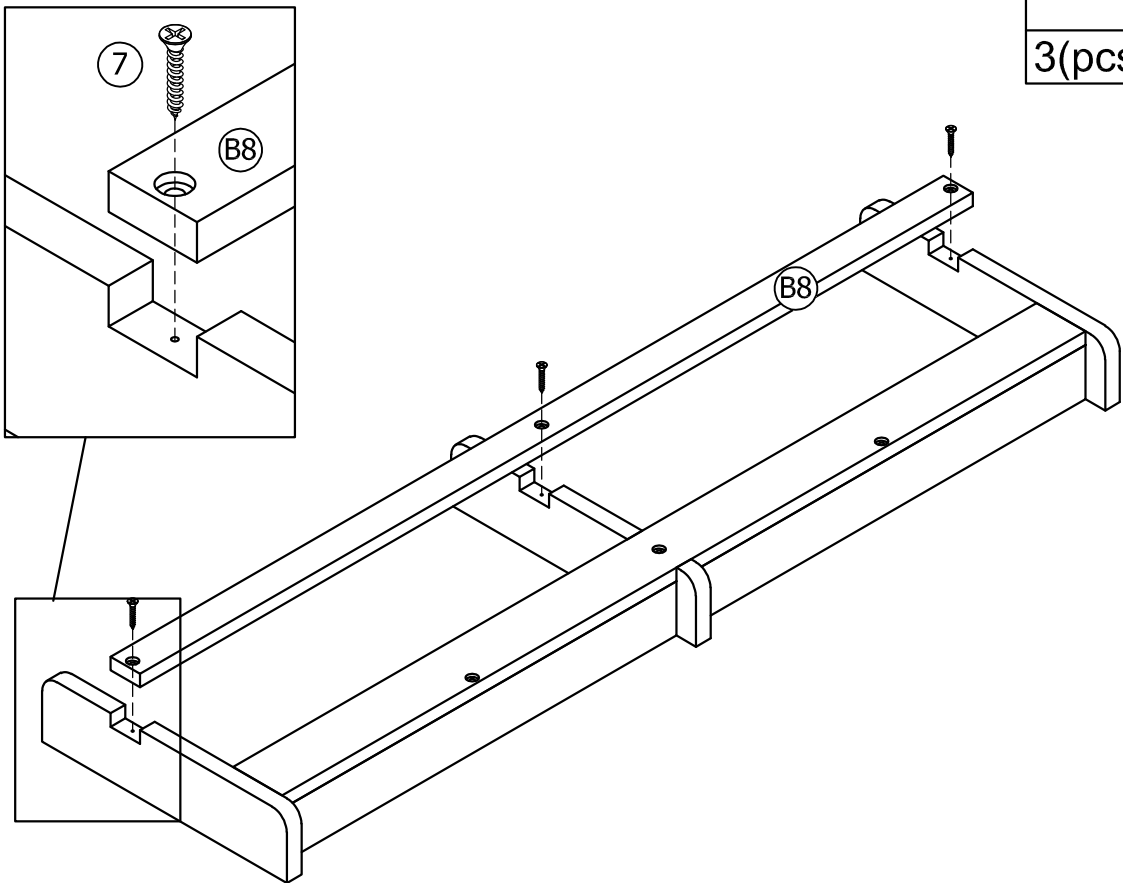


7




3(pcs)

STEP 13:

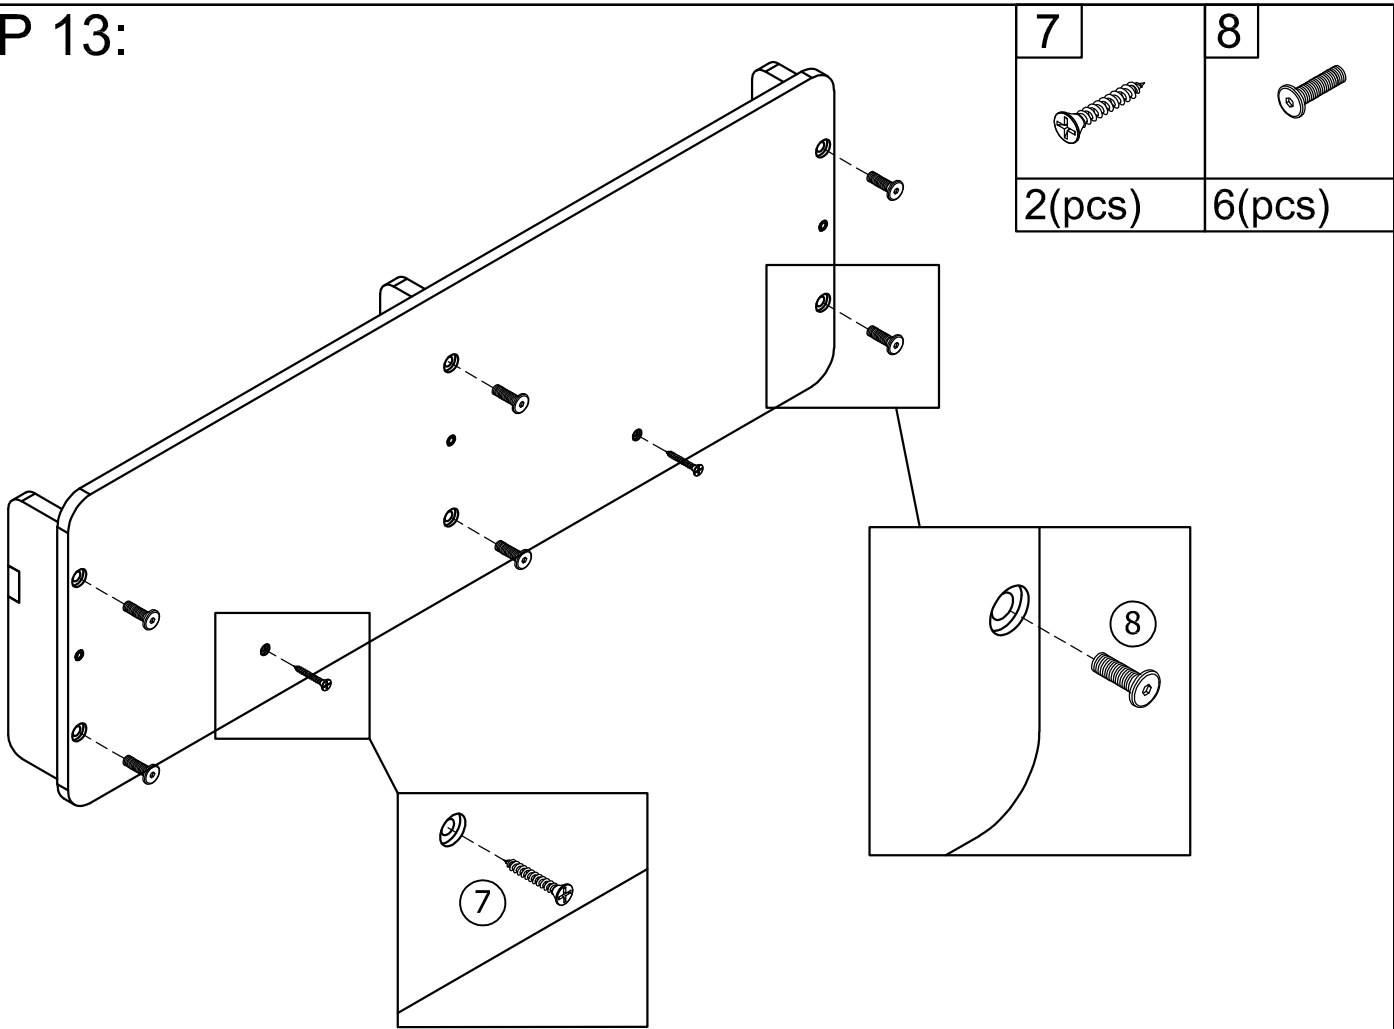

STEP 14:

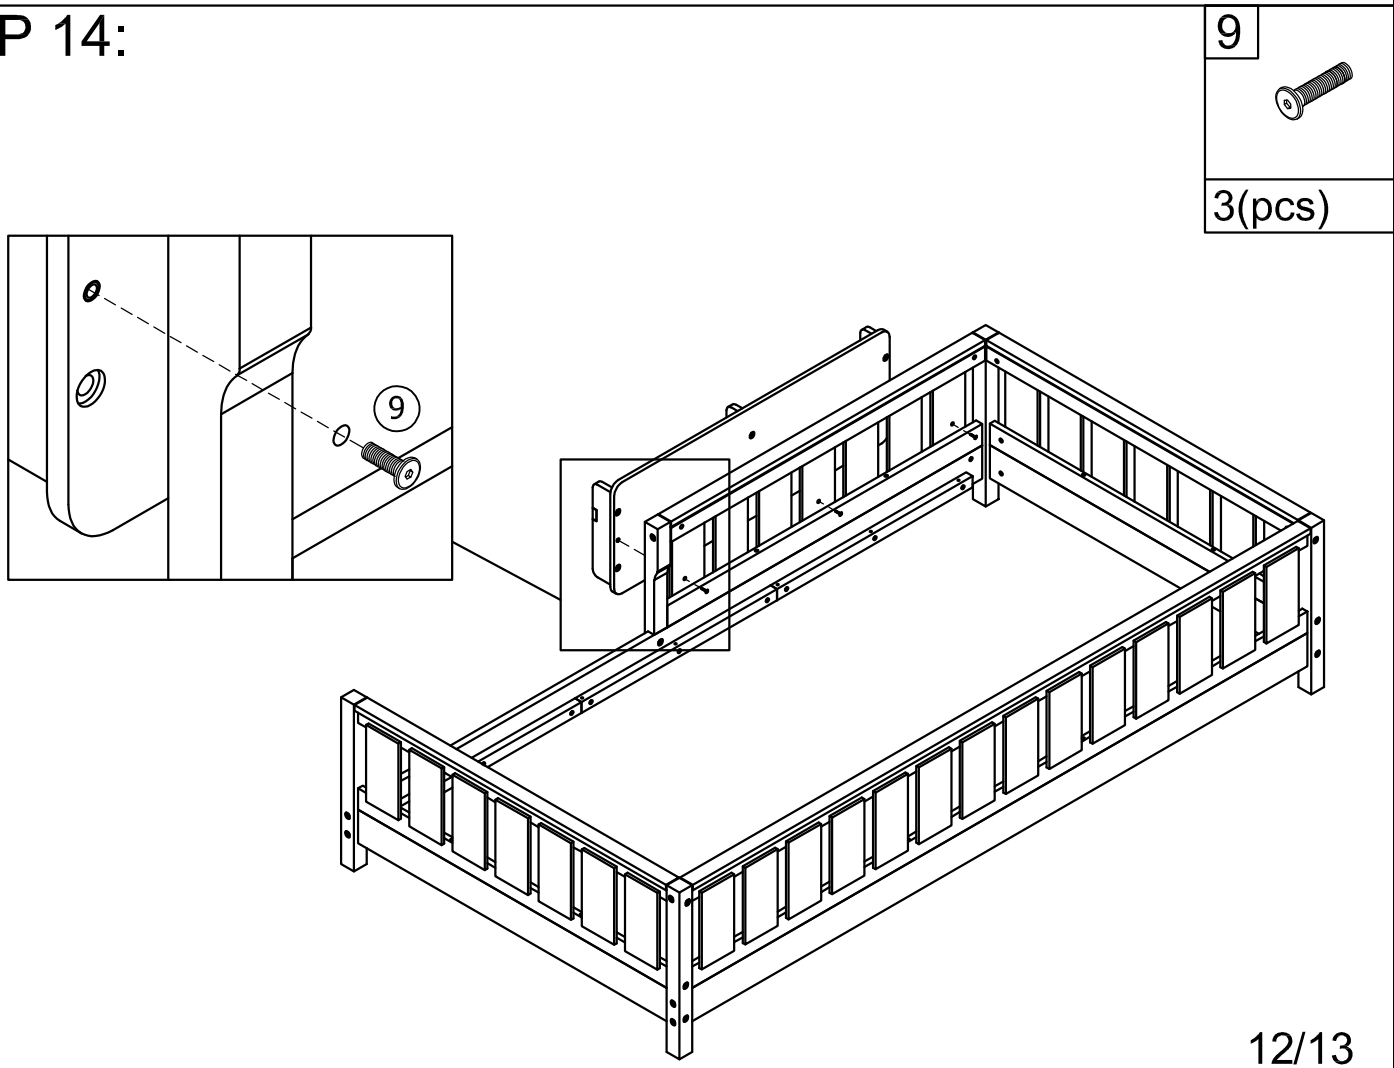

STEP 15:

7



14(pcs)

