



# ASSEMBLY INSTRUCTION







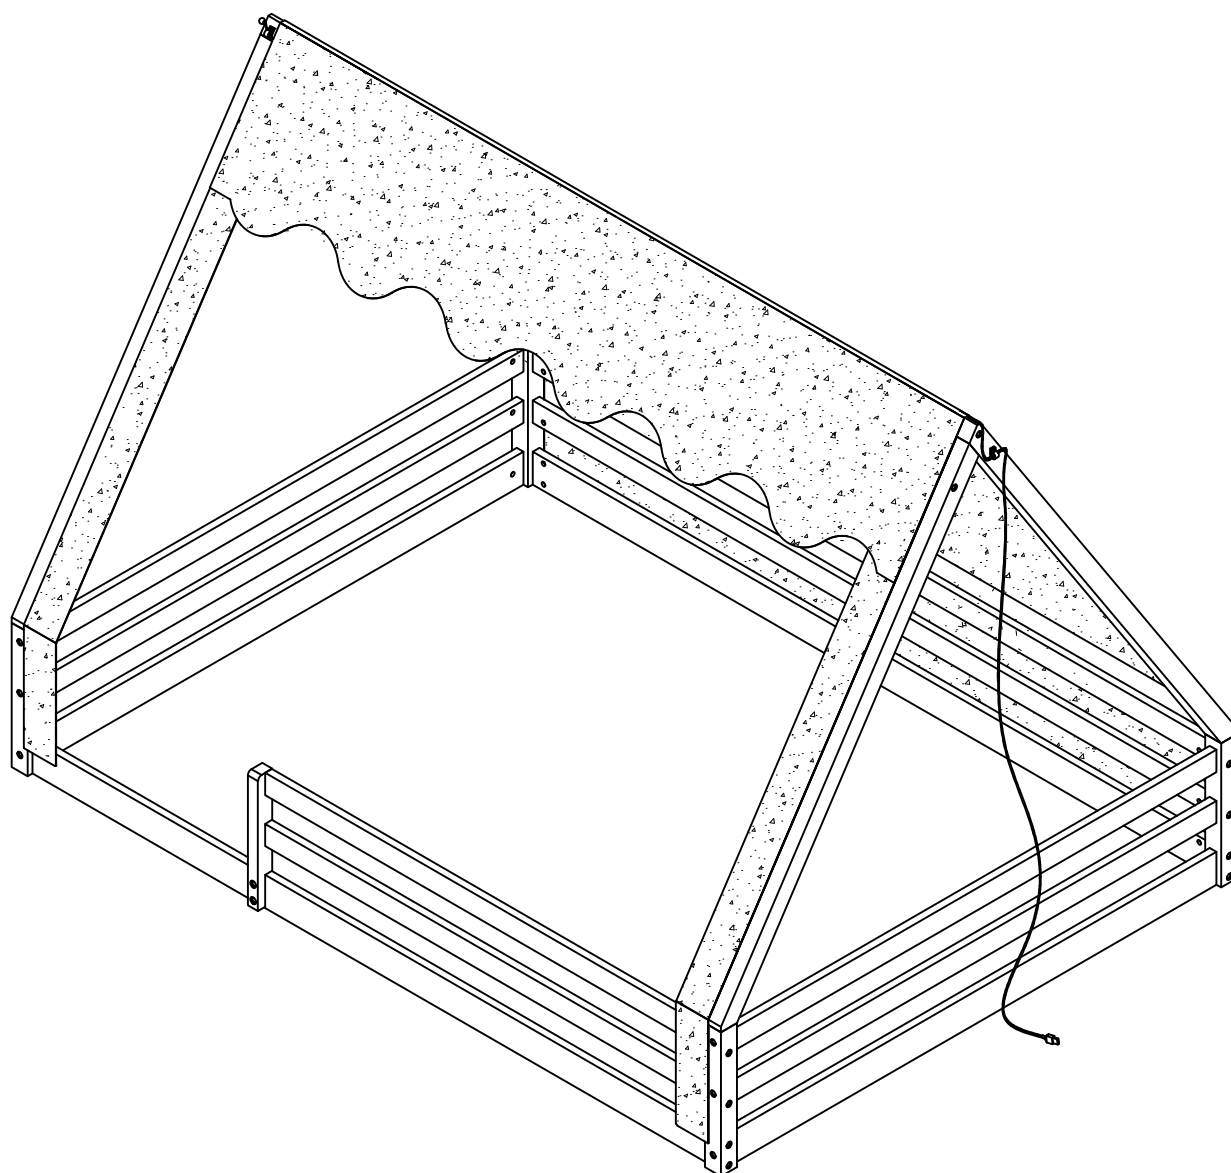









SKU CODE : BW00300

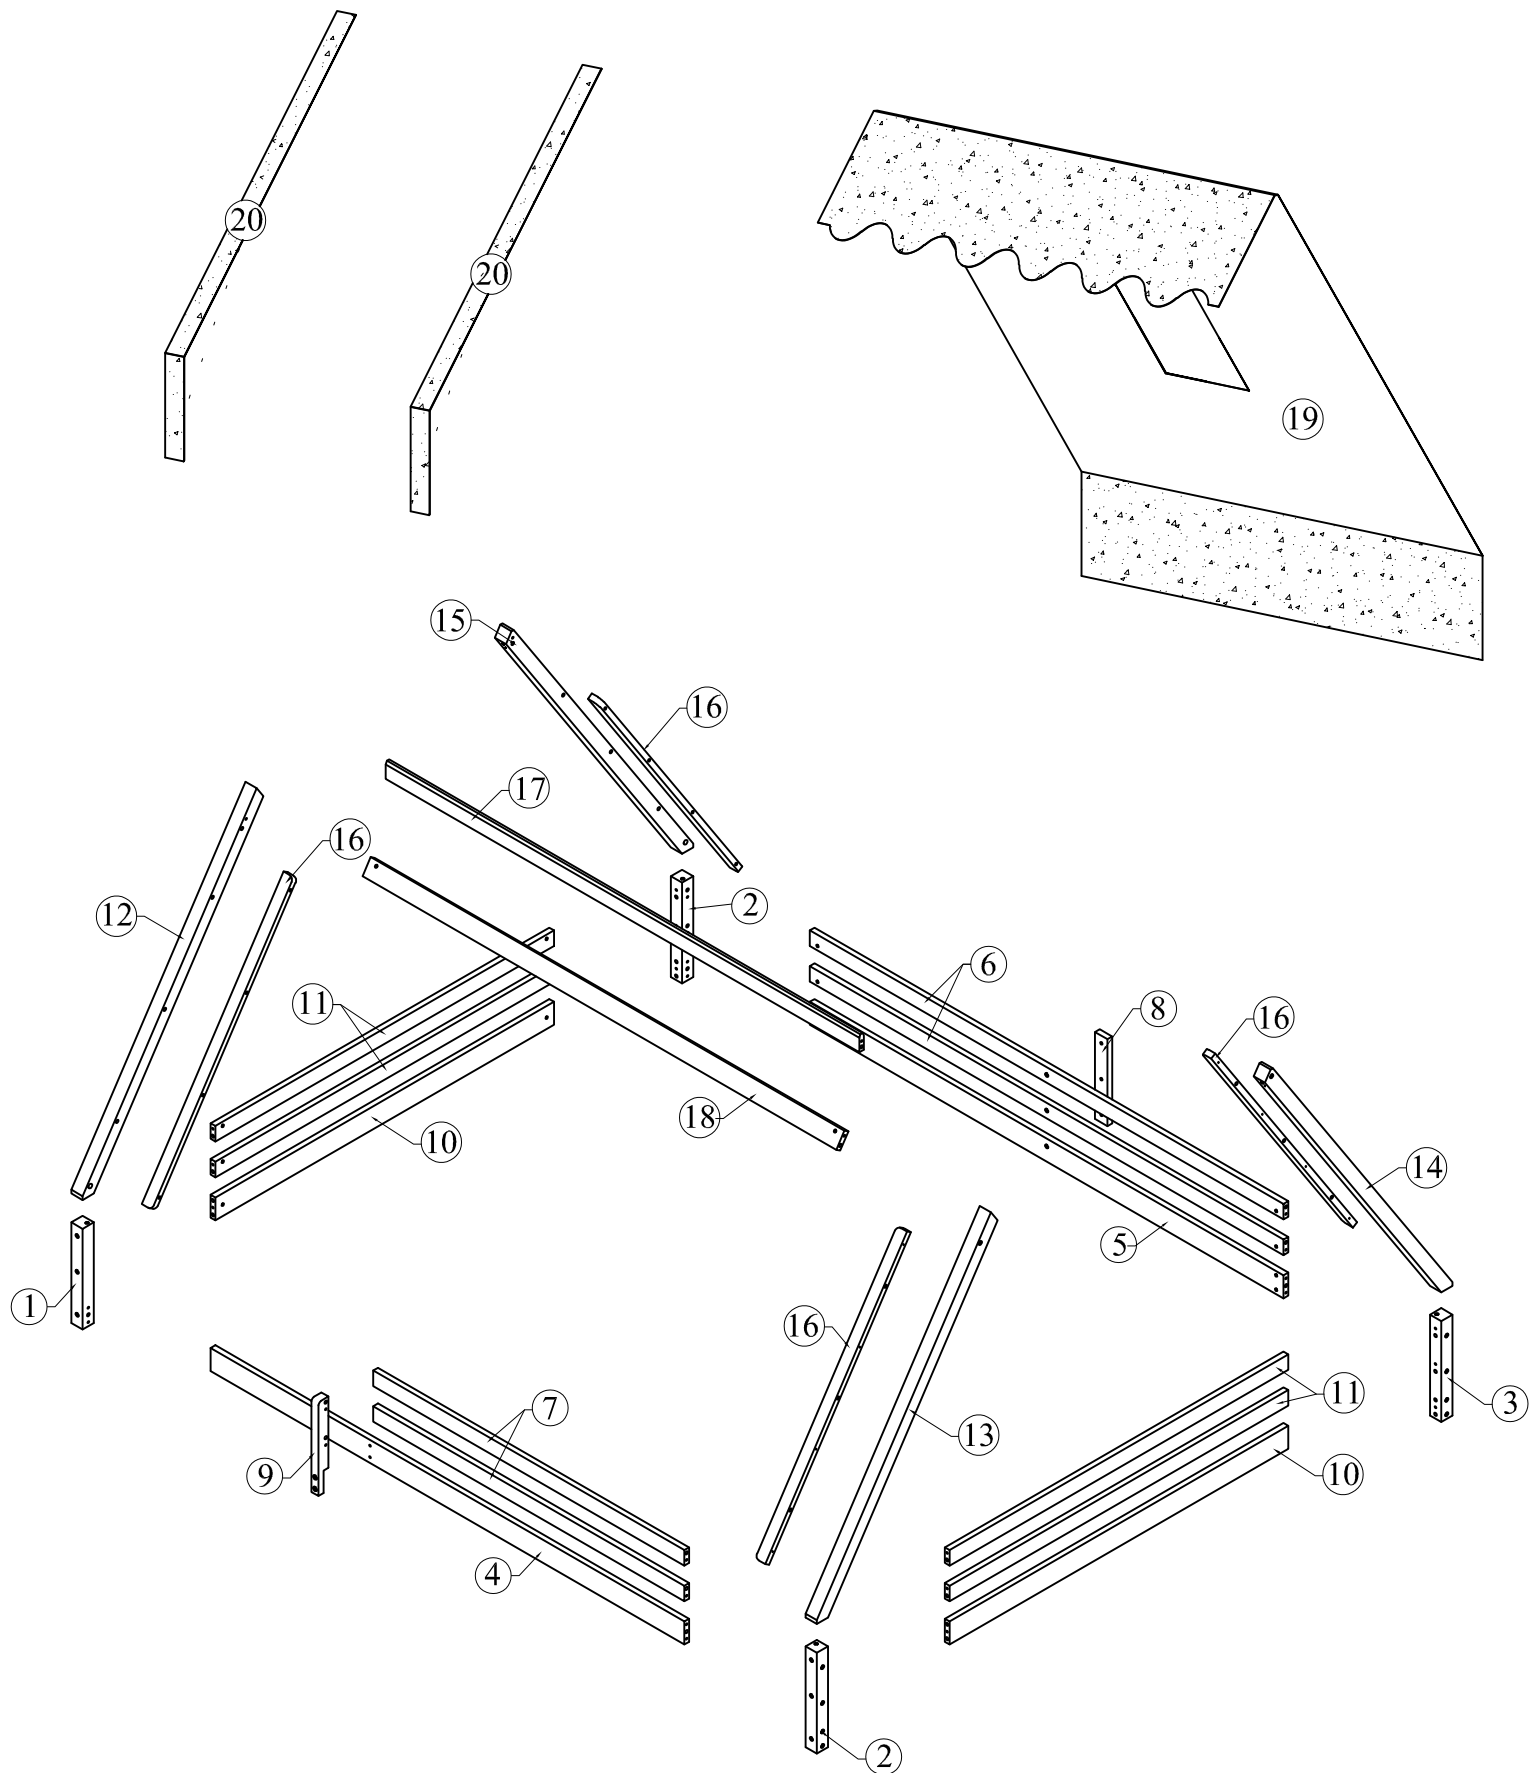





# ASSEMBLY INSTRUCTION



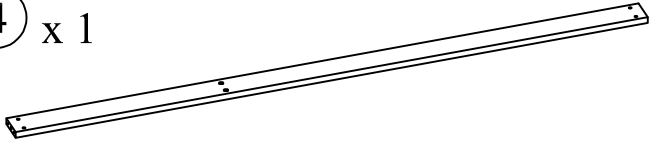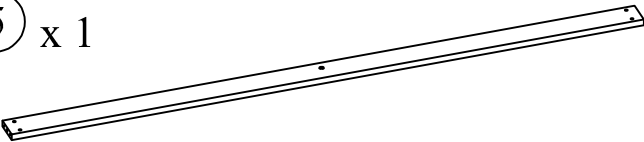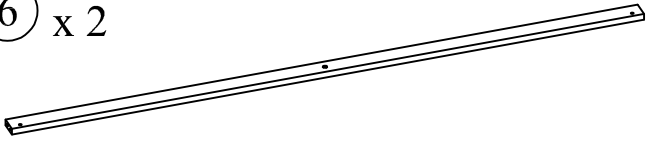
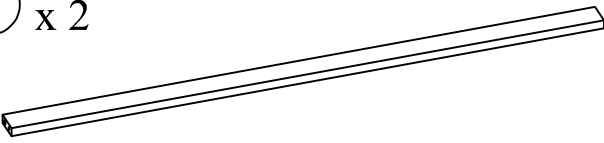


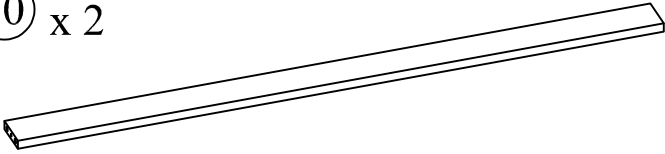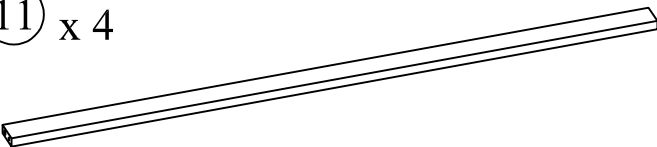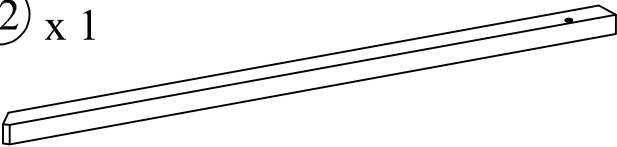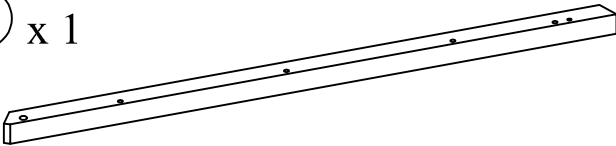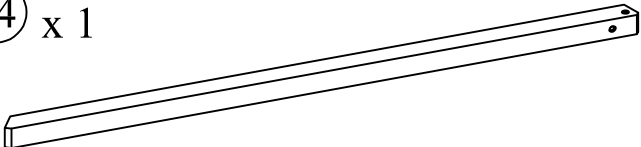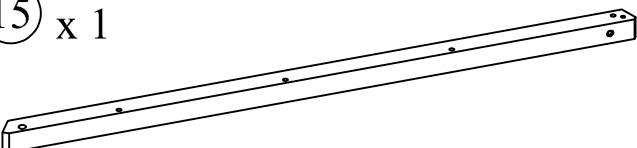



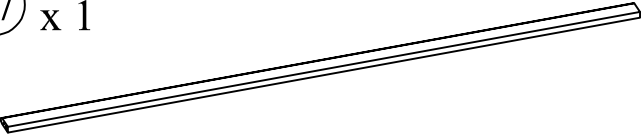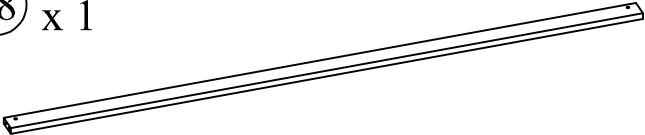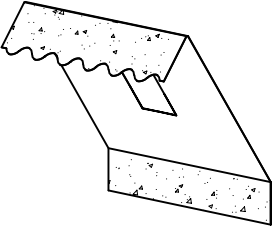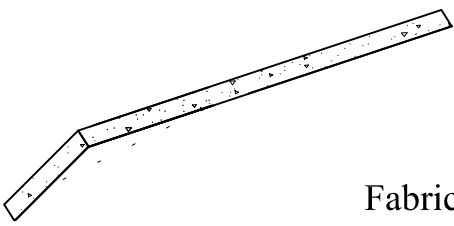






# Part List -BW00300

<p>① x 1</p>  <p>Leg</p>	<p>② x 2</p>  <p>Leg</p>
<p>③ x 1</p>  <p>Leg</p>	<p>④ x 1</p>  <p>Side rail</p>
<p>⑤ x 1</p>  <p>Side rail</p>	<p>⑥ x 2</p>  <p>Guard rail</p>
<p>⑦ x 2</p>  <p>Crossbar</p>	<p>⑧ x 1</p>  <p>Vertical connector</p>
<p>⑨ x 1</p>  <p>Vertical guard rail</p>	<p>⑩ x 2</p>  <p>Crossbar</p>
<p>⑪ x 4</p>  <p>Crossbar</p>	<p>⑫ x 1</p>  <p>Upper</p>
<p>⑬ x 1</p>  <p>Upper</p>	<p>⑭ x 1</p>  <p>Upper</p>
<p>⑮ x 1</p>  <p>Upper</p>	<p>⑯ x 4</p>  <p>Support bar</p>

# Part List -BW00300

<p>(17) x 1</p>  <p>Roof</p>	<p>(18) x 1</p>  <p>Crossbar</p>
<p>(19) x 1</p>  <p>Fabric cover</p>	<p>(20) x 2</p>  <p>Fabric cover</p>


# Hardware List -BW00300




No.	OUTLOOK	DESC	QTY
(A)		Dowel Ø10*40mm	46
(B)		Bolts 1/4"*25mm	05
(C)		Bolts 1/4"*60mm	02
(D)		Bolts 1/4"*80mm	02
(E)		Bolts 1/4"*100mm	30
(F)		Cross dowel 1/4"*13mm	32
(G)		Hex bolts 1/4"*15mm	05
(H)		Round Head Screw #7*15mm	02
(I)		Screws #8*40mm	16
(J)		Connecting Bolt	04
(K)		Armbach - Straight Cylinder	04
(L)		Insert	04
(M)		Allen key 60*22*4mm	02
(N)		Nylon plastic cable clamps	02
(O)		LED light	01




ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

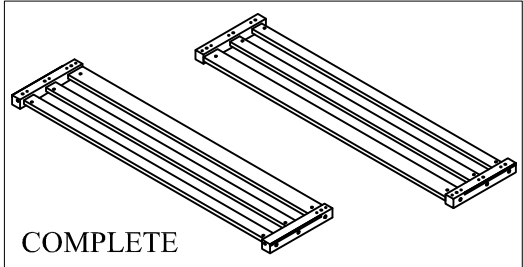


STEP 1



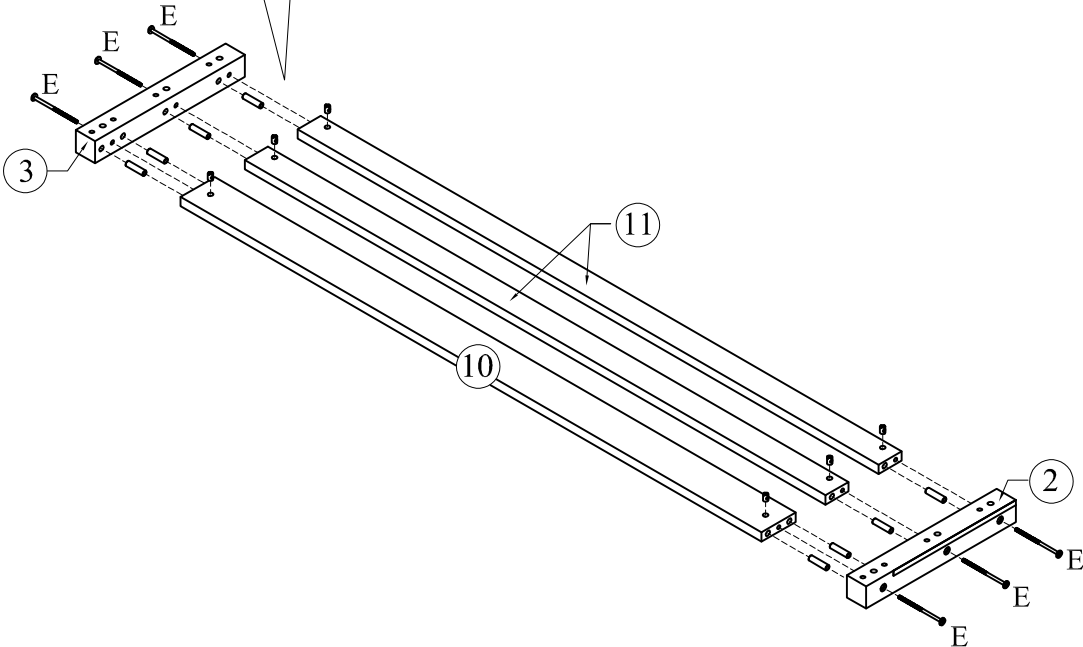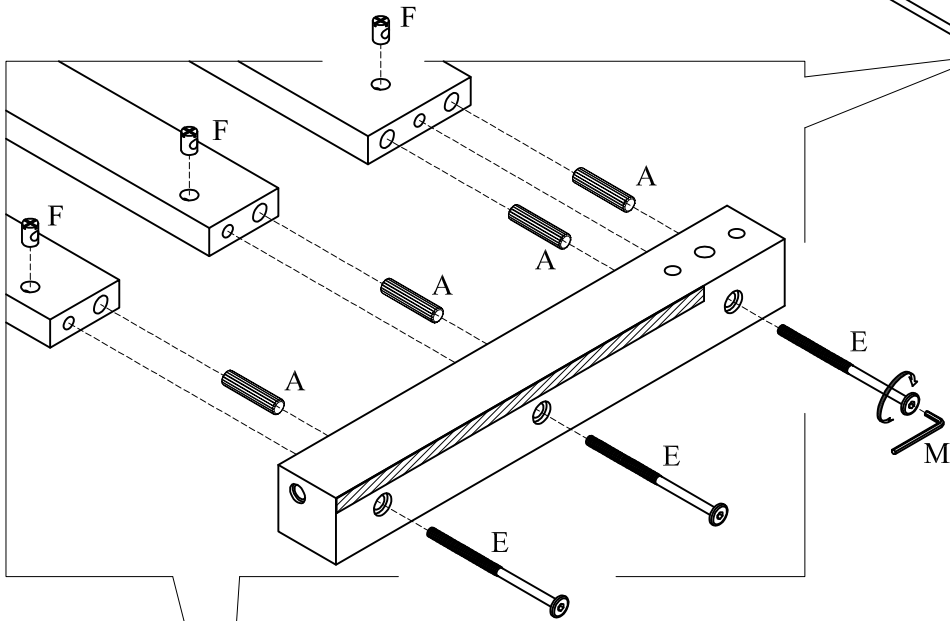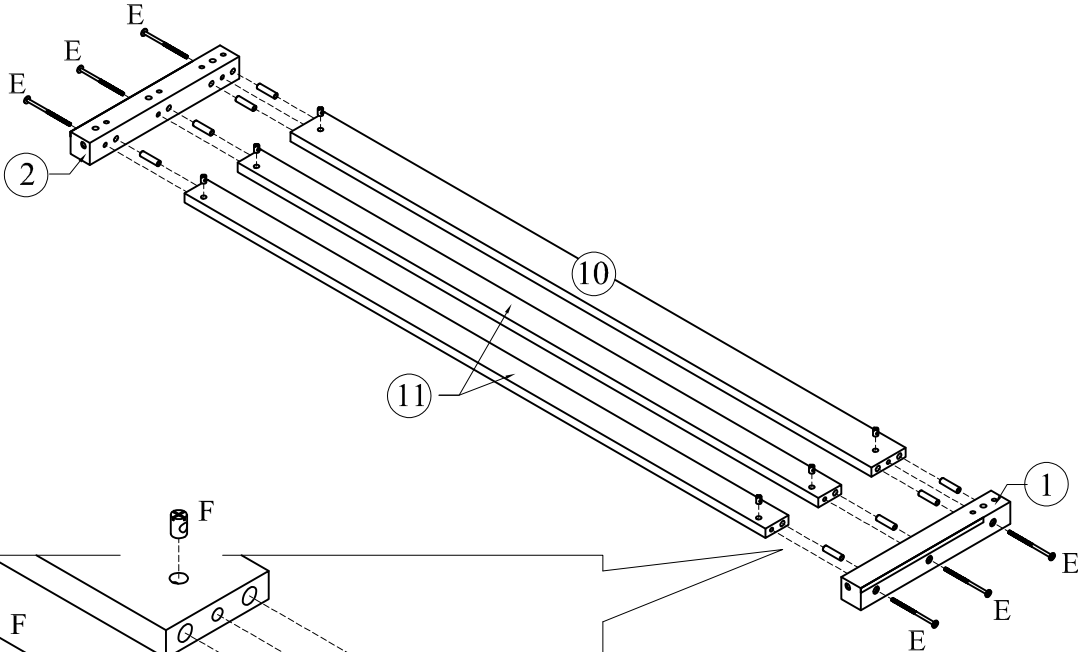


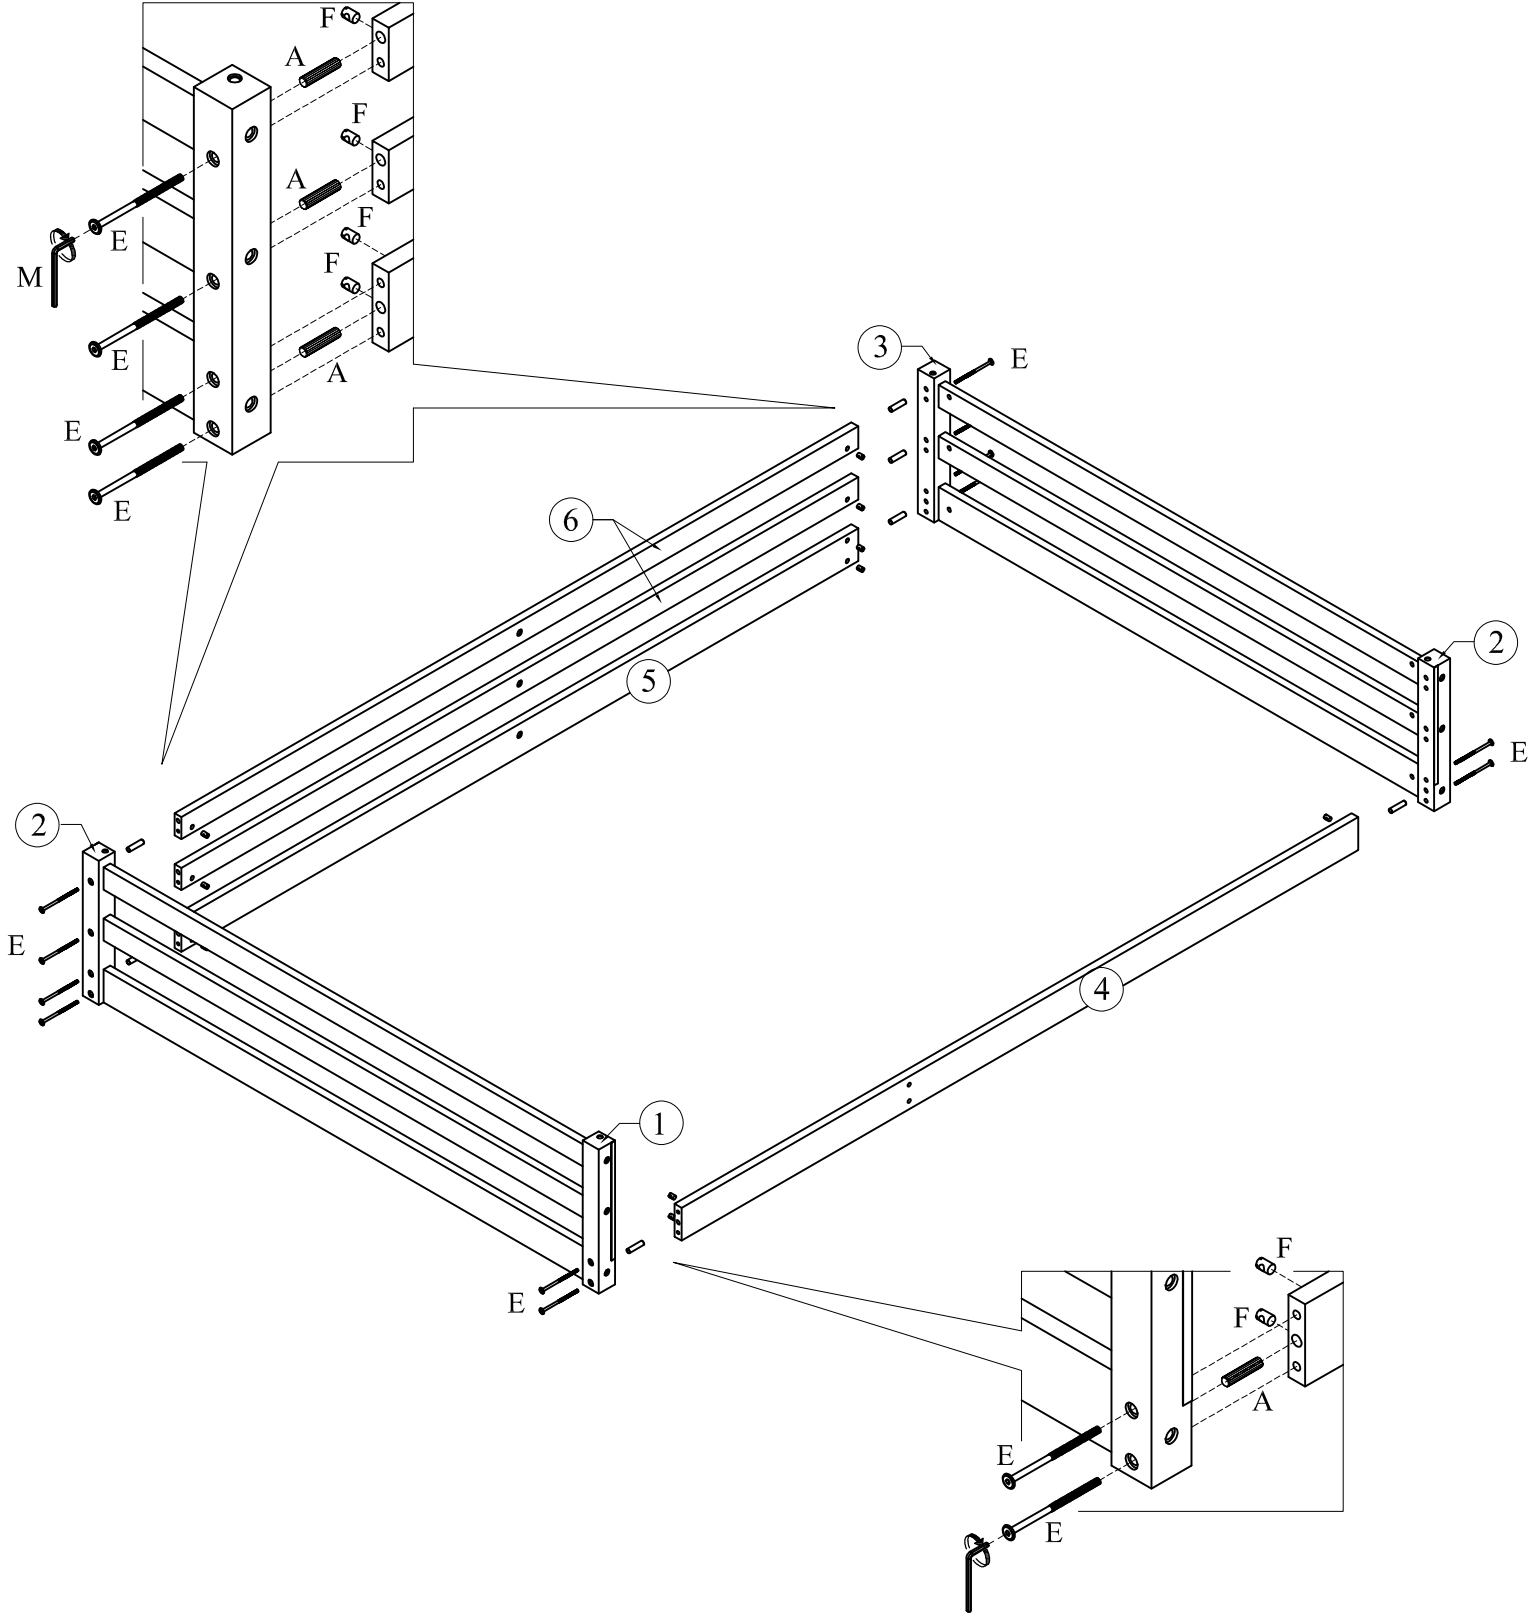
(A)		16
(E)		12
(F)		12

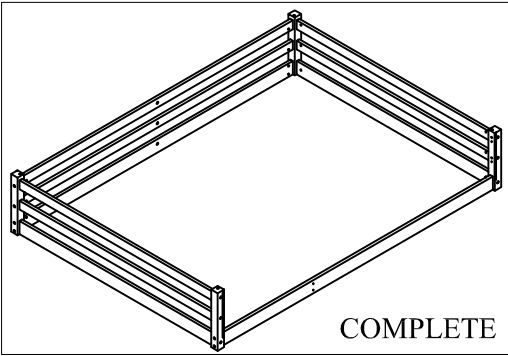


STEP 2




(A)		08
(E)		12
(F)		12



STEP 3

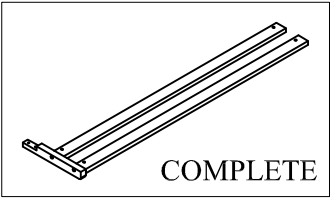


(A)		02
(D)		02
(F)		02

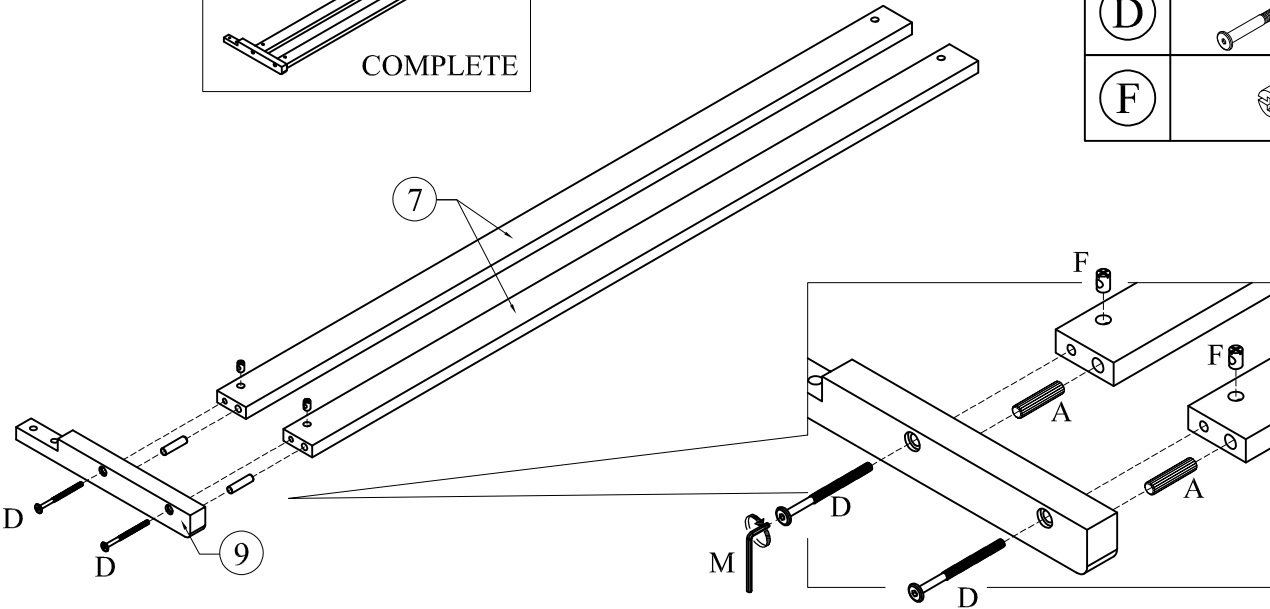


STEP 4

(A)		02
-----	--	----




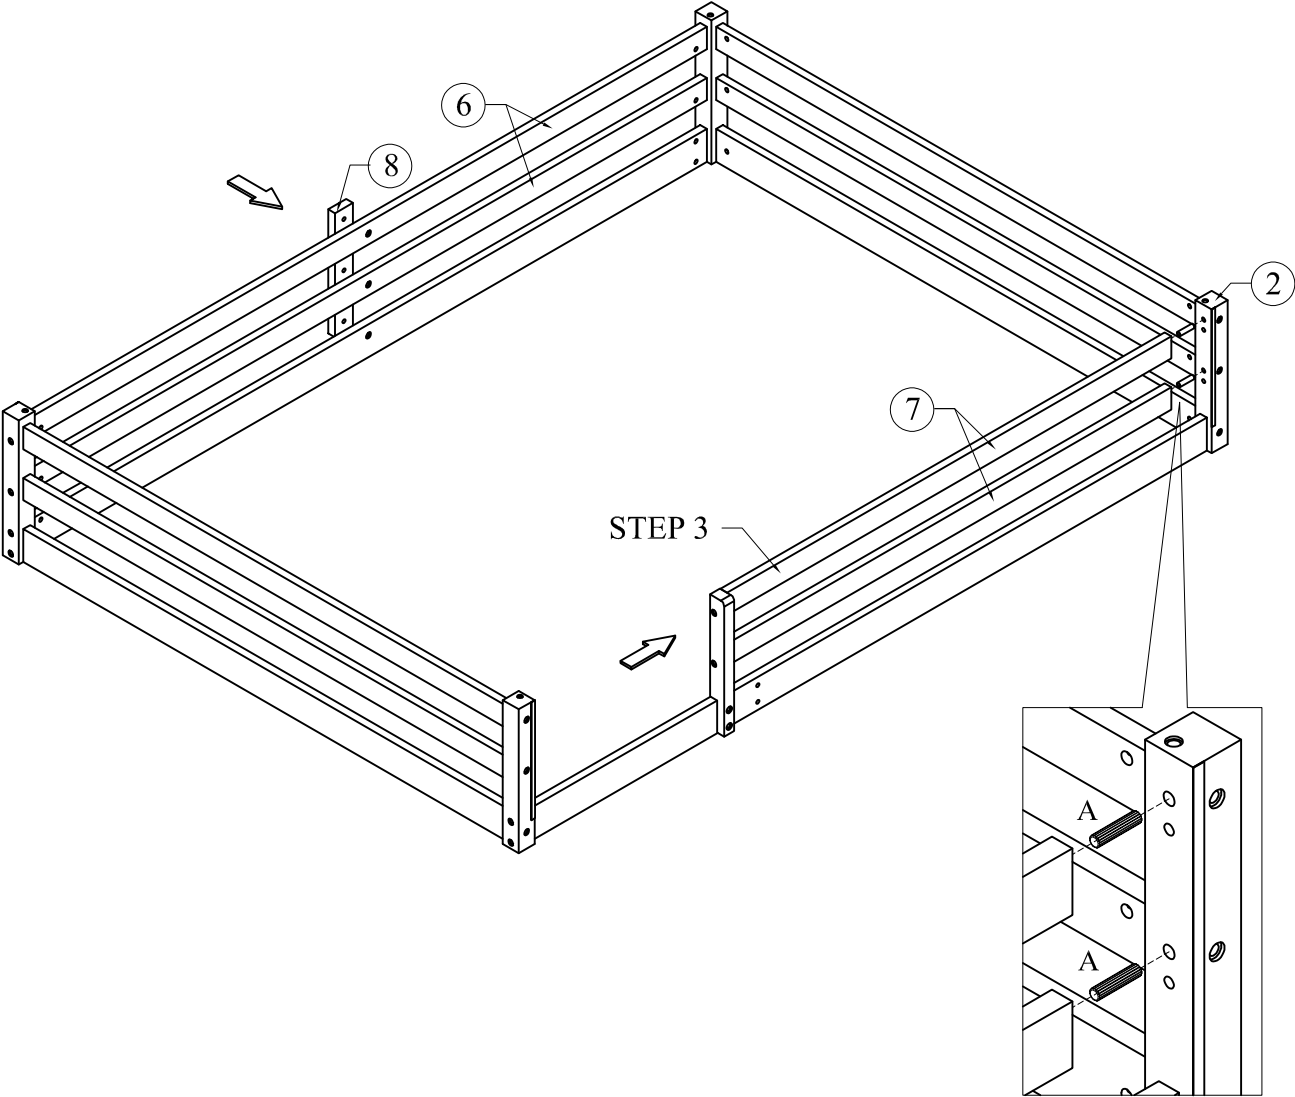




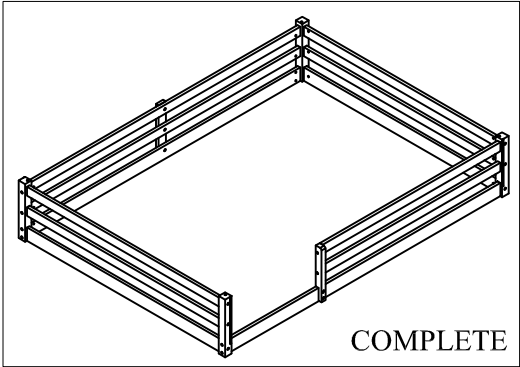

STEP 5

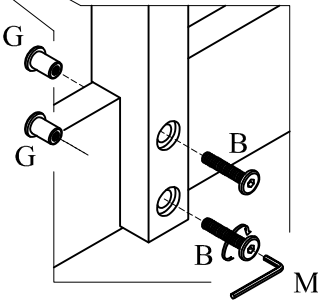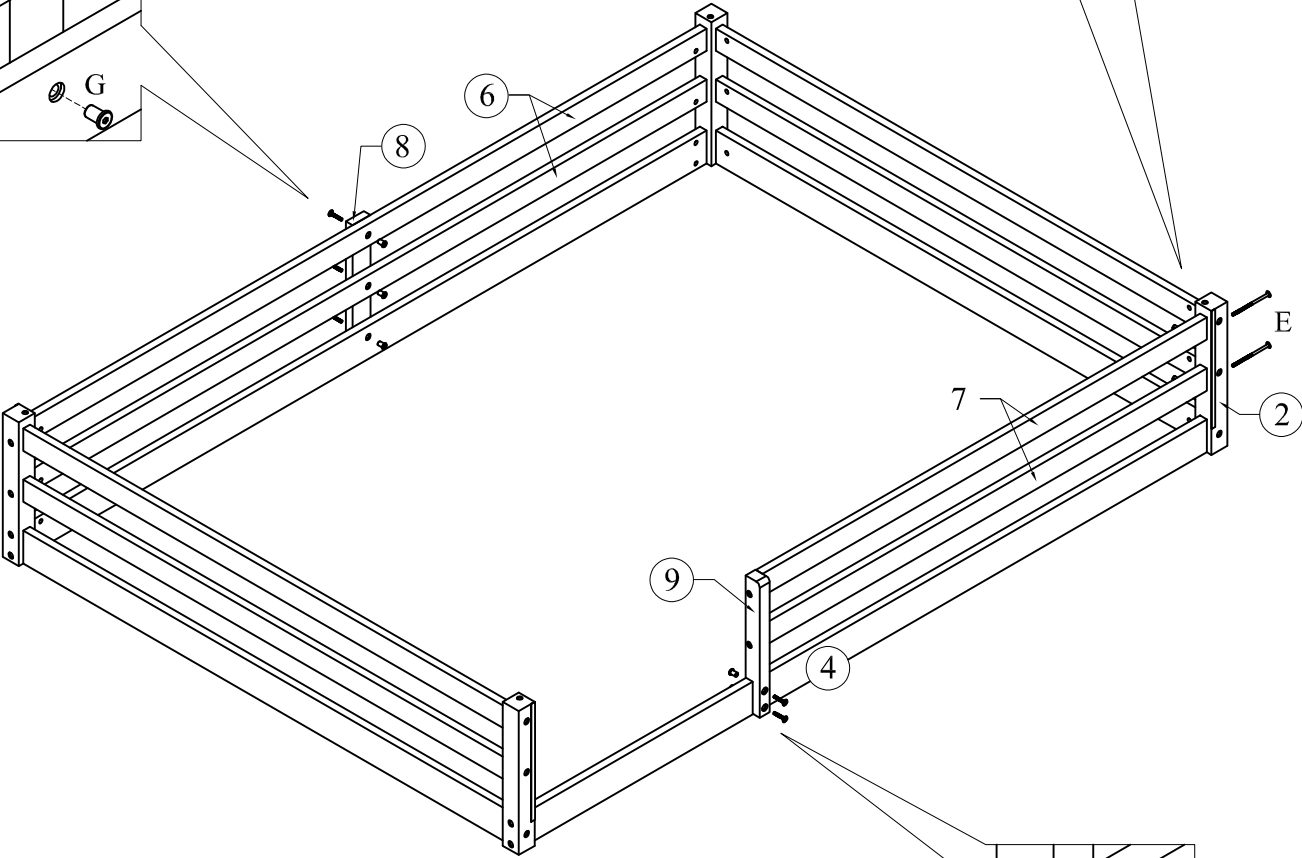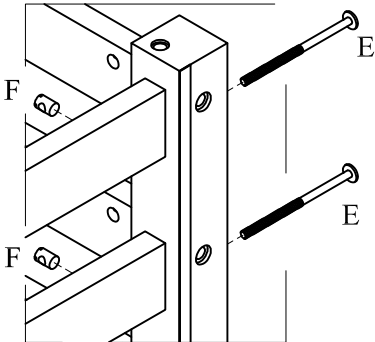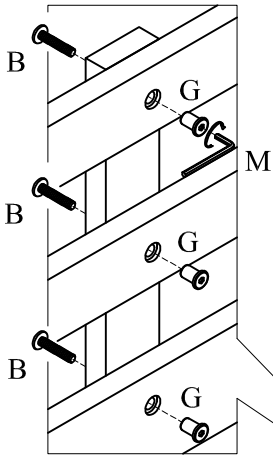


(B)		05
(E)		02
(F)		02
(G)		05






STEP 6

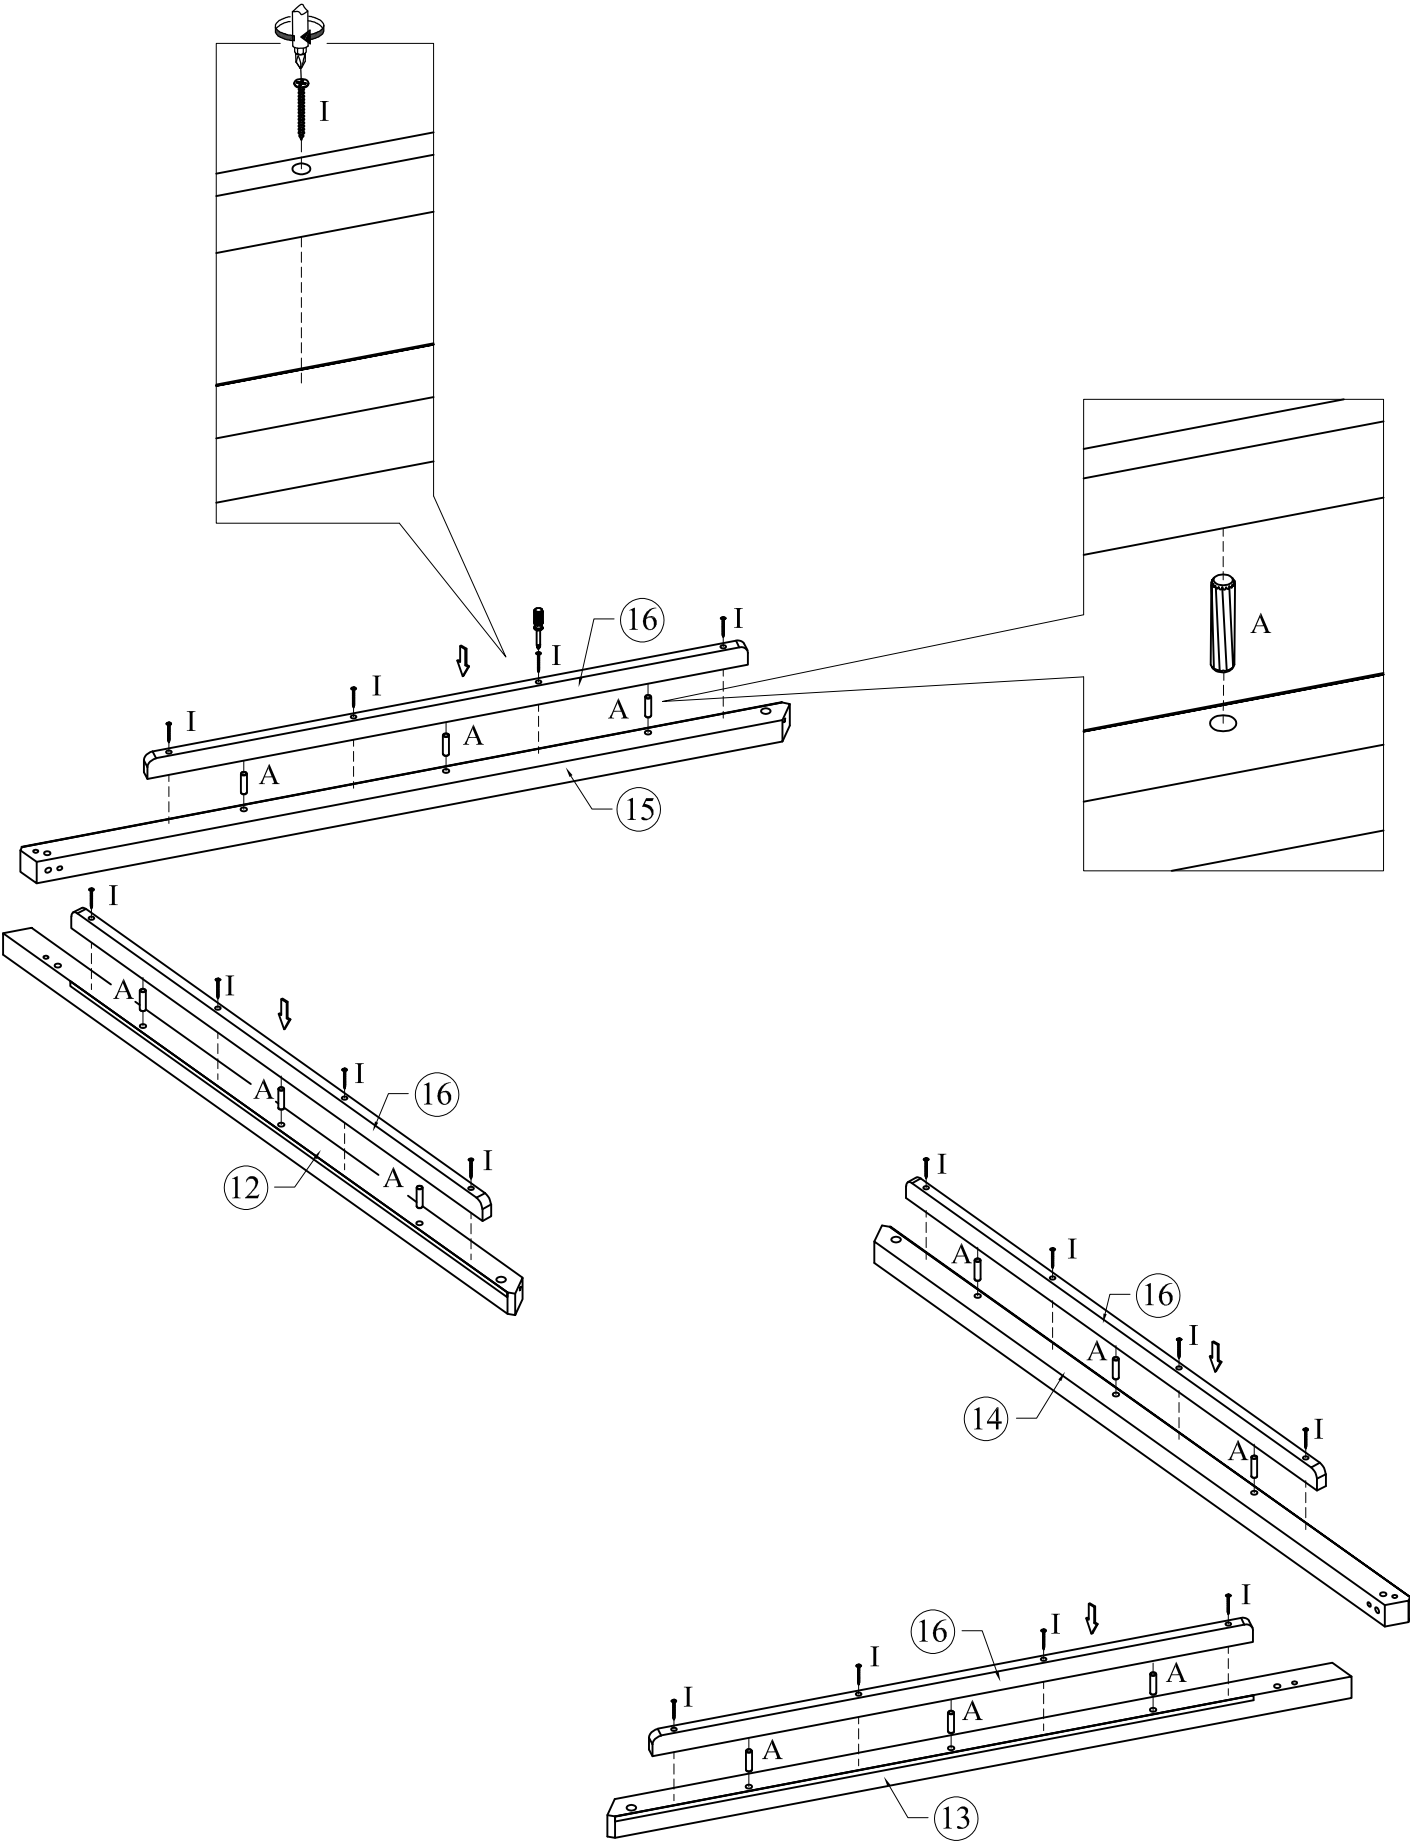(A)		12
(I)		16







STEP 7

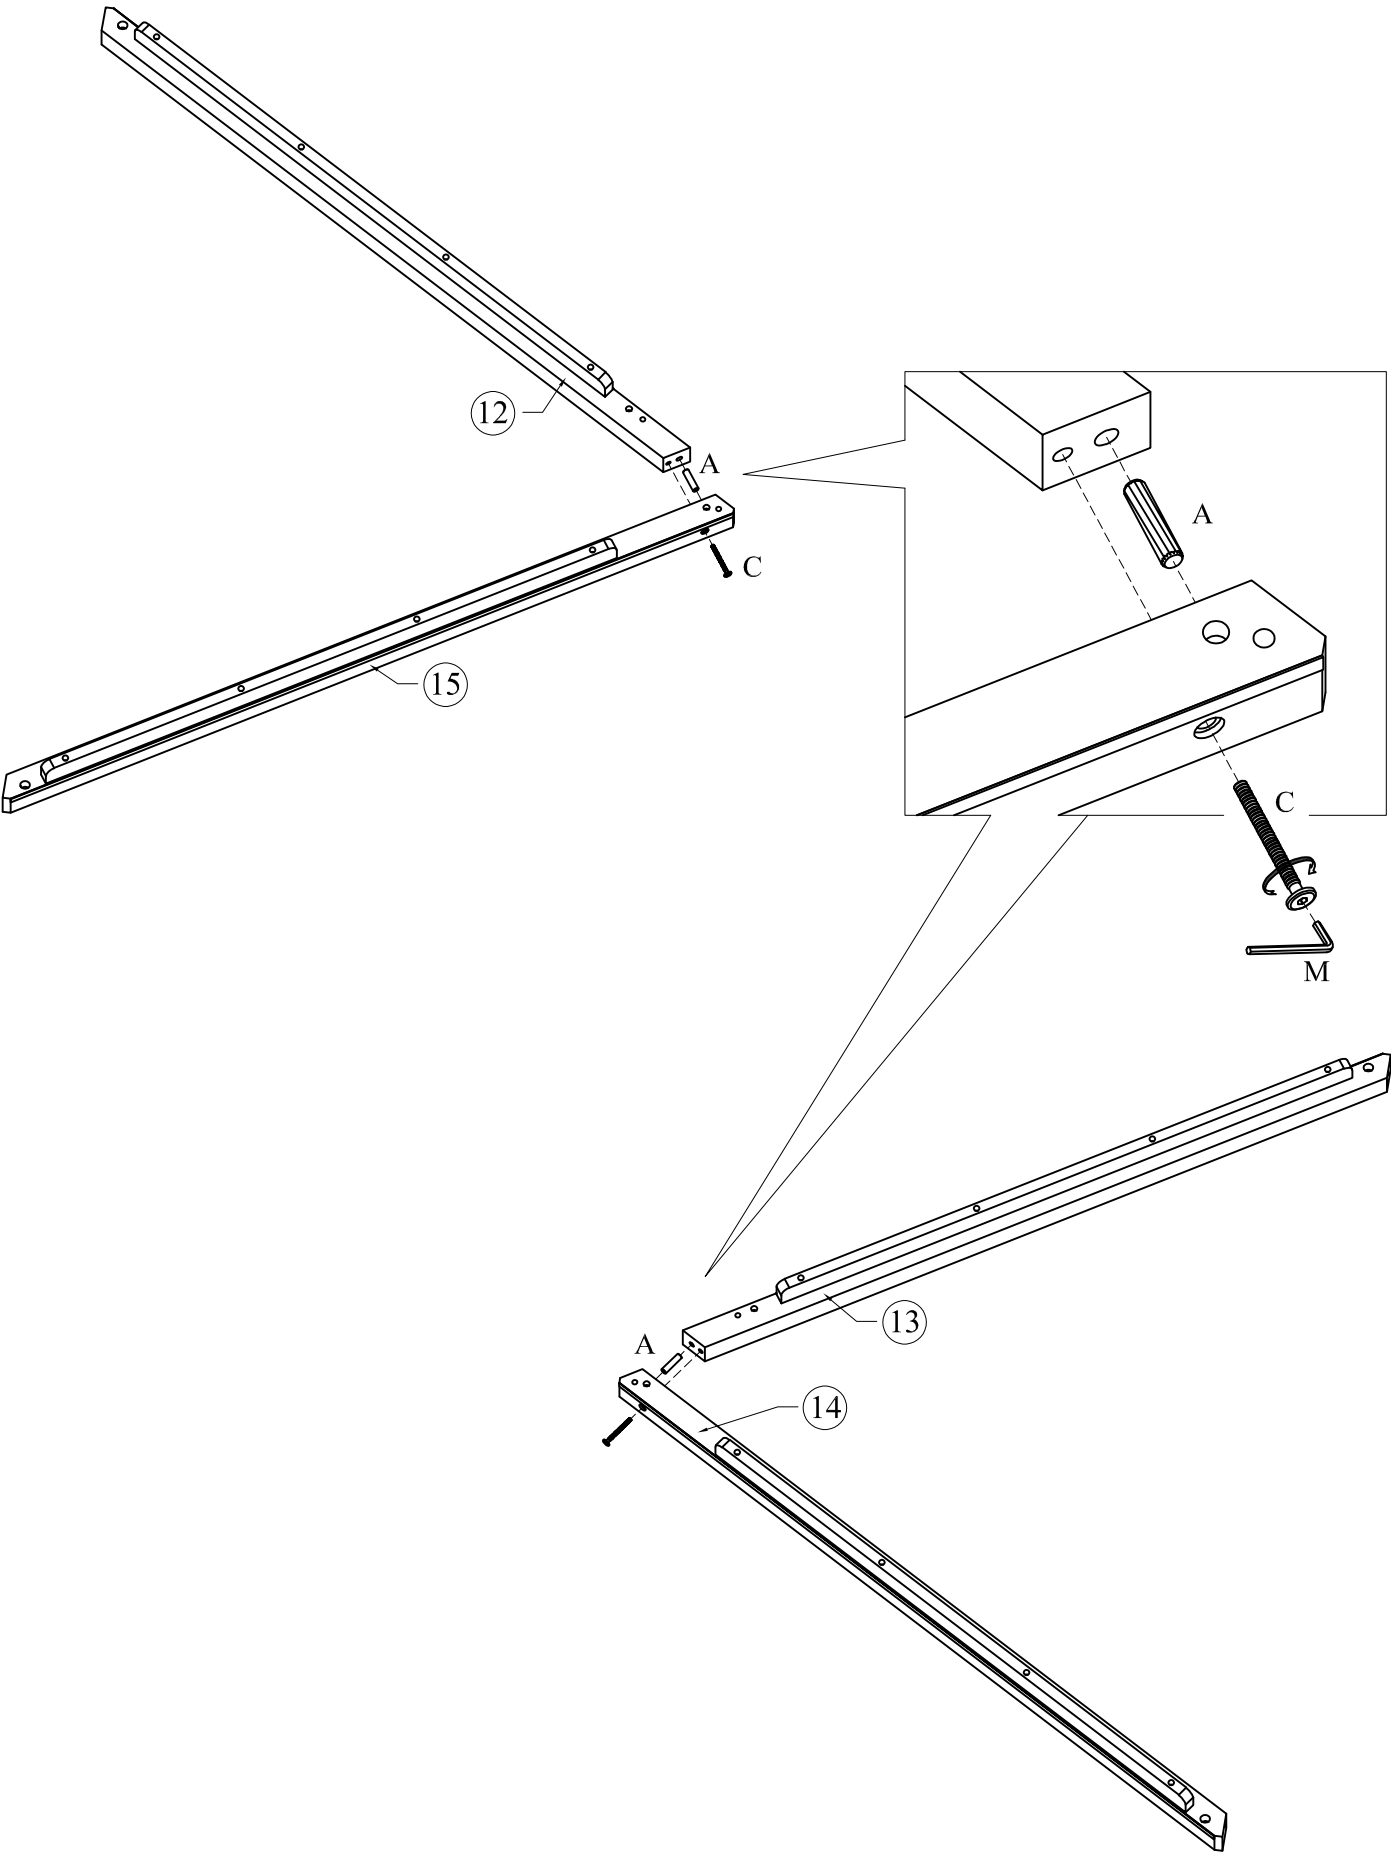
(A)		02
(C)		02

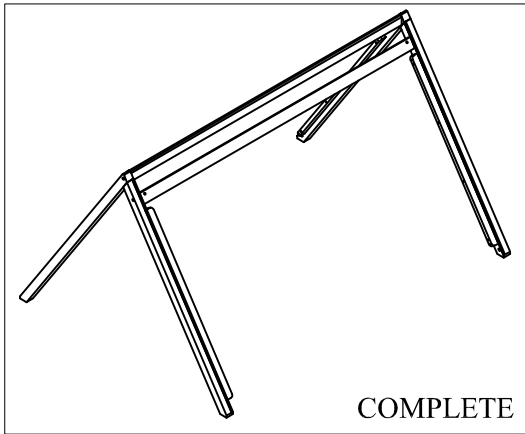


## STEP 8




(A)		04
(E)		04
(F)		04

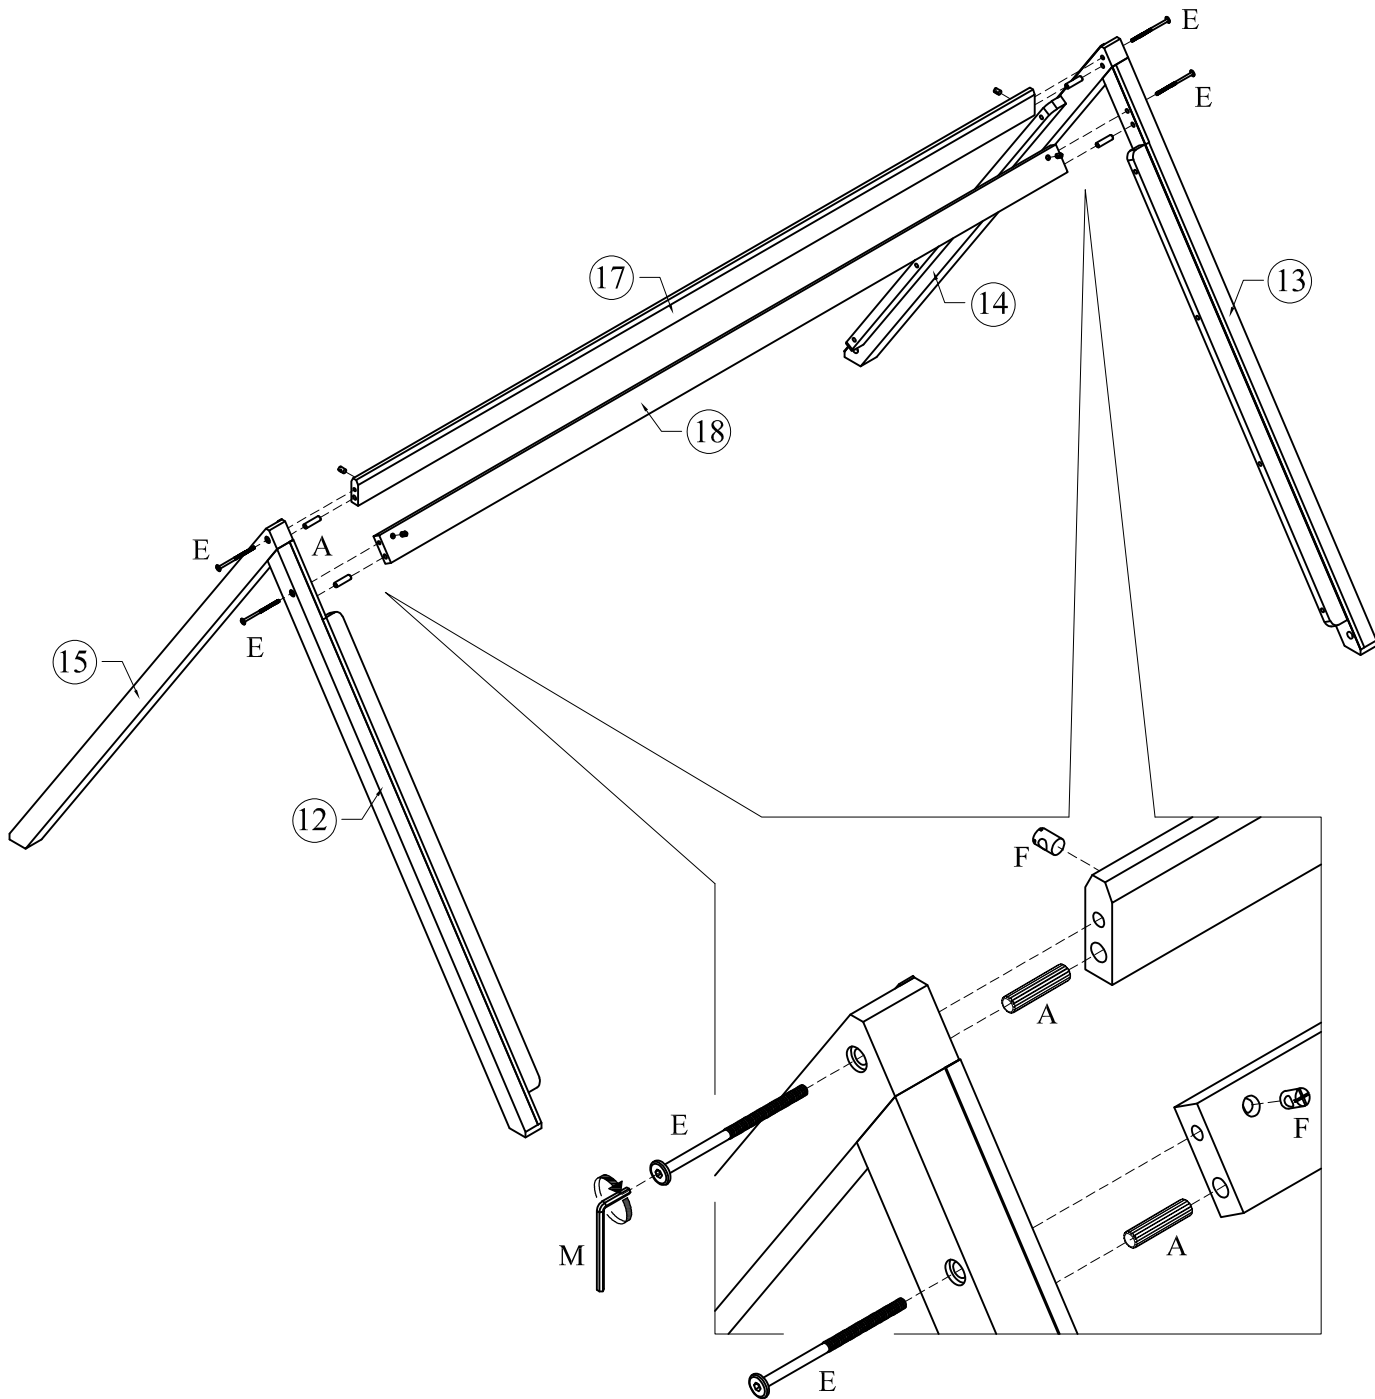


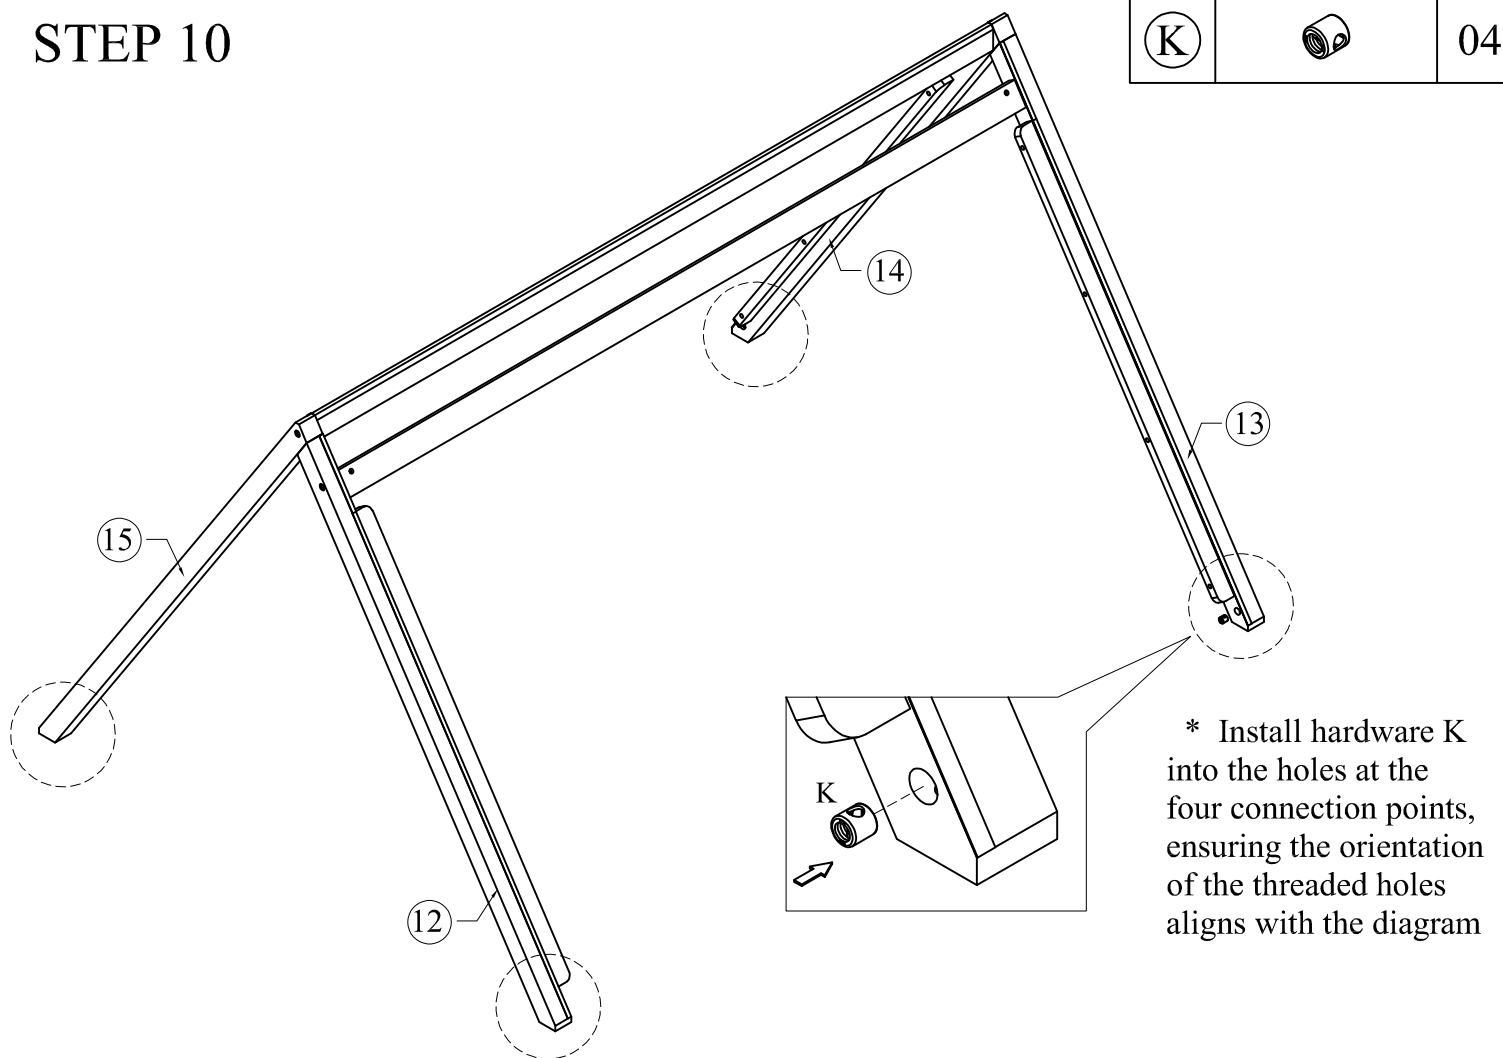
## STEP 9

J		04
---	---	----

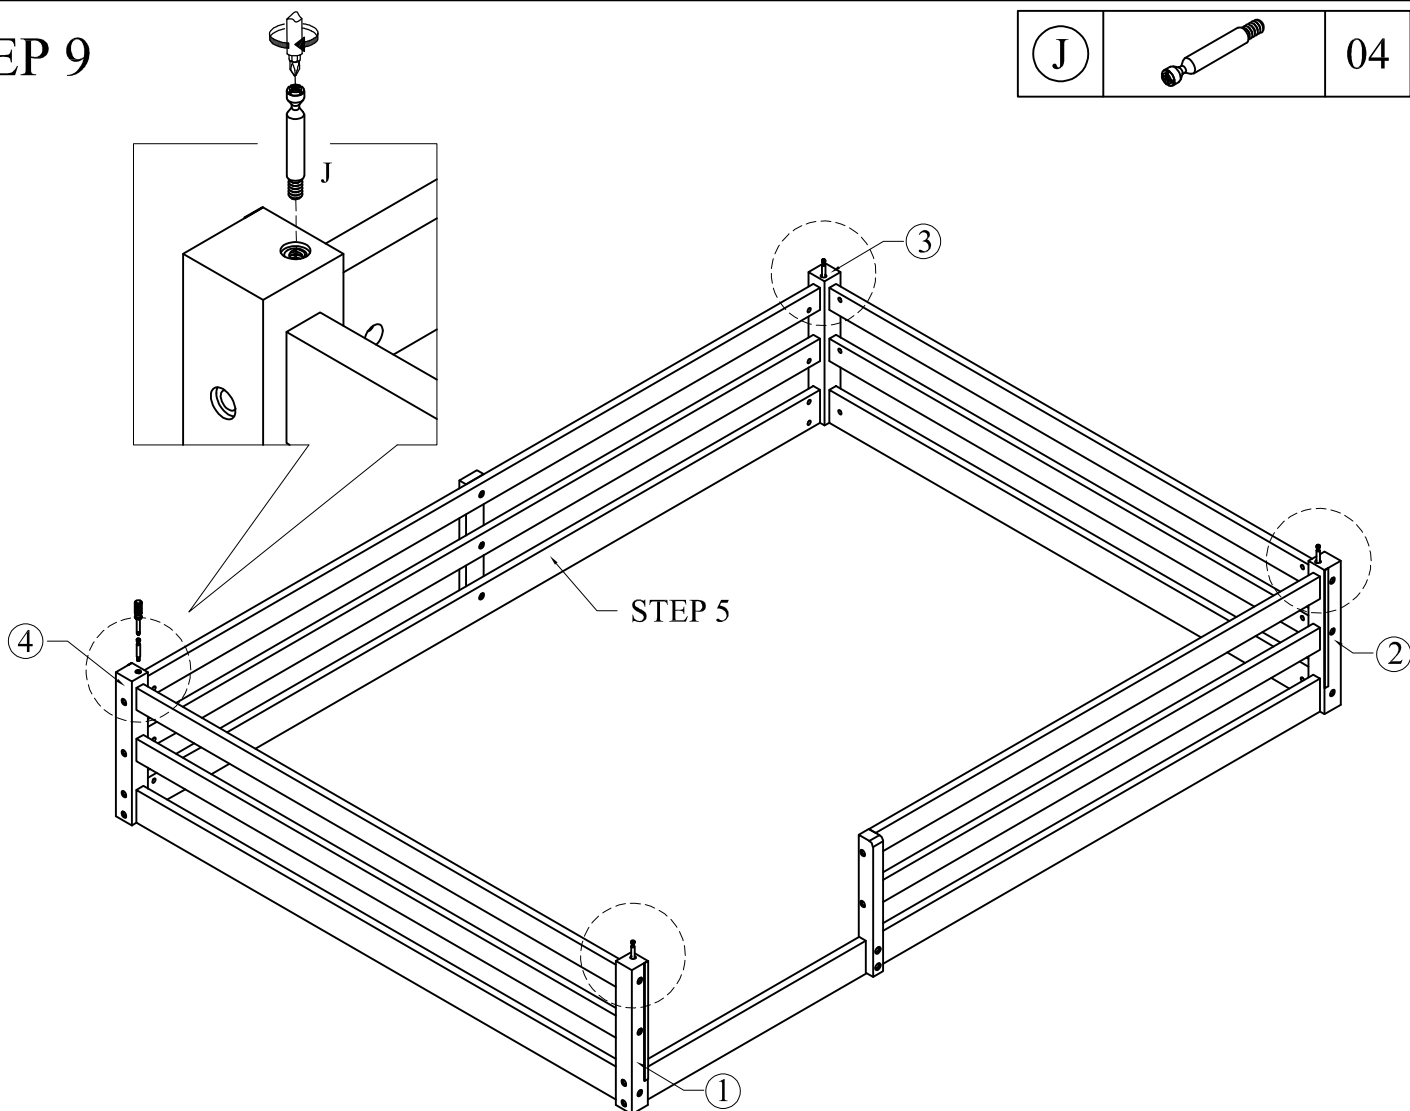


## STEP 10



K		04
---	---	----




# STEP 11

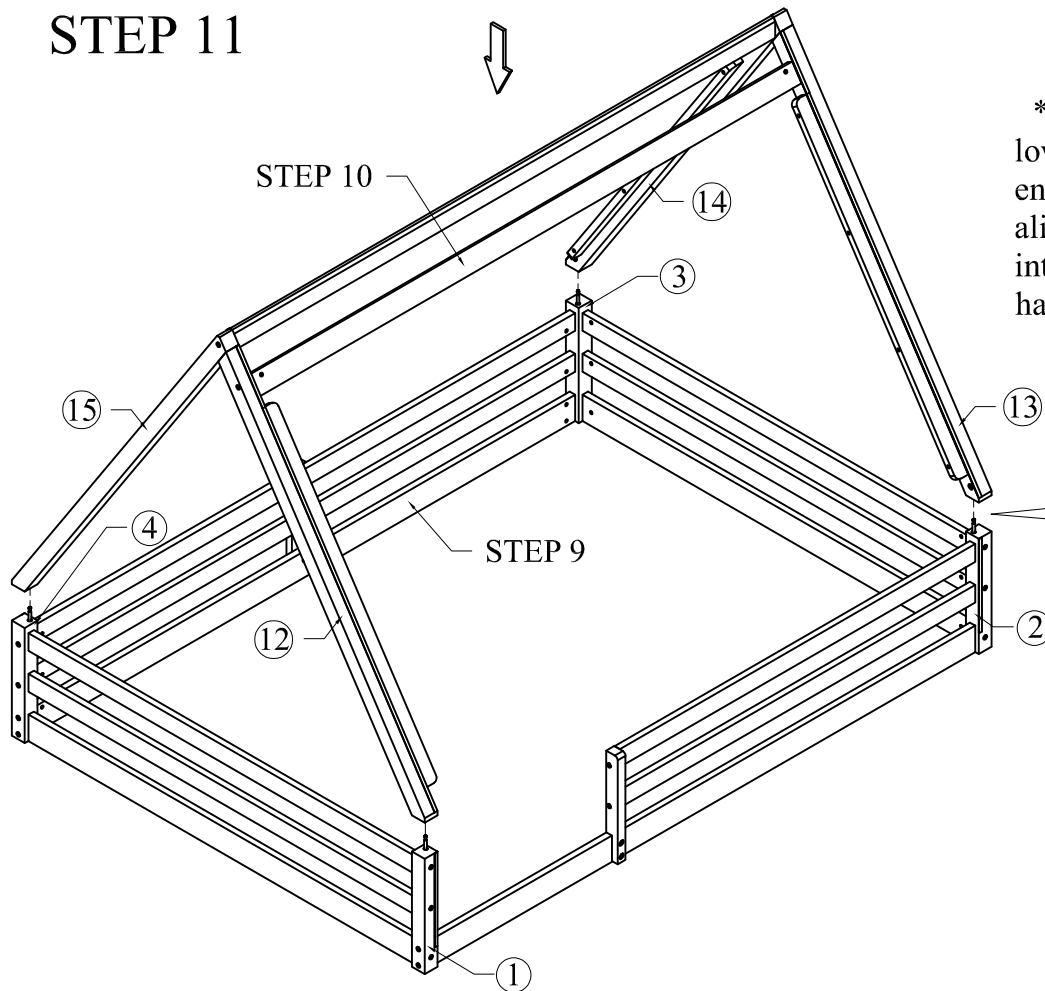

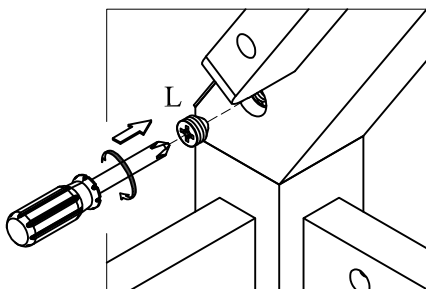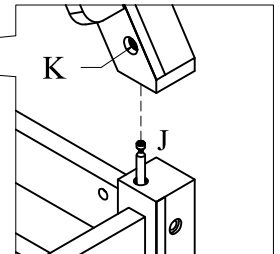


\* Join the upper and lower sections, ensuring hardware J aligns and fits snugly into the hole on hardware K.

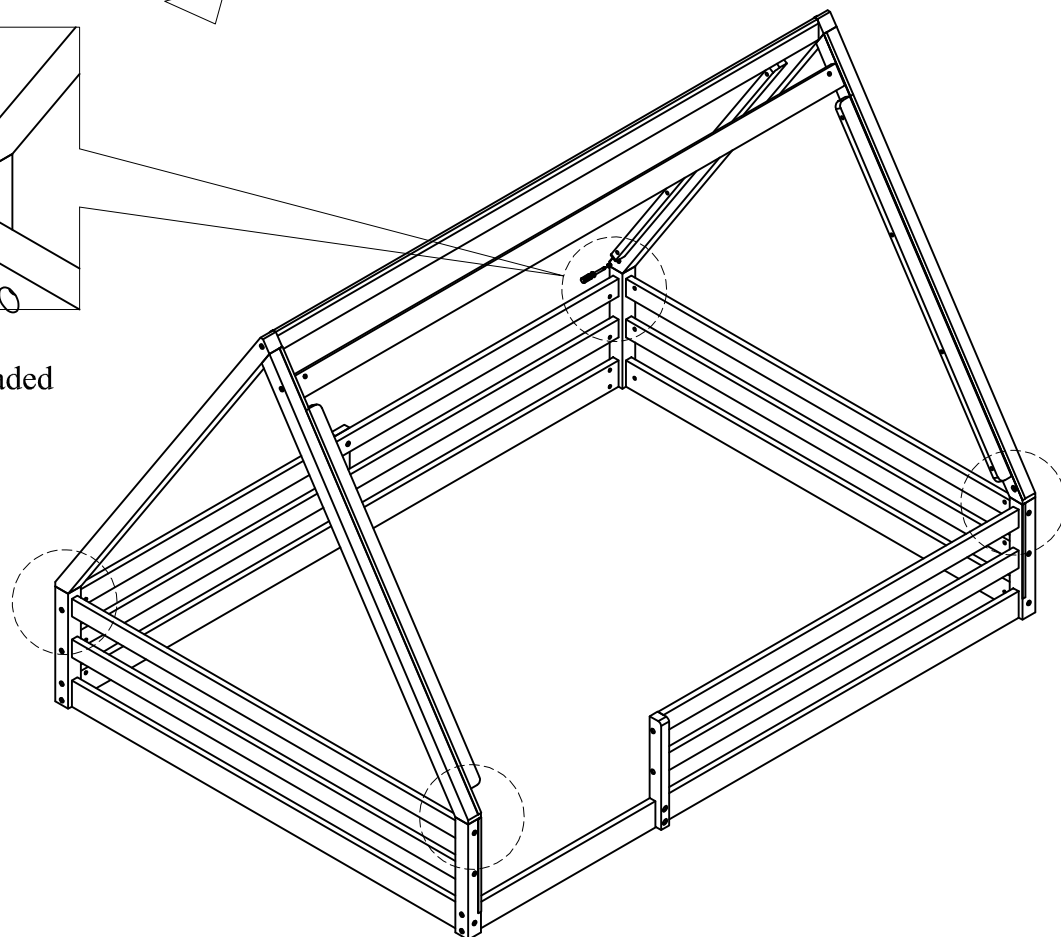


Tighten hardware L into the threaded hole on hardware K.





# STEP 12


(H)		02
(N)		02
(O)		01

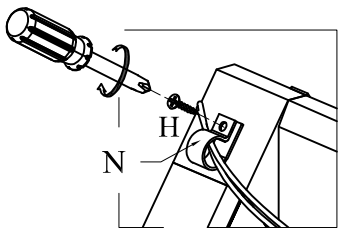


\* Wrap the LED strip around part 17 in a spiral pattern, and secure both ends with nylon plastic cable clamps as shown.

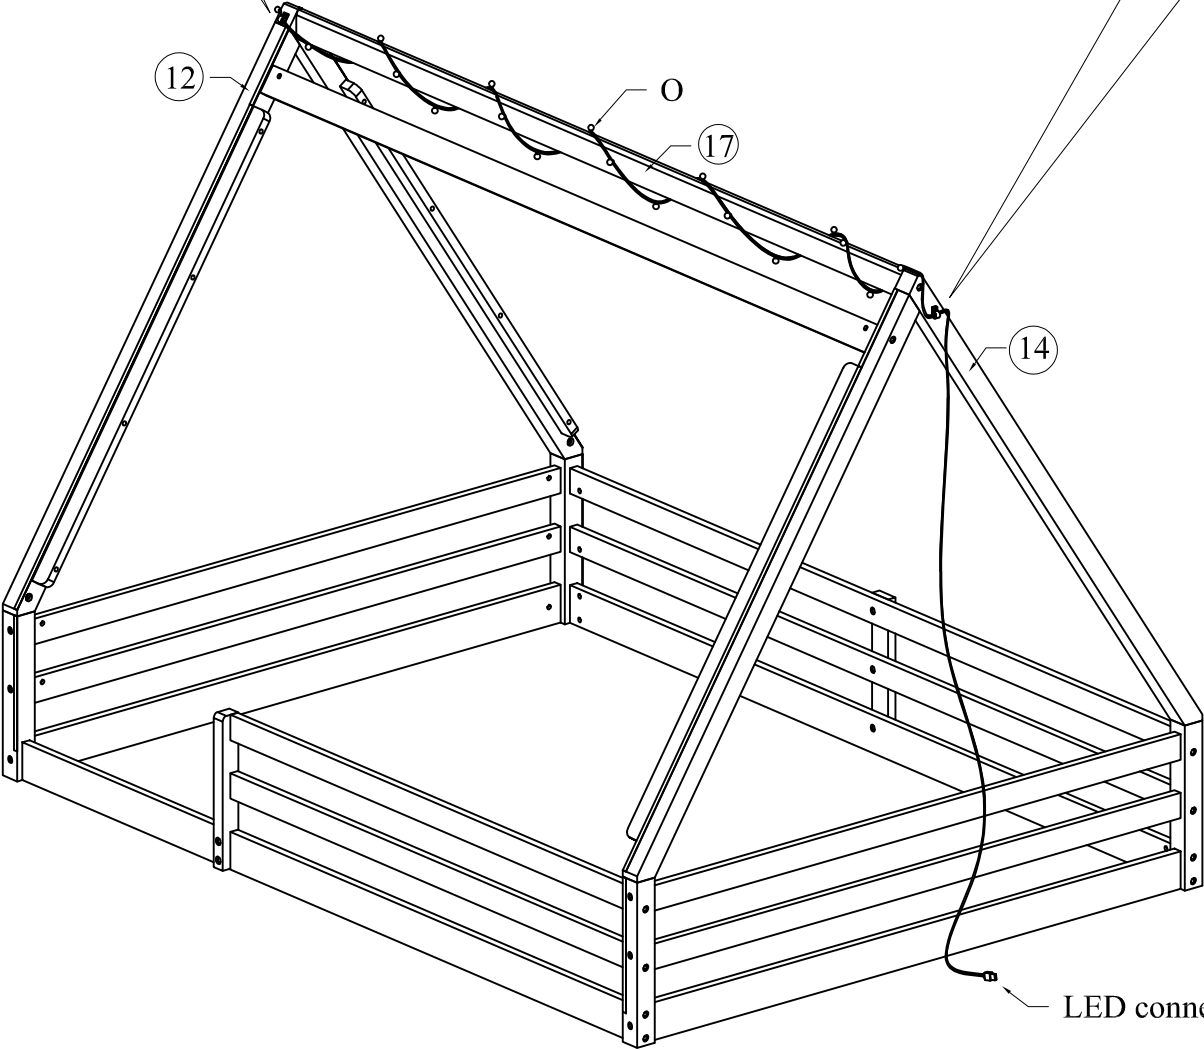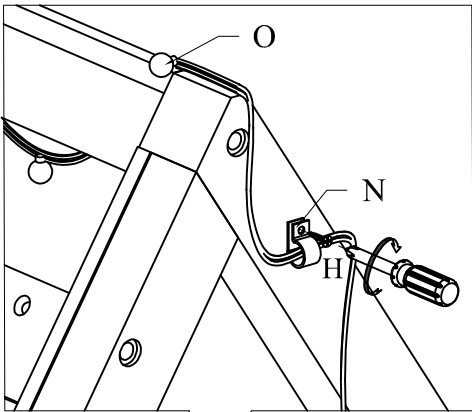

## STEP 13

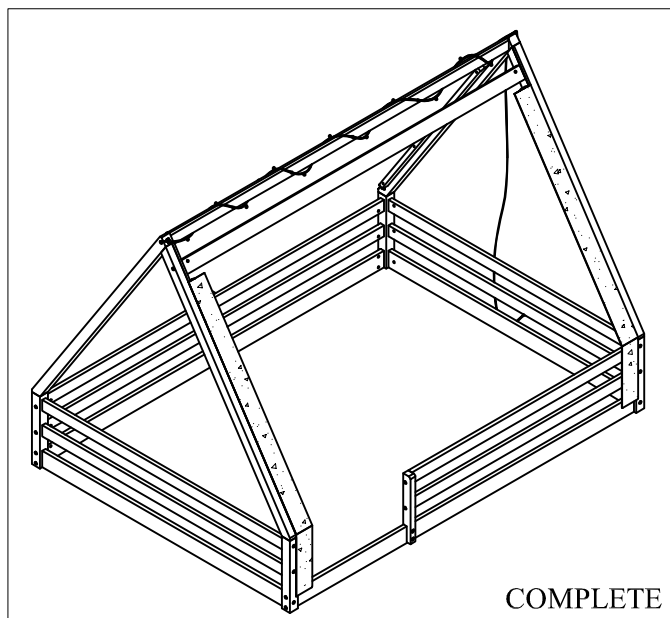


\* Attach the two fabric pieces (No.20) to the front frame at the positions with hook-and-loop tape as shown.

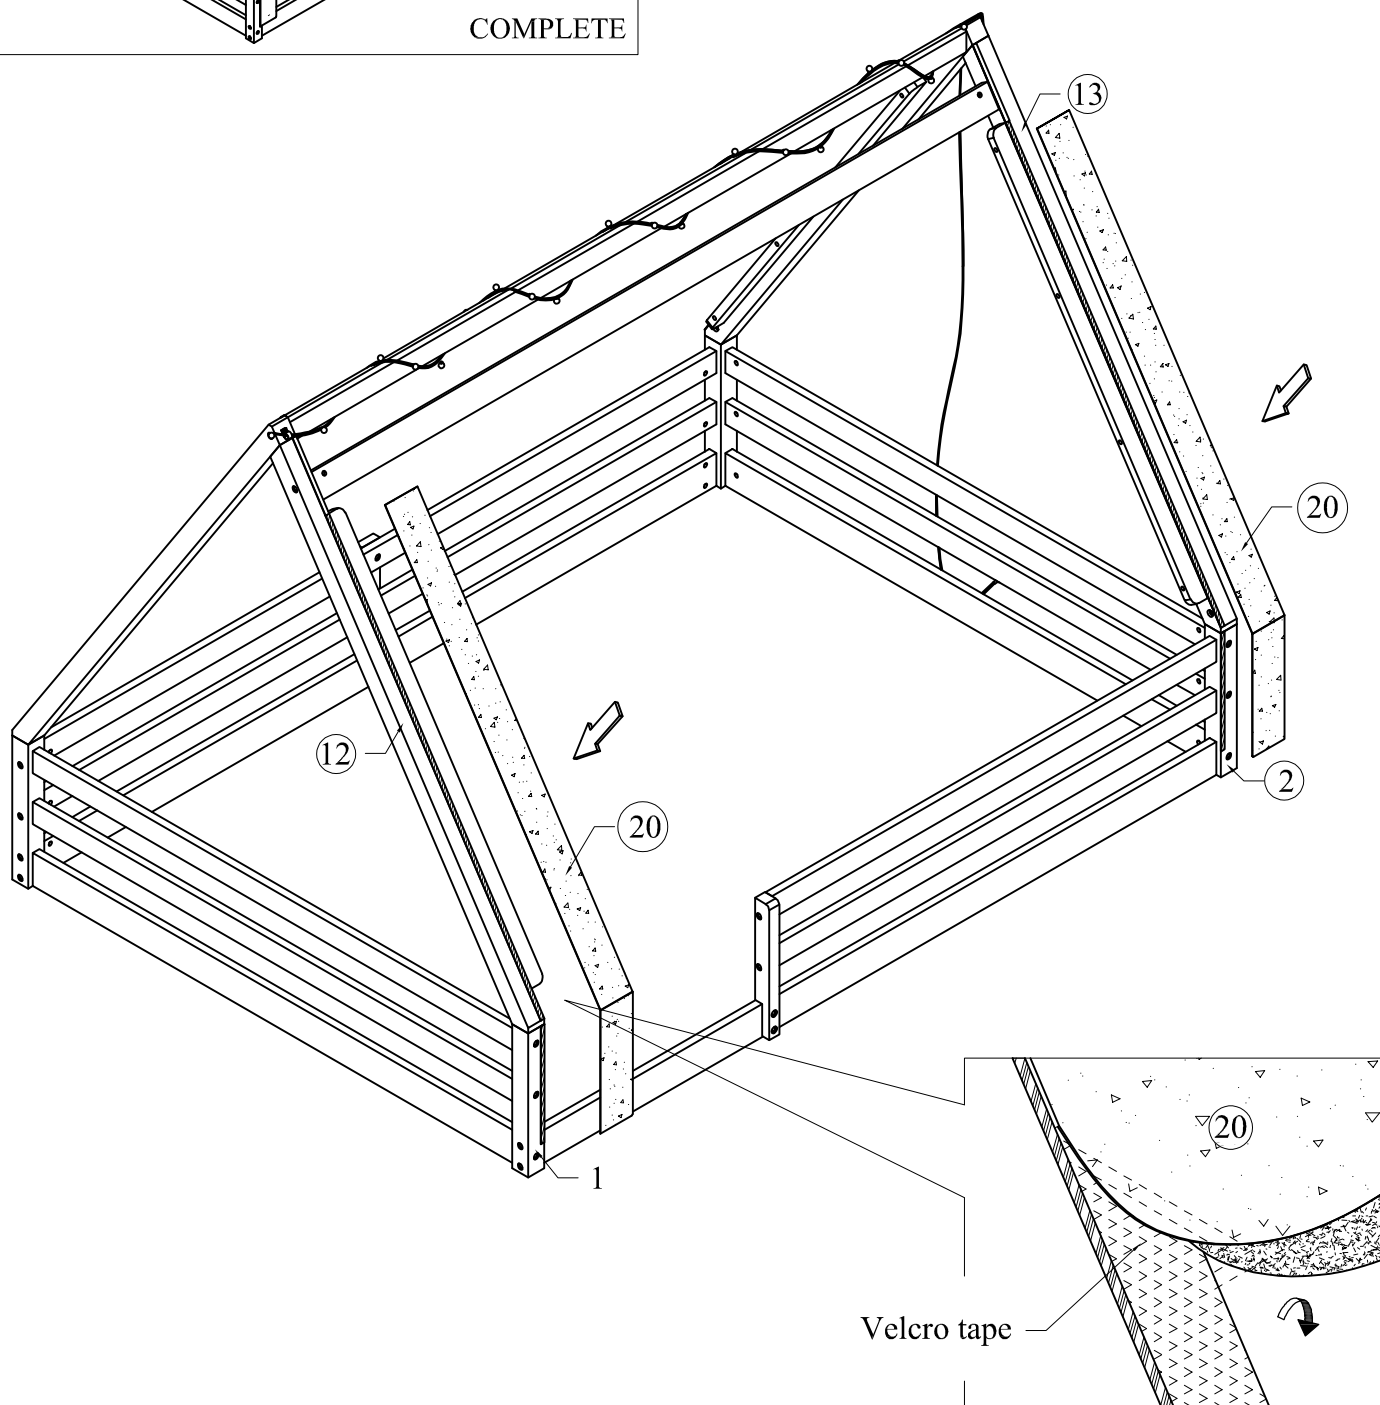



# STEP 14


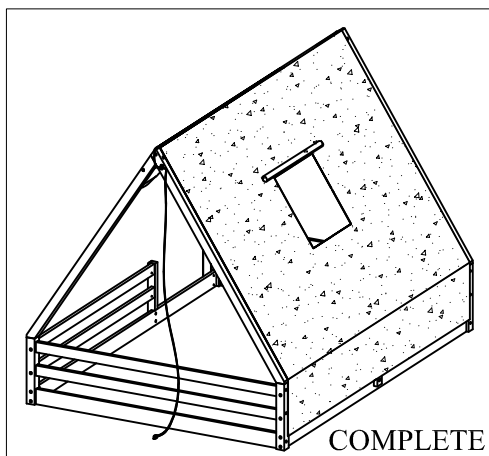


\* Cover the back and the top of the bed with the curtain fabric (No.19) and secure it around the edges at the positions with hook-and-loop tape as shown.



roll-up curtain

-The curtain can be rolled up or let down.

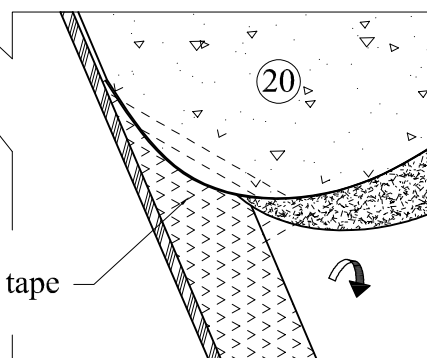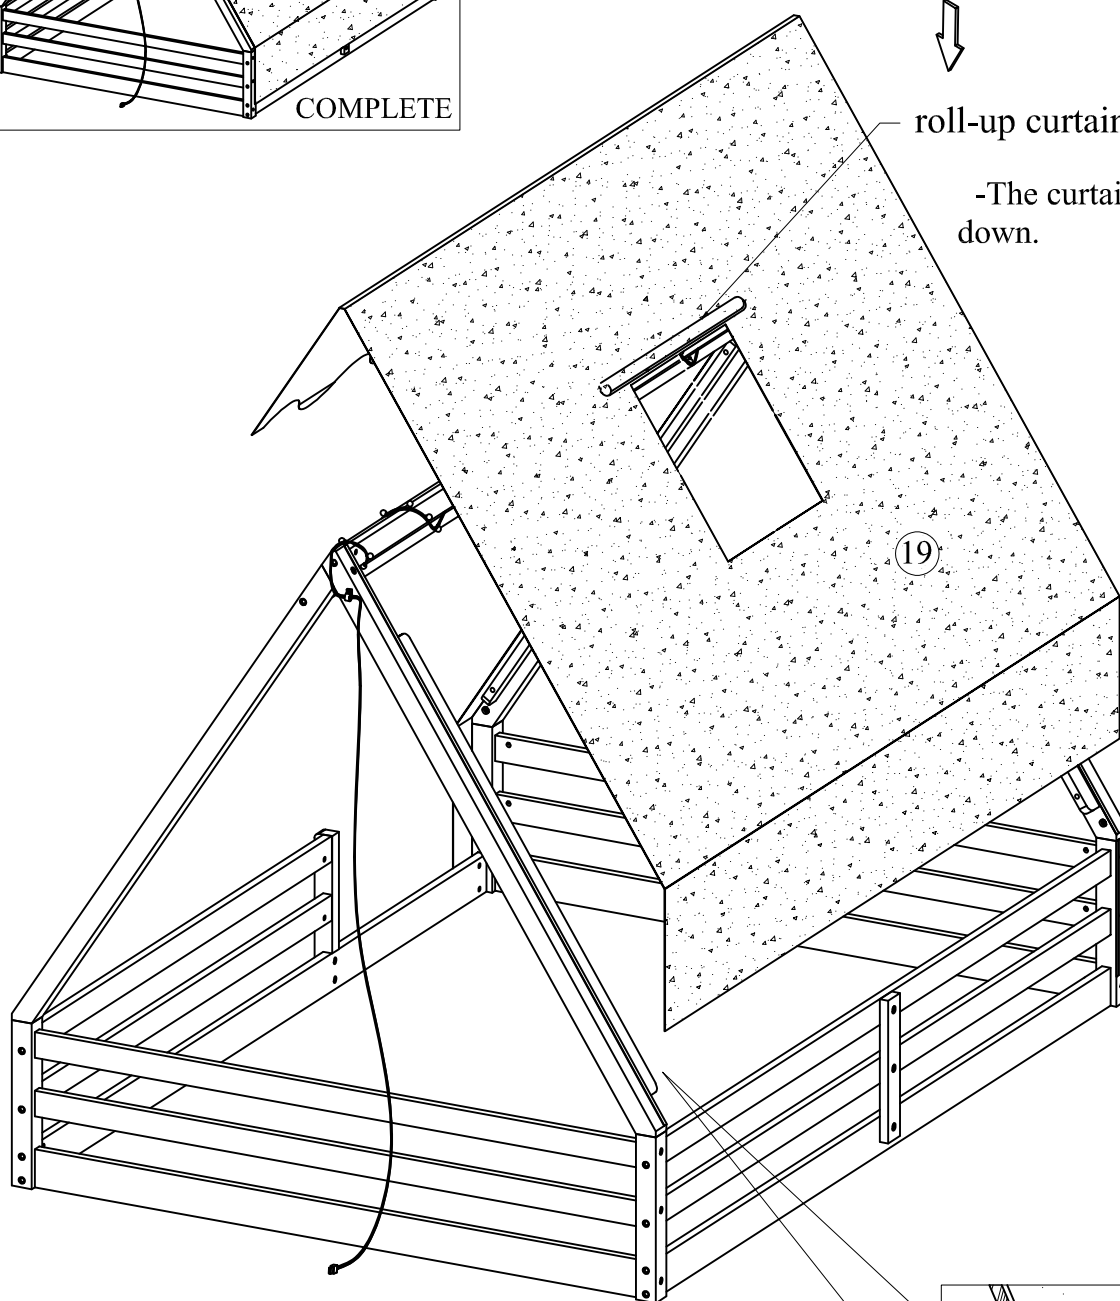

# COMPLETED

