

## NOTICE

\*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

\*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

\*This item may require periodic tightening.

\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

## PREPARATION

\*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.

\*Estimated Assembly Time: 60 minutes.

\*Tools Required for Assembly (included): Allen Key

## CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies.


Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills.

How often you apply the wax depends on how much wear the furniture receives




**Model# NST3107**

**Product Dimensions: W 17.72" X D 15.67" X H 19.80"**

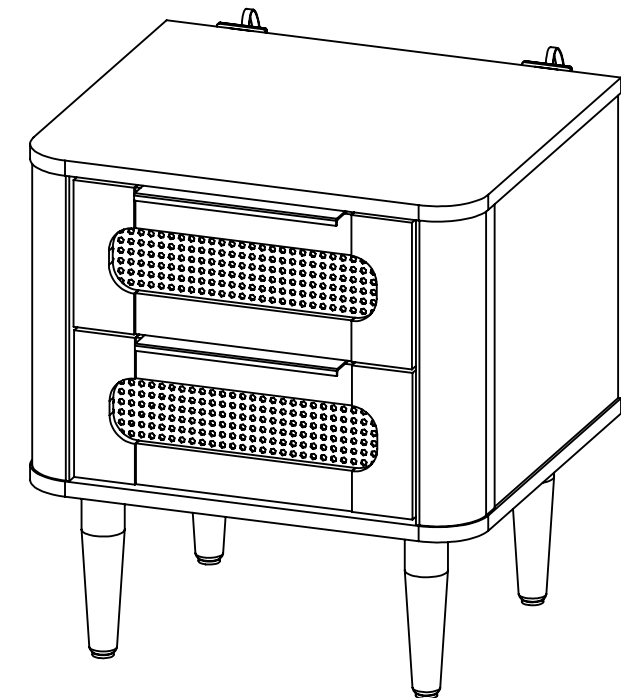

## Part List

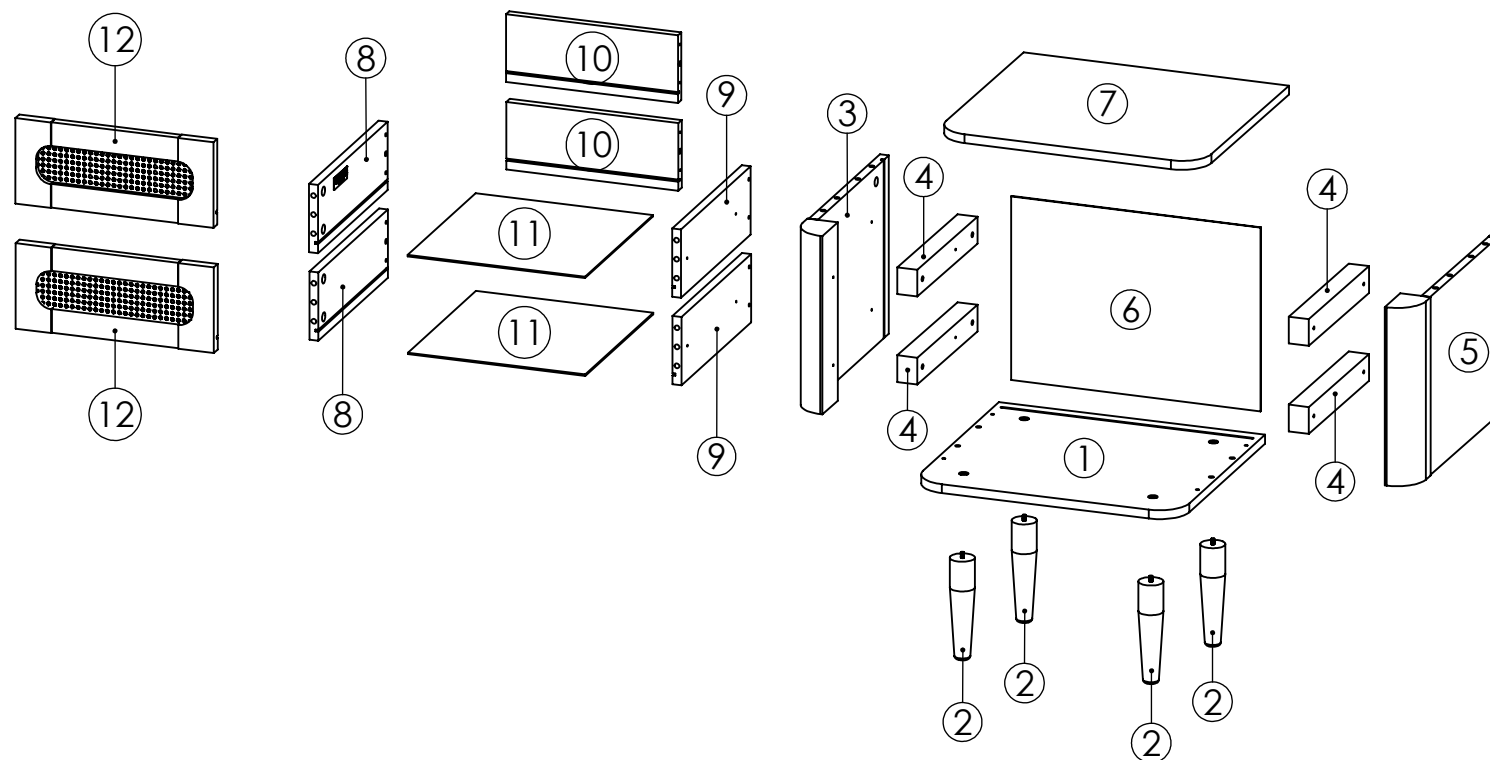

### WARNING

#### WIGHT CAPACITY

















Top load Limit: 19 lbs





Drawer load Limit: 3 lbs

Warning : Do not stand on the product

Warning : Do not over torque bolts

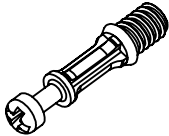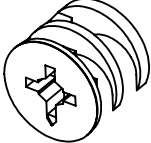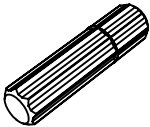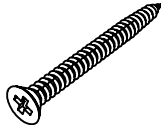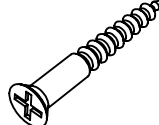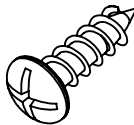Hardware List
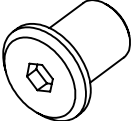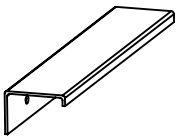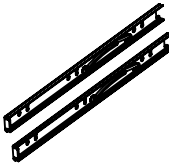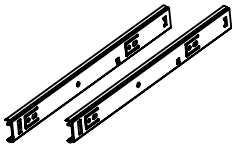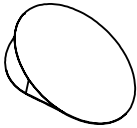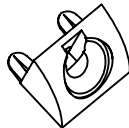
<div>HW1x12</div> <div>Ø 6X32 mm</div> <div></div>	<div>HW2x12</div> <div>Ø 15X12 mm</div> <div></div>	<div>HW3x16</div> <div>Ø 8X32 mm</div> <div></div>	<div>HW4x4</div> <div>Ø 6X50 mm</div> <div></div>	<div>HW5x16</div> <div>Ø 7X32 mm</div> <div></div>	<div>HW6x16</div> <div>Ø 6X12 PH</div> <div></div>
<div>HW7x4</div> <div>Ø 6X12 mm</div> <div></div>	<div>HW8x8</div> <div>Ø 4X19 mm</div> <div></div>	<div>HW9x4</div> <div>Nut Cap</div> <div></div>	<div>HW10x2</div> <div>Handle</div> <div></div>	<div>HW11x2</div> <div>300 mm</div> <div></div>	<div>HW12x2</div> <div>300 mm</div> <div></div>
<div>HW13x16</div> <div>Cover Cap</div> <div></div>	<div>HW14x8</div> <div>Plastic Stopper</div> <div></div>	<div>HW15x1</div> <div>L4 mm</div> <div></div>	<div>HW16x1</div> <div>Foot Pads</div> <div></div>		

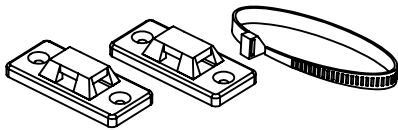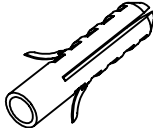Anti-Tip Restrain Pack	
<div>HW17x4</div> <div>Ø 6X15 mm</div> <div></div>	<div>HW18x2</div> <div></div>
<div>HW19x4</div> <div>Ø 8X35 PLUG</div> <div></div>	<div>HW20x4</div> <div>Ø 10X50 mm</div> <div></div>

## Part List & HW


Piece	Description	Qty	Carton Call
1	Bottom Panel	1	1 of 1
2	Legs	4	1 of 1
3	Side Panel -Left	1	1 of 1
4	Stopper	4	1 of 1
5	Side Panel -Right	1	1 of 1
6	Back Panel	1	1 of 1
7	Top Panel	1	1 of 1
8	Side Drawer -Left	2	1 of 1
9	Side Drawer -Right	2	1 of 1
10	Back Drawer	2	1 of 1
11	Base Drawer	2	1 of 1
12	Front Drawer	2	1 of 1

Piece	Description	Qty	Carton Call
HW1	Cambolt	12	1 of 1
HW2	Camlock	12	1 of 1
HW3	Wooden Dowel	16	1 of 1
HW4	Screw M6 x 50 mm	4	1 of 1
HW5	Screw M7 x 32 mm	16	1 of 1
HW6	Screw M6 x 12 PH	16	1 of 1
HW7	Screw M6 x 12 mm	4	1 of 1
HW8	Screw M4 x 19 mm	8	1 of 1
HW9	Nut Cap 12 x 13 mm	4	1 of 1
HW10	Handle	2	1 of 1
HW11	Metal Runner 1	2	1 of 1
HW12	Metal Runner 2	2	1 of 1
HW13	Cover Cap Sticker	16	1 of 1
HW14	Plastic Stopper	8	1 of 1
HW15	Allen Key	1	1 of 1
HW16	Foot Pads	4	1 of 1
HW17	Screw M6 x 15 mm	4	1 of 1
HW18	Anti-Tip	2	1 of 1
HW19	Ø 8 x 35 mm PLUG	4	1 of 1
HW20	Screw M10 x 50 mm	4	1 of 1


## Special Tips for Fitting Minifix Cam ( Cam-Lock ), and Minifix Bolt ( Cam-Bolts )

### CAM-BOLT



Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

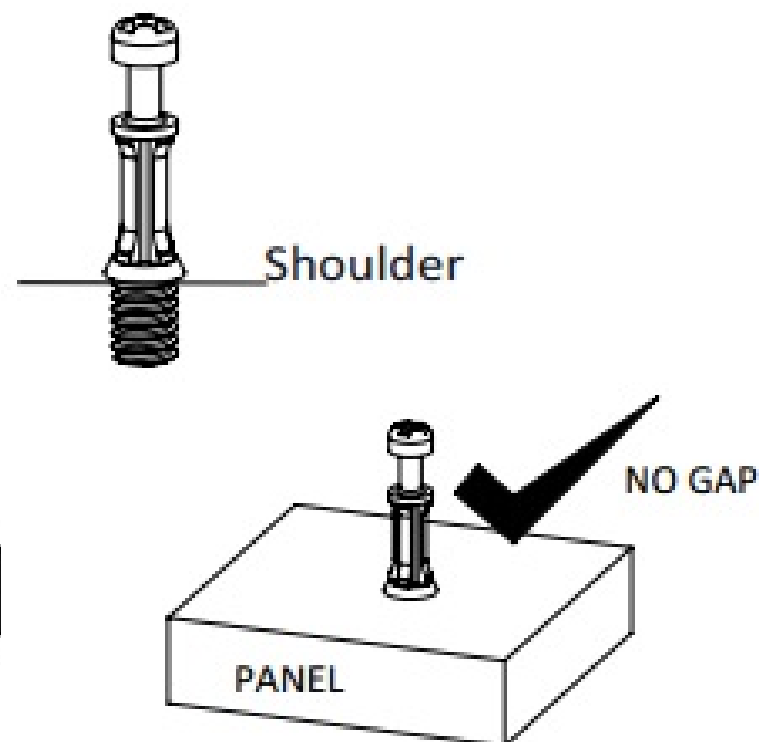

### CAM-LOCK




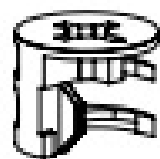



WHEN TIGHTENING CAM-LOCK  
Turn the Cam-lock Clockwise Until  
The Arrow Points in the Position as bellow

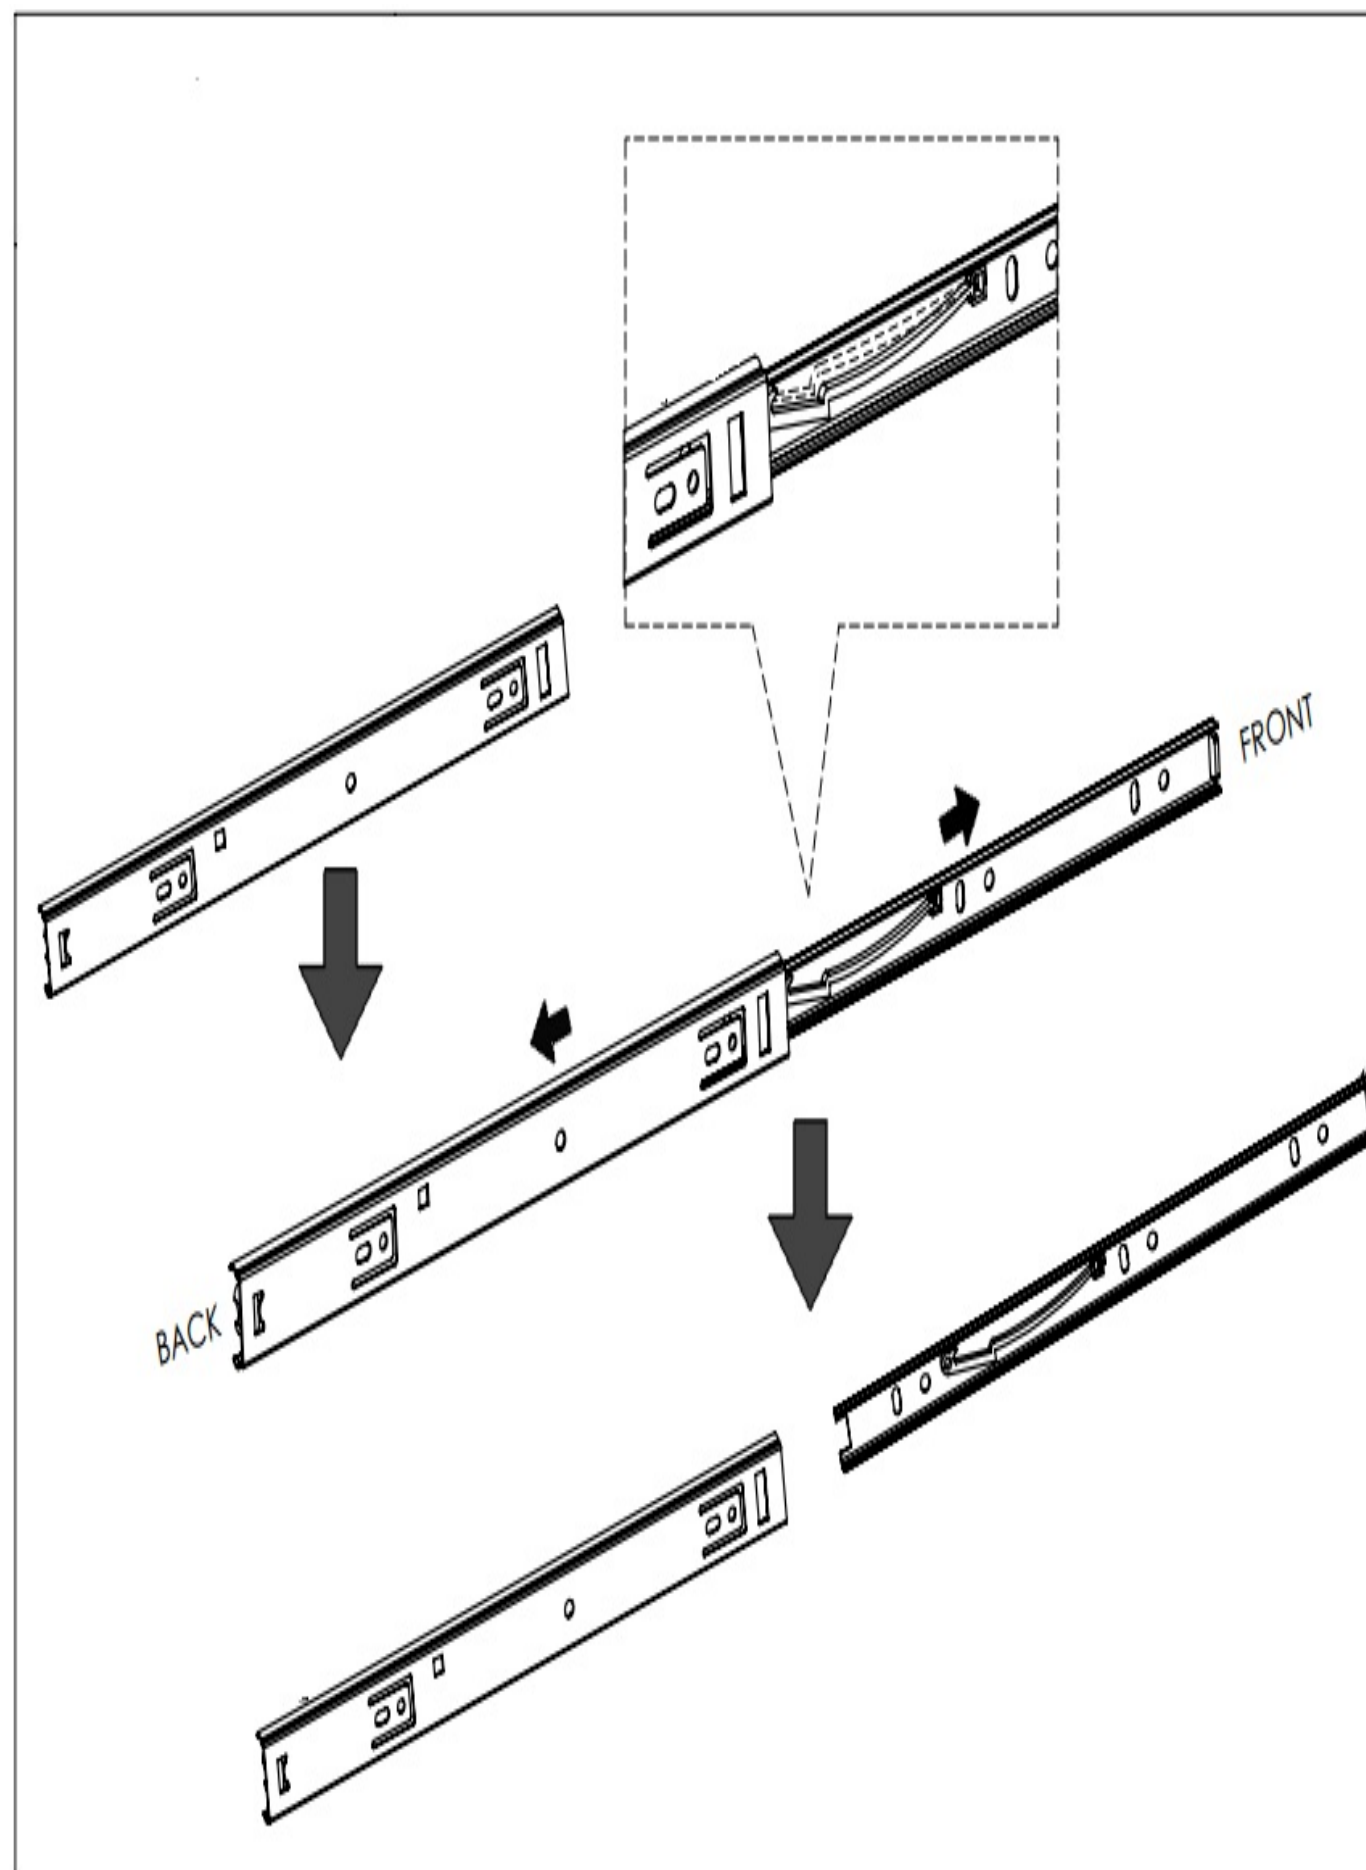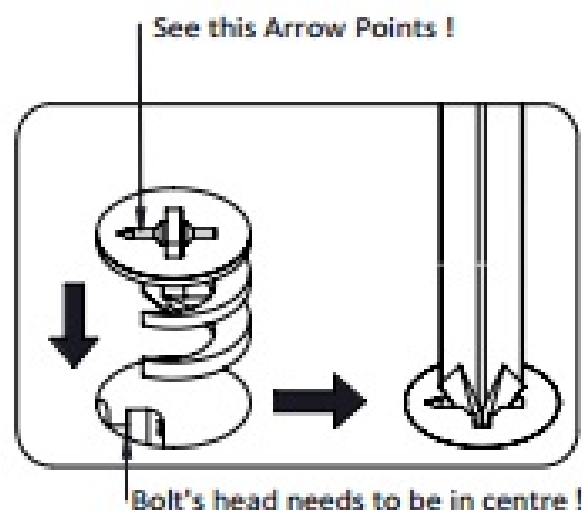


PREPARATION

Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.  
Estimated Assembly Time: 60 minutes.

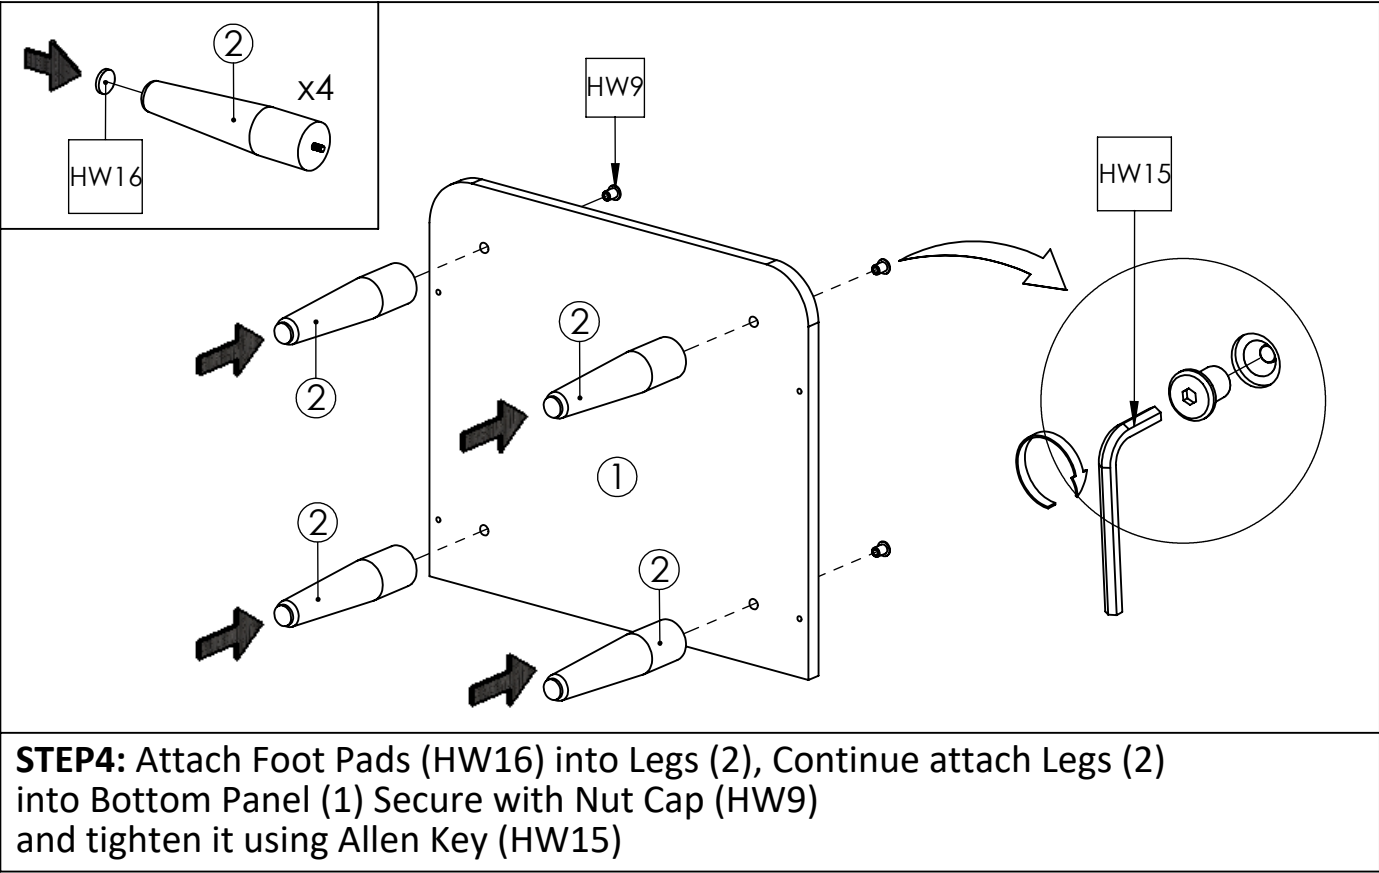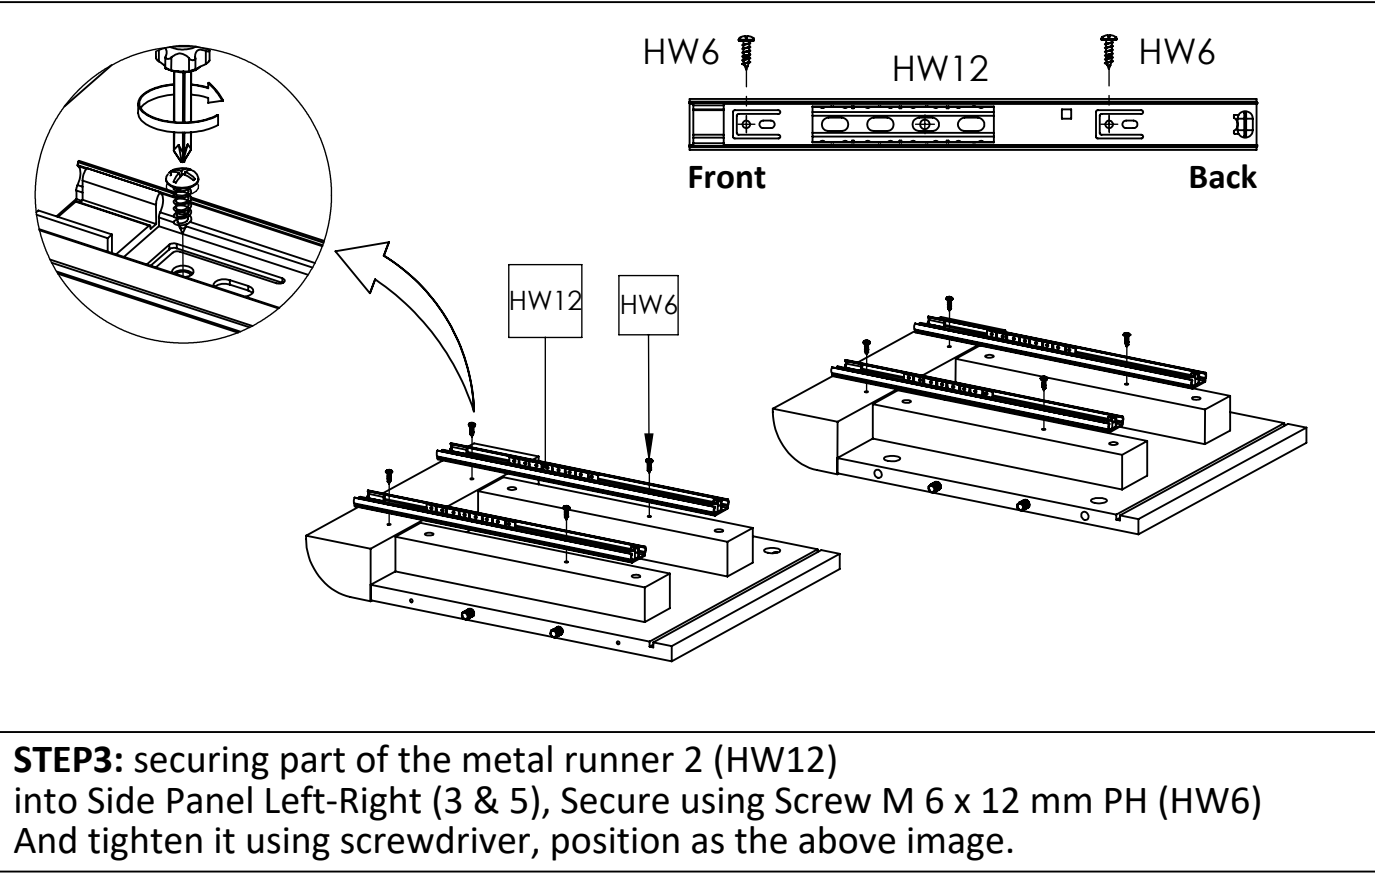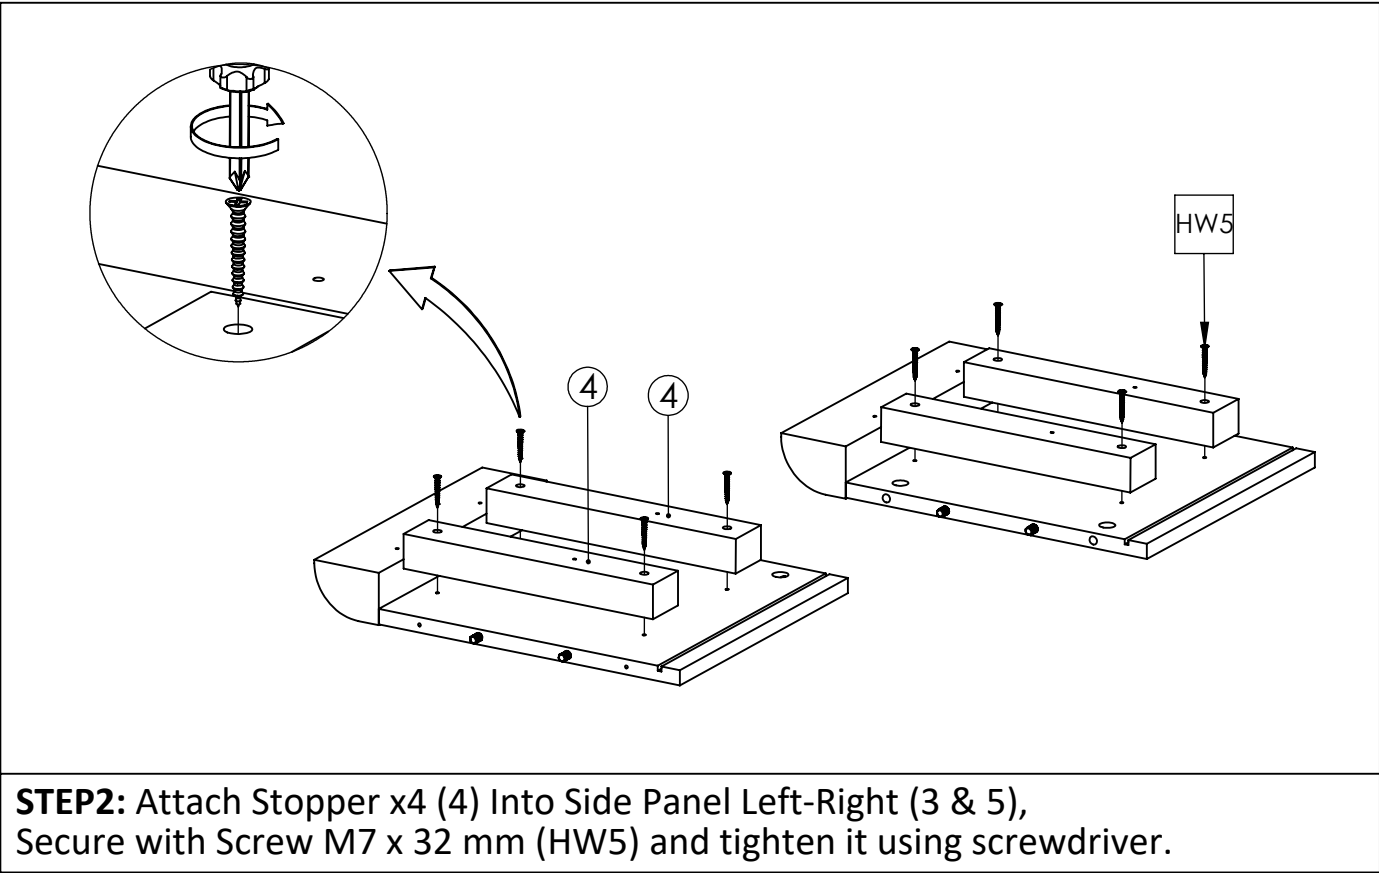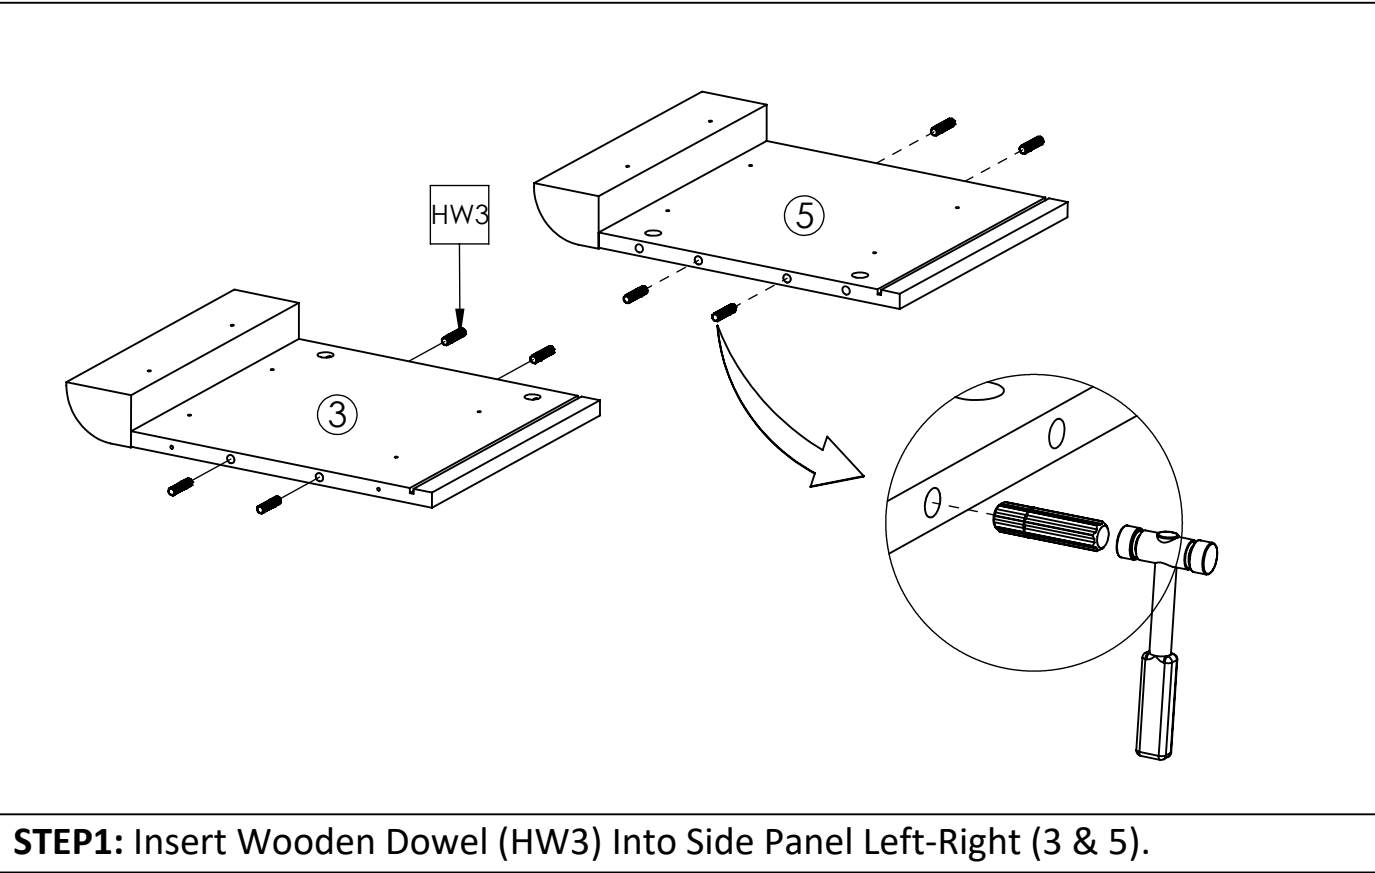


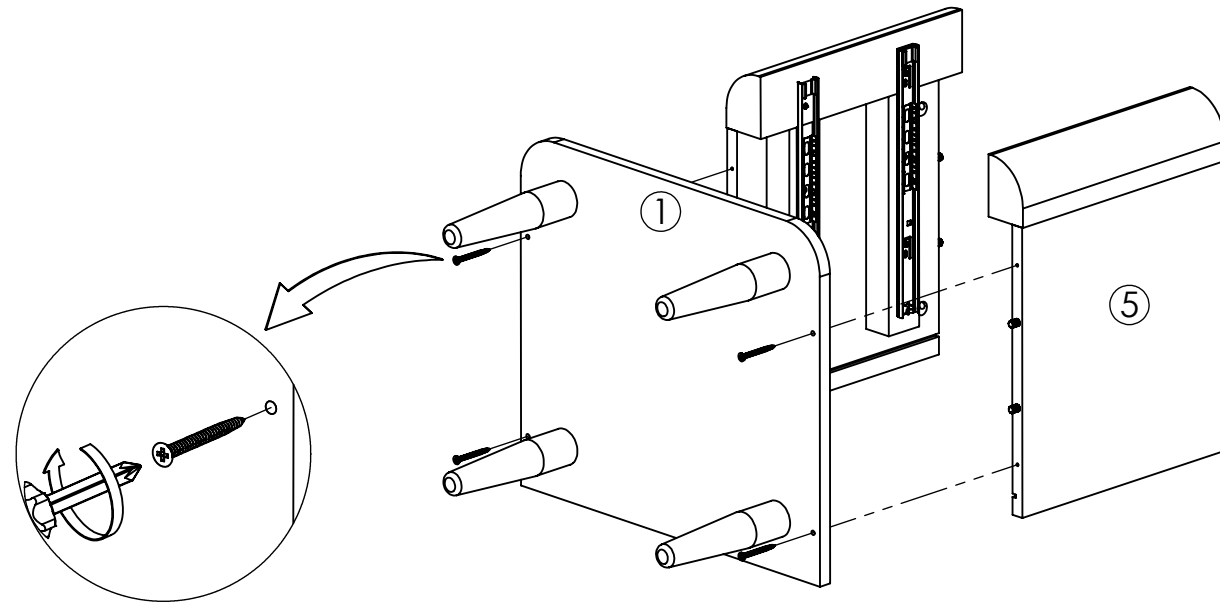


**STEP5:** Attach Side Panel Left-Right (3 & 5) Into Bottom Panel (1), Secure with Screw M6 x 50 mm (HW4) and tighten it using Screwdriver.

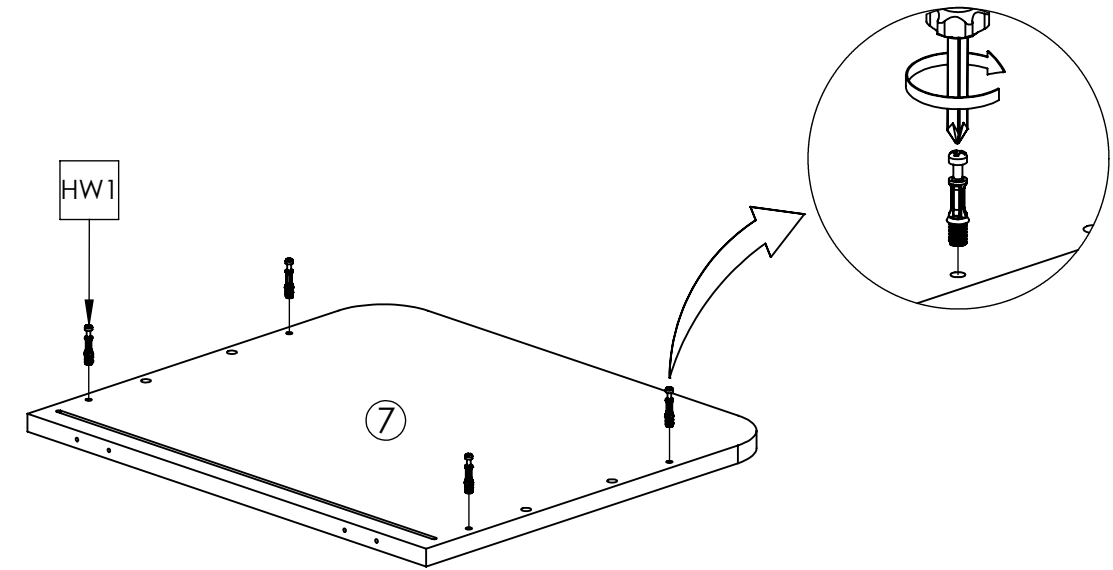

**STEP6:** Insert Cambolt (HW1) into Top Panel (7), And tighten it using Screwdriver

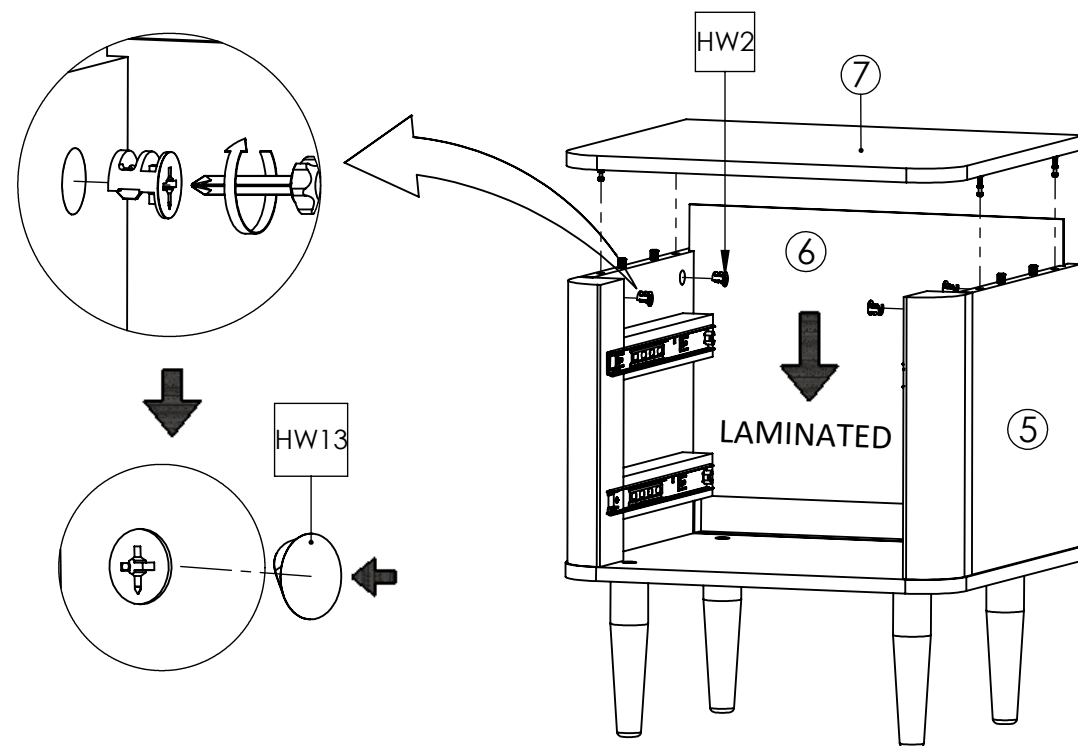


**STEP7:** Insert Back Panel (6), And attach top panel (7) then tighten camlock (HW2) using screwdriver. attach the cover cap sticker (HW13) to the panel that has lamination.

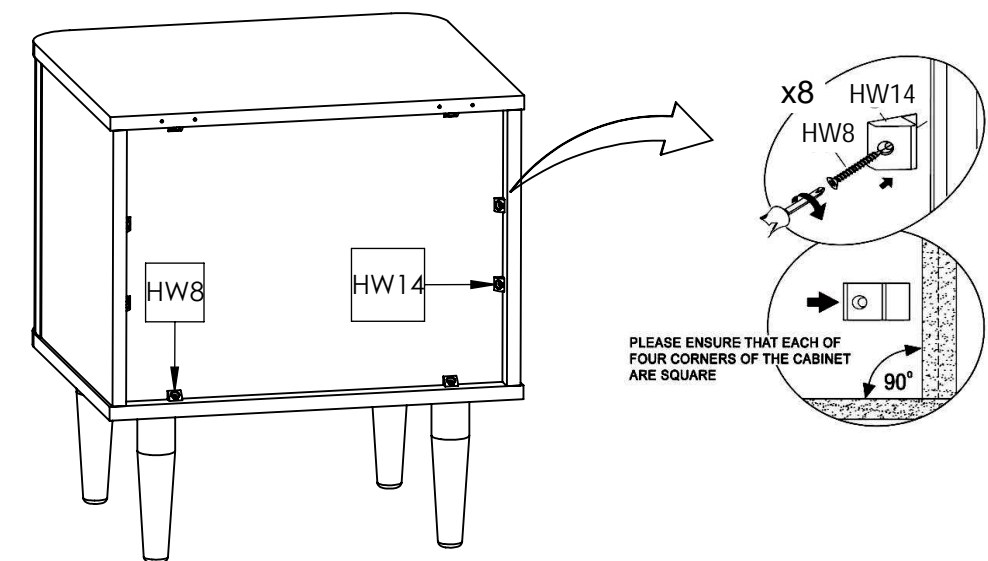


**STEP8:** Attach the plastic stopper (HW14) to the back panel Secure with screw M4x19 mm (HW8) and tighten it using screwdriver.




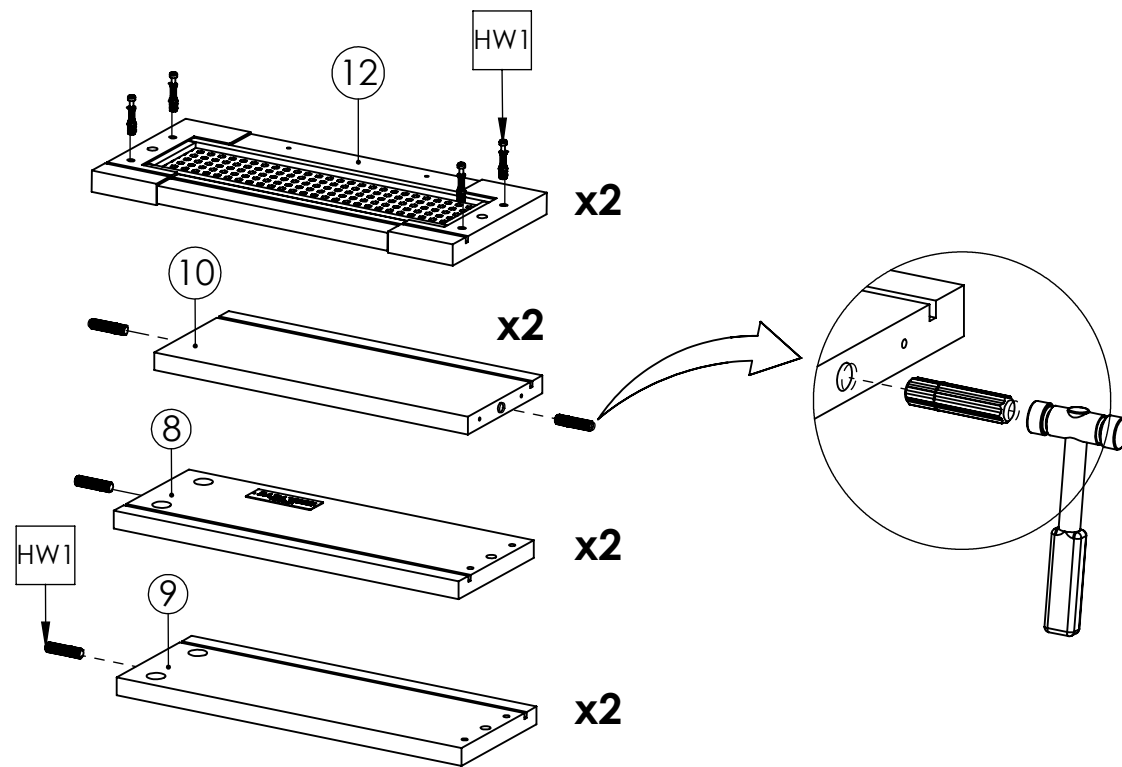


**STEP9:** Insert Cambolt (HW1) into Front Drawer (12) and tighten it using Screwdriver. Continue Insert Wooden Dowel (HW3) into Side Drawer Left-Right (8 & 9) and Back Drawer (10).

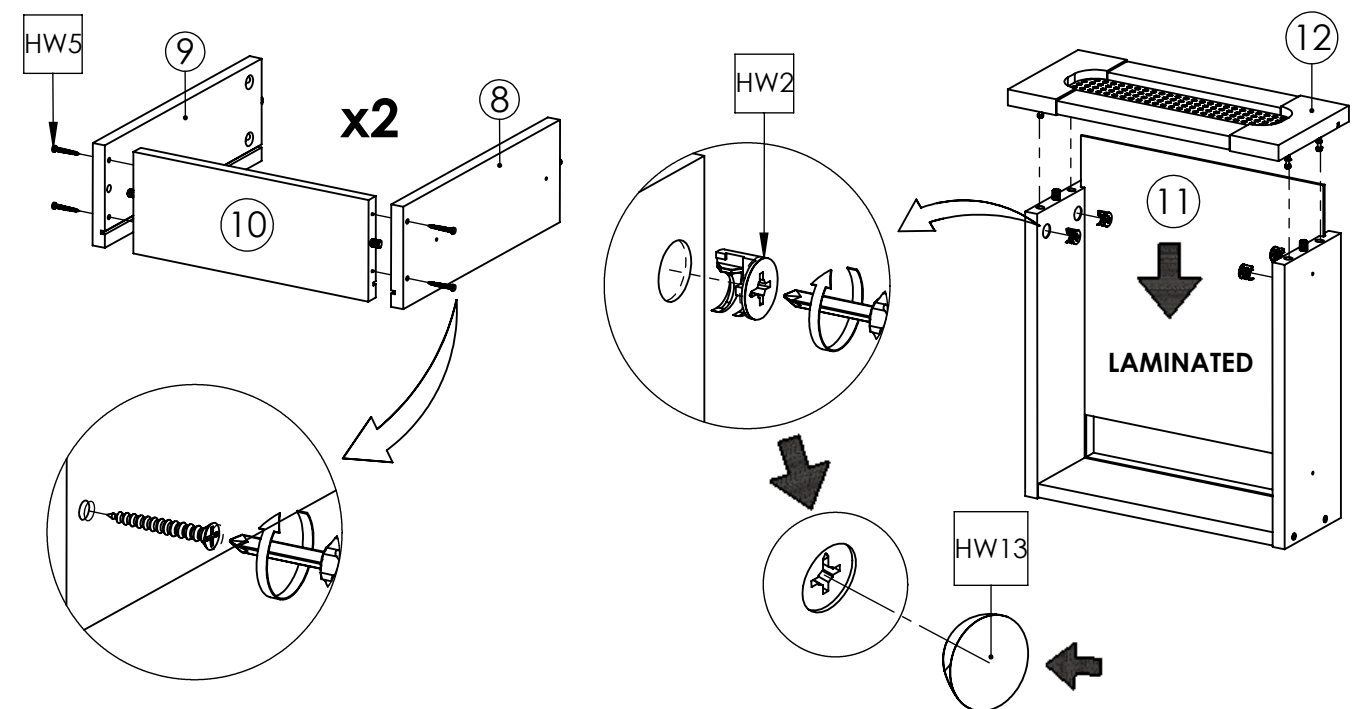


**STEP10:** Attach Side Drawer (8 & 9) into Back Drawer (10), Secure With Screw M7x32 mm (HW5) Continue insert Drawer Base (11) and Front Drawer (12) then put Side drawer (8 & 9) Secure with Screw M7x32 mm (HW5) and tighten it using screwdriver. attach the cover cap sticker (HW13) to the panel that has lamination.

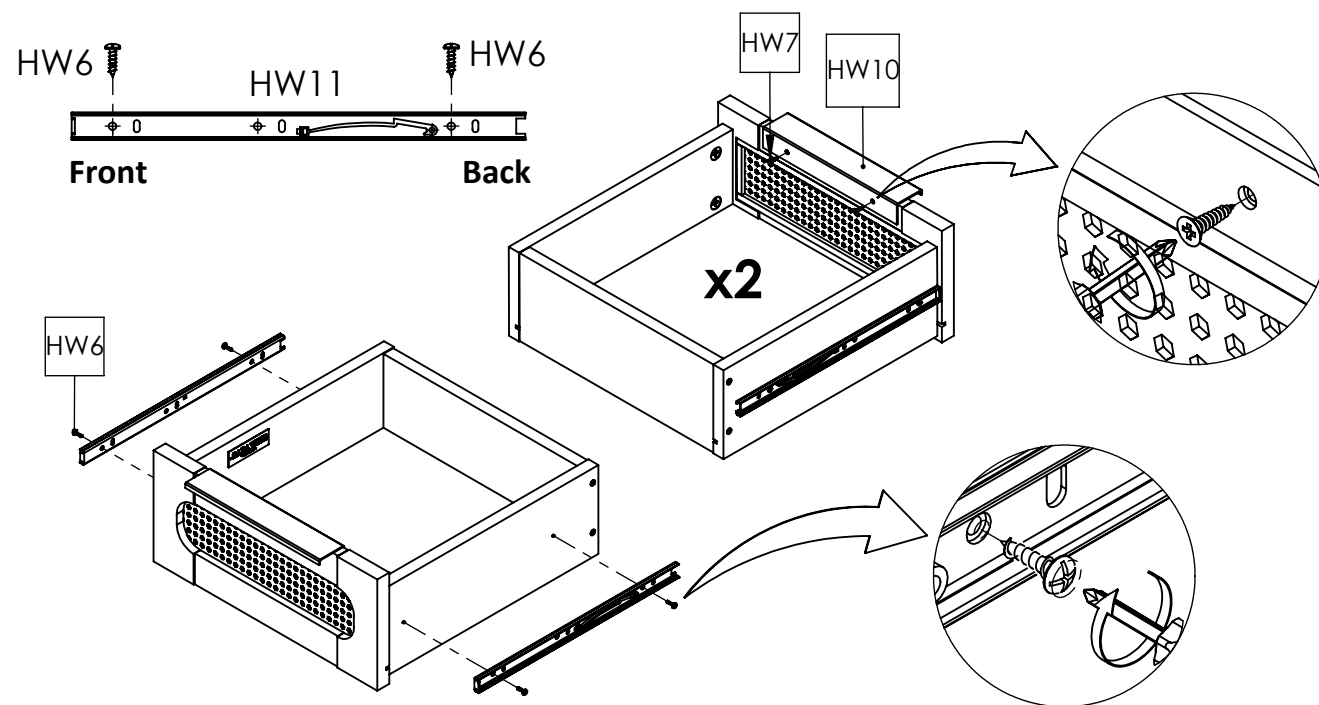

**STEP11:** Install the metal runner 1 (HW11) into position as shown in picture. Secure with screw M6x12 PH (HW6) and Tighten It Using Screwdriver. Continue insert Handle (HW10) into Front Drawer (12), Secure with Screw M6 x 12 (HW7) and tighten it using Screwdriver.

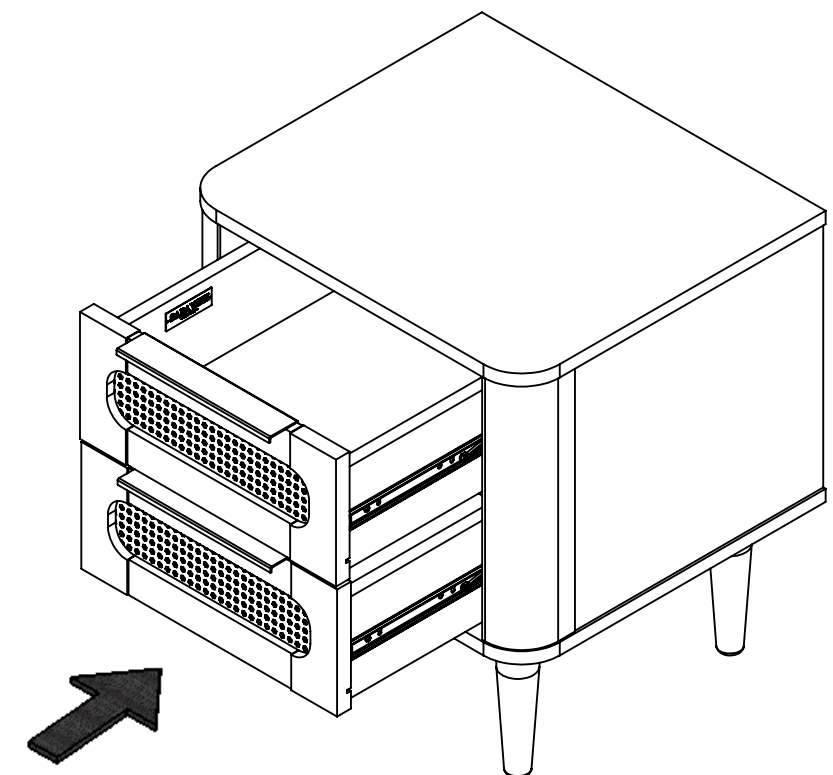

**STEP12:** Insert the attached drawer into the panel.

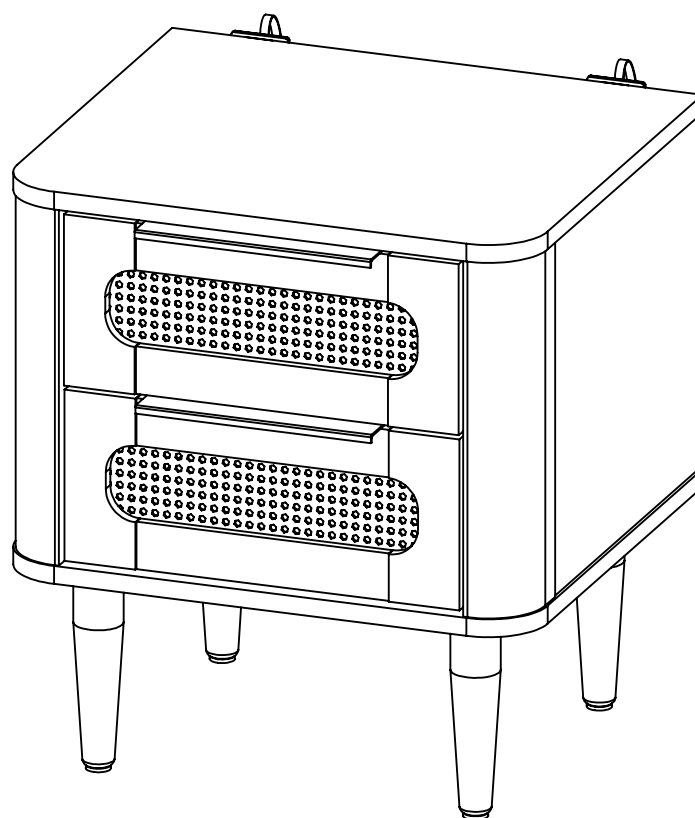

**STEP13:** Assembly is completed.






# ANTI-TIP RESTRAINT INSTALLATION


## ! WARNING!

Children have died from furniture tipover.  
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

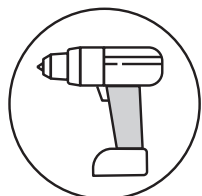


**REQUIRED TOOL**  
8MM / 5/16" DRILL BIT

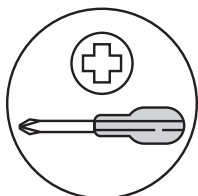

**REQUIRED TOOL**




Hardware (HW19 / HW20) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

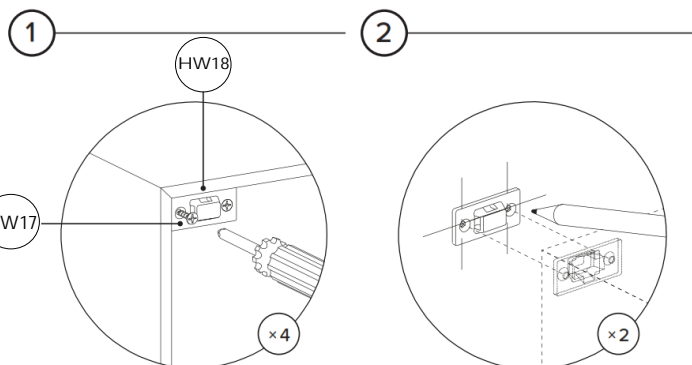


Attach pair of brackets to "Top Panel" of the unit. Note there are no existing pilot holes on the product.


Mark on wall where second pair of brackets should be placed.

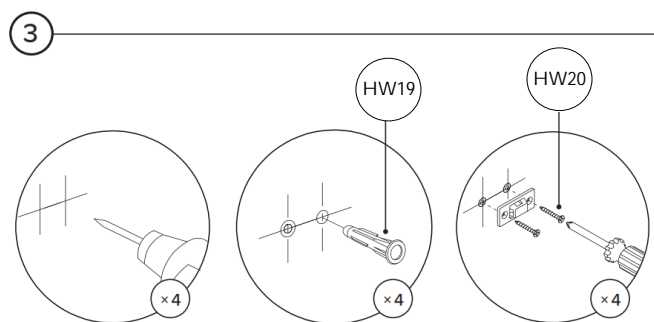

Drill holes in wall using 8mm / 5/16" drill bit.

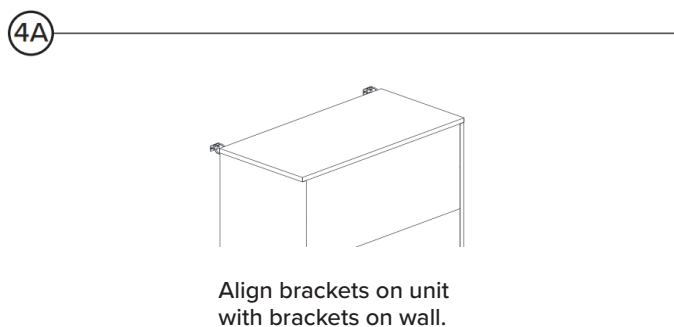






Align brackets on unit with brackets on wall.

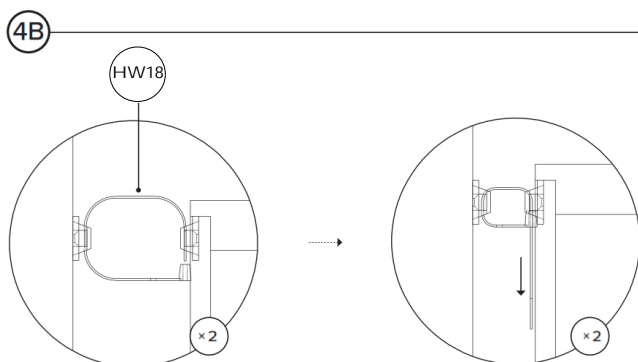

Pull strap down until it snap-locks.

## ANTI-TIP RESTRAINT PACK

ID	DESCRIPTION	QTY
HW18	BRACKET 	4
HW17	M6 × 15MM SCREW 	4
HW19	M8 × 35MM PLUG 	4
HW20	M10 × 50MM SCREW 	4
HW18	STRAP 	2