

# ROSEANNE BANANA STEM 6 DRAWER DRESSER

DESIGN # SFV1328


Assembly Instructions

## **Need help?**

Feel free to contact us via email or call  
if you have any specific questions!

## **contact us:**

cs@safavieh.com  
866-422-9070

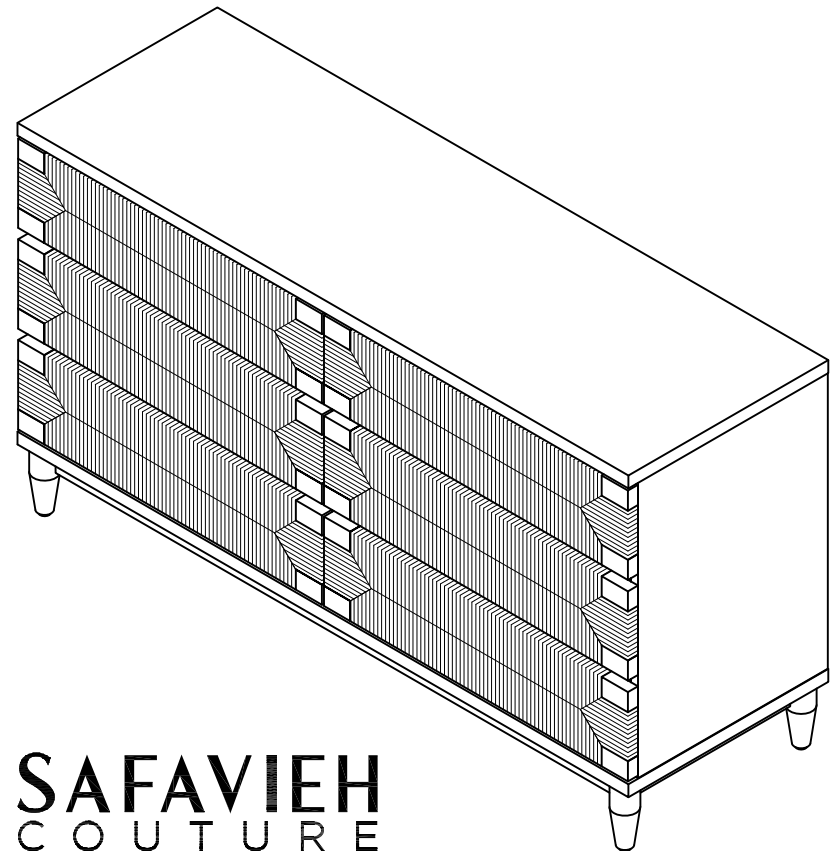

**SAFAVIEH**  
C O U T U R E

## Thanks for bringing Safavieh Couture into your home

Every thing we make is incredibly simple to set up, including your new dresser. You won't need any additional tools.

### Parts List

A x 1  
TOP PANEL



B x 1  
LEFT PANEL




C x 1  
RIGHT PANEL



D x 1  
DIVIDER




E x 2  
FRONT RAIL



F x 1  
BOTTOM ASSEMBLY




G x 2  
BACK PANEL



H x 4  
LEG



I x 6  
DRAWER FRONT



J x 6  
DRAWER LEFT




K x 6  
DRAWER RIGHT



L x 6  
DRAWER BACK



M x 6  
DRAWER BASE



N x 6  
DRAWER SUPPORT




### Hardware List

HW1 x 8  
BOLT 6x1x30 mm



HW2 x 66  
FLAT HEAD SCREW 3x1x32 mm



HW3 x 36  
FLAT HEAD SCREW 3x1x19 mm



HW4 x 36  
CAMBOLT



HW5 x 36  
CAMLOCK



HW6 x 12  
DOWEL



HW7 x 8  
SPRING WASHER Ø13x1 mm




HW8 x 1  
L KEY




1


Attach Cambolts (HW4) to Top, Left and Right Panels (A), (B) and (C), Front Rails (E), Bottom Assembly (F) and Back Panels (G).

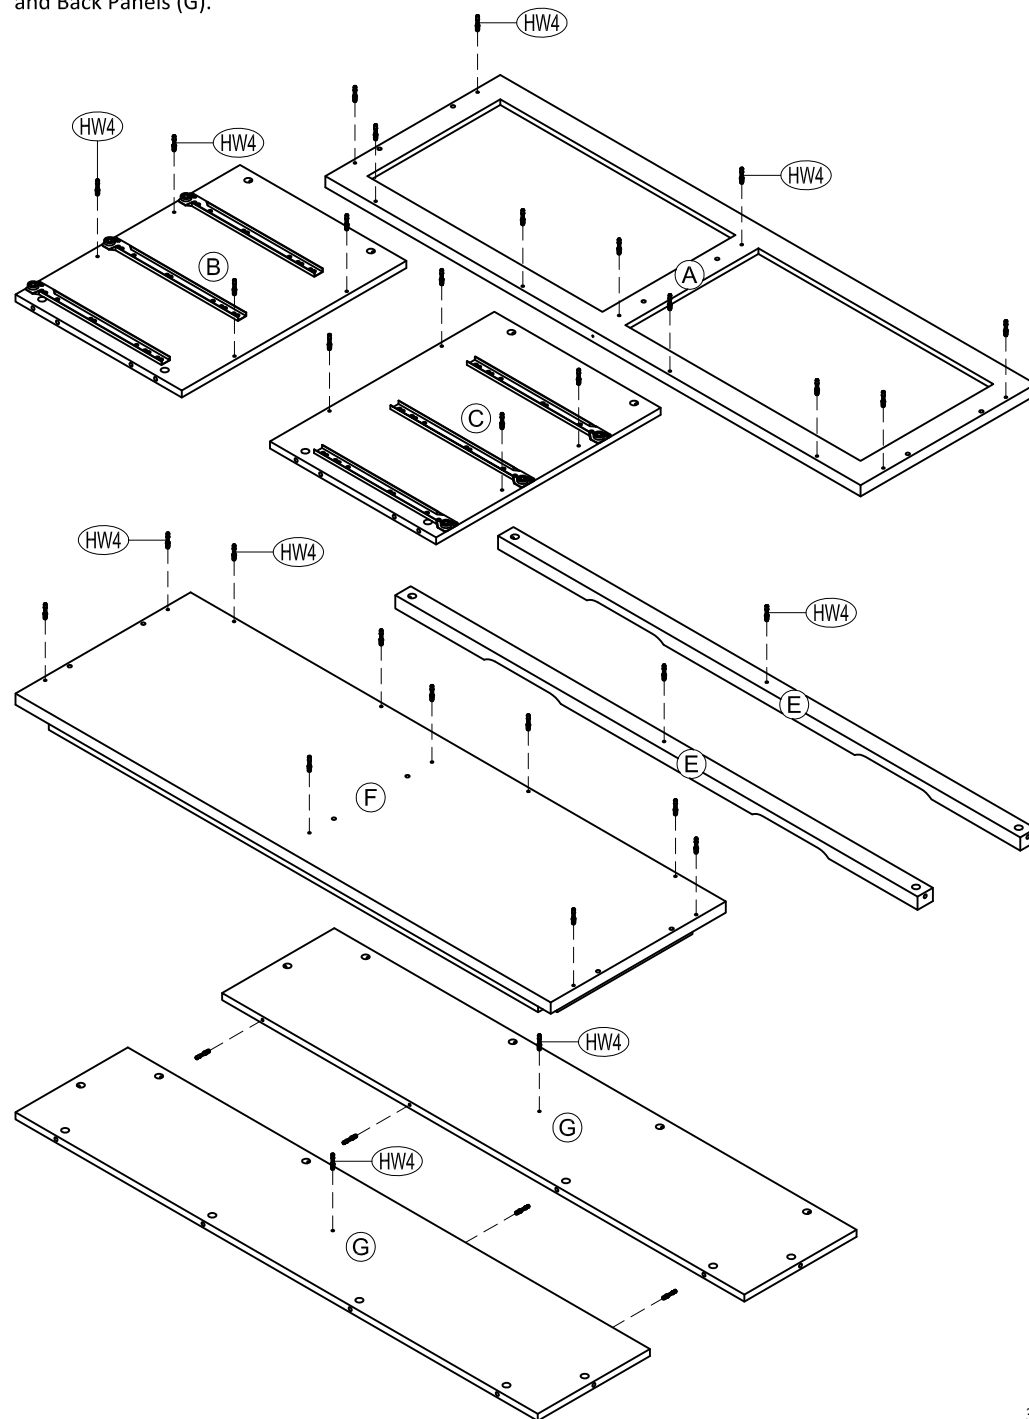


Join Back Panels (G) Using Camlocks (HW5).

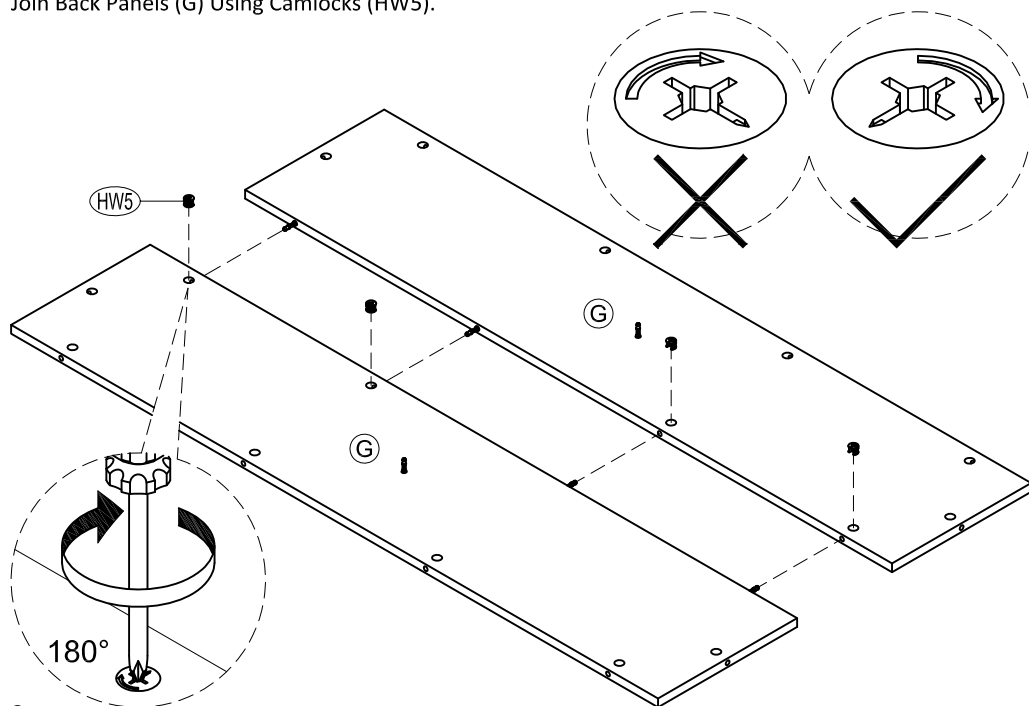

Attach Divider (D) to unit and Front Rails (E) using Camlocks (HW5).

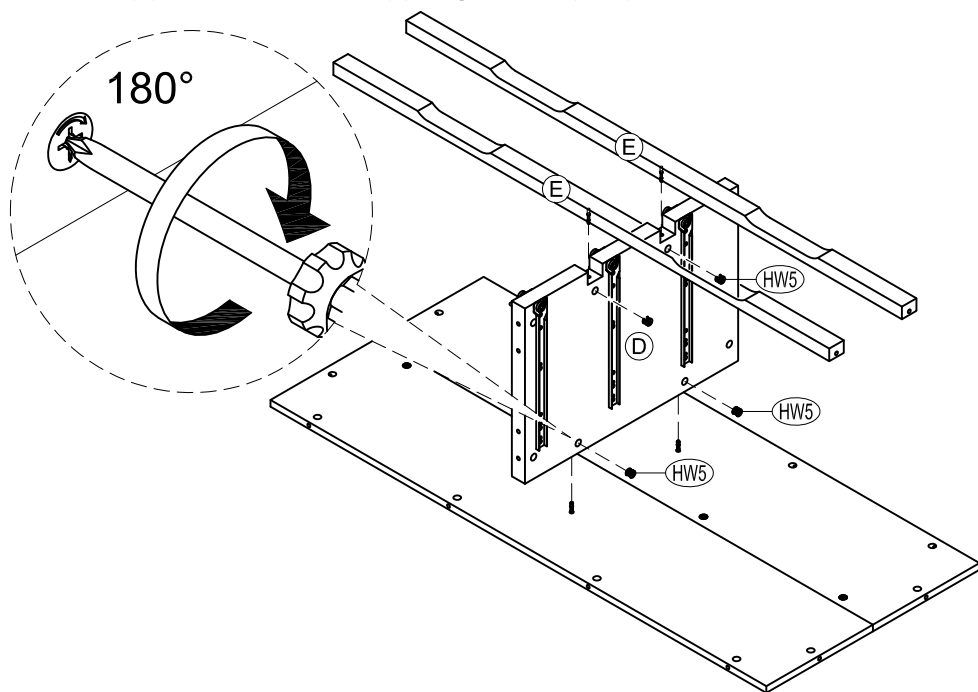


Attach Left and Right Panels (B) and (C) to unit using Camlocks (HW5).

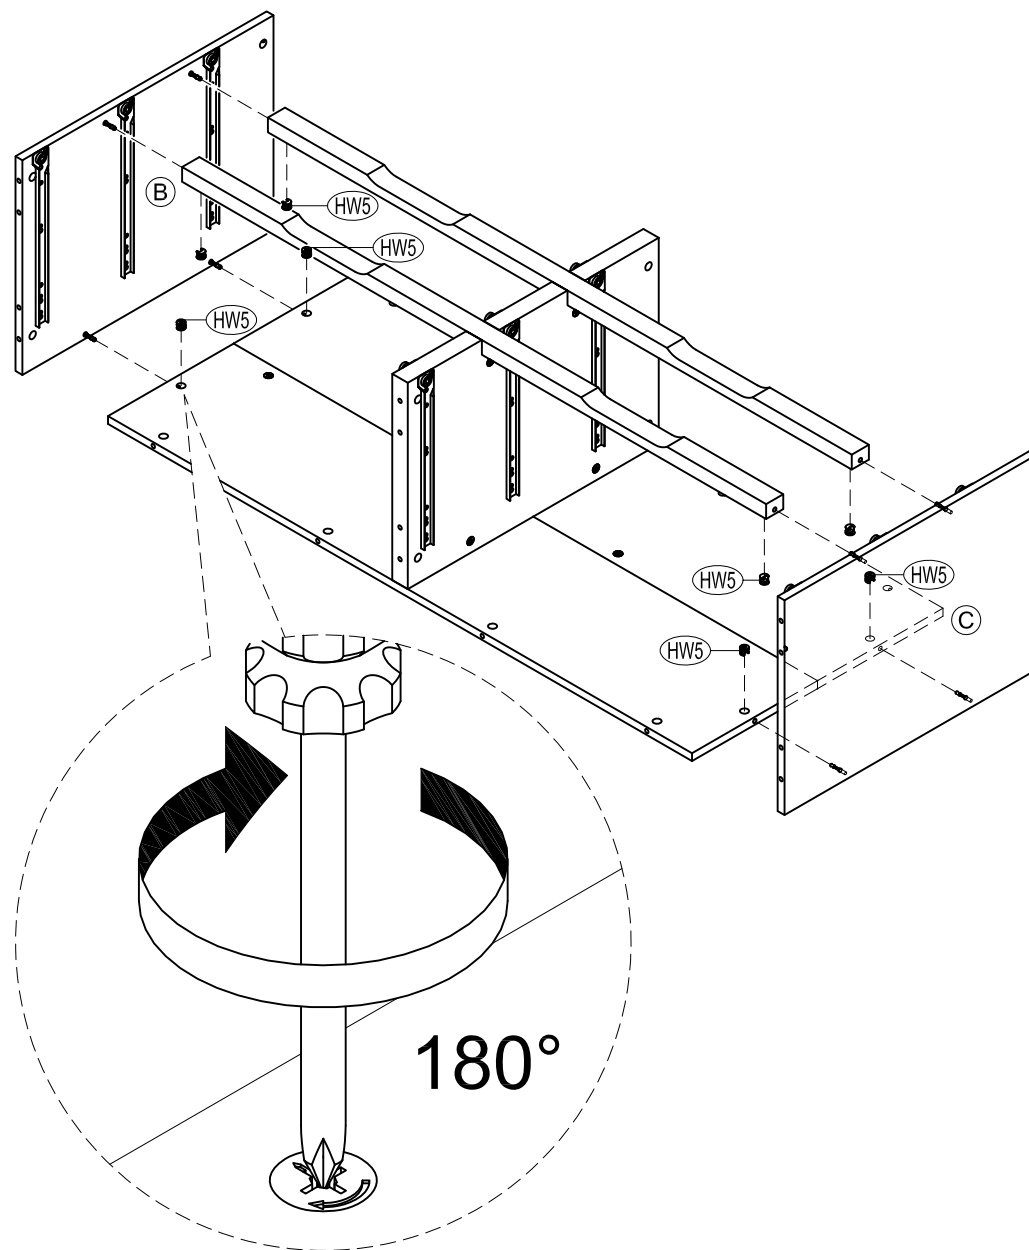

5


Attach Top Panel (A) and Bottom Assembly (F) to unit using Camlocks (HW5) and Dowels (HW6).

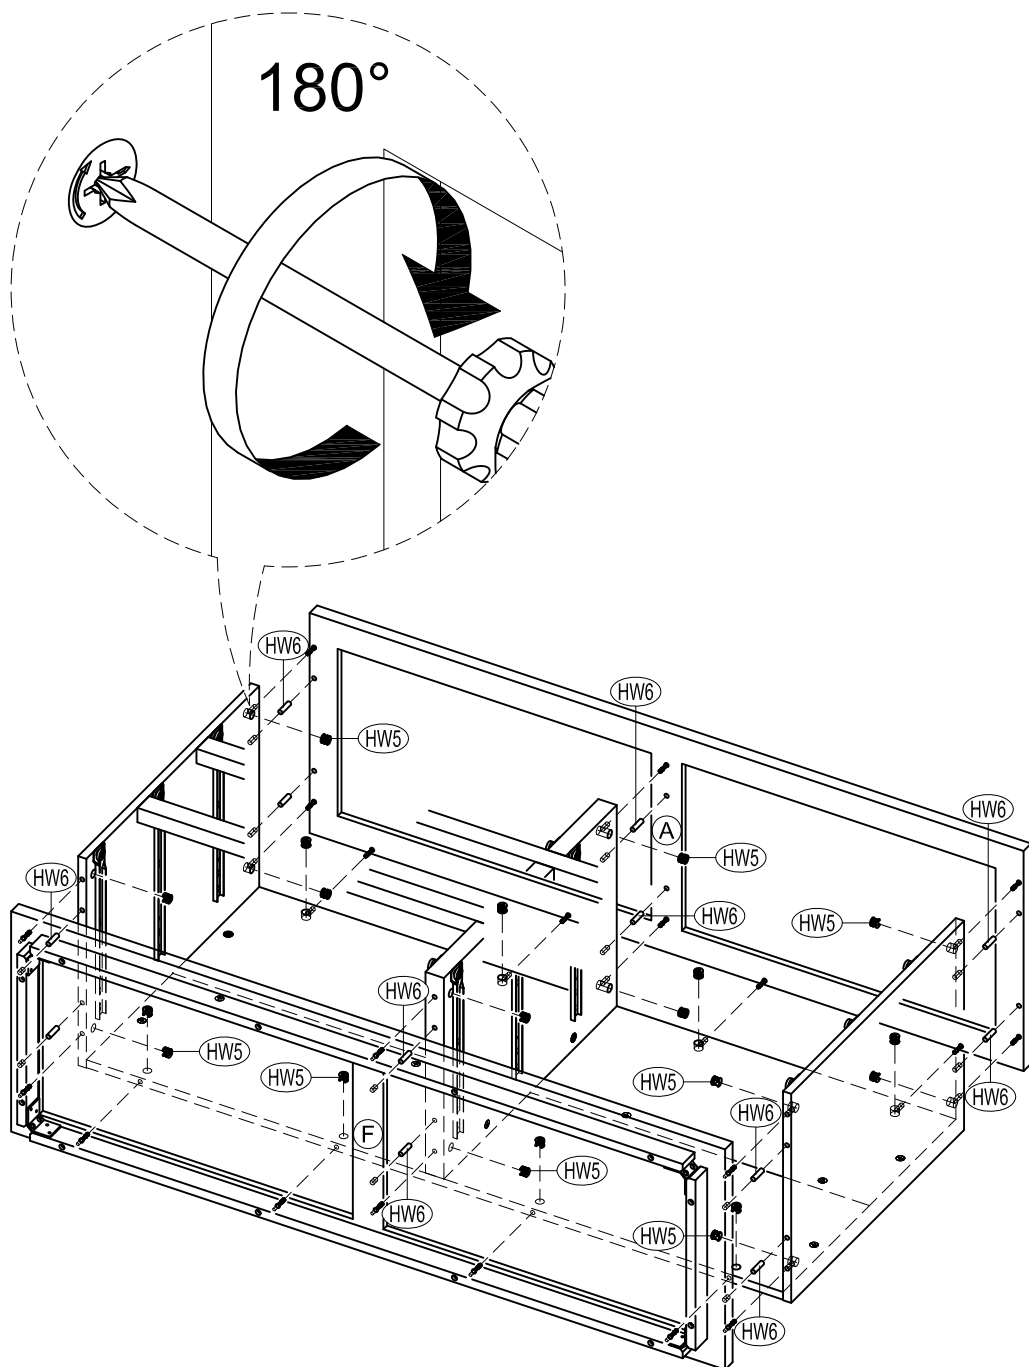

6

6


Attach Legs (H) to unit using Bolts (HW1) and Spring Washers (HW7). Tighten Bolts (HW1) using L Key (HW8).

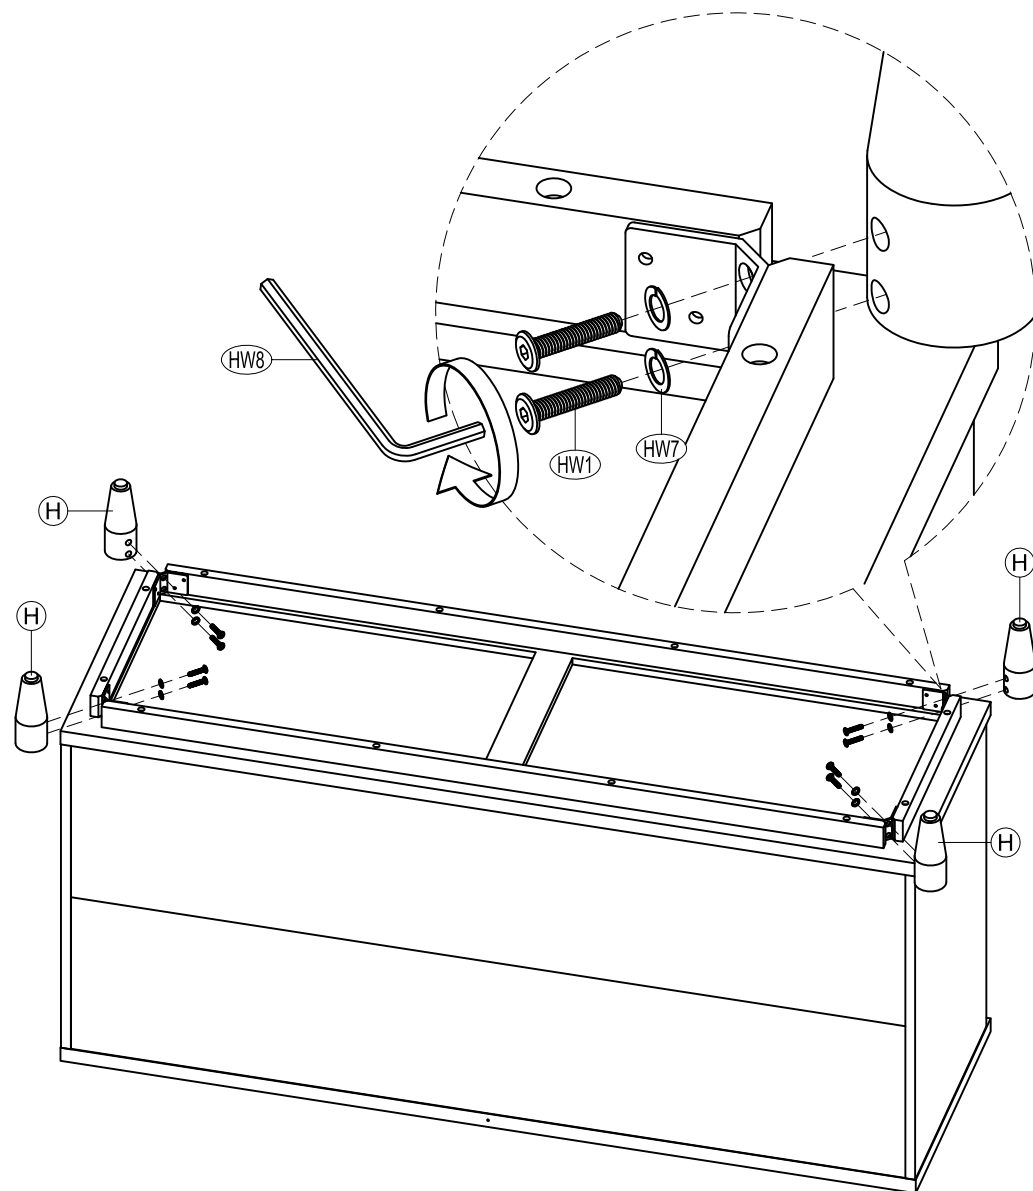

7


7

Turn the unit upright and adjust the levelers on the bottom of the legs as needed.

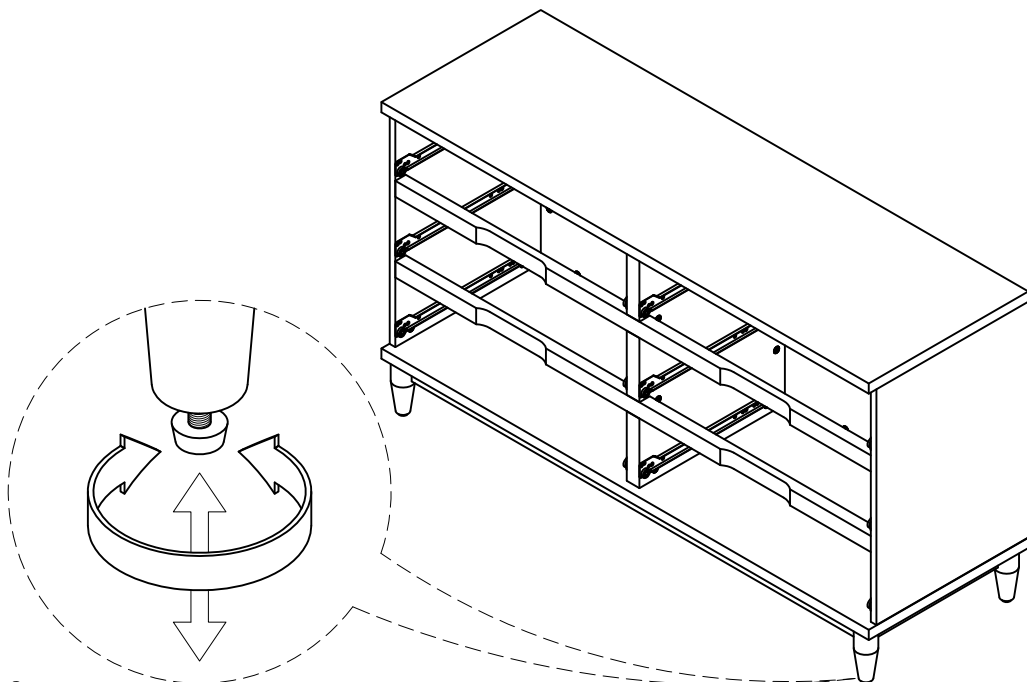


8

Attach Drawer Left and Right (J and K) to Drawer Back (L) using Flat Head Screws 32 mm (HW2). Slide Drawer Base (M) into the groove. Attach Drawer Front (I) to Drawer Left and Right (J and K) using Flat Head Screws 32 mm (HW2).

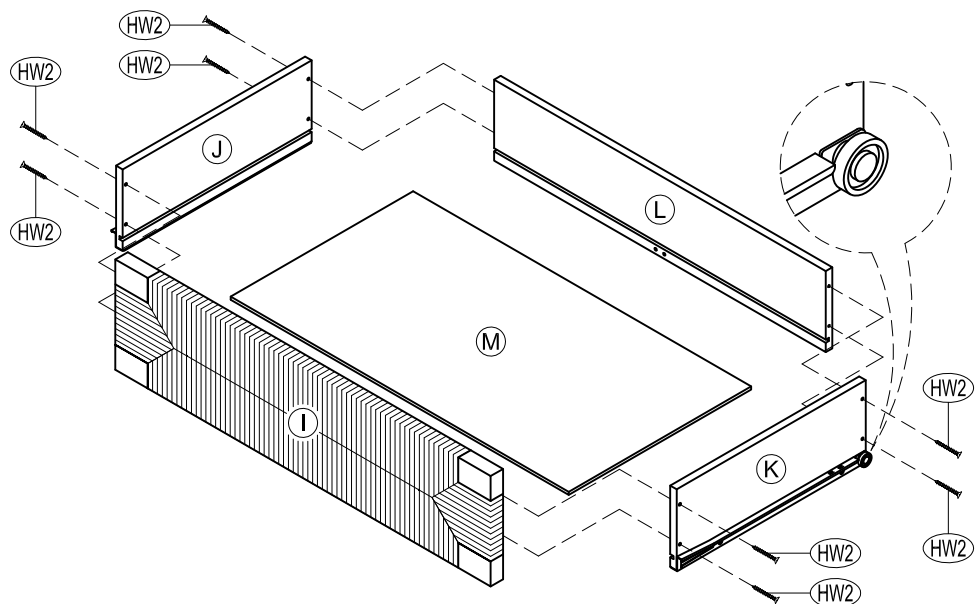


9

Attach Drawer Support (N) to unit using Flat Head Screws 32 mm (HW2). Do the same steps (step 8 and 9) for remaining drawers

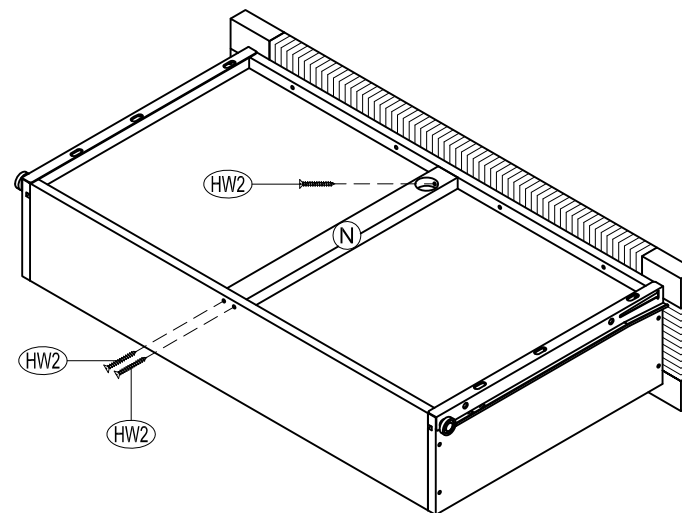


10

Loosen slightly the screws pre-installed on the back of the Drawer Fronts.

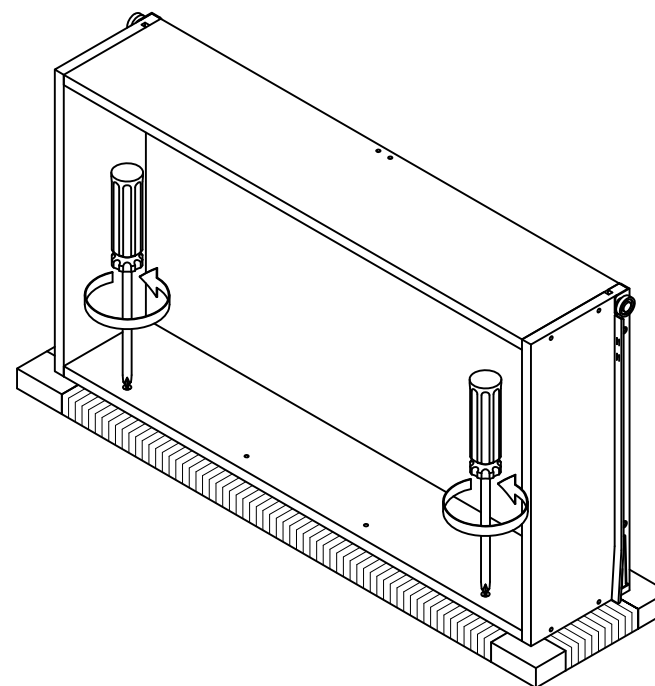


11

Insert the drawers into the unit

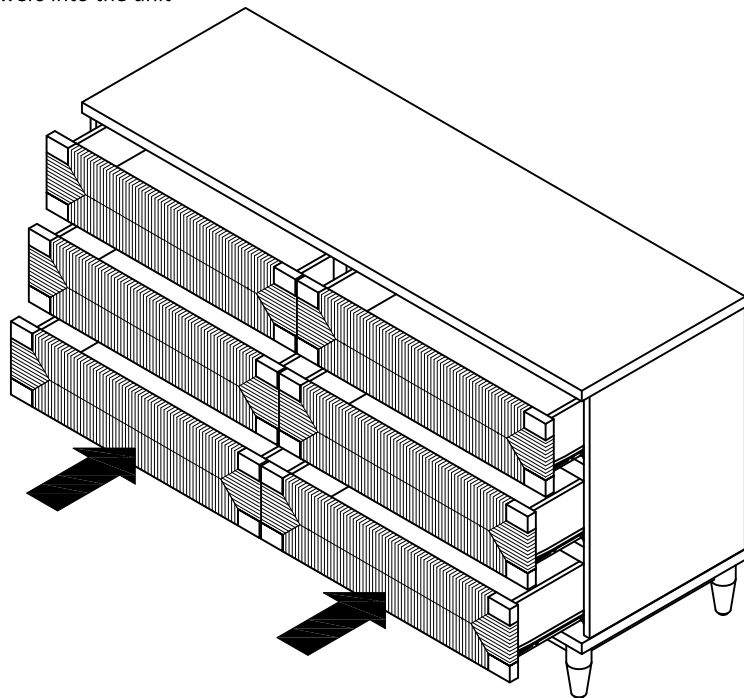

12


Adjust the drawer front panel left or right and up or down until the drawer gaps look proportional.

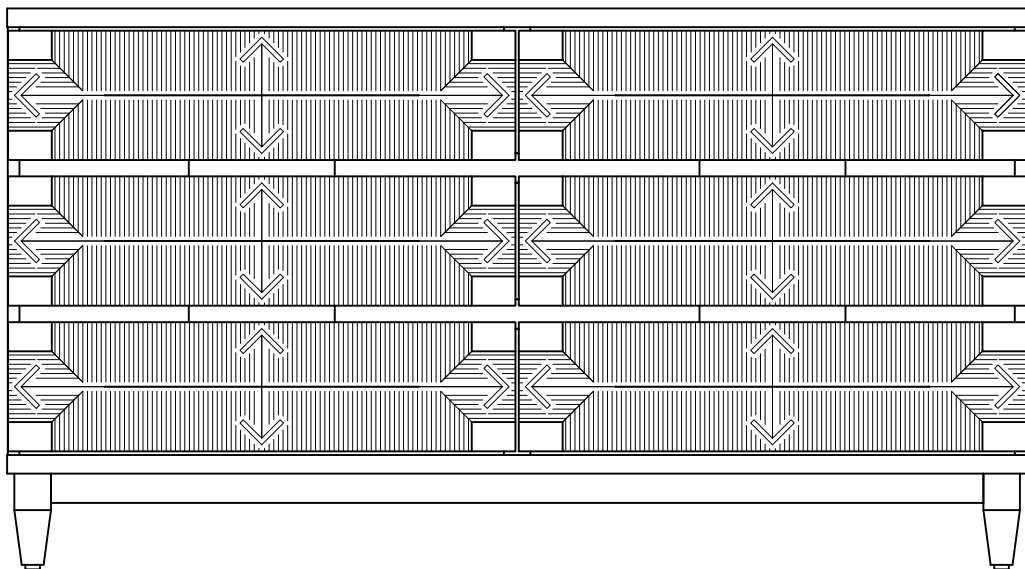

13

Pull the drawer open slowly and re-tighten the screws from step 10.

Make sure the front panel does not move and lock the drawer front panel into position with Flat Head Screws 19 mm (HW3).

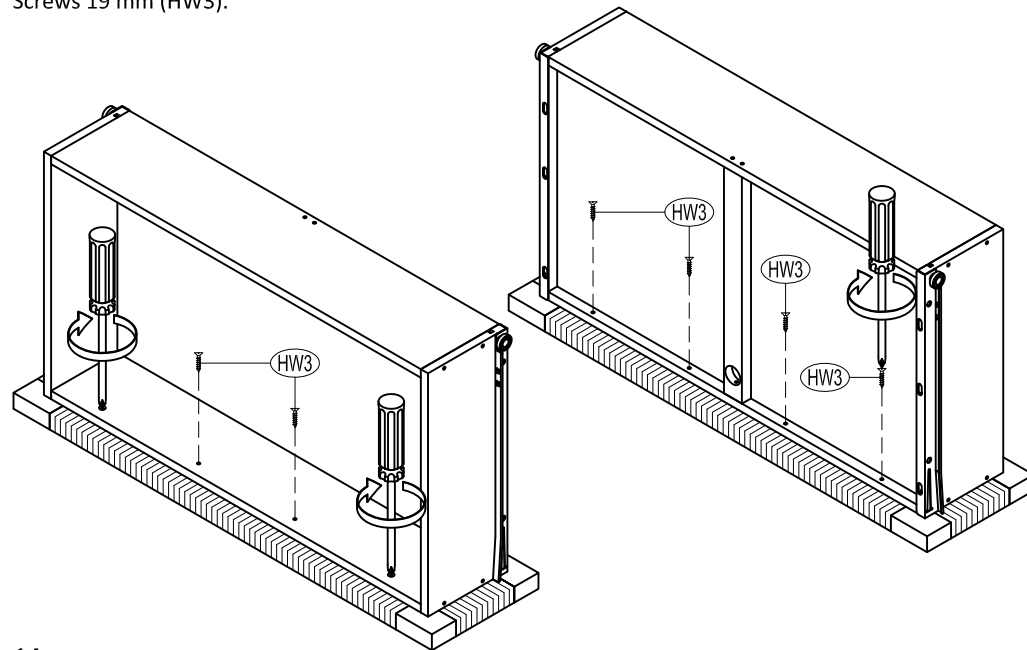

14

Insert the drawers in the dresser. Place the dresser in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

