GALE TEAK AND HYACINTH PATIO SOFA

DESIGN # CPT2014A

Assembly Instructions



SAFAVIEH

Need help?


Feel free to contact us via email or call if you have any specific questions! contact us: cs@safavieh.com 866-422-9070

Thanks For bringing Safavieh Couture Into your home


Every thing we make is incredibly simple to set up, including your new sofa. you won't need any additional tools.

Parts List Hardware List A X 1 SIDE PANEL (LEFT) HW1 X 10 JCBC BOLT M6 X 50 B X 1 SIDE PANEL (RIGHT) HW2 X 1 ALLEN KEY C X 1 **SEAT PANEL** HW3 X 1 D X 1 JCBC BOLT M6 X 40 **BACK PANEL** E X 1 HW4 X 4 MIDDLE LEG **BOLT CAP** F X 1 **SEAT CUSHION** G X 2 **BACK CUSHION**


Align the screw holes on the back panel (D) to the screw holes on the seat panel (C). Use the Allen Key (HW2) to screw in 2 of the bolts (HW1) underneath the seat panel (C). Do not fully tighten.

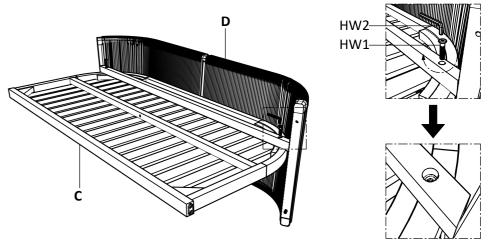


Align the screw holes on the left side panel (A) to the screw holes on the seat panel (C). Use the Allen Key (HW2) to screw in 2 of the bolts (HW1) as shown. Do not fully tighten.

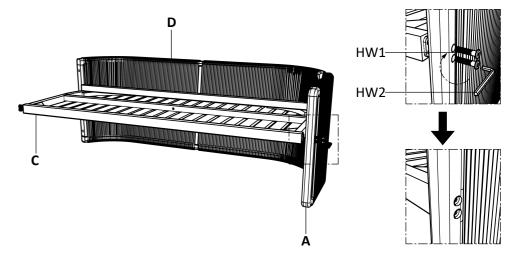


Align the screw holes on the right side panel (B) to the screw holes on the seat panel (C). Use the Allen Key (HW2) to screw in 2 of the bolts (HW1) as shown. Do not fully tighten.

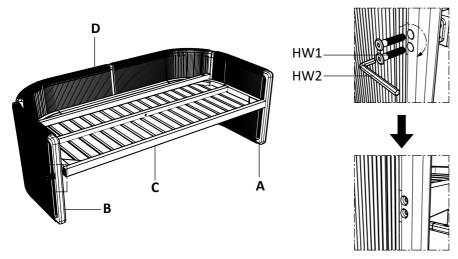


Turn the sofa upright. Open the webbing near the posts of the back panel (D). Use the Allen Key (HW2) to screw in 4 of the bolts (HW1) into the 2 posts as shown below. Fully tighten all the bolts.

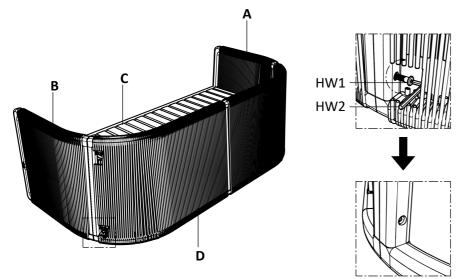

Cover the bolts with the bolt caps (HW4).

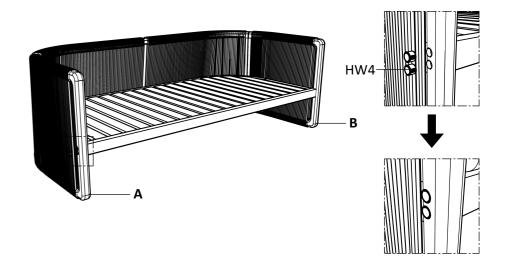

Attach the middle leg (E) to the bottom of the seat panel (C) by using the Allen Key (HW2) to screw in the bolt (HW3).

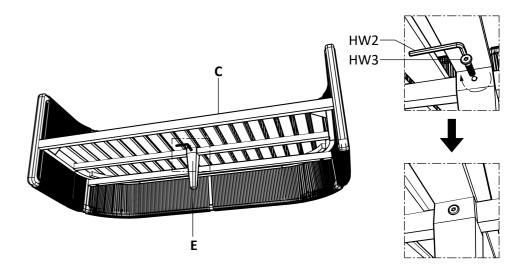

7
Place the patio sofa in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

