


# GALE TEAK AND HYACINTH PATIO CHAIR

DESIGN # CPT2013A

Assembly Instructions

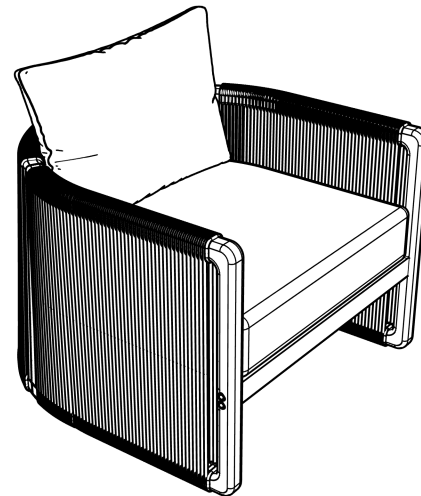

**Need help?**

Feel free to contact us via email or call  
if you have any specific questions!

**contact us:**

[cs@safavieh.com](mailto:cs@safavieh.com)

866-422-9070

**SAFAVIEH**  
C O U T U R E

## Thanks For bringing Safavieh Couture Into your home

Every thing we make is incredibly simple to set up, including your new chair. you won't need any additional tools.

### Parts List

A X 1  
SIDE PANEL (LEFT)




B X 1  
SIDE PANEL (RIGHT)



C X 1  
SEAT PANEL



D X 1  
BACK PANEL

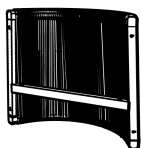

E X 1  
SEAT CUSHION



F X 1  
BACK CUSHION



### Hardware List

HW1 X 10  
JCBC BOLT M6 X 50



HW2 X 1  
ALLEN KEY




HW3 X 4  
BOLT CAP




1

Align the screw holes on the left side panel (A) to the screw holes on the seat panel (C). Use the Allen Key (HW2) to screw in 2 of the bolts (HW1) near the front of the seat panel (C). Do not fully tighten.

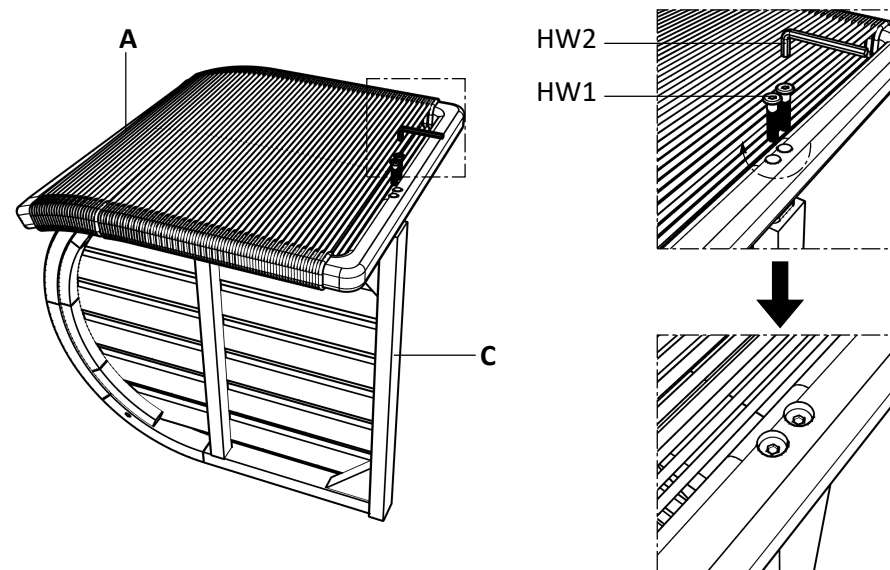


2


Align the screw holes on the right side panel (B) to the screw holes on the seat panel (C). Use the Allen Key (HW2) to screw in 2 of the bolts (HW1) near the front of the seat panel (C). Do not fully tighten.

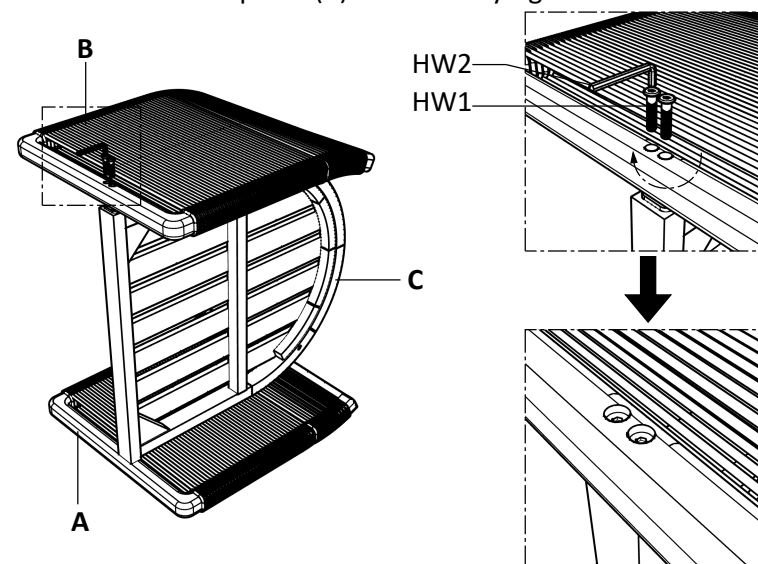


- 3  
Turn the chair upside down. Attach the back panel (D) to the back of the seat panel (C) by using the Allen Key (HW2) to screw in 2 of the bolts (HW1) underneath the seat panel (C) as shown below. Do not fully tighten.

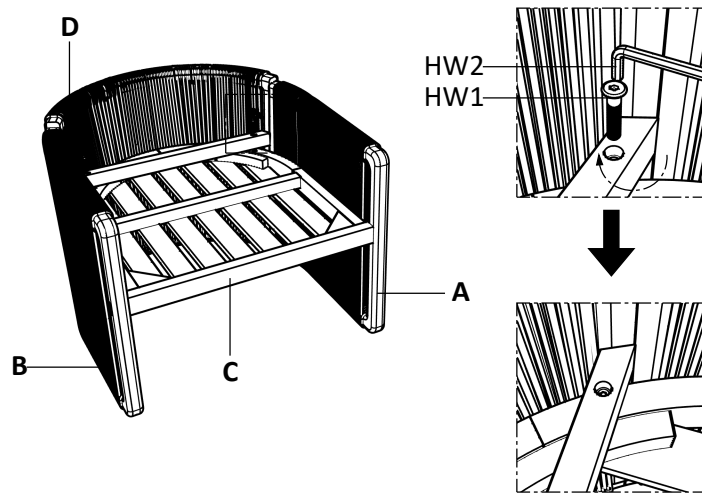

- 4  
Turn the chair upright. Open the webbing near the posts of the back panel (D). Use the Allen Key (HW2) to screw in 4 of the bolts (HW1) into the 2 posts as shown below. Fully Tighten all the bolts.

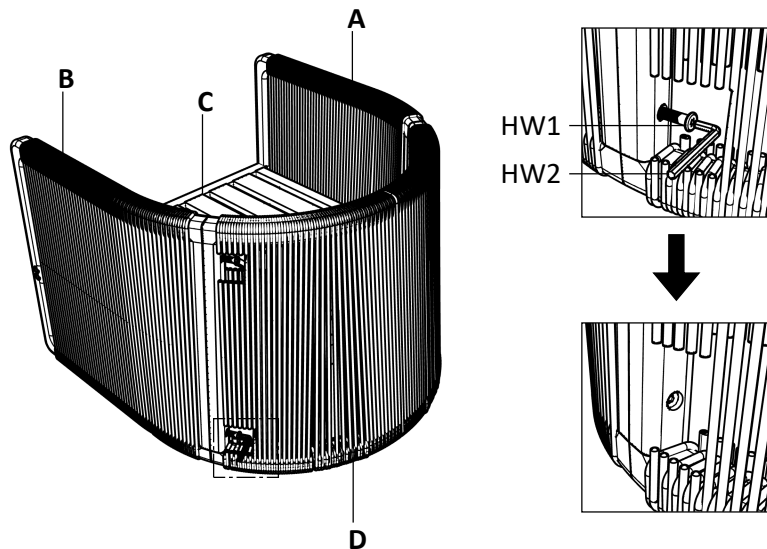

- 5  
Cover the bolts with the bolt caps (HW3).

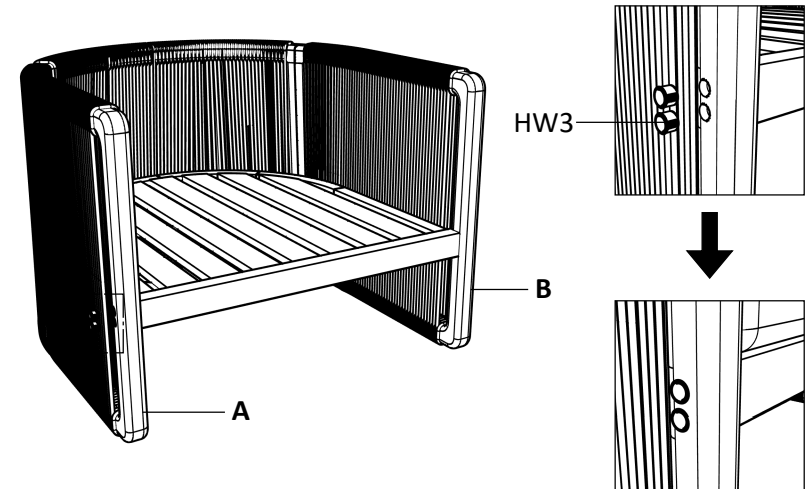

- 6  
Place the patio chair in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

