


# ROGERS TEAK AND HYACINTH PATIO SOFA

DESIGN # CPT2017A

Assembly Instructions

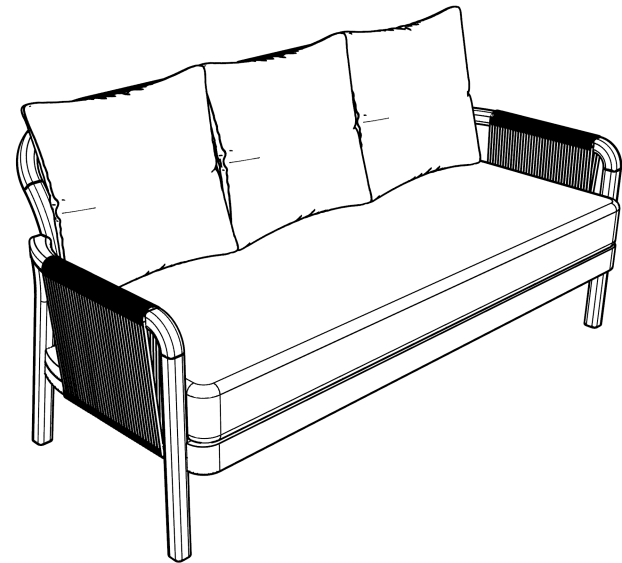

**Need help?**

Feel free to contact us via email or call  
if you have any specific questions!

**contact us:**

[cs@safavieh.com](mailto:cs@safavieh.com)

866-422-9070

**SAFAVIEH**  
C O U T U R E

# Thanks For bringing Safavieh Couture Into your home


Every thing we make is incredibly simple to set up, including your new sofa. you won't need any additional tools.

## Parts List


A X 1  
SIDE PANEL (LEFT)




B X 1  
SIDE PANEL (RIGHT)

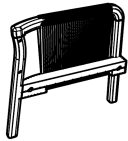


SEAT PANEL  
C X 1




D X 1  
BACK PANEL

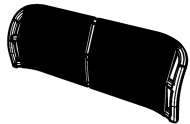


E X 1  
MIDDLE LEG



FX 1  
SEAT CUSHION



G X 3  
BACK CUSHION

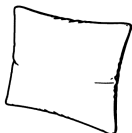

## Hardware List

HW1 X 8  
JCBC BOLT M6 X 50



HW2 X 1  
ALLEN KEY



HW3 X 1  
JCBC BOLT M6 X 40




BOLT CAP  
HW4 X 4




1

Align the screw holes on the left side panel (A) to the screw holes on the seat panel (C). Use the Allen Key (HW2) to screw in 2 of the bolts (HW1) underneath the seat panel (C). Do not fully tighten.

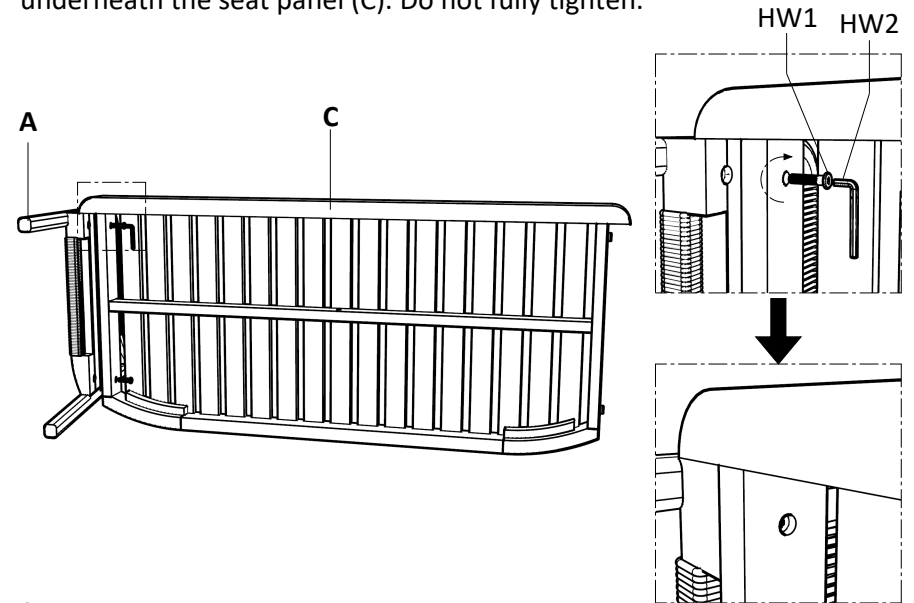


2


Align the screw holes on the right side panel (B) to the screw holes on the seat panel (C). Use the Allen Key (HW2) to screw in 2 of the bolts (HW1) underneath the seat panel (C). Do not fully tighten.

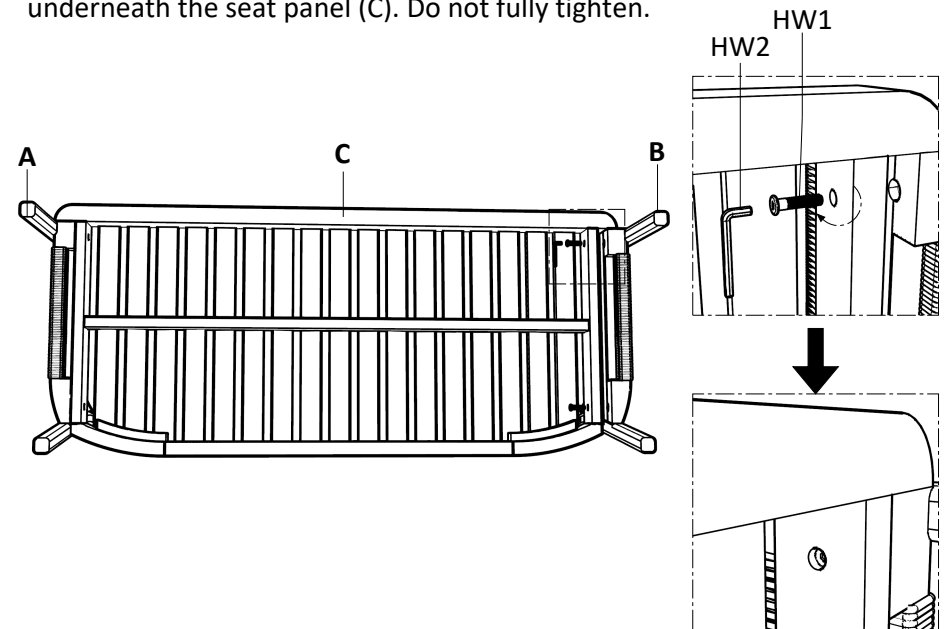


- 3  
Attach the back panel (D) to the back of the seat panel (C) and 2 side panels (A&B) by using the Allen Key (HW2) to screw in 4 of the bolts (HW1) as shown below. Fully tighten all the bolts.

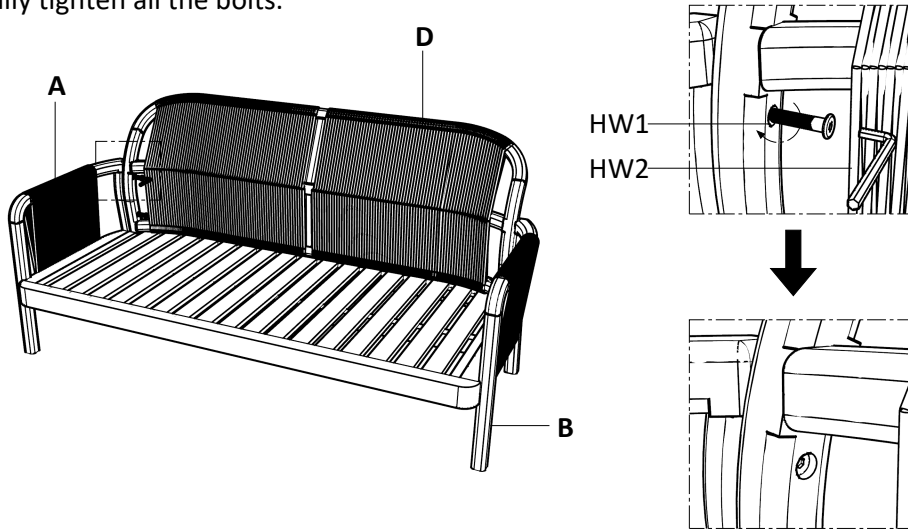

- 5  
Cover the bolts with the bolt caps (HW4).

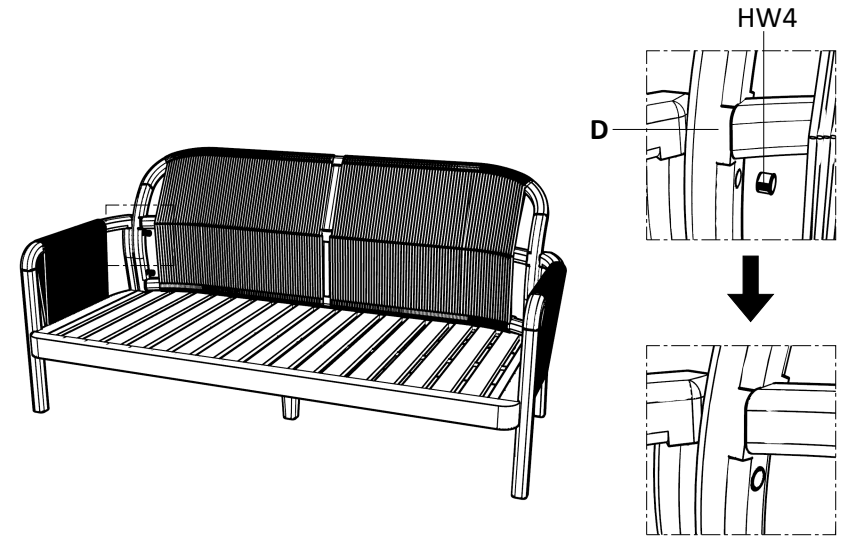

- 4  
Attach the middle leg (E) to the bottom of the seat panel (C) by using the Allen Key (HW2) to screw in the bolt (HW3).

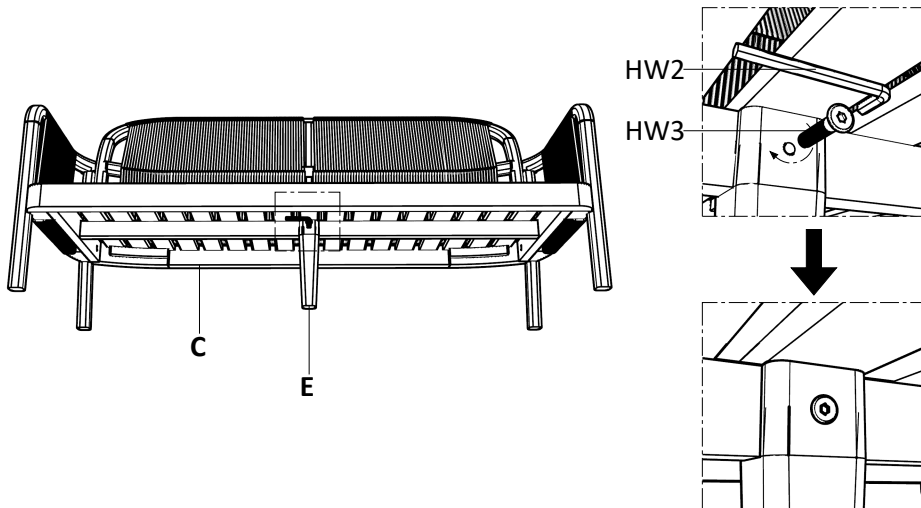

- 6  
Place the patio sofa in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

