


SKIPPER TEAK AND HYACINTH PATIO SOFA

DESIGN # CPT2011A

Assembly Instructions

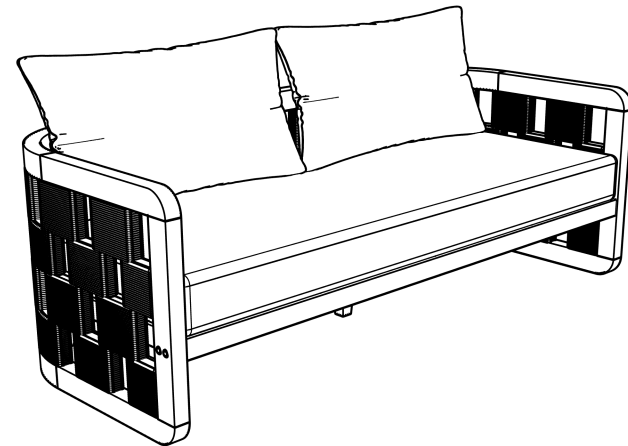

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com





866-422-9070

SAFAVIEH
C O U T U R E



Thanks For bringing Safavieh Couture Into your home

Every thing we make is incredibly simple to set up, including your new sofa. you won't need any additional tools.


Parts List

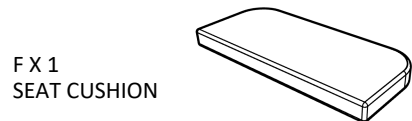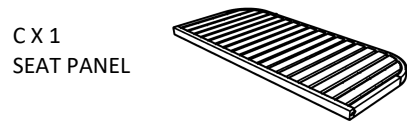

Hardware List




1
Align the screw holes on the back panel (D) to the screw holes on the seat panel (C). Use the Allen Key (HW2) to screw in 4 of the bolts (HW1). Do not fully tighten.

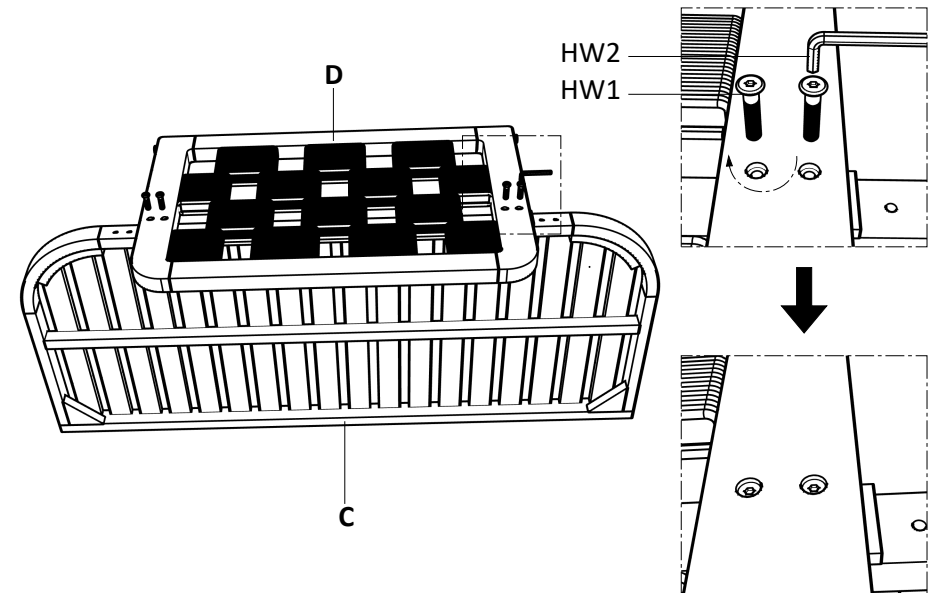


2

Align the screw holes on the left side panel (A) to the screw holes on the seat panel (C) and insert the dowel guide on the back panel (B) into the dowel hole on the left side panel (A). Use the Allen Key (HW2) to screw in 2 of the bolts (HW1) on the back of the seat panel (C) as shown. Do not fully tighten.

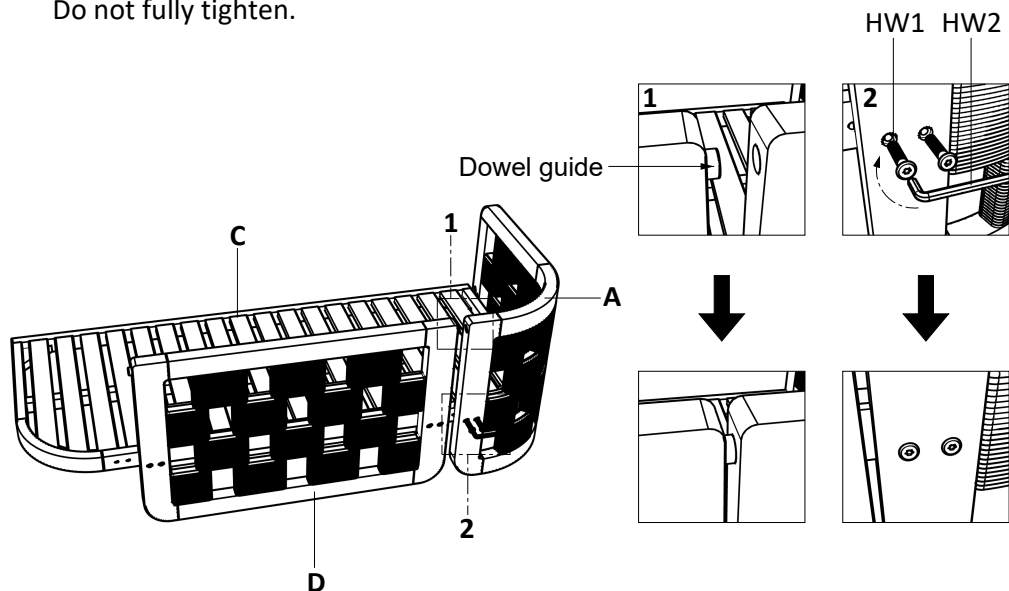


Before tightening the bolts, the 2 side panels must be in line with each other. Once they are in line, then tighten the bolts.

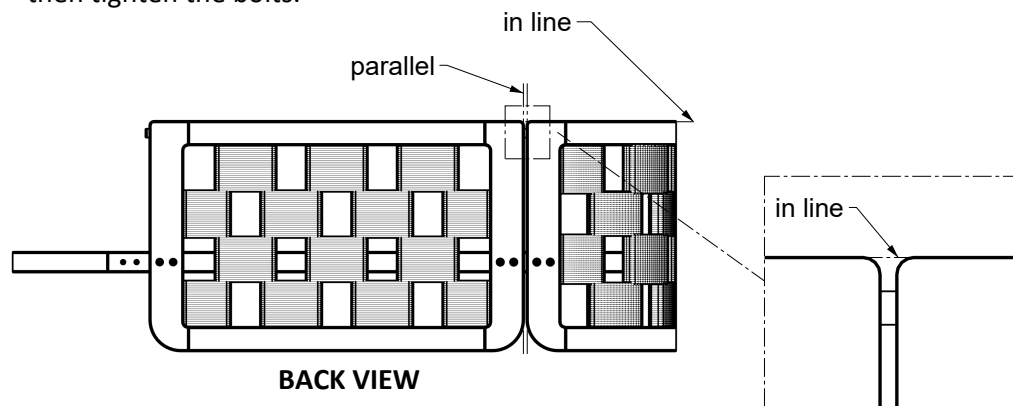


3

Use the Allen Key (HW2) to screw in 2 of the bolts (HW1) on the side of the seat panel (C) as shown. Do not fully tighten.

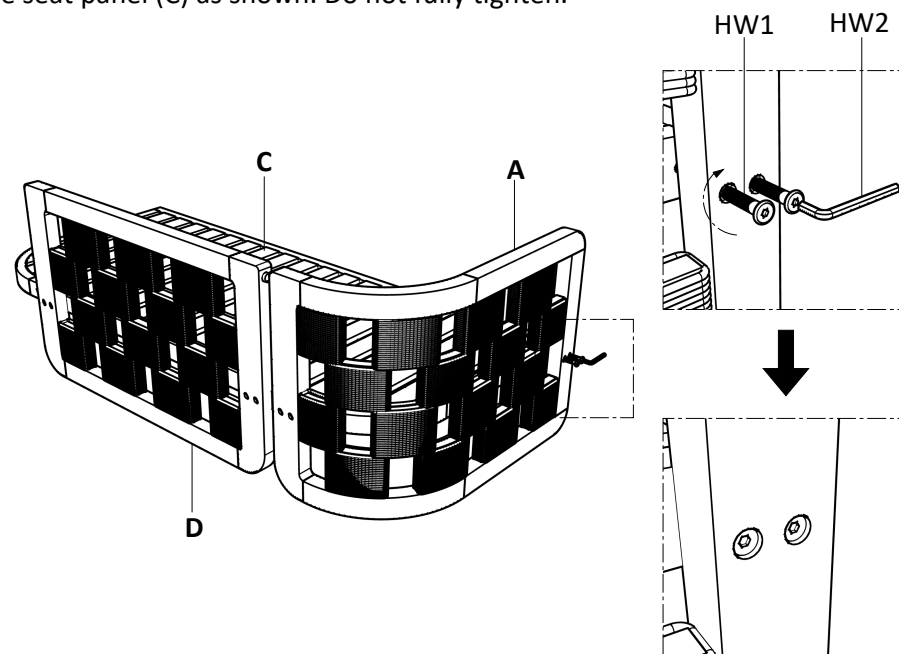


4

Align the screw holes on the right side panel (B) to the screw holes on the seat panel (C) and insert the dowel guide on the back panel (B) into the dowel hole on the right side panel (A). Use the Allen Key (HW2) to screw in 2 of the bolts (HW1) on the back of the seat panel (C) as shown. Do not fully tighten.

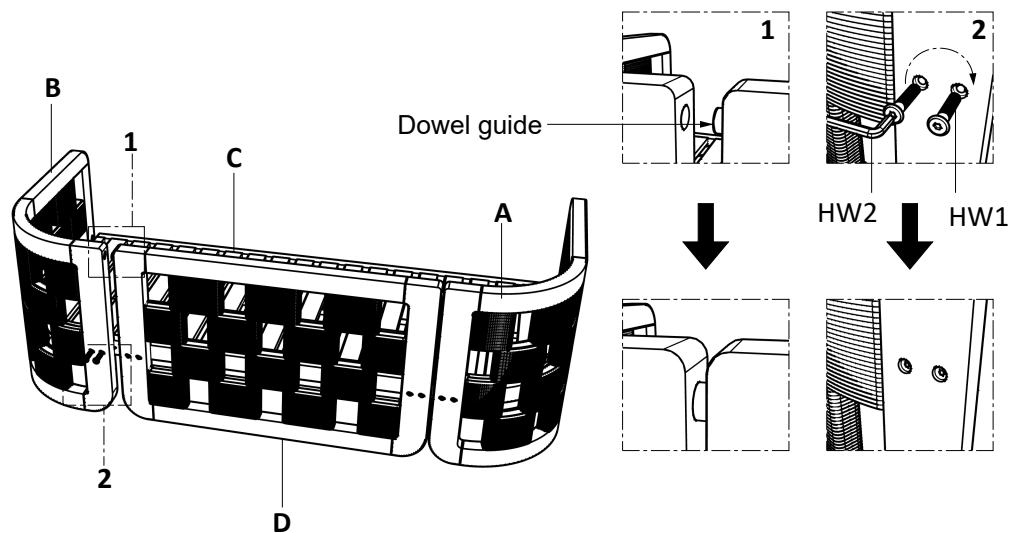


Before tightening the bolts, the 2 side panels must be in line with each other. Once they are in line, then tighten the bolts

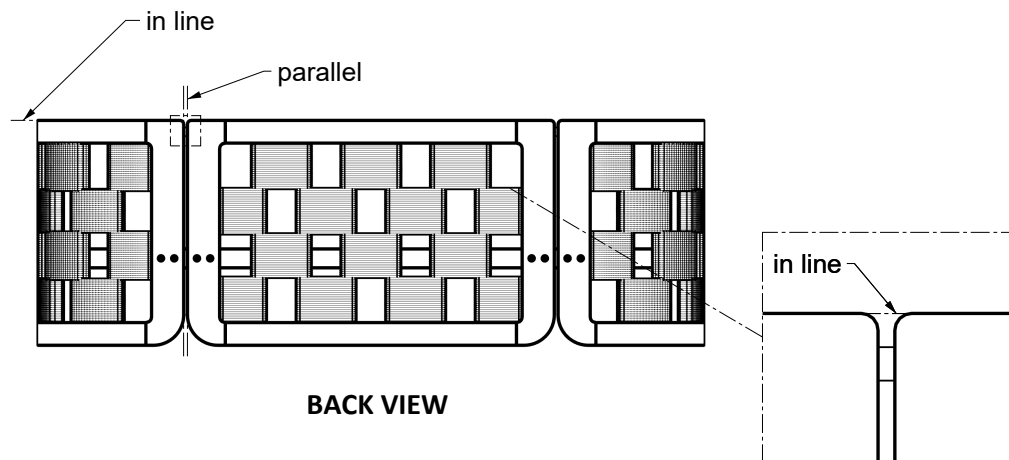


5

Use the Allen Key (HW2) to screw in 2 of the bolts (HW1) on the side of the seat panel (C) as shown. Do not fully tighten.

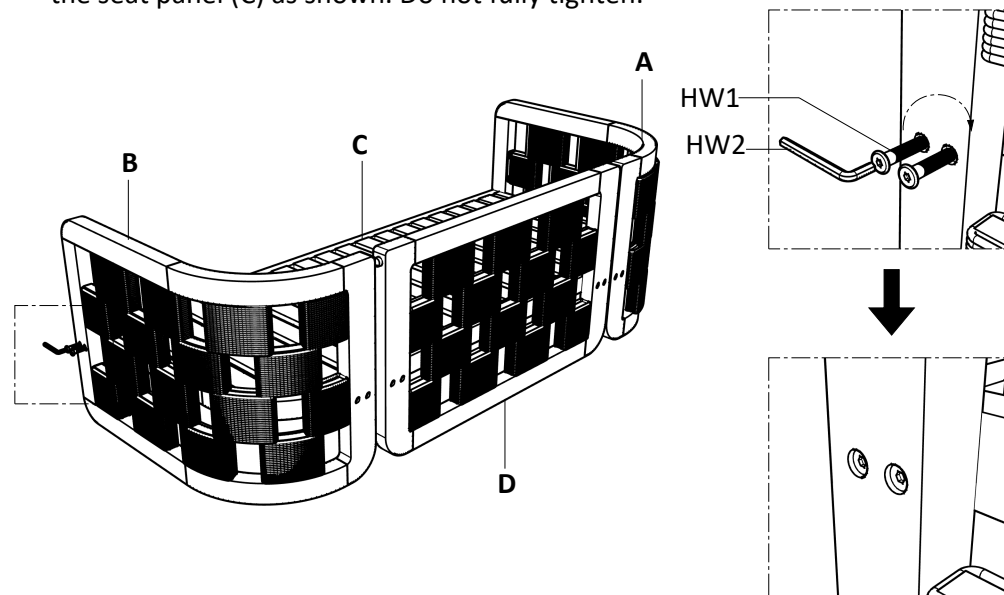


6

Attach the middle leg (E) to the bottom of the seat panel (C) by using the Allen Key (HW2) to screw in the bolt (HW3). Fully tighten all the bolts.

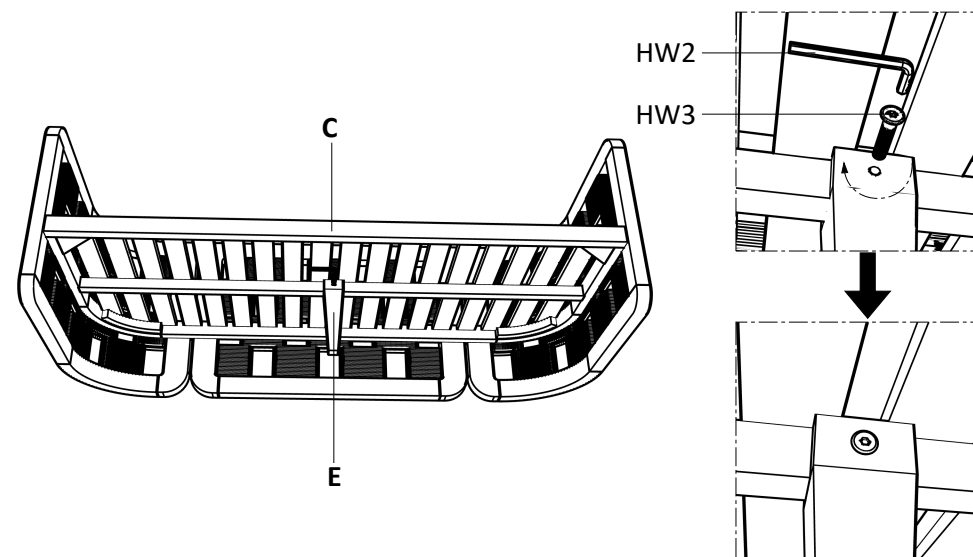

Cover the bolts with the bolt caps (HW4).

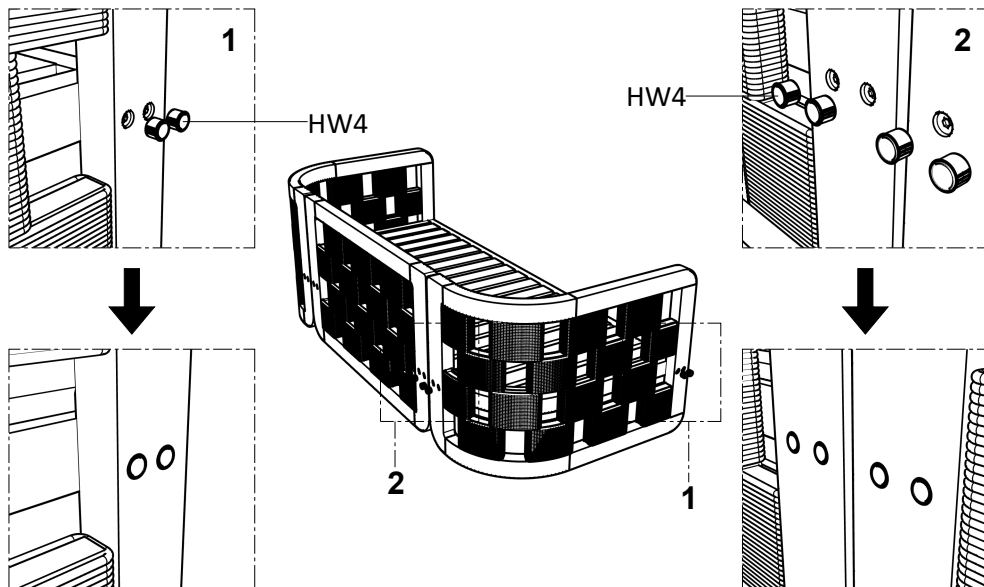

8 – Place the patio sofa in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

