



Instruction Manual

33002

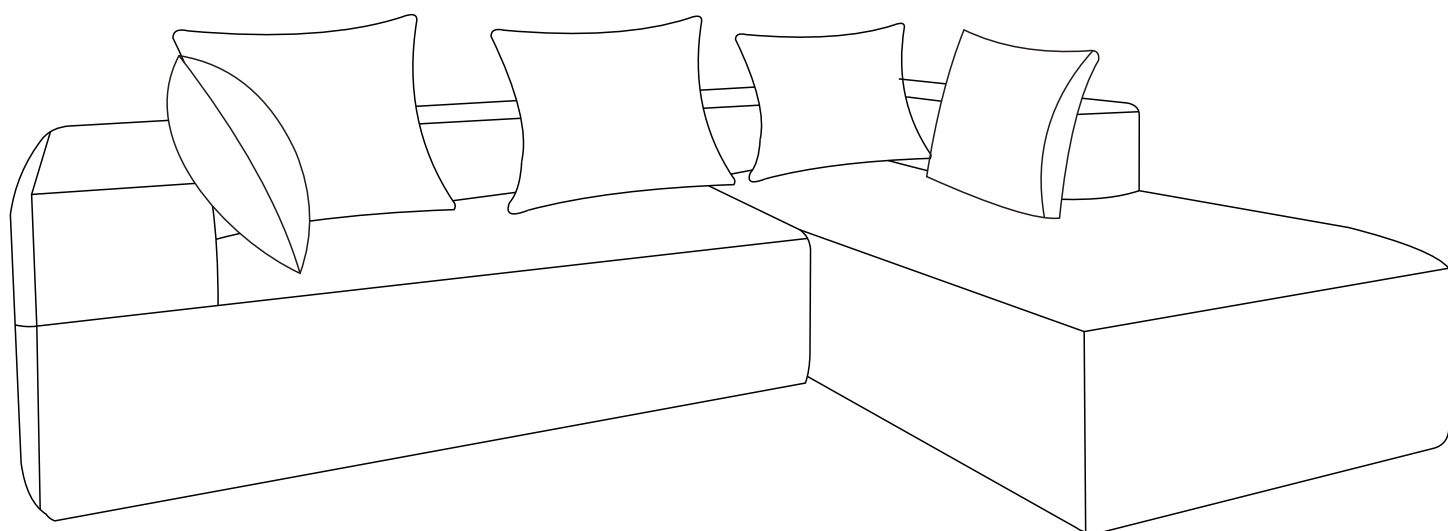

PART LIST:


① Compact sofa

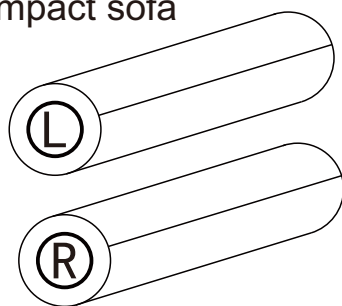

② Membrane-cutting knife




③ Link key*2

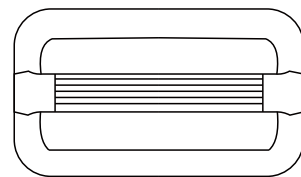

INSTALLATION STEPS:


Step 1:

Use the membrane-cutting knife ② to cut through the first layer of the outer packaging film.

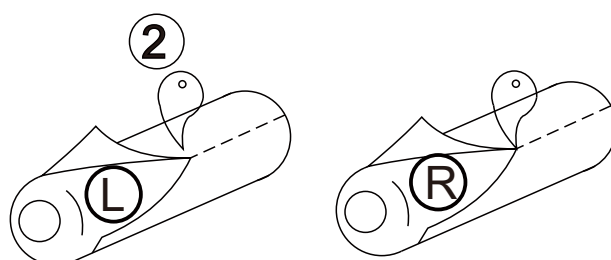


Step 2:

Lift the sofa flat and place it face up.


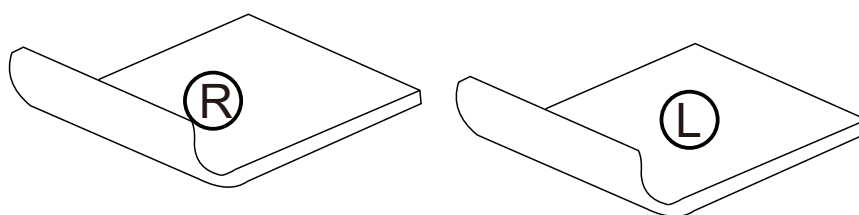


Step 3:

Use the membrane-cutting knife ② to cut through the vacuum compression membrane.

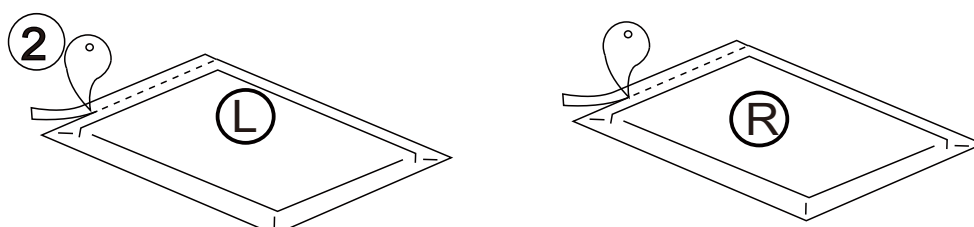

Step 4:
Wait for the sofa to fully rebound.

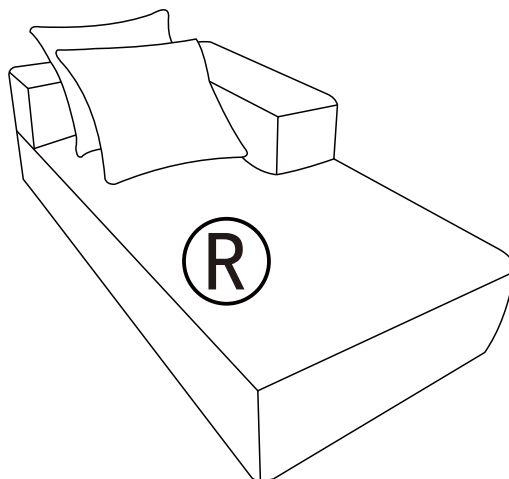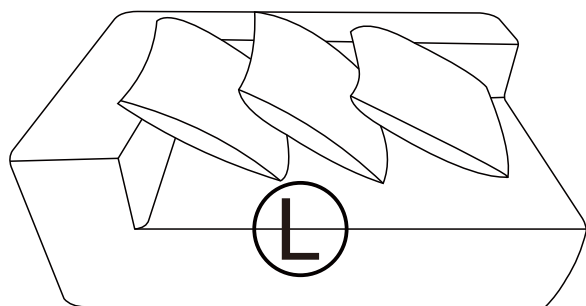

Step 5:
Use the Velcro fasteners at the bottom to connect them with the Link key ③.

