ASSEMBLY INSTRUCTION


ITEM NO.:194S8450TPE/PWT-AC Armless chair




NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

CHAIR COMPONENT LIST


NO	DRAWING	QTY	DESCRIPTION
Α		1	SEAT
В		1	SEAT CUSHION
С		1	BACK CUSHION
D		1	BACK PANEL
Е		4	Plastic Washer(Φ45*3mm)
F		4	PLASTIC LEG(80*80*80mm)
G		4	BOLT 5/16*80mm
Н	0	8	WASHER(Φ19*1.5mm)
ı		1	ALLEN KEY
J		4	BUTTERFLY NUT(30*13*13mm)

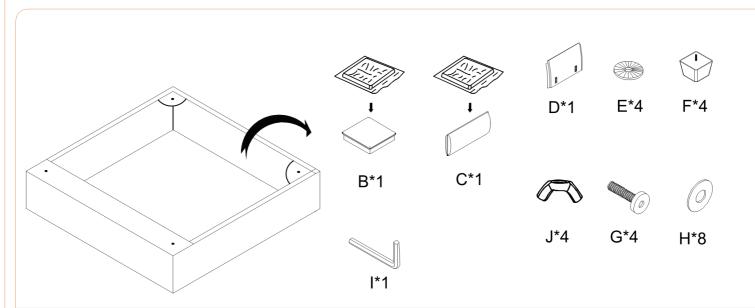


Step 1

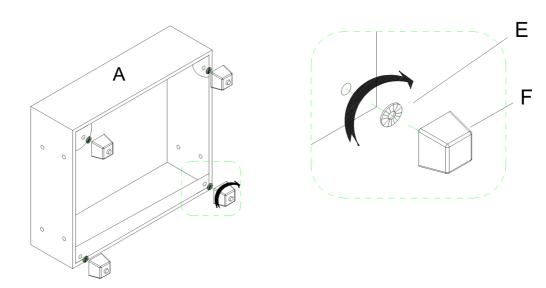


Step 2

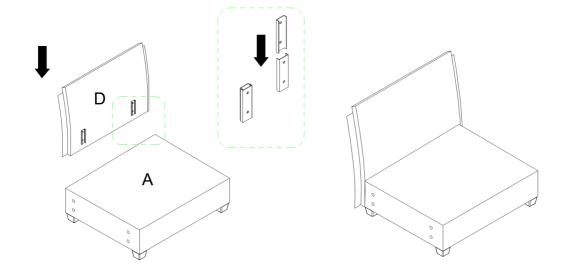


Pat to make it even and full





Pat to make it even and full

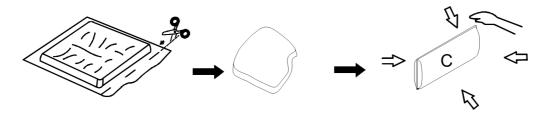



Step 4

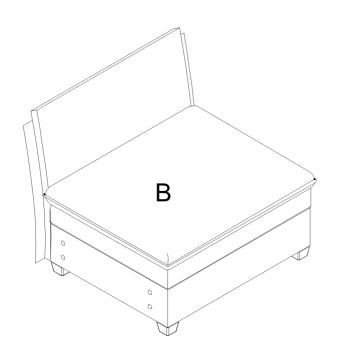

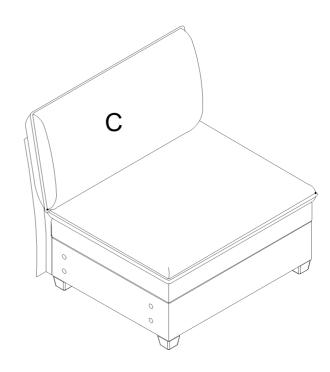

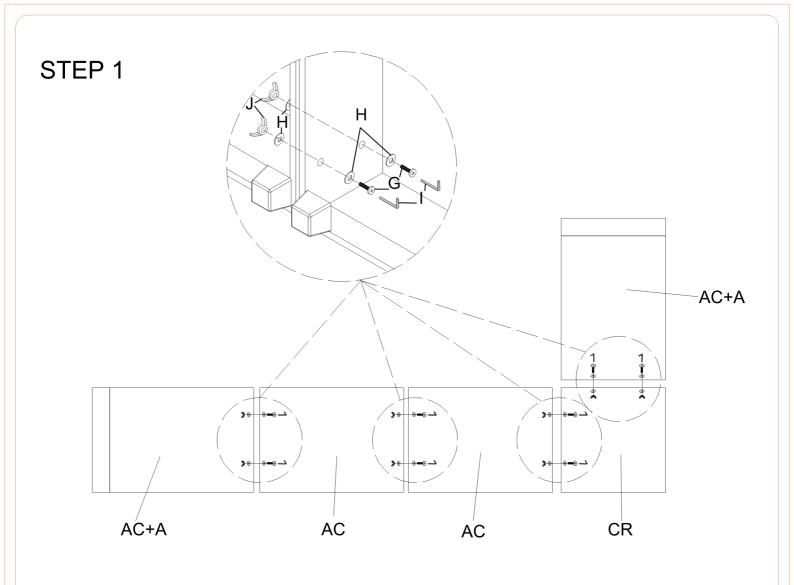

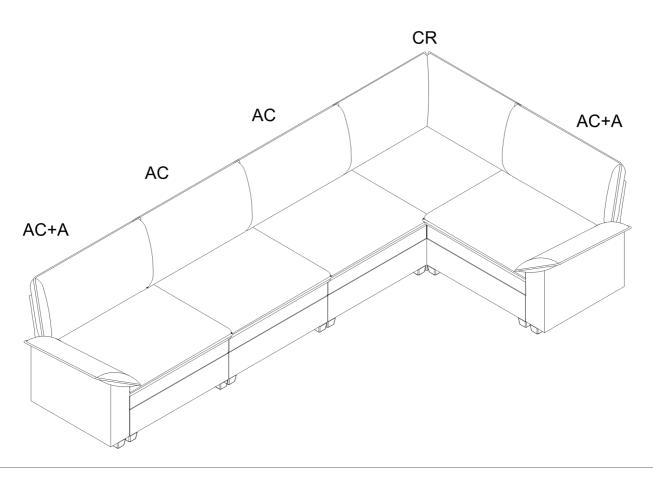

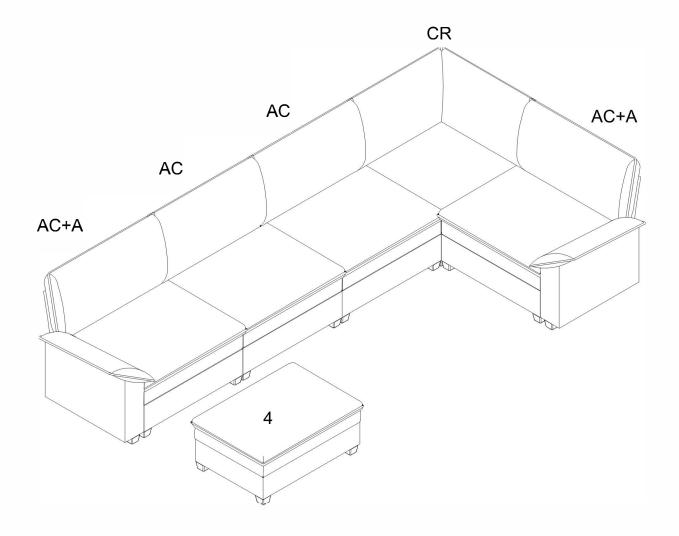

Care Instruction for Chenille Furniture:

In order to maintain the original appearance of your Chenille furniture, please follow below simple care procedures:

Avoid exposing furniture directly to sunlight or heating and air conditioning outlets.

Sunlight and/or exposure to heating and air conditioning outlets will fade/damage Chenille. Vacuum or wipe with a soft cloth to remove dust.

Hardware may loosen over time. Periodically check to make sure all connections are tight, Re-tighten if necessary.

For item use on wooden floor,hard surfaces or carpets,it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.


ASSEMBLY INSTRUCTION

ITEM NO.:194S8450TPE/PWT-CR Corner Seat





NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

NO	DRAWING	QTY	DESCRIPTION
Α		1	SEAT
В		1	SEAT CUSHION
C-L		1	L LSF BACK CUSHION
C-R		1	R RSFBACK CUSHION
D		2	BACK PANEL
E		4	Plastic Washer(Φ45*3mm)
F		4	PLASTIC LEG(80*80*80mm)
G		4	BOLT 5/16*80mm
Н	0	8	WASHER(Φ19*1.5mm)
ı		1	ALLEN KEY
J		4	BUTTERFLY NUT(30*13*13mm)

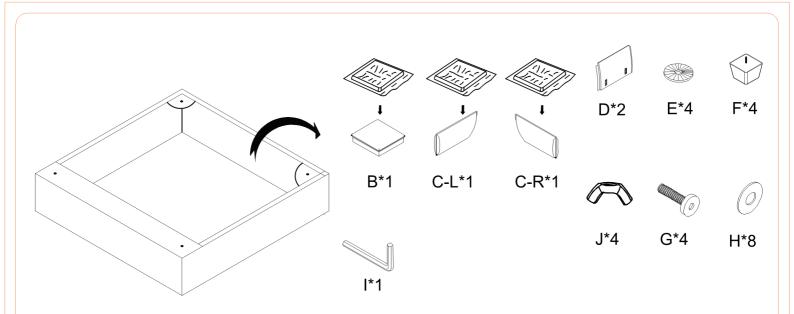

Step 1

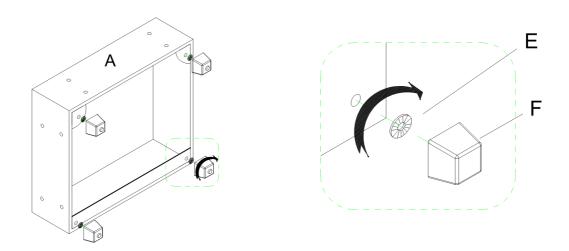


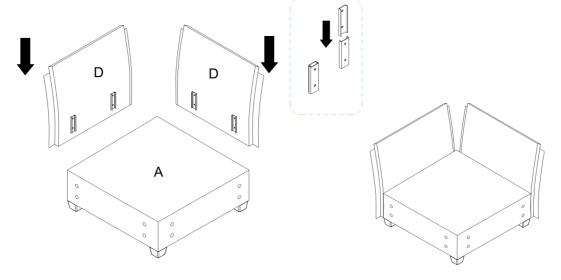


Pat to make it even and full




Pat to make it even and full





Pat to make it even and full

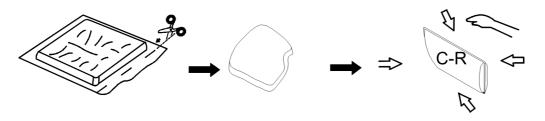



Step 4

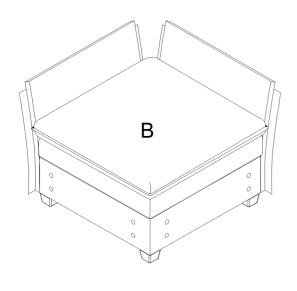

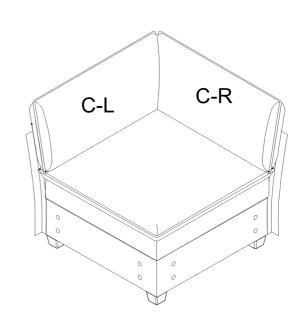

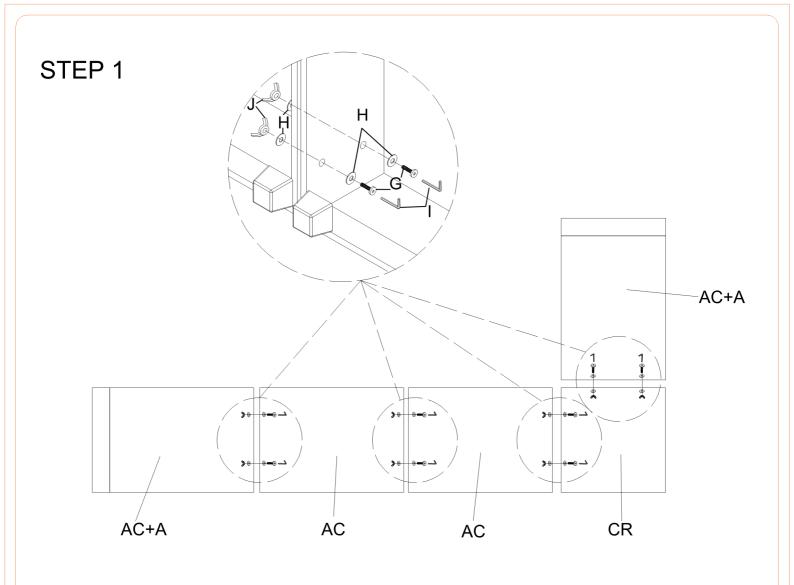

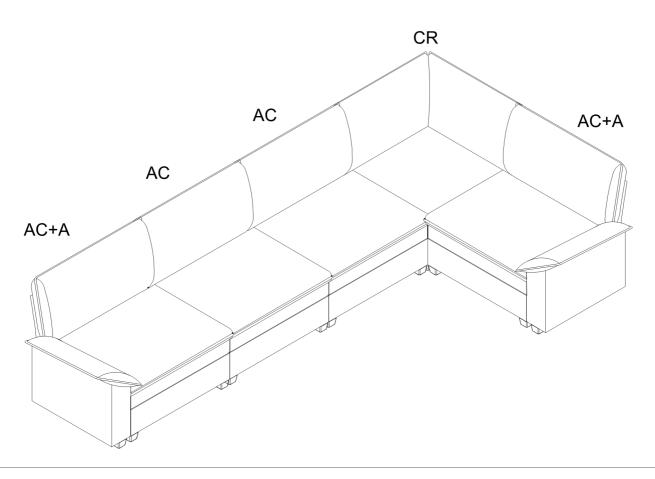

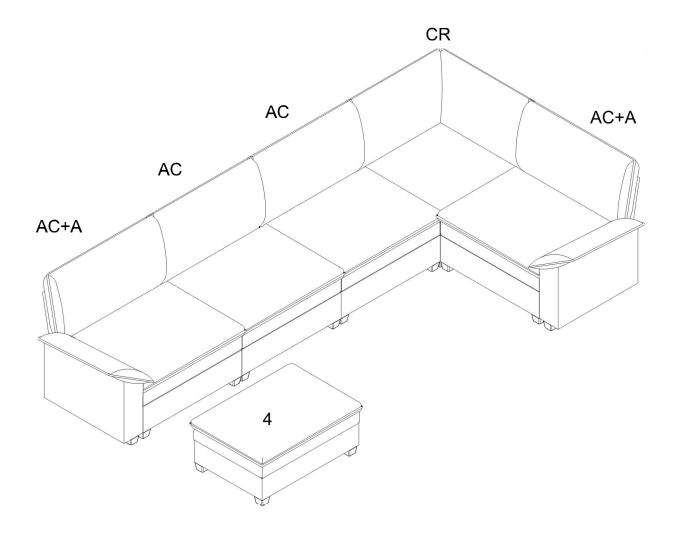

Care Instruction for Chenille Furniture:

In order to maintain the original appearance of your Chenille furniture, please follow below simple care procedures:

Avoid exposing furniture directly to sunlight or heating and air conditioning outlets.

Sunlight and/or exposure to heating and air conditioning outlets will fade/damage Chenille. Vacuum or wipe with a soft cloth to remove dust.

Hardware may loosen over time. Periodically check to make sure all connections are tight, Re-tighten if necessary.

For item use on wooden floor,hard surfaces or carpets,it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.

ASSEMBLY INSTRUCTION

ITEM NO.:194S8450TPE/PWT-A


2 arms with adjustable pillow top





NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


ARM COMPONENT LIST


NO	DRAWING	QTY	DESCRIPTION
A-L		1	L LSF ARM
A-R		1	R RSF ARM
В		4	Plastic Washer((Φ45*3mm)
С		4	PLASTIC LEG(80*80*80mm)
D		8	BOLT M8*60mm
E	0	8	WASHER(Φ19*1.5mm)
F		1	ALLEN KEY

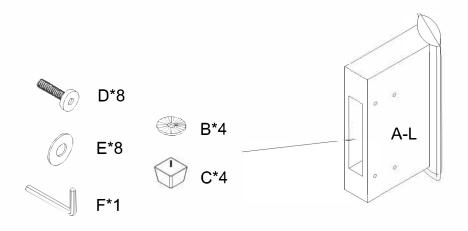


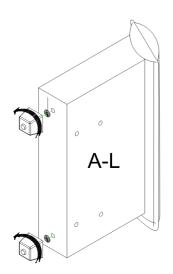


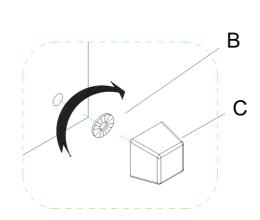


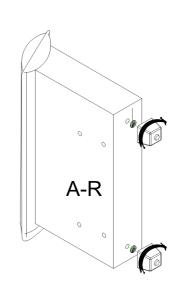

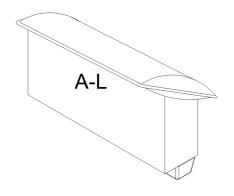


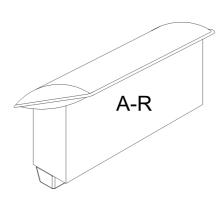


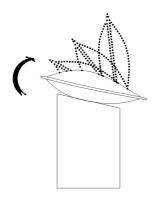

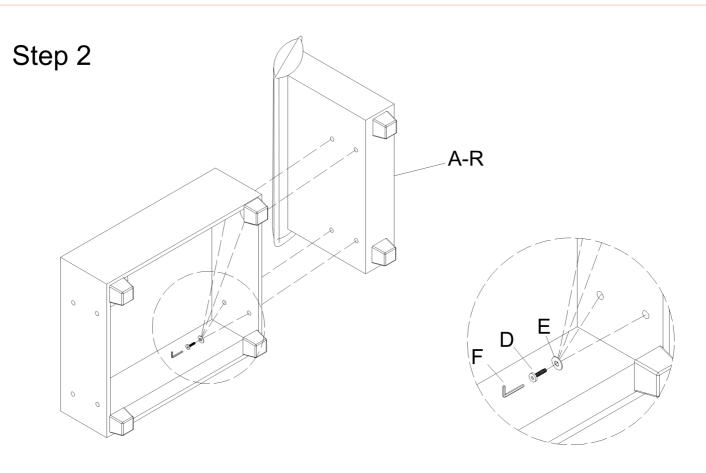

Step 3

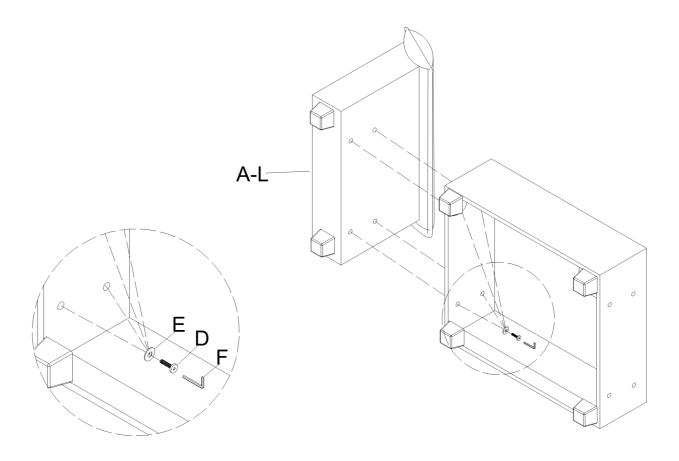

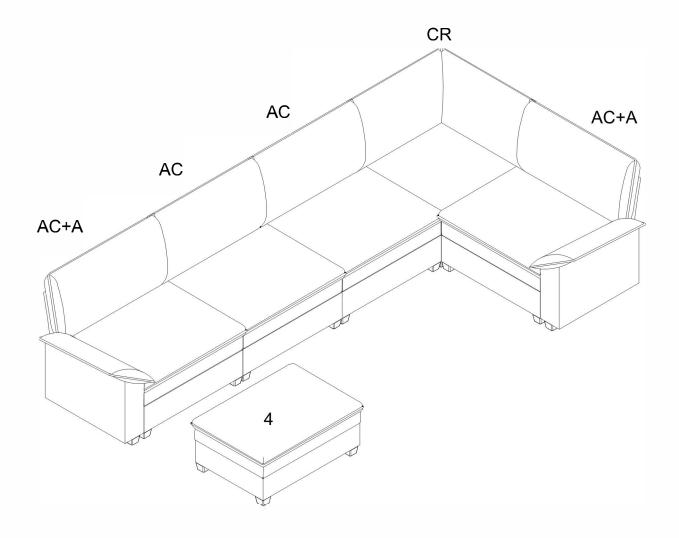

Care Instruction for Chenille Furniture:

In order to maintain the original appearance of your Chenille furniture, please follow below simple care procedures:

Avoid exposing furniture directly to sunlight or heating and air conditioning outlets.

Sunlight and/or exposure to heating and air conditioning outlets will fade/damage Chenille. Vacuum or wipe with a soft cloth to remove dust.

Hardware may loosen over time. Periodically check to make sure all connections are tight, Re-tighten if necessary.

For item use on wooden floor,hard surfaces or carpets,it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.