



# ASSEMBLY INSTRUCTIONS

## CONVERTIBLE LOFT BED


TYPE 1

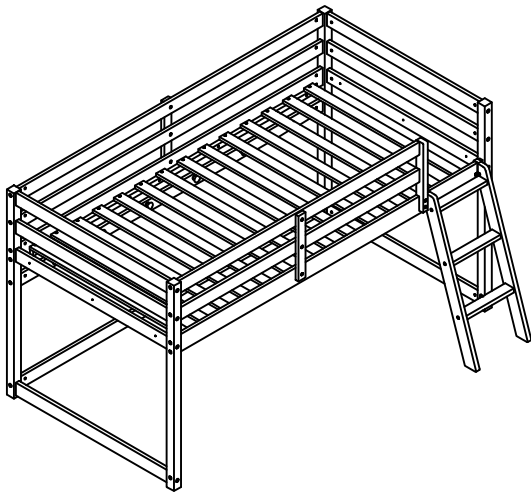

TYPE 2

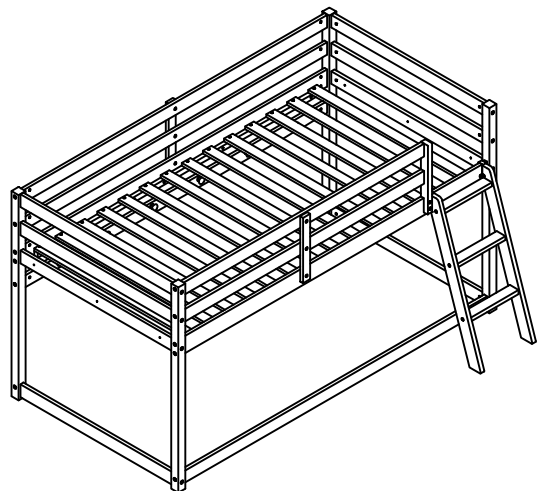

TYPE 3

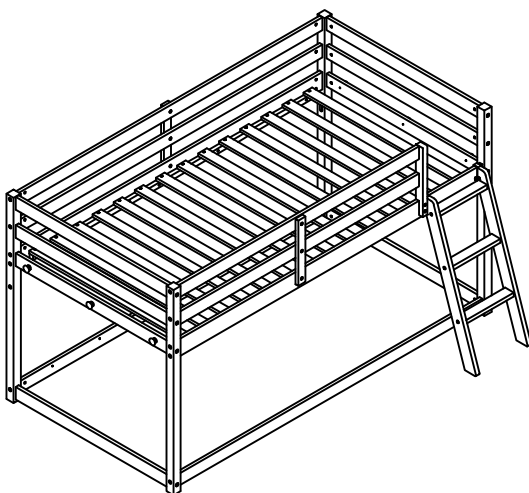

**BED142BT08/BED142BT77**  
Contact us: [vipservice2024@yeah.net](mailto:vipservice2024@yeah.net)



# **SAFETY WARNING**




1. This bed is designed for use only mattress (es) meeting the following specifications on the upper bunk:

Up bed (Bunk bed and tribed included)


















Bed type	Length	Width	Thickness
Twin Standard	74"-75"	38 1/2"	6" max

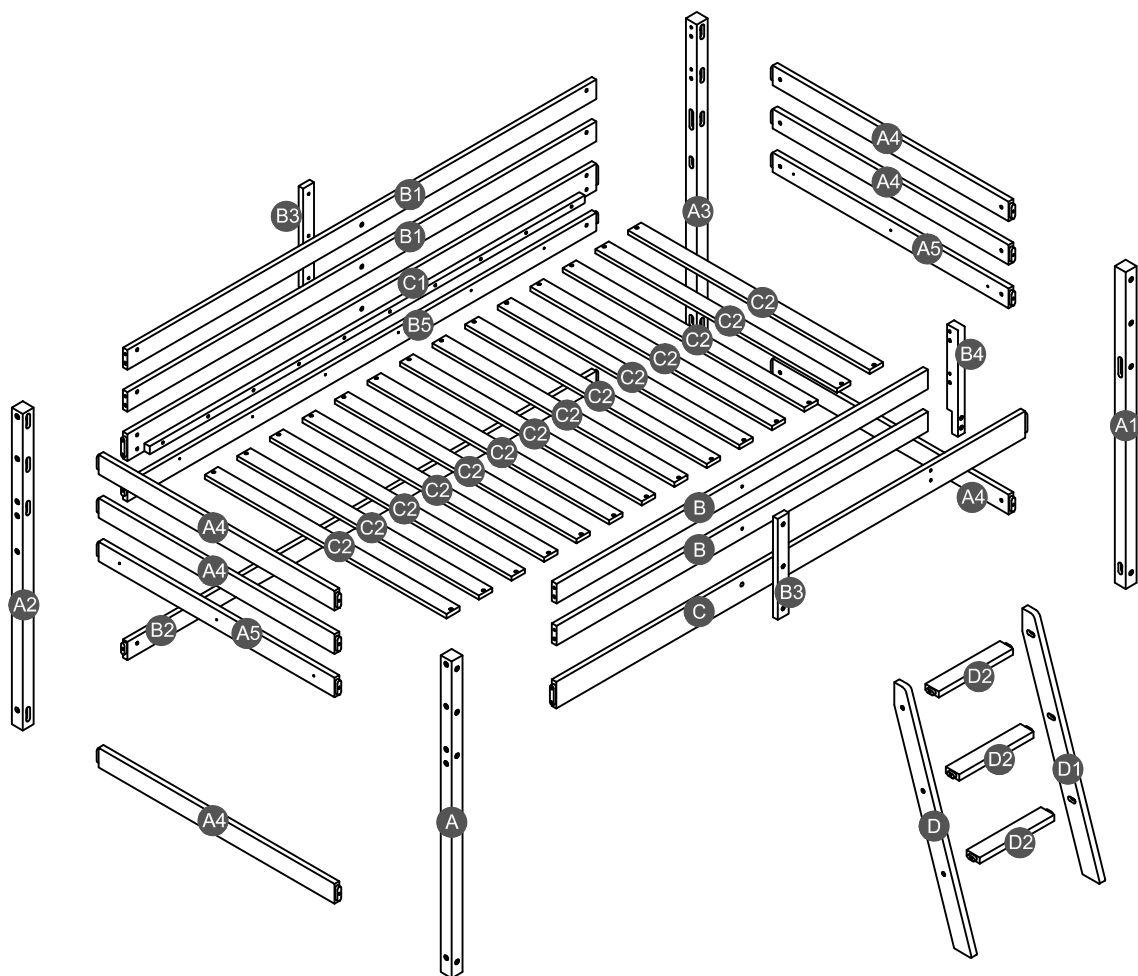2. Replacement parts, including additional guardrails, maybe obtained from any of our  
SHENZHEN YICHUANG ERA TECHNOLOGY CO., LTD  
18961 Arenth Ave, City of Industry, CA 91748 dealers.
3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed.
4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
5. Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails.
6. Do not allow children under 6 years of age to use the upper bunk.
7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
8. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
9. Always use the ladder for entering and leaving the upper bunk.
10. Do not use substitute part. Contact the manufacture or dealer for replacement part.
11. Use of a night light may provide added safety precaution for a child using the upper bunk.
12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
13. The use of water or sleep flotation mattresses is prohibited.
14. STRANGULATION HAZARD - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes.
15. Keep these instruction for future reference.
16. Prohibit more than one person on upper bunk
17. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
18. Be certain all staples are out of the box before beginning assembly on the shipping carton.




















## Detail View




# Part List

<b>A</b>  Leg (Left Front) - 1pc	<b>A1</b>  Leg (Right Front) - 1pc	<b>A2</b>  Leg (Left Back) - 1pc
<b>A3</b>  Leg (Right Back) - 1pc	<b>A4</b>  Horizontal bar HB/FB - 6pcs	<b>A5</b>  Hanging bar HB/FB - 2pcs
<b>B</b>  Short guard rail (Front) - 2pcs	<b>B1</b>  Long guard rail (Back) - 2pcs	<b>B2</b>  Lower horizontal bar - 1pc
<b>B3</b>  Vertical guard rail - 2pcs	<b>B4</b>  Support guard rail (Right) - 1pc	<b>B5</b>  Hanging bar - 1pc
<b>C</b>  Side rail (Front) - 1pc	<b>C1</b>  Side rail (Back) - 1pc	<b>C2</b>  Slats - 14pcs
<b>D</b>  Ladder (left) - 1pc	<b>D1</b>  Ladder (right) - 1pc	<b>D2</b>  Step ladder - 3pcs

## Hardware List



<b>1</b>  Ø10*40mm Wood dowel (8pcs)	<b>2</b>  (Ø15)1/4"*100mm Hex-Head bolts (18pcs)	<b>3</b>  (Ø15)1/4"*80mm Hex-Head bolts (18pcs)
<b>4</b>  (Ø12)1/4"*60mm Hex-Head bolts (6pcs)	<b>5</b>  (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	<b>6</b>  (Ø12)1/4"*30mm Hex-Head bolts (6pcs)
<b>7</b>  1/4"*15 (9.5mm) Horizontal-Hole bolts (42pcs)	<b>8</b>  Ø4*30mm Wood screws (28pcs)	<b>9</b>  Ø4*20mm Wood screws (10pcs)
<b>10</b>  Ø3.5*15mm Wood screws (1pc)	<b>11</b>  81*26*21*(2.5mm) Hooks (2pcs)	<b>12</b>  21*21*17*1.7mm Metal bracket (2pcs)
<b>13</b>  Ø38*31mm Pine Knob (6pcs)	<b>14</b>  3/16"*30mm Ph zinc(Knob) (6pcs)	<b>15</b>  L1900mm Led light (1pc)
<b>16</b>  L2000mm Adapter and wire strip (1pc)	<b>17</b>  22*10*6mm Clamp plastic (1pc)	<b>18</b>  (1/4")4.5*58mm Allen key (1pc)
<b>19</b>  Ø20mm Sticker (6pcd)		


### ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

## STEP 1:

<b>3</b>		<b>7</b>	
<b>16PCS</b>		<b>16PCS</b>	

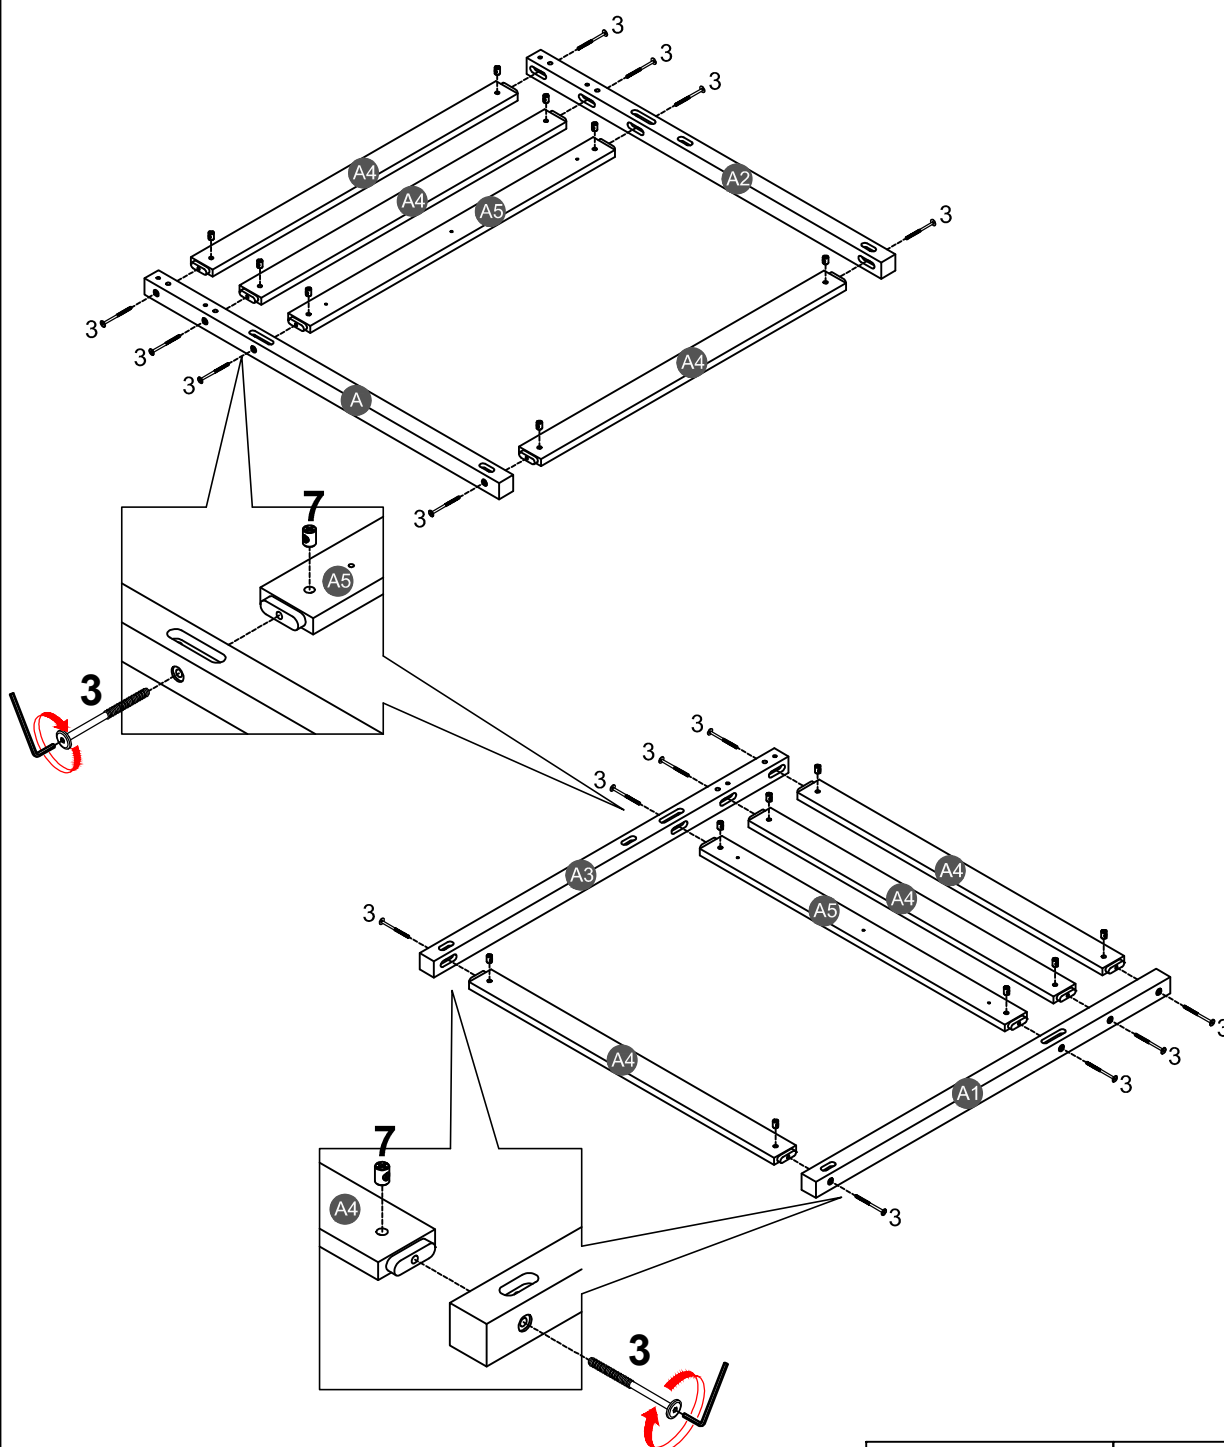

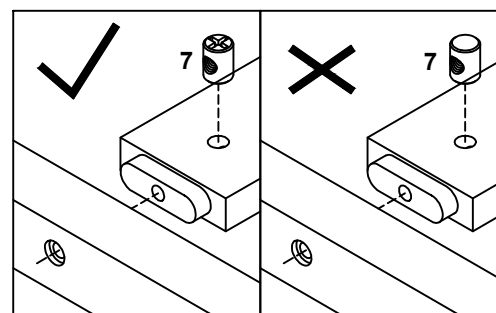


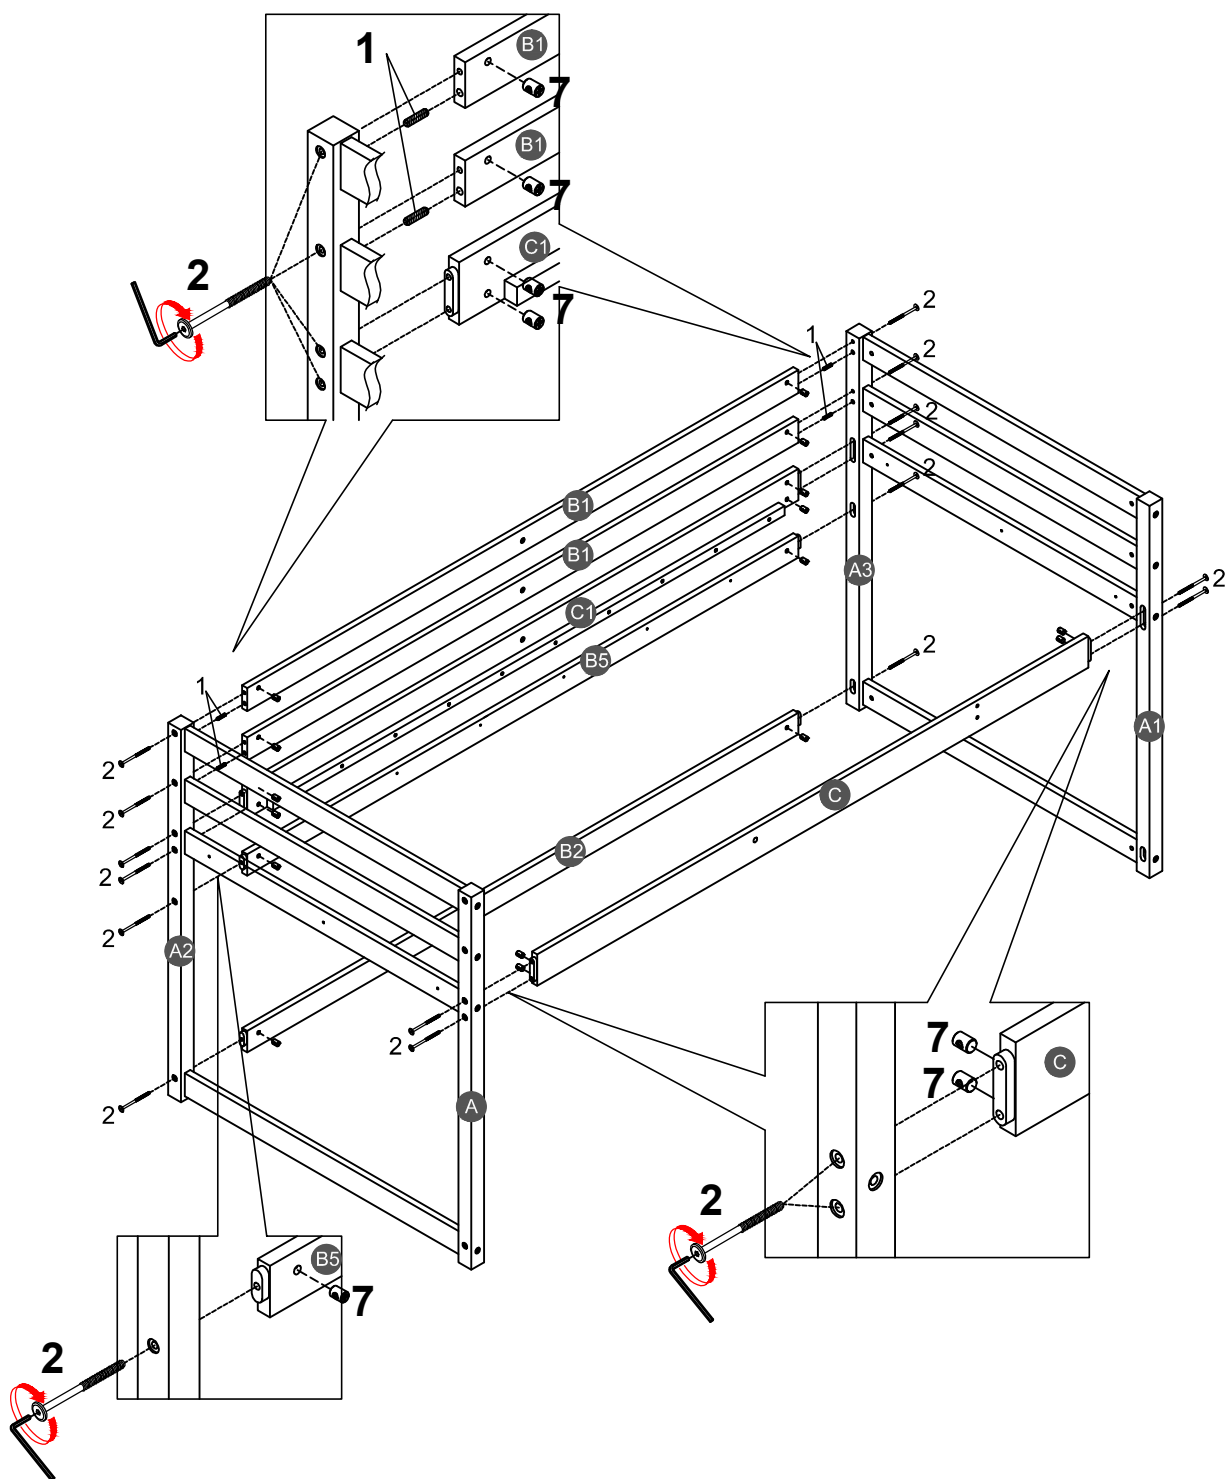
Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened



## STEP 2:

### TYPE 1

1	2	7
		
4PCS	16PCS	16PCS




### STEP 3:

TYPE 1

6



3PCS

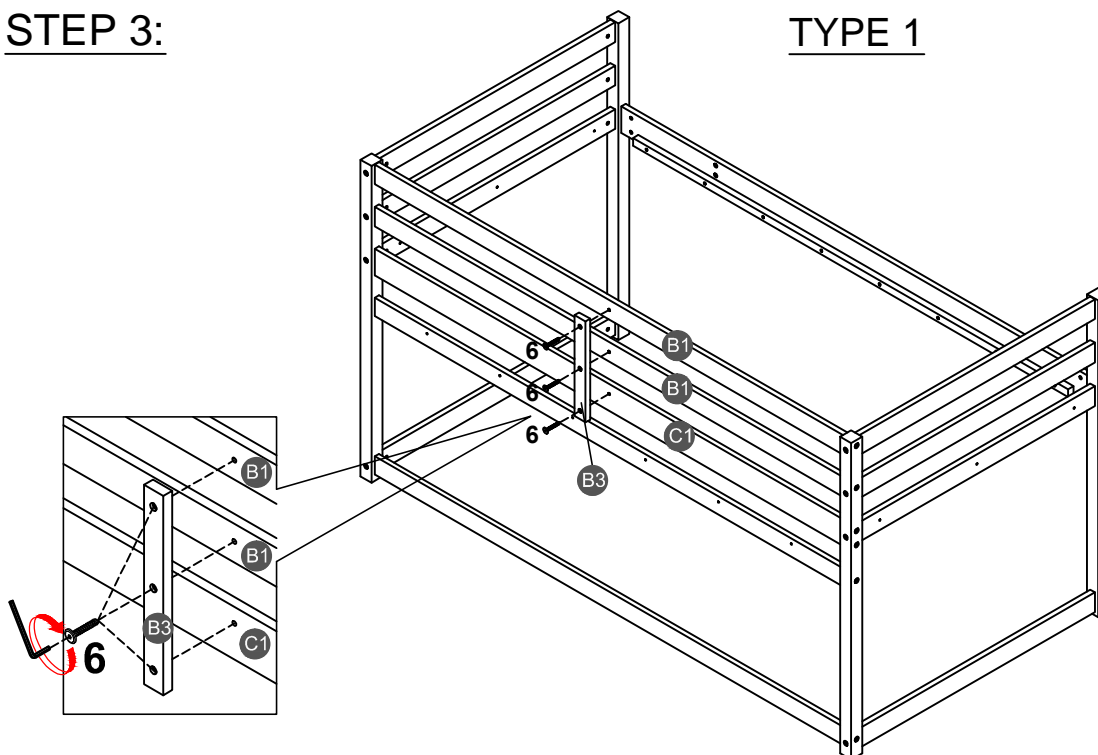

### STEP 4:

TYPE 1

13




6PCS

14




6PCS

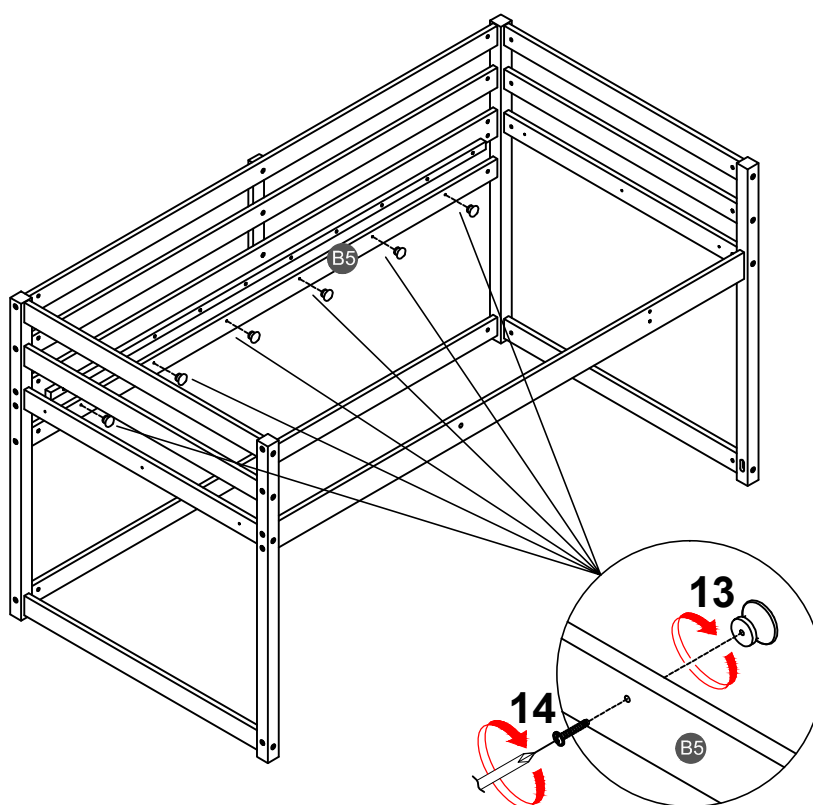





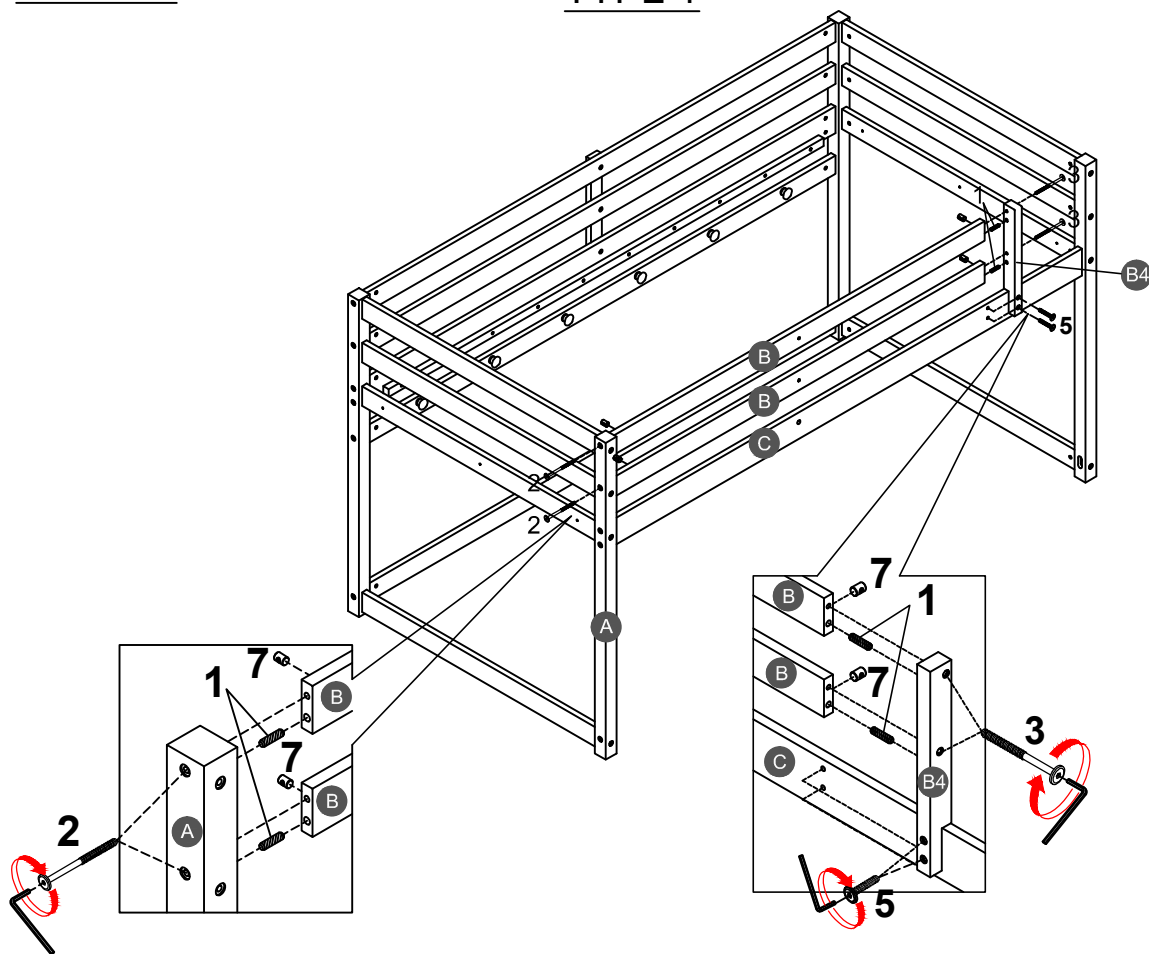


## STEP 5:


## TYPE 1




1	
4PCS	
2	
2PCS	
3	
2PCS	
5	
2PCS	
7	
4PCS	

## STEP 6:

## TYPE 1

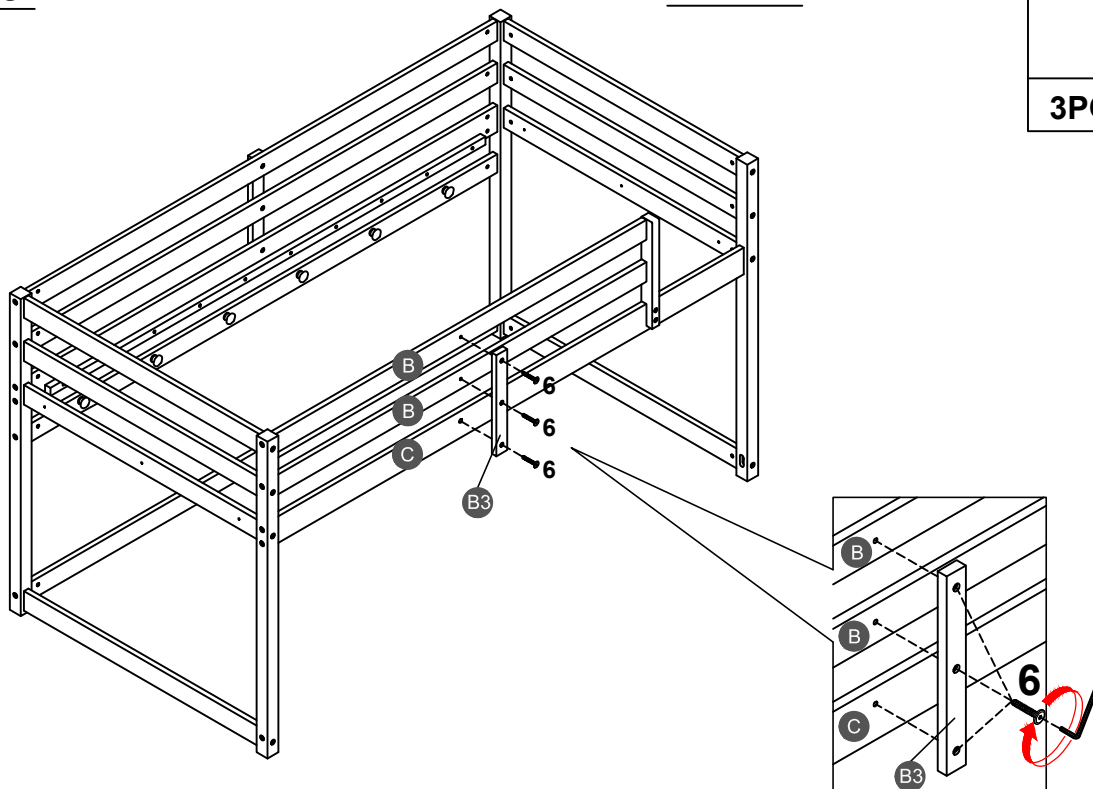

6	
3PCS	




## STEP 7:

TYPE 1

8





28PCS

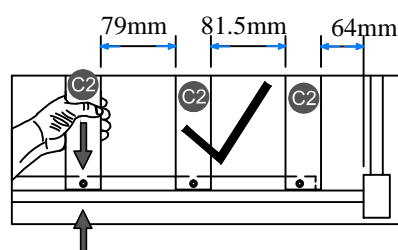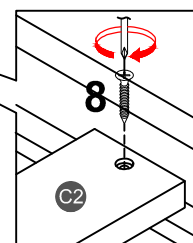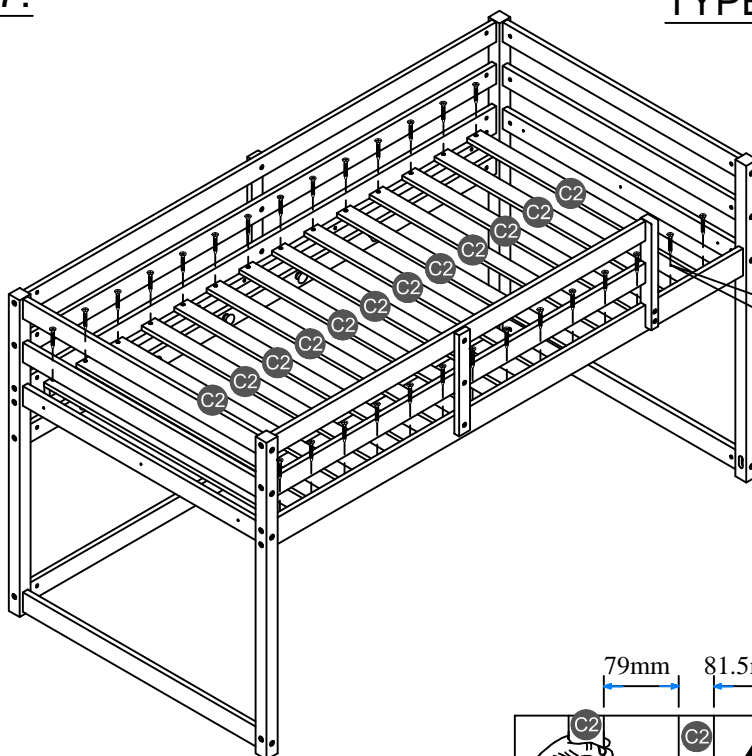

**NOTE:** Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.


## STEP 8:

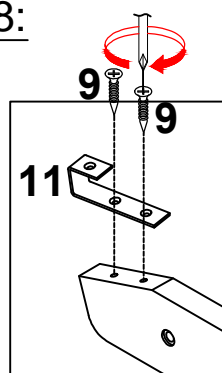


6PCS




6PCS



4PCS





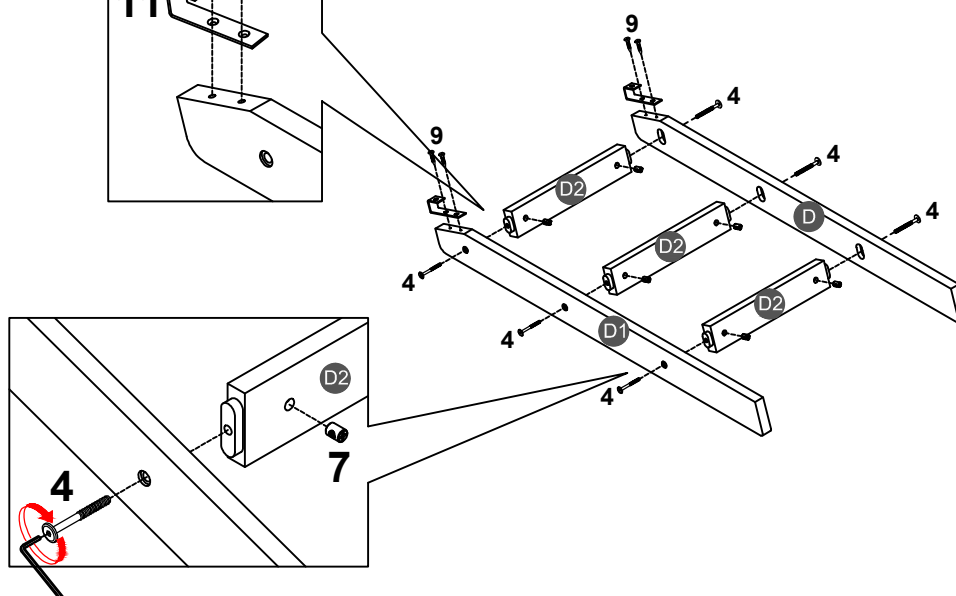


2PCS



# STEP 9:


## TYPE 1

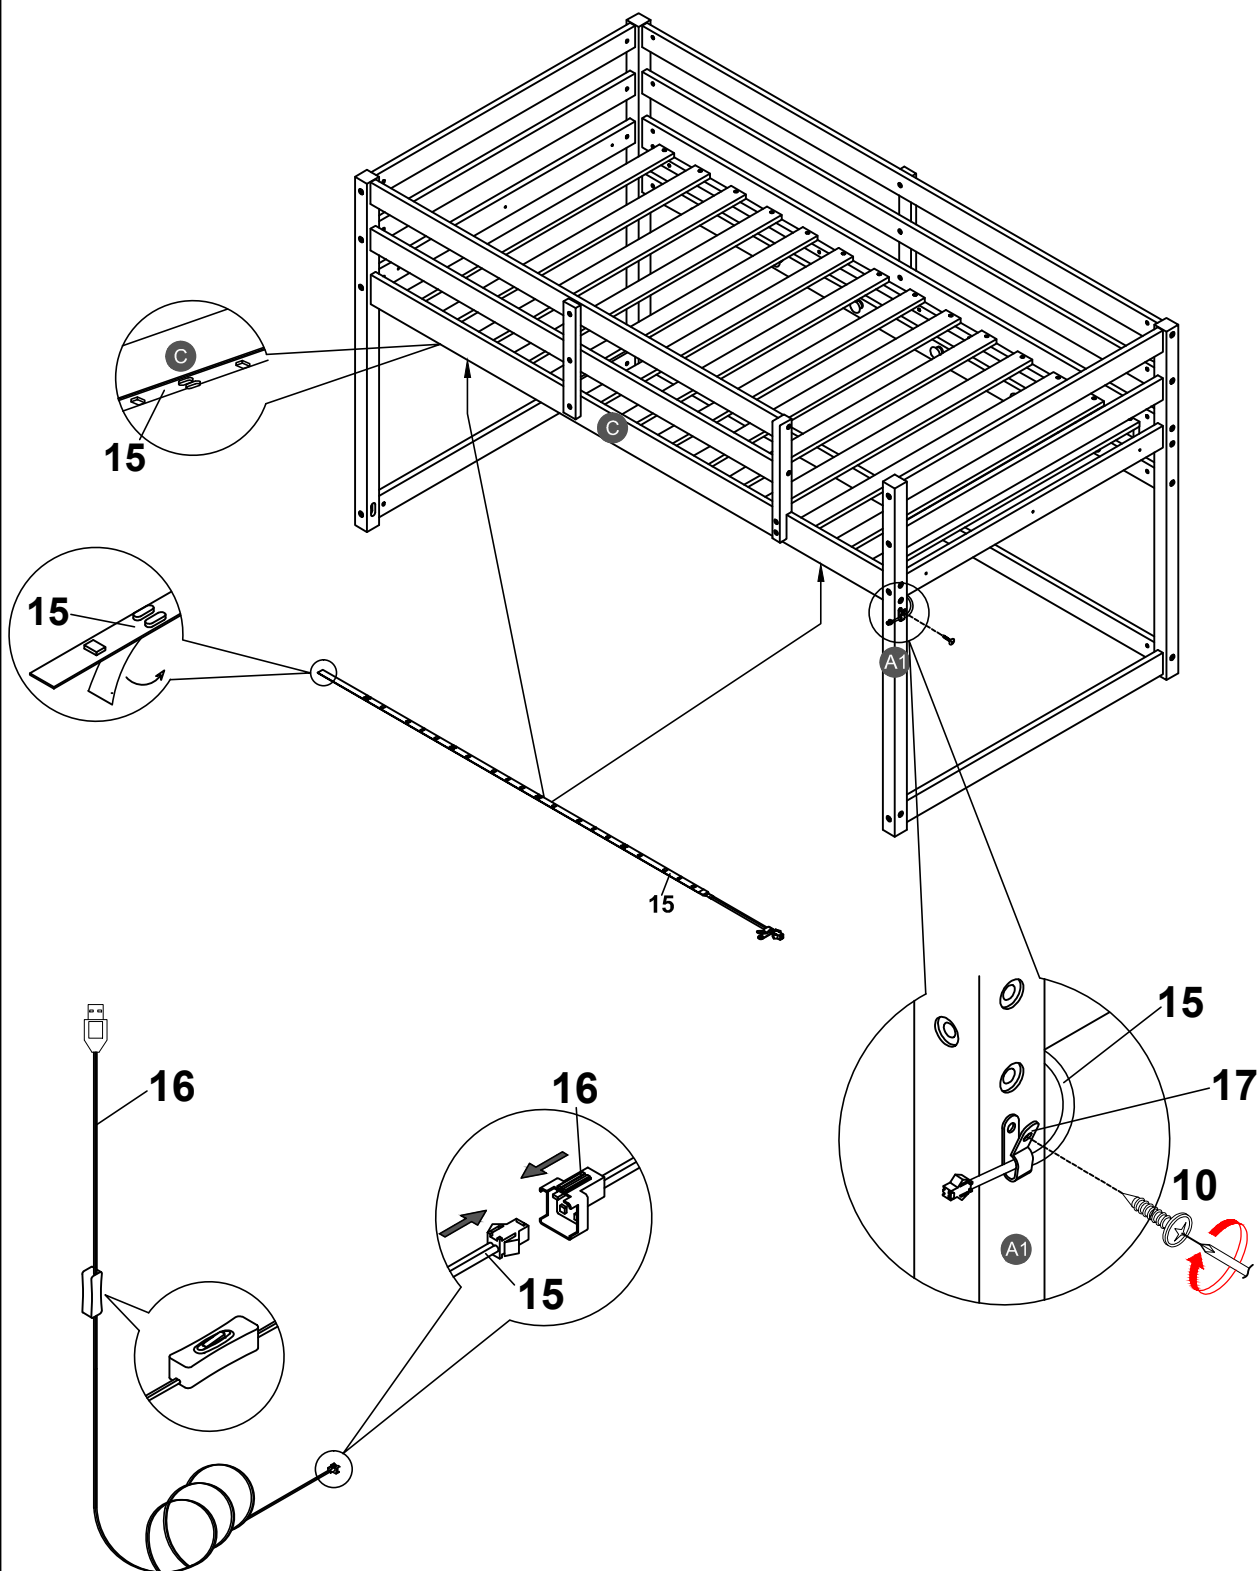

<b>10</b>		<b>15</b>		<b>16</b>		<b>17</b>	
<b>1PC</b>		<b>1PC</b>		<b>1PC</b>		<b>1PC</b>	



## STEP 10:



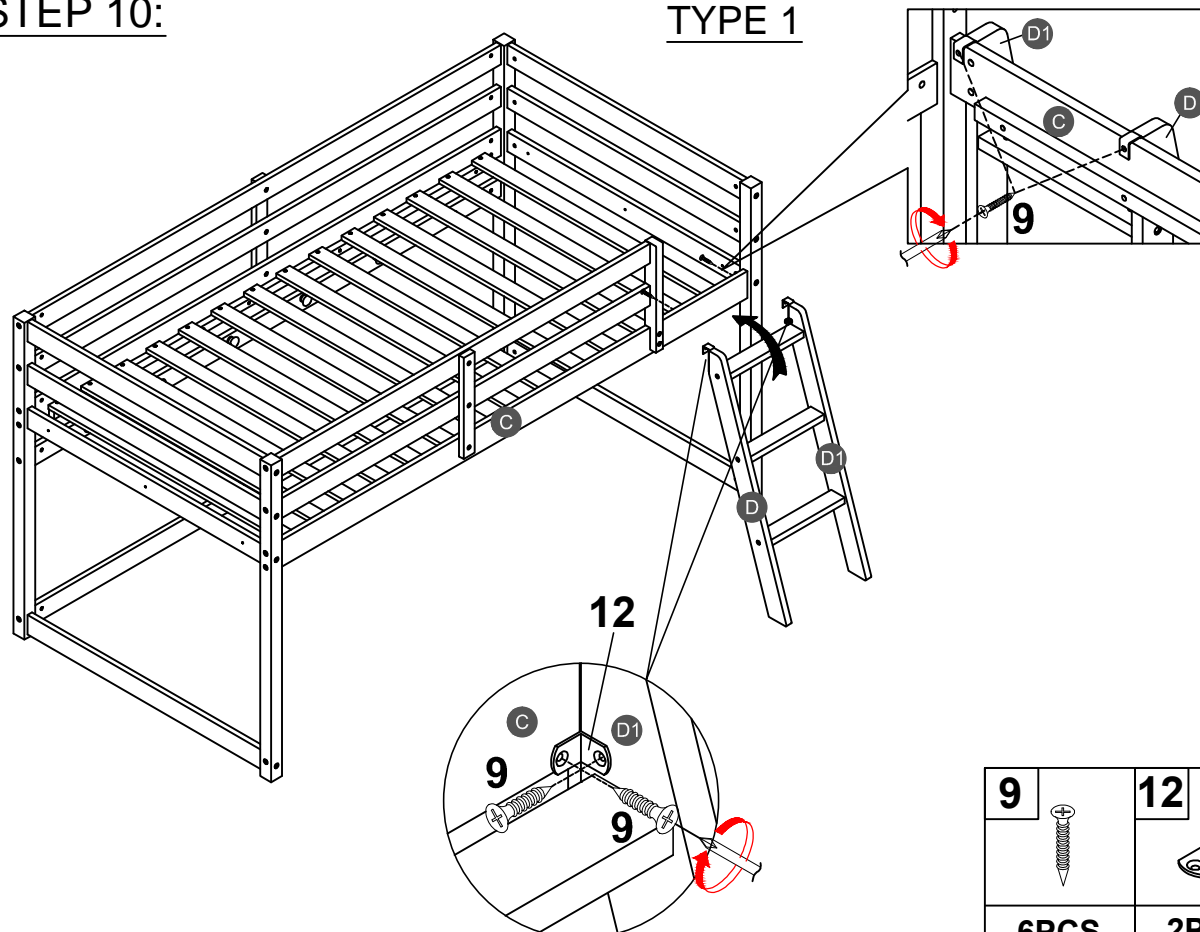
TYPE 1




<b>9</b>		<b>12</b>	
<b>6PCS</b>		<b>2PCS</b>	

## STEP 11:

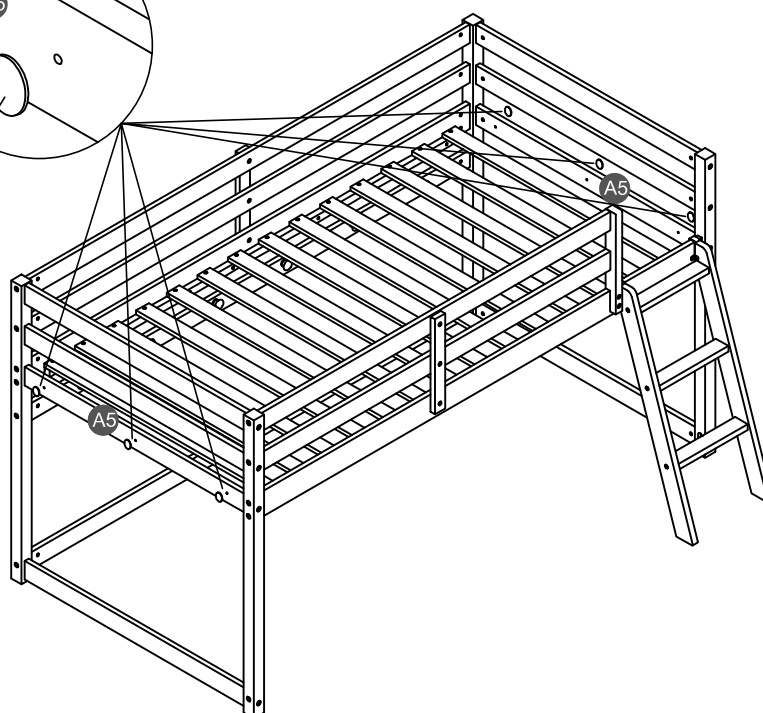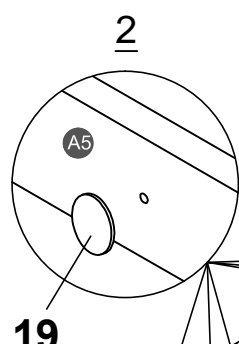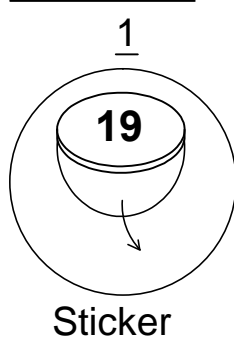

TYPE 1




<b>19</b>	
<b>6PCS</b>	


# STEP 1:

## TYPE 2

<b>3</b>		<b>7</b>	
<b>16PCS</b>		<b>16PCS</b>	

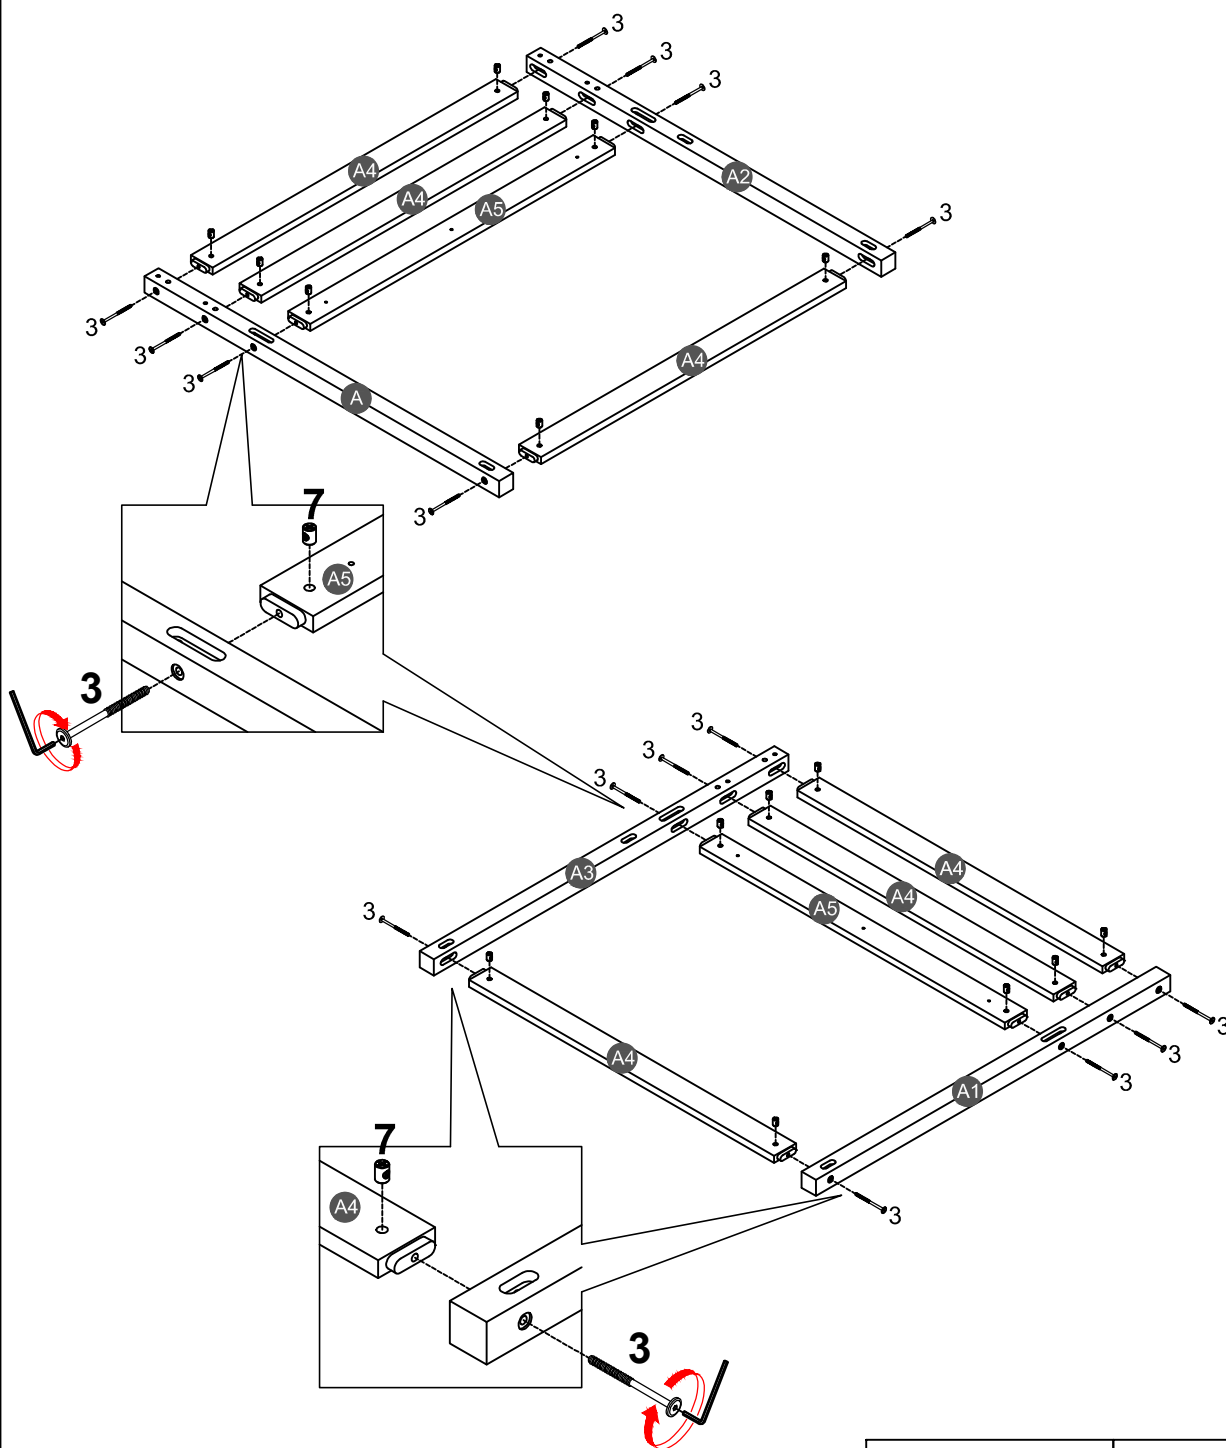

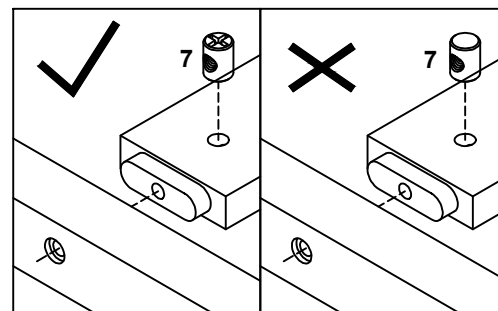


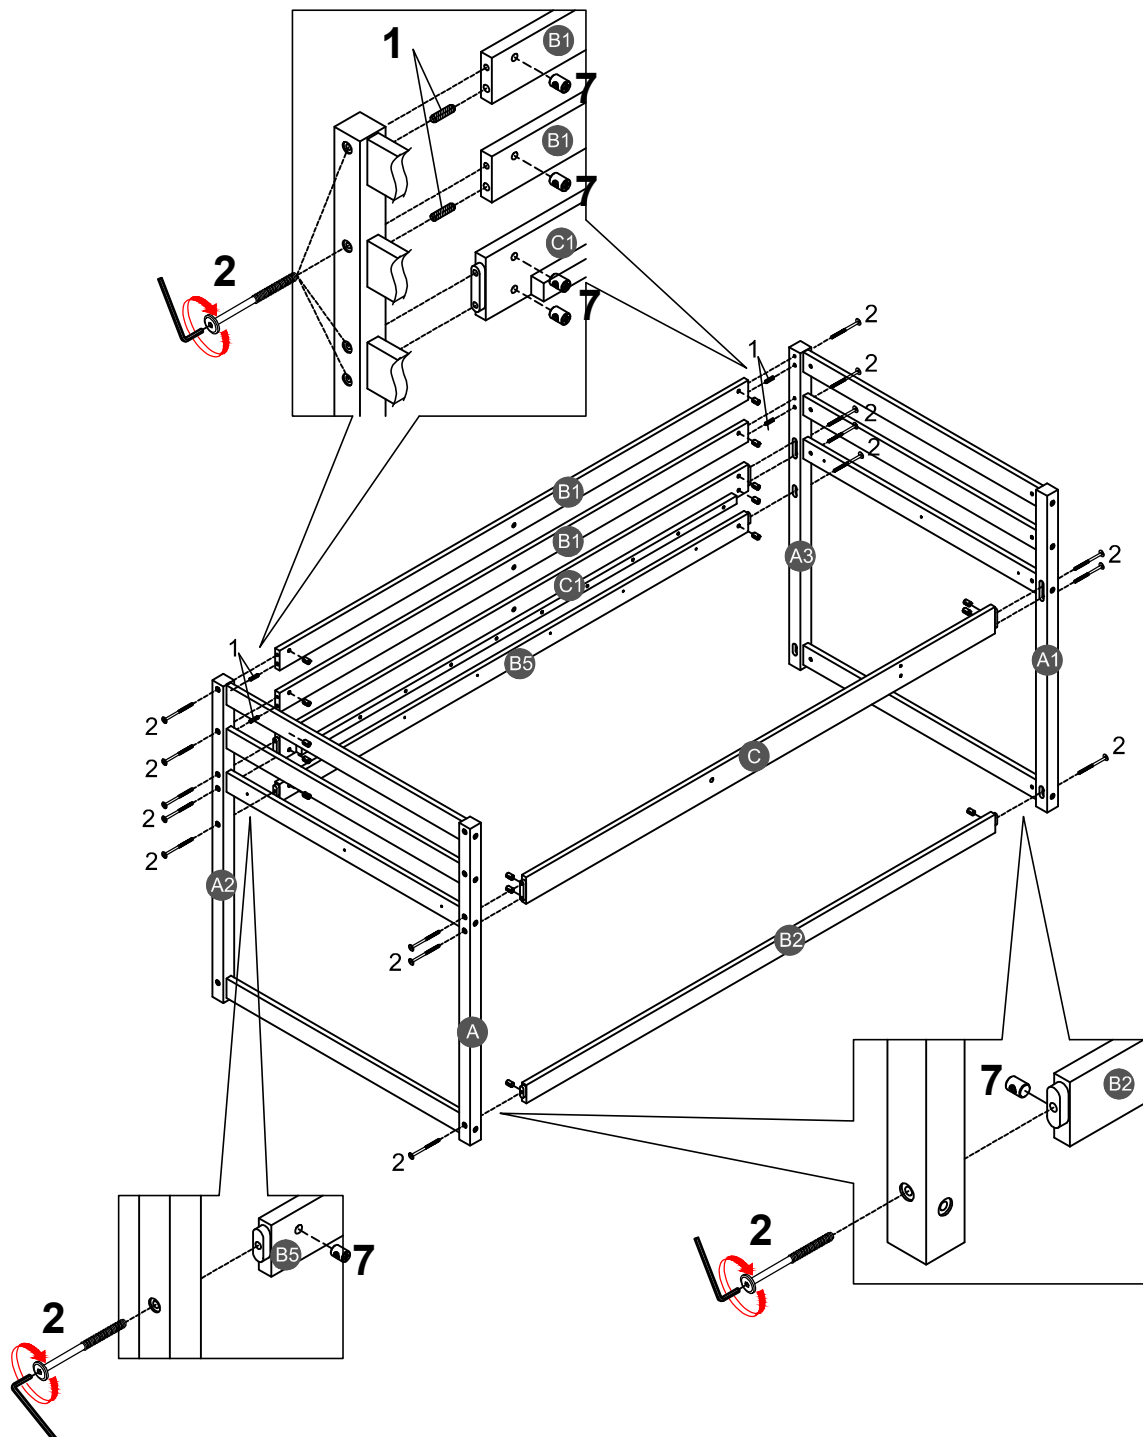
Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened



## STEP 2:

### TYPE 2

<b>1</b>		<b>2</b>		<b>7</b>	
<b>4PCS</b>		<b>16PCS</b>		<b>16PCS</b>	




**STEP 3:**

**TYPE 2**

**6**



**3PCS**

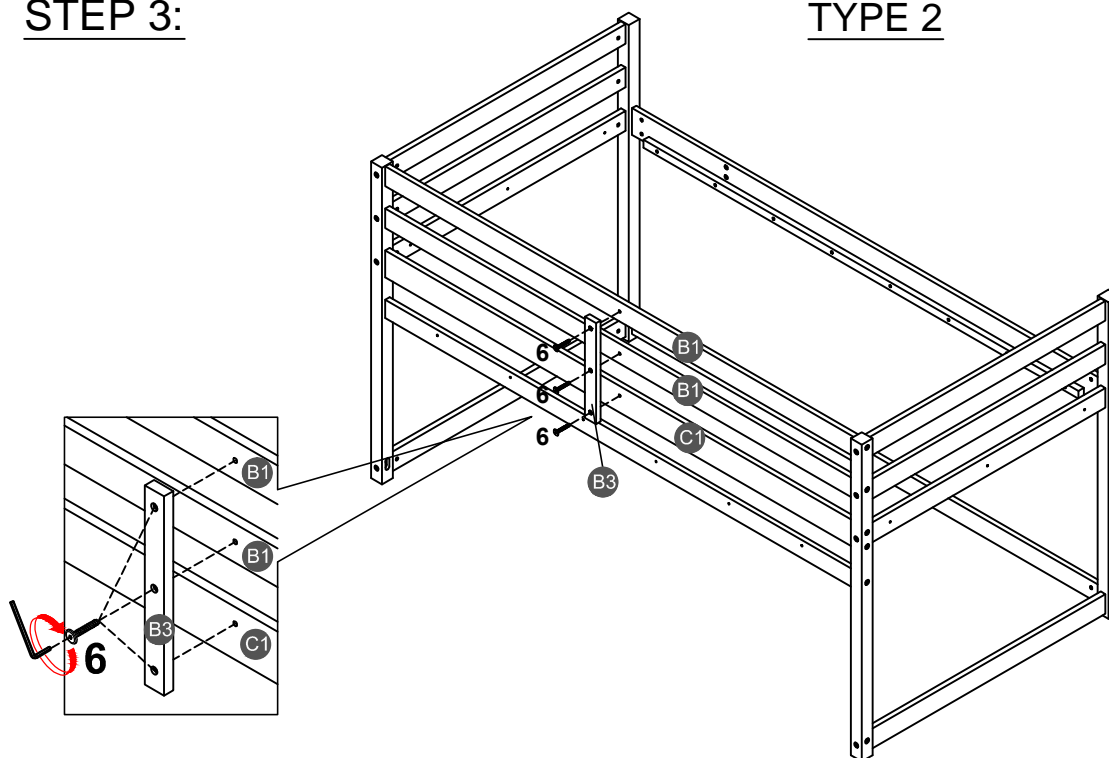

**STEP 4:**

**TYPE 2**

**13**




**6PCS**

**14**






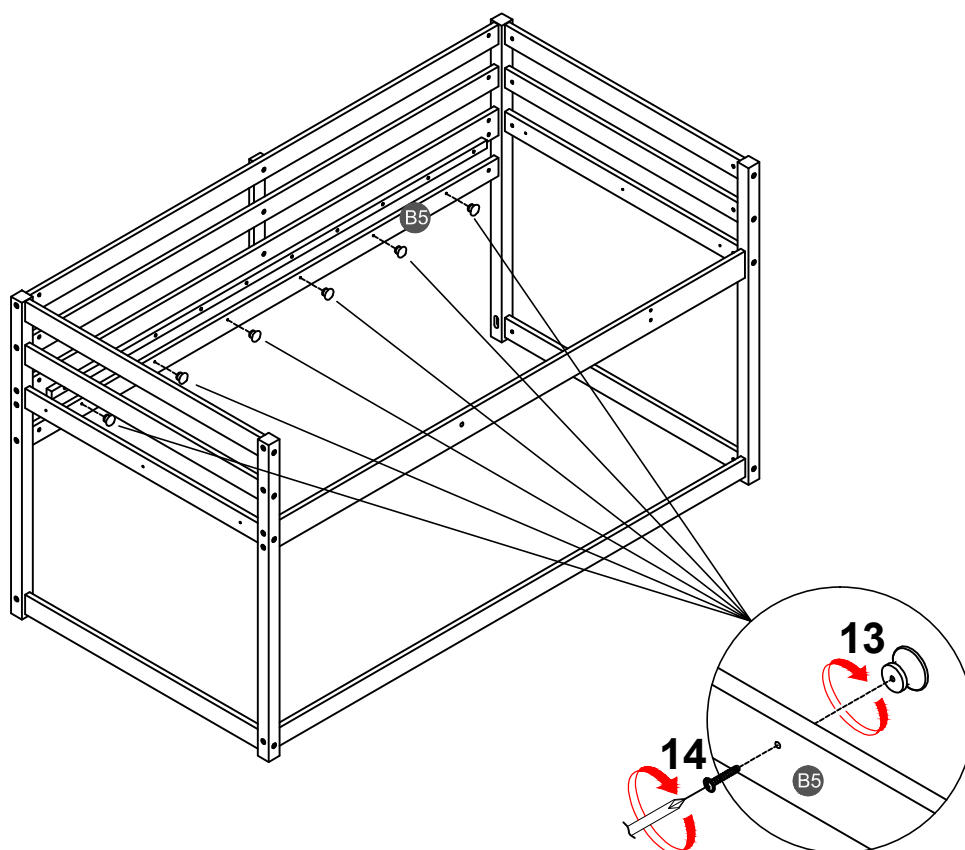


**6PCS**

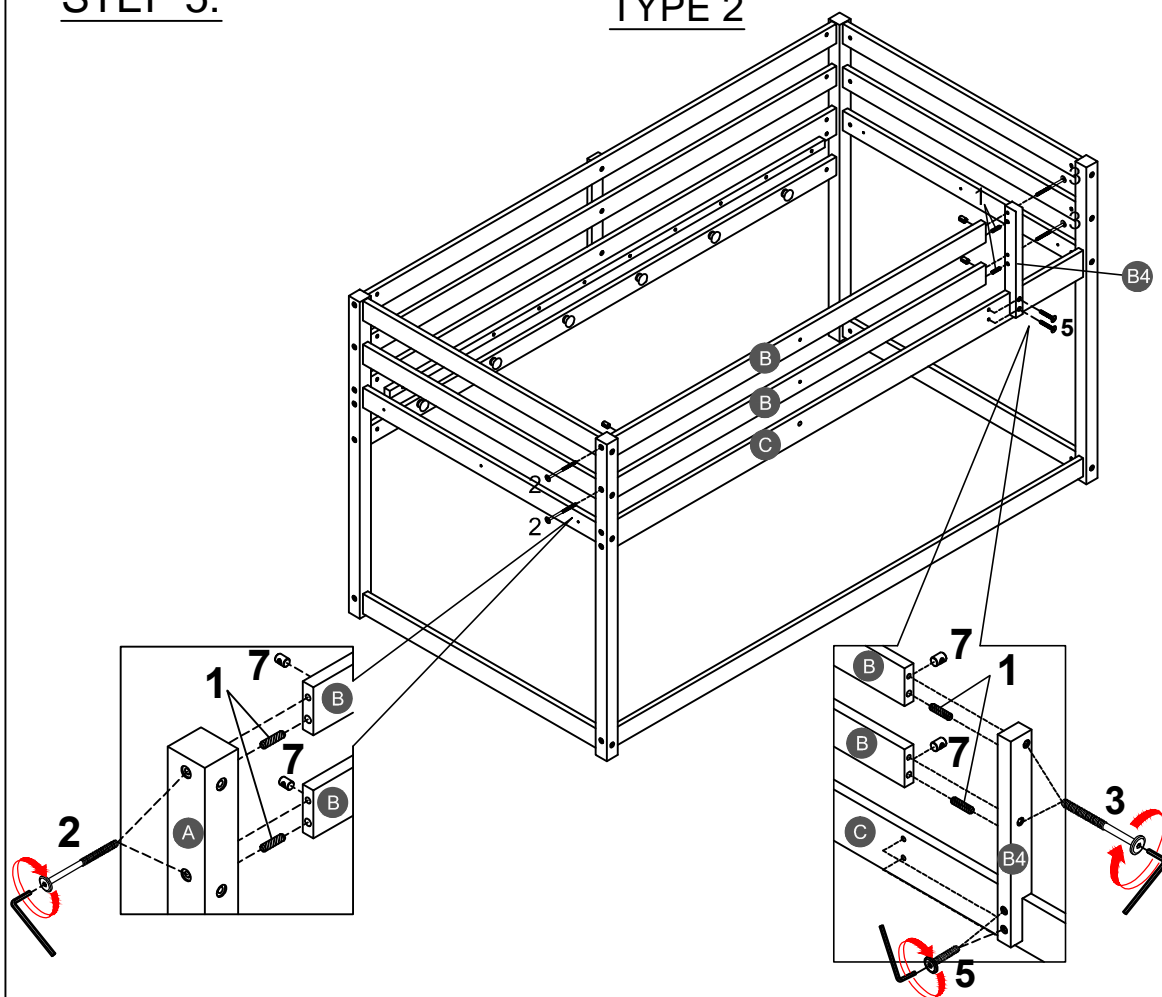

## STEP 5:


## TYPE 2



1	
4PCS	
2	
2PCS	
3	
2PCS	
5	
2PCS	
7	
4PCS	

## STEP 6:

## TYPE 2

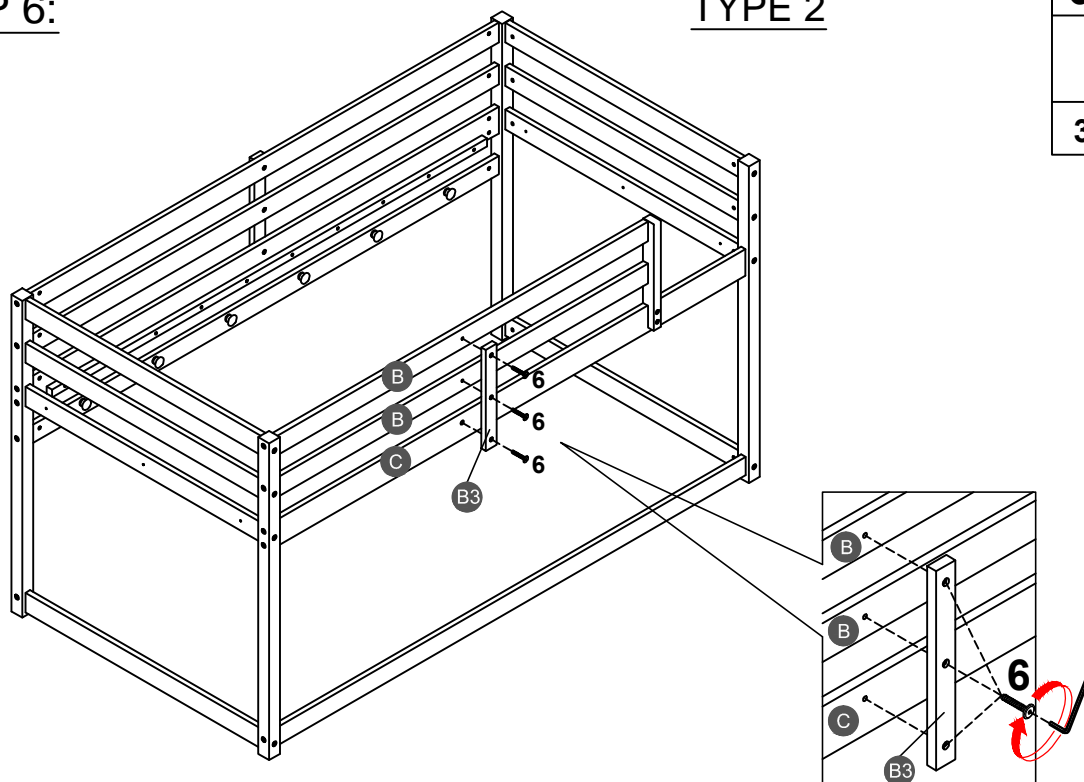

6	
3PCS	






## STEP 7:

### TYPE 2

8



28PCS

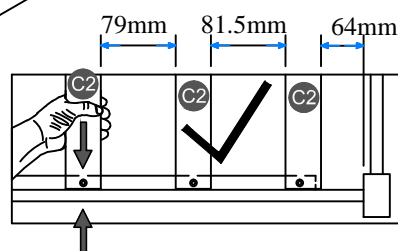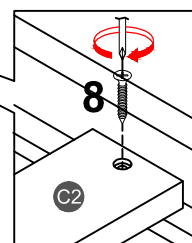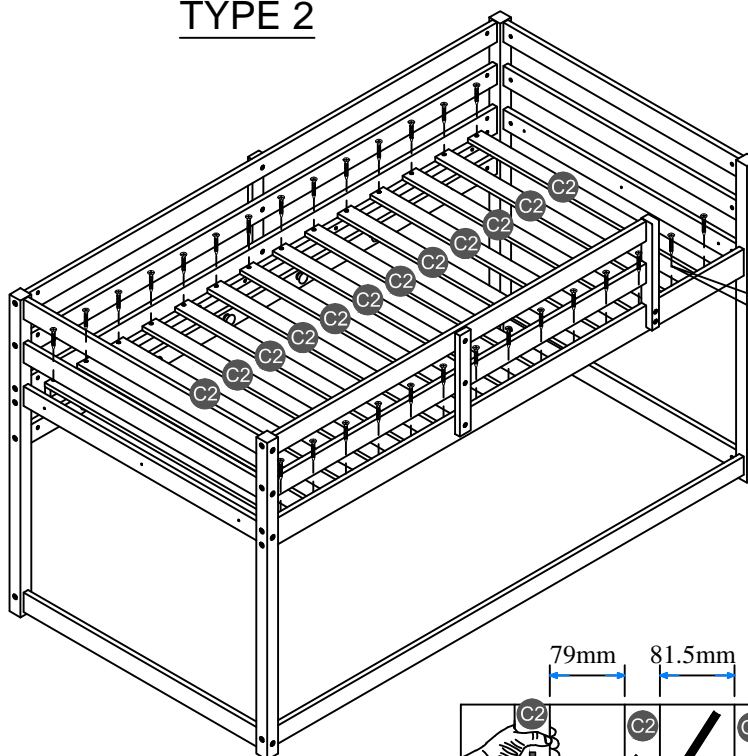

**NOTE:** Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

## STEP 8:

### TYPE 2

4




6PCS

7



6PCS

9






4PCS

11



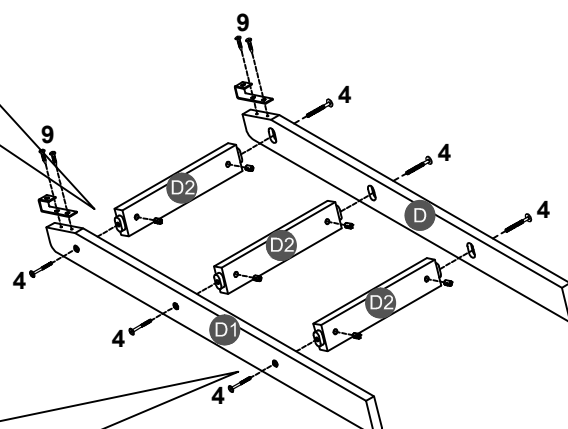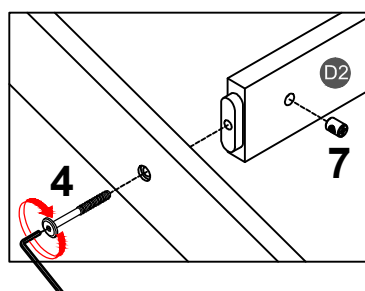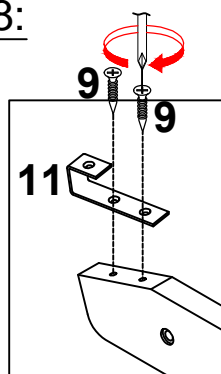



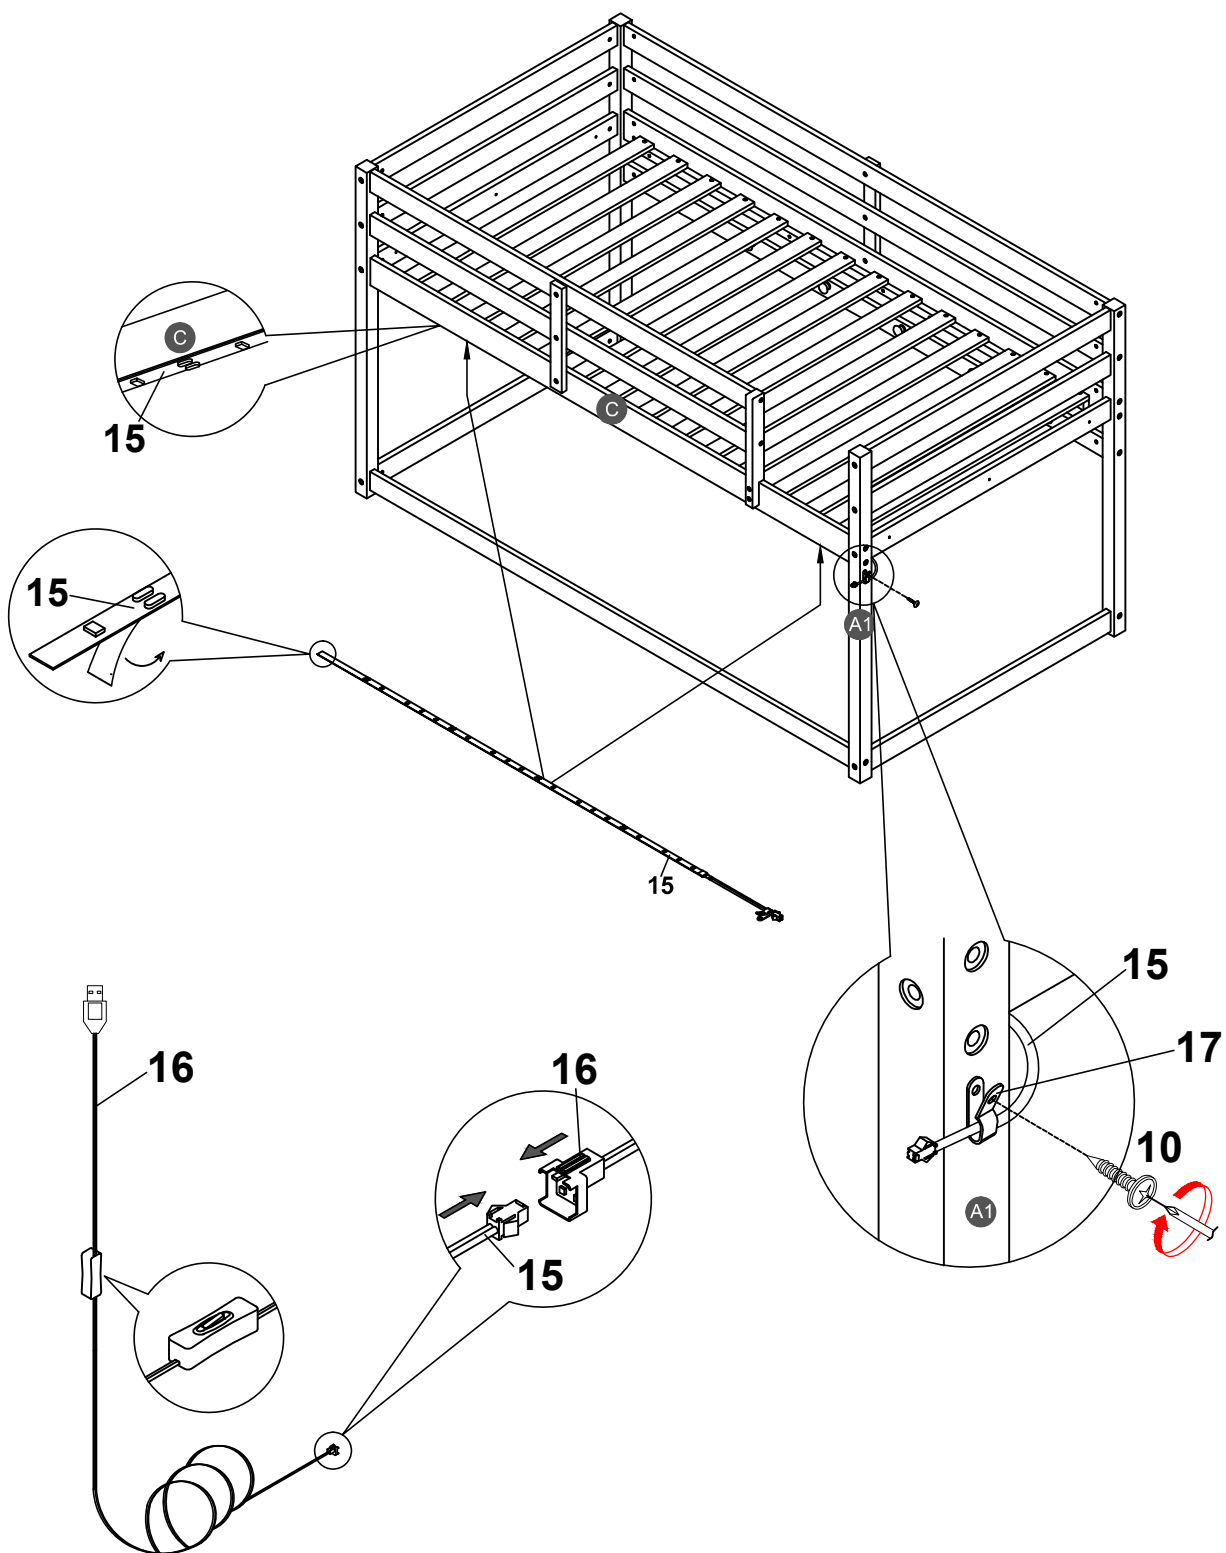
2PCS



# STEP 9:


## TYPE 2



<b>10</b>		<b>15</b>		<b>16</b>		<b>17</b>	
<b>1PC</b>		<b>1PC</b>		<b>1PC</b>		<b>1PC</b>	



## STEP 10:

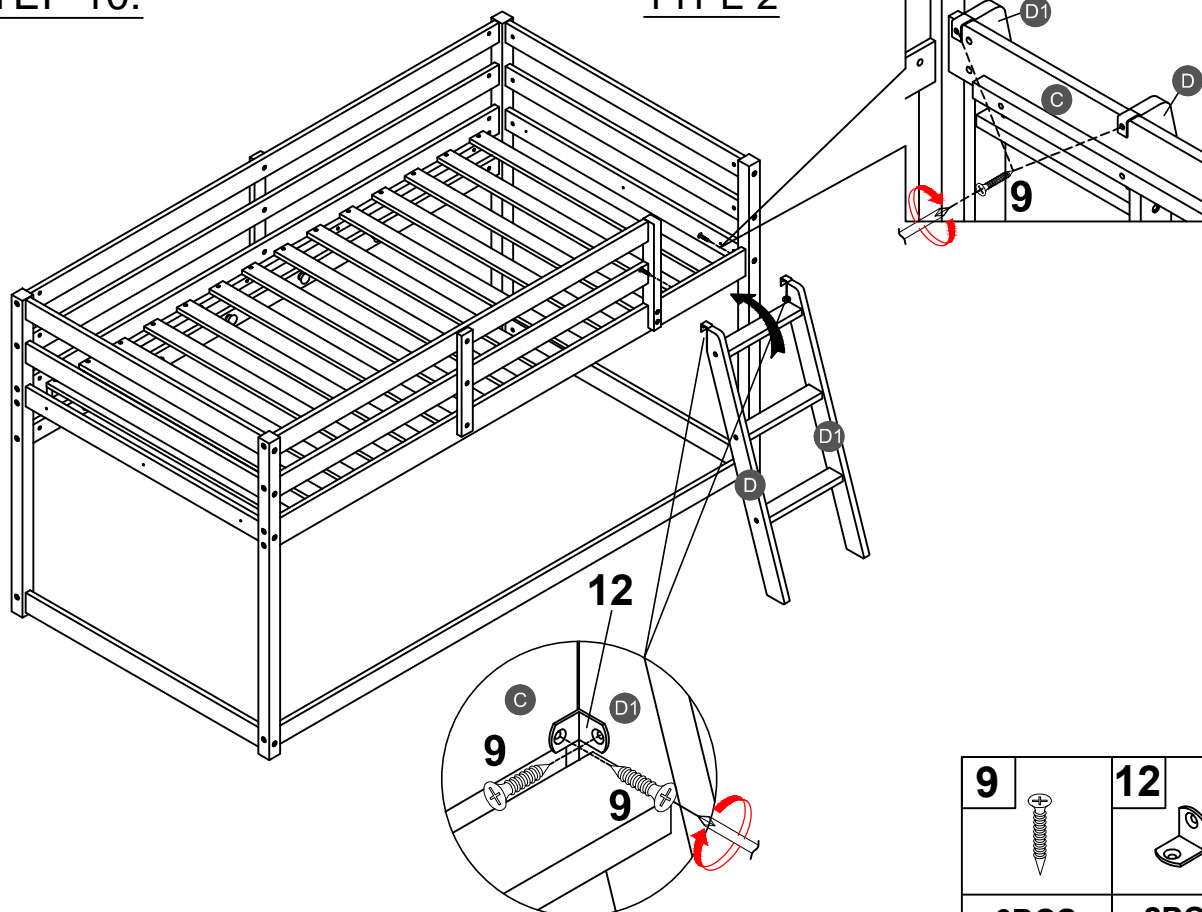TYPE 2




<b>9</b>		<b>12</b>	
<b>6PCS</b>		<b>2PCS</b>	


## STEP 11: 1

2


TYPE 2

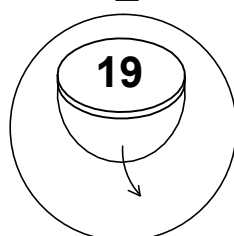


Sticker

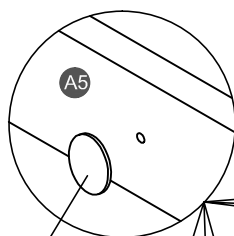

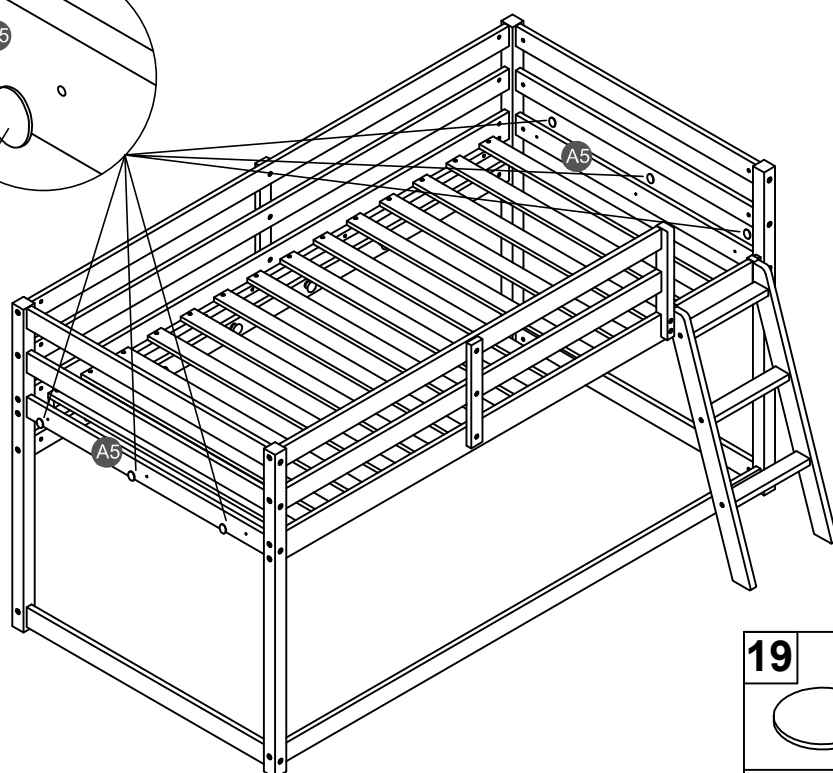

19




<b>19</b>	
<b>6PCS</b>	


# STEP 1:

## TYPE 3

3		7	
16PCS		16PCS	

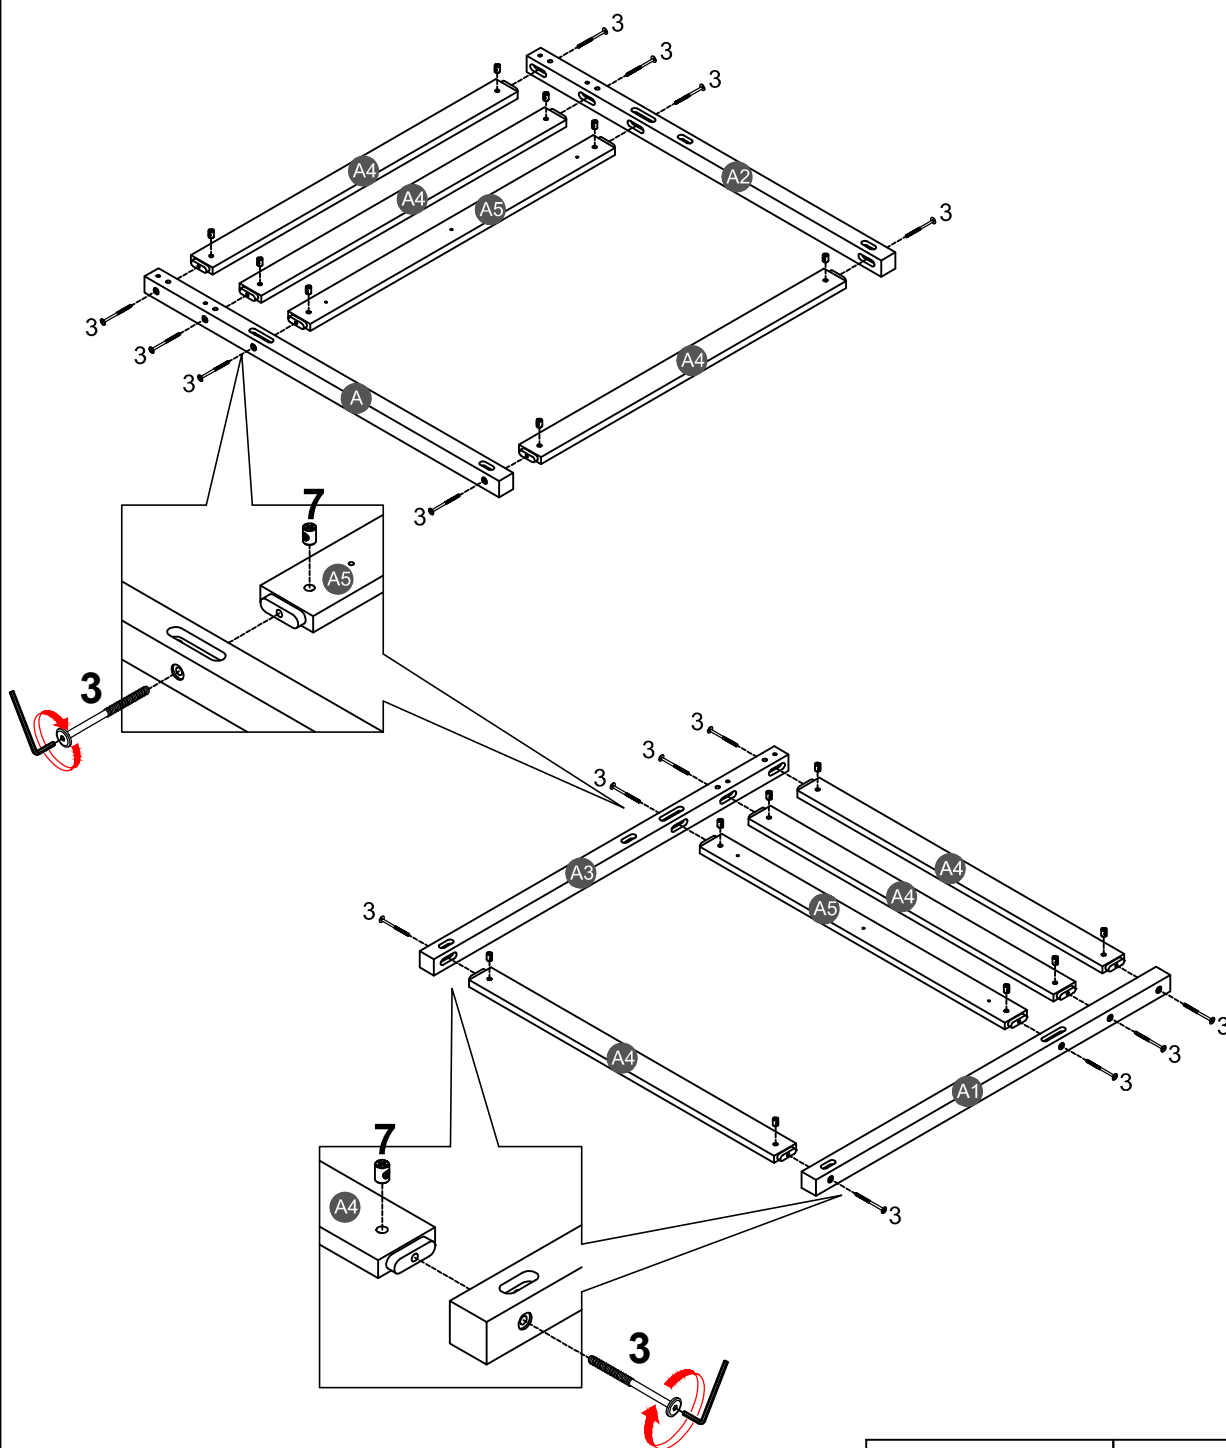

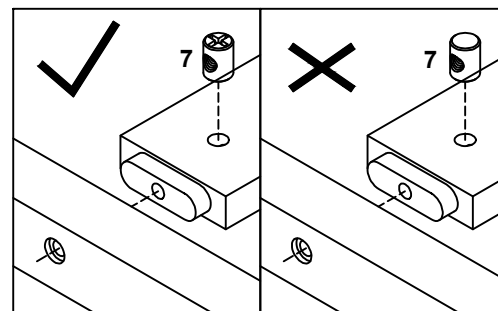


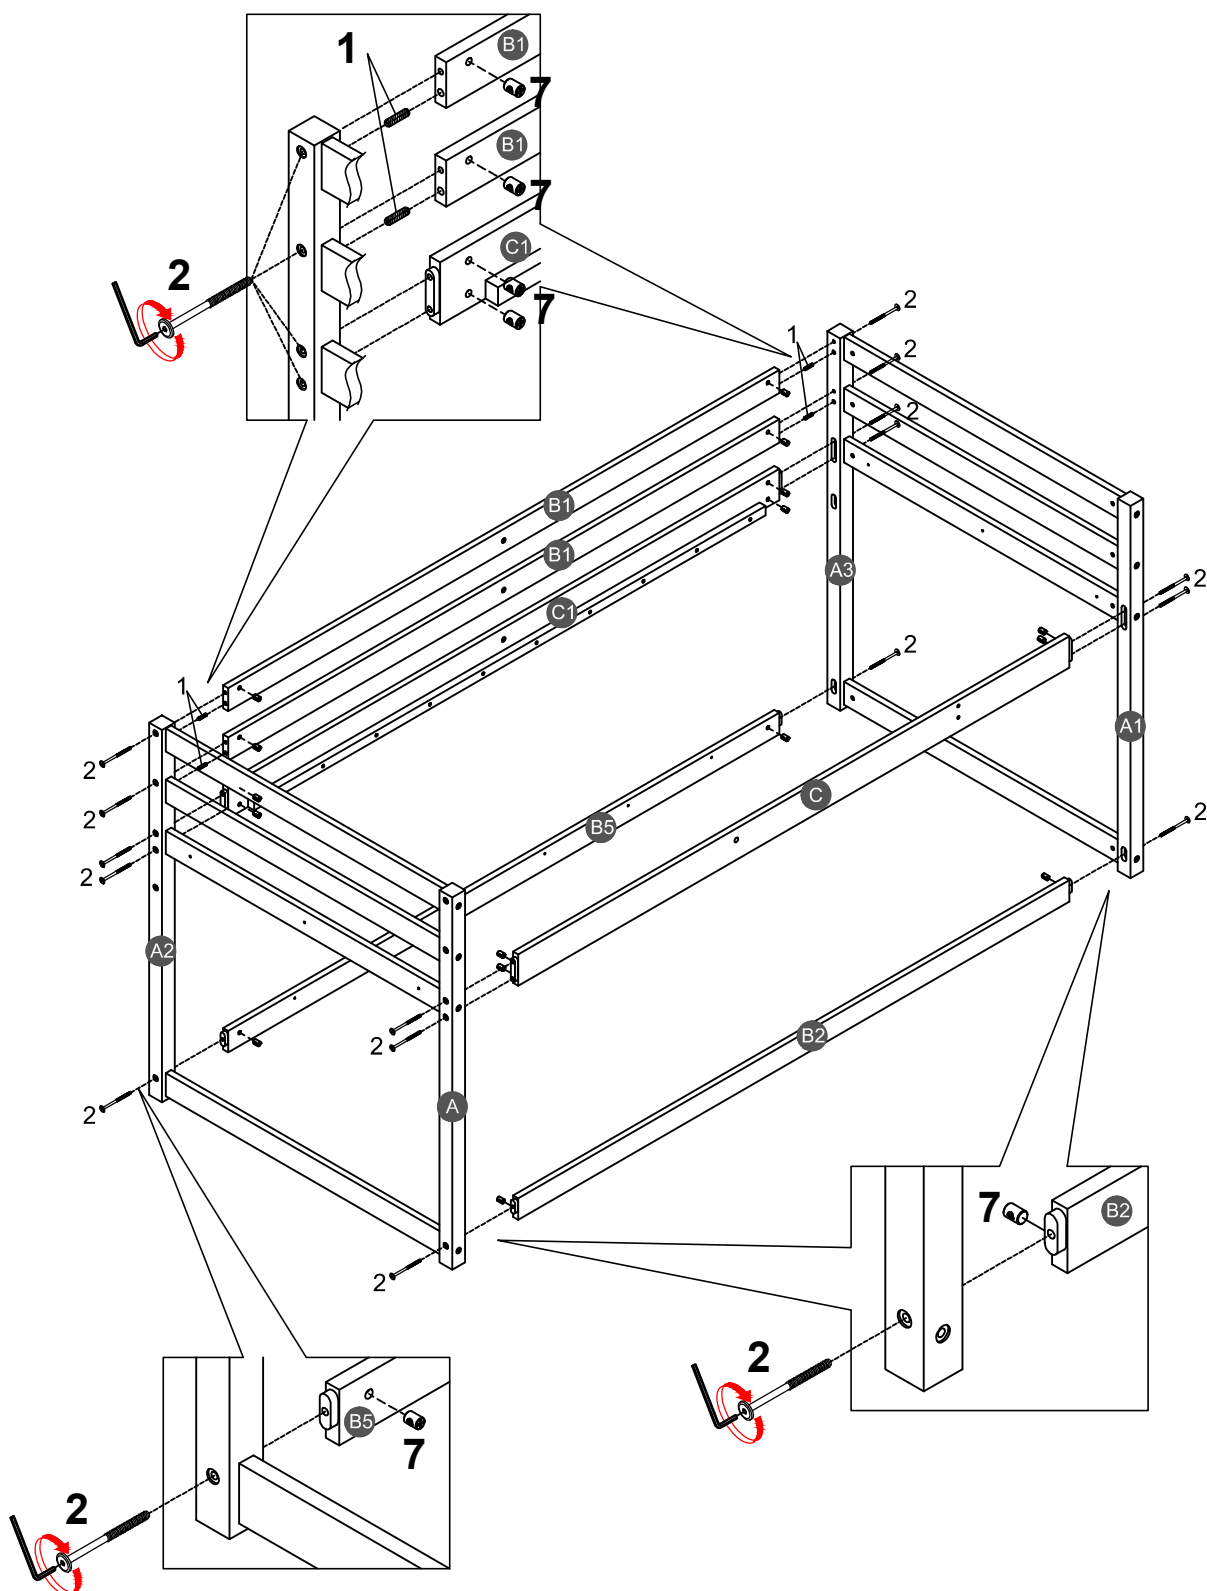
Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened



## STEP 2:

### TYPE 3

1	2	7
		
4PCS	16PCS	16PCS




### STEP 3:

### TYPE 3

6



3PCS

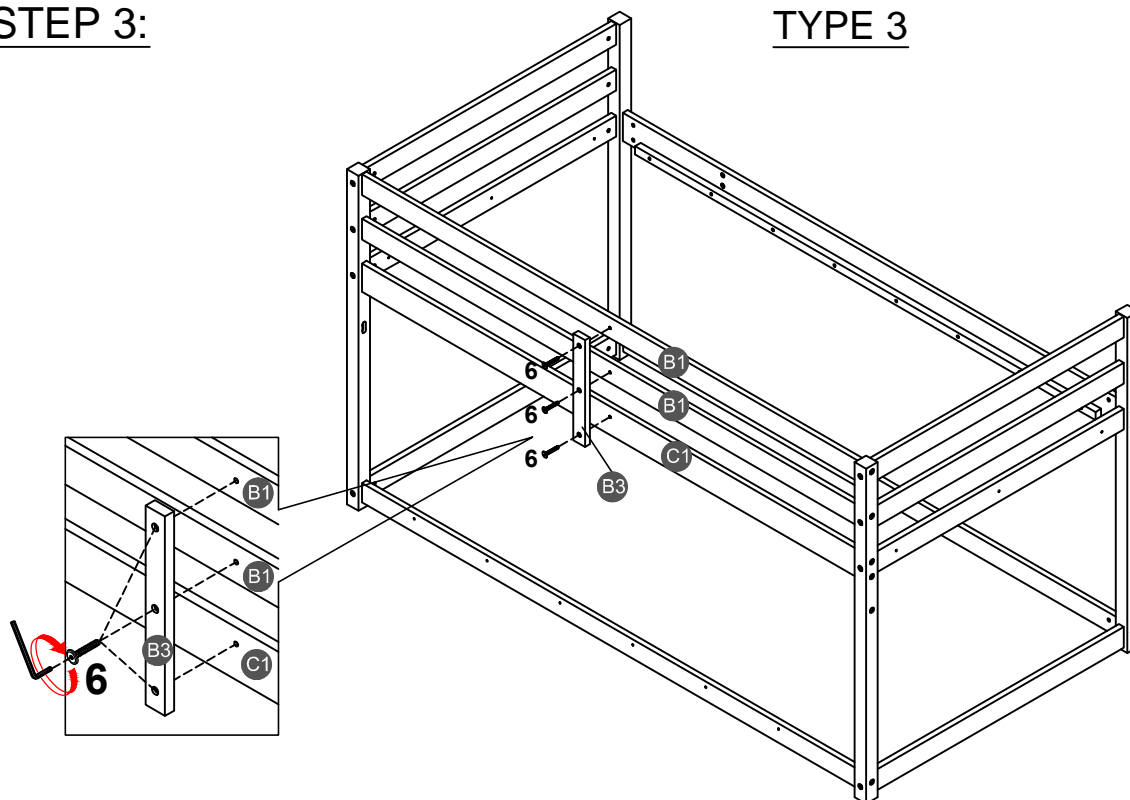

### STEP 4:

### TYPE 3

1



4PCS

2



2PCS

3



2PCS

5




2PCS

7



4PCS

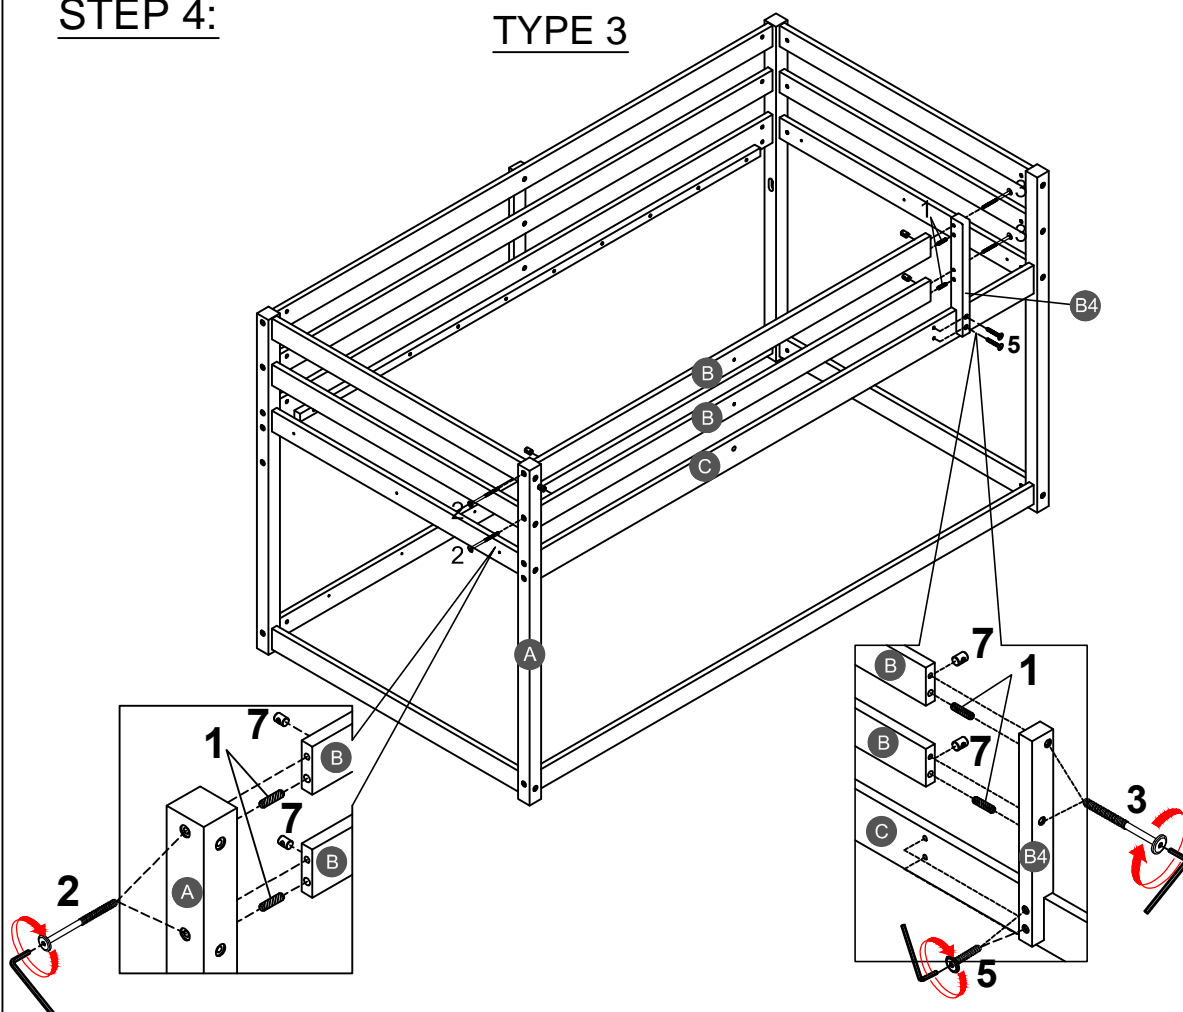


## STEP 5:

## TYPE 3

6



3PCS

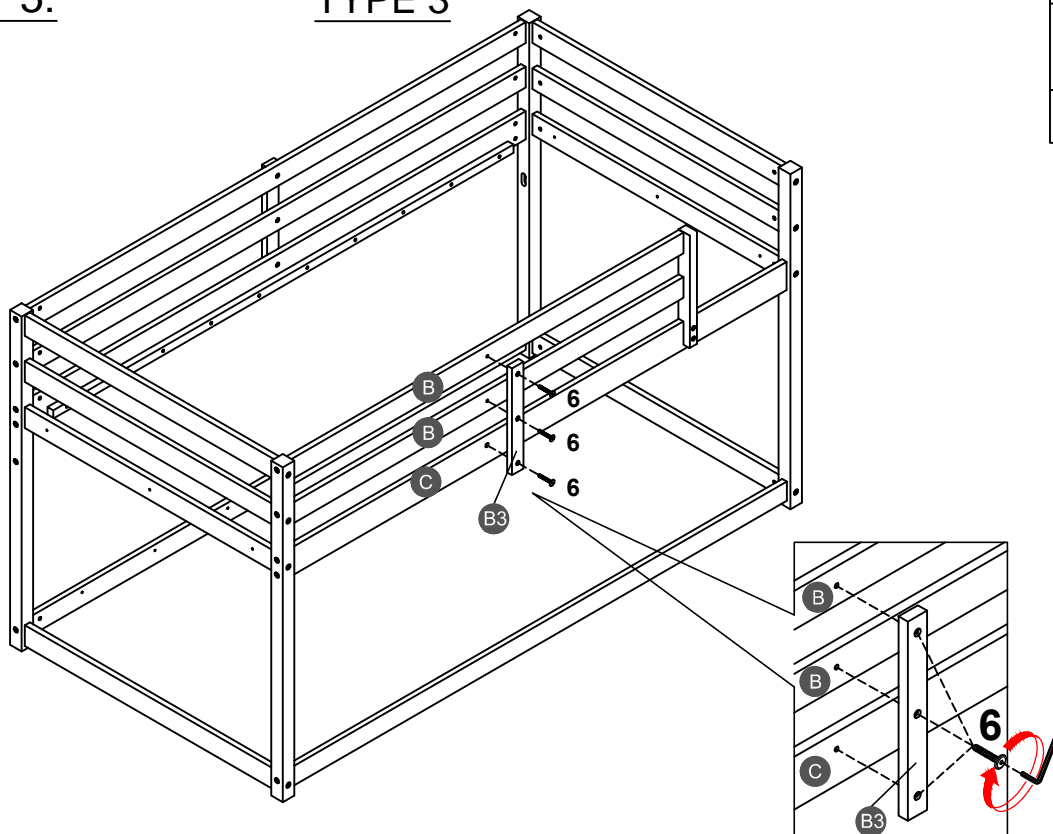

## STEP 6:

## TYPE 3

13




6PCS

14



6PCS

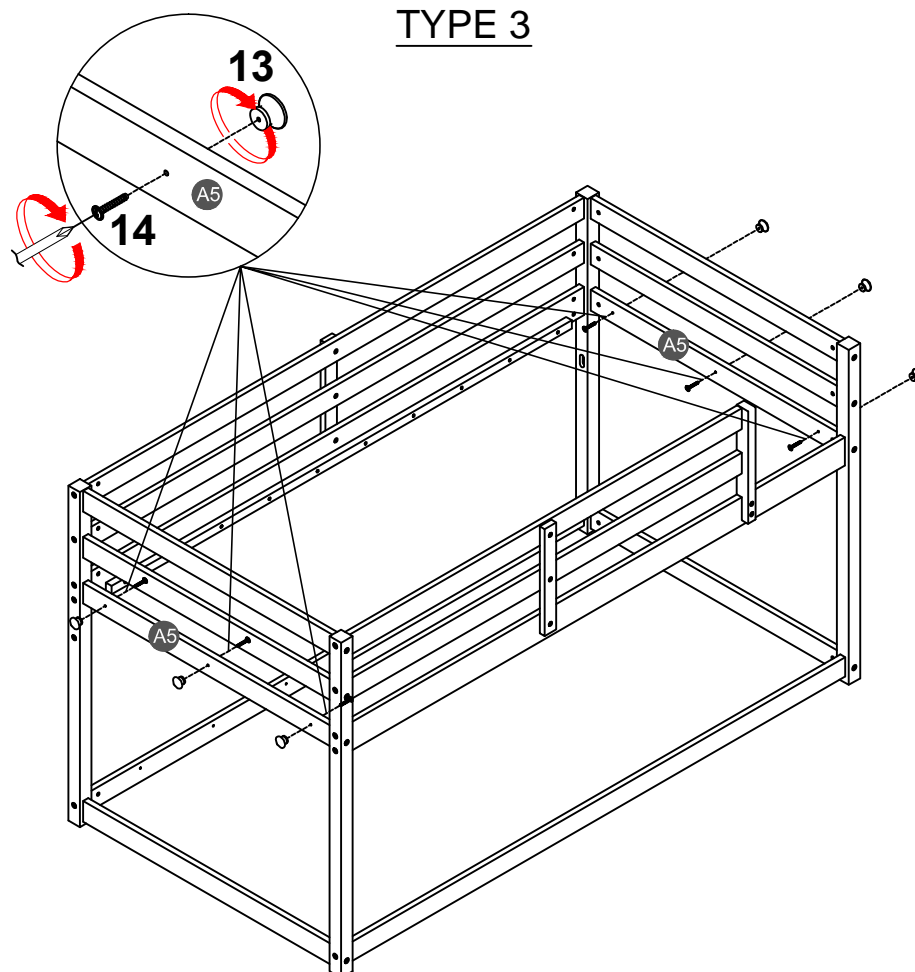




## STEP 7:

### TYPE 3

8



28PCS

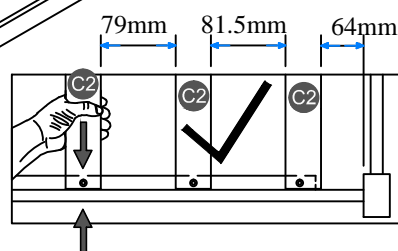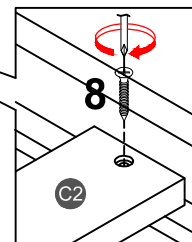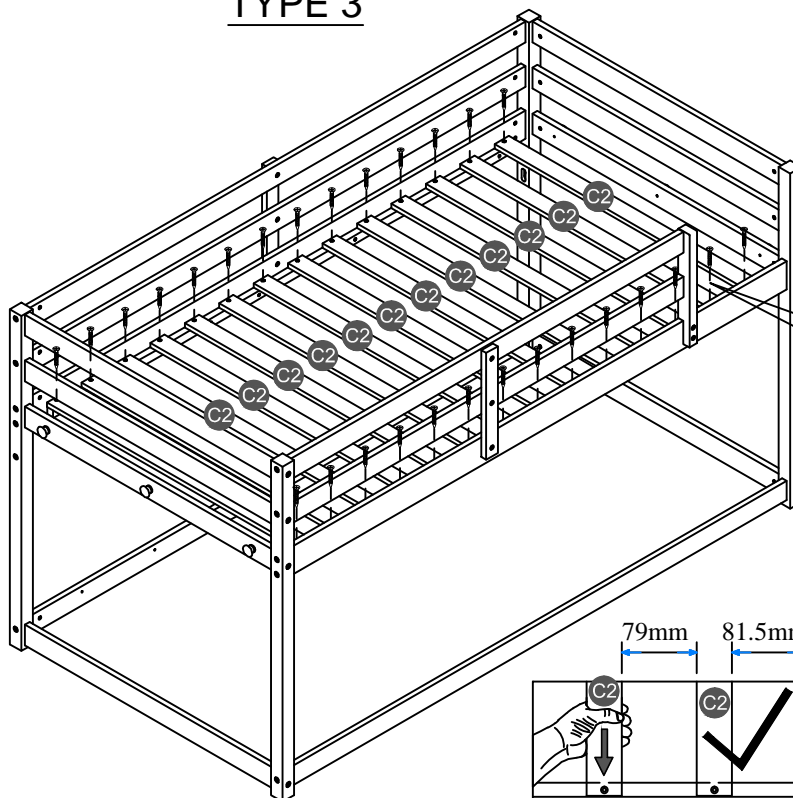


**NOTE:** Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

## STEP 8:

### TYPE 3

4




6PCS

7



6PCS

9






4PCS

11





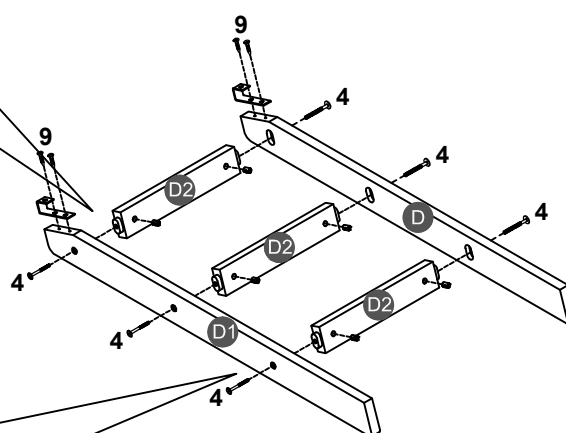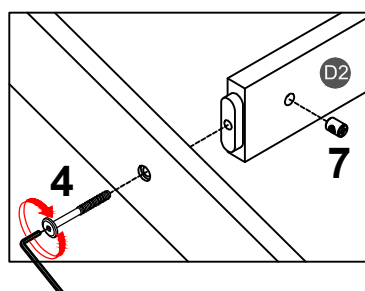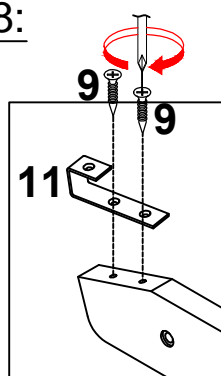

2PCS






### STEP 9:


### TYPE 3

<b>10</b>	<b>15</b>	<b>16</b>	<b>17</b>
			
<b>1PC</b>	<b>1PC</b>	<b>1PC</b>	<b>1PC</b>

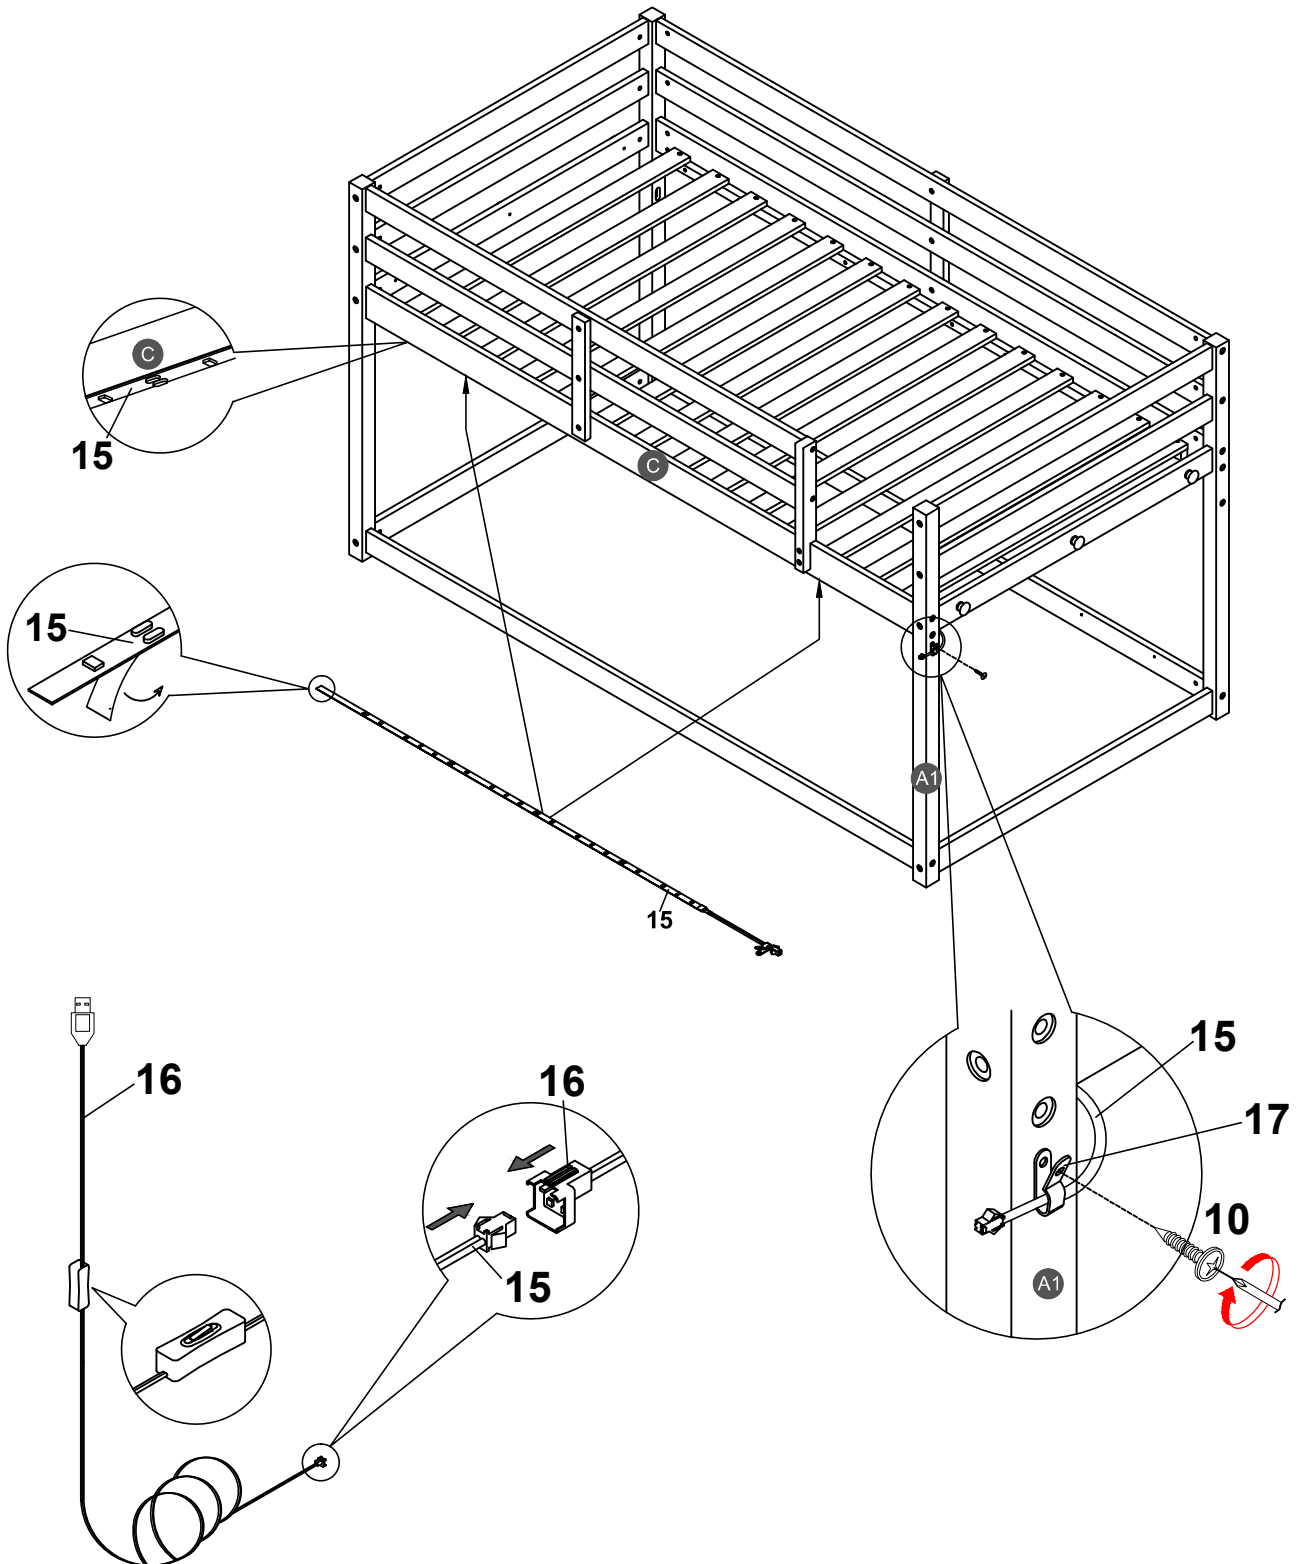

## STEP 10:

TYPE 3

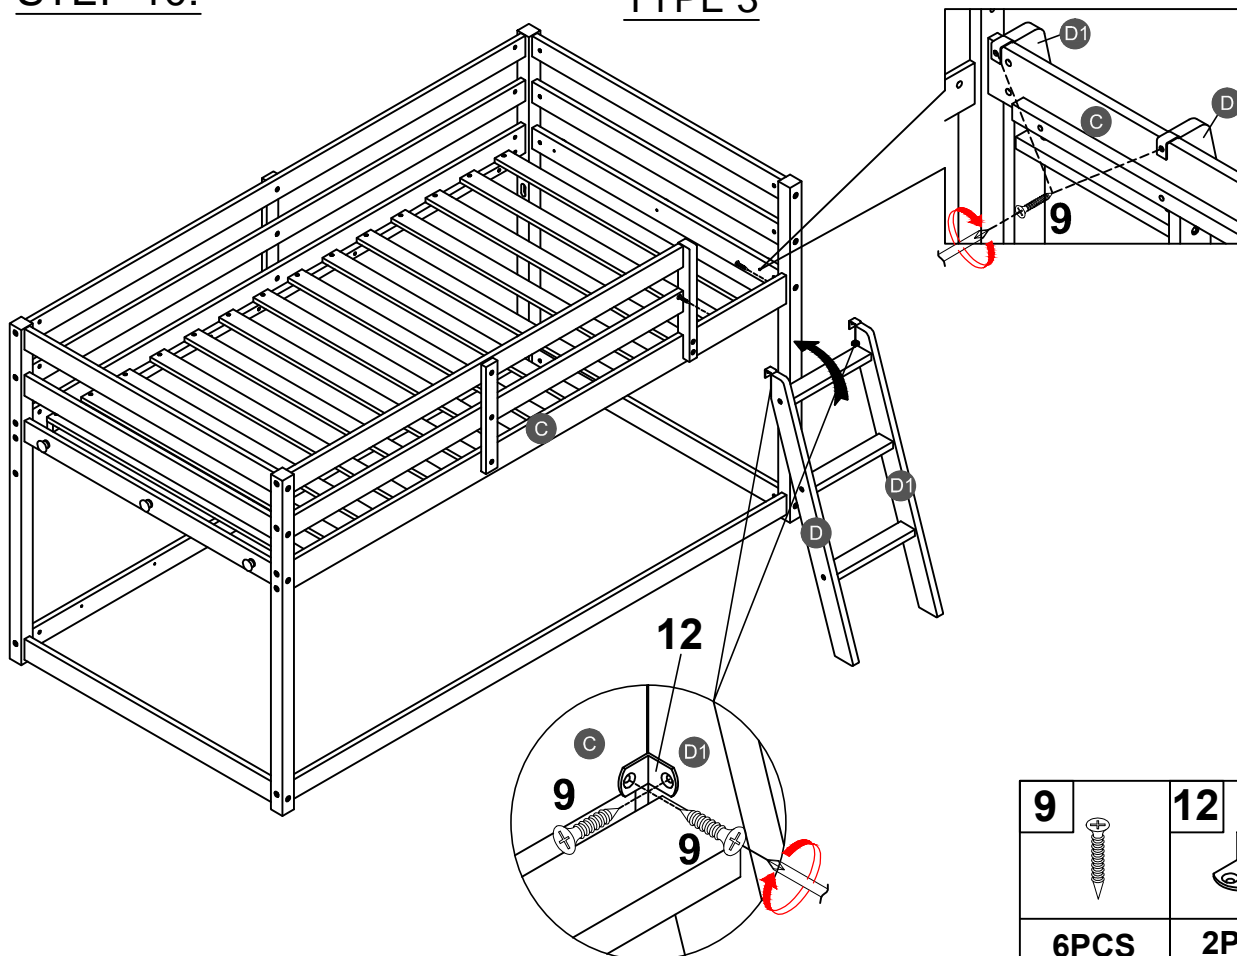

## STEP 11:

TYPE 3

