

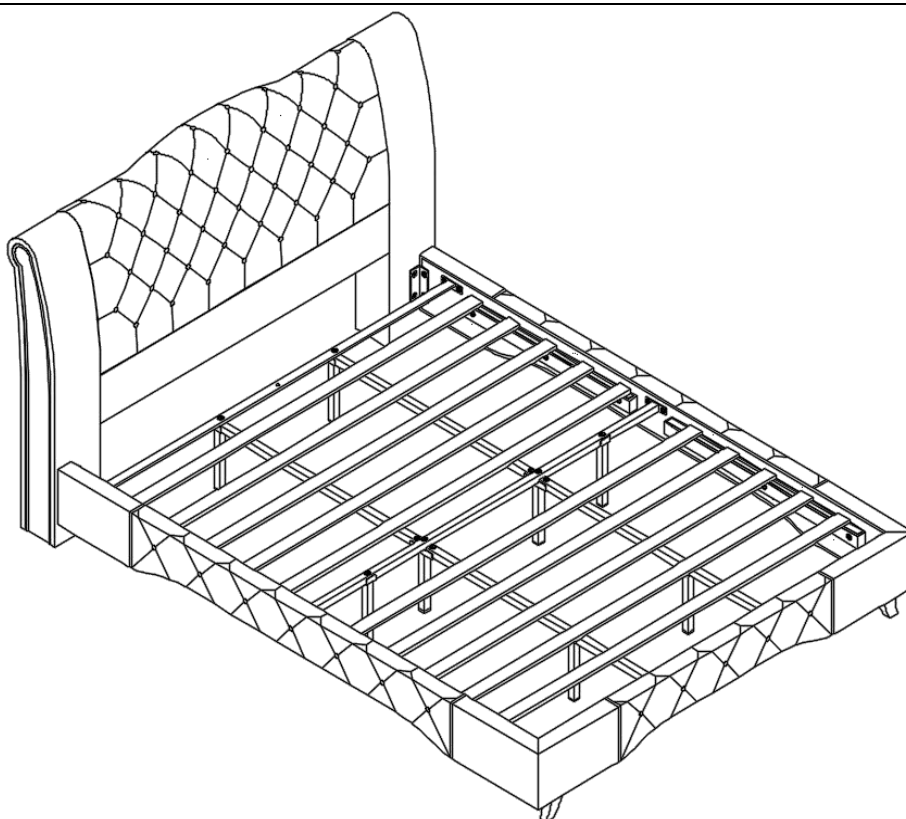
Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

- ⊘  Not for commercial use. For residential use only.
 - ✓  Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 - ⊘  Do not put hot items directly on furniture surface.
 - ⊘  Do not clean furniture with harsh cleansers or polish.
 - ⊘  Do not place furniture under direct sunlight.
 - ⊘  Do not place furniture near heating or cooling vents.
 - ⊘  Do not write on furniture without a padded barrier to protect the surface.
 - ⊘  Do not place furniture outside . For indoor use only.
 - ⊘  Stains may be removed with mild soap solution and damp cloth.
 - ⊘  Children should not climb or jump on the furniture.
-
- ✓  Dust and pick-up spills using a clean, non-colored, lint-free cloth.

BED








NOTE : This Bed is NOT a TOY.

Keep your child / children at bay during the assembly process.

The Daybed is **HEAVY**.










To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting the product.

Parts List			
Label	Picture	Description	QTY
A1		Front and back support foot	4
A2		Middle support foot	2
A3		Side support foot	2
A4		Angle iron	6
A5		Bedside connecting rod	1
A6		Middle connecting rod	1
A7		Center connecting rod	2
A8		Bed tail connecting rod	2
B1		Headboard	1
B2		Footboard	1
B3		Left side panel	1
B4		Right side panel	1
B5		Left wing panel	1
B6		Right wing panel	1
B7		The baffle under the head of the bed	1
B8		Slat	2
C1		feet	2
C2		Non-slip pads	4
Hardware			
Label	Picture	Description	QTY
①		Allen Wrench	1
②		Bolt(M8 x 50mm)	16
③		Bolt(M8 x 20mm)	36
④		Washer	52








Assembly Preparation

Before
Beginning
Assembly:

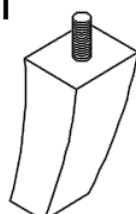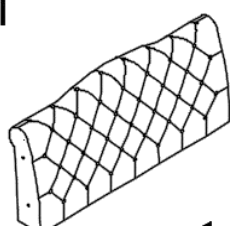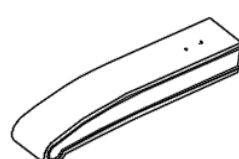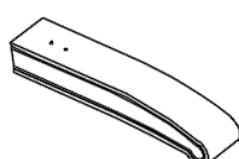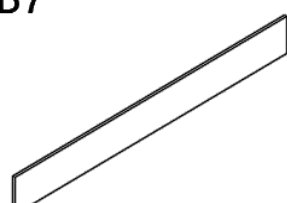N761P350924

A1  4pcs	A2  2pcs	A3  2pcs	A4  6pcs		
1  M8 1pcs	2  M8*50 16pcs	3  M8*20 36pcs	4  M8*19 52pcs	C1  2pcs	C2  4pcs
B1  1pcs	B5  1pcs	B6  1pcs	B7  1pcs		

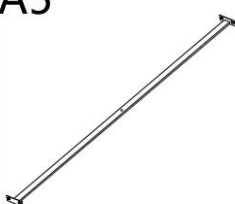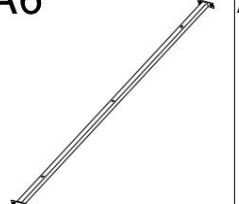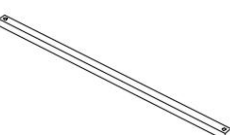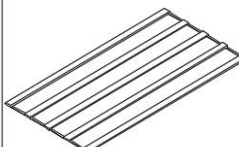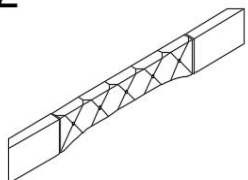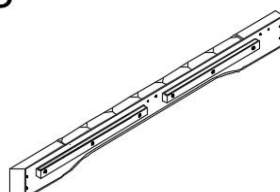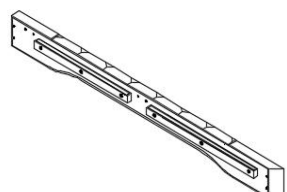N761P350929

A5  1pcs	A6  1pcs	A7  2pcs	A8  2pcs	B8  2pcs
B2  1pcs	B3  1pcs	B4  1pcs		



• Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



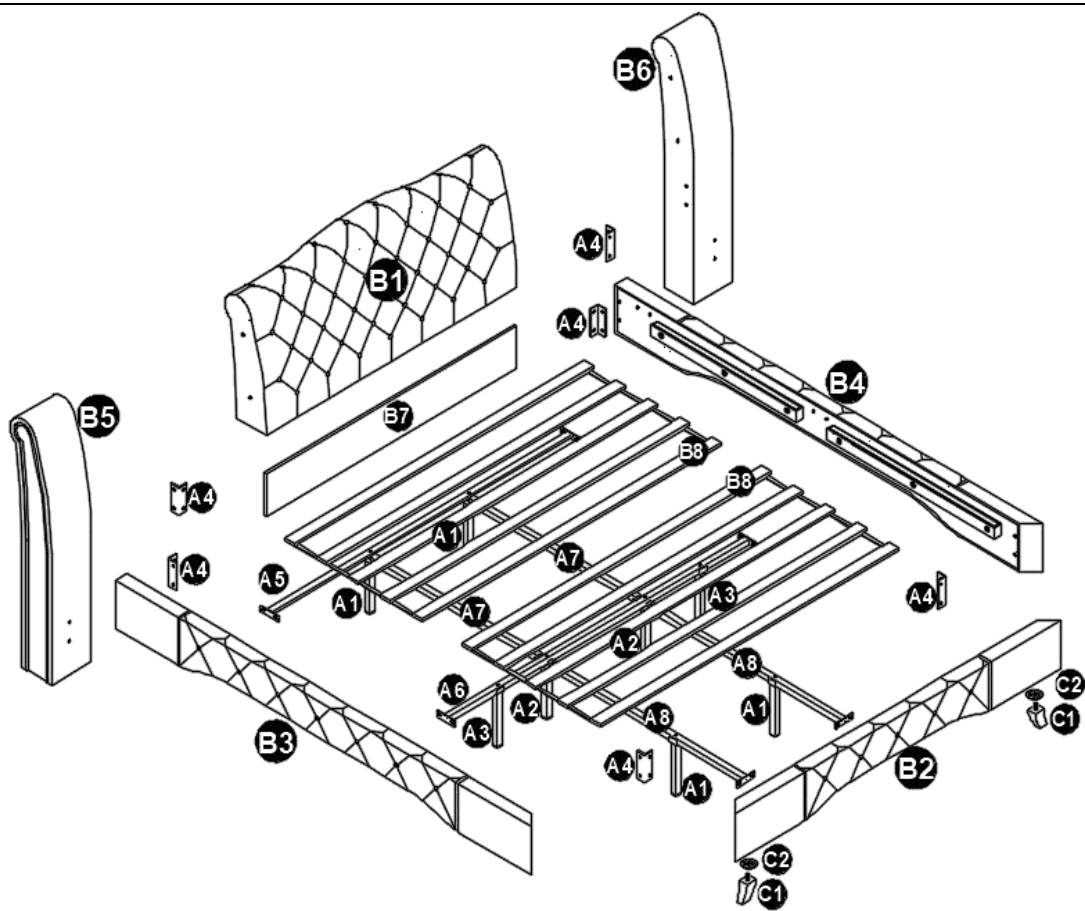
• Do not assemble on flooring or carpet-



• Assemble on a clean non-marring surface (packing foam)-




• Save all packaging until finished-



This Bed has multiple parts and may require up to 60 minutes to assemble.
To give you an overview of the Bed parts, the above picture is to help you put the various Bed parts into perspective.
Please read through the instructions below to familiarise yourself with the parts and steps before assembly.



Step 1

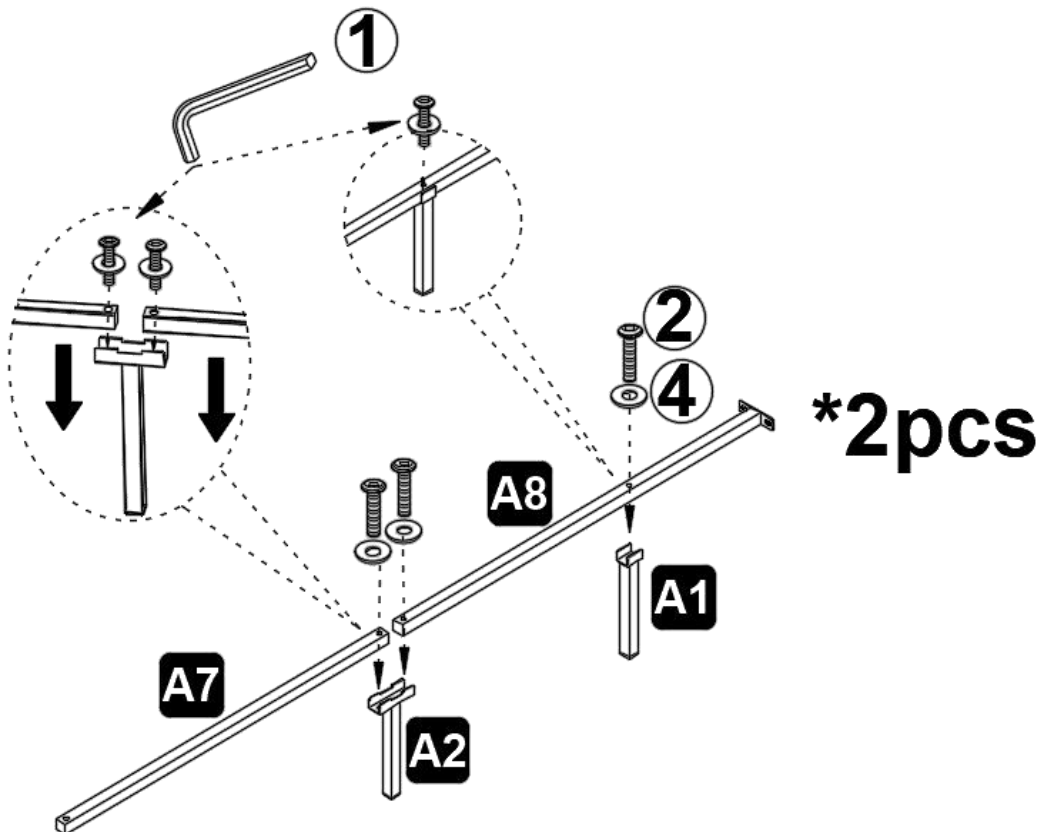- ①  X1
- ②  X6
- ④  X6





As shown in the figure, use the allen wrench (1), bolts (2), and washers (4) to fix the center connecting rod (A7) and bed tail connecting rod (A8) onto the middle support foot (A2) and front and back support foot (A1).

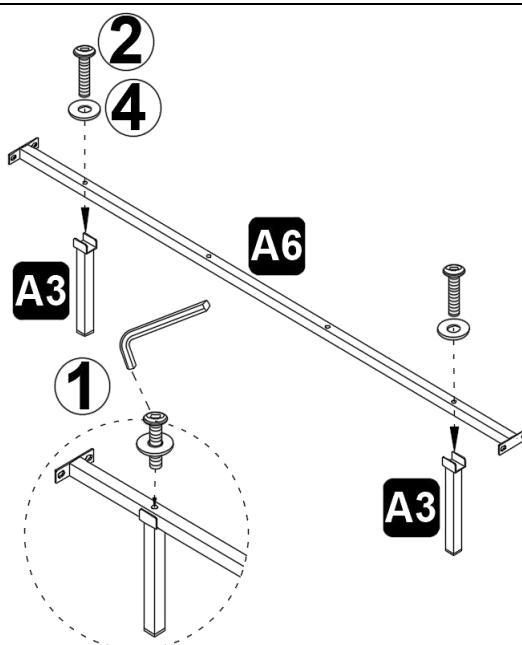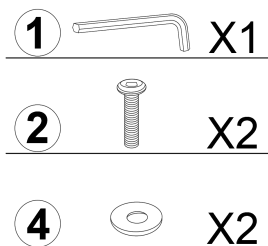Step 2




Use allen wrench (1), bolt (2) and washer (4) to fix the middle connecting rod (A6) on the side support foot (A3) as shown in the figure.

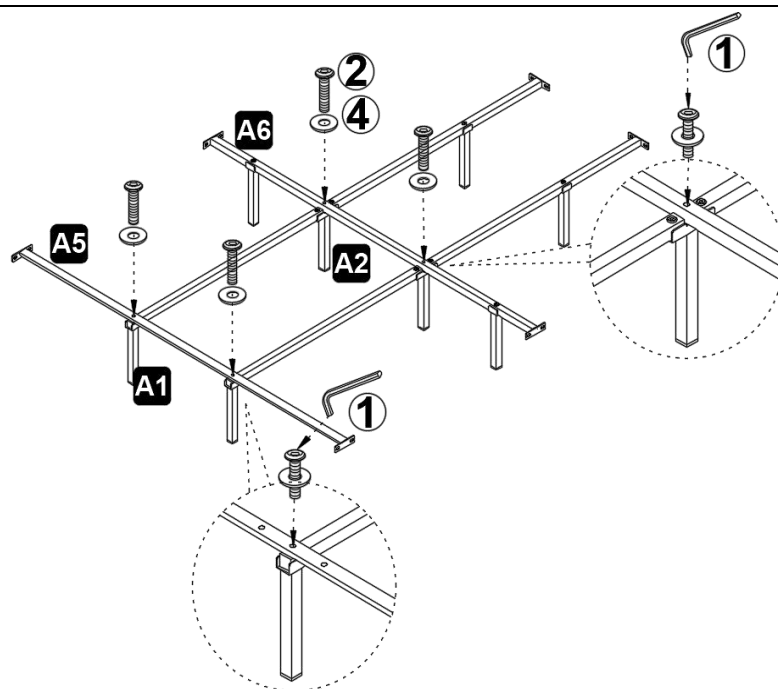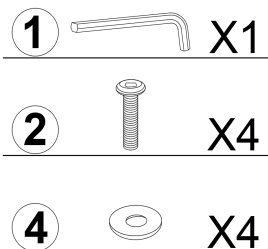Step 3



As shown in the figure, use an allen wrench (1), bolt (2), and washer (4) to fix the bedside connecting rod (A5) on the front and back support foot (A1), and fix the middle connecting rod (A6) on the middle support foot (A2).

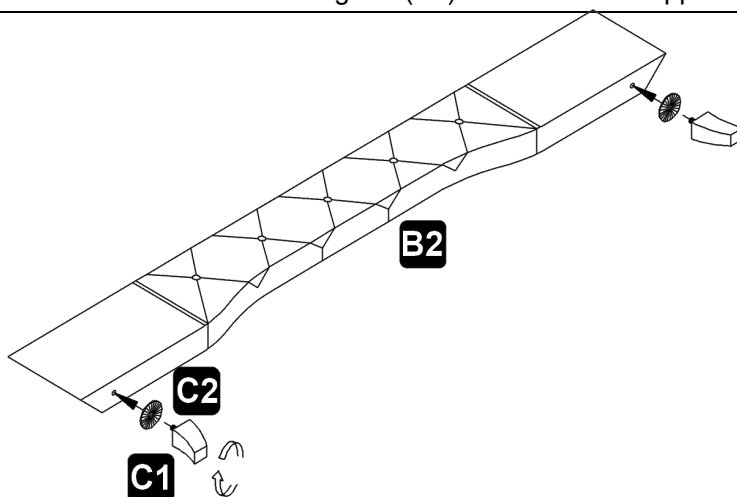
Step 4



The feet (C1) and non-slip pads (C2) are fixed clockwise at the corresponding positions at the end of the footboard (B2).

Step 5

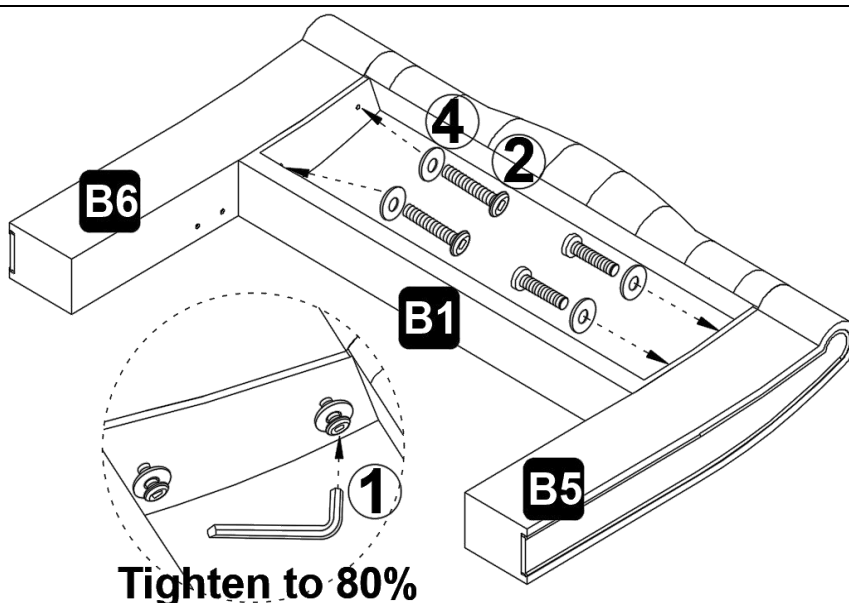
- ①  X1
- ②  X4
- ④  X4



Align the holes of headboard (B1) with the holes of left wing panel (B5) and right wing panel (B6), and then fix them with an allen wrench (1), bolt (2), and washer (4).

Step 6

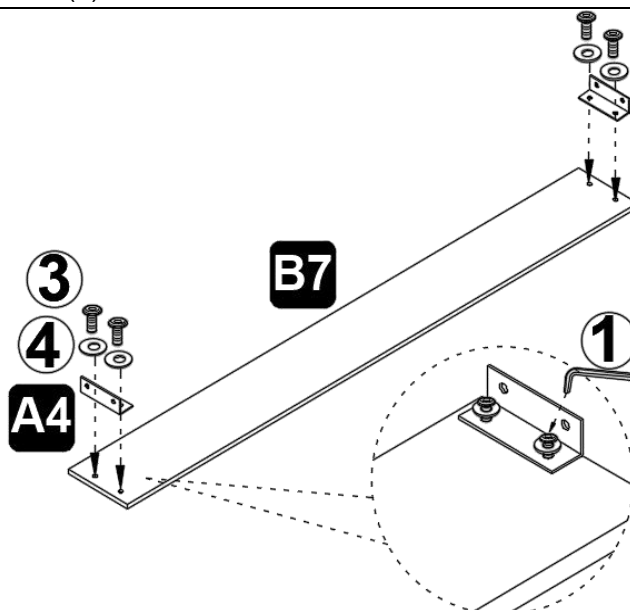
- ①  X1
- ③  X4
- ④  X4



Use allen wrench (1), bolt (3), and washer (4) to secure the angle iron (A4) to the baffle under the head of the bed (B7).

Step 7

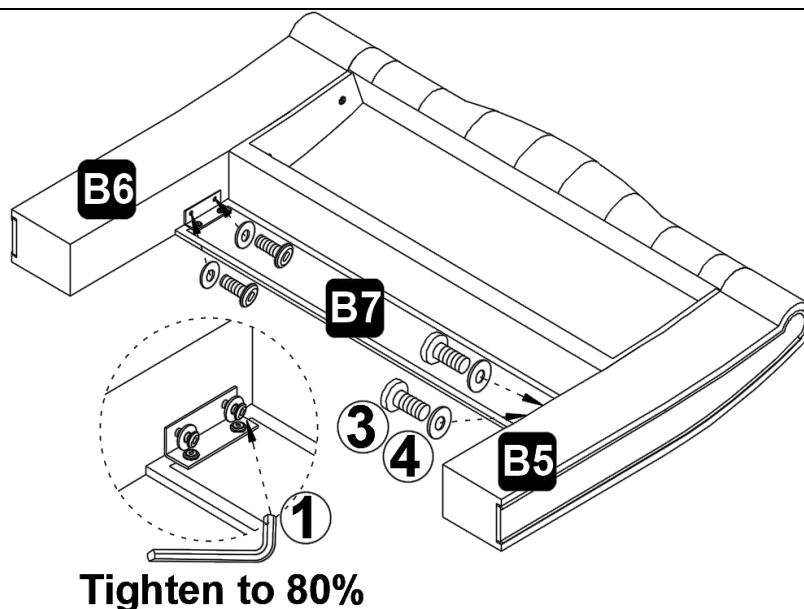
- ①  X1
- ③  X4
- ④  X4



Use allen wrench (1), bolts (3) and washers (4) to fix the baffle under the head of the bed (B7) on the headboard, and then fix the left wing panel (B5) and the right wing panel (B6).

Step 8


- | | | |
|---|---|----|
| 1 |  | X1 |
| 3 |  | X4 |
| 4 |  | X4 |

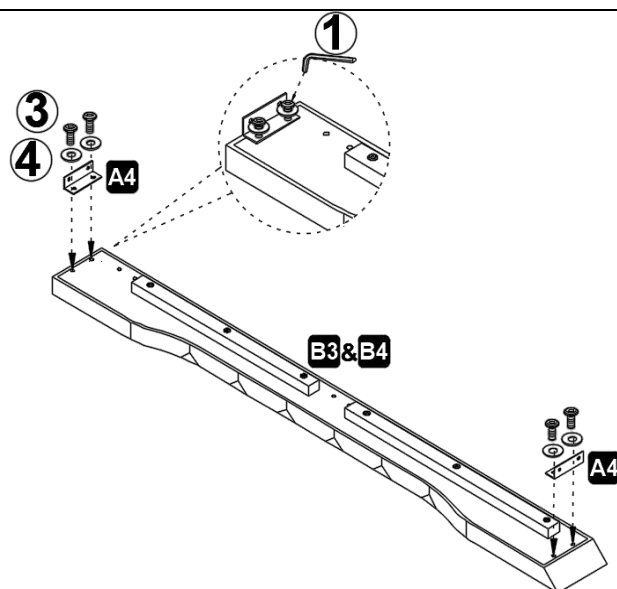

Use allen wrench (1), bolt (3), and washer (4) to secure the angle iron (A4) onto the left side panel (B3) and right side panel (B4).

Step 9


- | | | |
|---|---|----|
| 1 |  | X1 |
| 3 |  | X4 |
| 4 |  | X4 |

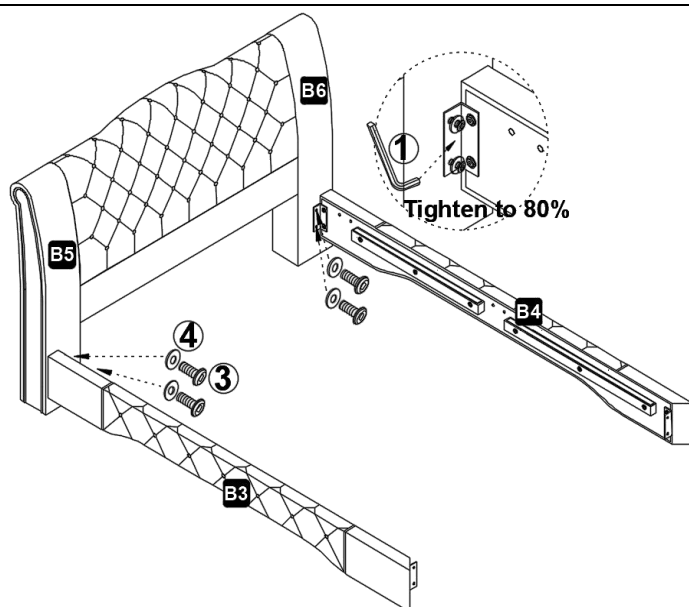

Use allen wrench (1), bolt (3), and washer (4) to secure the left wing panel (B5) and right wing panel (B6) onto the left side panel (B3) and right side panel (B4).

Step 10


- | | | |
|---|---|----|
| 1 |  | X1 |
| 3 |  | X4 |
| 4 |  | X4 |

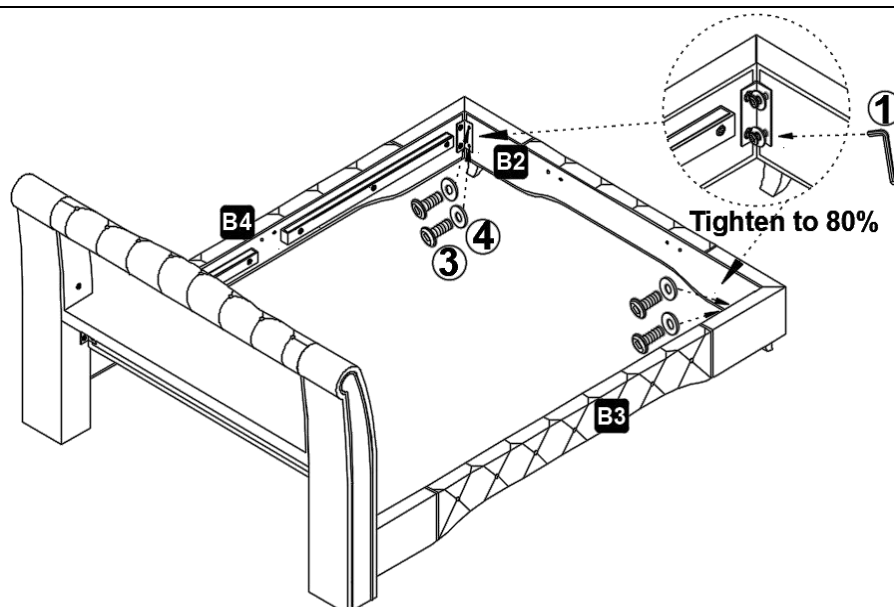

Use allen wrench (1), bolt (3), and washer (4) to secure the left side panel (B3) and right side panel (B4) onto the footboard (B2).


Step 11

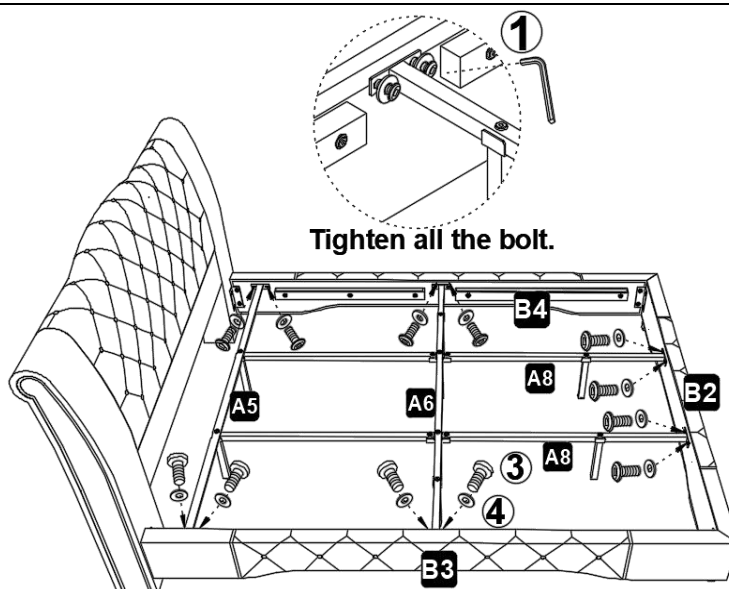- ①  X1
- ③  X12
- ④  X12




Use allen wrench (1), bolts (3), and washers (4) to fix the left and right ends of the bedside connecting rod (A5) and middle connecting rod (A6) to the left side panel (B3) and right side panel (B4), respectively, and fix the bed tail connecting rod (A8) to the footboard (B2).

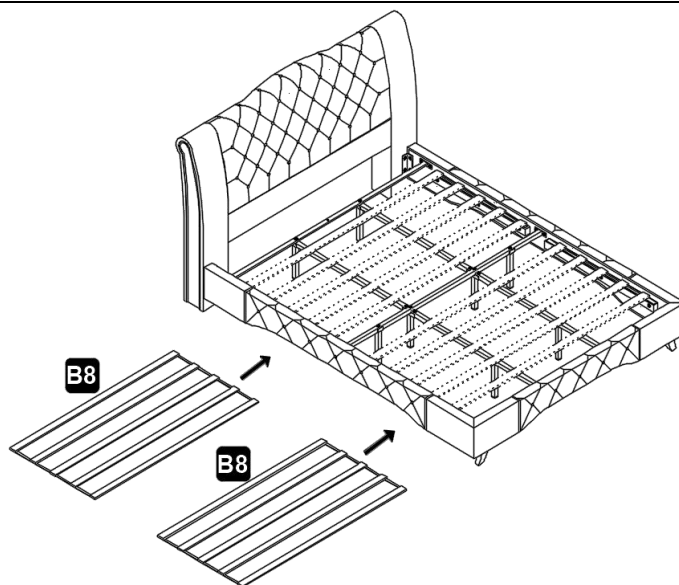Step 12



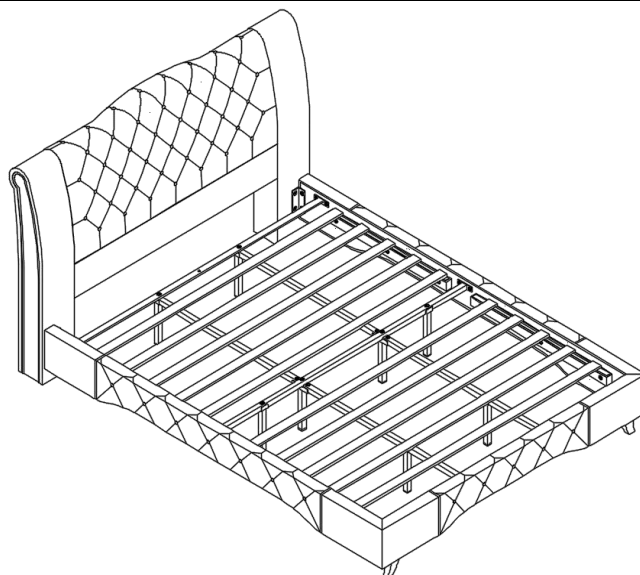Place slat (B8) on the assembled bed frame and paste the magic strip into place.



Your bed is ready for use.

Note: After assembly and before using the bed, inspect to make sure all parts are properly connected and securely fastened.