


TV Stand

Assembly Instructions - Please keep for future reference

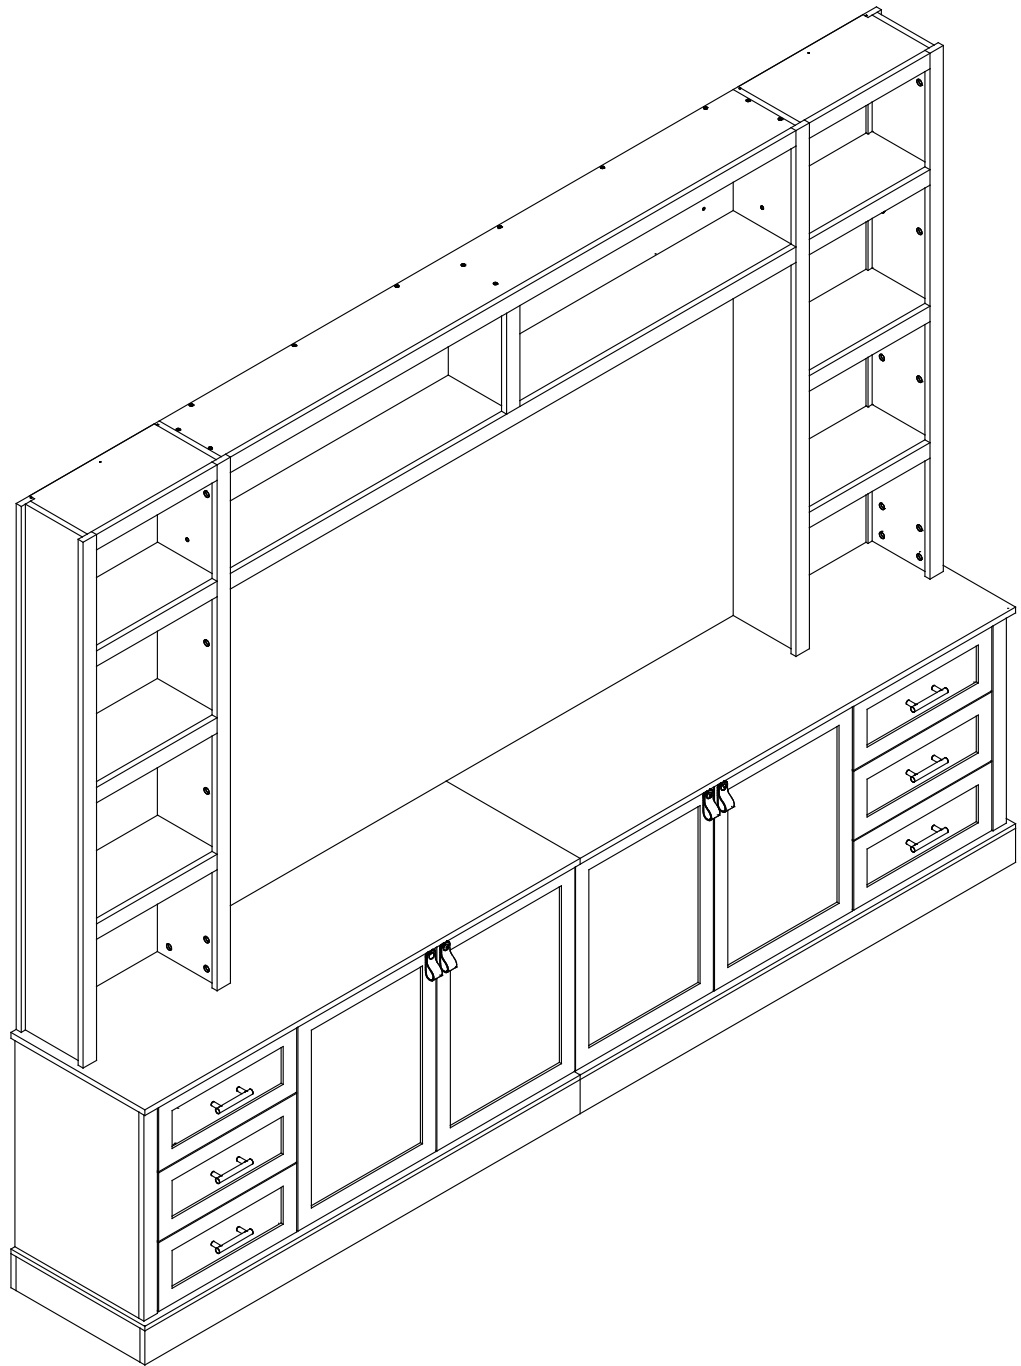

Dimensions

Width- 102.36inch

Depth-15.75inch

Height-79.6inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions










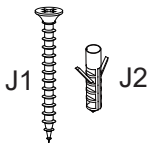

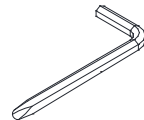



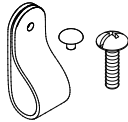


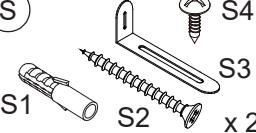
To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

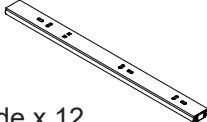A  Cam Bolt x 170+2	B  6*30mm Dowel x 144+2	C  Cam lock x 170+2	D  Slide x 12
E  3*12mm Screw x 48+2	F  6*25mm Screw x 8set	G  4*40mm Screw x 42+2	H  3.5*14mm Hinge x 8set
I  4*10mm Handle x 6set	J  x4	K  Perfect fit x 100	L  Allen key x 1
M  x 2set	N  4*30mm Screw x 36+2	O  Shelf support pin x 8	P  4*18mm Handle x 4set
Q  x 4set	R  x 16set	S  x 2set	

Tools required Not Included



Phillips screwdriver
(medium & large)

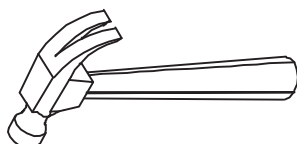


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

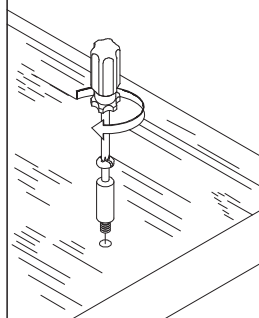

Step 2

Push the male camlock into the entry hole.

2

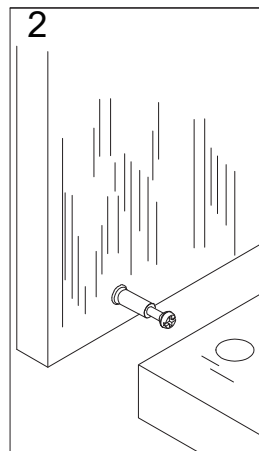


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

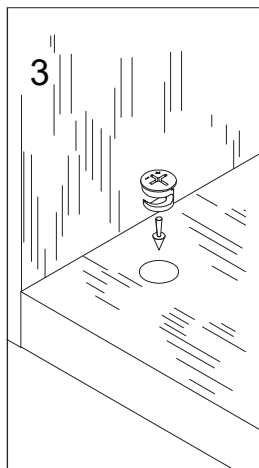


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

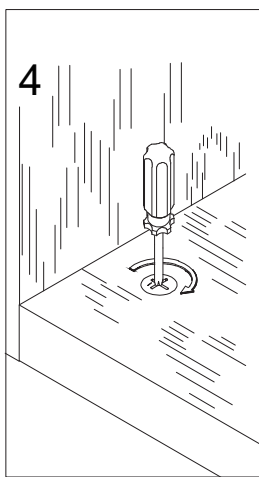





















Assembly Instructions

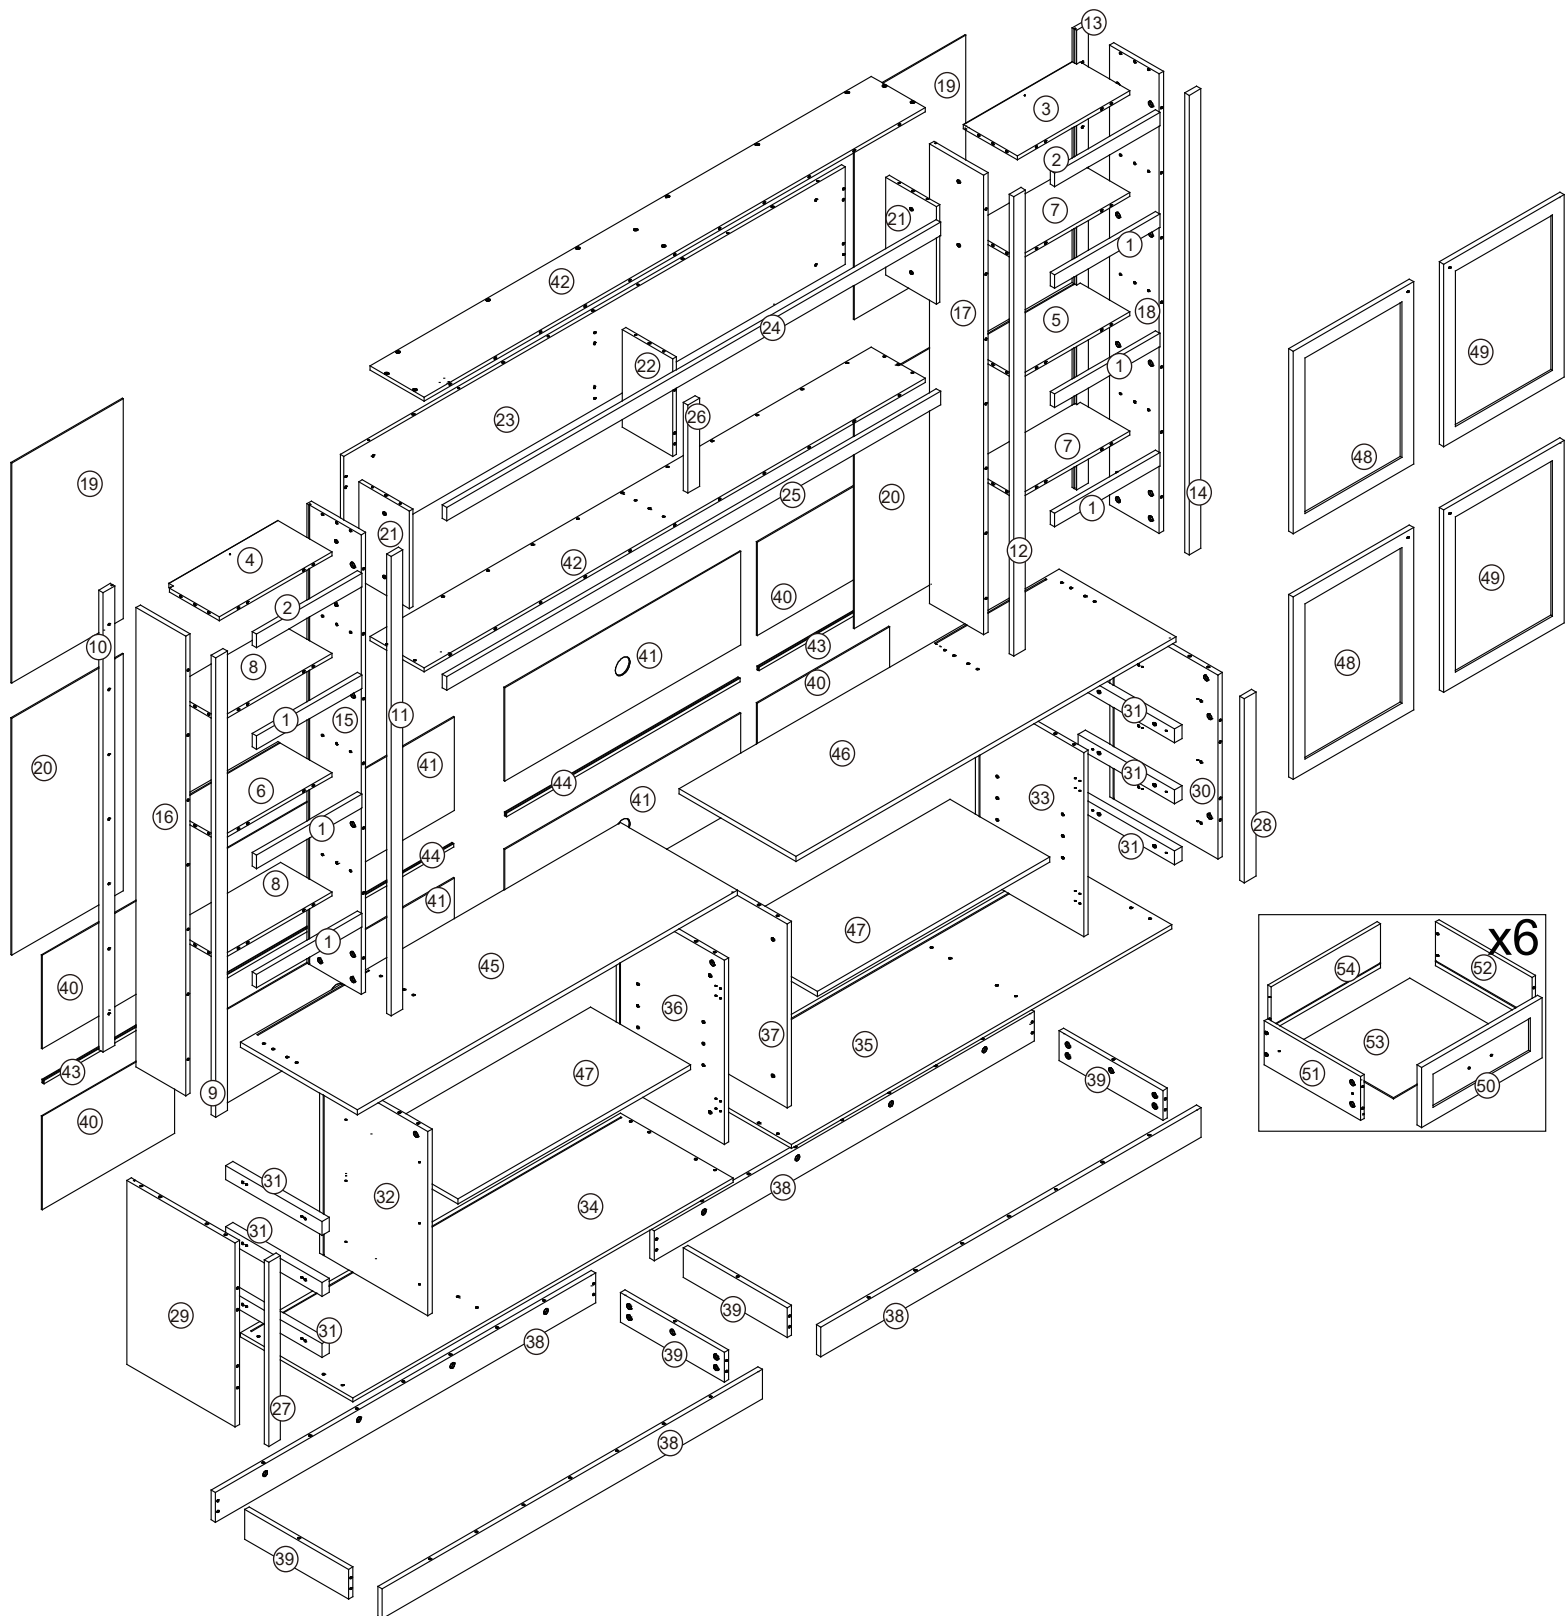






PART LIST




This product comes in 2 box.

N721P324107

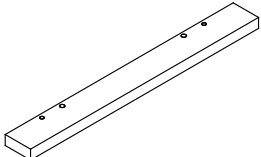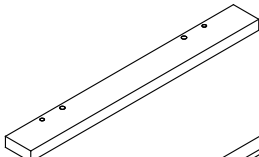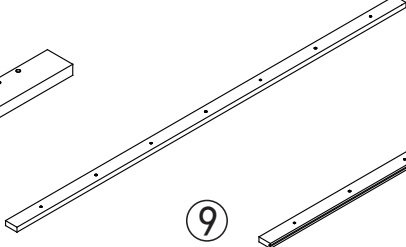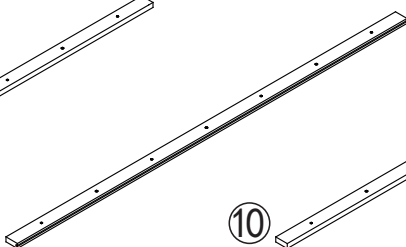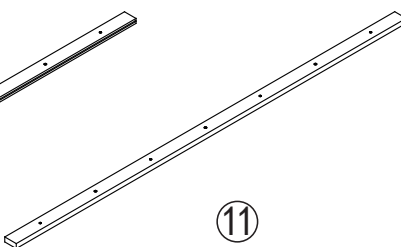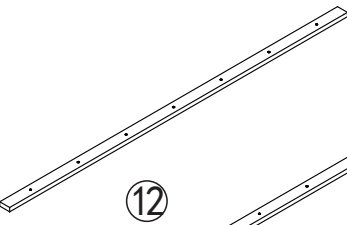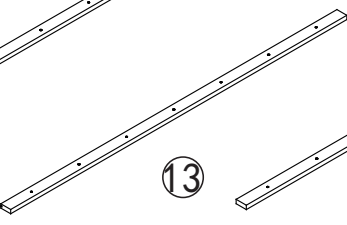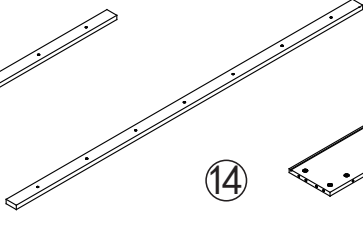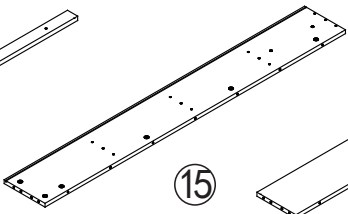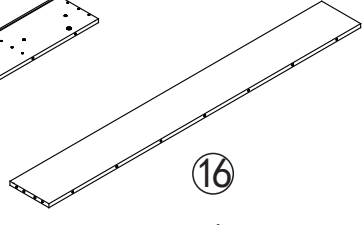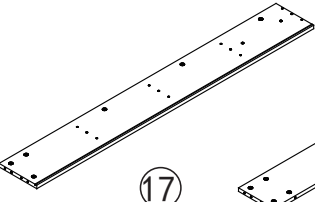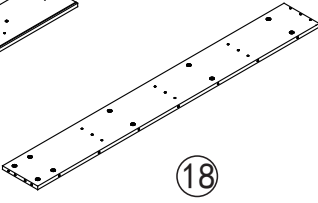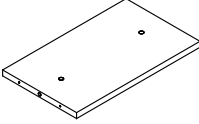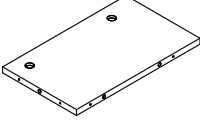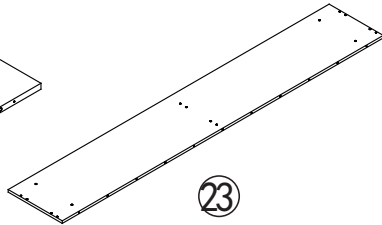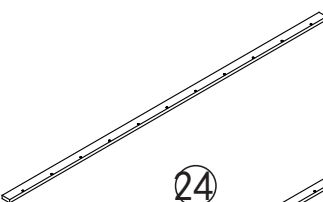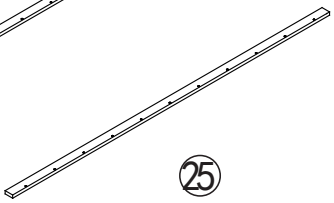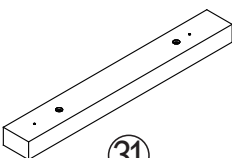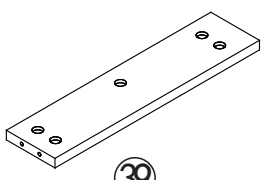				
① x6 360x40x15mm	② x2 360x40x15mm	⑨ x1 1360x40x15mm	⑩ x1 1360x40x15mm	⑪ x1 1360x40x15mm
				
⑫ x1 1360x40x15mm	⑬ x1 1360x40x15mm	⑭ x1 1360x40x15mm	⑮ x1 1360x185x15mm	⑯ x1 1360x170x15mm
				
⑰ x1 1360x185x15mm	⑱ x1 1360x170x15mm	⑳ x2 289x173x12mm	㉑ x1 289x173x12mm	㉒ x1 1714x289x12mm
				
㉔ x1 1689x40x15mm	㉕ x1 1689x40x15mm	㉖ x1 261x40x15mm	㉗ x6 330x41x25mm	㉘ x4 370x88x15mm






PART LIST

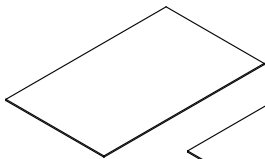
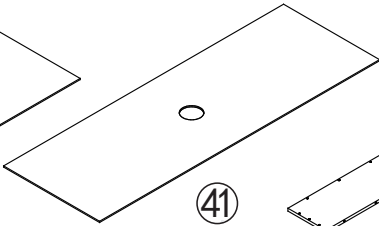
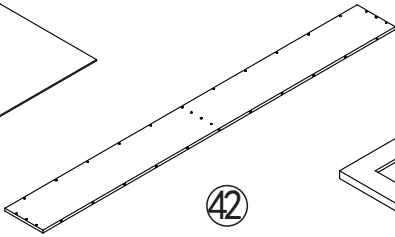
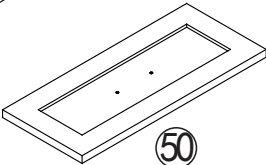
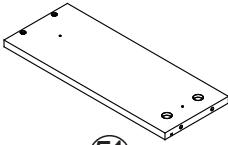
				
④①	④①	④②	⑤①	⑤①
x4	x4	x2	x6	x6
452x276.5x3mm	807x276.5x3mm	1714x185x12mm	412x178x15mm	330x130x12mm

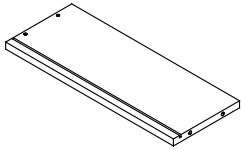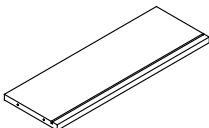		
⑤②	⑤④	
x6	x6	Hardware kit x1
330x130x12mm	374x130x12mm	


This product comes in 2 box.

N721P324108

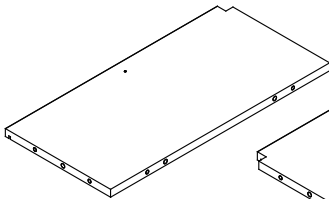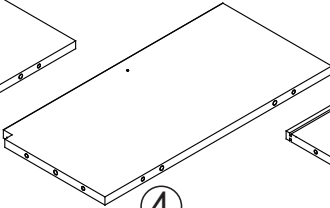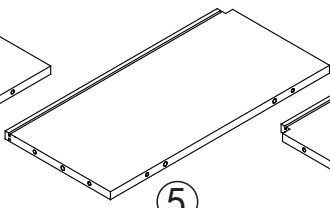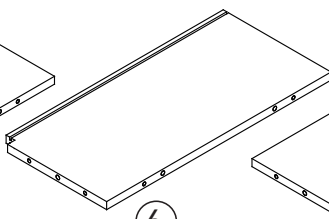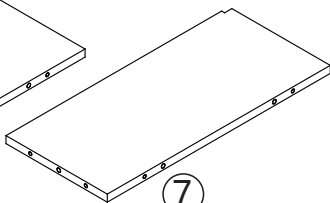				
③	④	⑤	⑥	⑦
x1	x1	x1	x1	x2
385x185x12mm	385x185x12mm	385x185x12mm	385x185x12mm	385x175x12mm

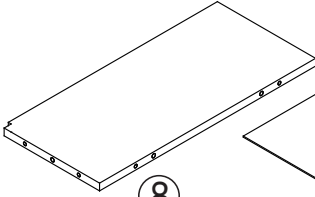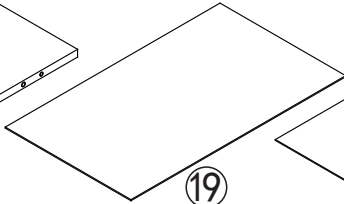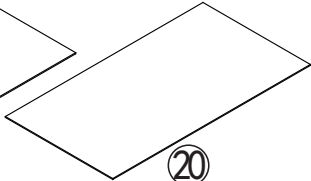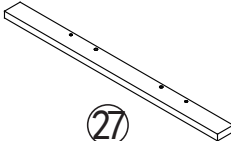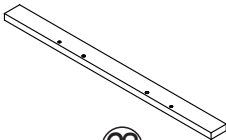				
⑧	①⑨	②①	②⑦	②⑧
x2	x2	x2	x1	x1
385x175x12mm	651x381x3mm	701x381x3mm	545x40x15mm	545x40x15mm


PART LIST

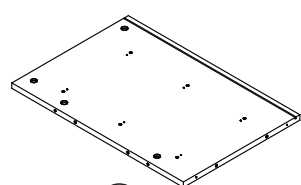

②⑨

x1


545x370x15mm

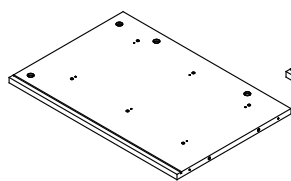

③⑩

x1


545x370x15mm

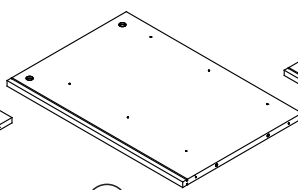

③②

x1


545x370x15mm

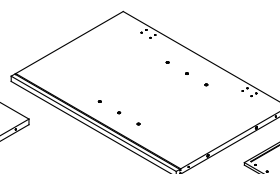

③③

x1


545x370x15mm

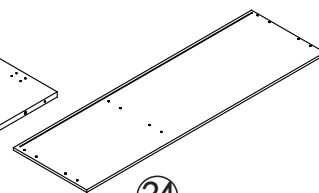

③④

x1


1300x400x12mm

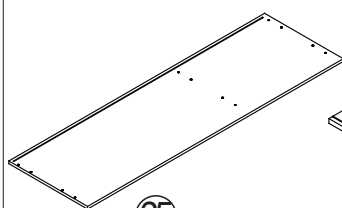

③⑤

x1


1300x400x12mm

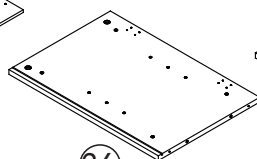

③⑥

x1


545x370x15mm

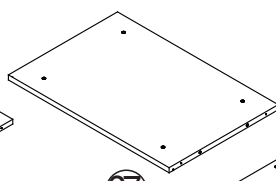

③⑦

x1

545x370x15mm

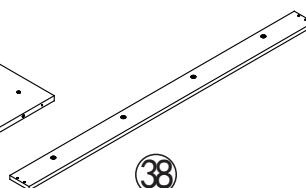

③⑧

x4


1300x88x15mm



④③

x2


440mm

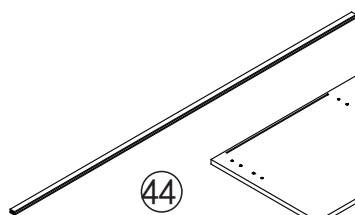

④④

x2


795mm

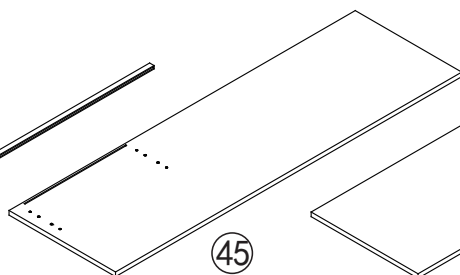

④⑤

x1


1300x400x15mm

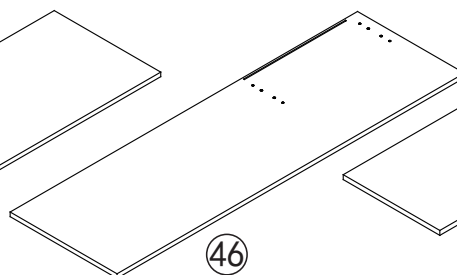

④⑥

x1


1300x400x15mm

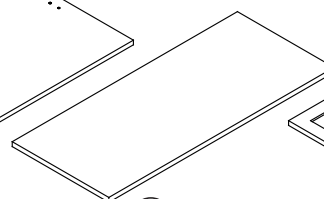

④⑦

x2


795x341x15mm

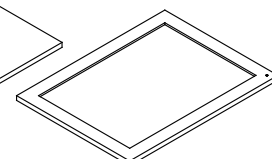

④⑧

x2


540x412x15mm

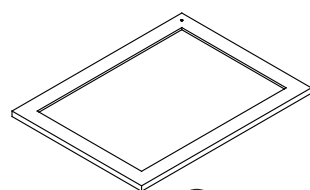

④⑨

x2

540x412x15mm

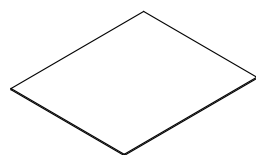




⑤③

x6





382x326x3mm

Assembly Instructions

Step 1



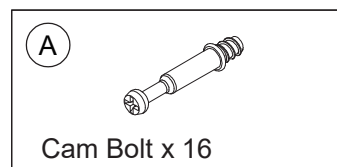
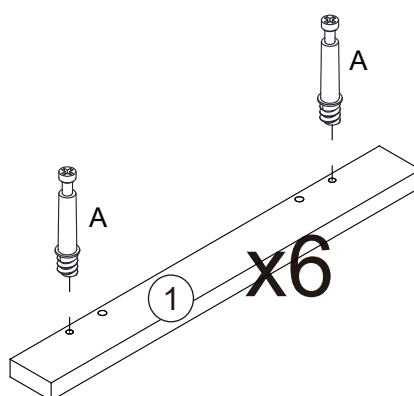
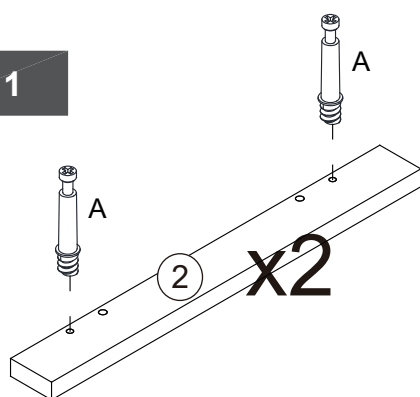


Step 2

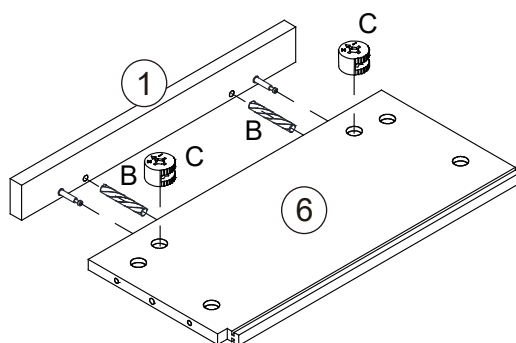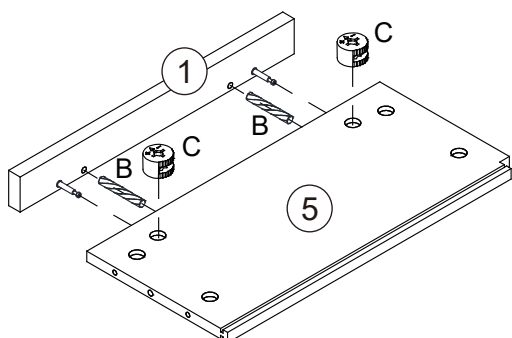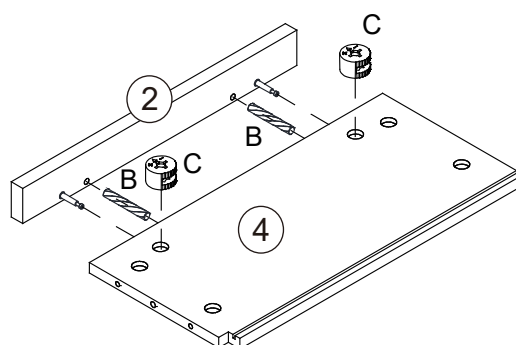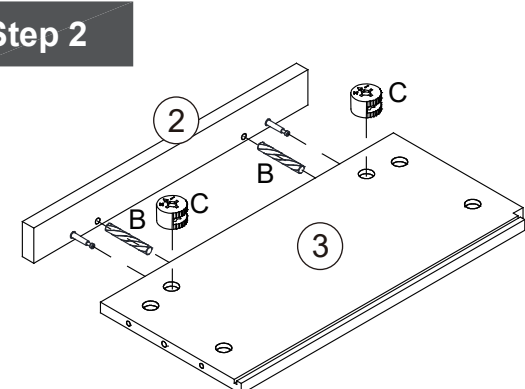


step2

step3

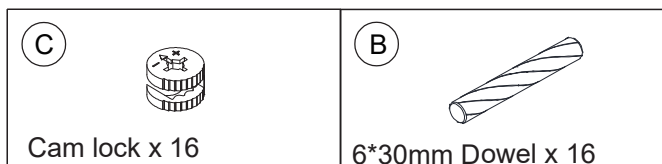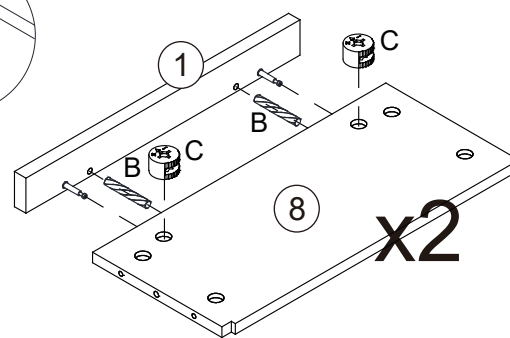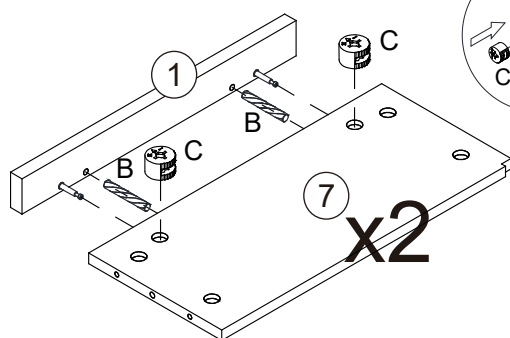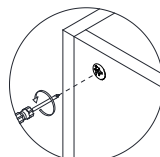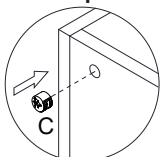


Assembly Instructions

Step 3

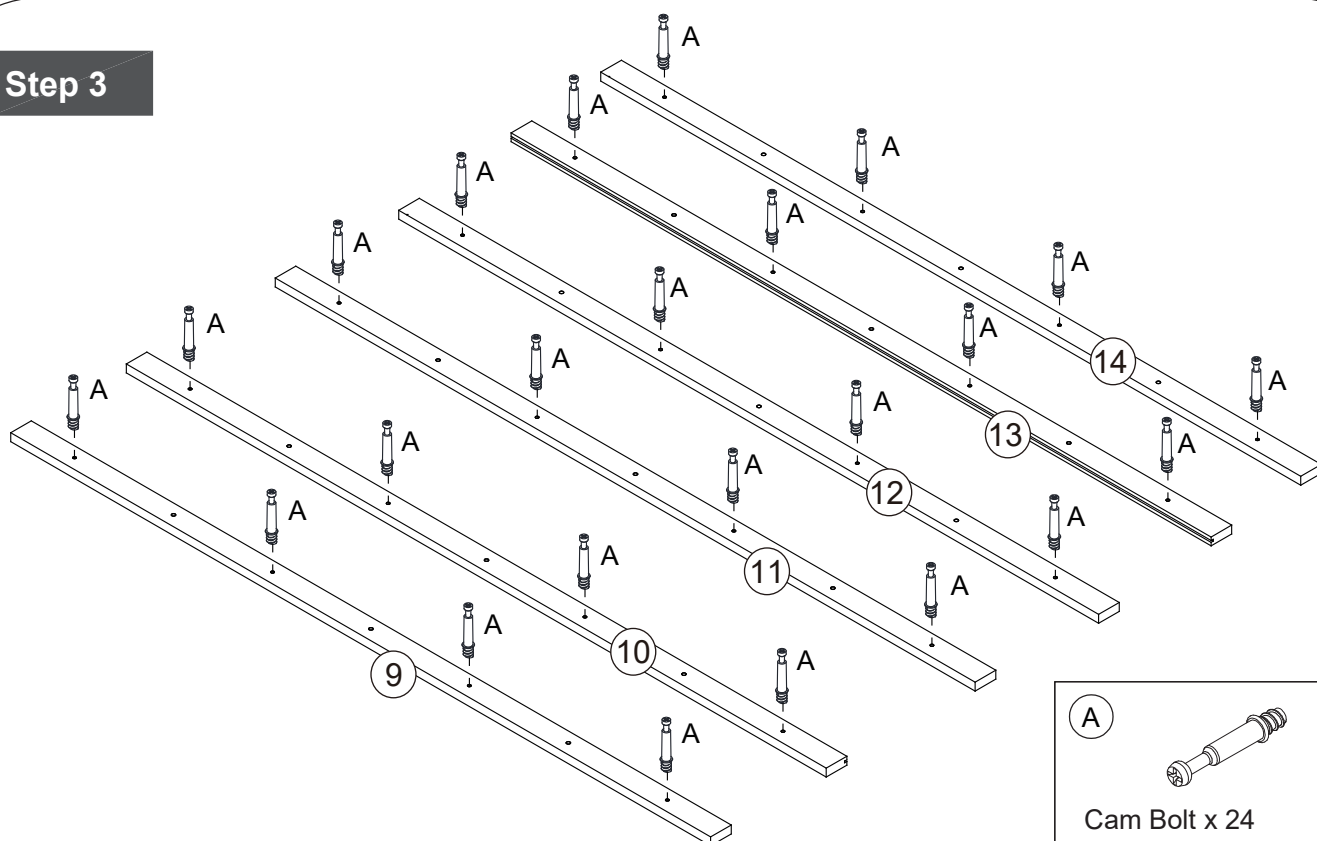


Step 4

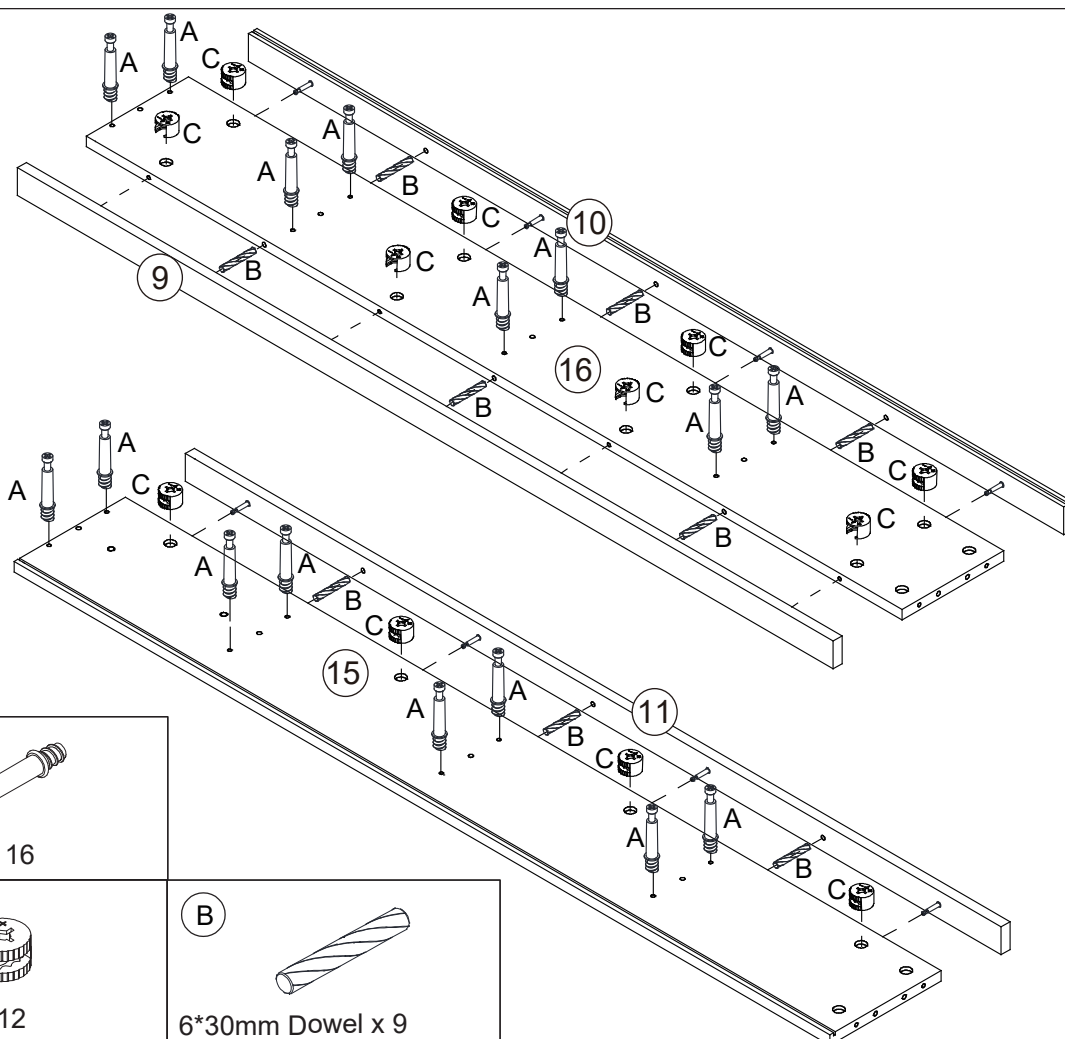


Assembly Instructions


Step 5

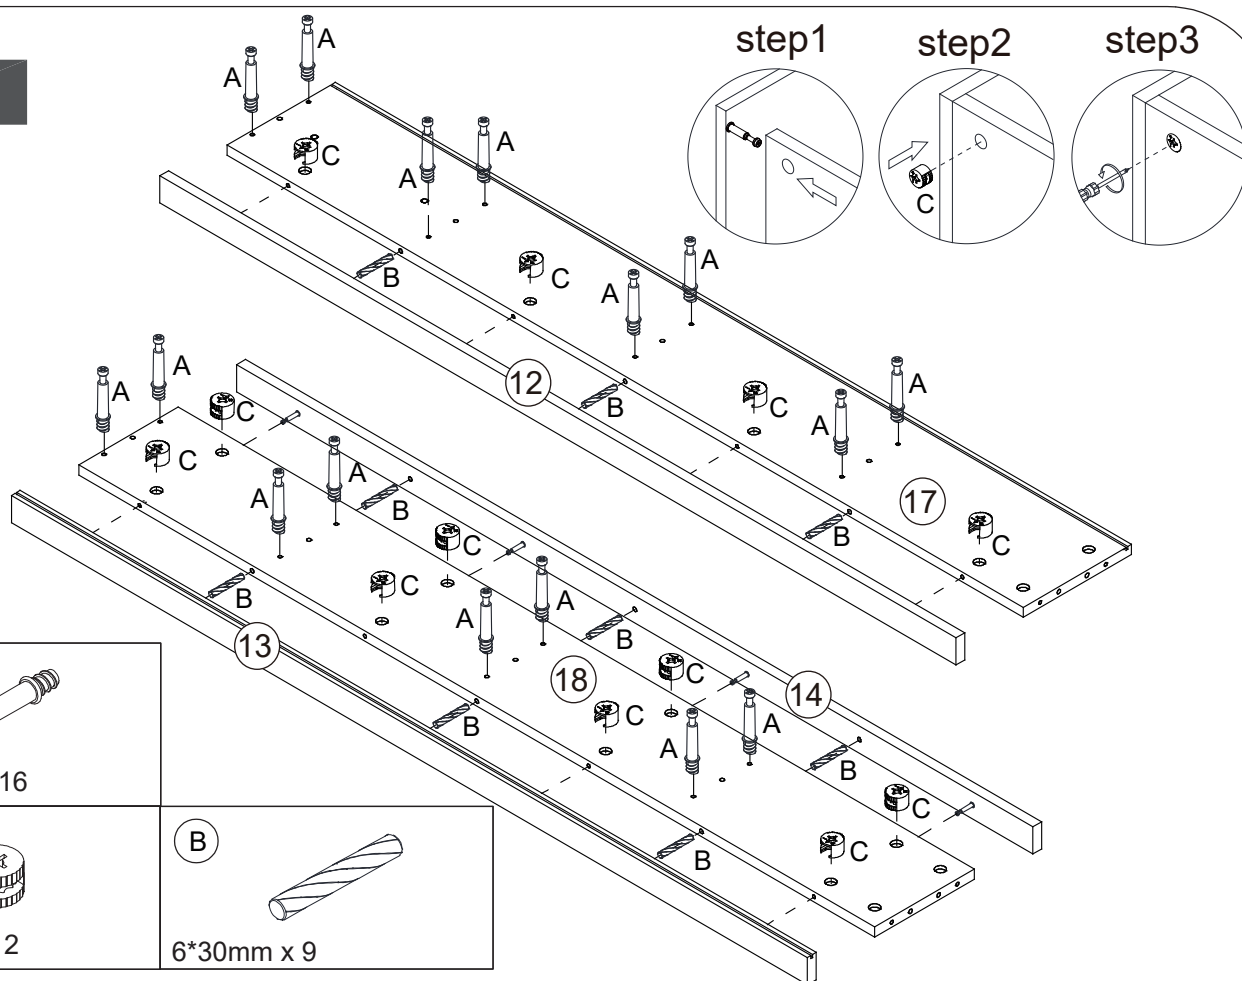


A



Cam Bolt x 16


C  Cam lock x 12


B




6*30mm x 9

Step 6

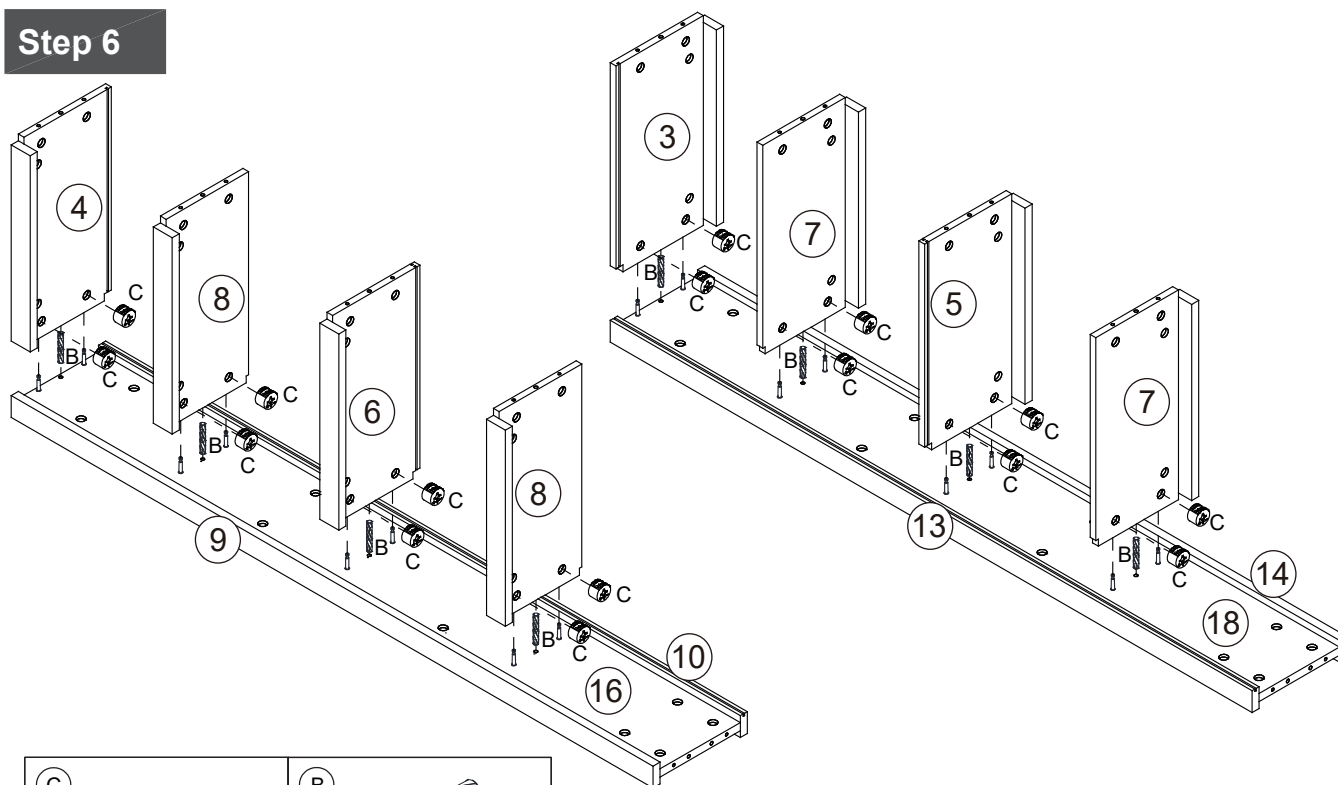

(C)  Cam lock x 16


B





6*30mm x 8

Assembly Instructions


Step 7

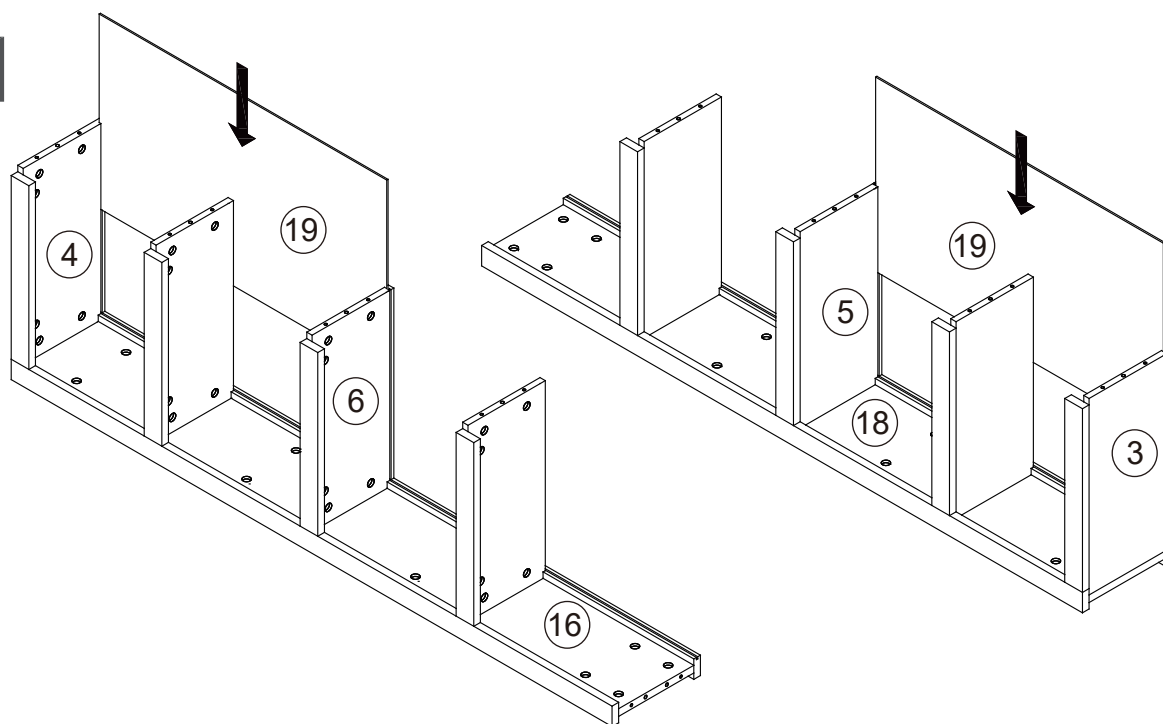


Step 8

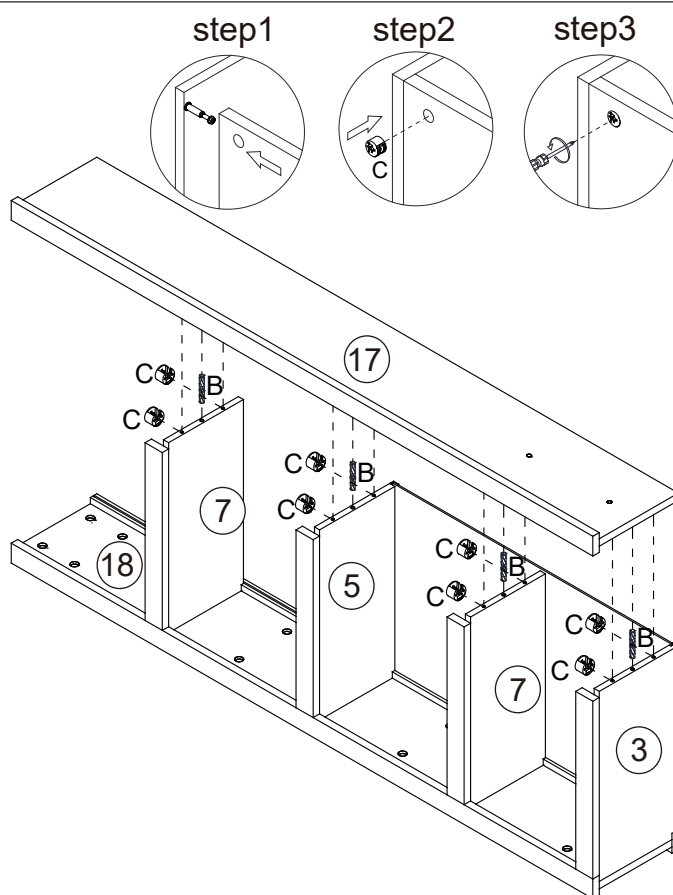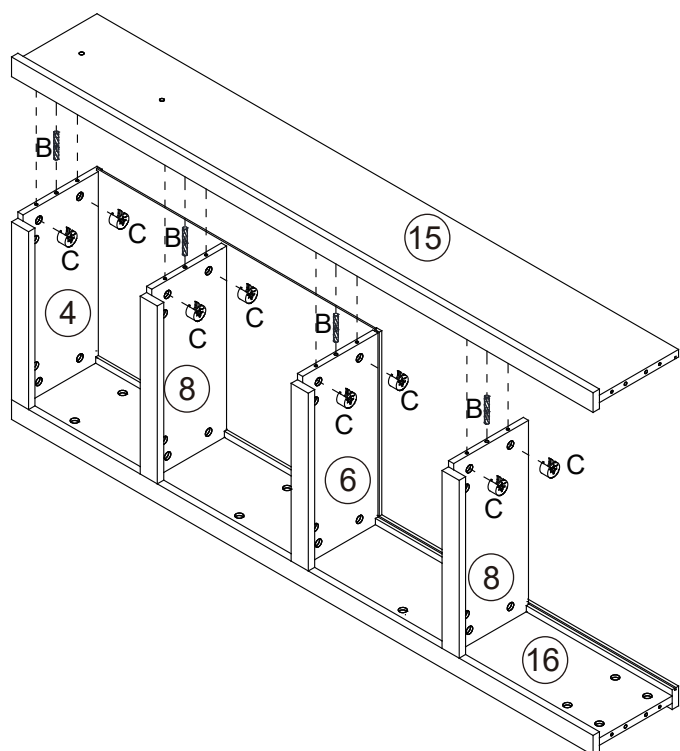


step1

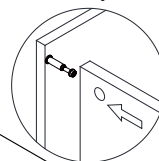


step2

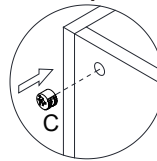

step3

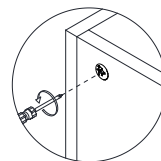

(B)



6*30mm Dowel x 8


(C)




Cam lock x 16

Assembly Instructions

Step 9

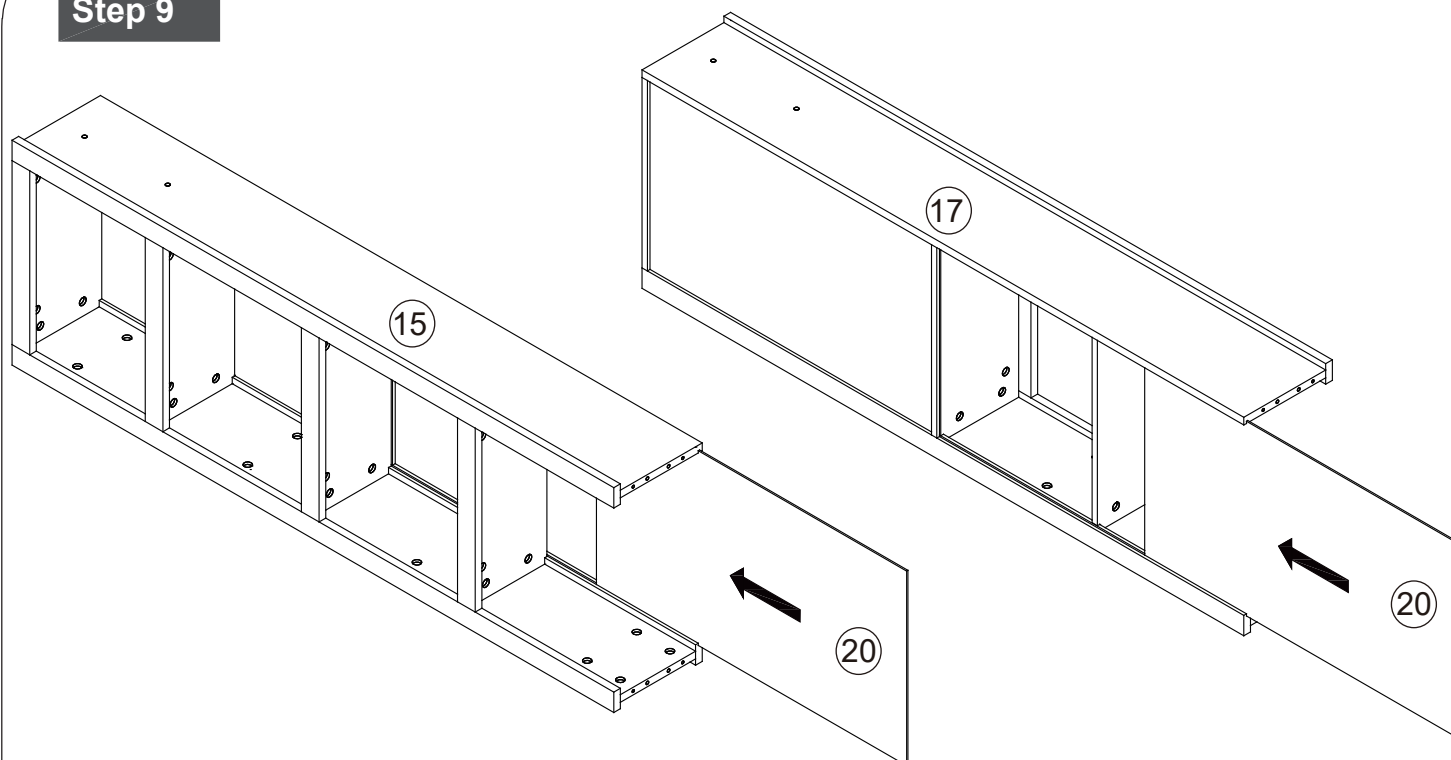


Step 10

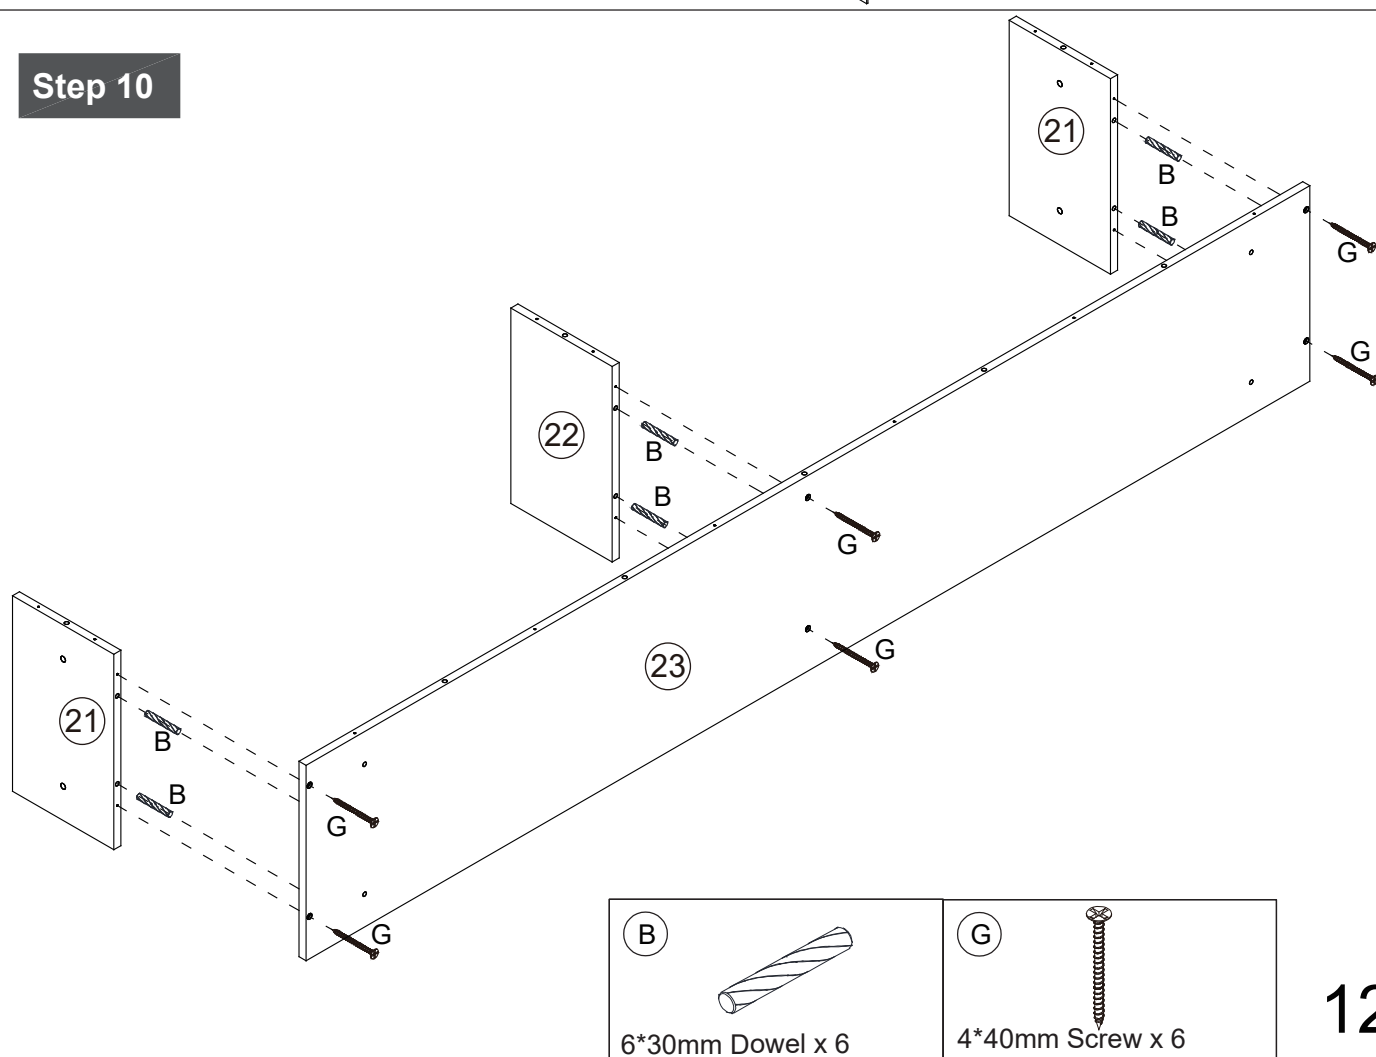


Assembly Instructions

Step 11

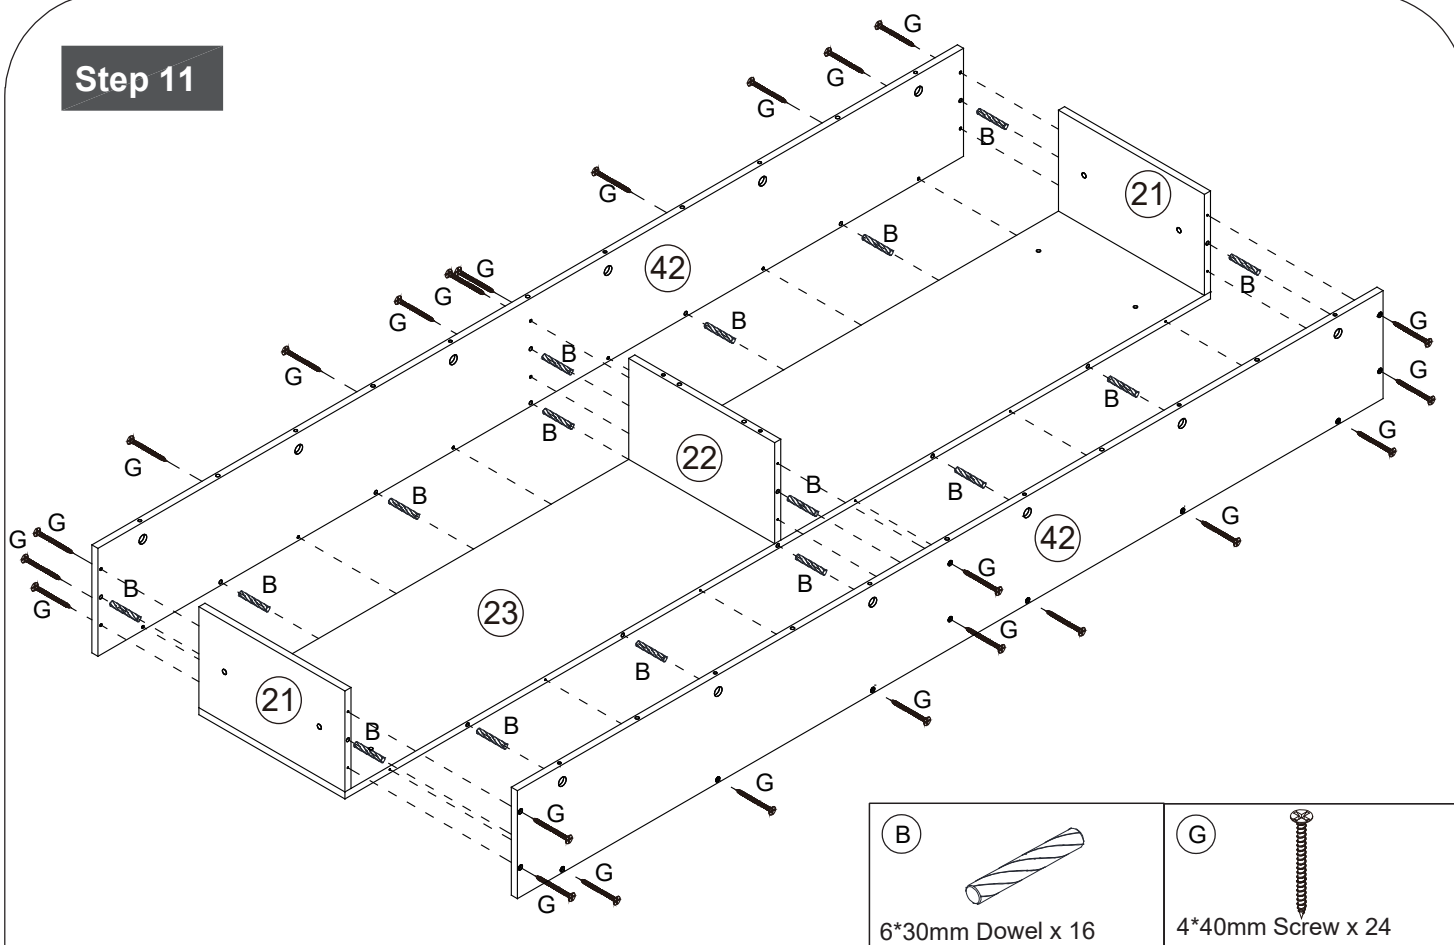


Step 12

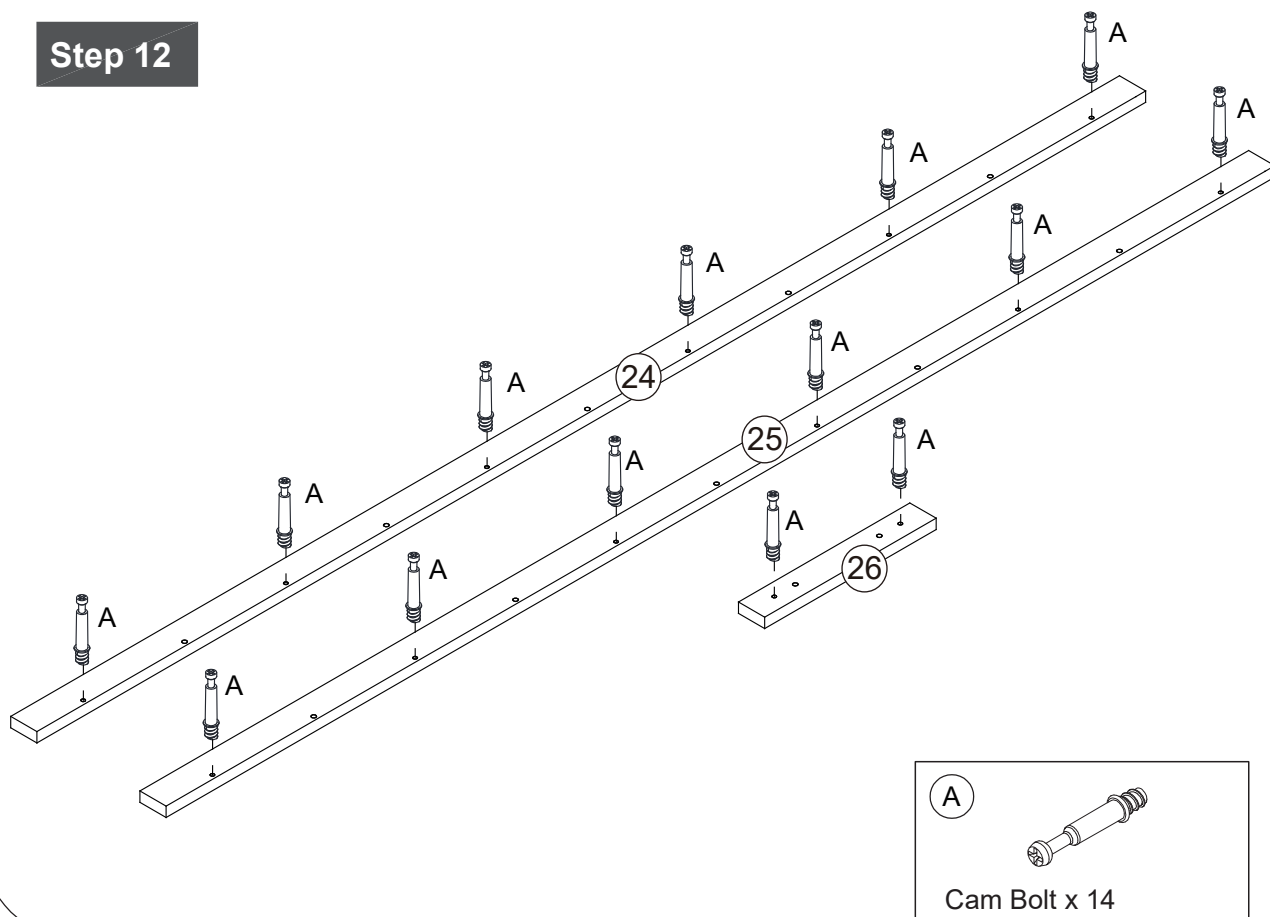


Assembly Instructions

Step 13



step1

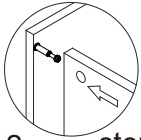

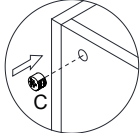

step2

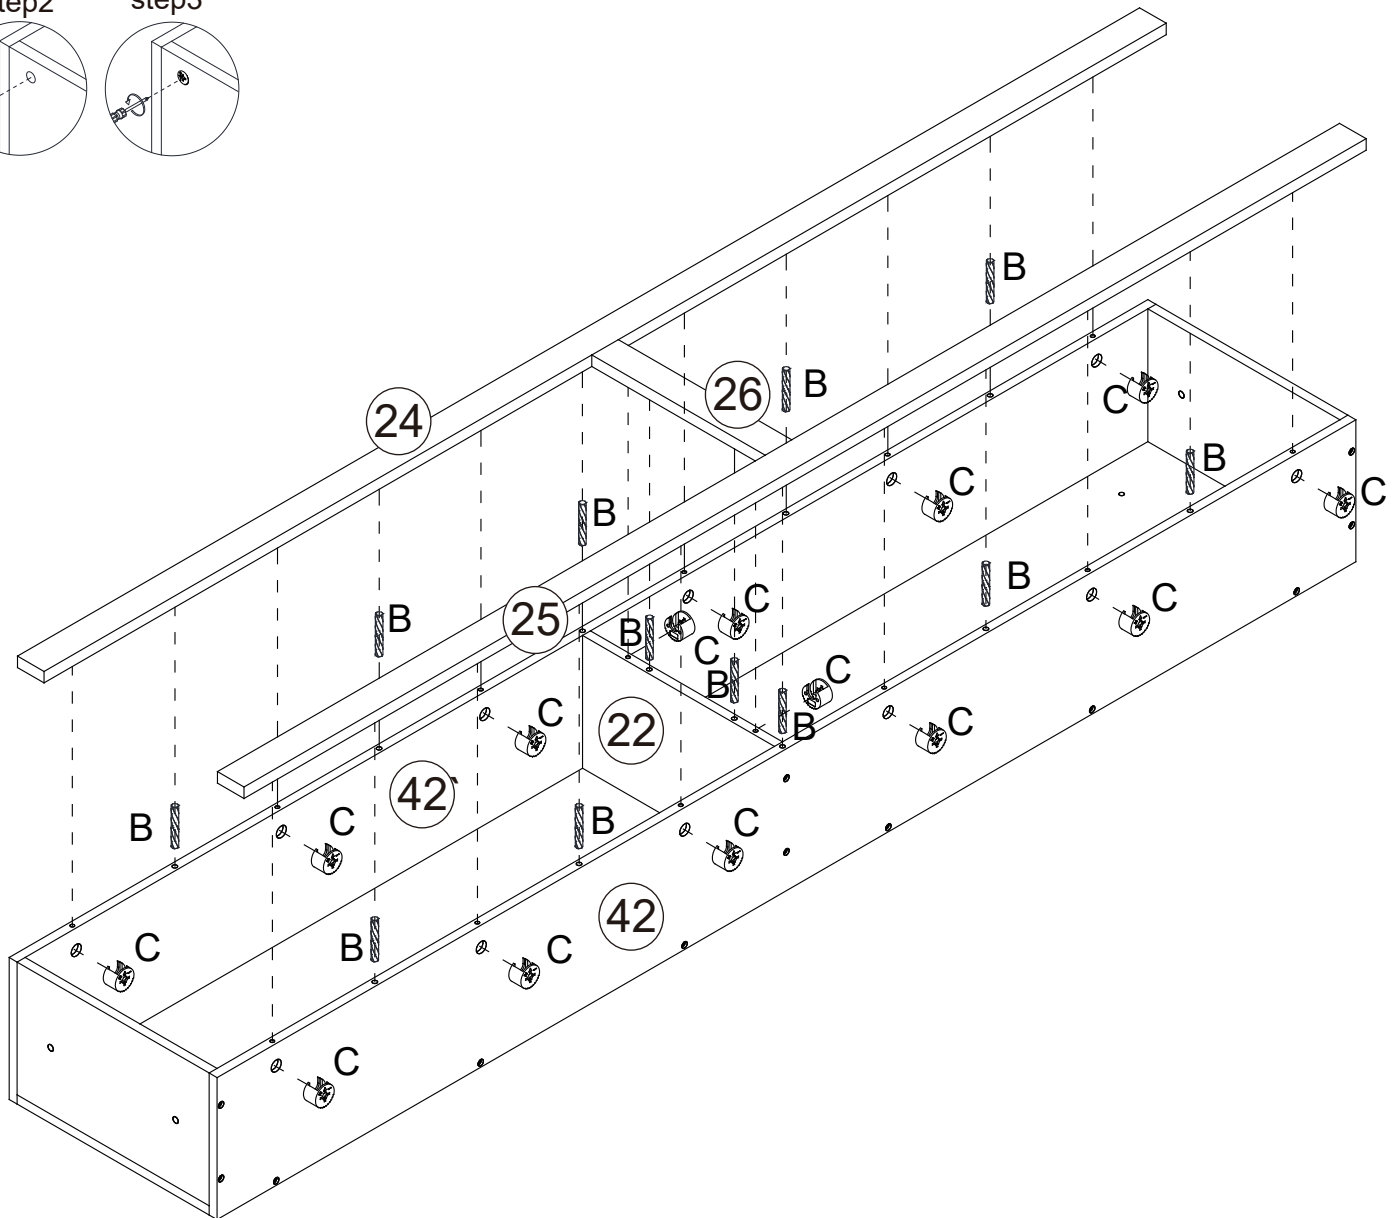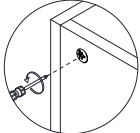


step3




<p>(B)</p>  <p>6*30mm Dowel x 12</p>	<p>(C)</p>  <p>Cam lock x 14</p>
---	---

Assembly Instructions

Step 14

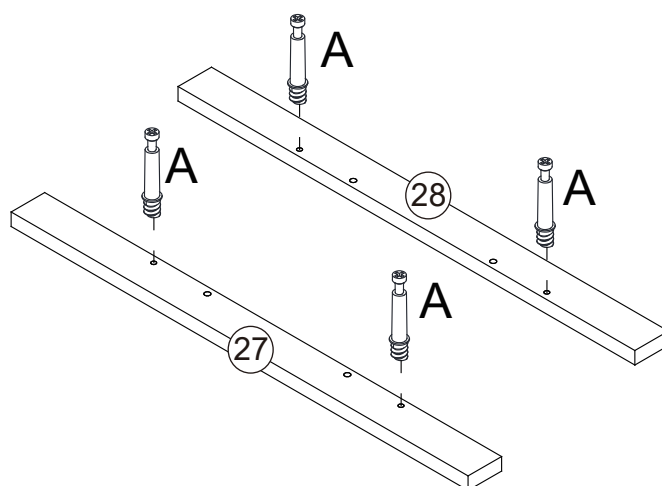


A



Cam Bolt x 4

Step 15

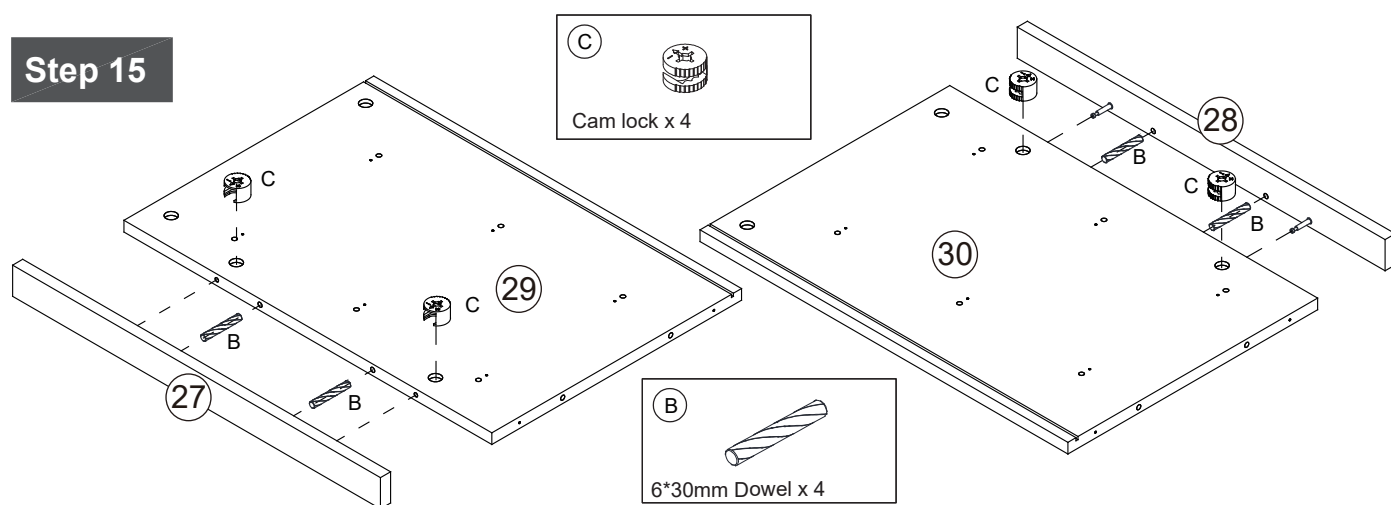

C


Cam lock x 4

B




6*30mm Dowel x 4

Step 16

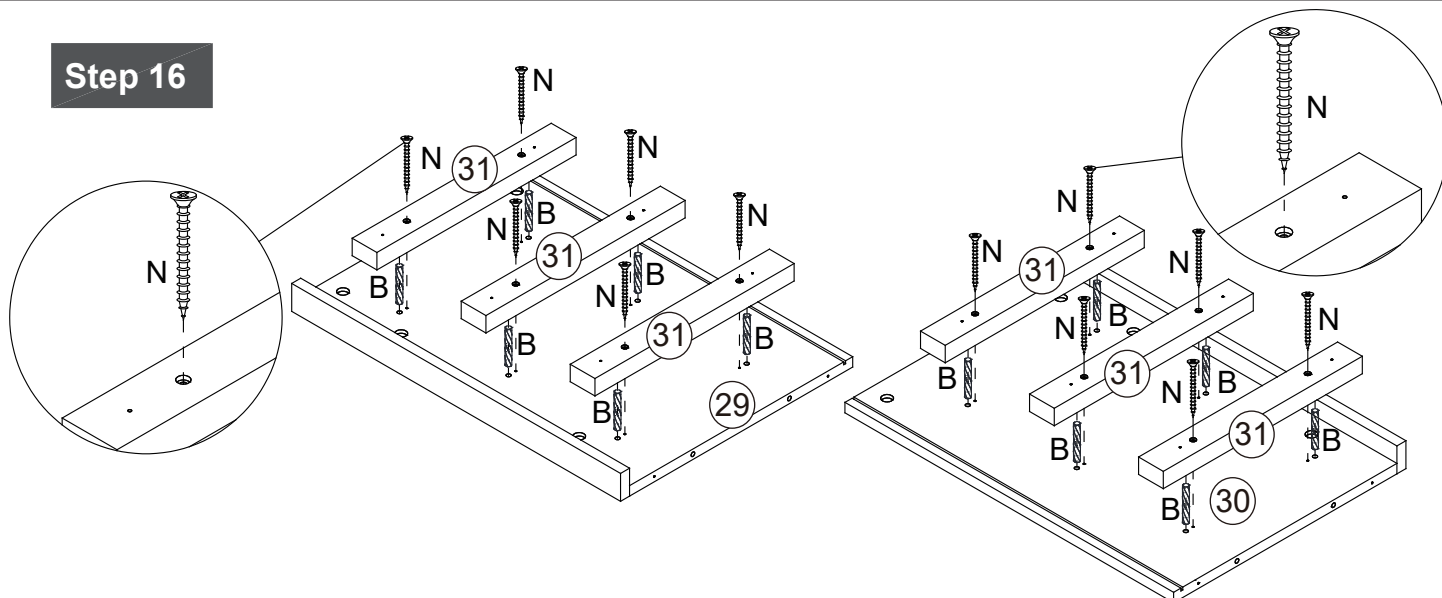

N

B



6*30mm Dowel x 12


N





4*30mm Screw x 12

Assembly Instructions

Step 17

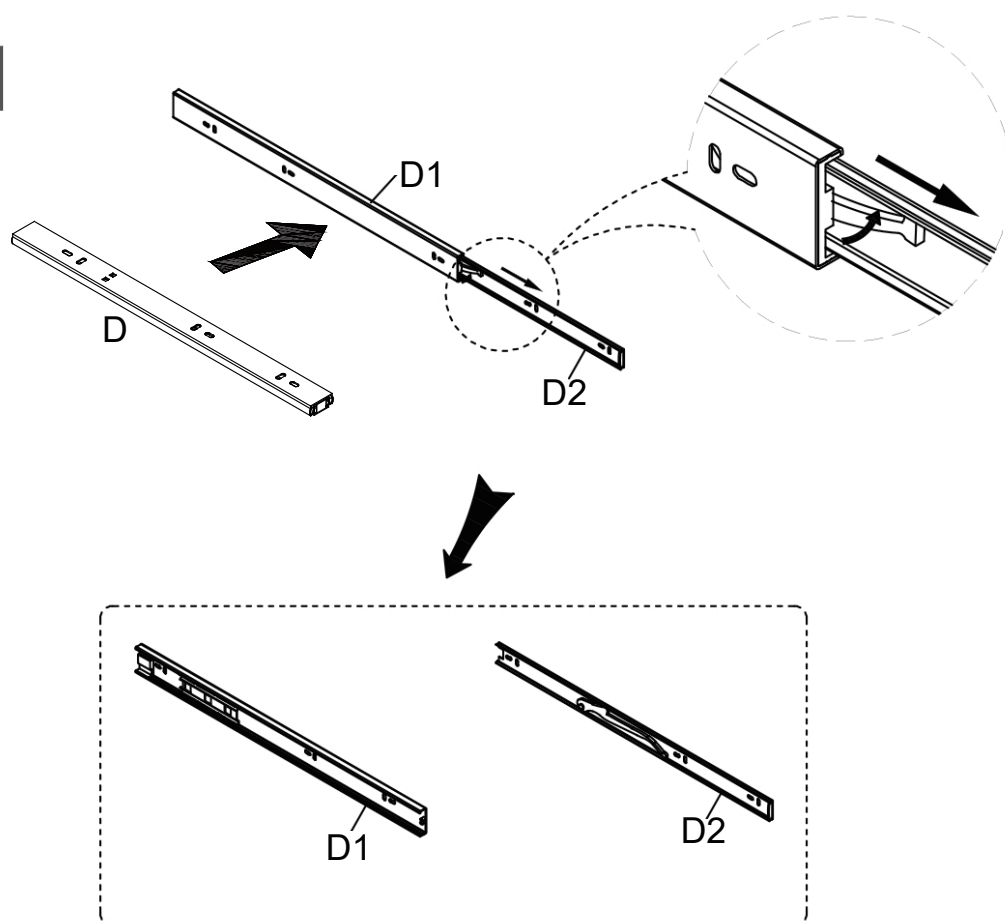


Step 18

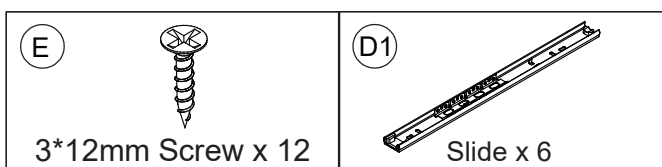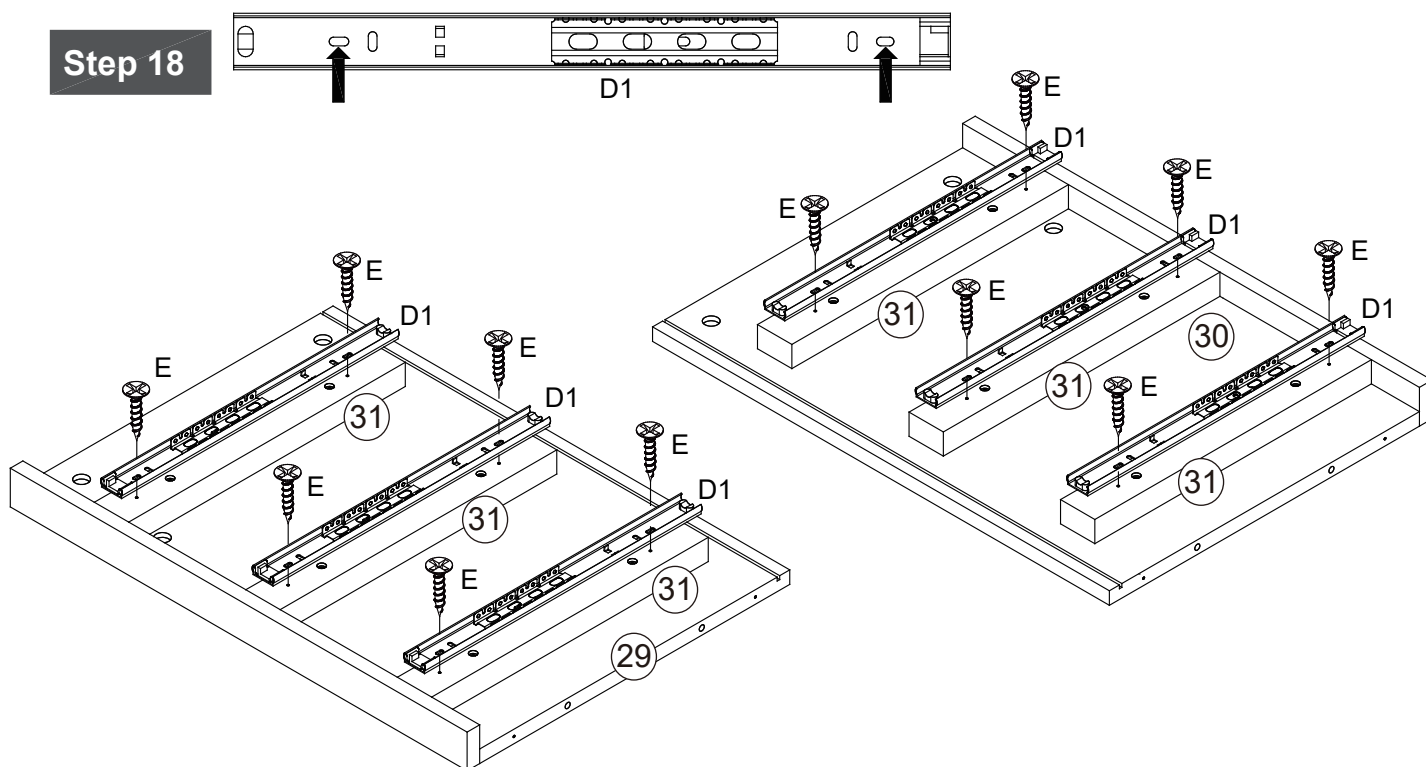


Assembly Instructions

Step 19



D1

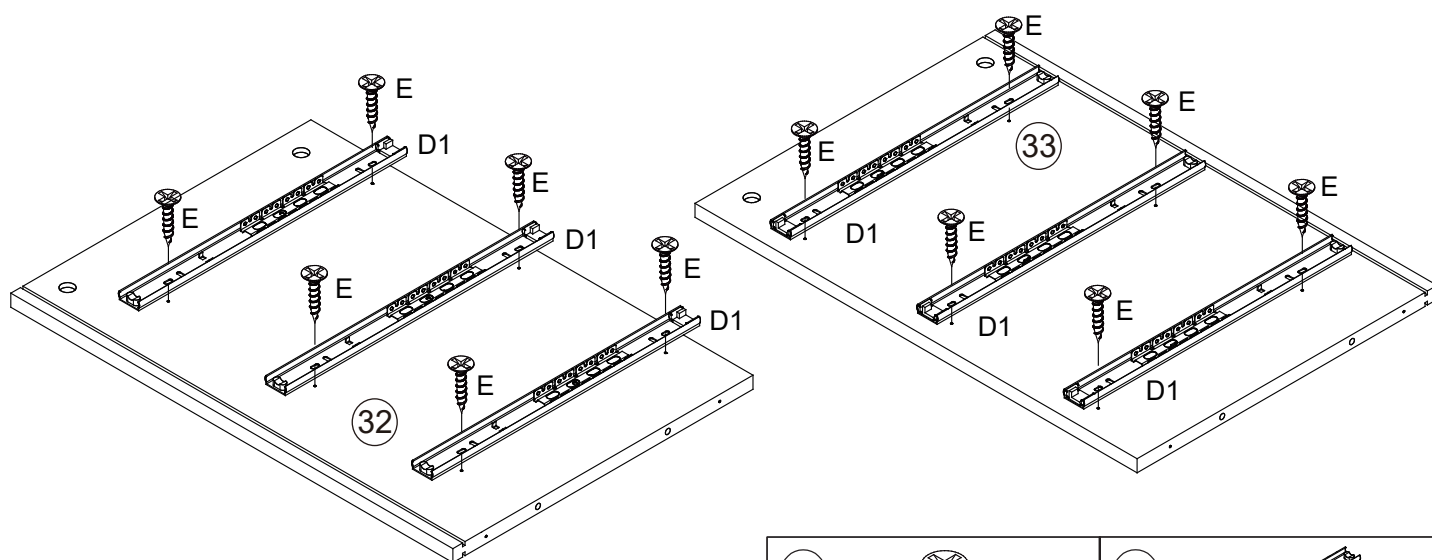


(E)




3*12mm Screw x 12

(D1)

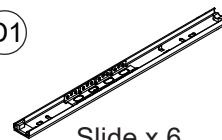


Slide x 6

Step 20

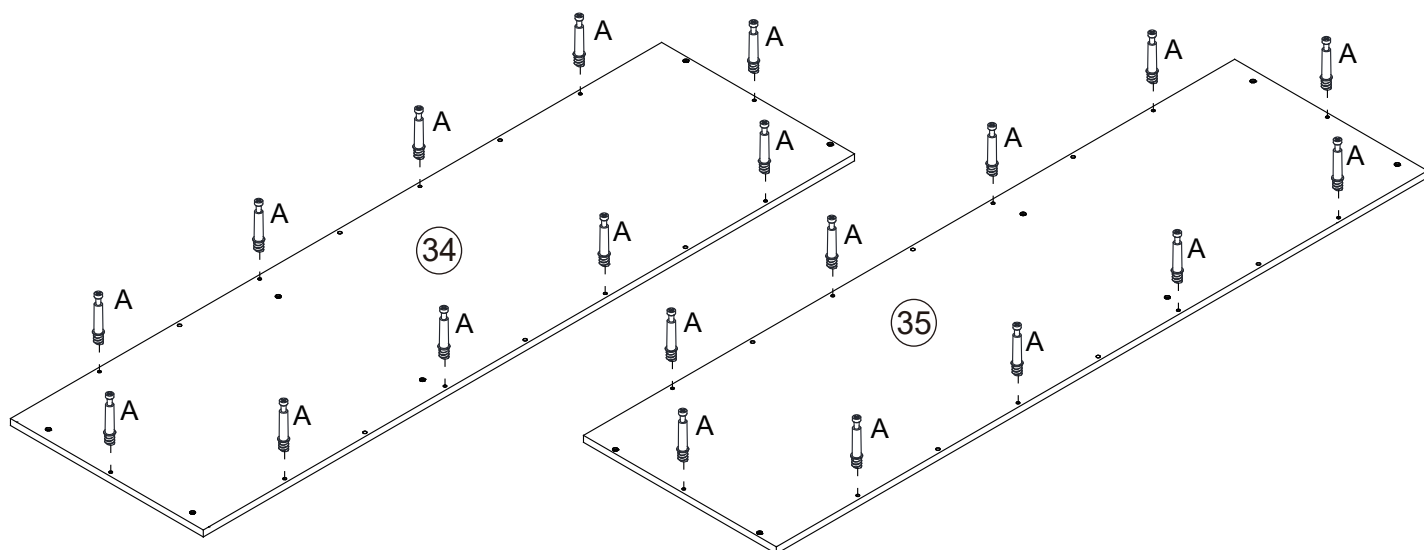


(A)




Cam Bolt x 20

Assembly Instructions

Step 21

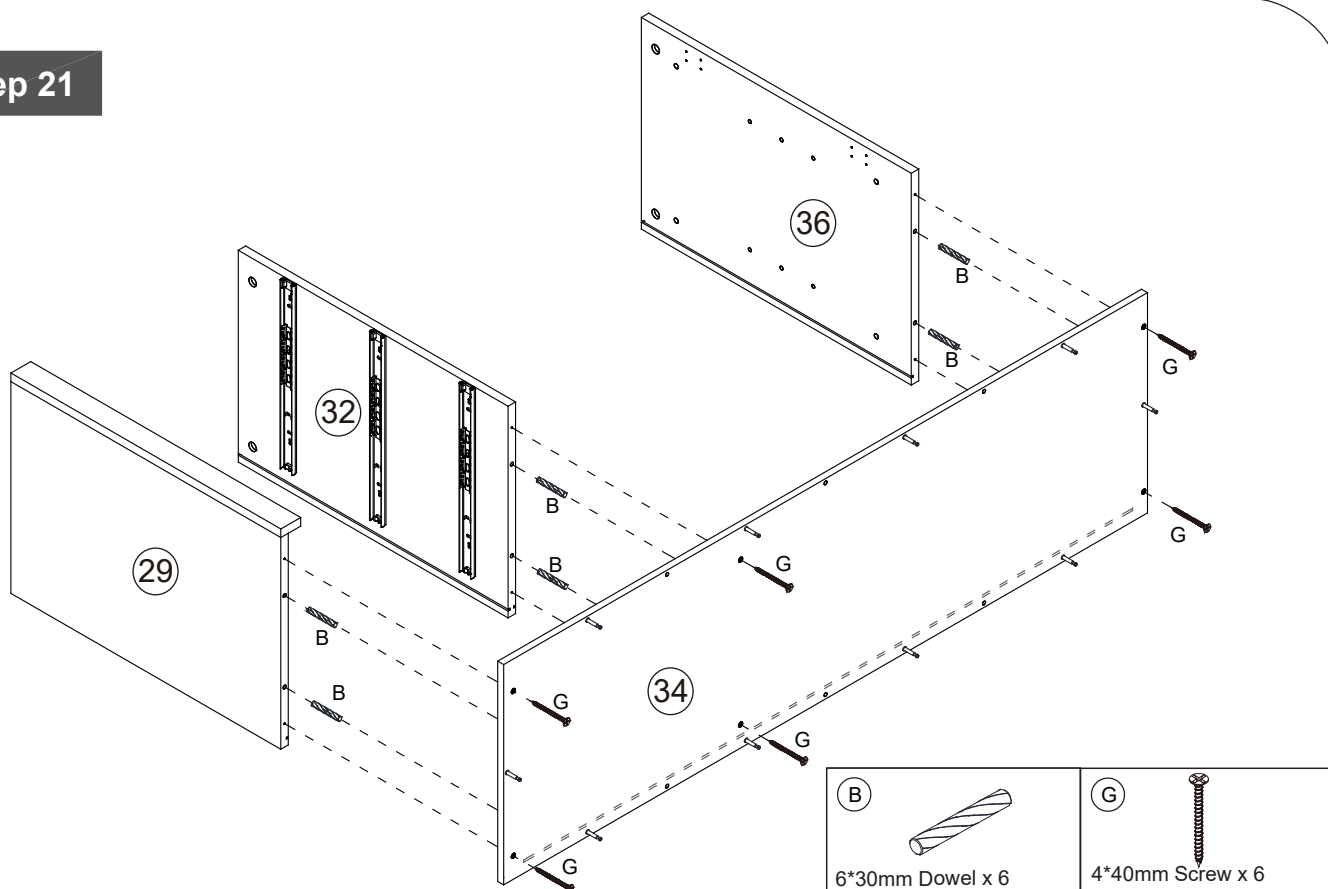


Step 22

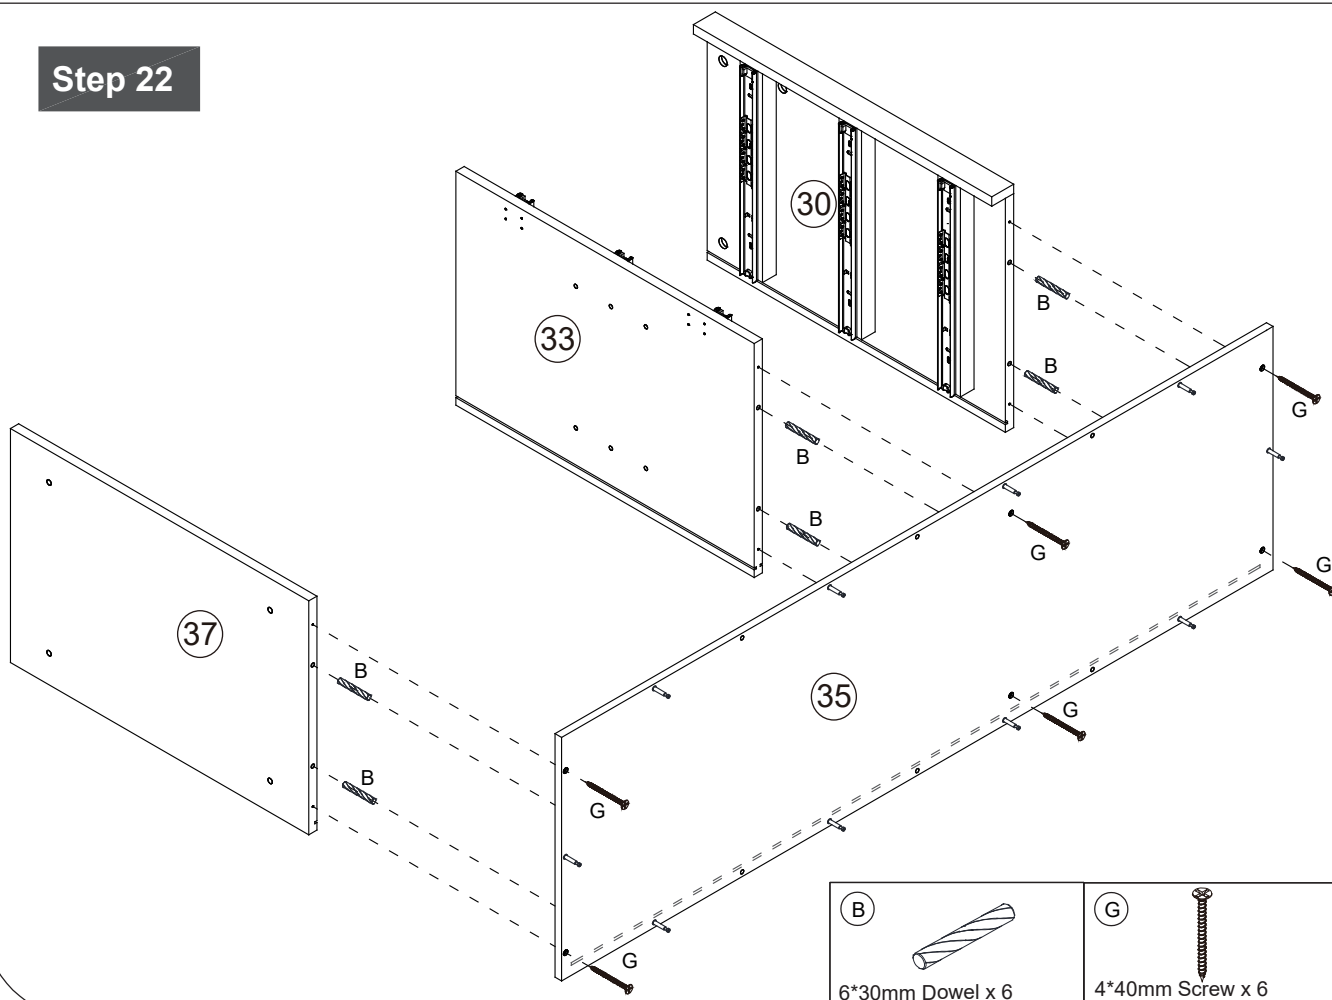


Assembly Instructions

Step 23

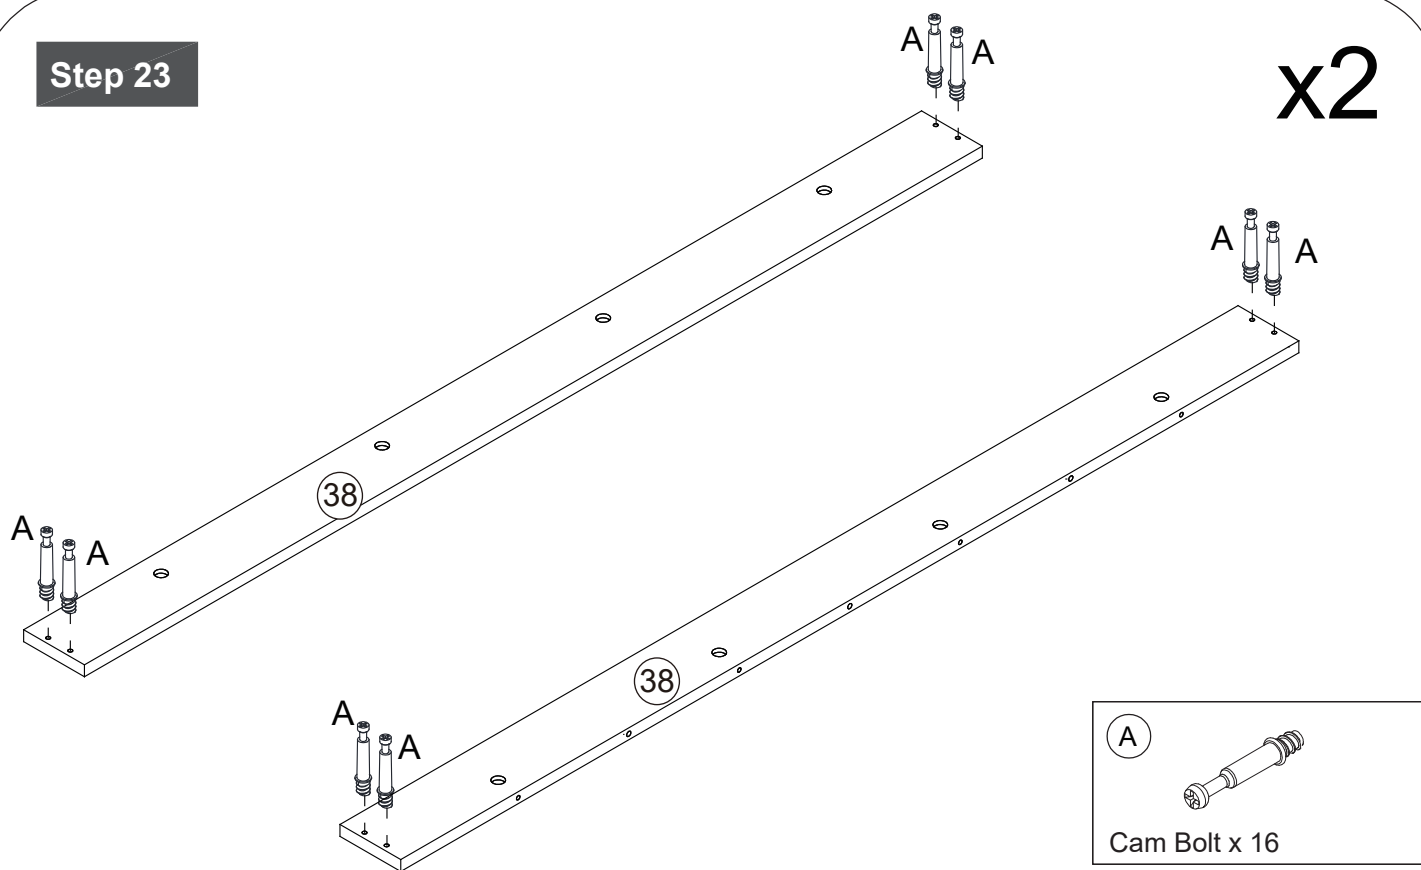


Step 24

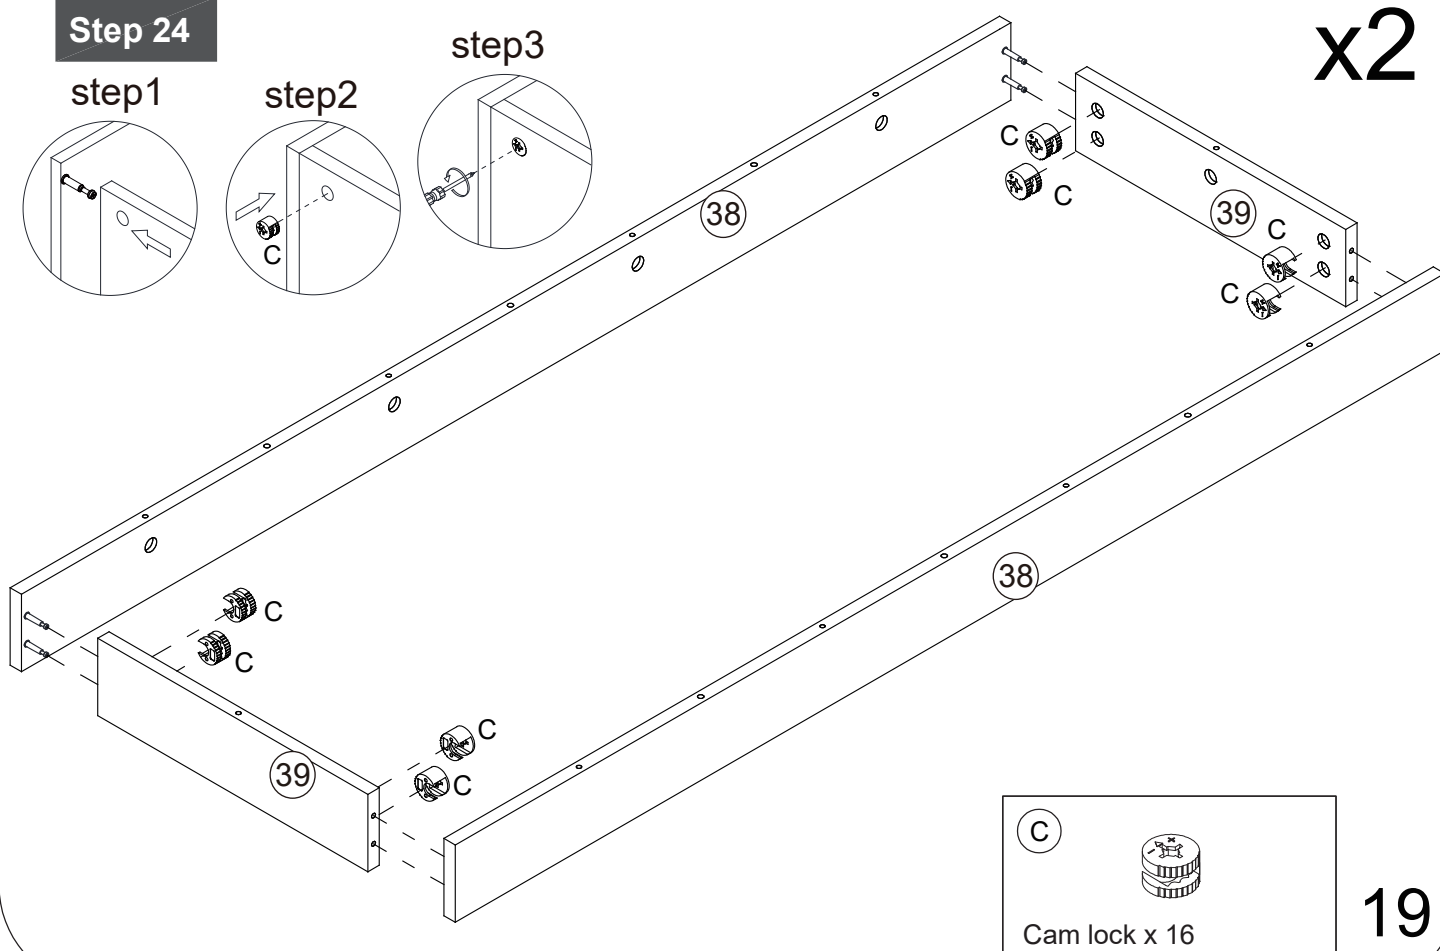


Assembly Instructions

Step 25

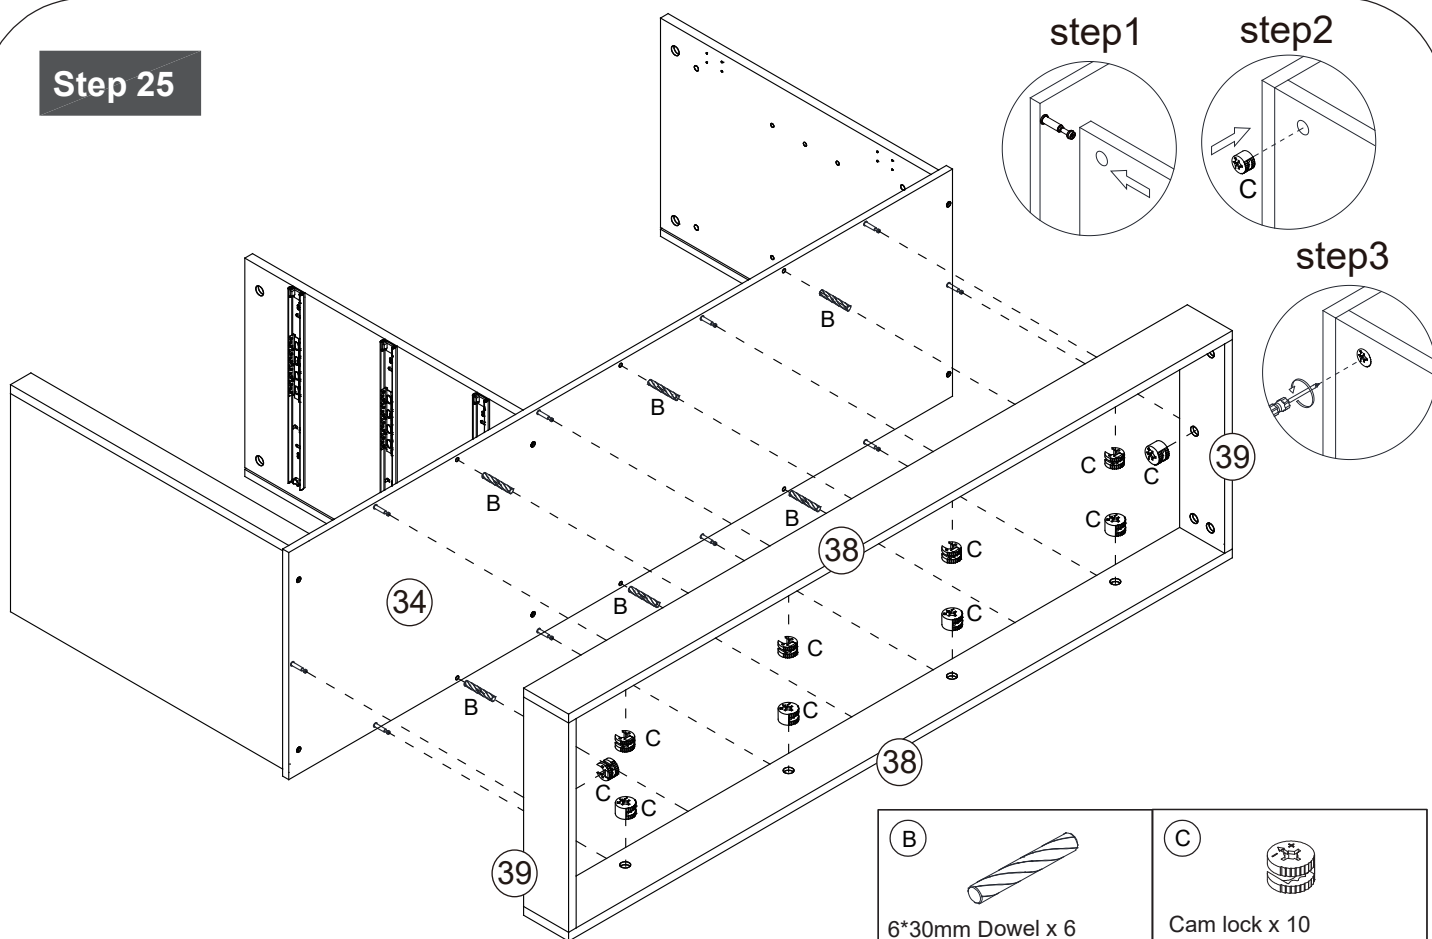


Step 26

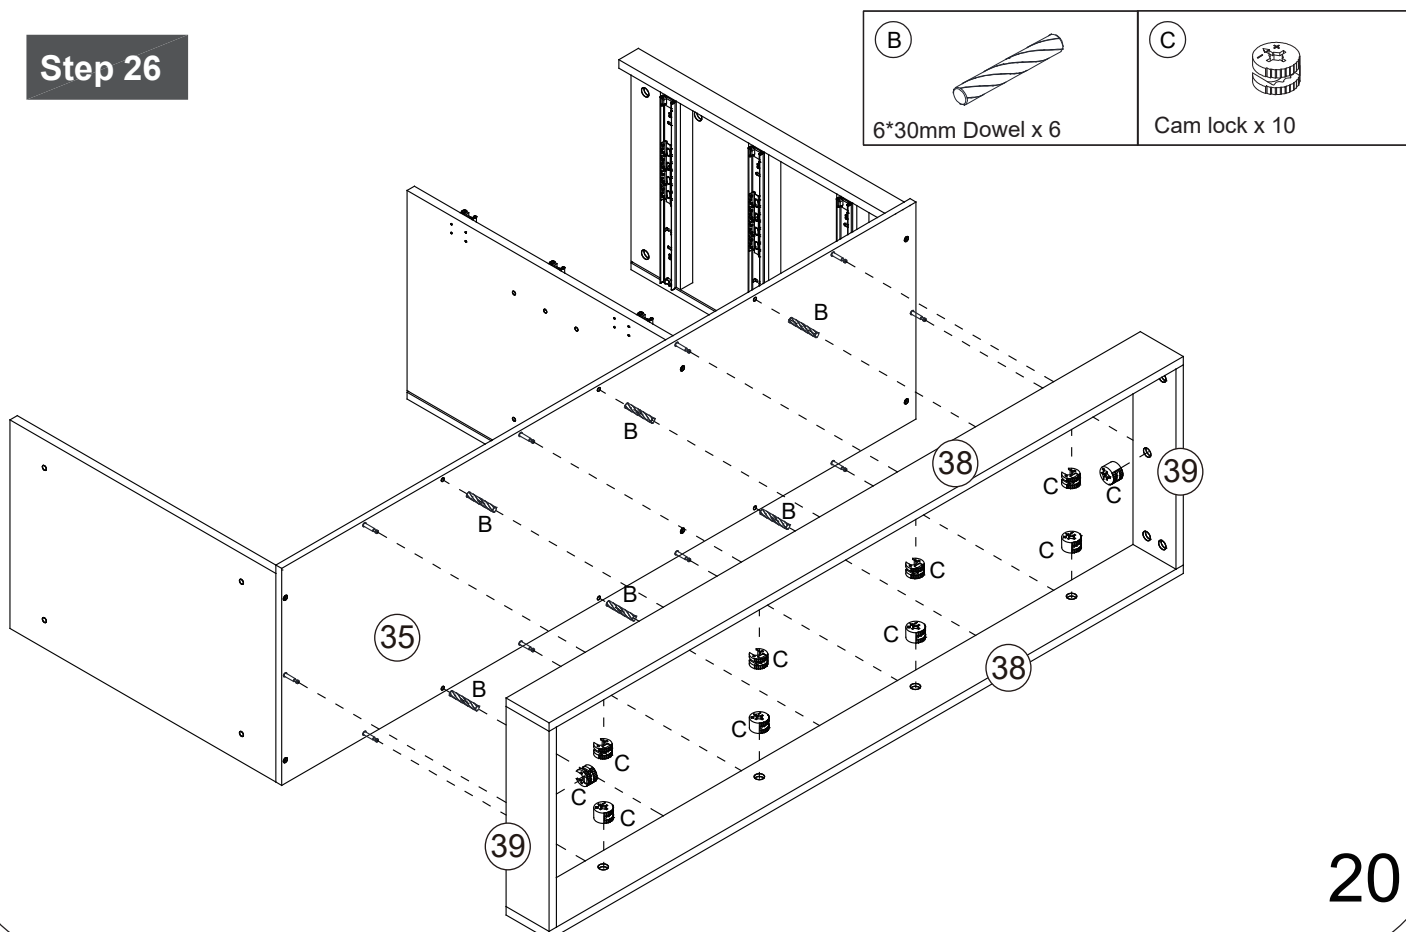


Assembly Instructions


Step 27

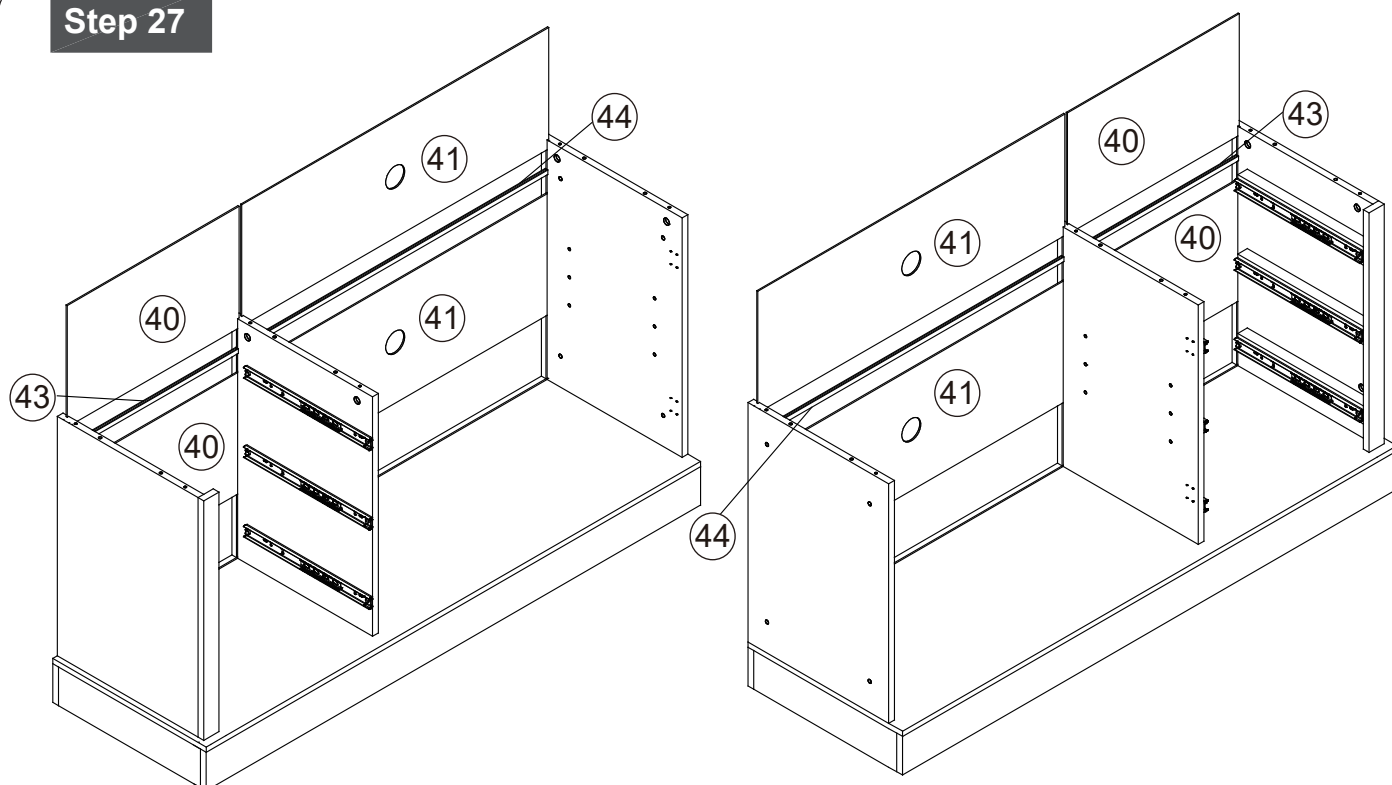

Step 28

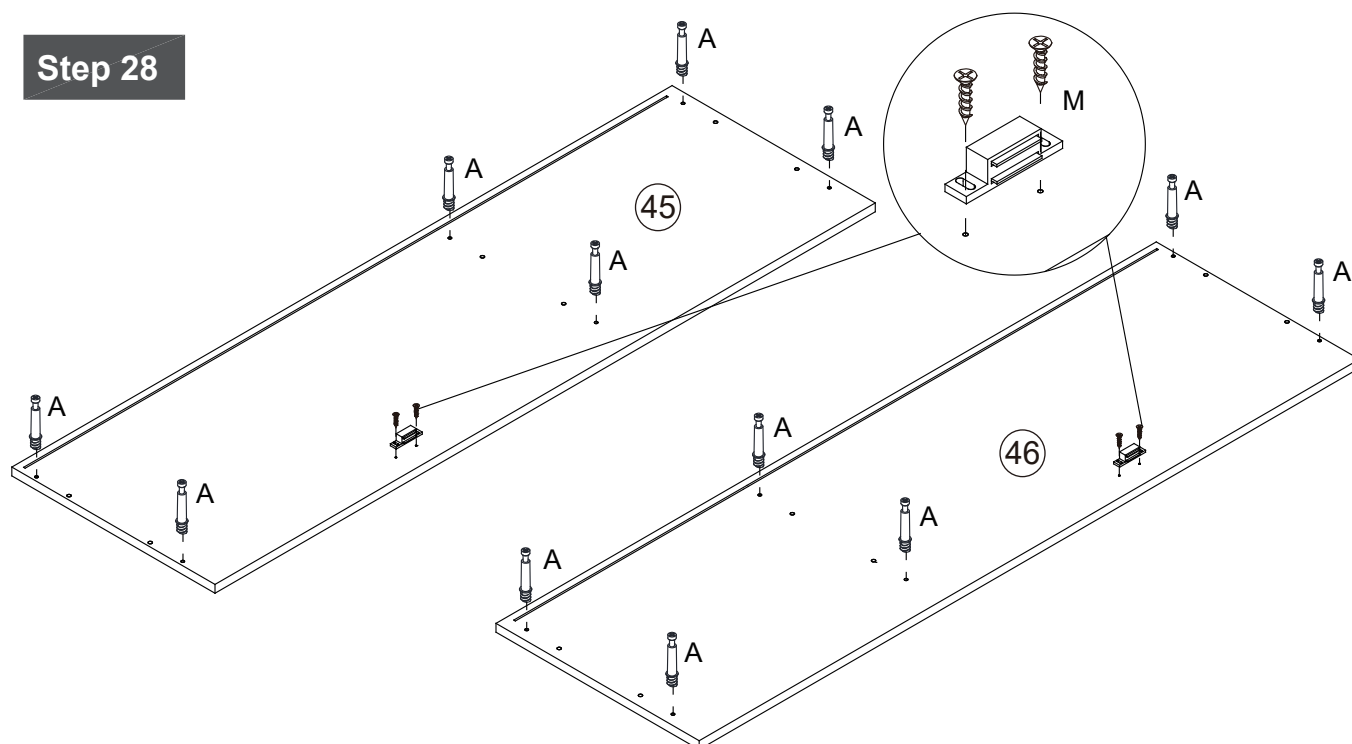


A



Cam Bolt x 12

M




x 2set


Assembly Instructions

Step 29




step1

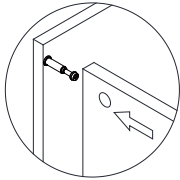



step2

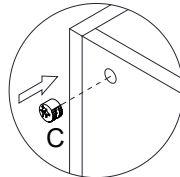

step3

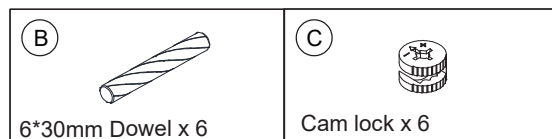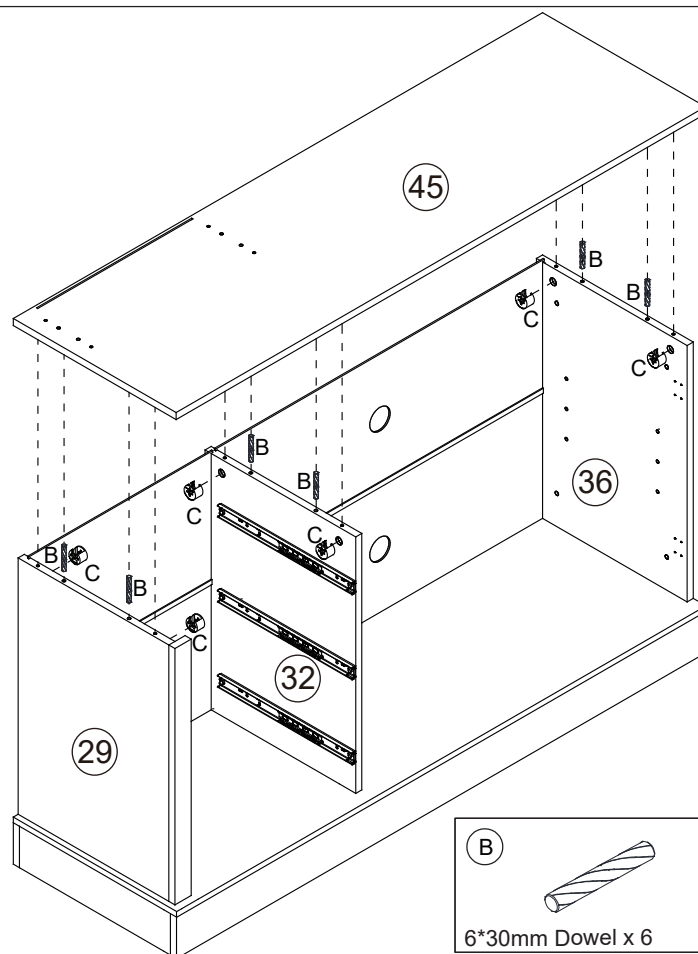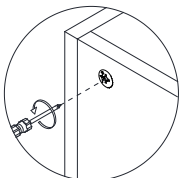


Step 30

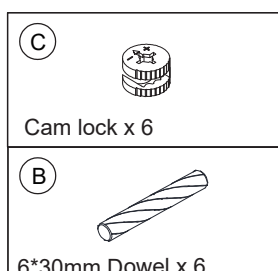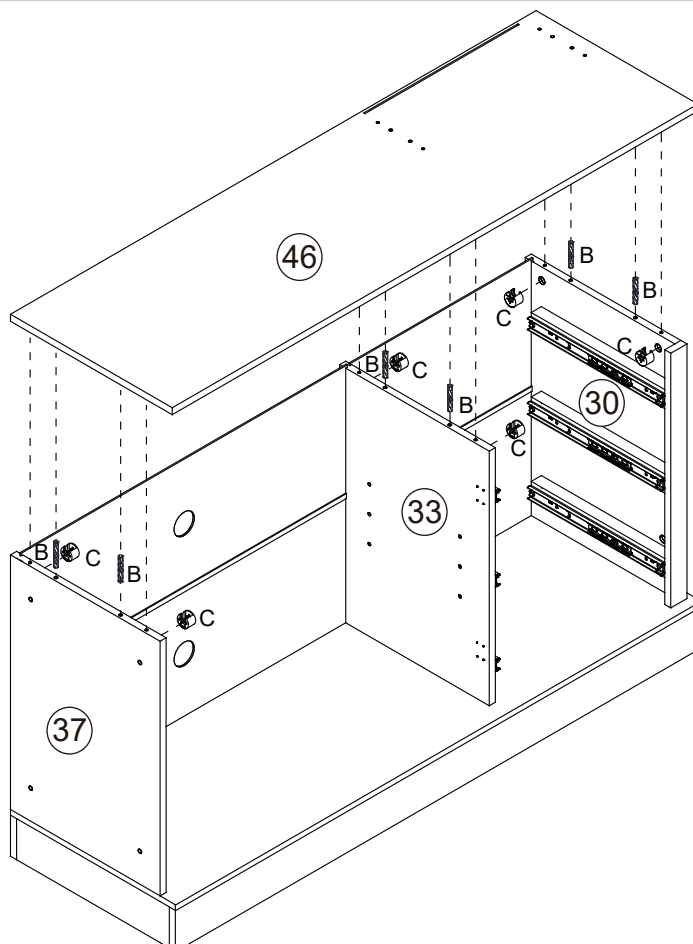


Assembly Instructions

Step 31

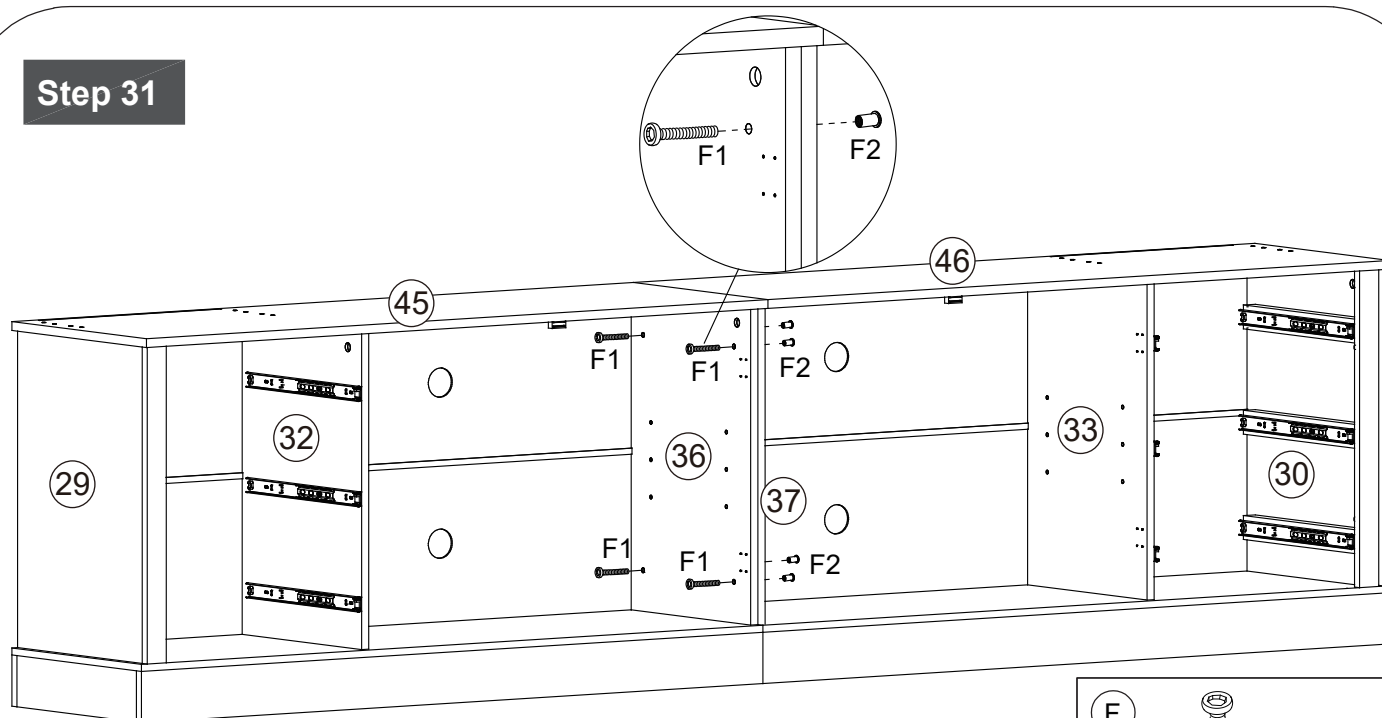

F
F1 F2
6*25mm Screw x 4set



Step 32

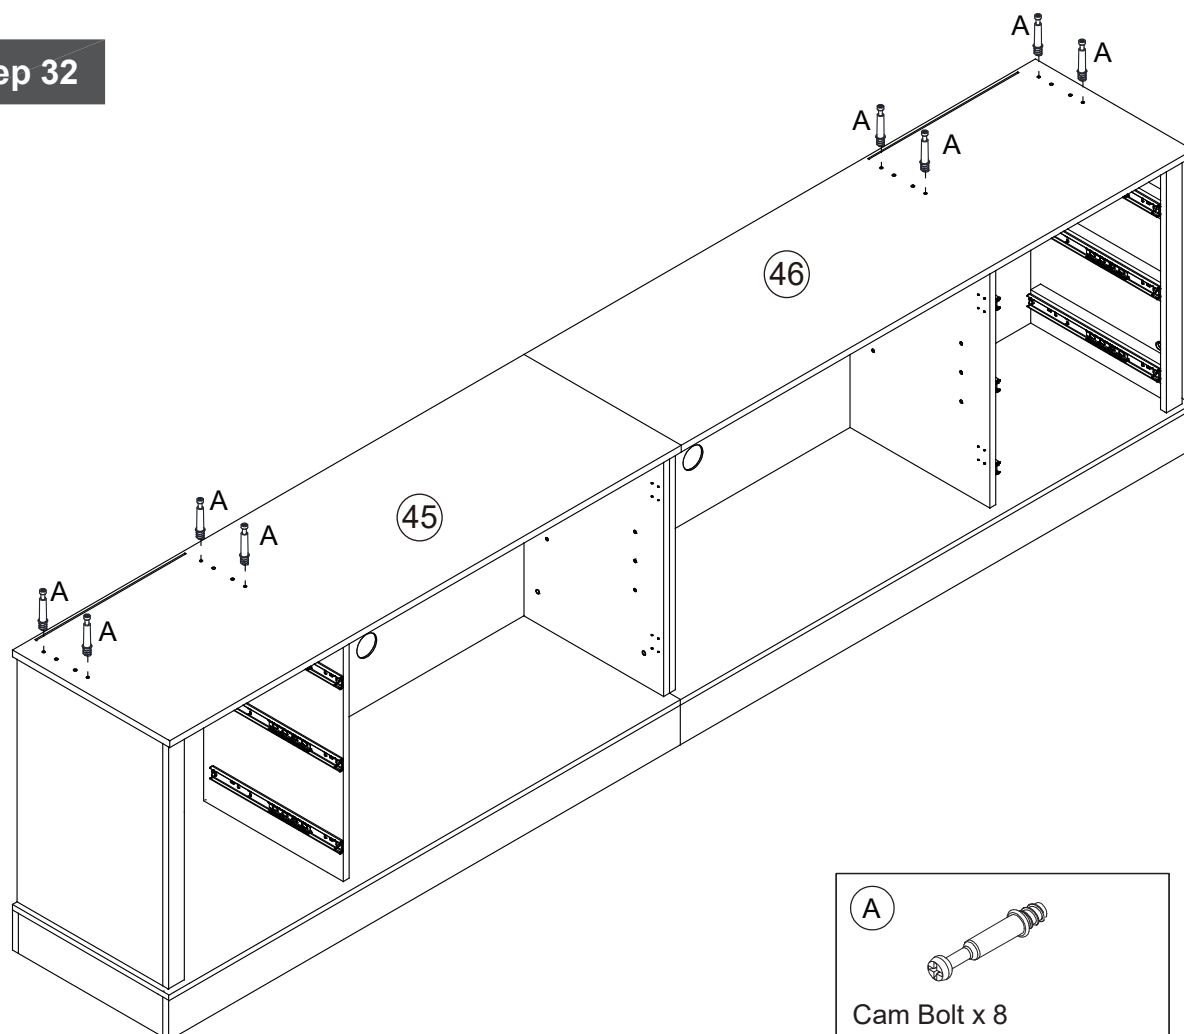

A
Cam Bolt x 8



Assembly Instructions

Step 33

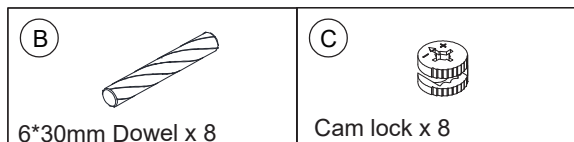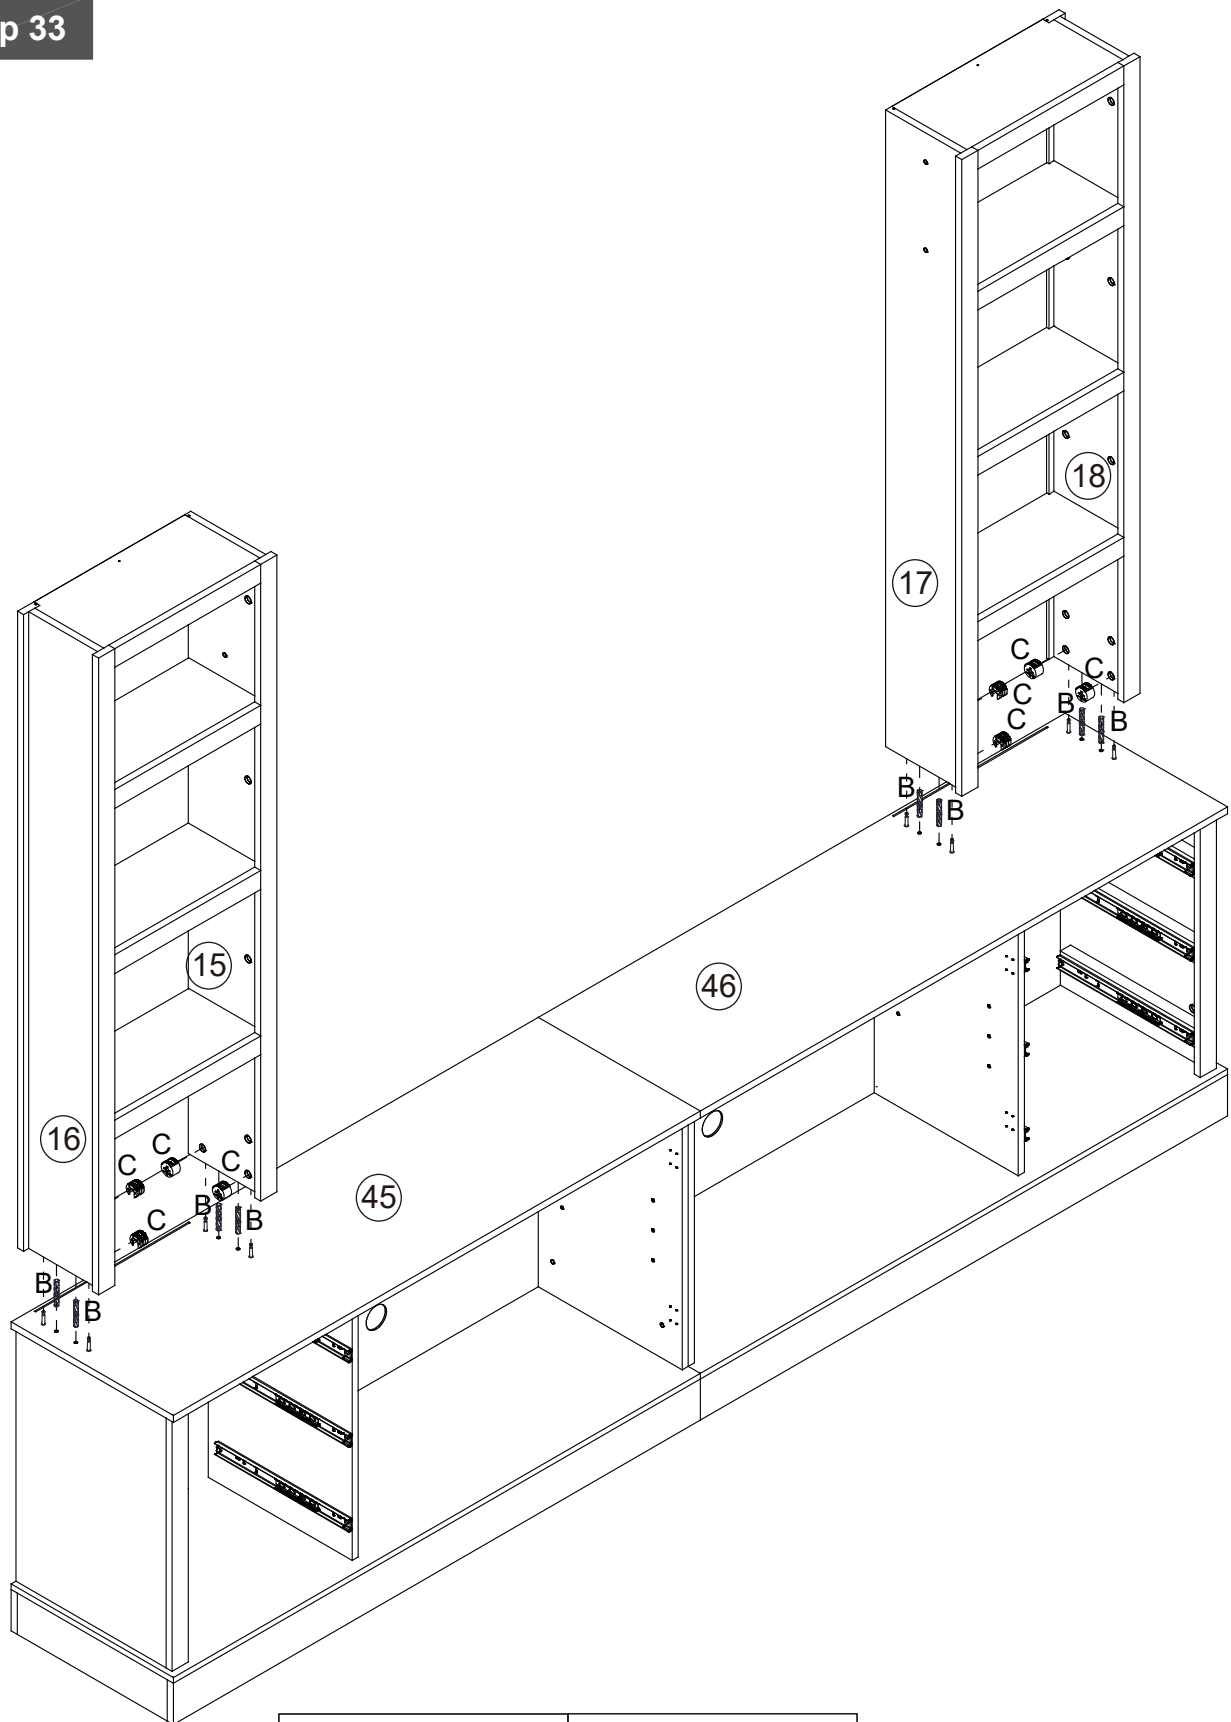

Assembly Instructions


Step 34

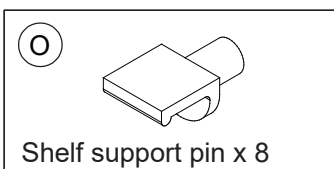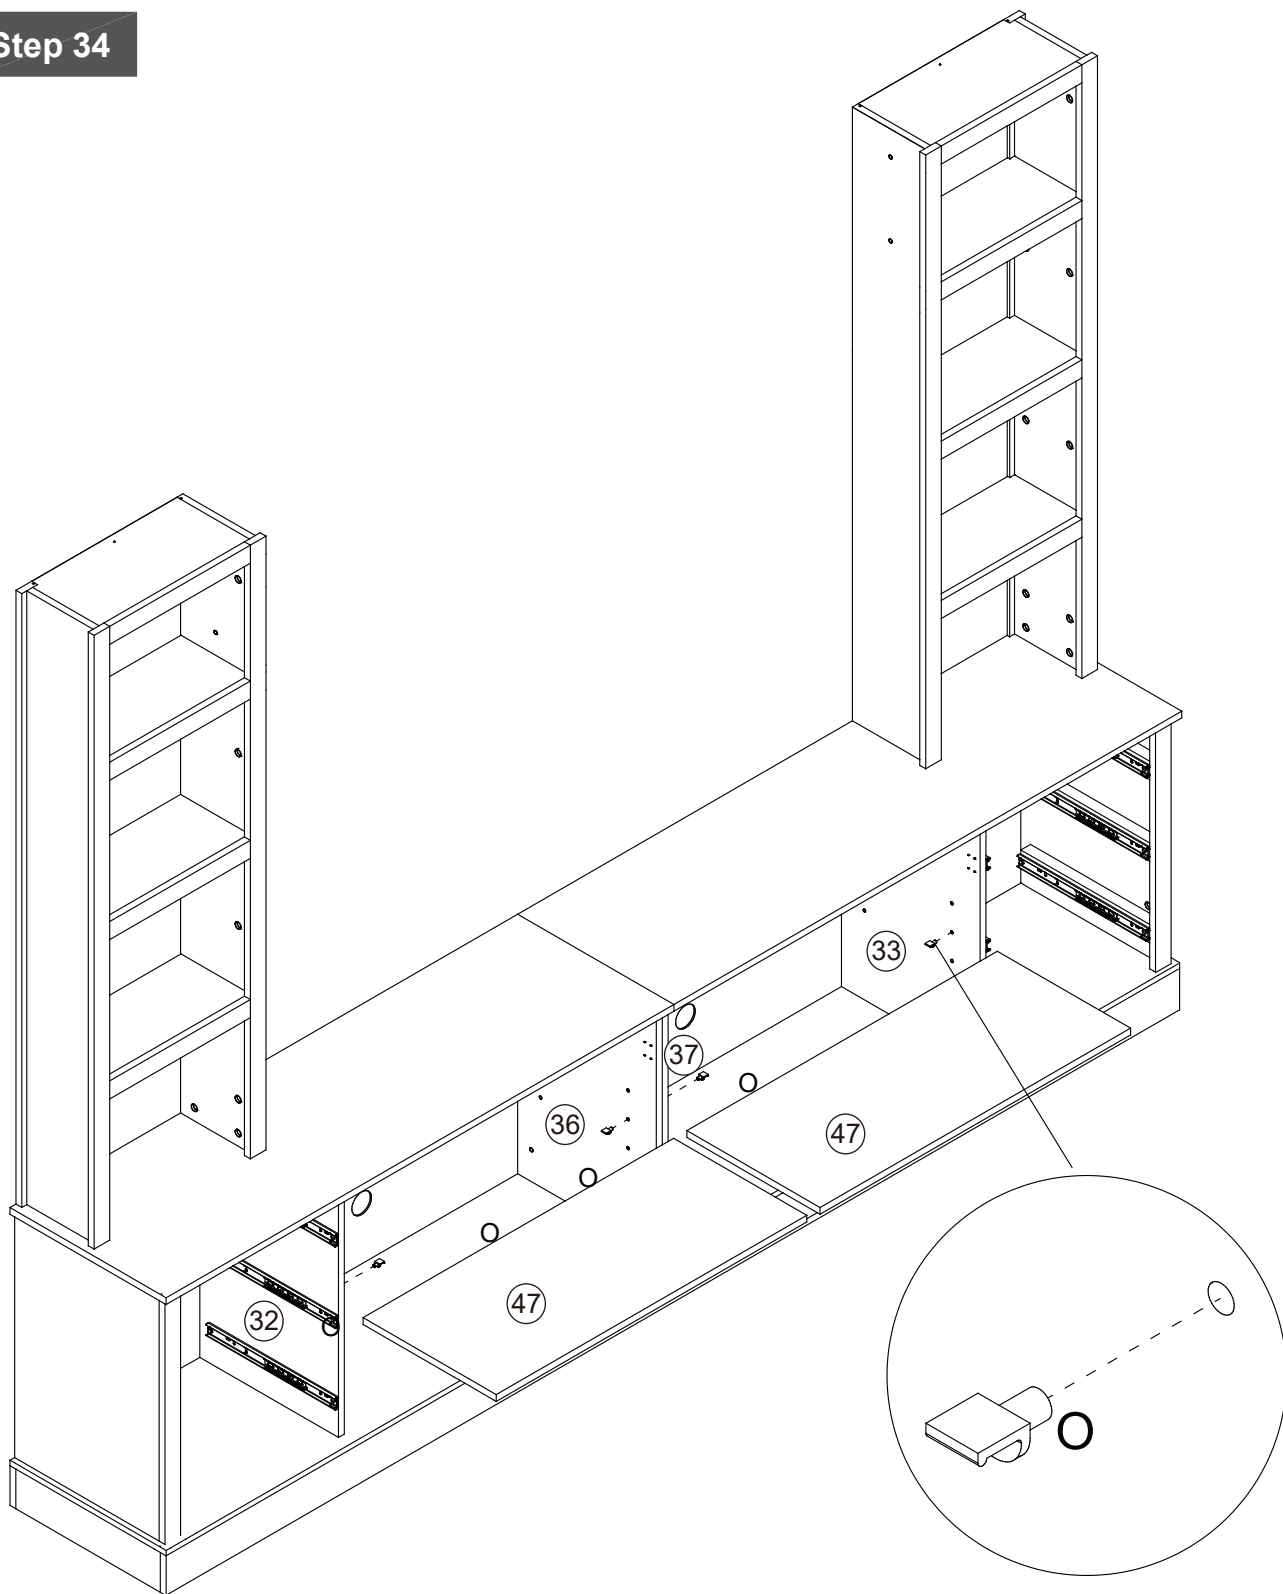


Assembly Instructions

Step 35


x2

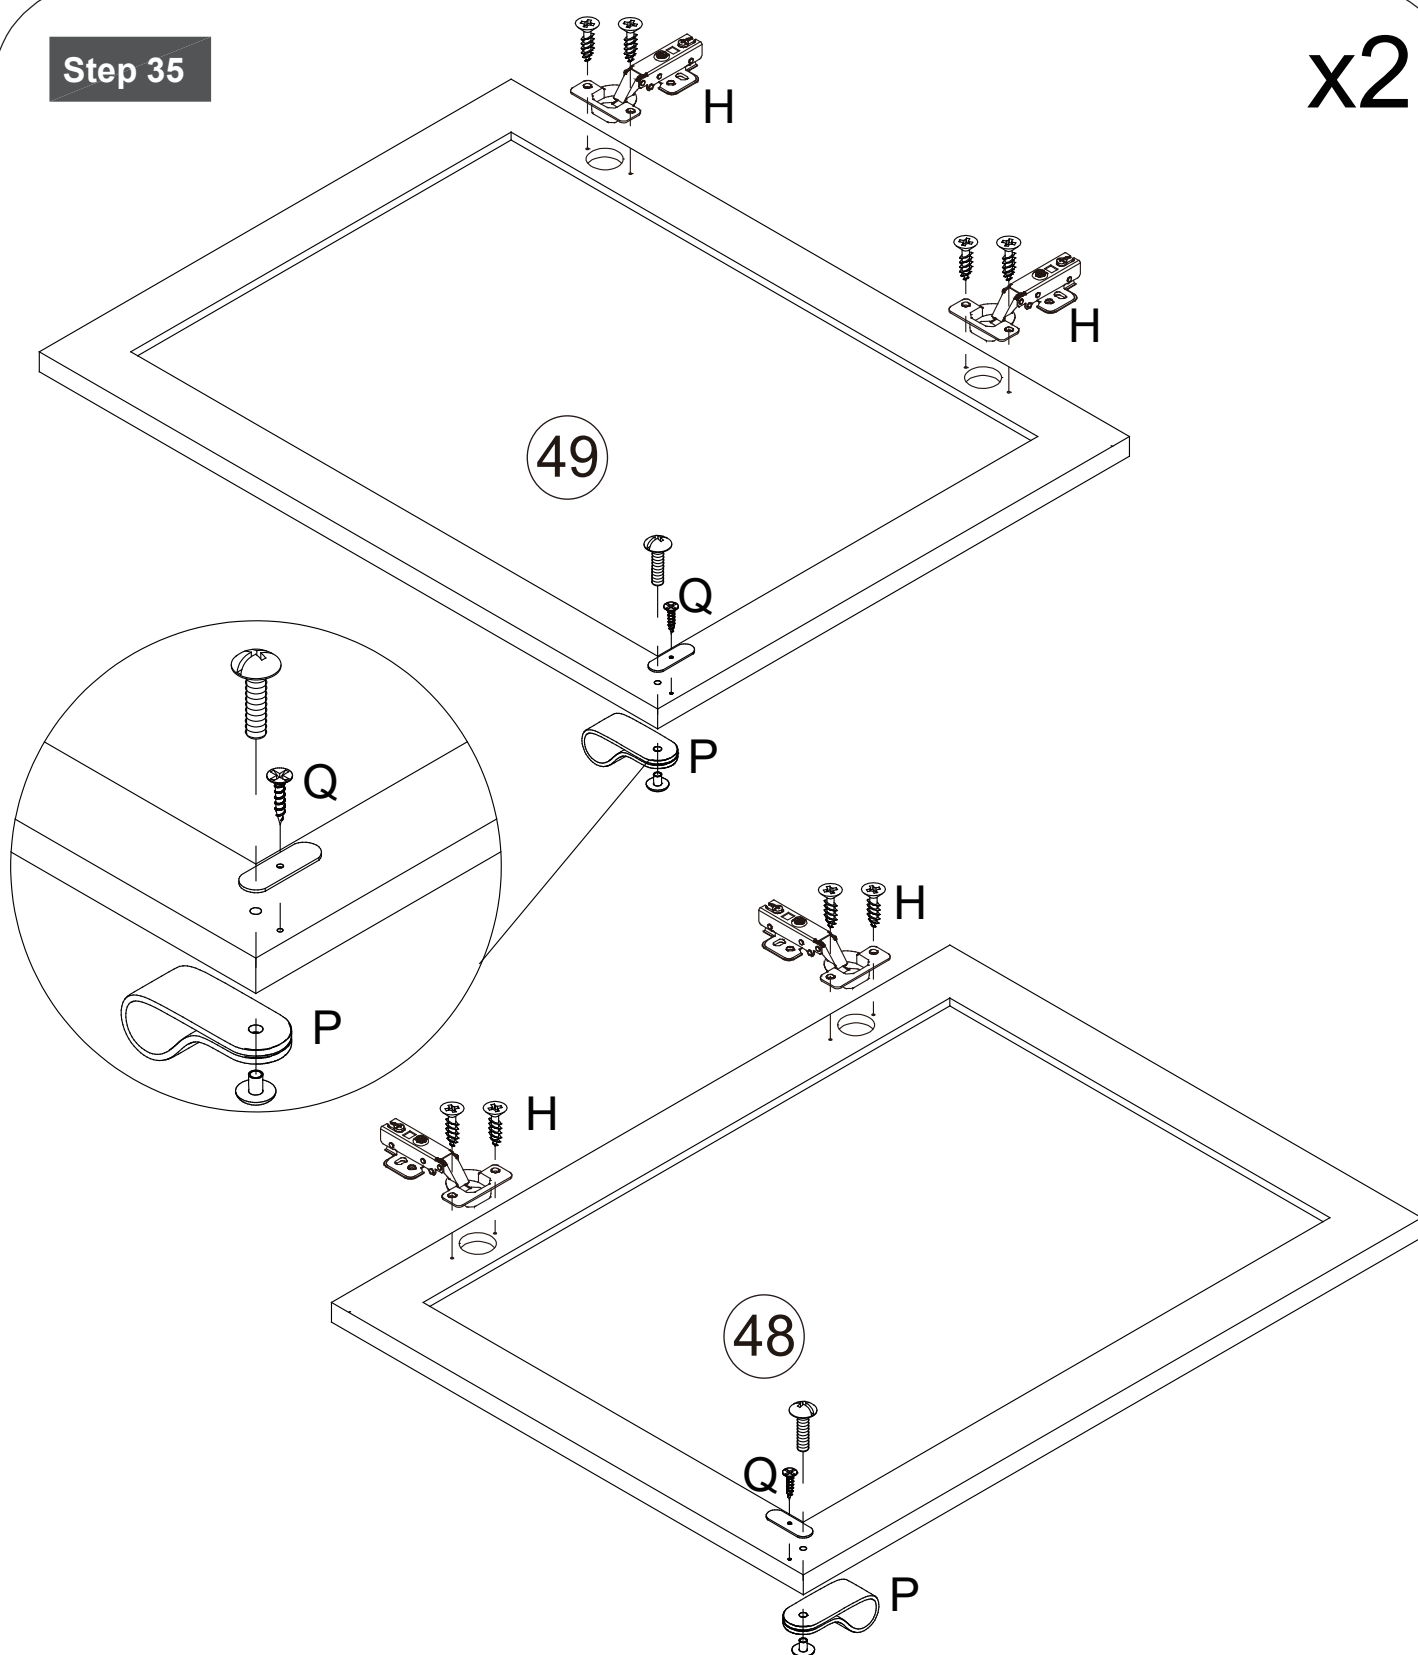


		
3.5*14mm Hinge x 8set	4*18mm Handle x 4set	x 4set

Assembly Instructions


Step 36

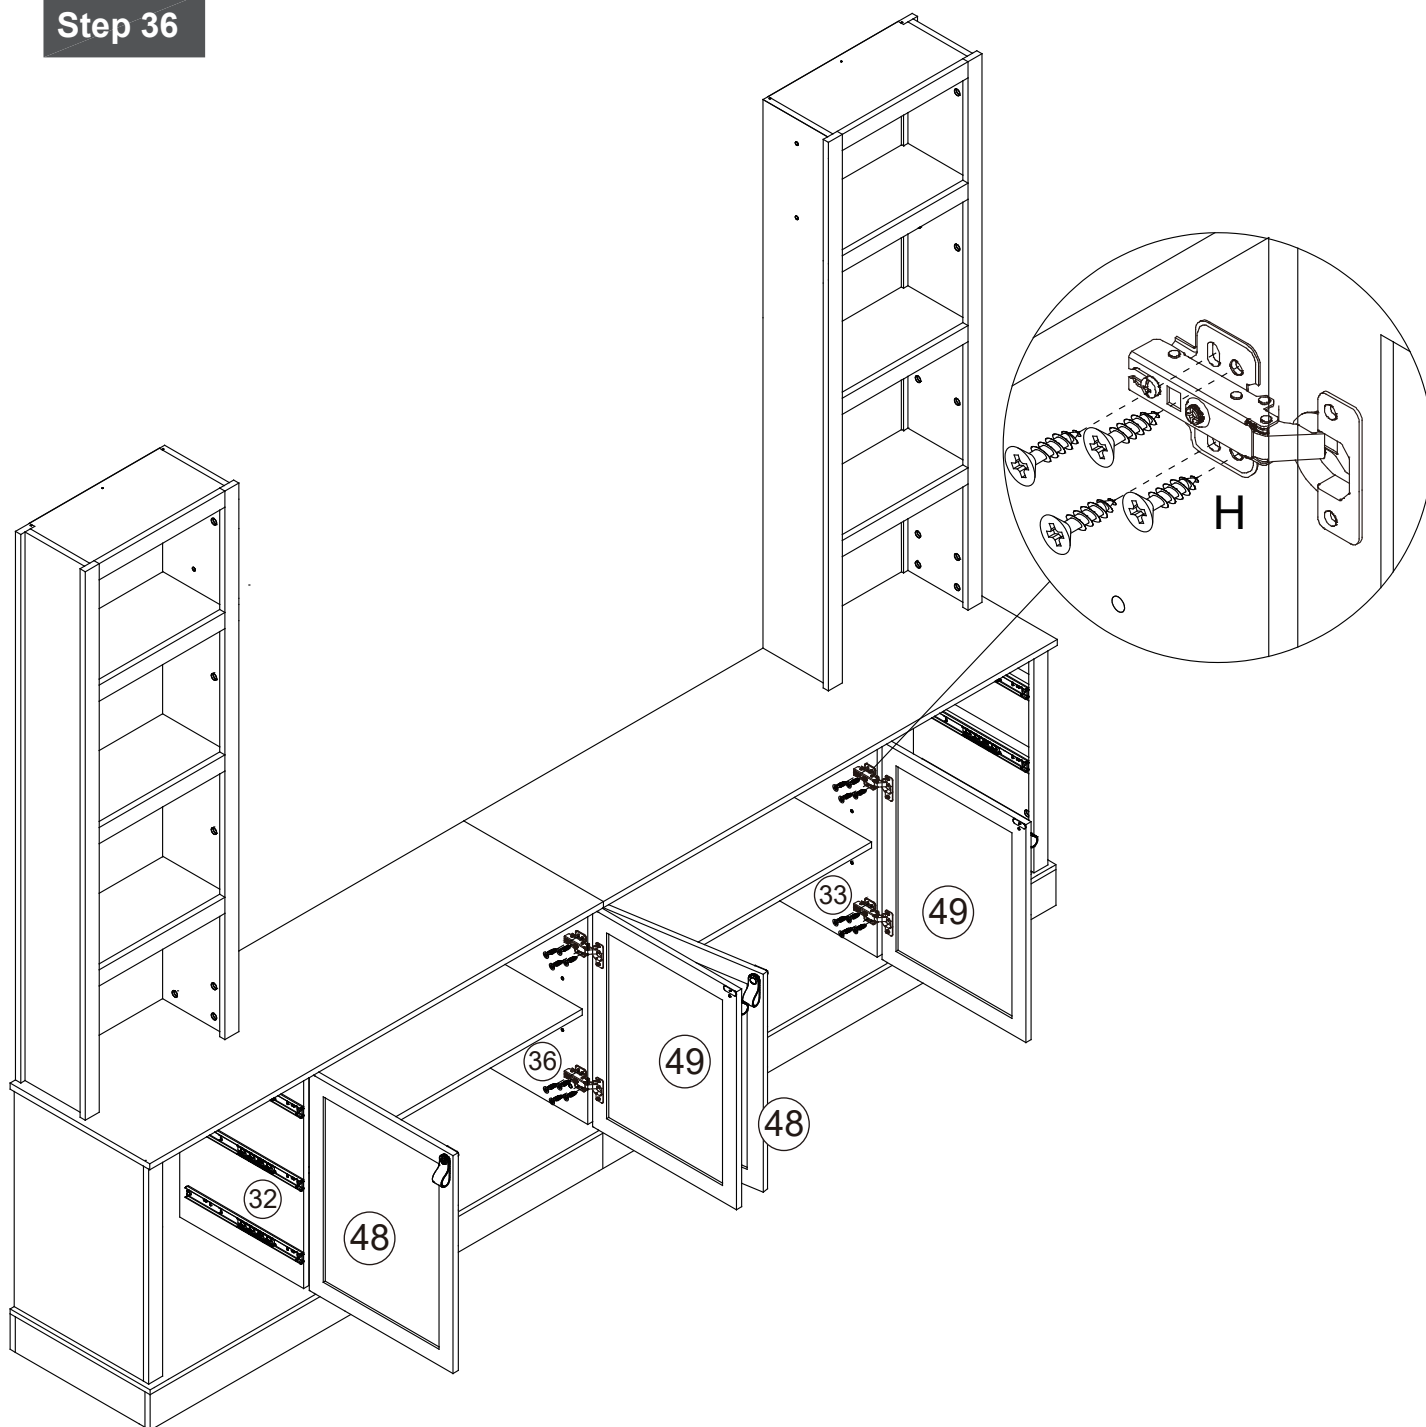


If the door can't close, please adjust the hinges as below.

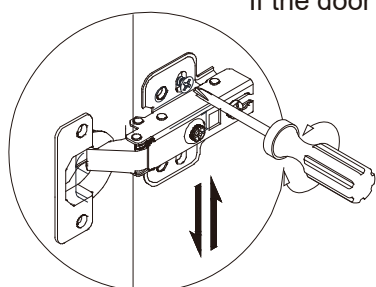

This is used to adjust the door panel in the up and down direction.

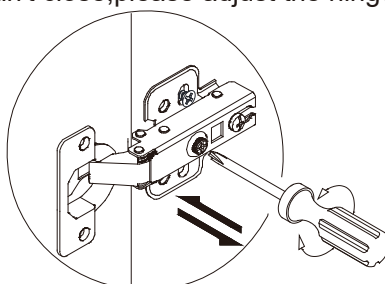



This is used to adjust the door panel in the left and right direction.

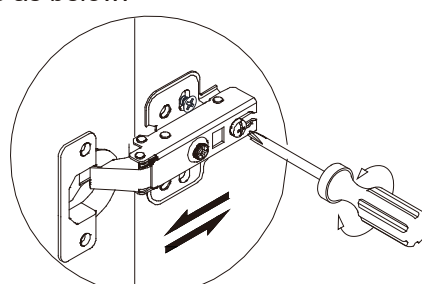

This is used to adjust the door panel in the front and rear.





Assembly Instructions

Step 37




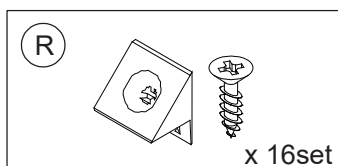
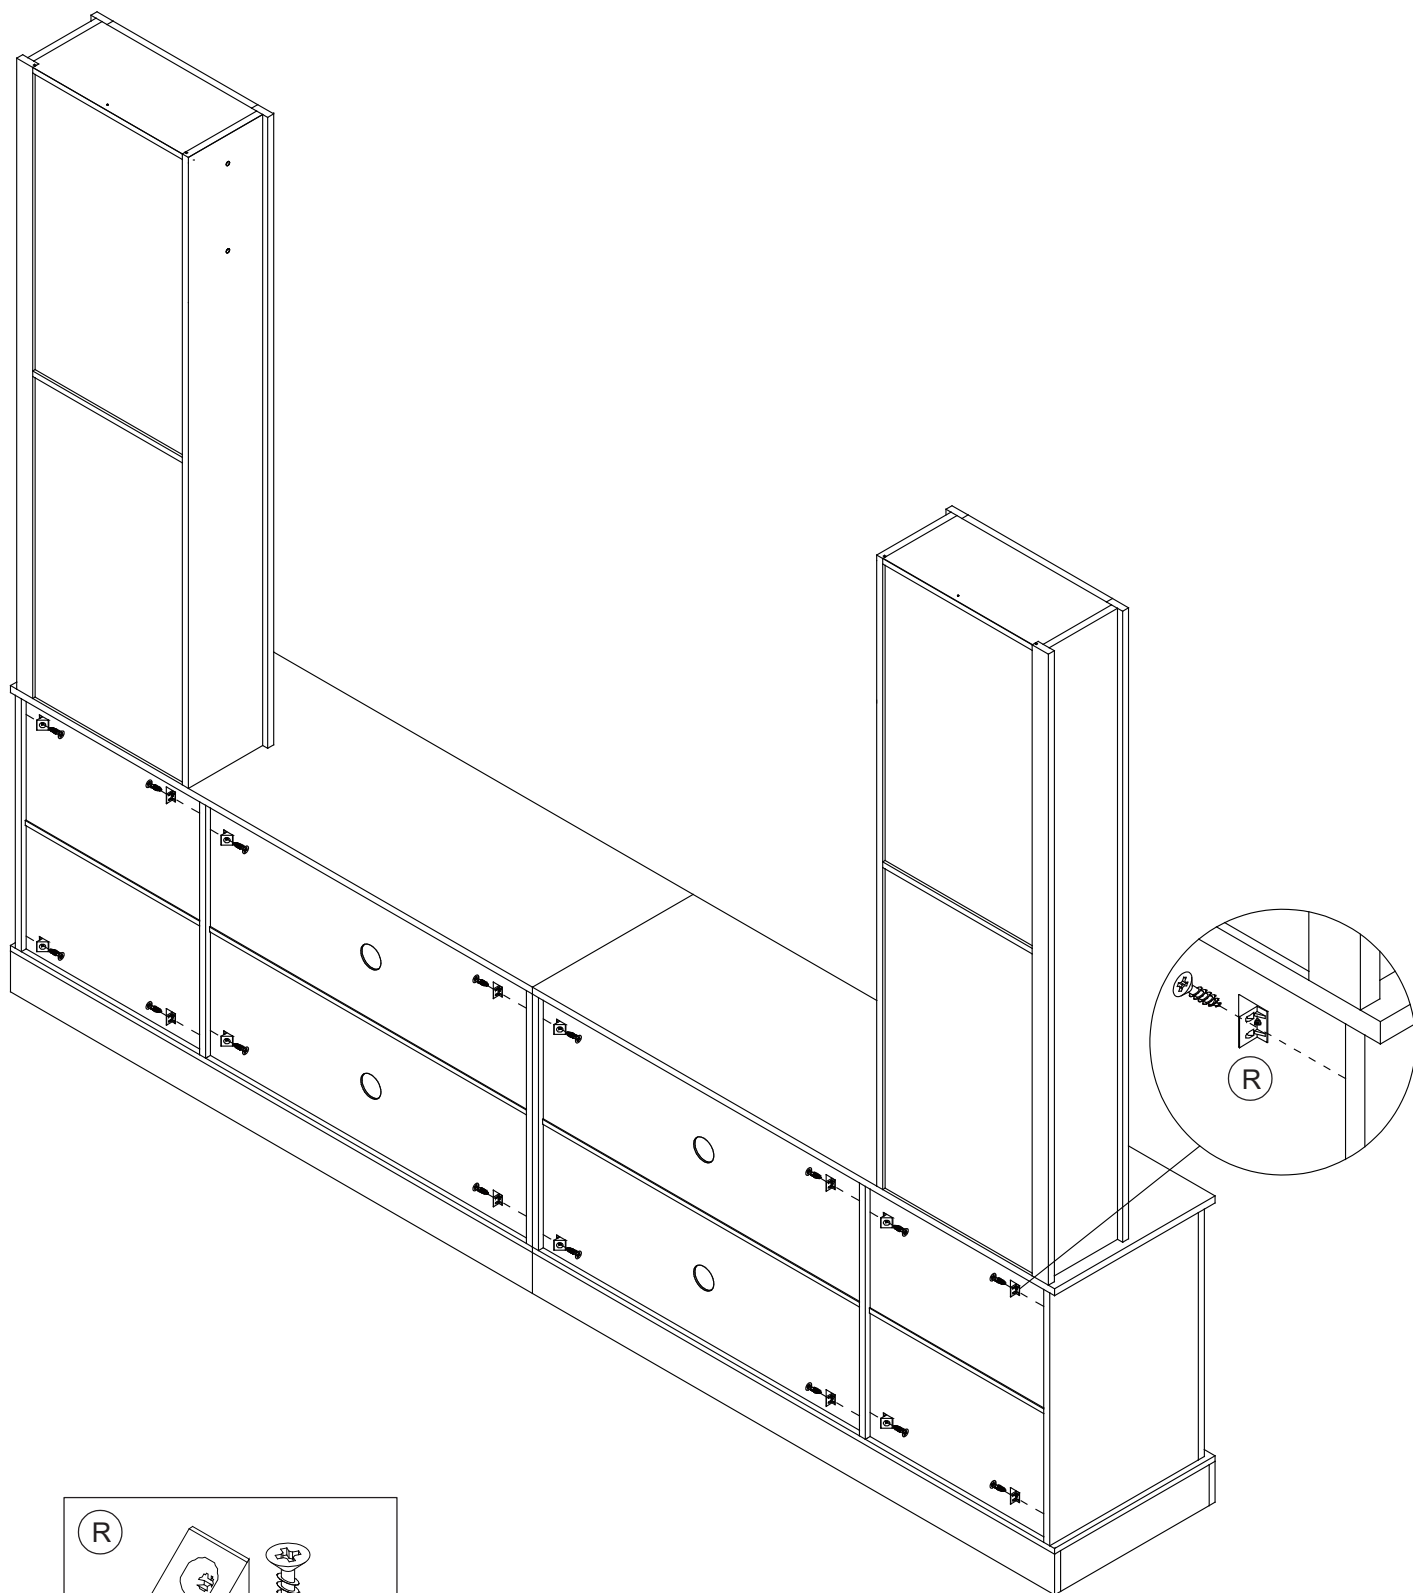


Assembly Instructions

Step 38


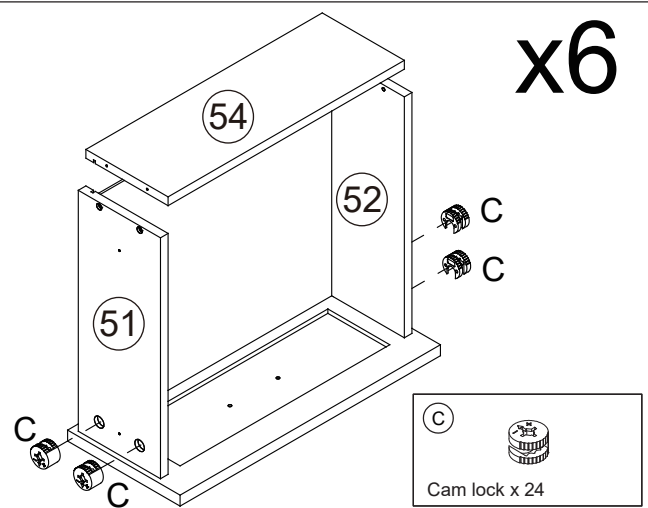
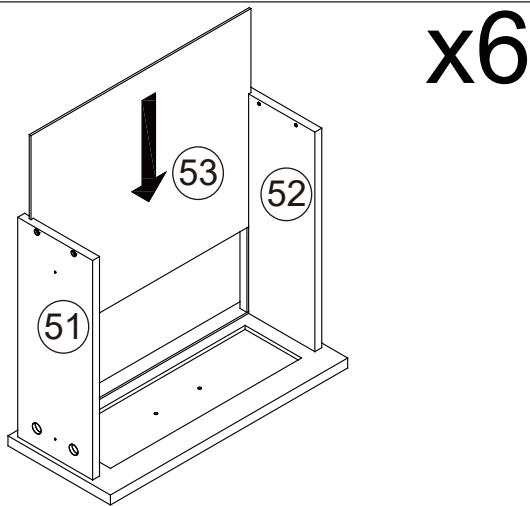
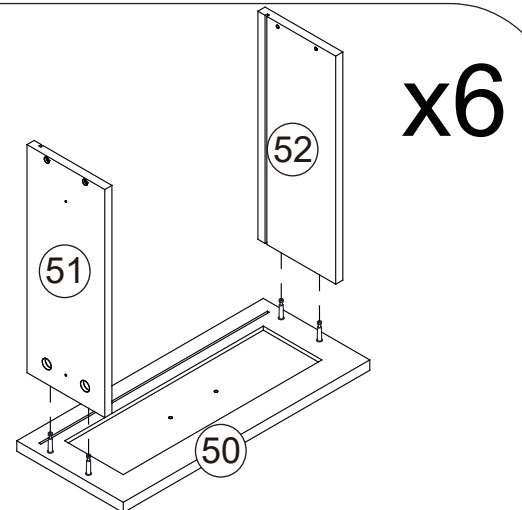
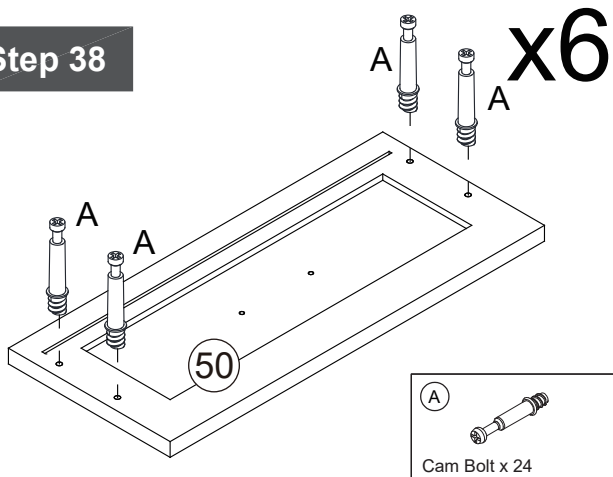


Step 39

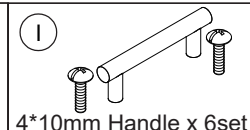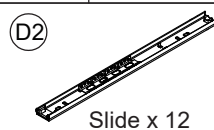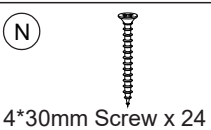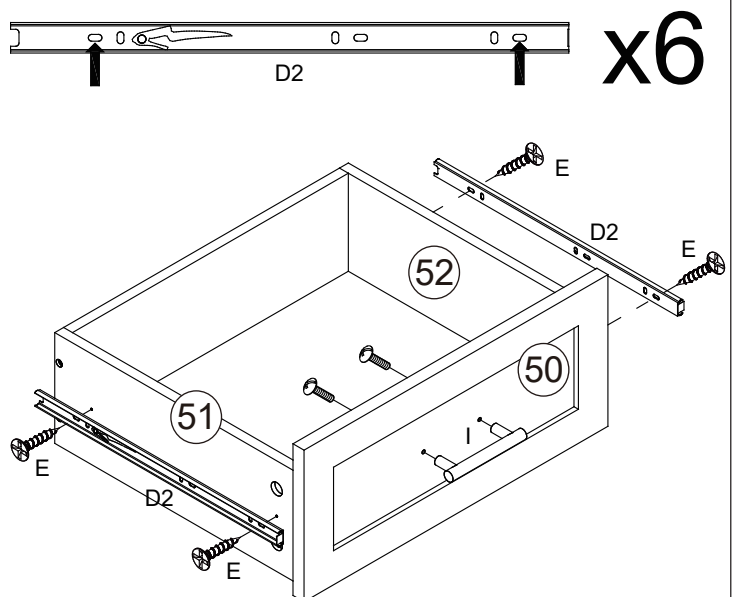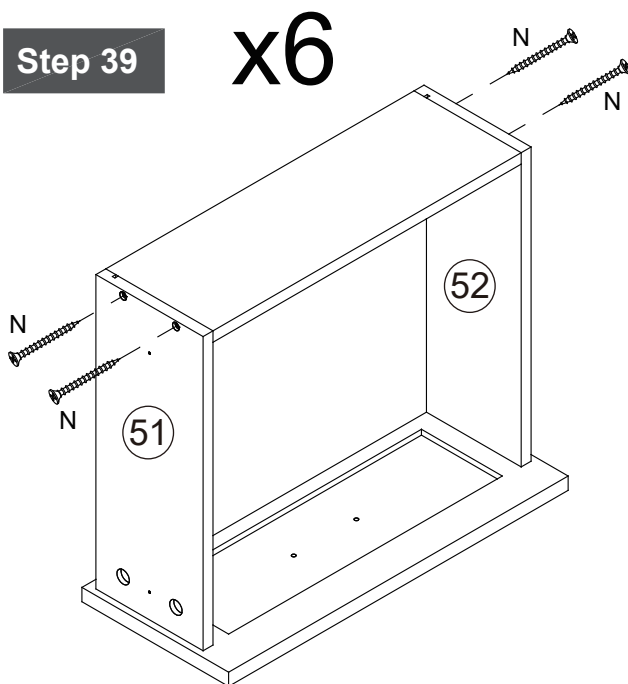

Assembly Instructions

Step 40

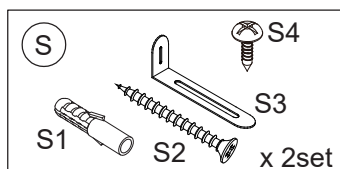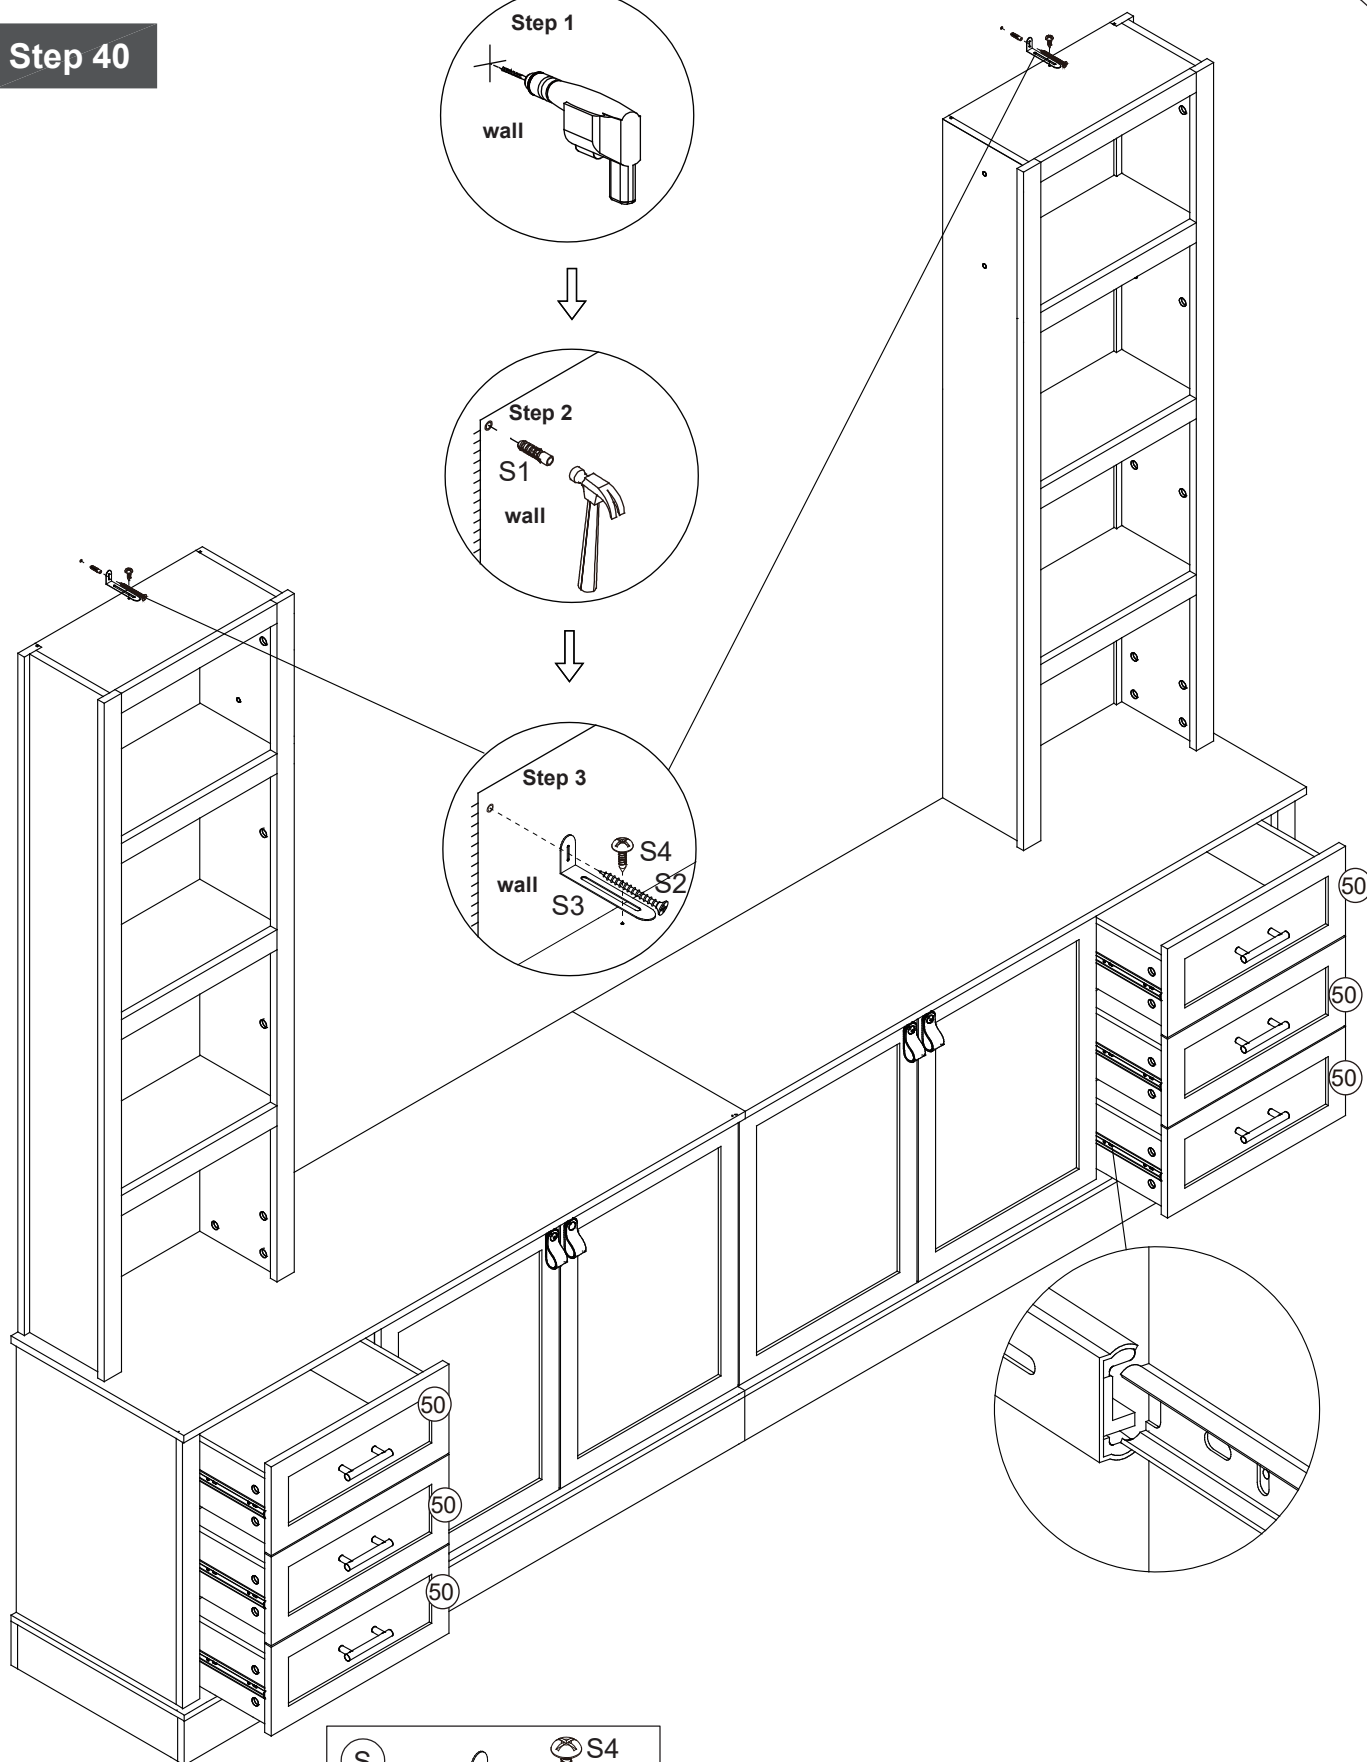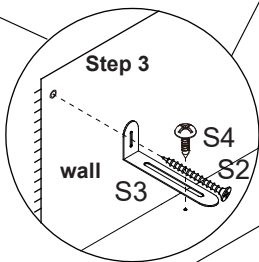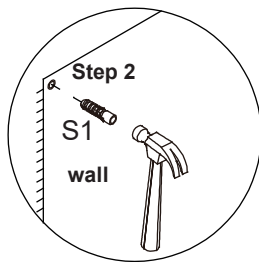
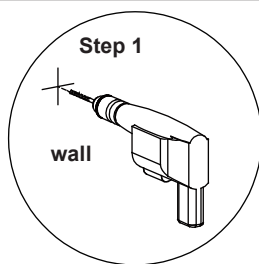


Assembly Instructions

Step 41

OPTIONS 1

There is 2 ways of installation.

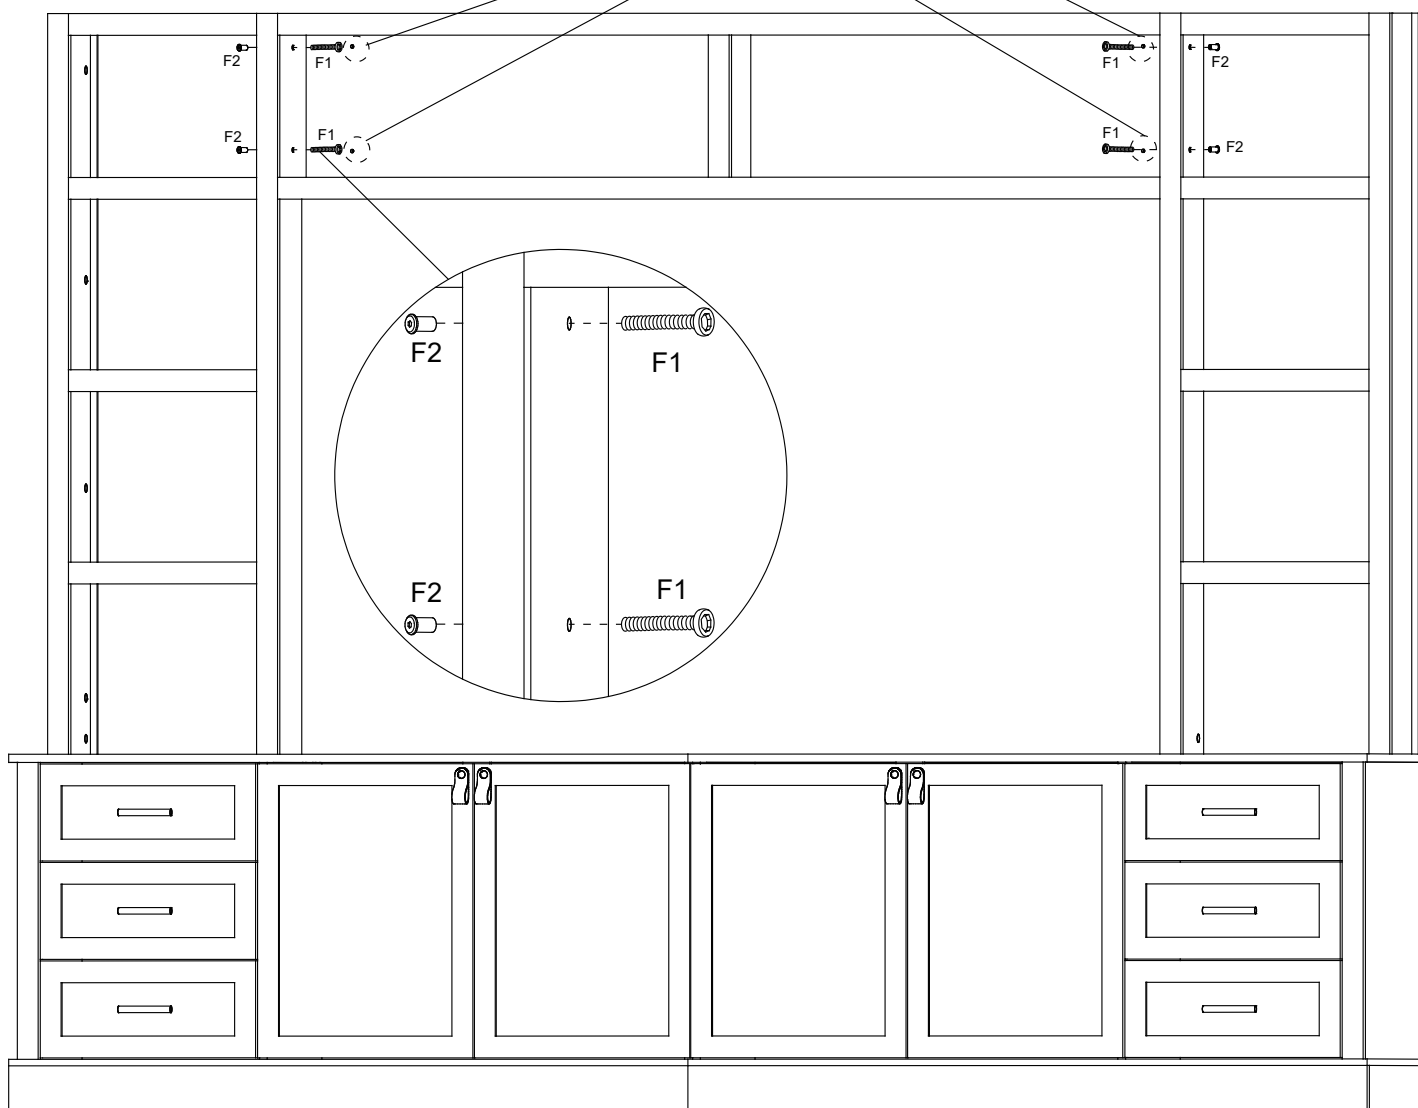
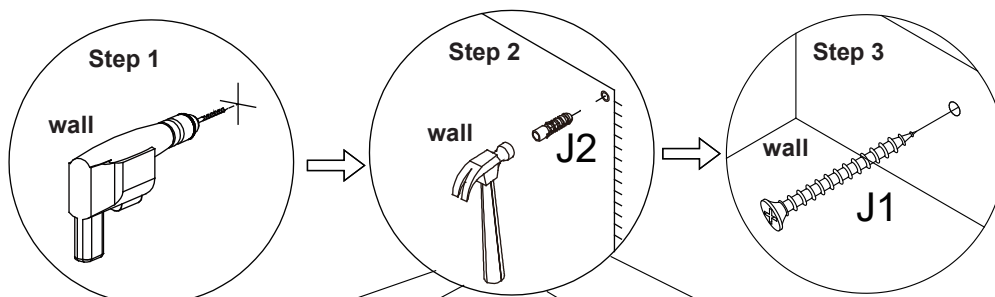


F F1 F2 6*25mm Screw x 4set	J J1 J2 x4
---	----------------------------



Assembly Instructions

Step 41


OPTIONS 2

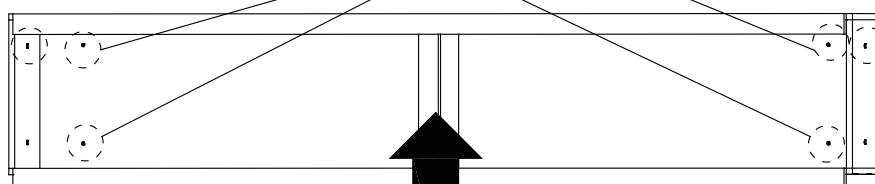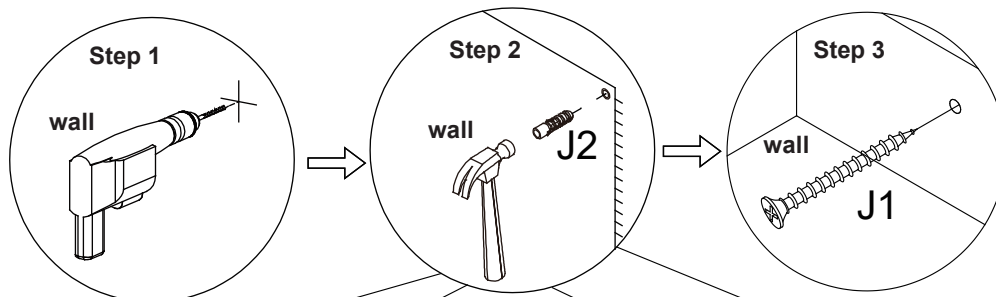

Can be fix on wall separately on height needed.

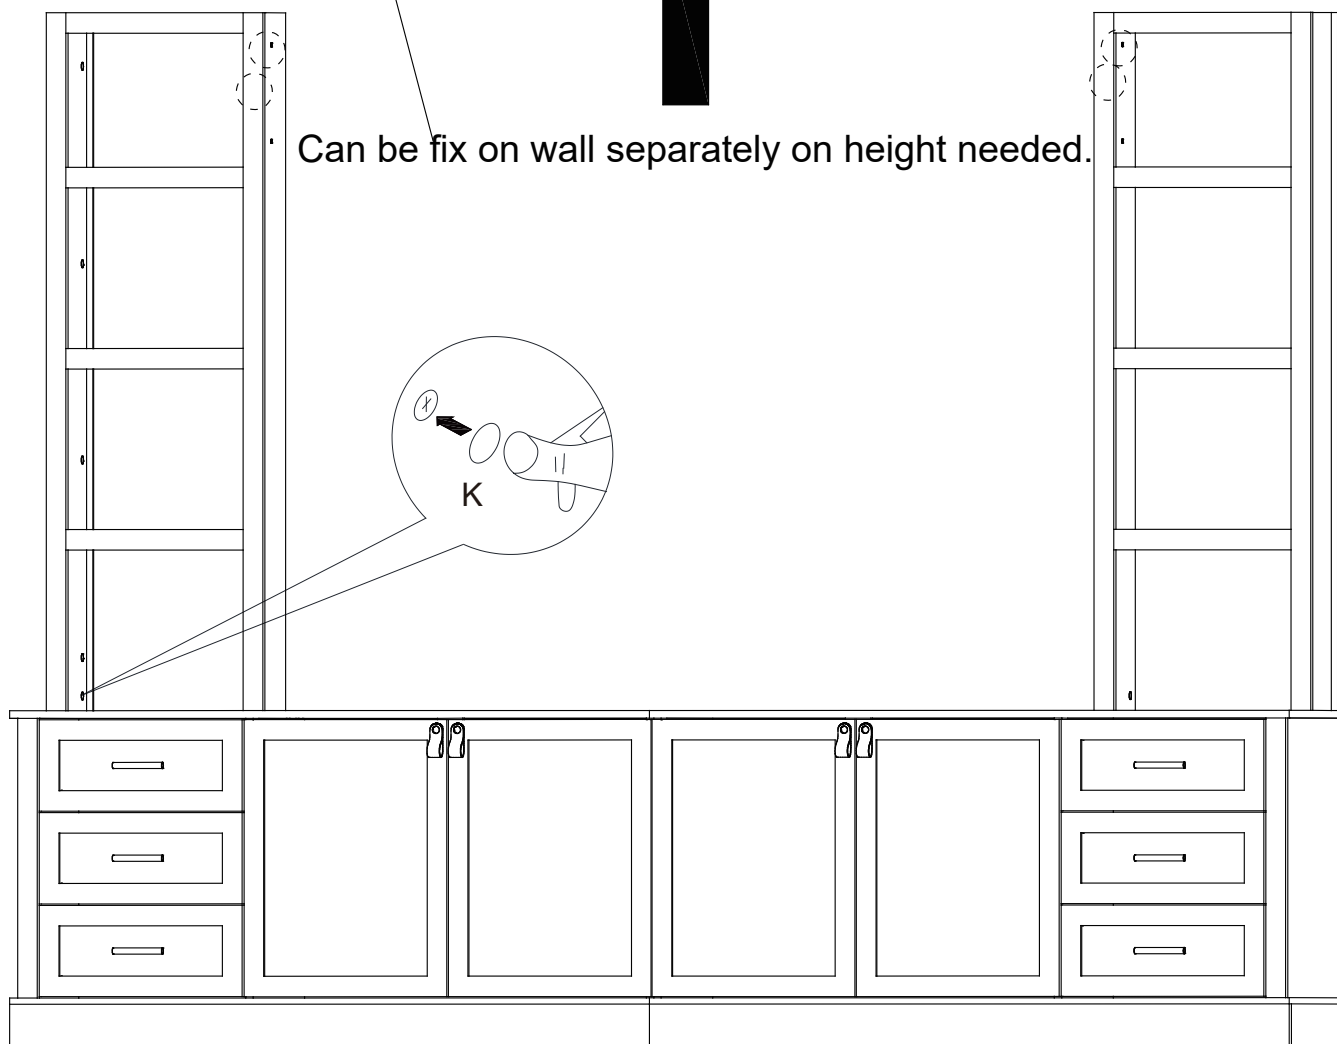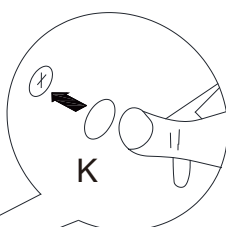

(J)



x4

(K)



Perfect fit x 100

Assembly Instructions

Finish

