
## YTP-421#

## Bathroom cabinet sample

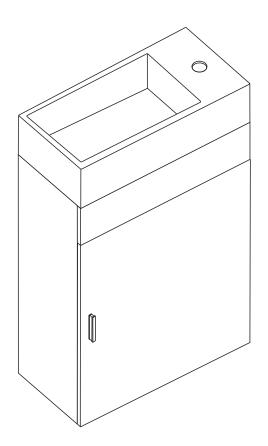






L800\*W480\*H415MM

## **Installation Instructions**


Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

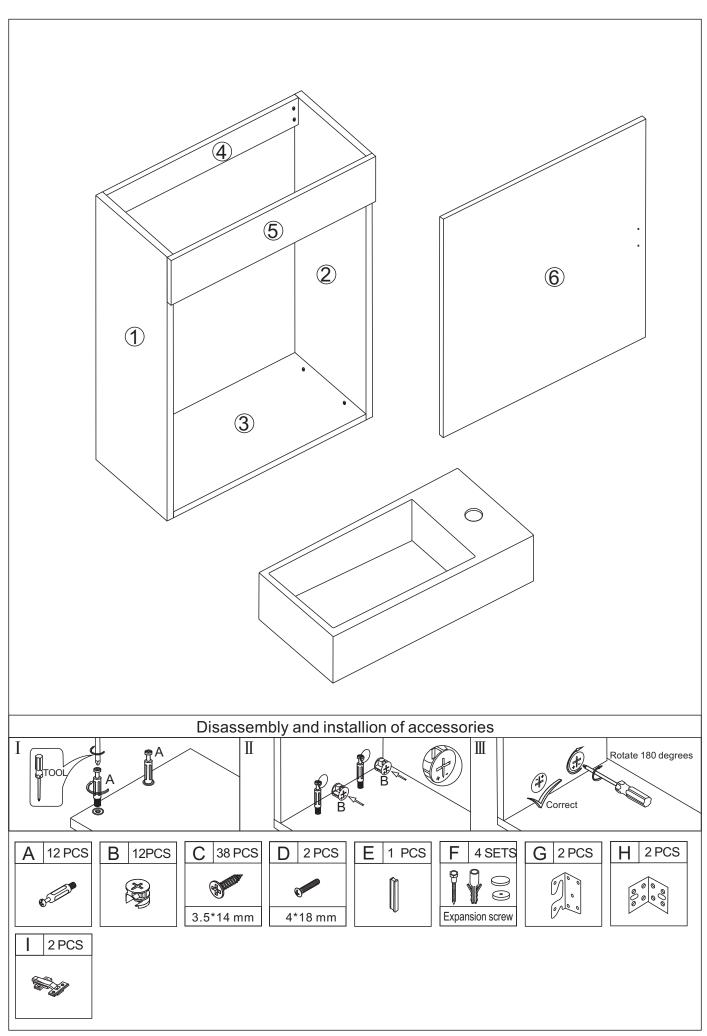

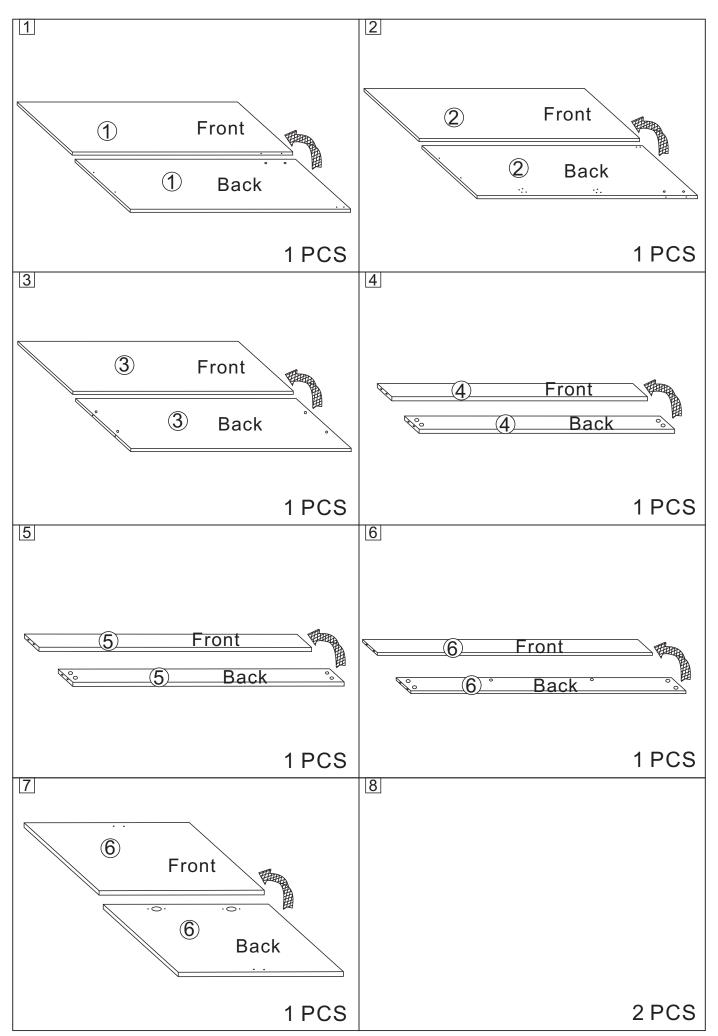


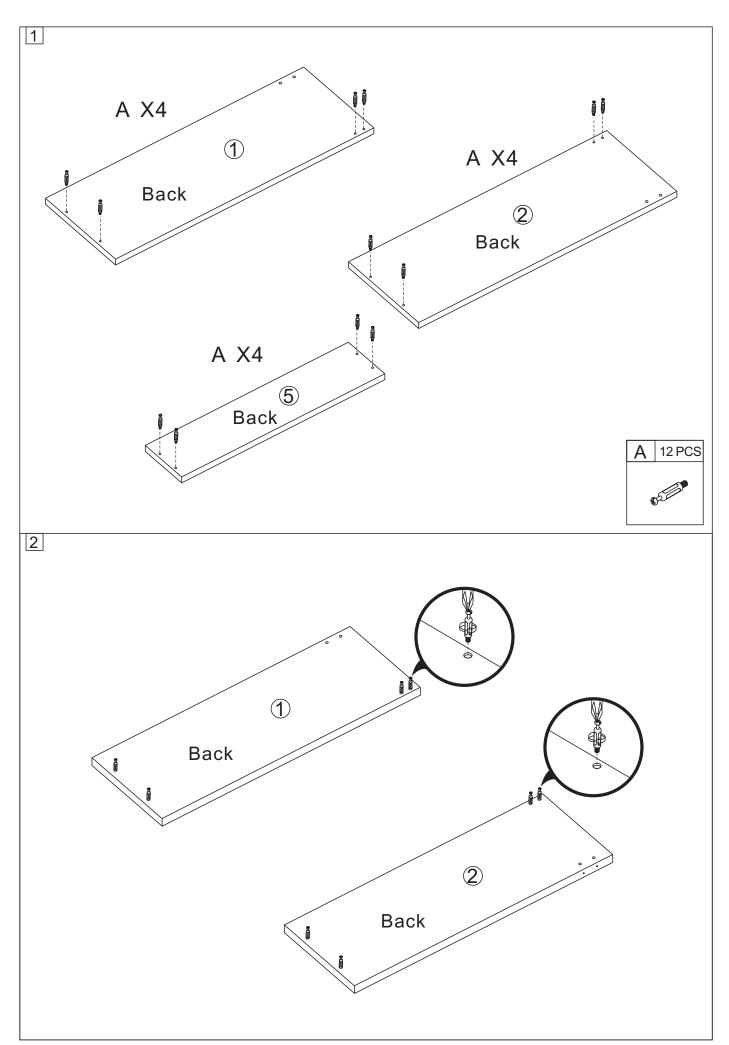


3 Pages

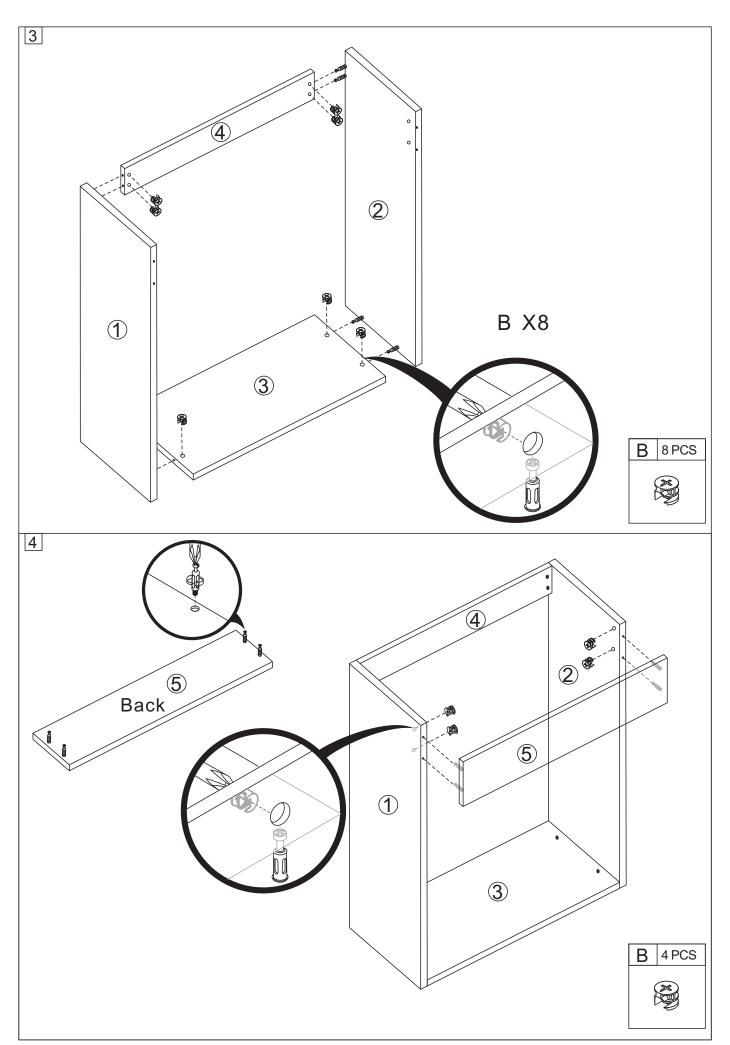


4 Pages

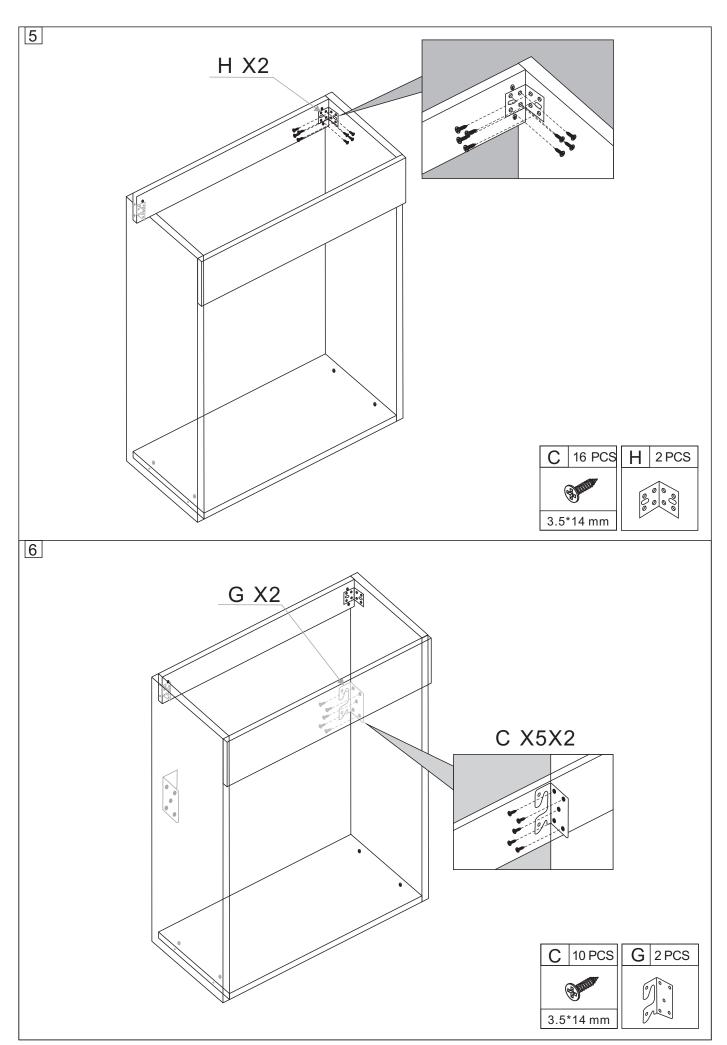


5 Pages

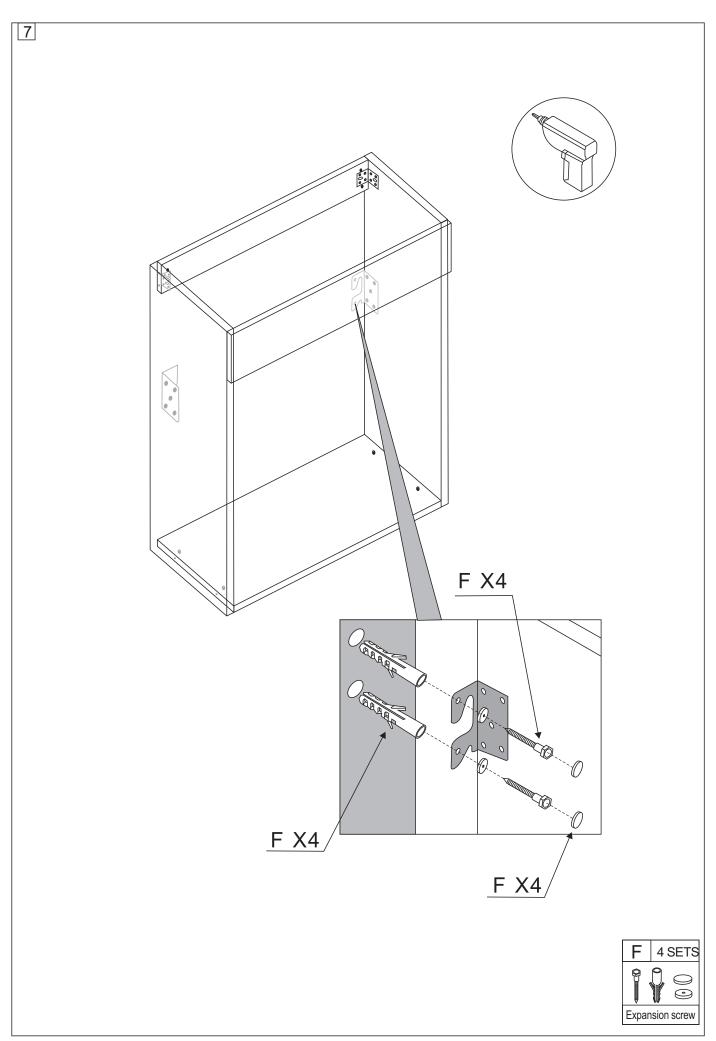

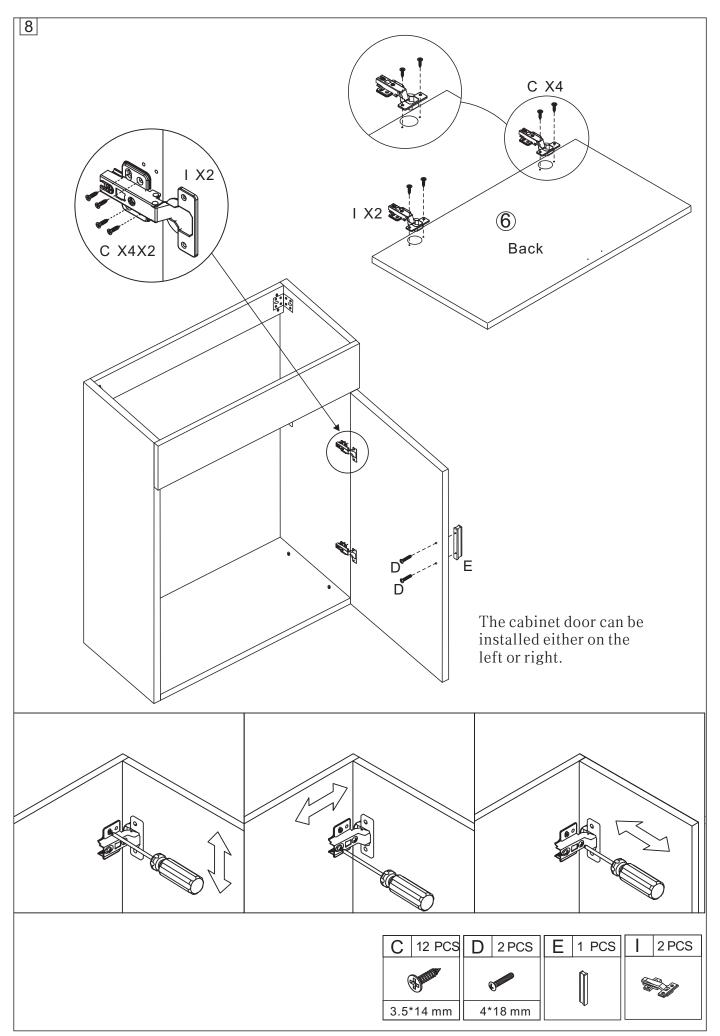

9

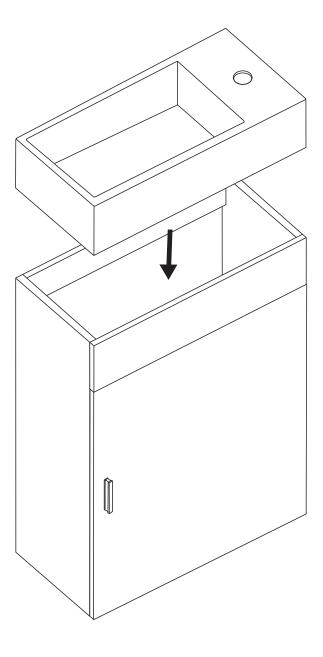

OK