## **Mounting Instructions** Hardware List Description Pic Qty No. Dimension SCHXD006-HTS-80CM Name: Hexagon screw M6\*50MM 8 Α Black White Walnut Natural В Hexagon screw M6\*38MM 4 Thank you for choosing our product! We're excited to have you as a Flat gasket M6\*13MM С 0 12 customer. After unpacking, please take a moment to ensure all parts are present and match the list in the instructions. If you find any missin M4\*57MM -g parts or have any questions, please don't hesitate to reach out to D Hexagon wrench us—we're always here to assist you. L-Shape 20 Ø6\*20\*16MM Ε Laminate Tray **Assembled Product** Part List Qty Description Pic No. 1 Flip Box 2 2 Active Shelf 3 Base Plate Left foot 2 4 2 5 Right foot Page:1-2

## Number: SHB005-Shoe Bench 80CM

## Step 1:


First assemble the left foot No. 4 and the right foot No. 5 with the No.1 flip box according to the picture, ensuring that the holes face the longest side, and fasten them together using hardware A/C/D.

Note: After unpacking, please check whether the product is complete.


Step 2:

As shown in the figure, connect the No. 3 base plate with the No.4/5 foot

columns using hardware D/B/C.

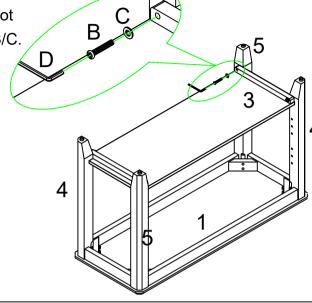

## Step 3:

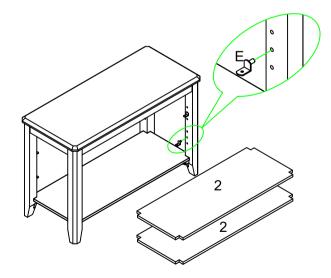

Note: Attach hardware E to the foot columns as illustrated, and then place the No. 2 movable laminate in the position indicated.

Step 4:

Completing the Installation!!!



Page 2 of 2