














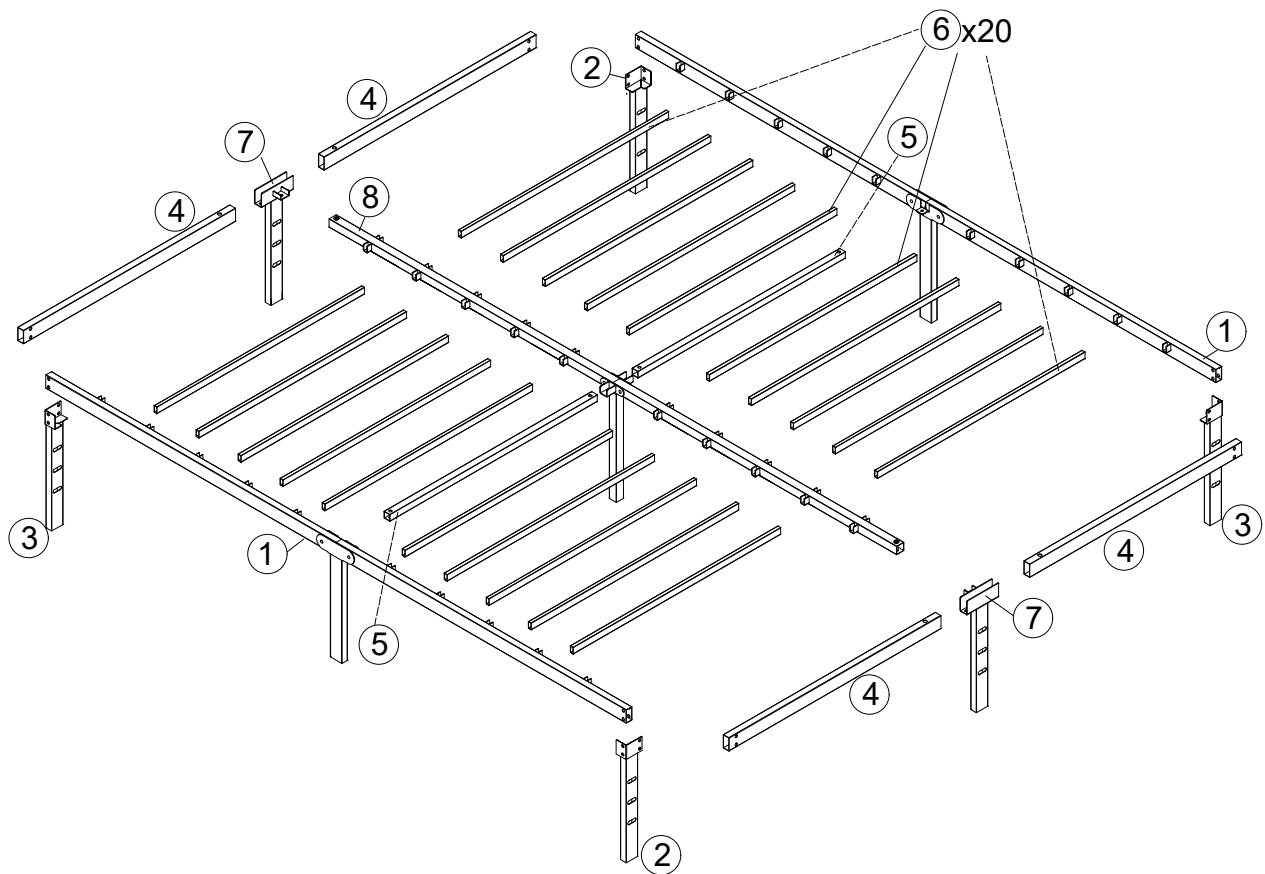


ASSEMBLY INSTRUCTION

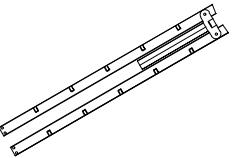

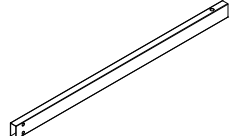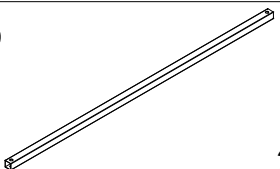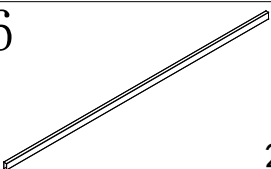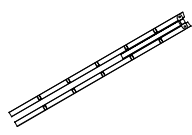
HARDWARE NOTE :



1. Assembly requires two or more people.
2. Do not tighten the bolts too tightly until the installation is complete. Ensure all bolts are securely tightened before using the bed frame.

Components


1  2pcs	2  2pcs	3  2pcs	4  4pcs
5  2pcs	6  20pcs	7  2pcs	8  1pc
A  M6*15mm 8pcs	B  M6*15mm 8pcs	C  M6*30mm 4pcs	D  M6*35mm 8pcs
E  2pcs	F  M8*35mm 2pcs	G  M8*50mm 4pcs	

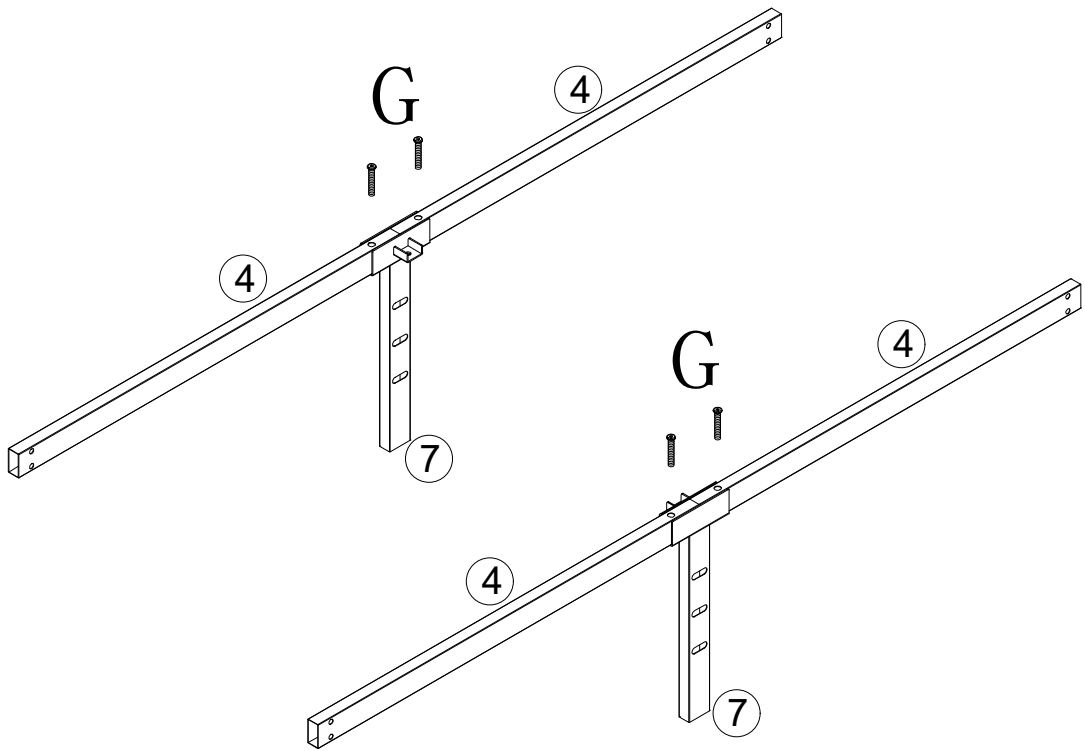


STEP 1




G	E
	
M8*50mm 4PCS	1PC

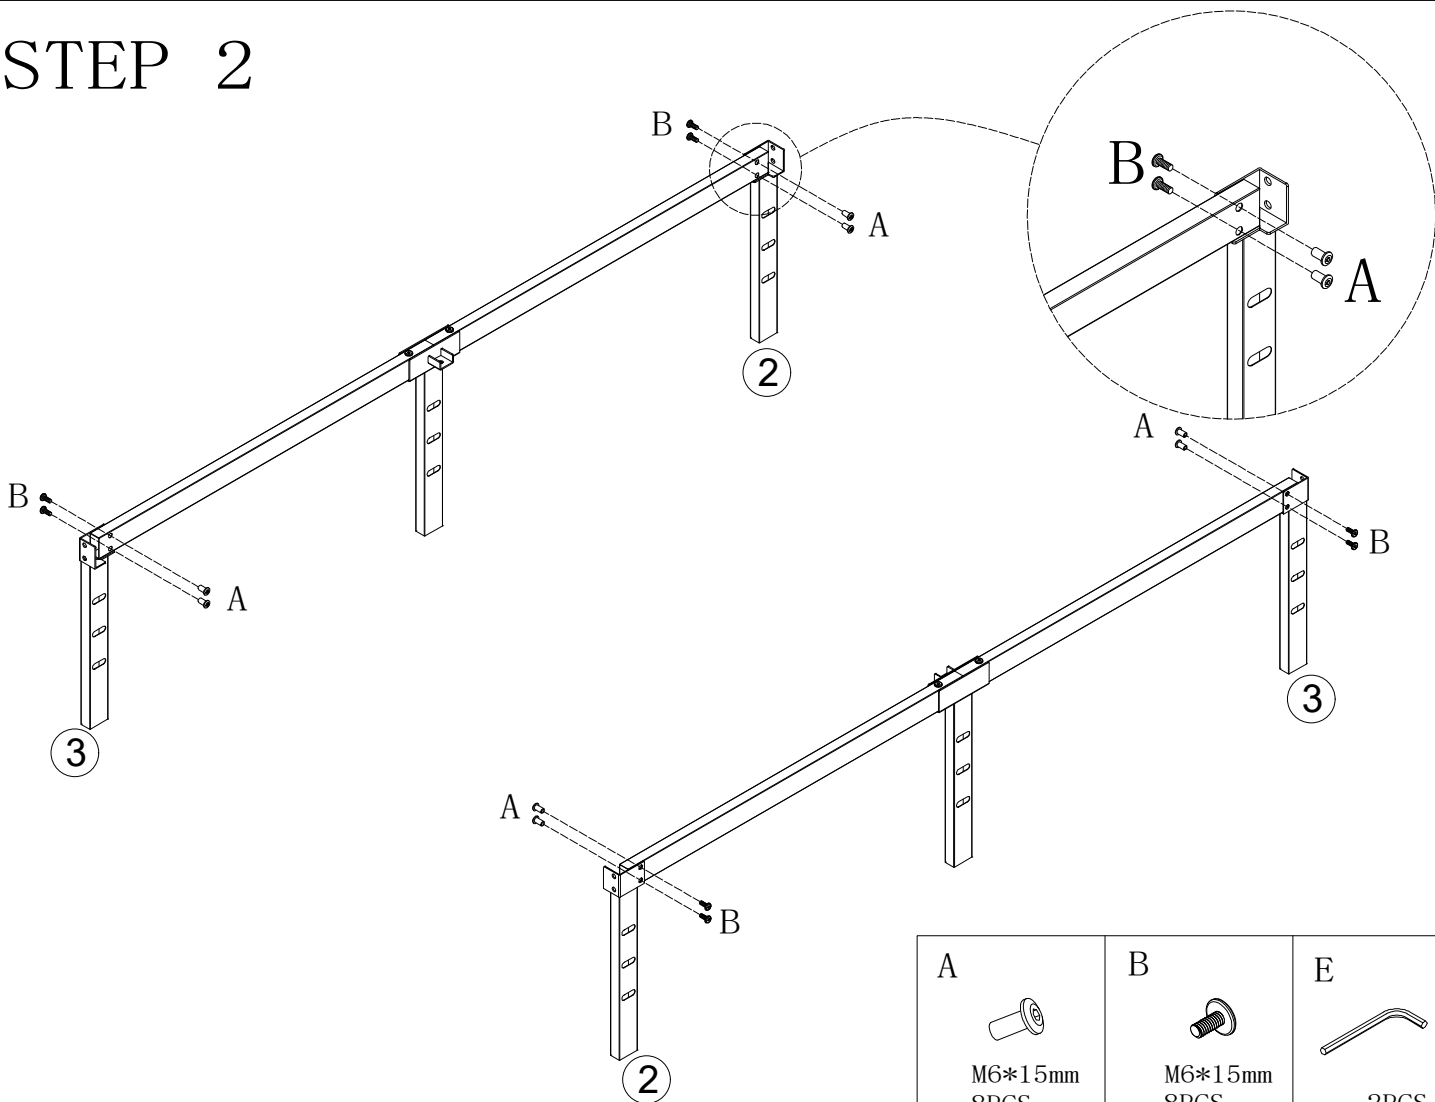STEP 2




A	B	E
		
M6*15mm 8PCS	M6*15mm 8PCS	2PCS


STEP 3

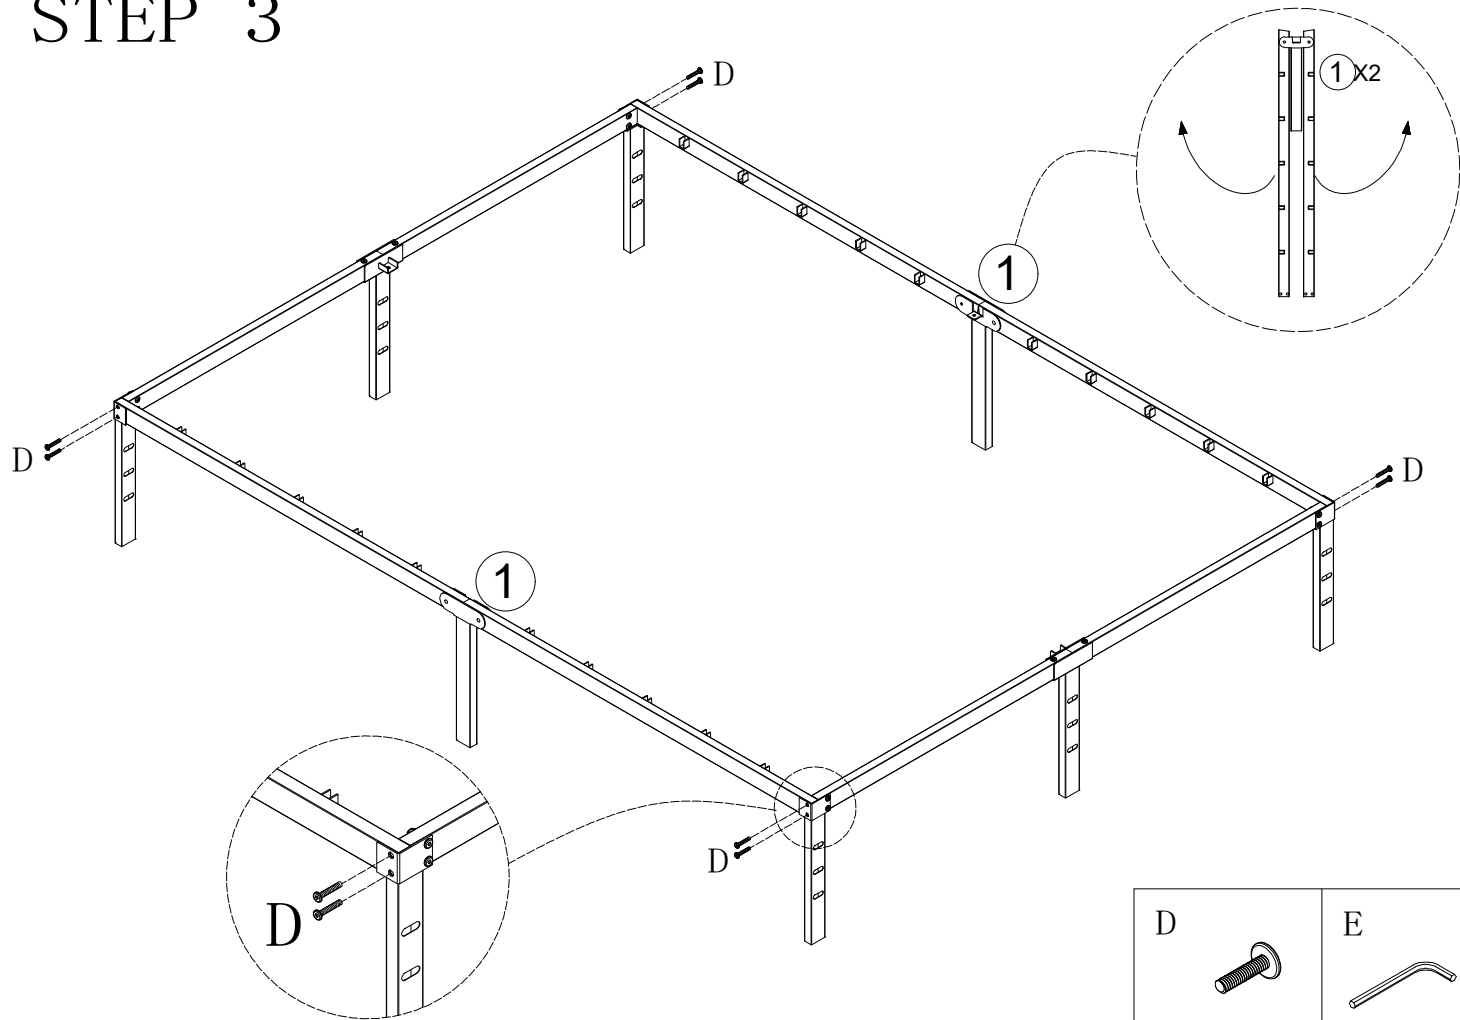

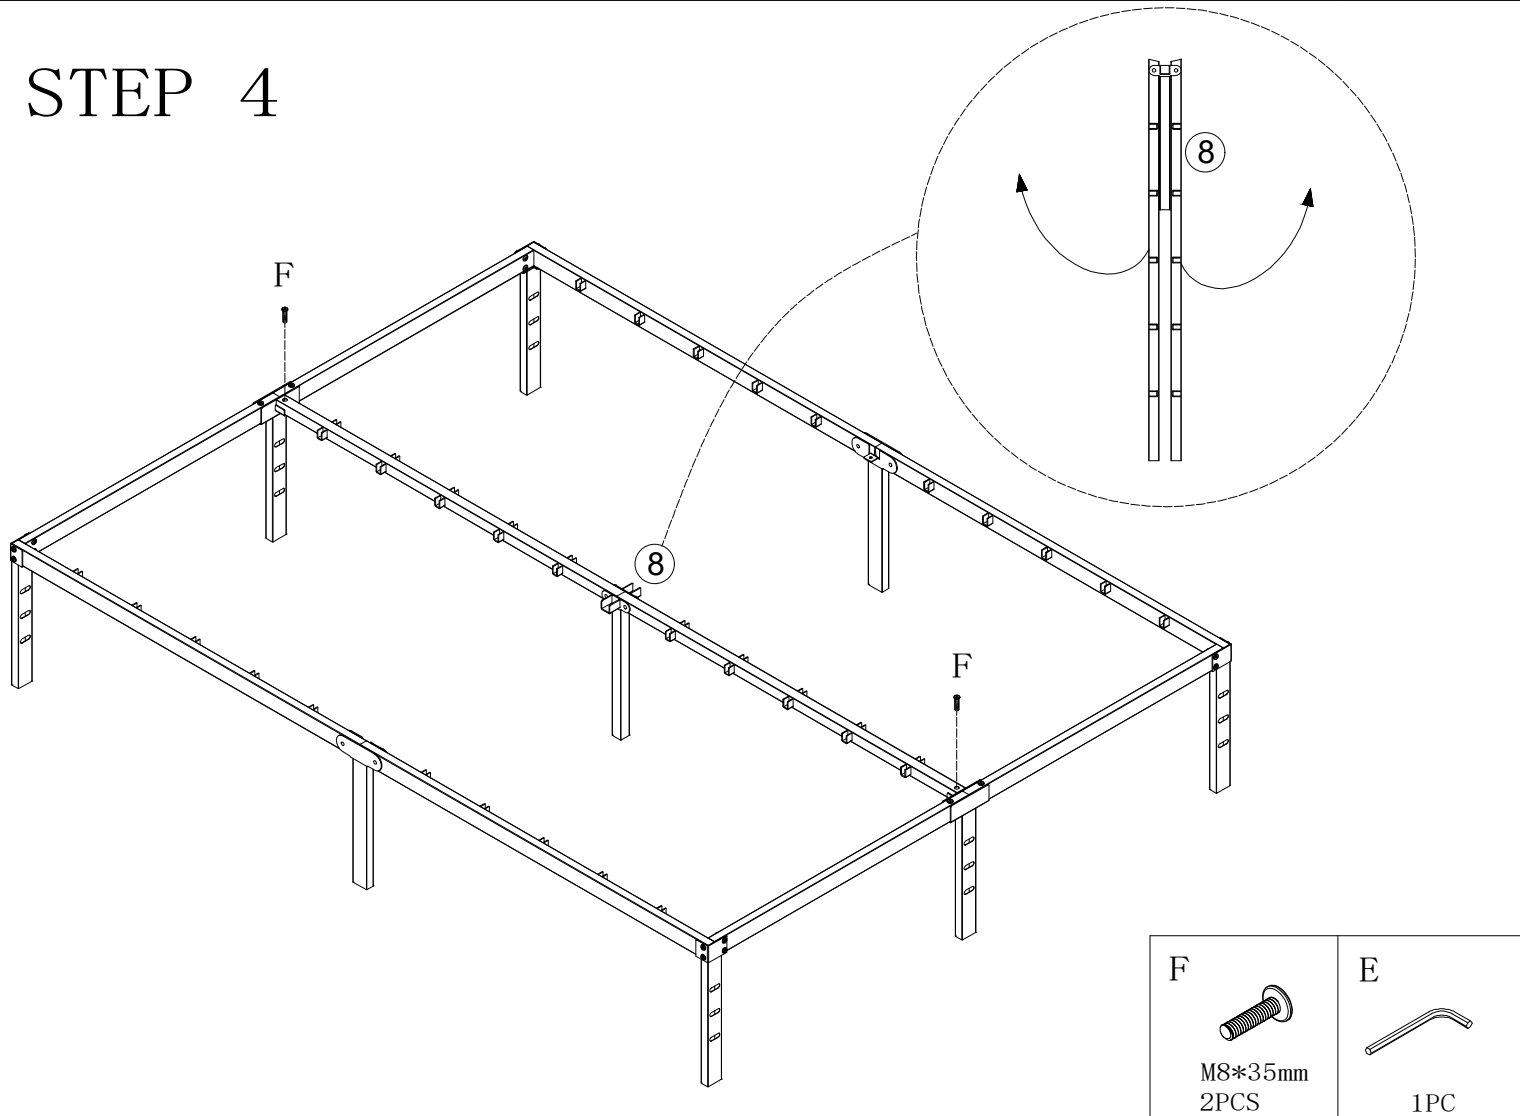

STEP 4

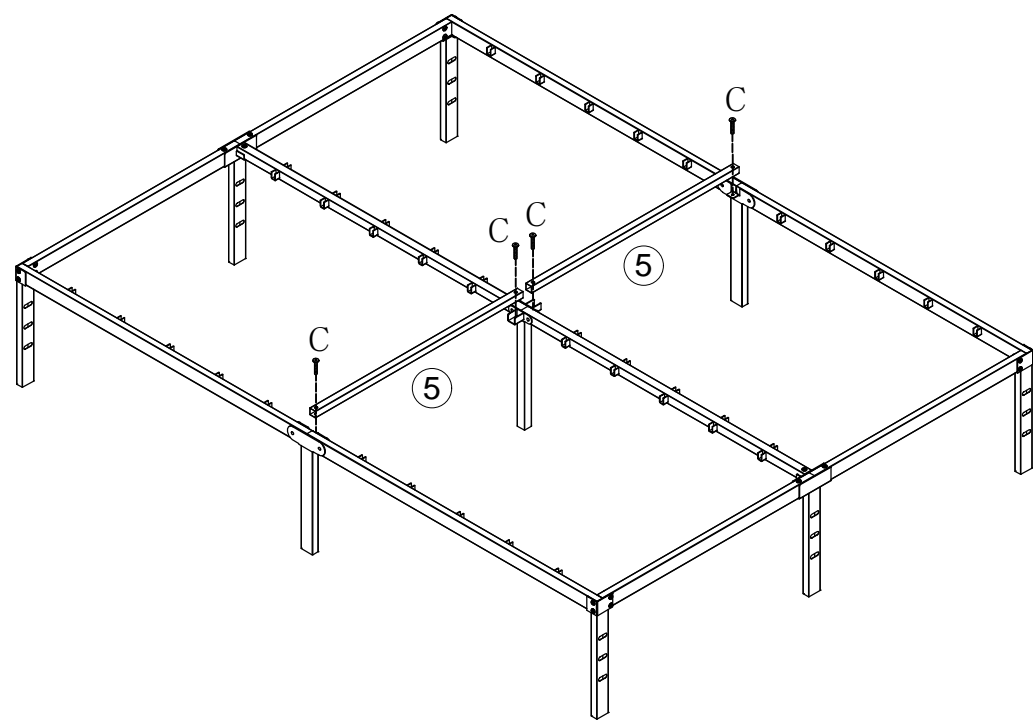


STEP 5




C	E
	
M6*30mm 4PCS	1PC

STEP 6

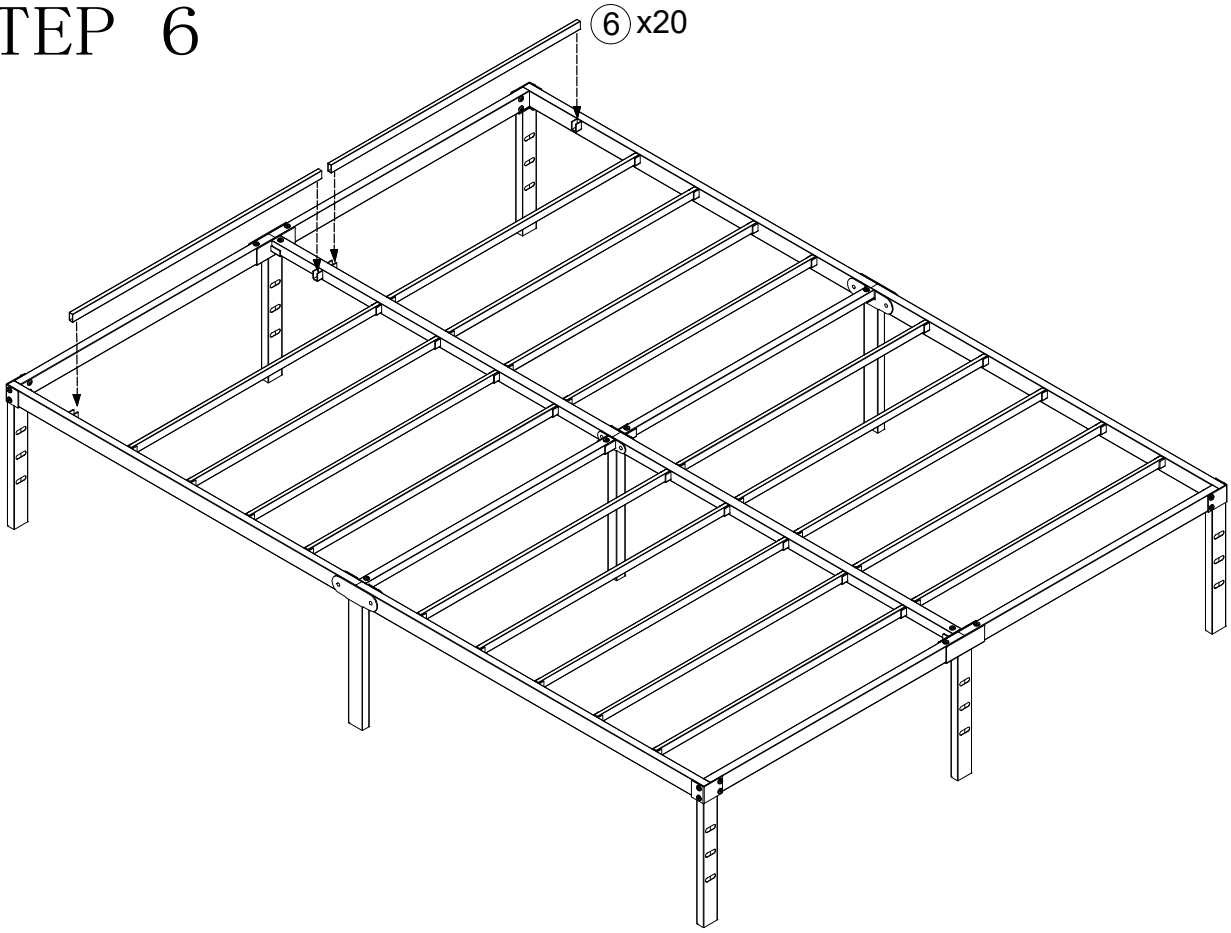

Note:Now you can tighten all the bolts

Finished

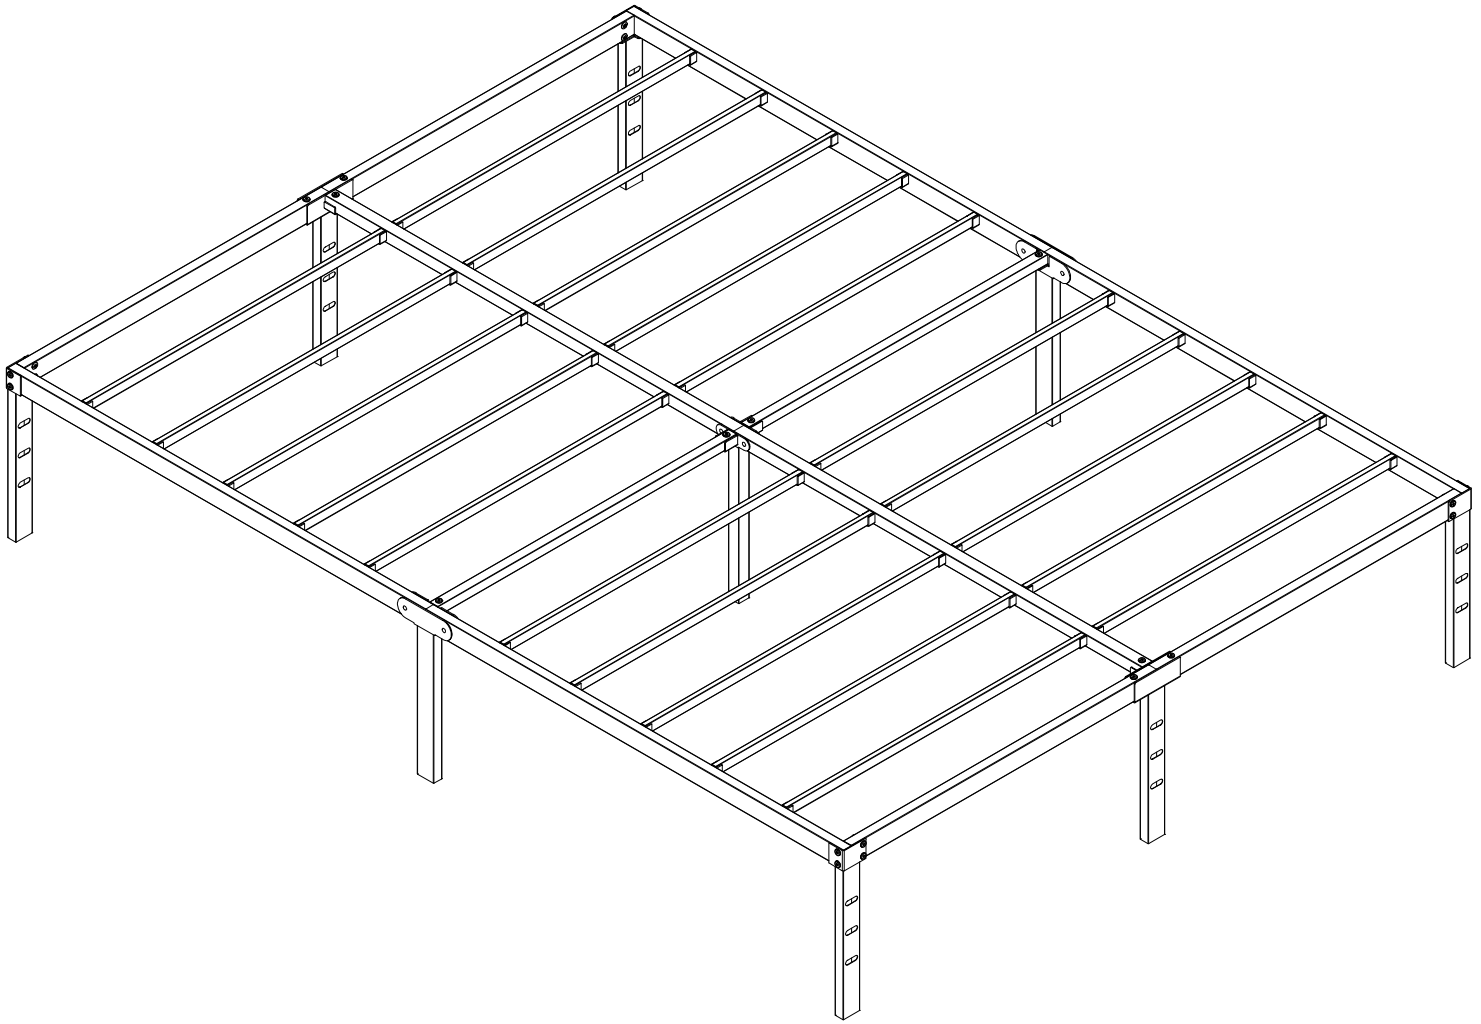

We are absolutely thrilled that you've chosen us to be the newest part of your home, and we hope you are as excited as we are!

" Home is not a place...it's a feeling."