










CROSLEY

FURNITURE

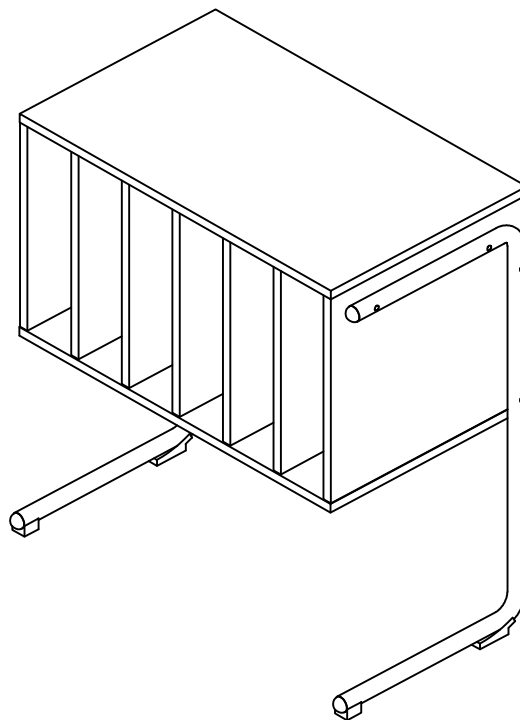







Record Player Stand CF1180

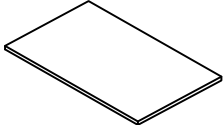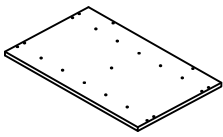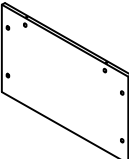

PARTS LIST


<div data-bbox="124 185 156 219">A</div> 	<div data-bbox="400 185 432 219">B</div> 	<div data-bbox="676 185 708 219">C</div> 	<div data-bbox="952 185 984 219">D</div> 	<div data-bbox="1228 185 1260 219">E</div> 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Side Partition Panel 4 PCS
<div data-bbox="124 539 156 573">F</div> 	<div data-bbox="400 539 432 573">G</div> 	<div data-bbox="676 539 708 573">H</div> 		
Middle Partition Panel 1 PC	Back Panel 1 PC	Side Leg 2 PCS		

HARDWARE LIST

<div data-bbox="124 974 156 1008">#1</div>  <div data-bbox="177 1133 312 1155">1/4"*38mm</div>	<div data-bbox="400 974 432 1008">#2</div>  <div data-bbox="472 1133 576 1155">7*38mm</div>	<div data-bbox="676 974 708 1008">#3</div> 	<div data-bbox="952 974 984 1008">#4</div> 	<div data-bbox="1228 974 1260 1008">#5</div>  <div data-bbox="1294 1133 1398 1155">8*30mm</div>
Bolt 8 PCS (Extra 1)	Tapping Bolt 8 PCS (Extra 1)	Cam Bolt 12 PCS (Extra 1)	Cam Lock 12 PCS (Extra 1)	Wood Dowel 28 PCS (Extra 1)
<div data-bbox="124 1249 156 1283">#6</div> 	<div data-bbox="400 1249 432 1283">#7</div>  <div data-bbox="496 1402 536 1424">M4</div>	<div data-bbox="676 1249 708 1283">#8</div> 		
Cam Sticker 12 PCS (Extra 1)	Allen Wrench 1 PC	Safety Strap Kit 1 SET		

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Insert cam bolts (part #3) into pre-drilled holes of panels (parts A, B & C) using phillips head screwdriver.

Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

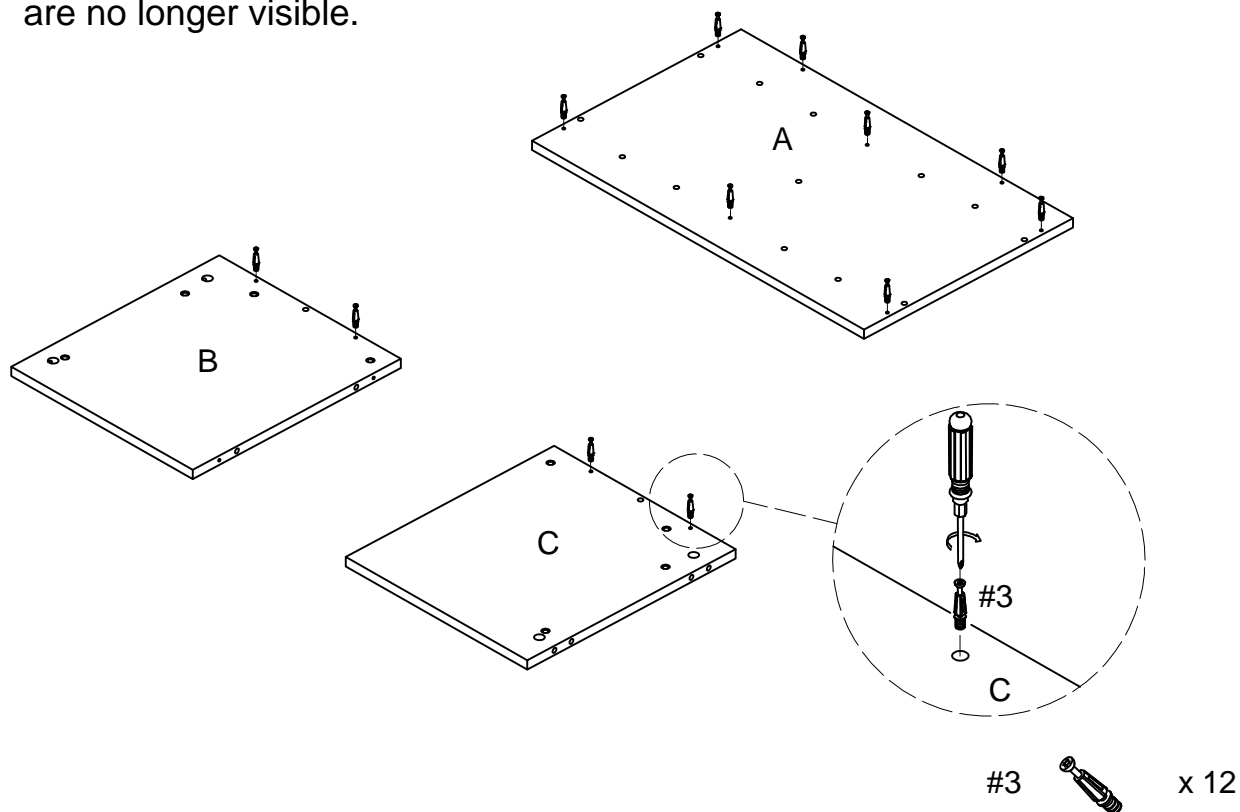



Step 2. Attach panels (parts B & C) to back panel (part G) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

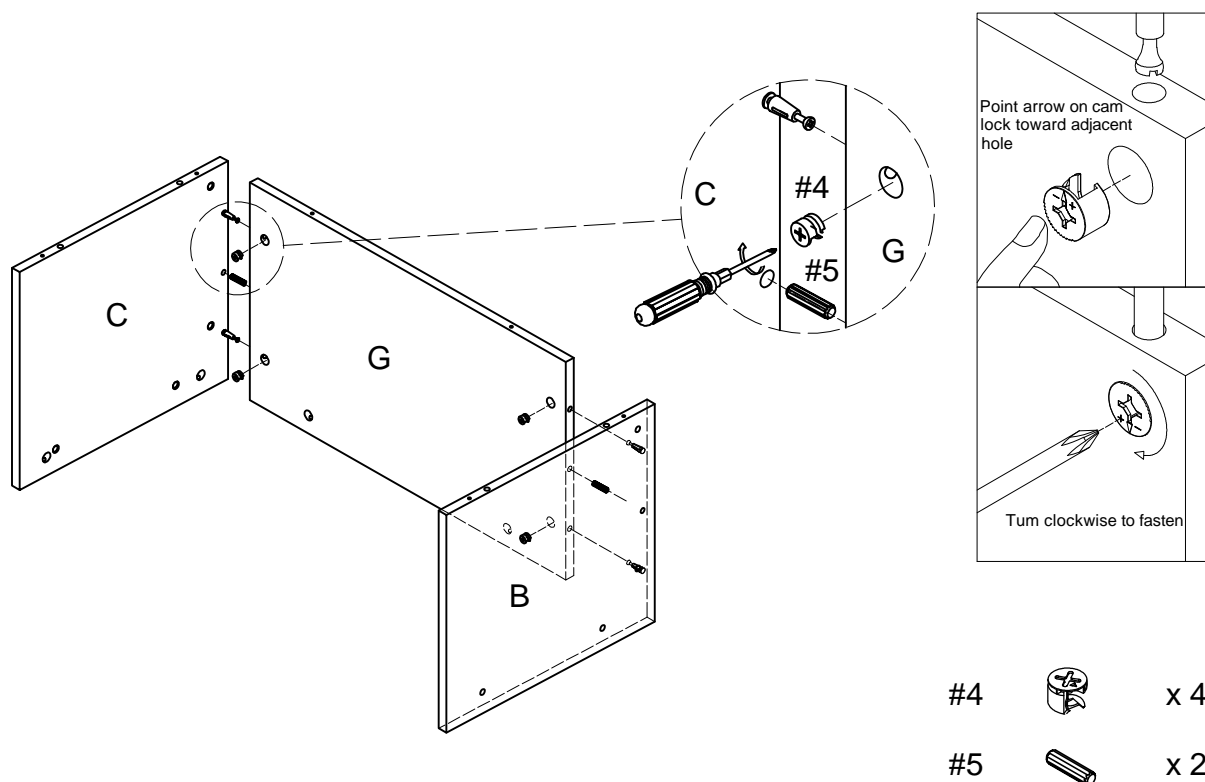

Step 3. Attach assembled unit (parts B, C & G) to top panel (part A) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

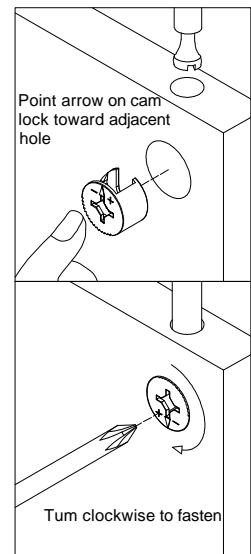
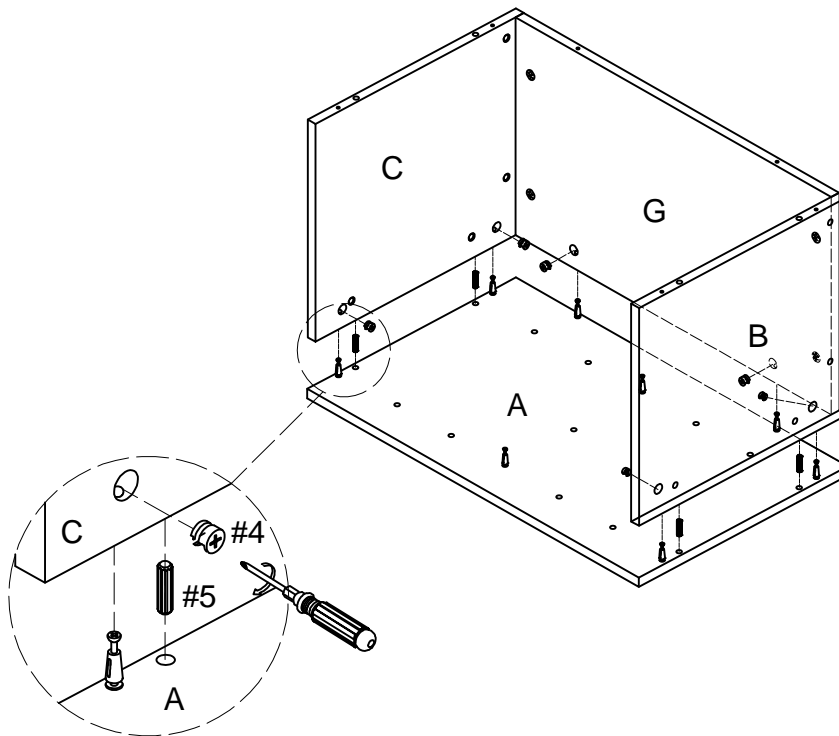


#4  x 6

#5  x 4

Step 4. Attach middle partition panel (part F) to top panel (part A) using cam locks (part #4), wood dowel (part #5) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

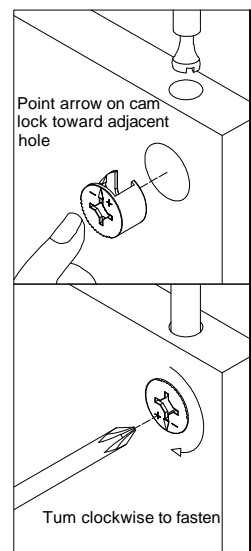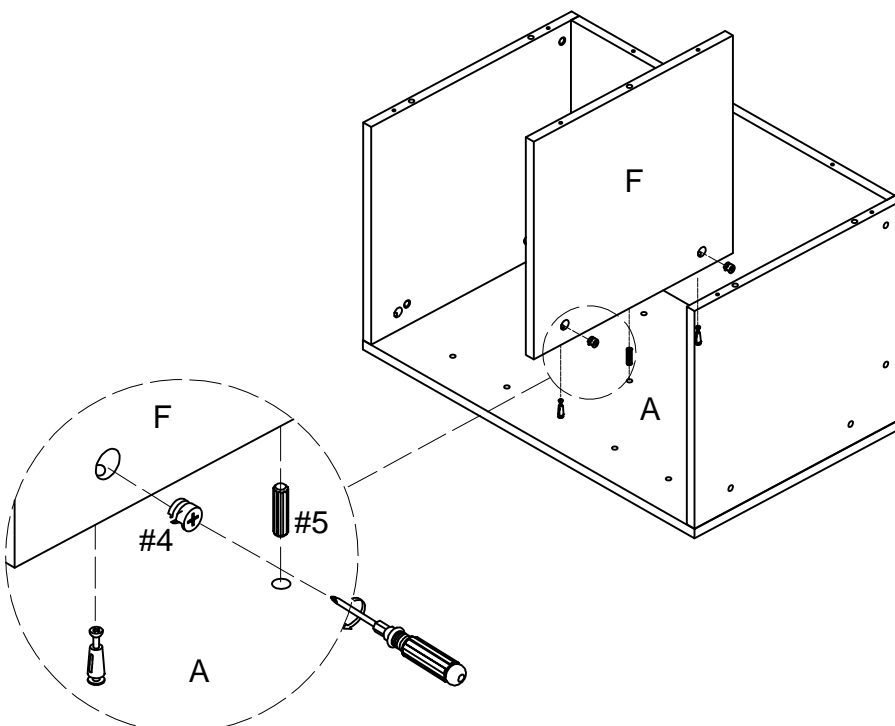

#4  x 2


#5  x 1

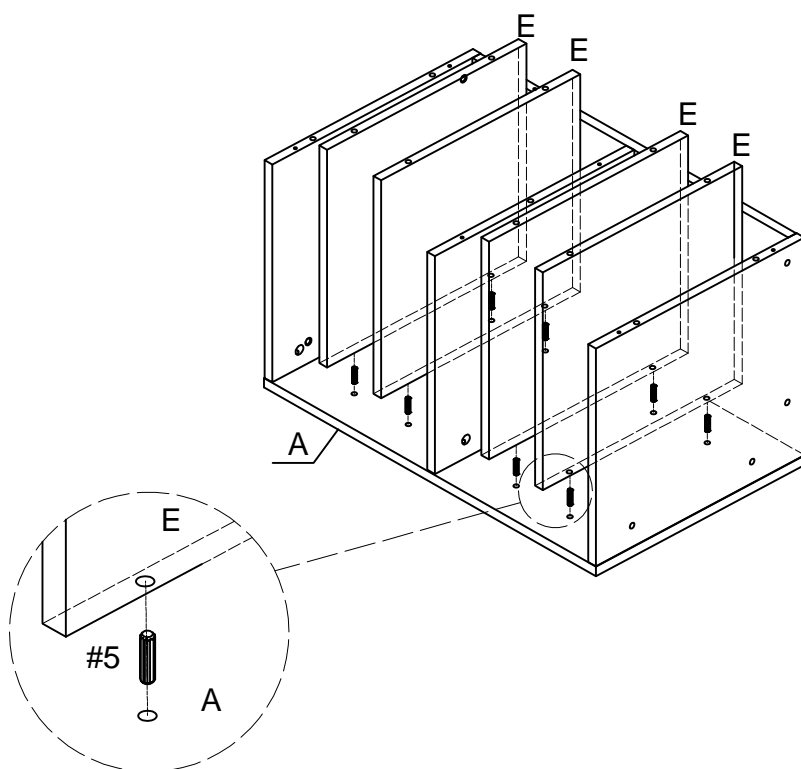


Step 5. Attach side partition panels (part E) to top panel (part A) using wood dowels (part #5).




#5  x 8

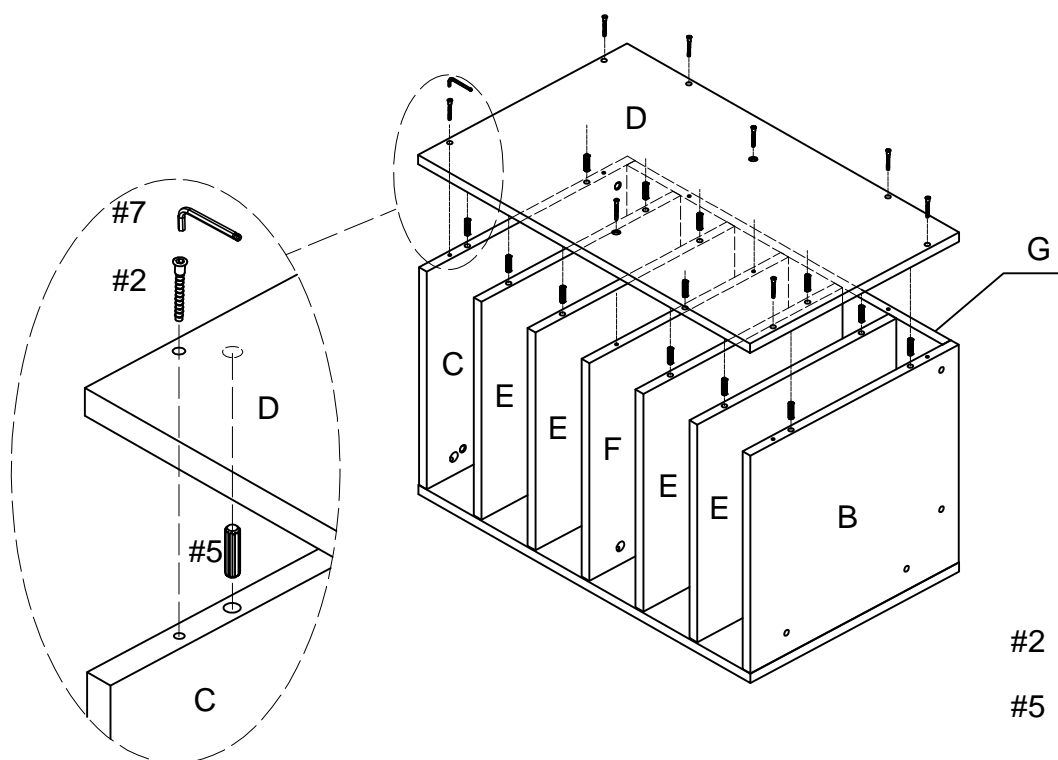Step 6. Attach bottom panel (part D) to assembled unit (parts B, C, E, F & G) using tapping bolts (part #2), wood dowels (part #5) and allen wrench (part #7).





#2  x 8
 #5  x 13
 #7  x 1

Step 7. Attach side legs (part H) to assembled unit (parts B & C) using bolts (part #1) and allen wrench (part #7).

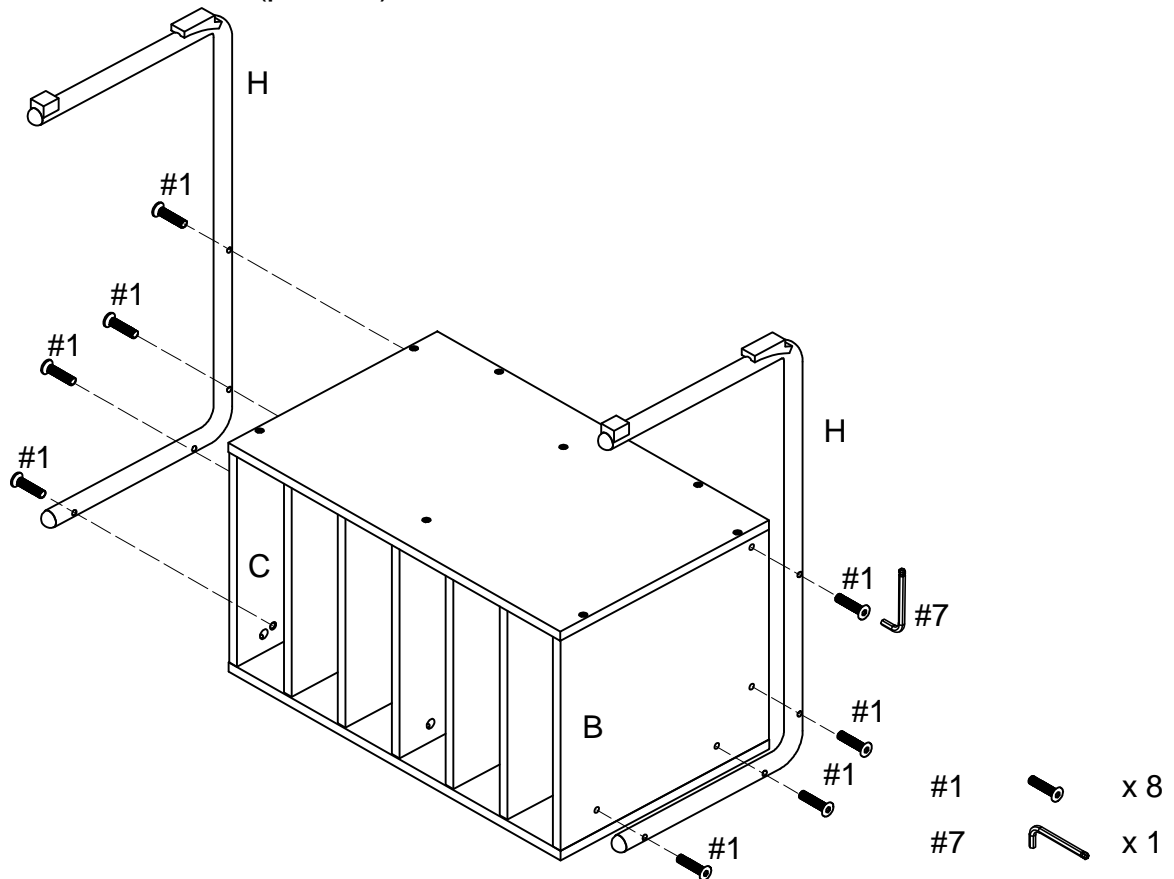




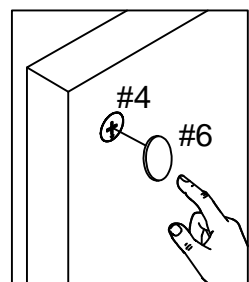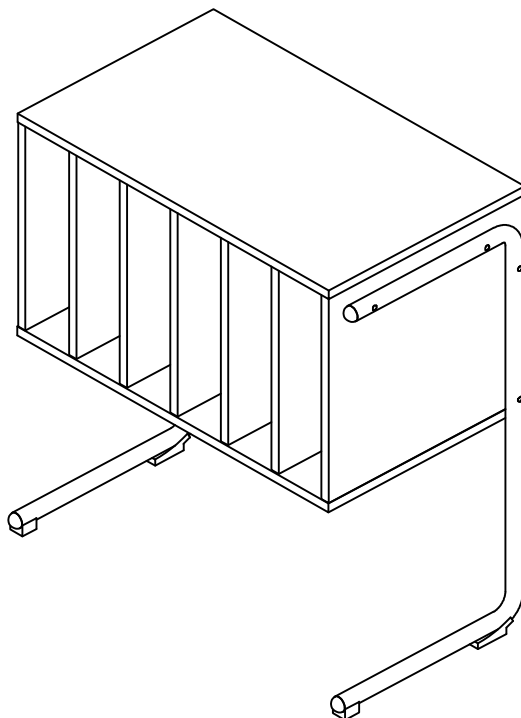


Step 8. Carefully turn unit upright. Using cam stickers (part #6) cover all cam locks (part #4).

Important: Safety strap kit (part #8) must be installed to prevent tipping damage and/or injury.

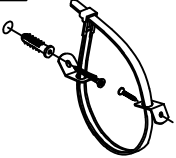

#6 x 12


#8	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 1 1/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

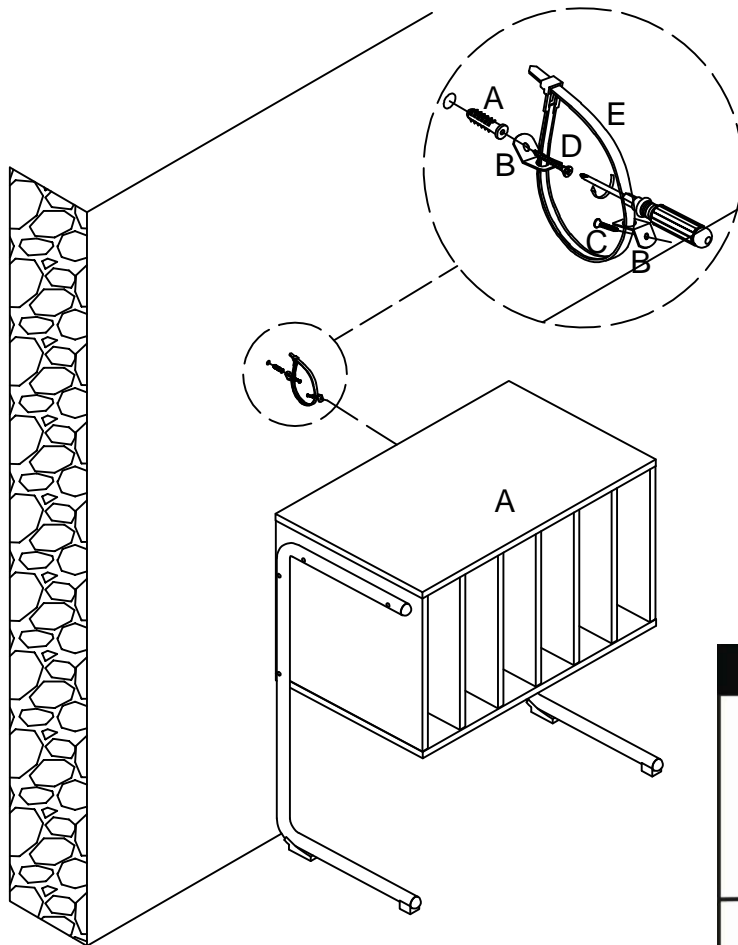

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



This is a permanent label.
Do not remove!