
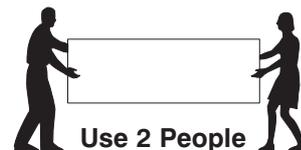


0258 Queen Bed

Assembly Instructions

WI-0425




1 Assembled View

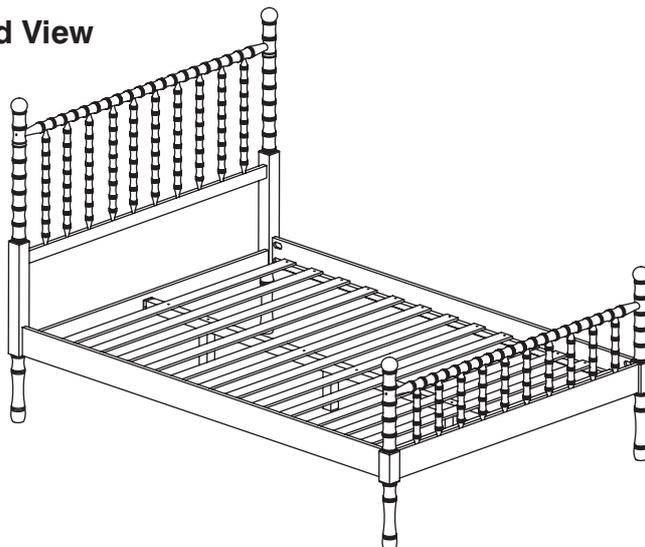





Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

Parts in Box A:

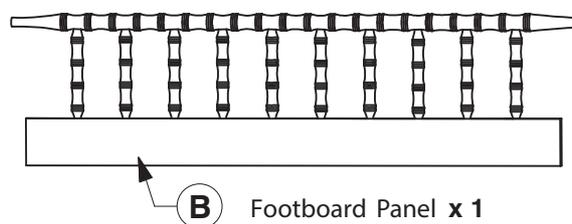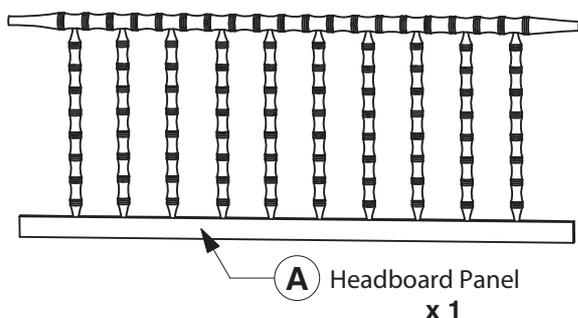

Parts in Box B:

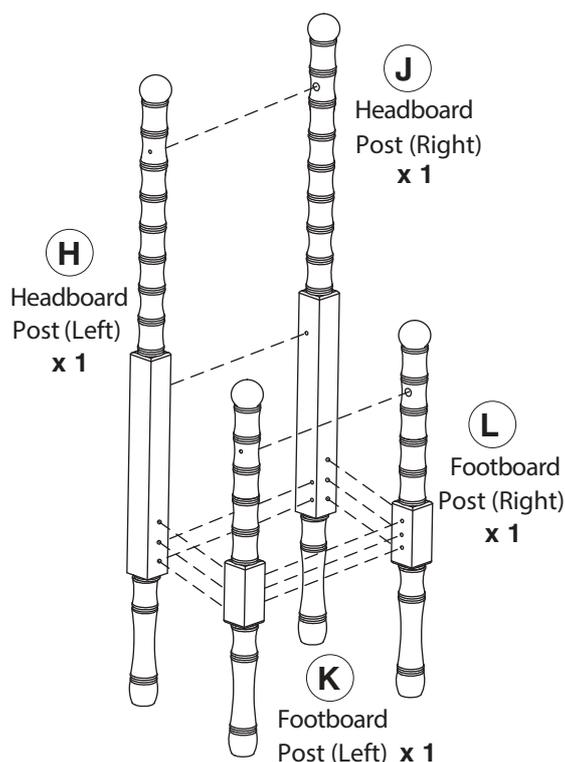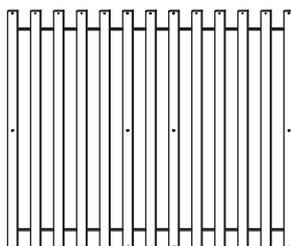
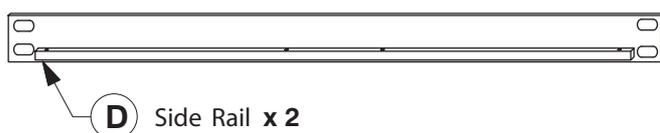


0258 Queen Bed


Assembly Instructions

WI-0425


3 Hardware List

- | | | | | |
|--|--|--|--|---|
| 
1 M6 x 15mm
JCB x 4 | 
2 M6 x 40mm
JCB x 34 | 
3 M6 x 90mm JCB
x 3 | 
4 Barrel Nut
x 3 | |
| 
5 Adjustable
Foot x 3 | 
6 Center Rail
Bracket x 2 | 
7 Wood Screw
(M4 x 32mm) x 18 | 
8 Wood Dowel
(10 x 40mm) x 6 | 
9 M4 Allen Key
x 1 |

4 Assembled the Support Leg (F) to the Long Support (E).

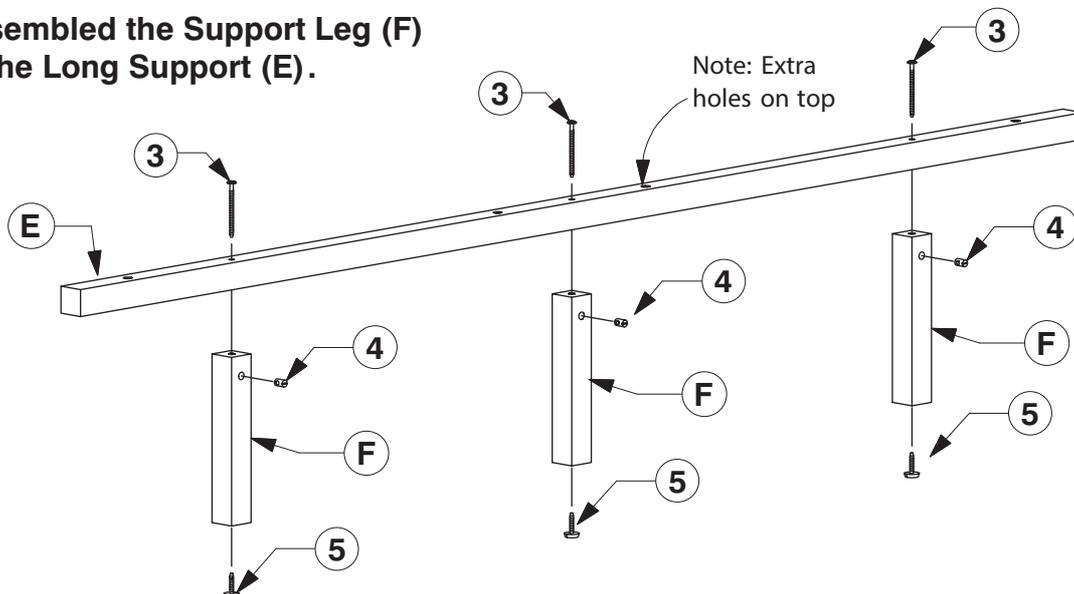

5 Fit the Center Rail Bracket (6) to the Headboard Support (C).

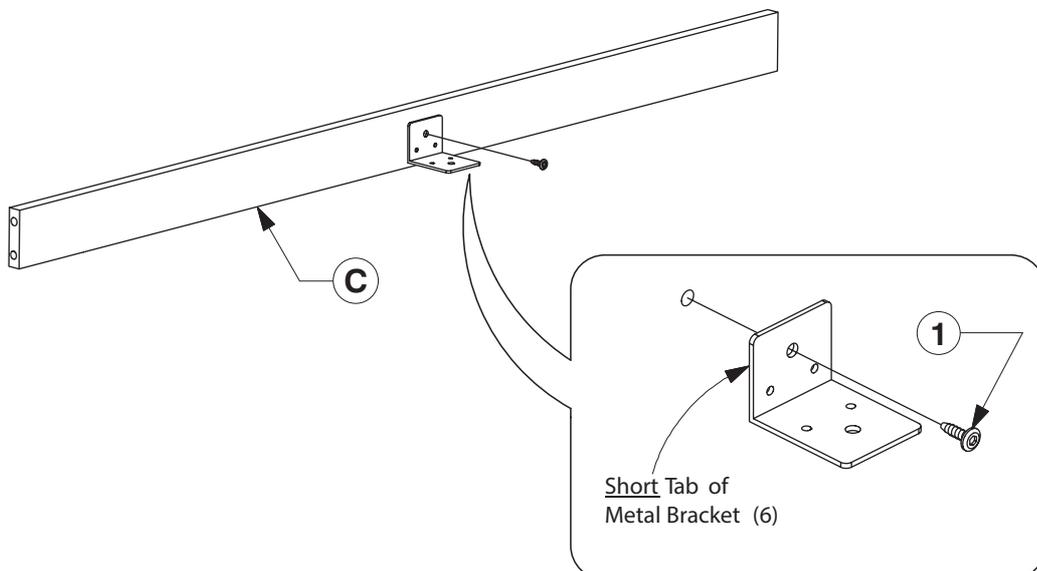


0258 Queen Bed

Assembly Instructions

WI-0425

- 6** Assembled the Headboard Post Right & Left (H & J) and Headboard Support (C) to the Headboard Panel (A).

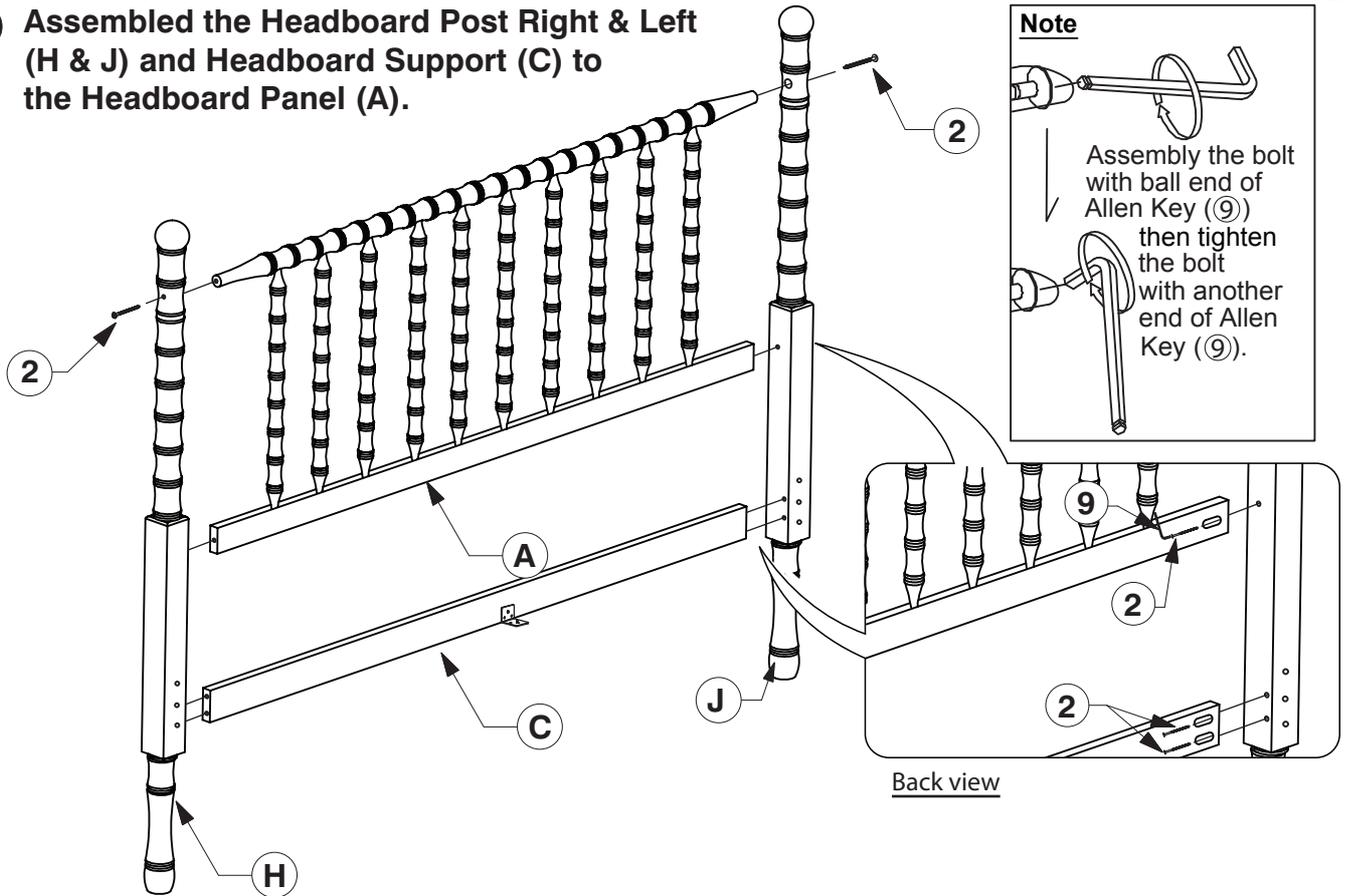


Note

Assembly the bolt with ball end of Allen Key (9) then tighten the bolt with another end of Allen Key (9).

Back view

- 7** Fit the Center Rail Bracket (6) to the Footboard Support (B). Assemble the Footboard Panel (B) to the Footboard Post Right & Left (K & L).

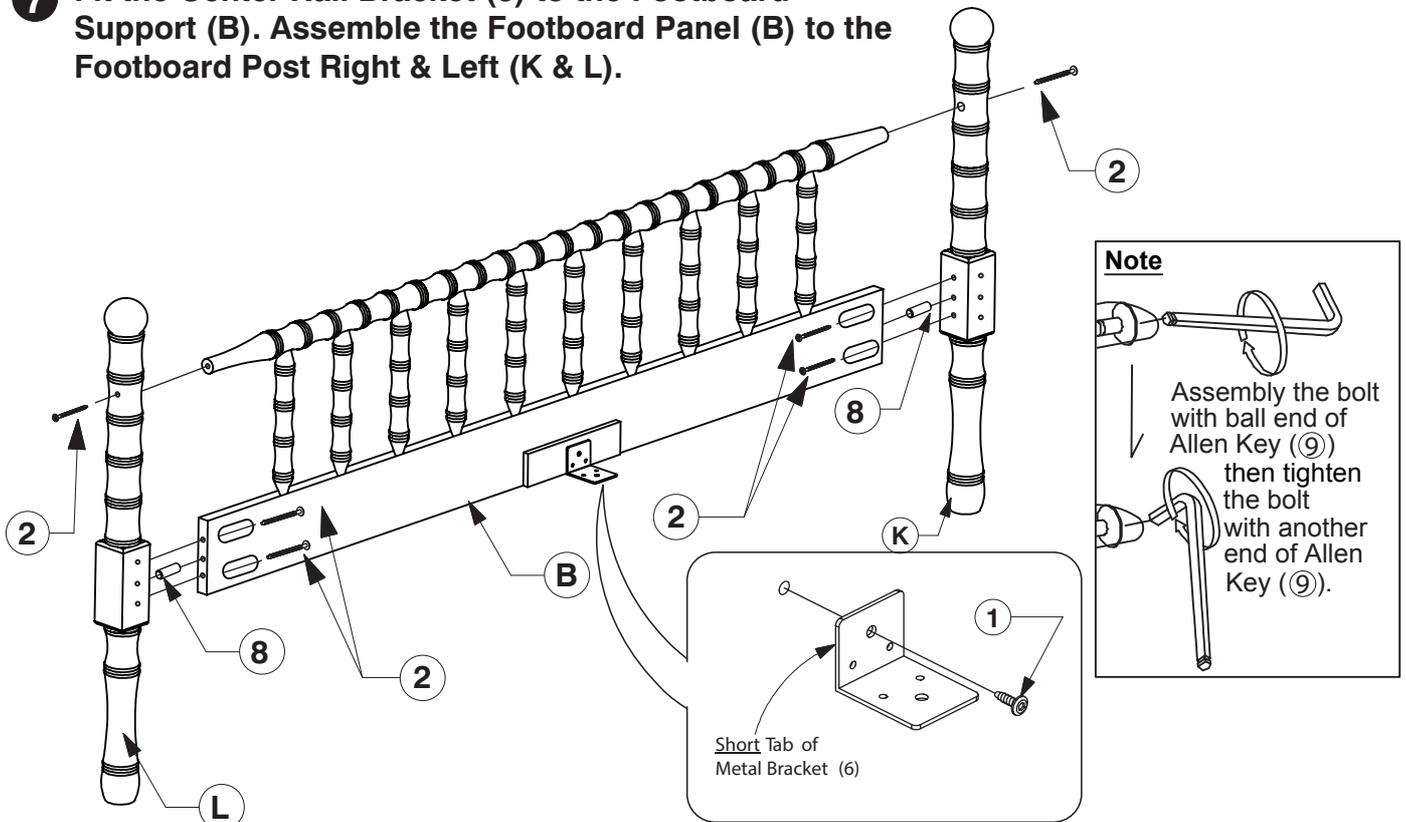

Note

Assembly the bolt with ball end of Allen Key (9) then tighten the bolt with another end of Allen Key (9).


Short Tab of Metal Bracket (6)

0258 Queen Bed


Assembly Instructions

WI-0425


- 8** Assemble the Side Rail (D) to the Headboard and Footboard Panel (A & B).

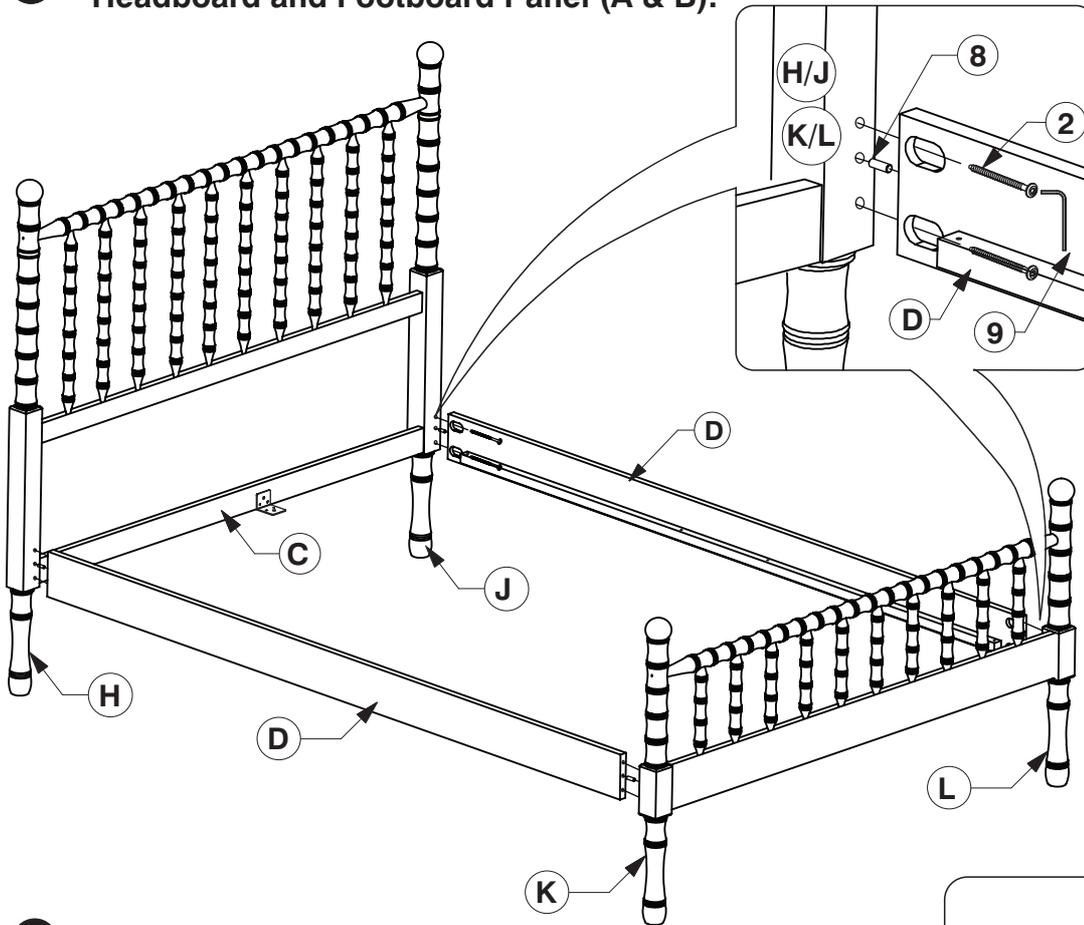

Note

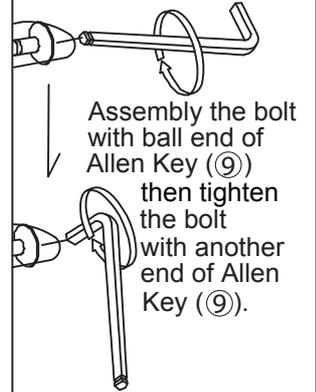

- 9** Bolt the Long Support (E) to the Center Rail Brackets (6) on the Headboard Support (C) and Footboard Panel (B).

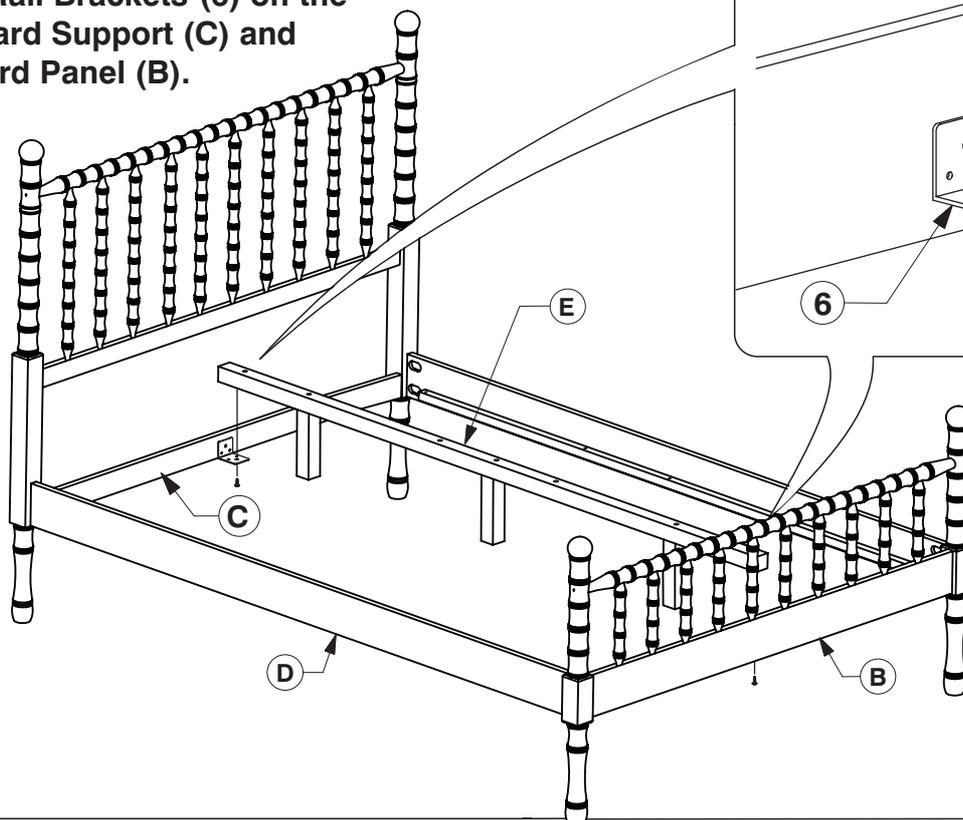


0258 Queen Bed

Assembly Instructions

WI-0425

- 10** Bolt the Bed Slats (G) to the Side Rail (D).

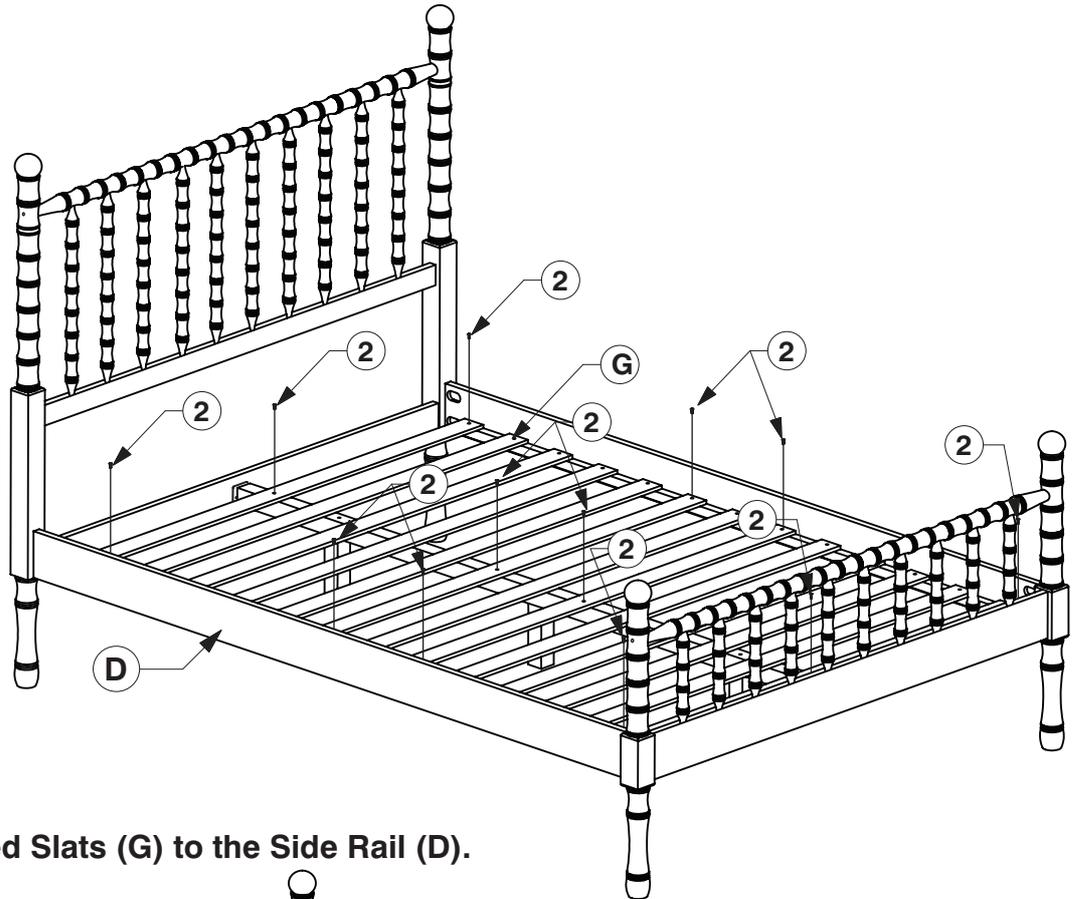

- 11** Screw the Bed Slats (G) to the Side Rail (D).

