


ASSEMBLY INSTRUCTION


MODEL : 9581-B (4'6")

A		Headboard	1pc	Y		Flat Washers	8pcs
B		Footboard	1pc	Z		Small Adjuster	4pcs
C		Side Rail	4pcs	Z1		JCBC M6 X 20	10 pcs
D		Headboard Legs 625 x 80 x 21mm	2pcs				
E		Footboard Legs 80/132/158H	2pcs				
F		Footboard Center Legs 60x20x50(H)	1pc				
G		Side Rail Legs No.127 (30°/90°/240°)	2pcs				
H		Center Rail 870mm	2pcs				
I		12 Slot 1477mm	2pcs				
J		Support Legs 250mm	4pcs				
K		Metal Drawer	2pcs				
L		Drawer Front Panel	2pcs				
M		Drawer front panel support	4pcs				
N		Drawer support center	2pcs				
O		Drawer plastic corner	4pcs				
P		Roller	8pcs				
Q		JCBB M8 x 20	8pcs				
R		JCBC M6 x 30	14pcs				
S		JCBC M6 x 50	3pcs				
T		JCBC M6 x 60	4pcs				
U		CSK Screw 32mm	24pcs				
V		Allen Key 100mm	1pc				
W		Allen Key 70mm	1pc				
X		Spring Washers	6pcs				


Step 1 : Attach the headboard legs (D) to headboard (A). Attach the footboard legs (E/F) with footboard (B) as shown.

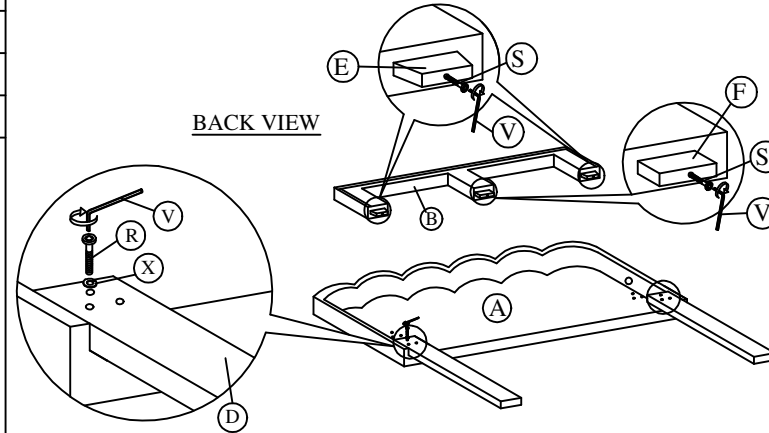


Step 2 : Attach the JCBB Bolt (Q) to the headboard and footboard.

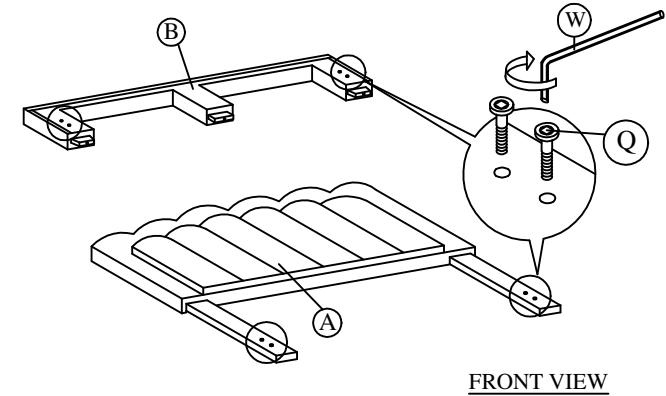


Step 3 : Attach the side rail leg (G) to the side rail (C).

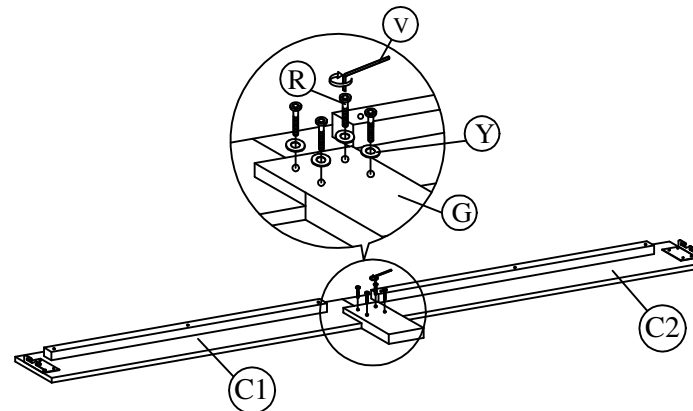


Step 4 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

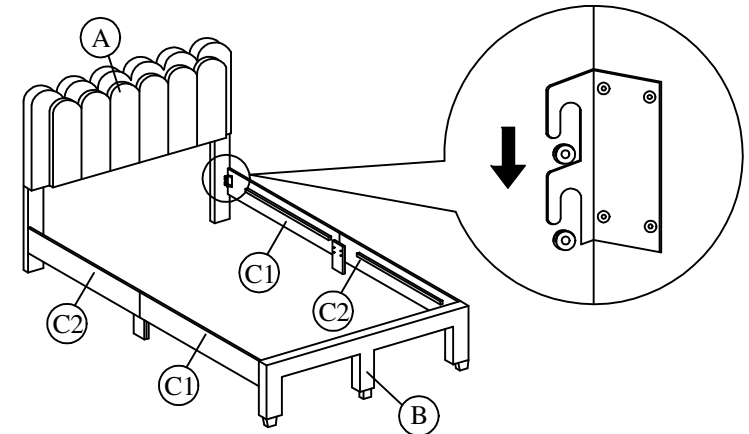


Step 5 : Attach the support legs (J) to the center rail (H) and slats (I).

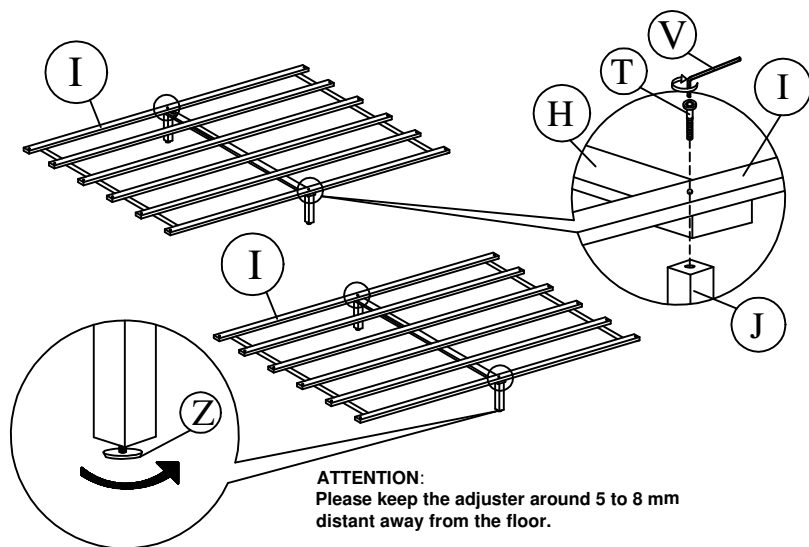


Step 6 : Tighten the 4 Corner with Allen Key (W). Install the bed slats to side rail. Tighten the slats with CSK screw. The distance of the slats should be sufficient to obtain desirable bed stability.

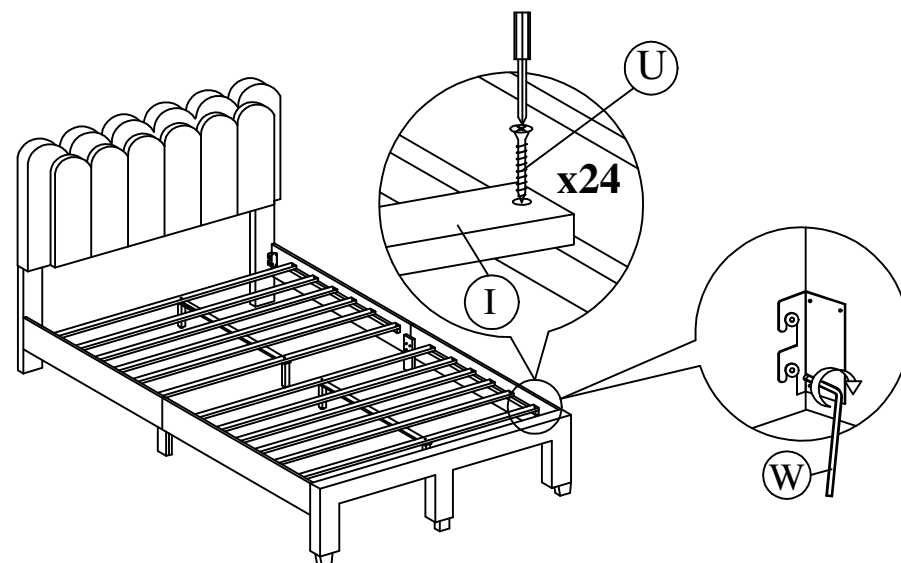


Step 7 : Attach the drawer plastic corner (O) to the metal drawer (K).

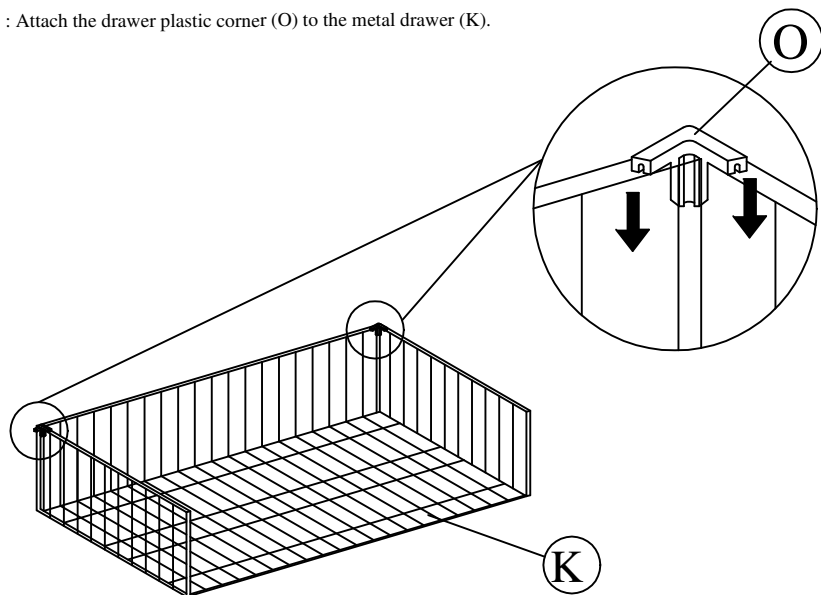

Step 8 : Attach the roller (P) to the metal drawer (K).

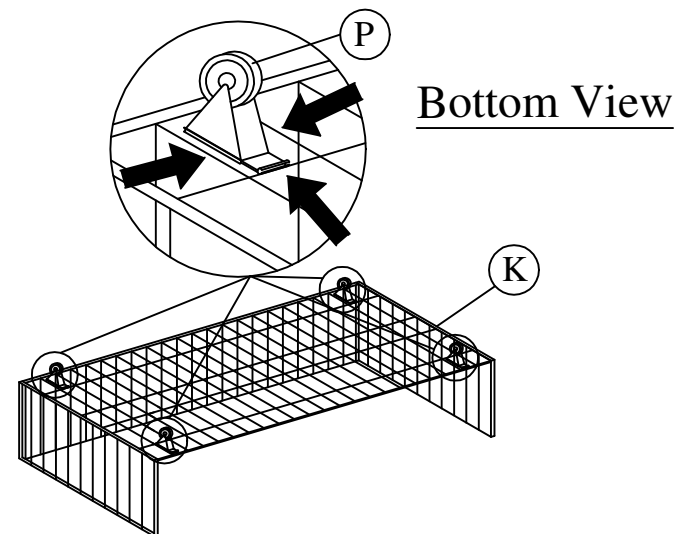

Step 9 : Install the drawer front panel (L) to metal drawer (K).

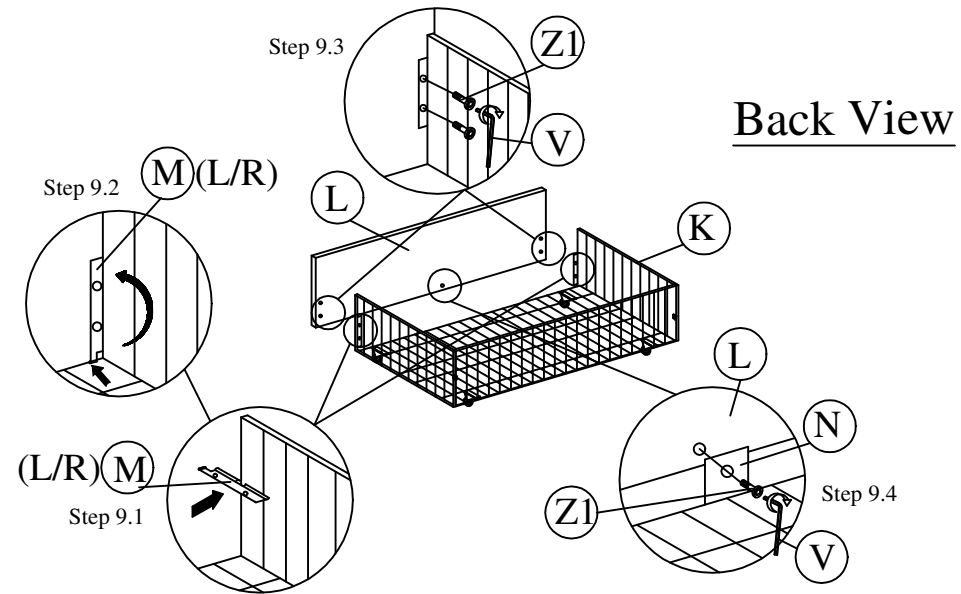

Step 10

