
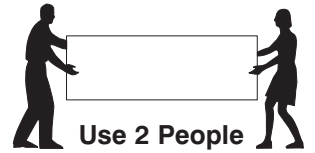


# 0258 Queen Bed

## Assembly Instructions

WI-0425



### 1 Assembled View

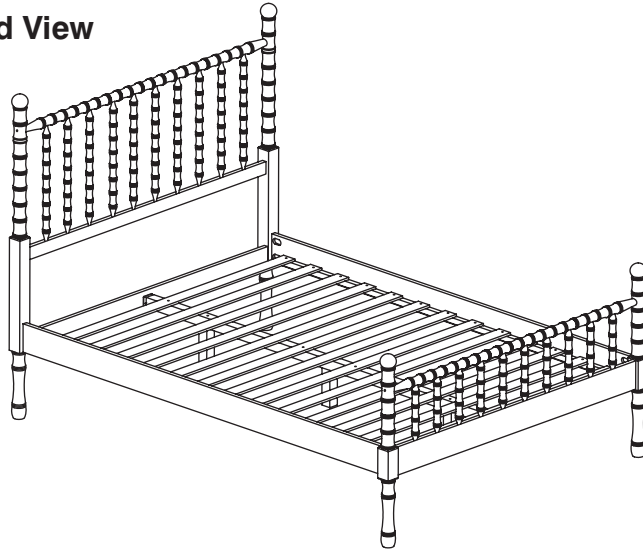


**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened

### 2 Parts List


Parts in Box A:

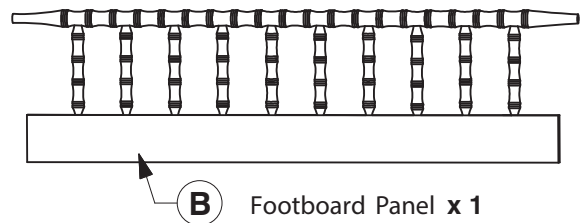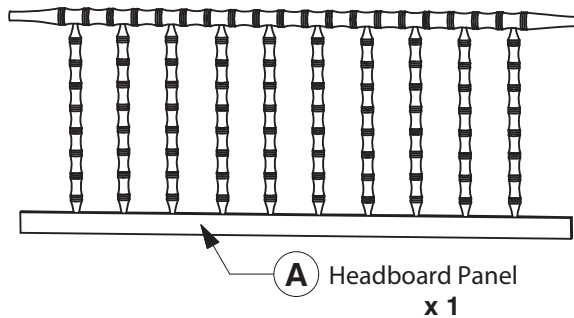


Parts in Box B:

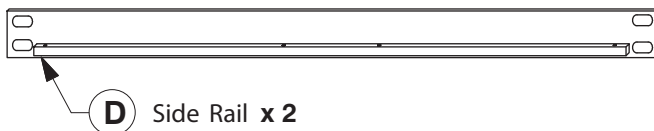

**F**  
Support Leg  
x 3

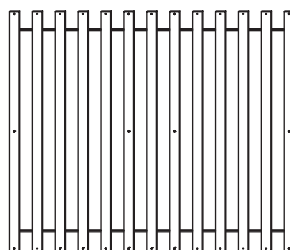

**G** Set of Bed Slats x 1

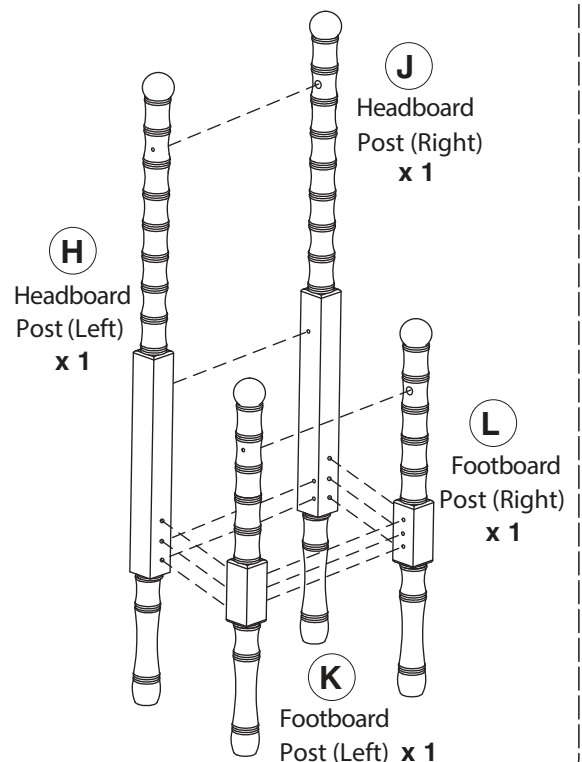










# 0258 Queen Bed


## Assembly Instructions

WI-0425


### 3 Hardware List

- |   |   |  |   |
|---|---|--|---|
|  |  |  |  |
| <b>1</b> M6 x 15mm JCB <b>x 4</b>   | <b>2</b> M6 x 40mm JCB <b>x 34</b>  | <b>3</b> M6 x 90mm JCB <b>x 3</b>  | <b>4</b> Barrel Nut <b>x 3</b>  |
|  |  |   |   |
| <b>5</b> Adjustable Foot <b>x 3</b>   | <b>6</b> Center Rail Bracket <b>x 2</b>   | <b>7</b> Wood Screw (M4 x 32mm) <b>x 18</b>  | <b>8</b> Wood Dowel (10 x 40mm) <b>x 6</b>  |
|   |   |  |  |
|   |   |  | <b>9</b> M4 Allen Key <b>x 1</b>  |

### 4 Assembled the Support Leg (F) to the Long Support (E).

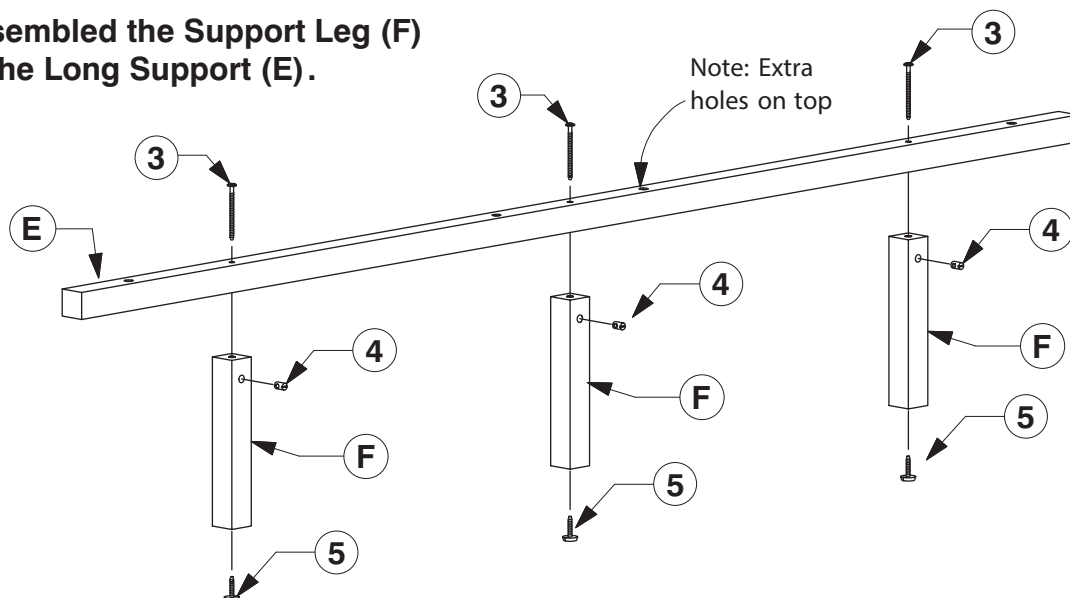

### 5 Fit the Center Rail Bracket (6) to the Headboard Support (C).

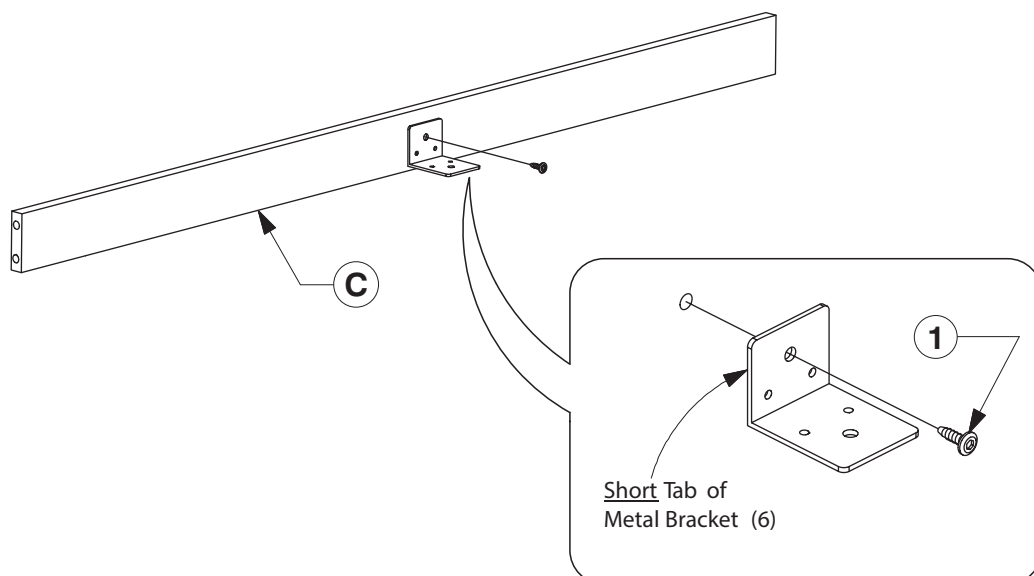


# 0258 Queen Bed


## Assembly Instructions

WI-0425

- 6** Assembled the Headboard Post Right & Left (H & J) and Headboard Support (C) to the Headboard Panel (A).

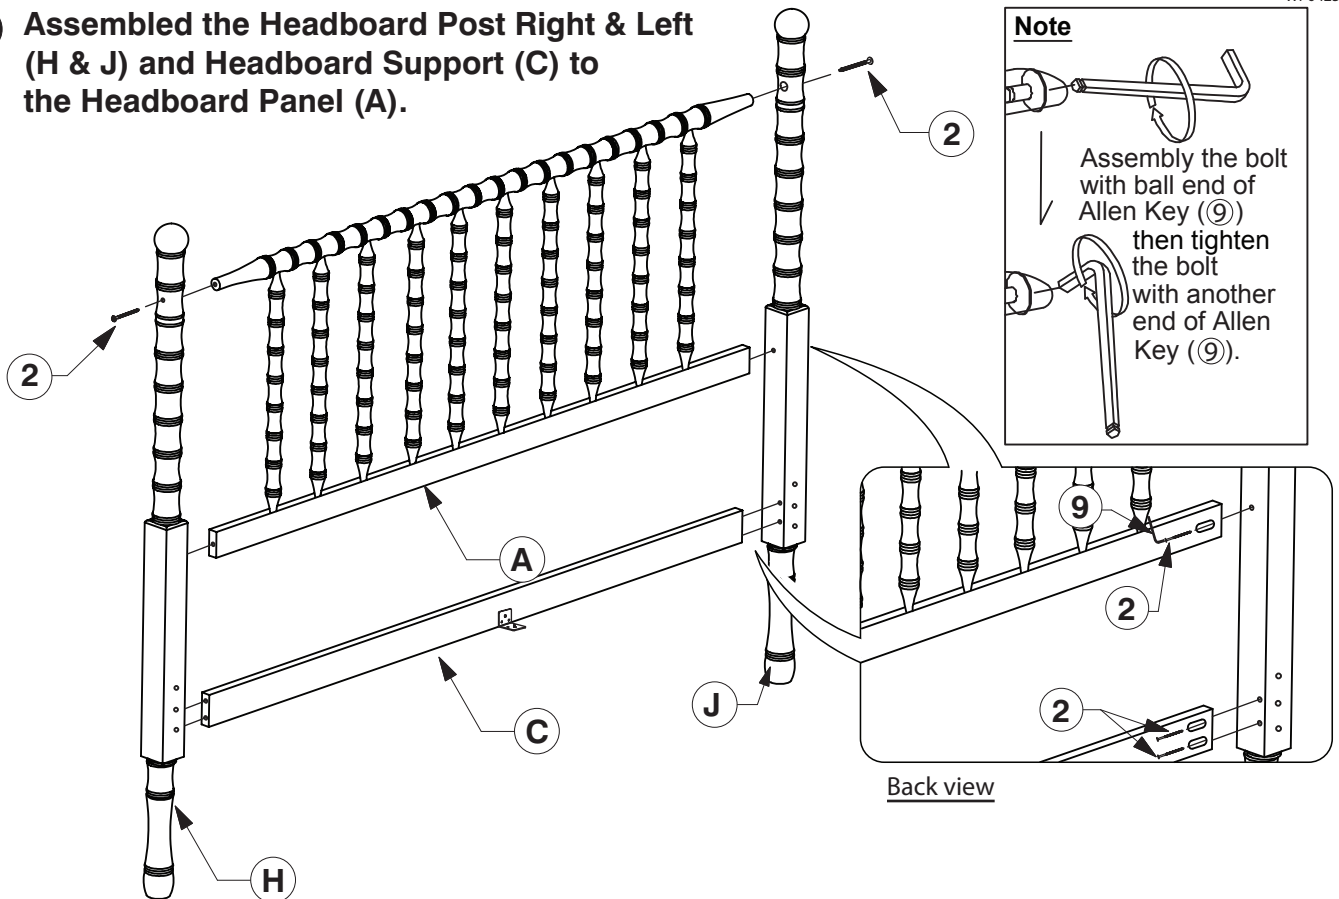

- 7** Fit the Center Rail Bracket (6) to the Footboard Support (B). Assemble the Footboard Panel (B) to the Footboard Post Right & Left (K & L).

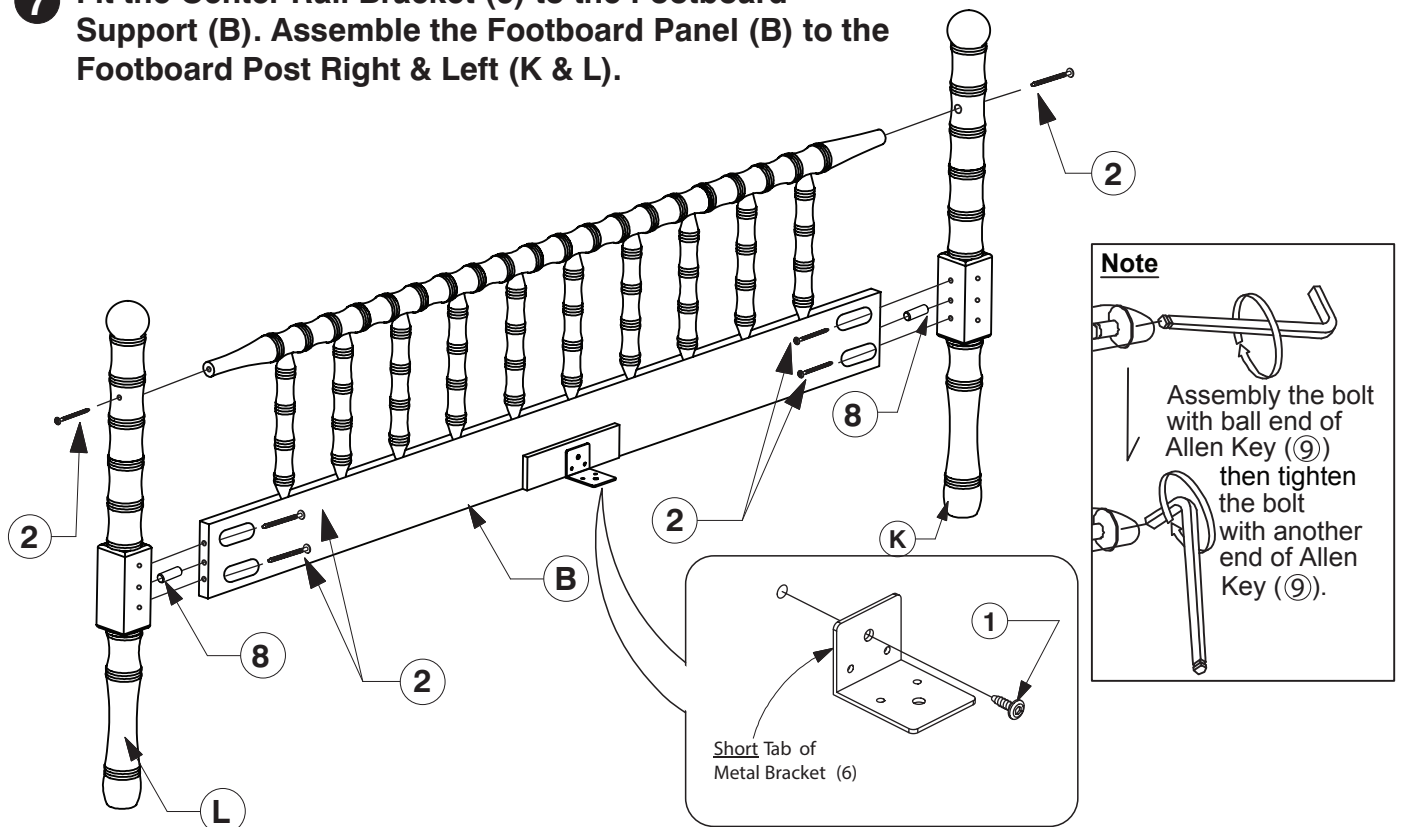


# 0258 Queen Bed


## Assembly Instructions

WI-0425


- 8** Assemble the Side Rail (D) to the Headboard and Footboard Panel (A & B).

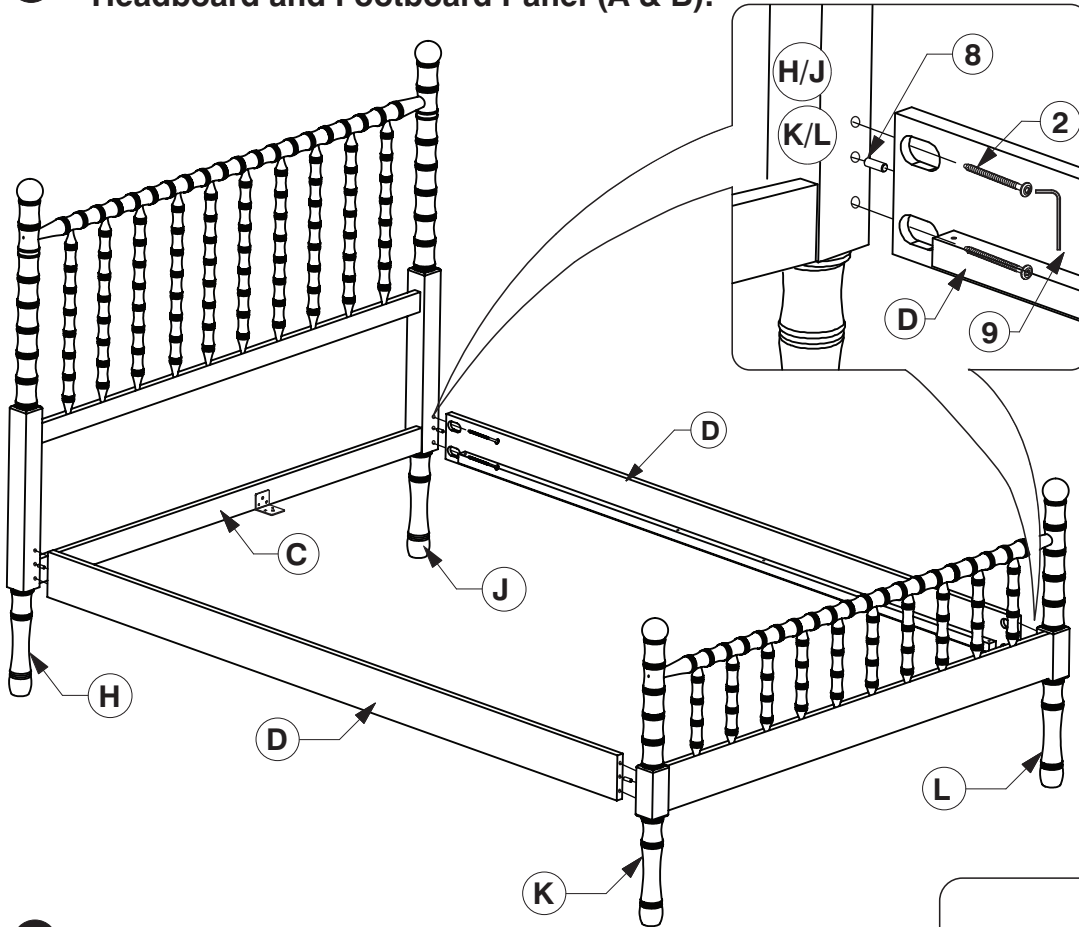

### Note

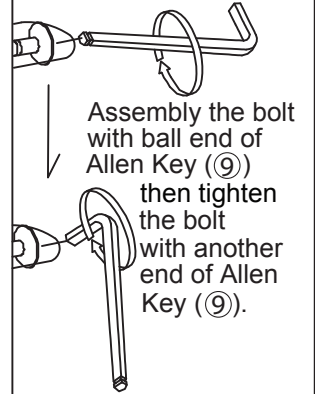

- 9** Bolt the Long Support (E) to the Center Rail Brackets (6) on the Headboard Support (C) and Footboard Panel (B).

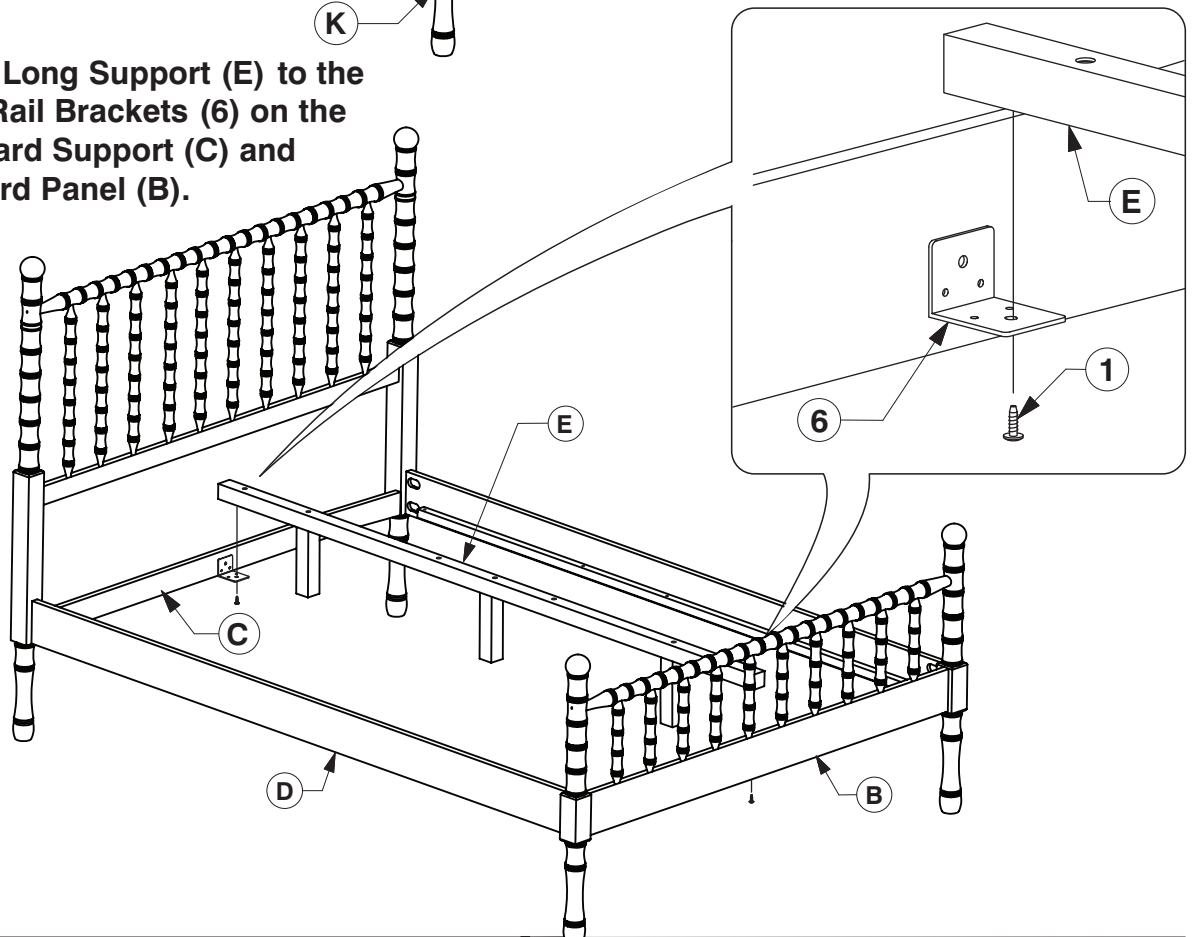




# 0258 Queen Bed


## Assembly Instructions

WI-0425

- 10** Bolt the Bed Slats (G) to the Side Rail (D).

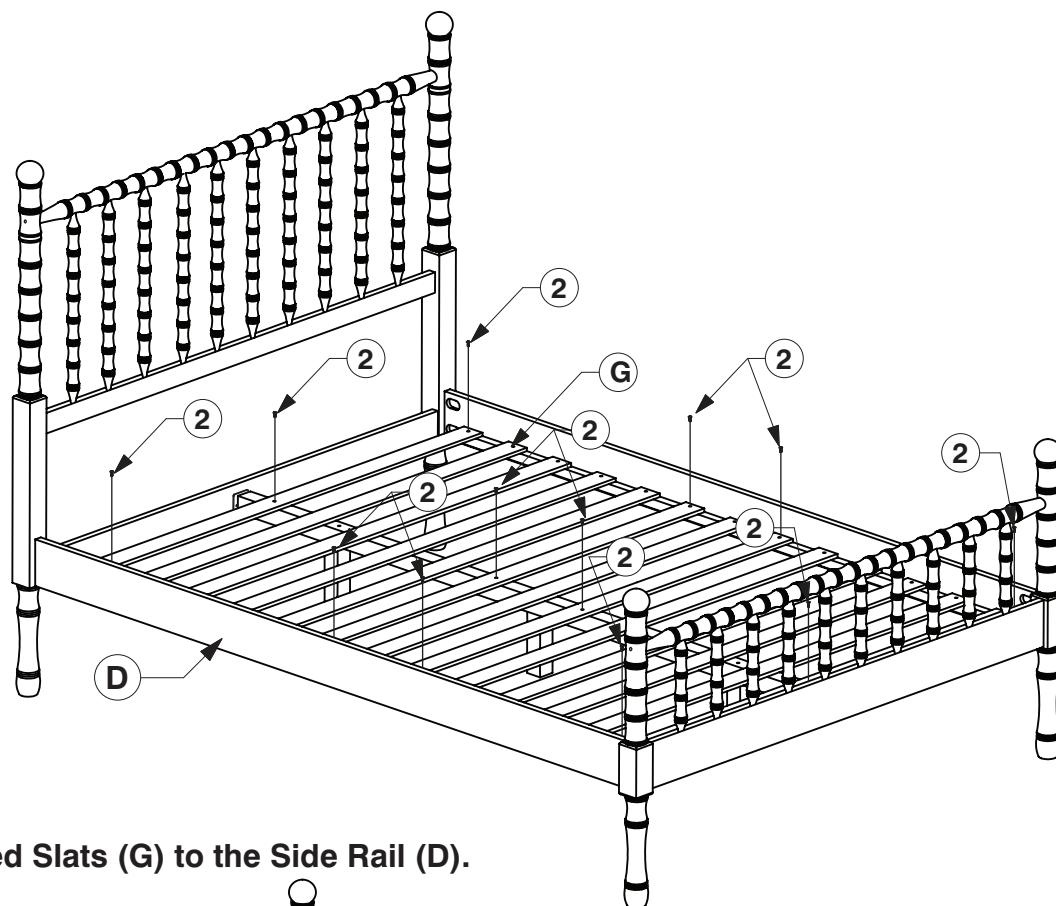



- 11** Screw the Bed Slats (G) to the Side Rail (D).

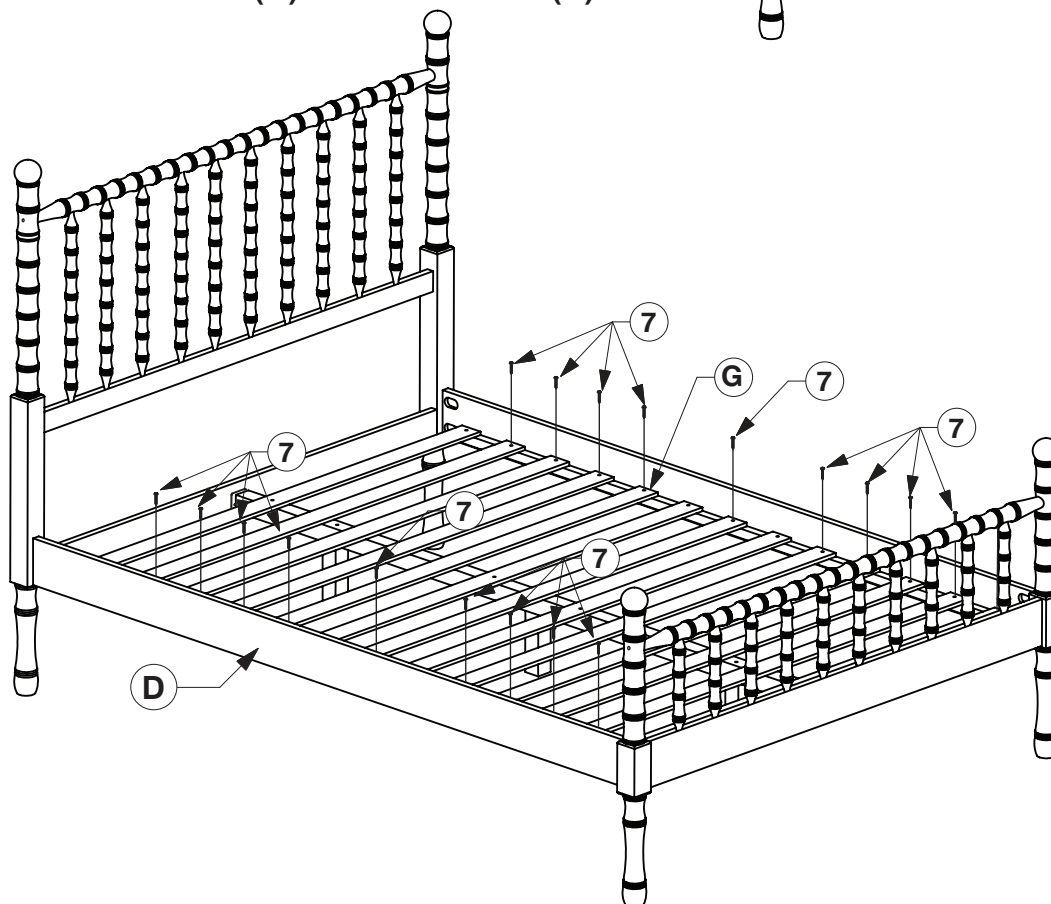

# 9017 6 Drawer Dresser


## Assembly Instructions

WI-0425

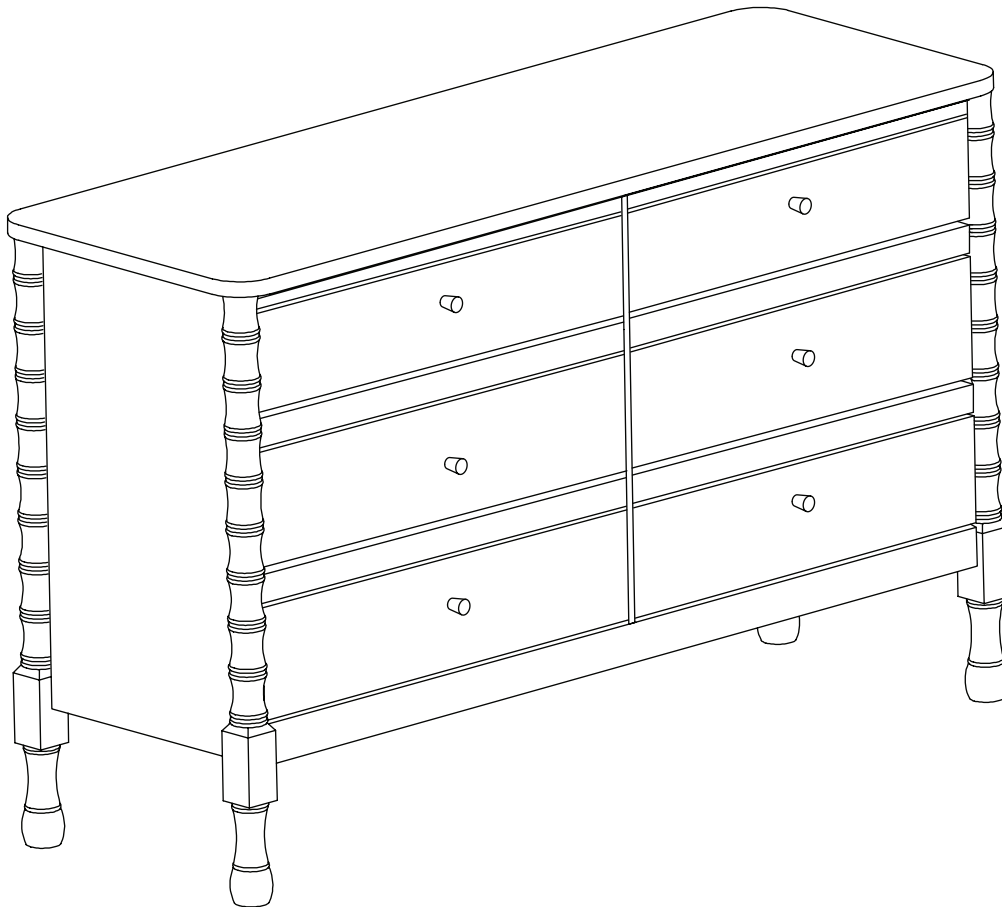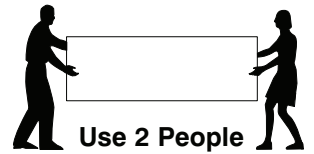

**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened

### WARNING

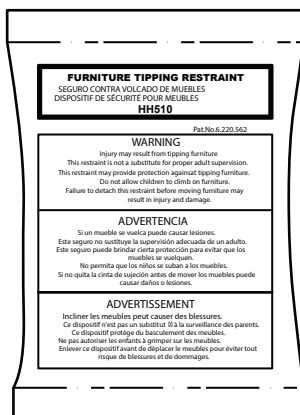

Anti Tipping Kit  
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.


# 9017 6 Drawer Dresser

## Assembly Instructions


WI-0424

### 1 Parts List


#### Parts in Box A:

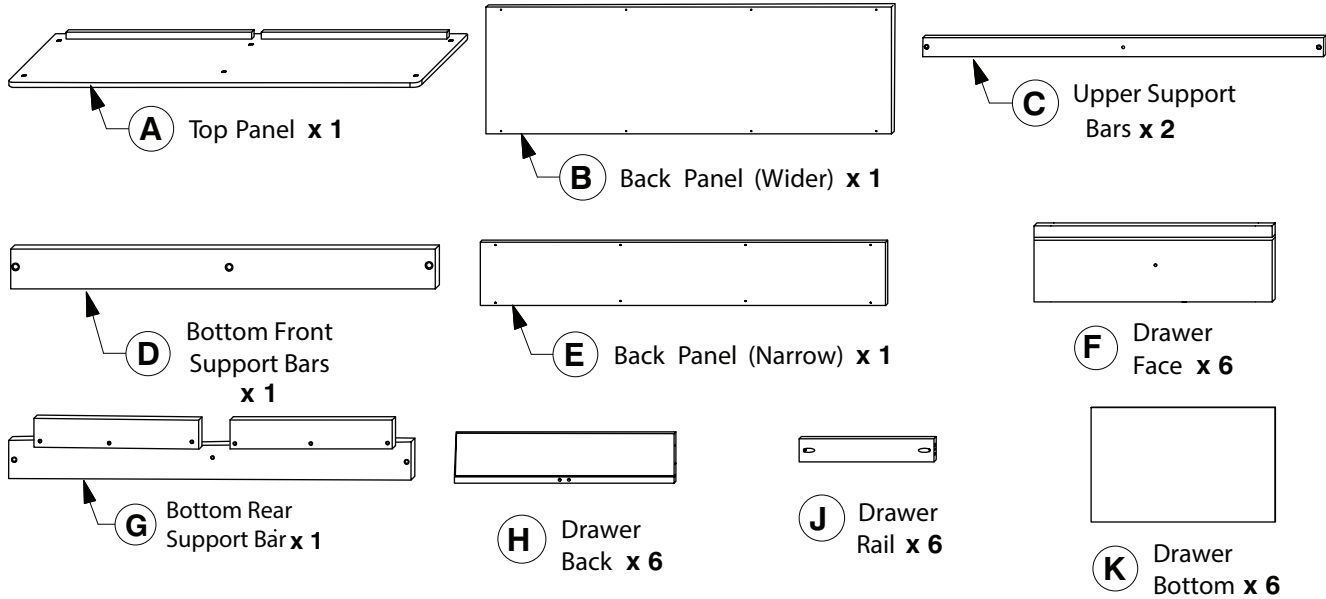


#### Parts in Box B:

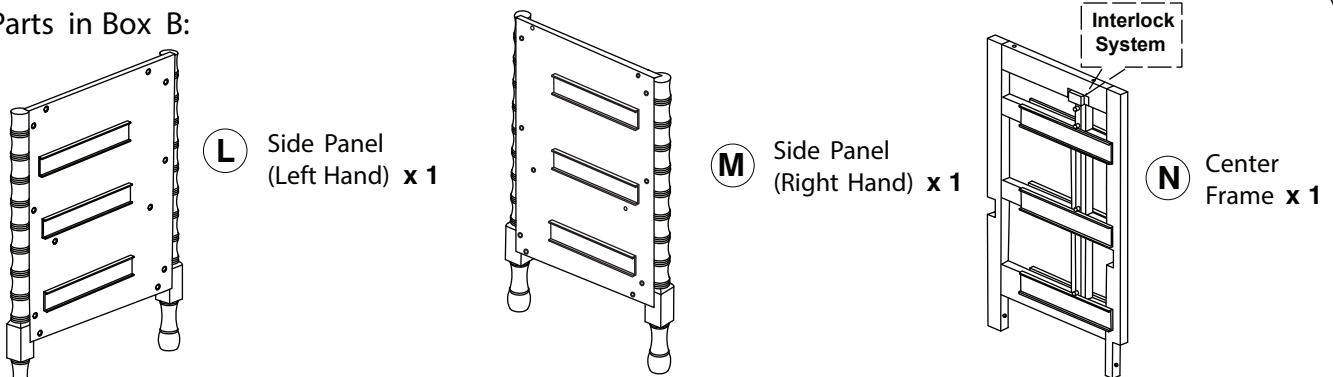

#### Parts for **LEFT** Side Drawer

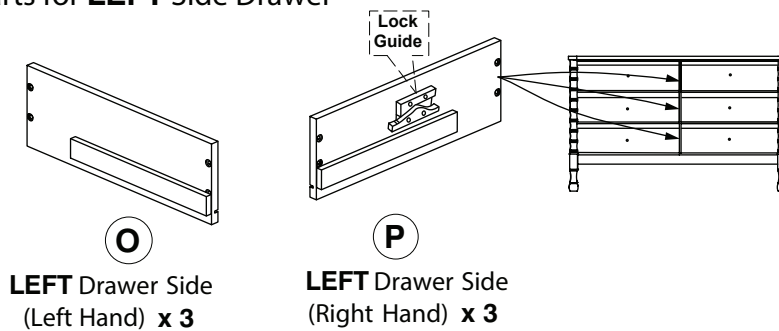

#### Parts for **RIGHT** Side Drawer

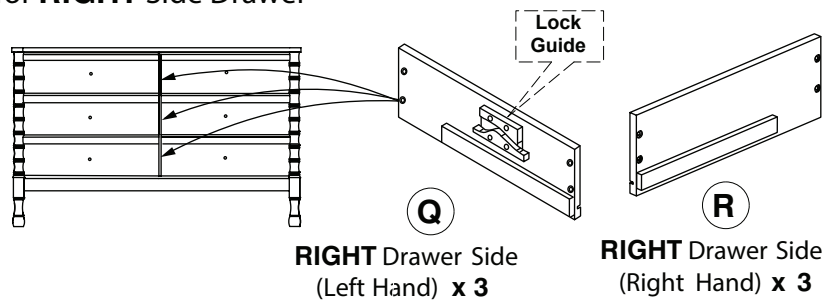












# 9017 6 Drawer Dresser

## Assembly Instructions

WI-0425


### 2 Hardware List

- |   |   |   |   |
|---|---|---|---|
|  |  |   |  |
| ① M6 x 15mm JCB x 24  | ② M6 x 30mm JCB x 4   | ③ M6 x 60mm JCB x 2   | ④ 'L' Bracket (5005-3) x 12   |
|  |  |   |  |
| ⑤ Wood Screw (M4 x 25mm) x 60   | ⑥ Wood Screw (M4 x 32mm) x 16   | ⑦ Wood Screw (M4 x 20mm) x 24   | ⑧ M4 x 20mm Wood Screw x 6  |
|  |  |  |   |
| ⑨ (1005) Handle x 6   | ⑩ M6 x 25mm Wood Dowel x 24   | ⑪ Allen Key x 1   |   |

### 3 Assemble the Drawers.


#### STEP 3.1

#### LEFT

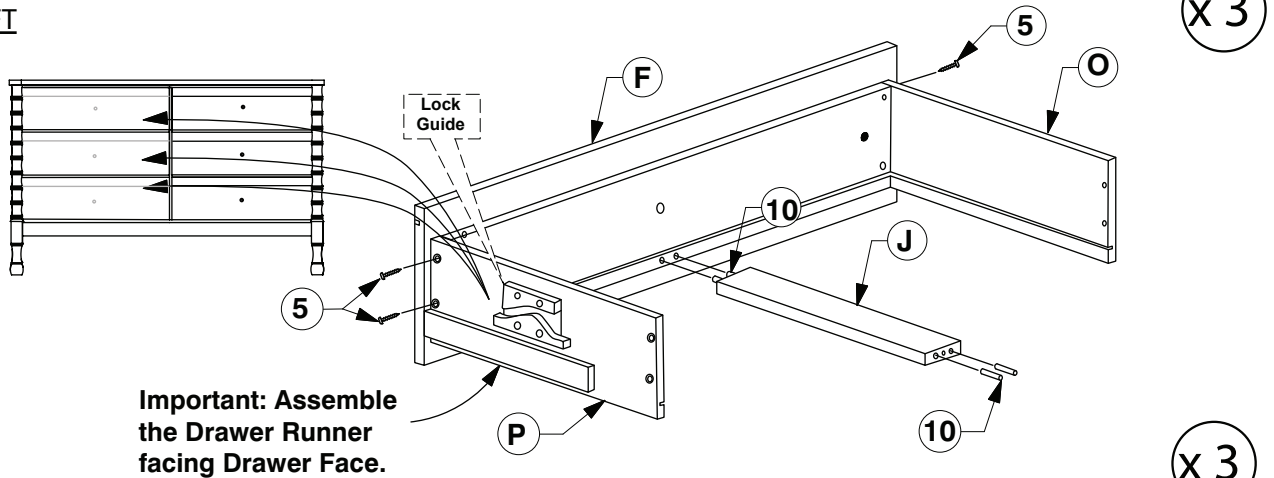

Important: Assemble the Drawer Runner facing Drawer Face .

RIGHT

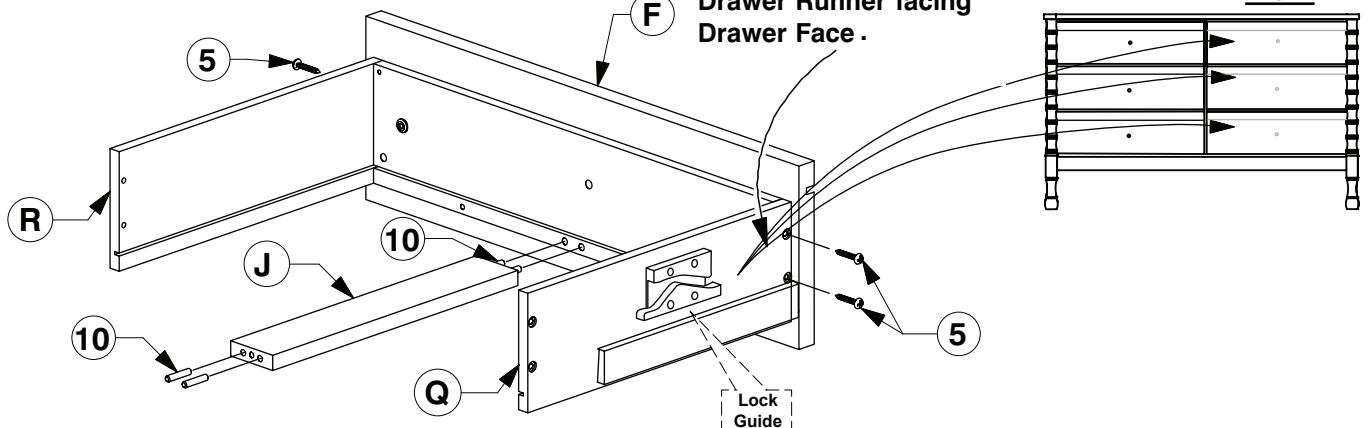

# 9017 6 Drawer Dresser

## Assembly Instructions


WI-0425

### ③ Assemble the Drawers.

#### STEP 3.2


\* 3 Assemble the left and right drawers as shown below

x6

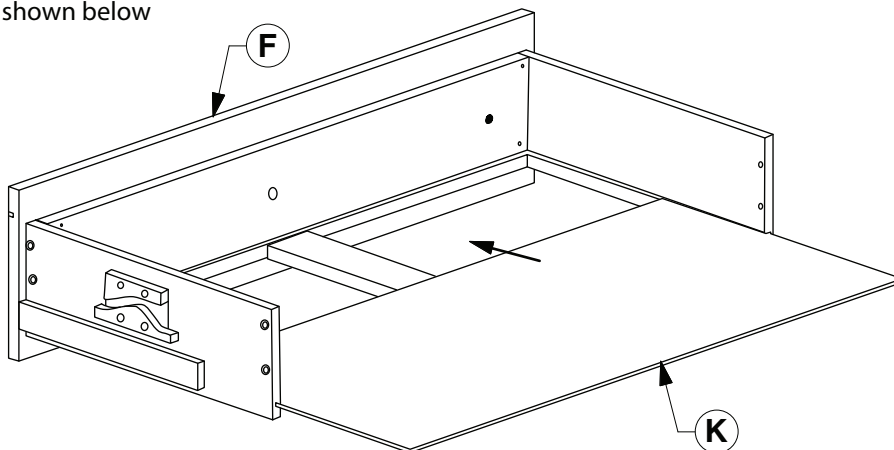


#### STEP 3.3

x6

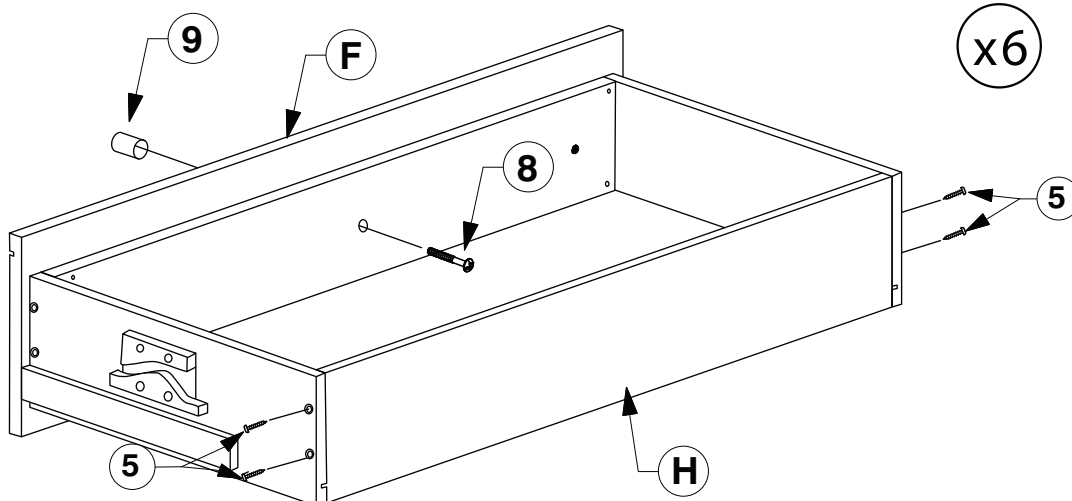

#### STEP 3.4

x6

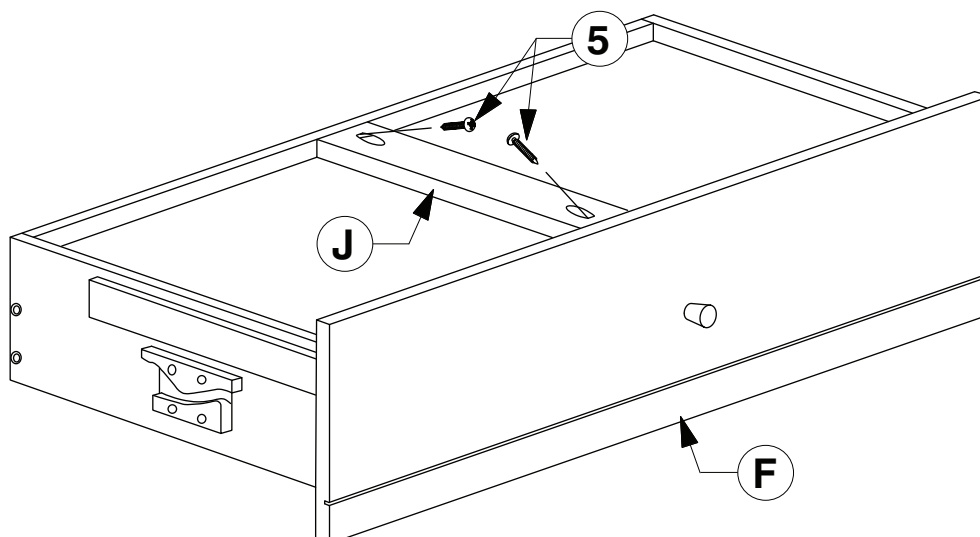


# 9017 6 Drawer Dresser


## Assembly Instructions

WI-0425

### 4 Fit the 'L' Bracket to the Side Panel (L & M).

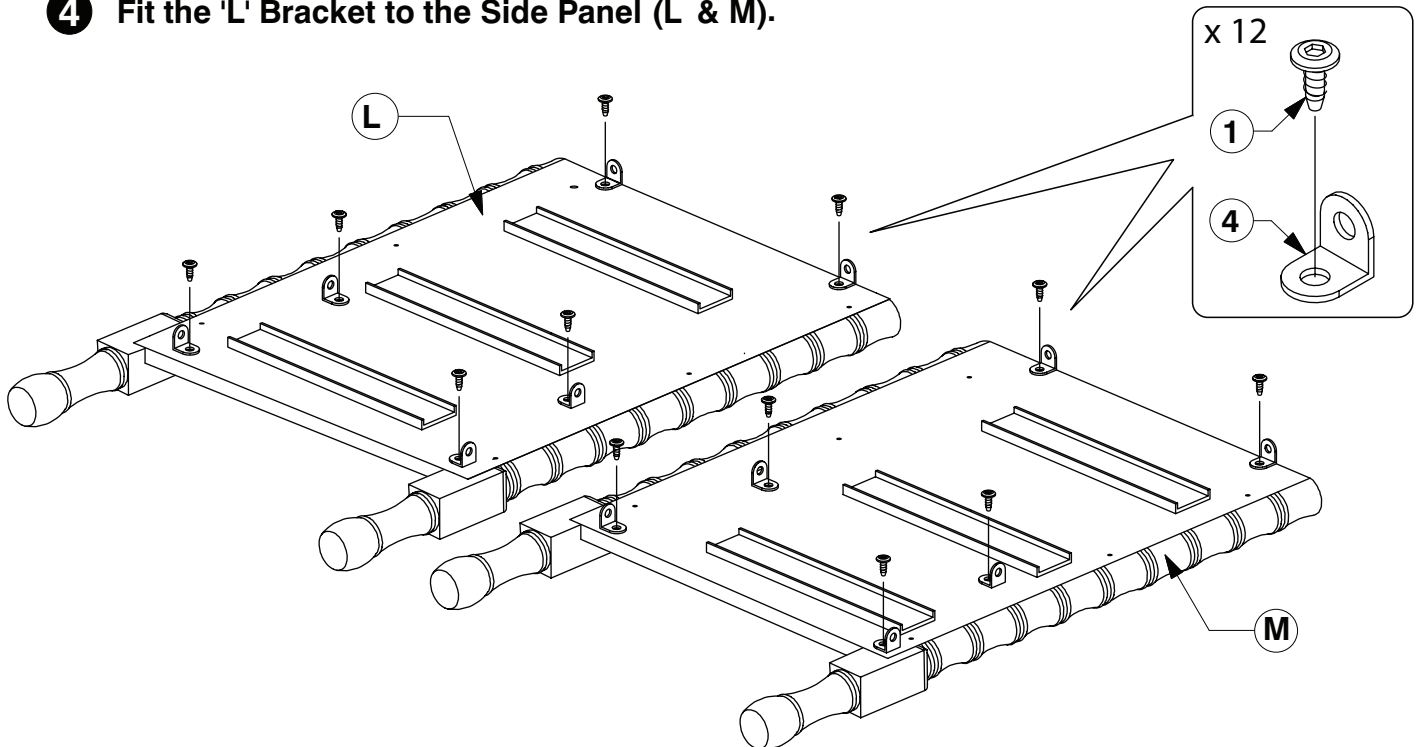

### 5 Fit the Side Panel- Right Hand (M) & Center Frame (N) to the Top Panel (A).

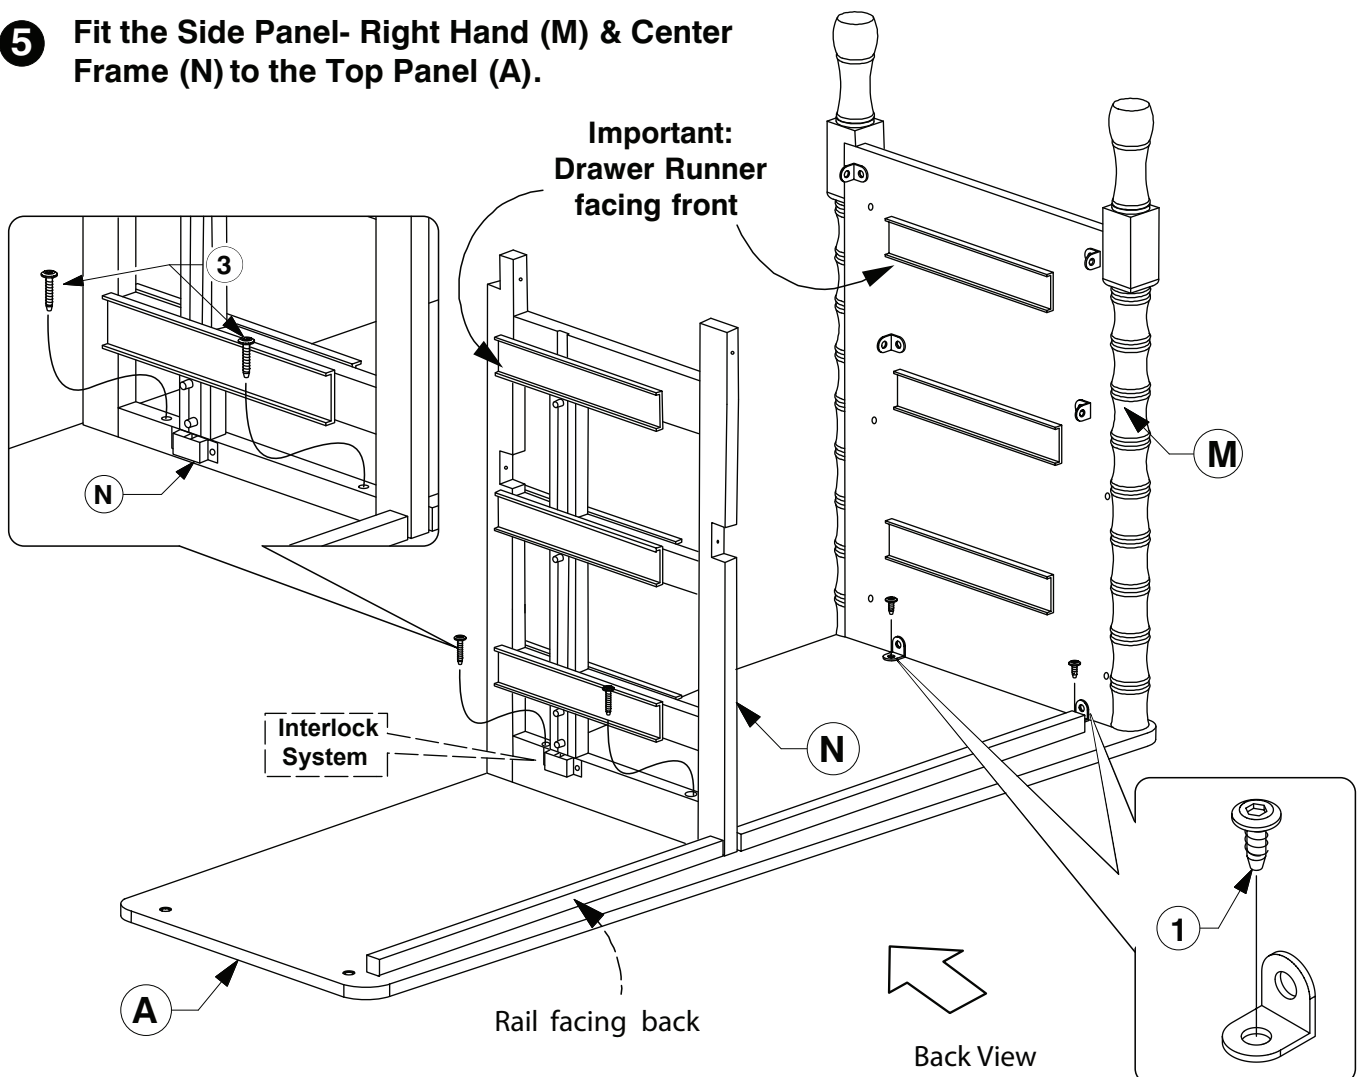


# 9017 6 Drawer Dresser


## Assembly Instructions

WI-0425

- 6** Fit the Upper Support Bar (C) and Bottom Front & Rear Support Bars (D & G) to the Side Panel-Right Hand (M) & Center Frame (N) as shown.

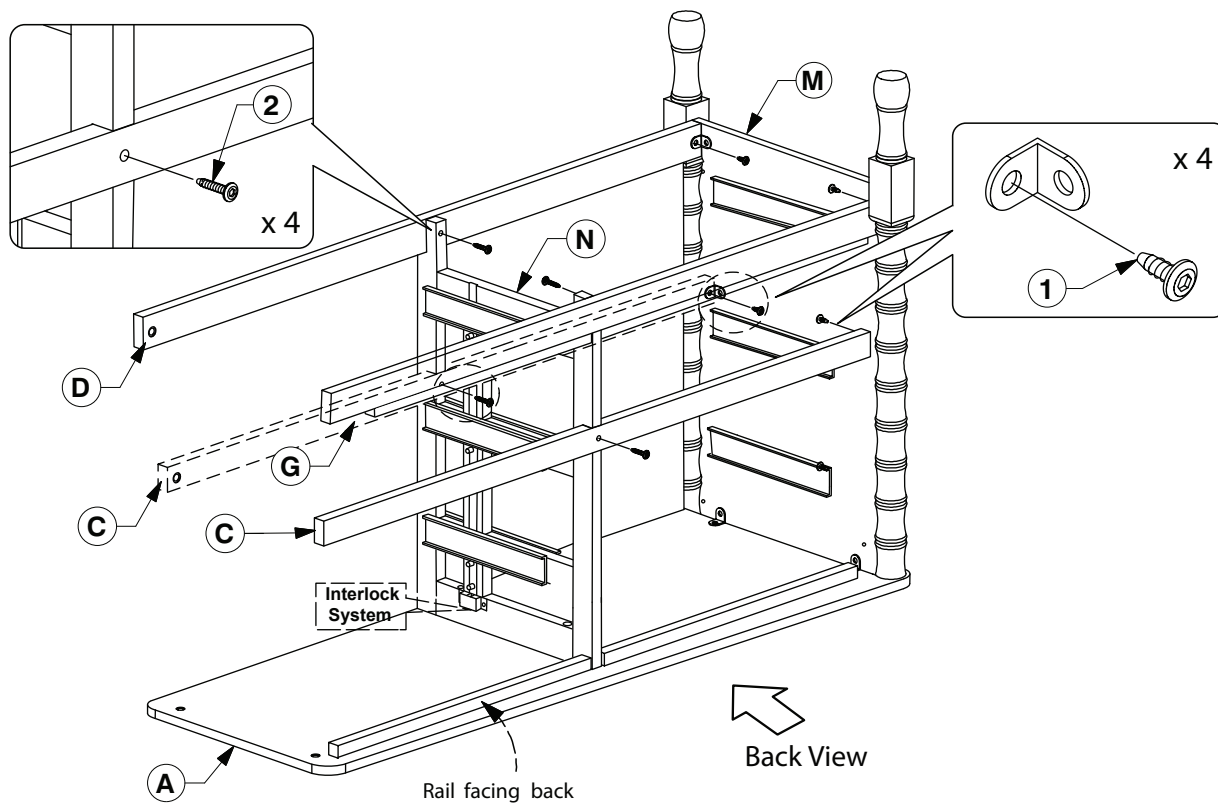

- 7** Fit the other side of Side Panel- Left Hand (L) to the Top Panel (A) & Support Bar Upper & Bottom (C & D & G).

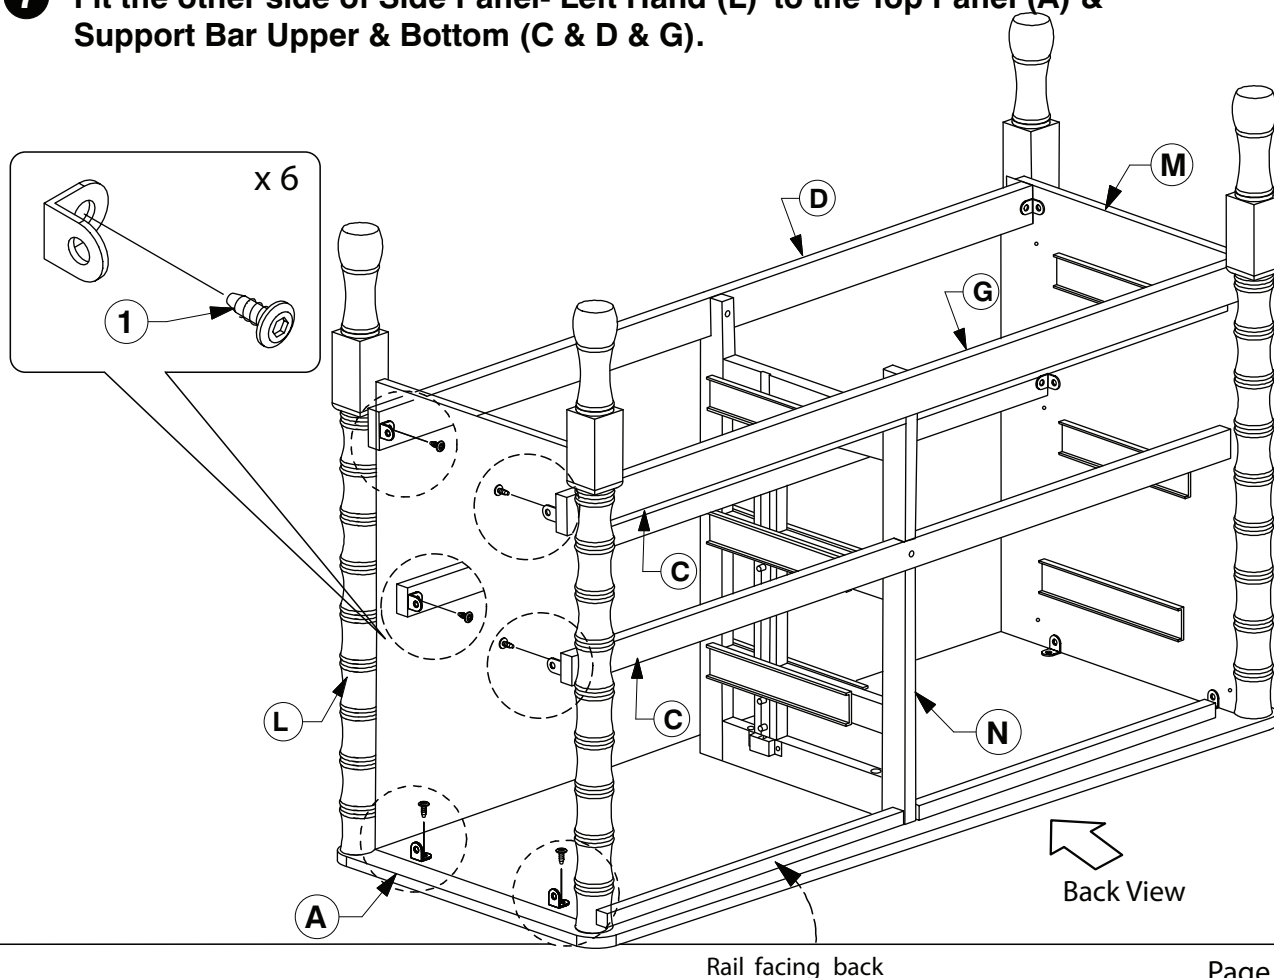

Rail facing back




# 9017 6 Drawer Dresser


## Assembly Instructions

WI-0425

- 8** Attached the Back Panel- wider (B) to the back of the Frame.

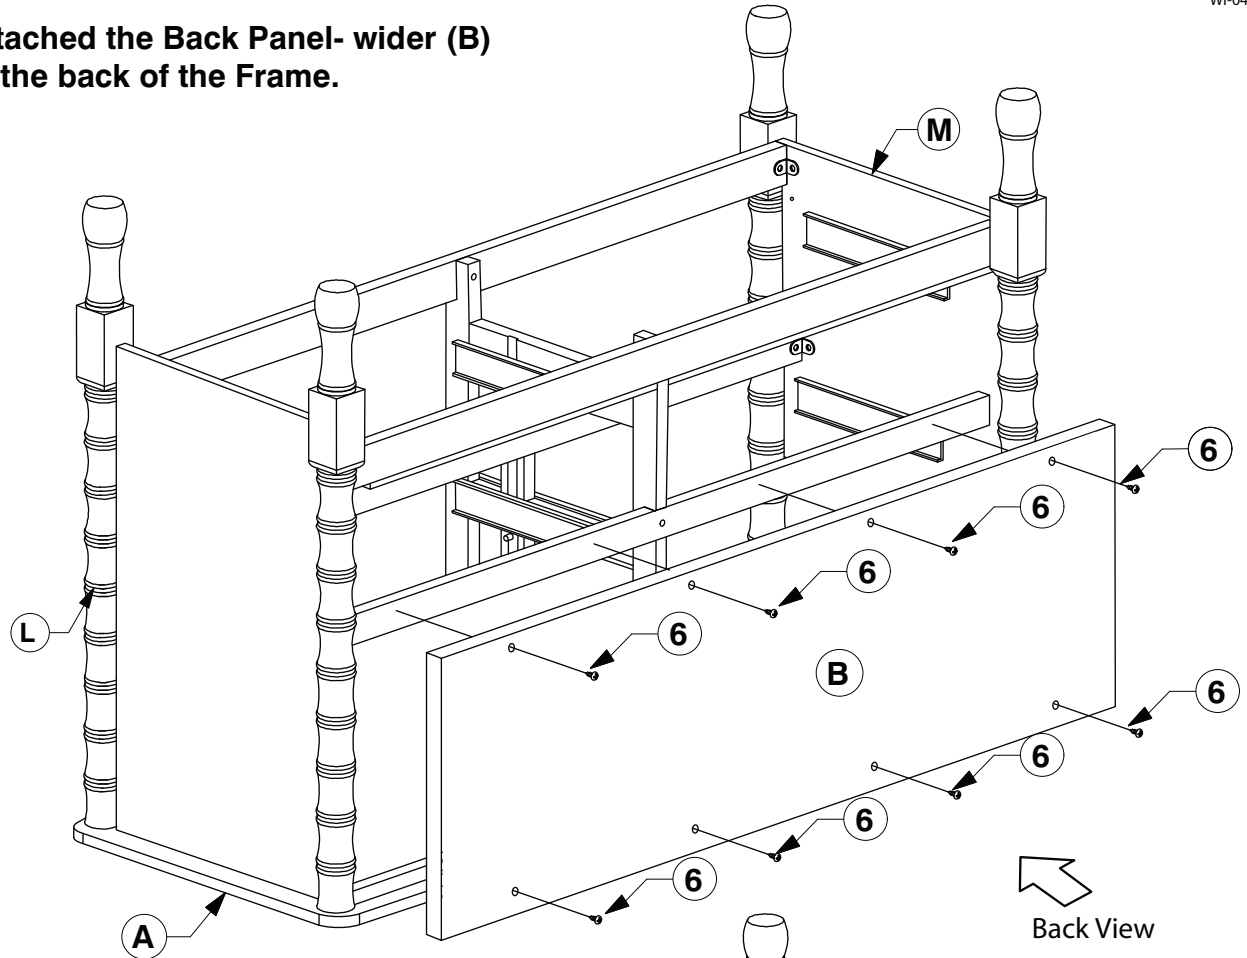

- 9** Attached the Back Panel- narrow (E) to the back of the Frame.

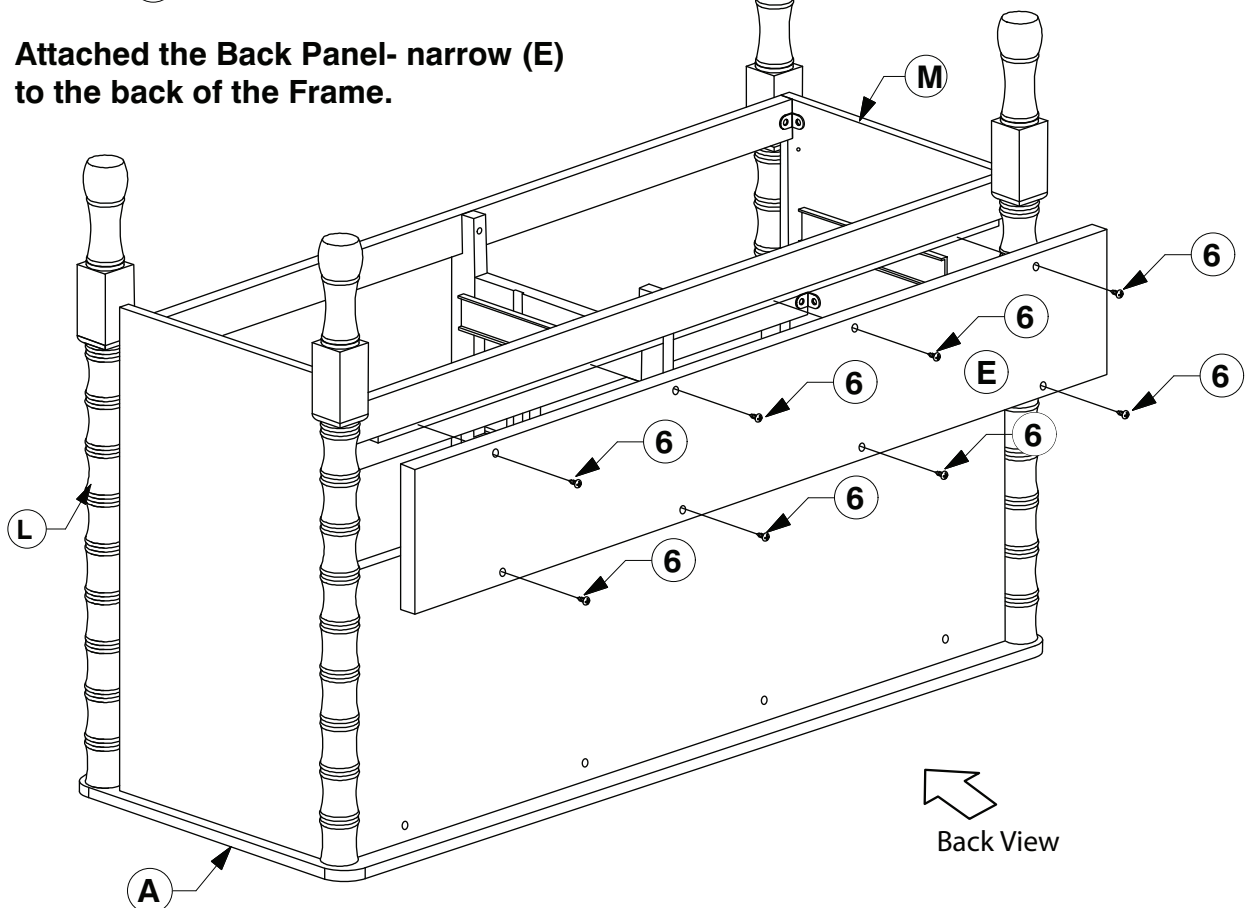

# 9017 6 Drawer Dresser


## Assembly Instructions

WI-0425

### 10 Install the Drawers.


- Push the Interlock bar **upwards** before inserting the drawers.

LEFT

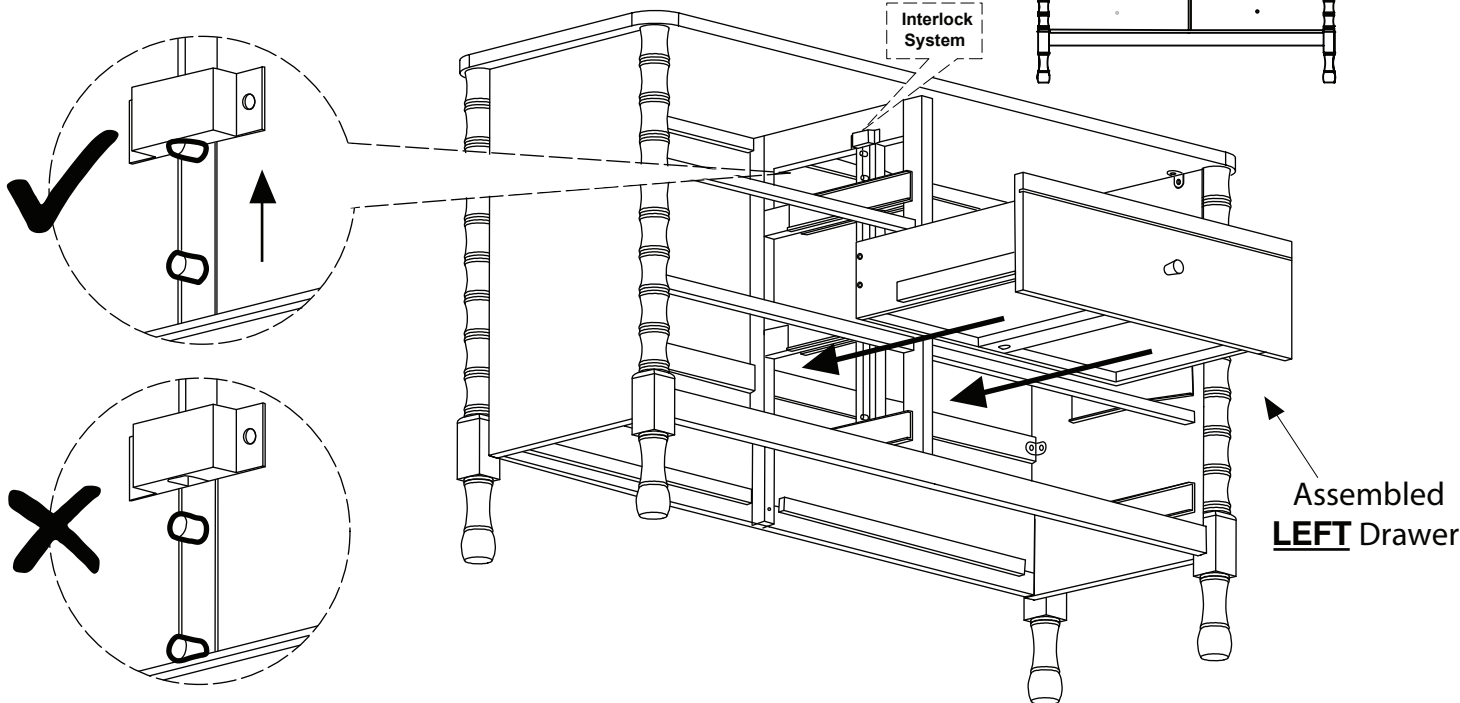

- Push the Interlock bar **upwards** before inserting the drawers.

RIGHT

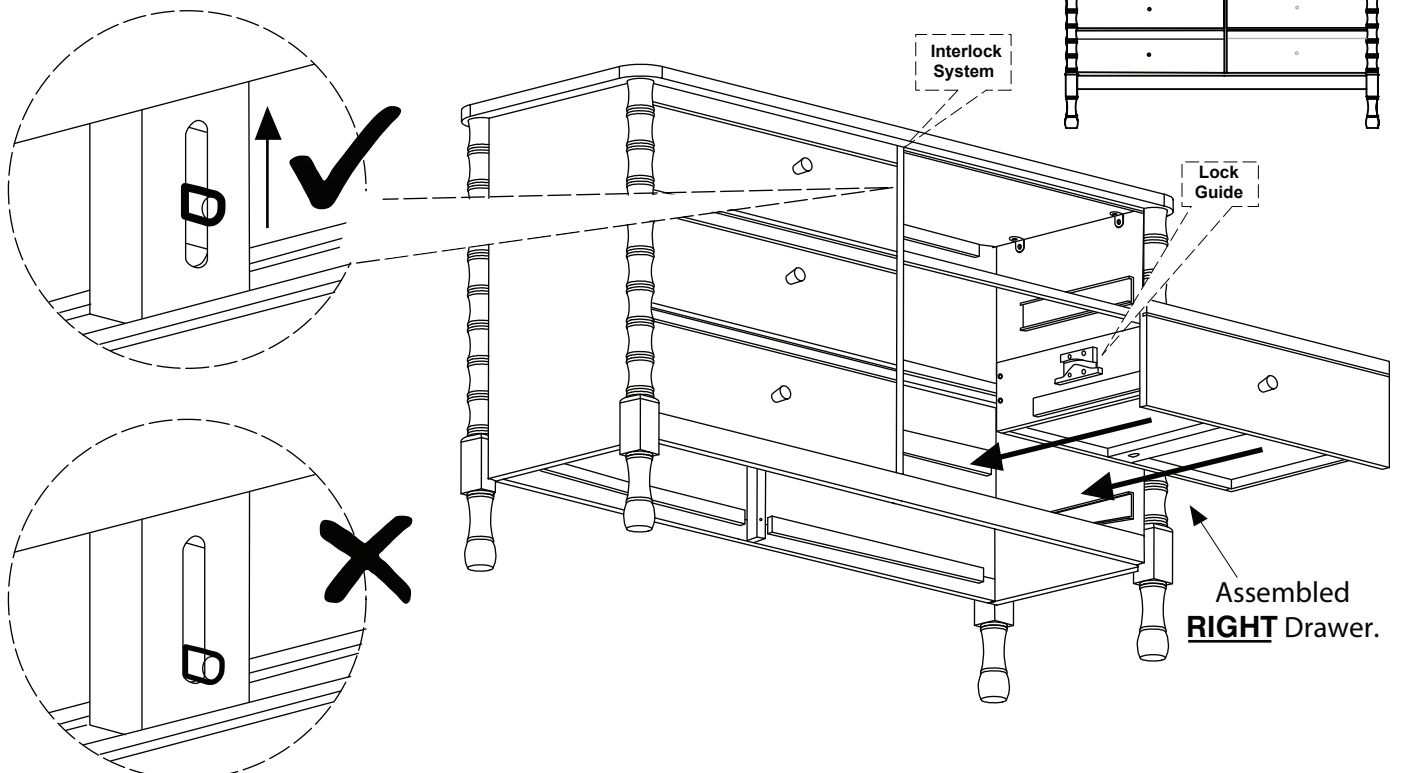


# 9017 6 Drawer Dresser

## Assembly Instructions


WI-0425

### 11 Adjust the Drawer Face (F).


- \* NOTE: Before fitting the Wood Screws .  
Losen the JCBs on the Drawer Face if  
the face needs alignment.

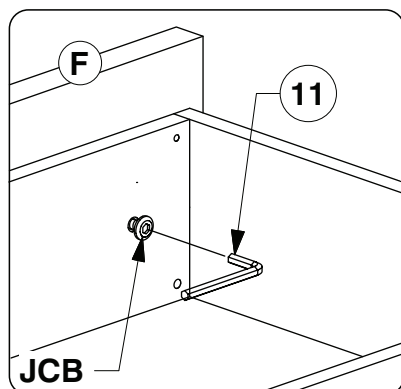


- \* NOTE: Only one Drawer can be open  
at a time.

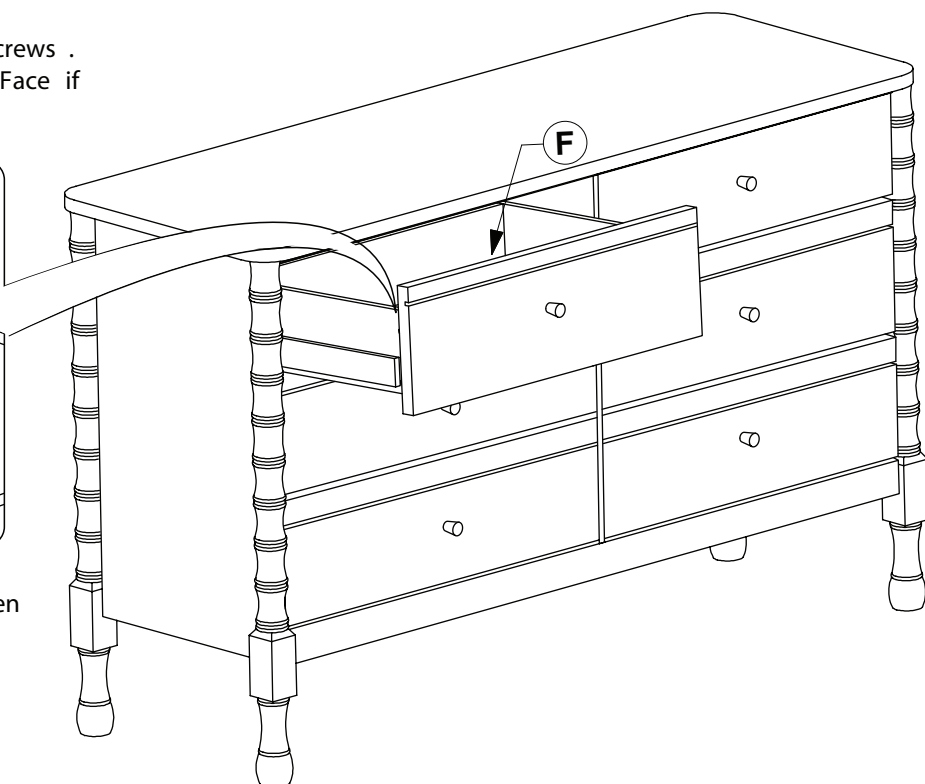

### 12 After the Drawer Faces (F) are aligned, secure with wood screws.

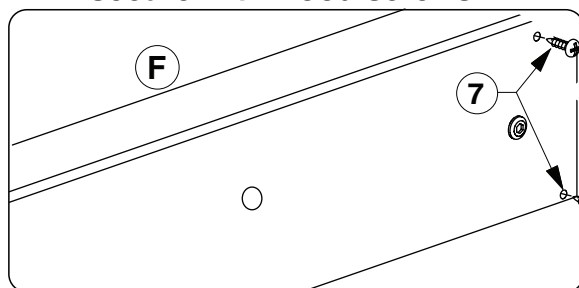

- \* NOTE: Only one Drawer can be open  
at a time.

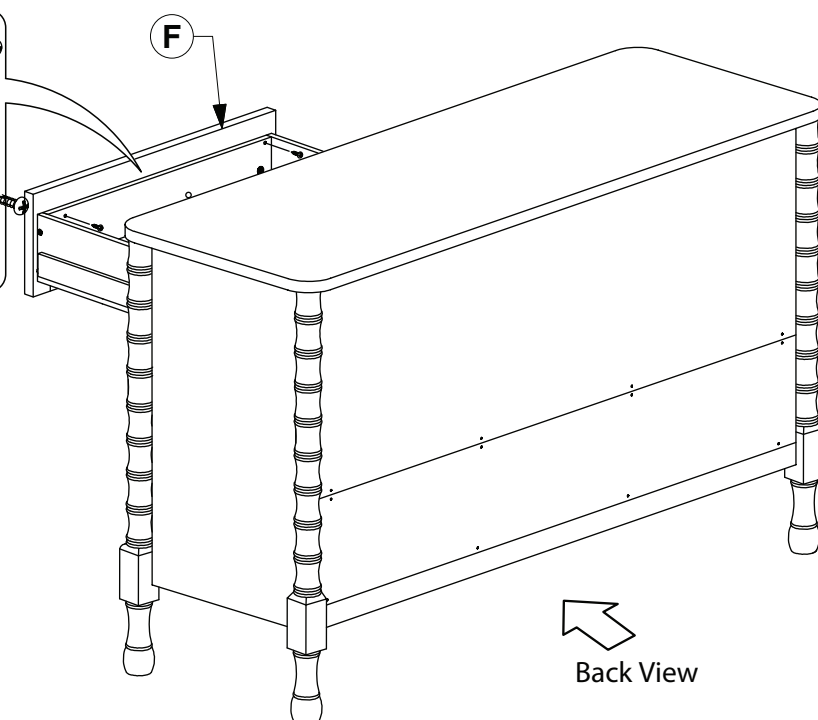




# 9017 6 Drawer Dresser

## Assembly Instructions


WI-0425

### 13 Remove the Drawers.

- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

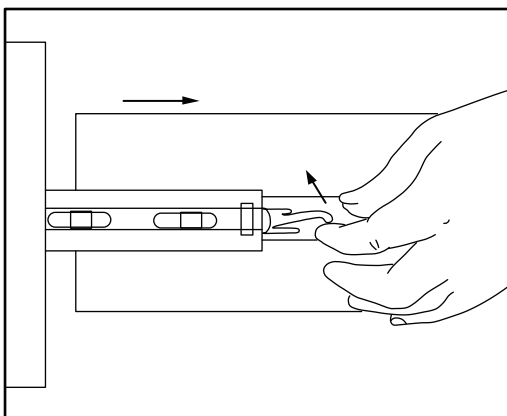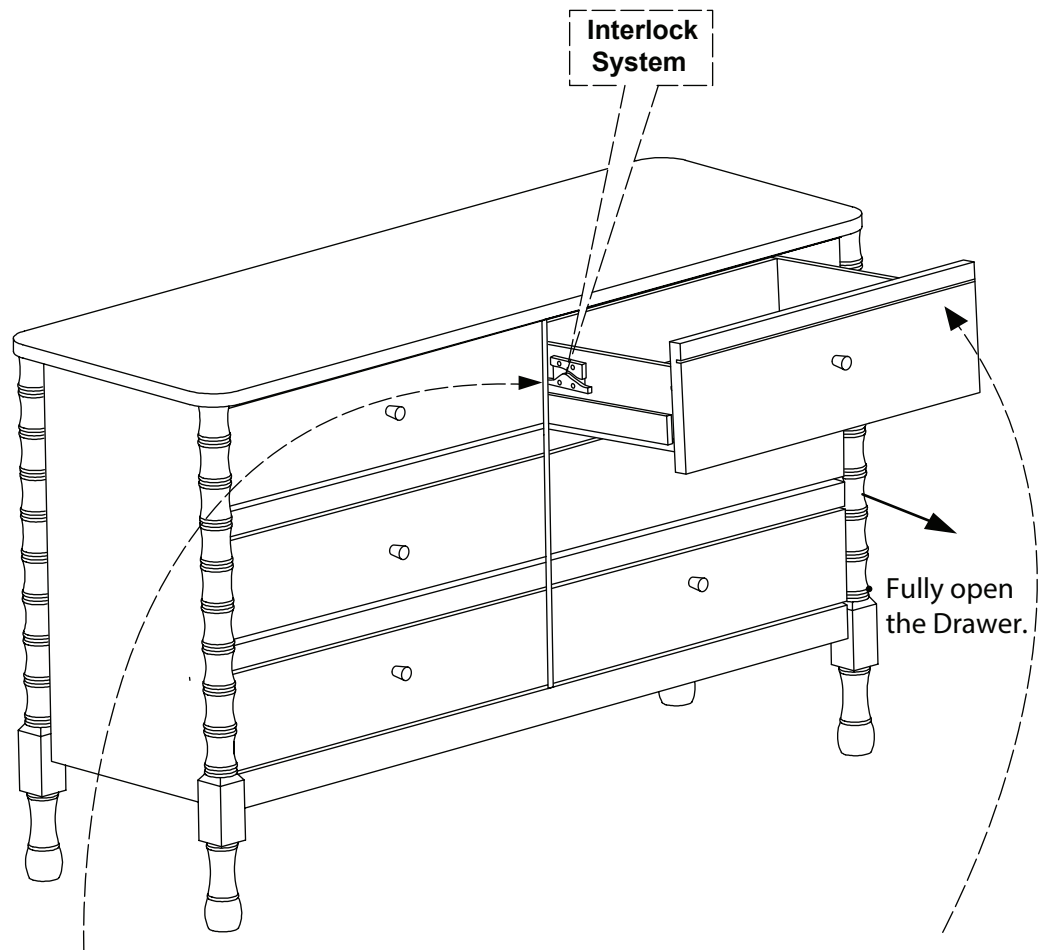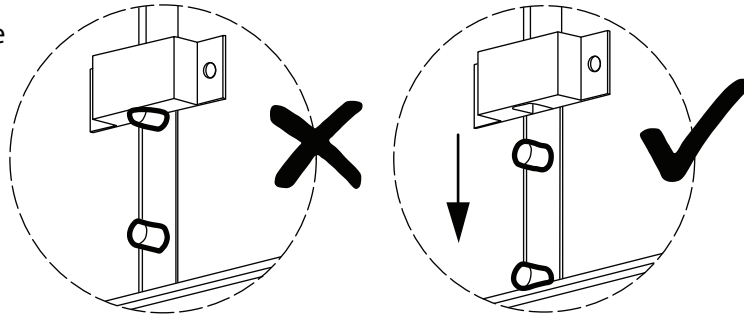

- Lift the **LEFT** side clip up.


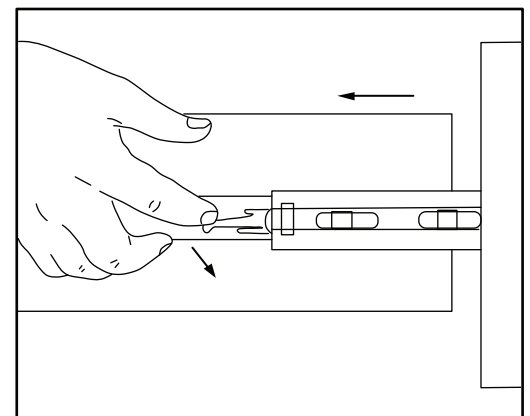


- Push the **RIGHT** side clip down.

# 9017 2D Side Table











## Assembly Instructions

WI-0425

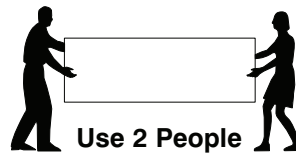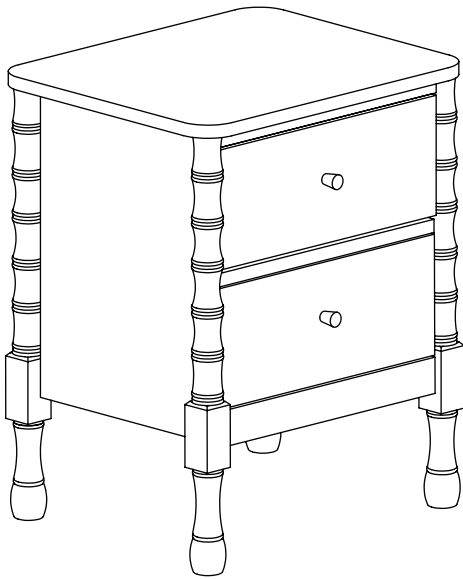

**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened

### 1 Parts List

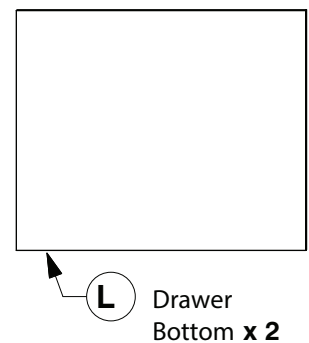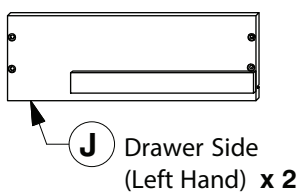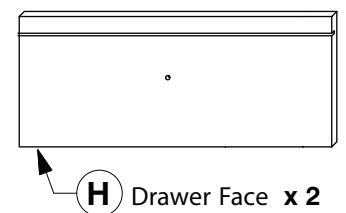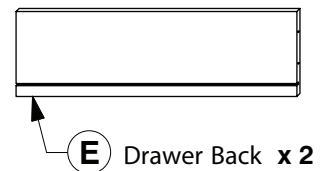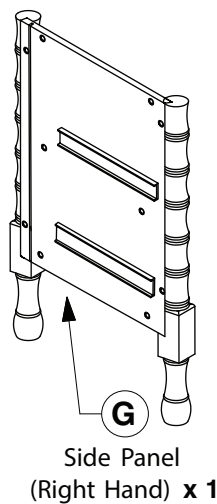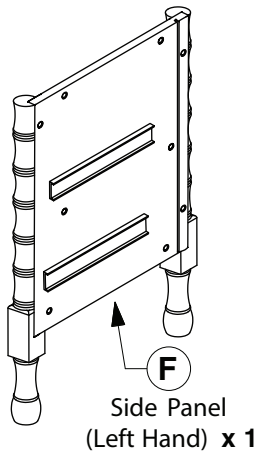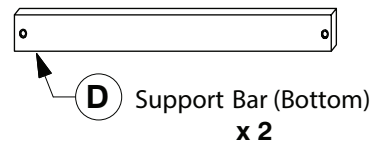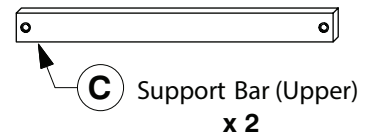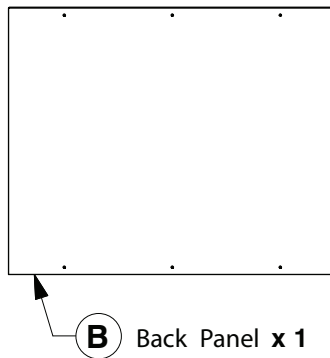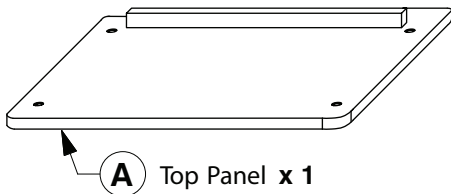









# 9017 2D Side Table

## Assembly Instructions


WI-0425

### 2 Hardware List

- |   |  |  |   |
|---|--|--|---|
| <br><b>1</b> M6 x 15mm<br>JCB x 24       | <br><b>2</b> 'L' Bracket<br>(5005-3) x 12 | <br><b>3</b> M4 x 25mm<br>Wood Screw x 16 | <br><b>4</b> M4 x 16mm<br>Wood Screw x 6 |
| <br><b>5</b> M4 x 20mm<br>Wood Screw x 8 | <br><b>6</b> (1005)<br>Handle x 2         | <br><b>7</b> M4 x 20mm<br>Wood Screw x 2  | <br><b>8</b> Allen Key<br>x 1            |


### 3 Assemble the Drawer Sides (J & K) to the Drawer Face (H).

x2

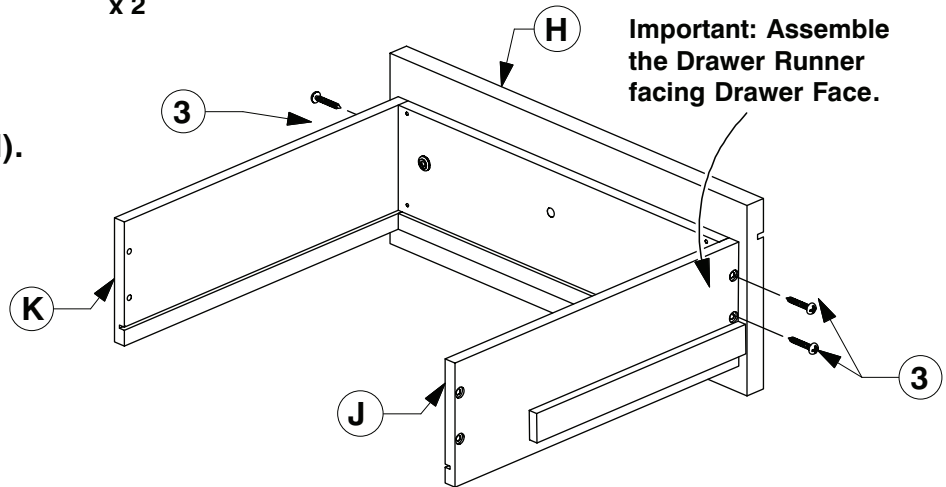


### 4 Slide the Drawer Bottom (L) into the groove on the Drawer Sides (J & K).

x2

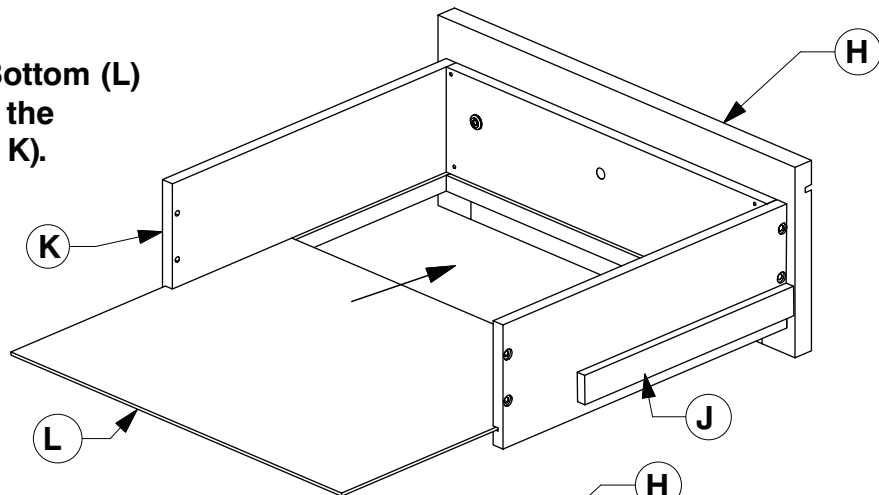

### 5 Assemble the Drawer Back (E) to the Drawer Sides (J & K). Fit the Handle (6) to the Drawer Face (H).

x2

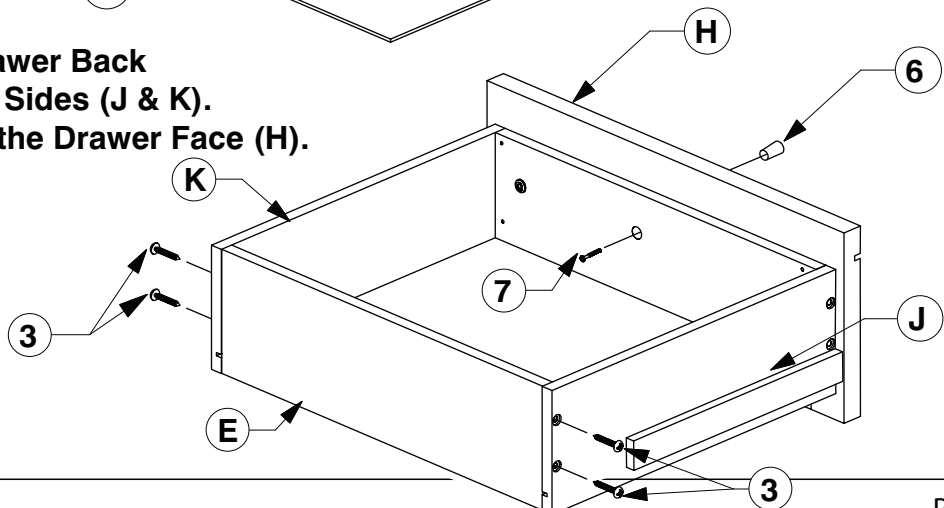


# 9017 2D Side Table


## Assembly Instructions

WI-0425

- 6** Fit the 'L' Bracket (2) to the Side Panel (F & G).

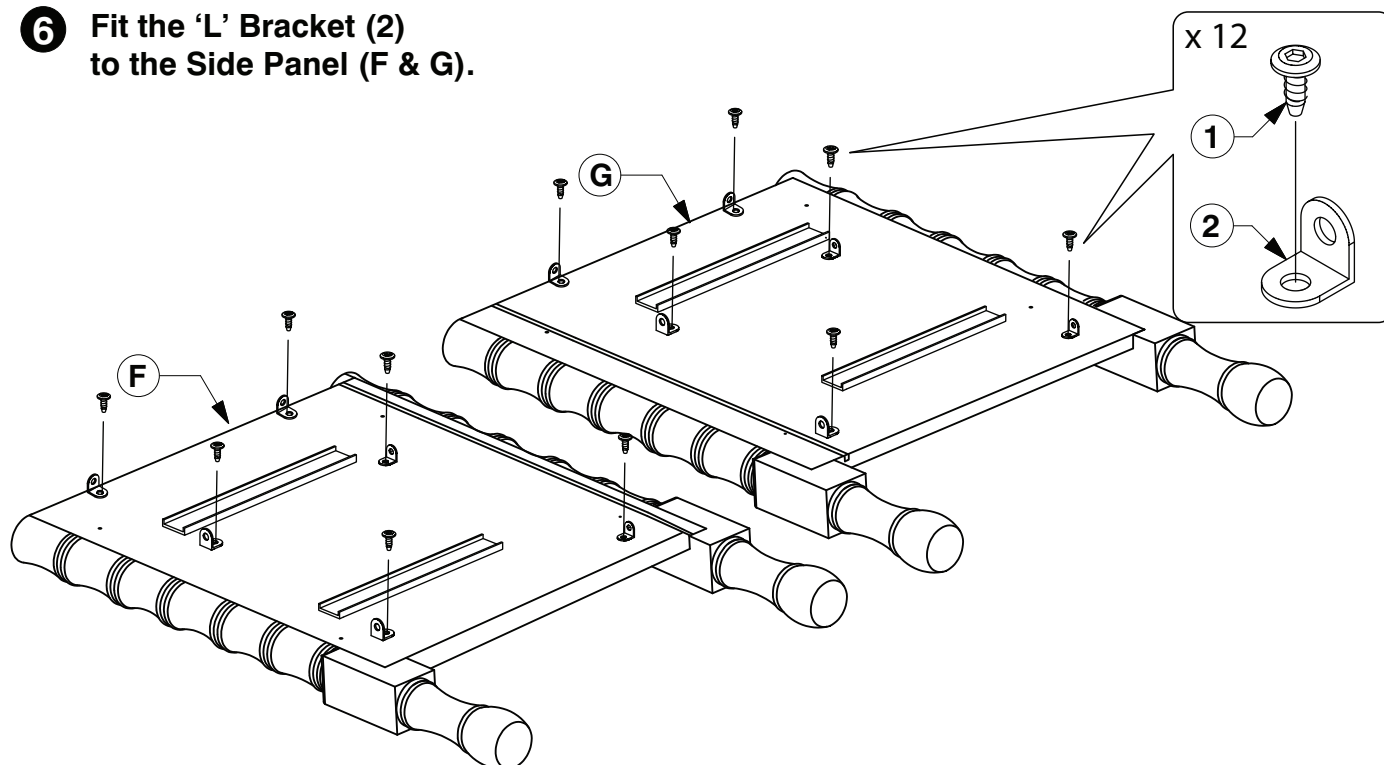

- 7** Assemble the Side Panel (F & G) to the Top Panel (A).

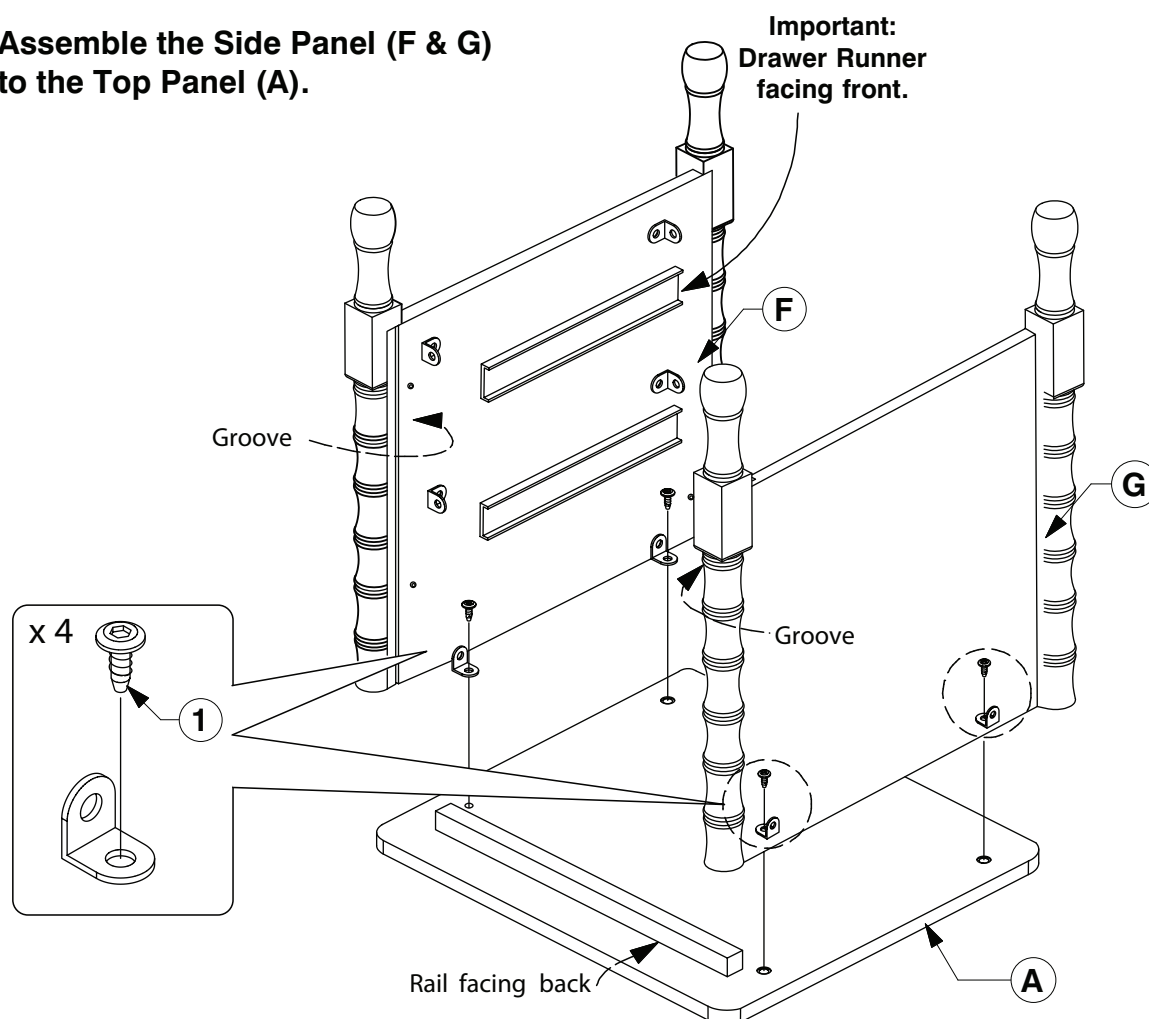




# 9017 2D Side Table


## Assembly Instructions

WI-0425

- 8** Fit the Support Bar Upper & Bottom (C & D) to the Side Panel (F & G).

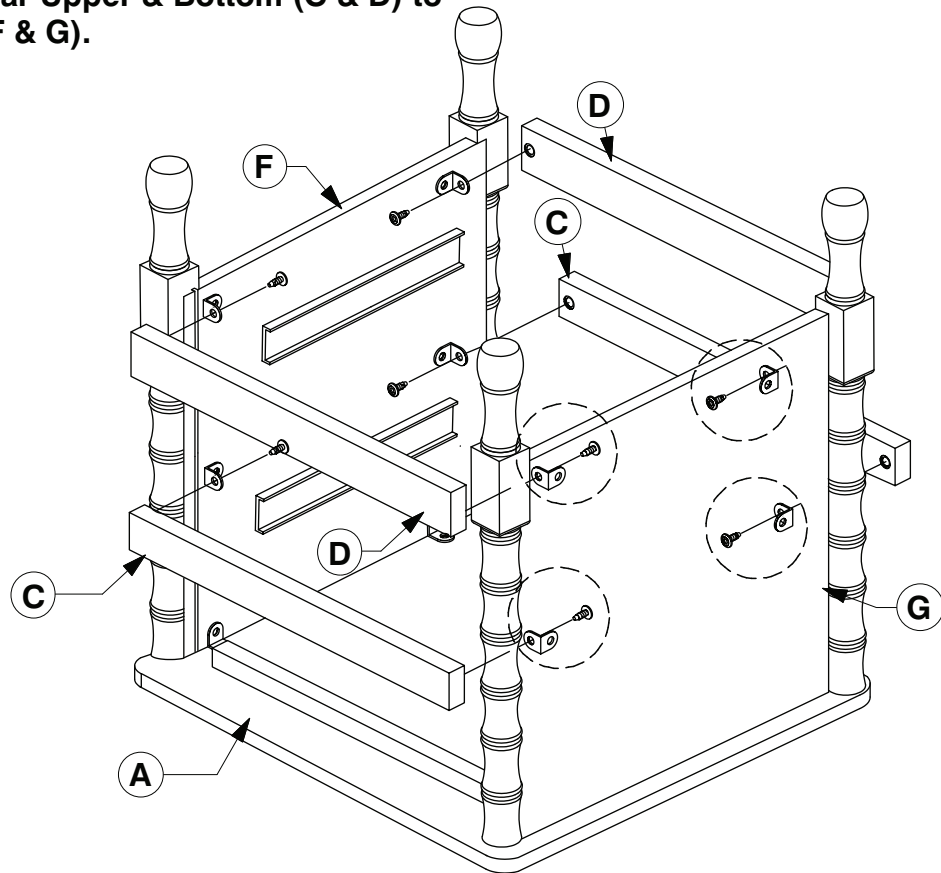

- 9** Slide the Back Panel (B) into the groove on the back of the Side Panel (F & G).

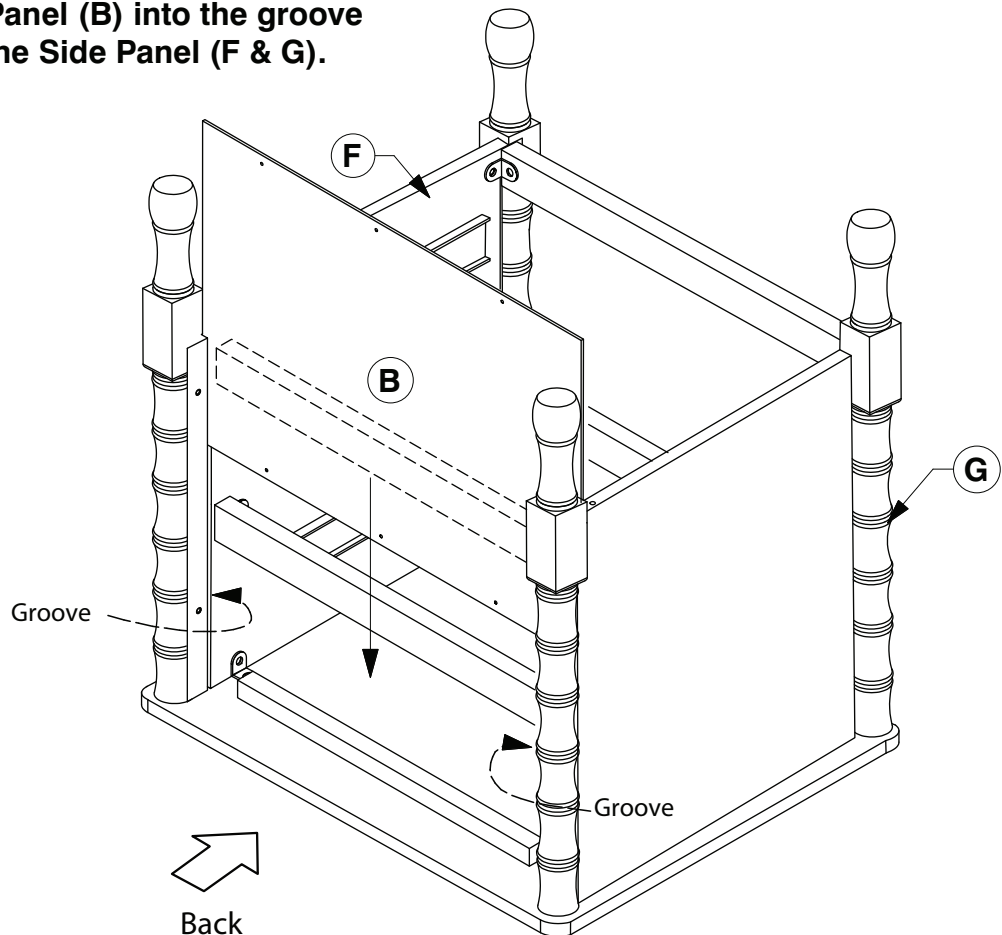


# 9017 2D Side Table


## Assembly Instructions

WI-0425

- 10** Use Screw to tighten the Back Panel (B) to the back of frame.

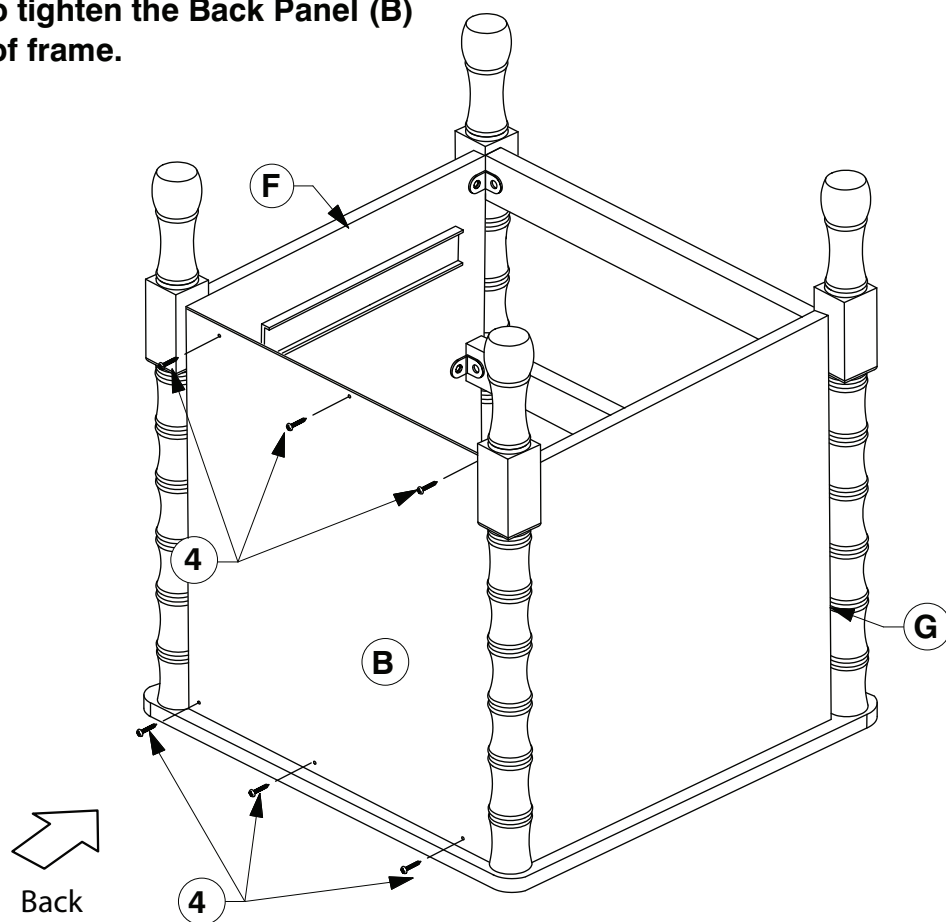

- 11** Fit the Drawer Box to the casegood body.

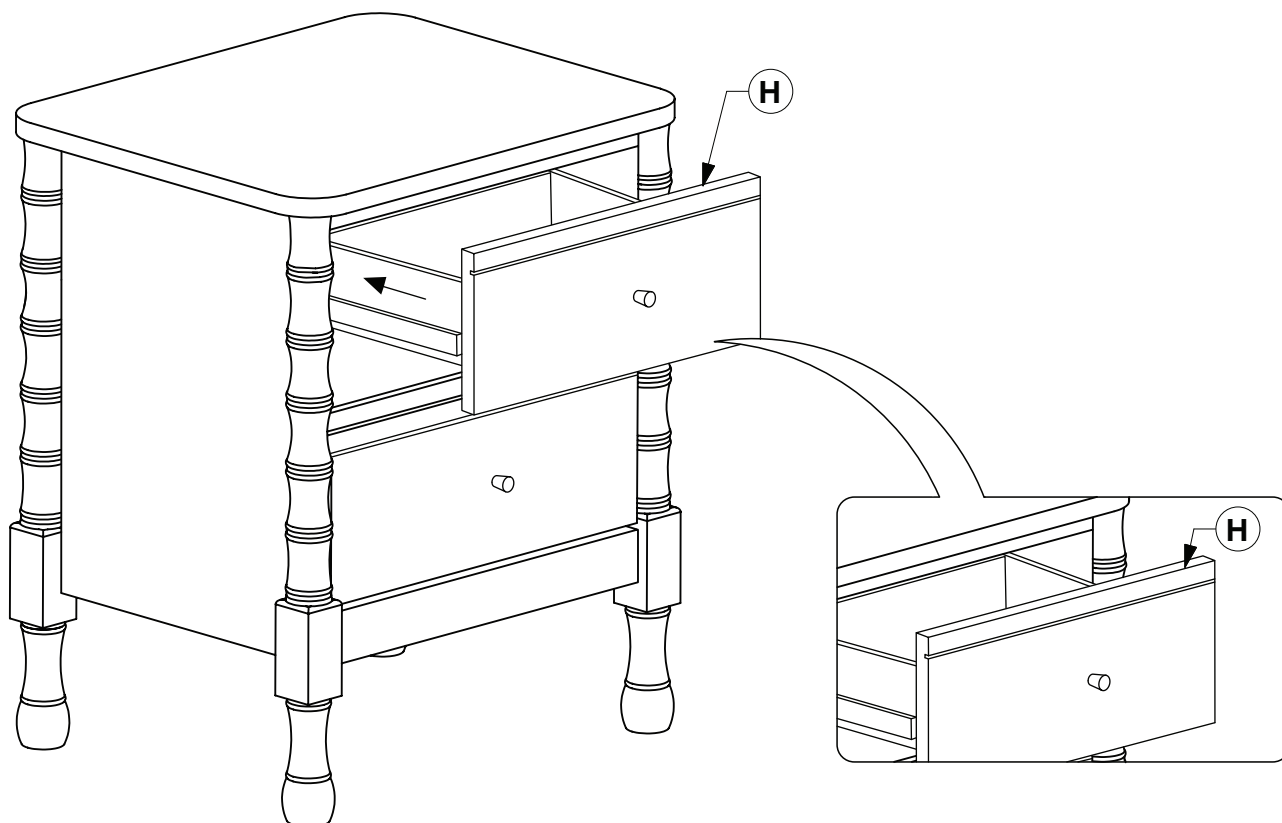



# 9017 2D Side Table

## Assembly Instructions



WI-0425

### 12 Fit and adjust the Drawer Face (H).

\* NOTE: Before fitting the Wood Screws .  
Loosen the JCBs on the Drawer Face if  
the face needs alignment .

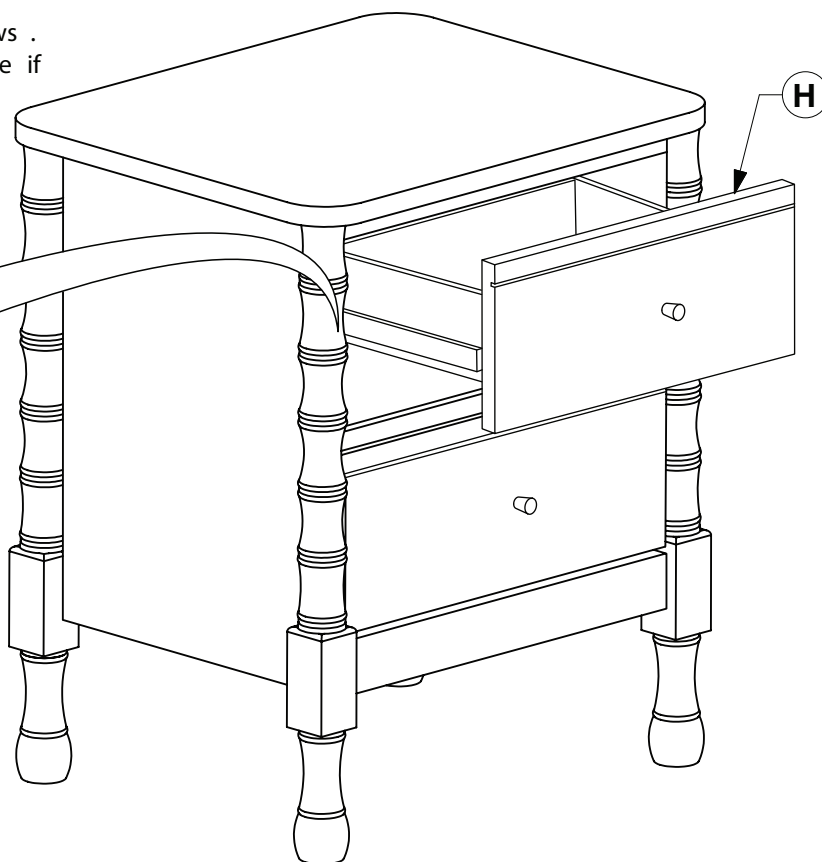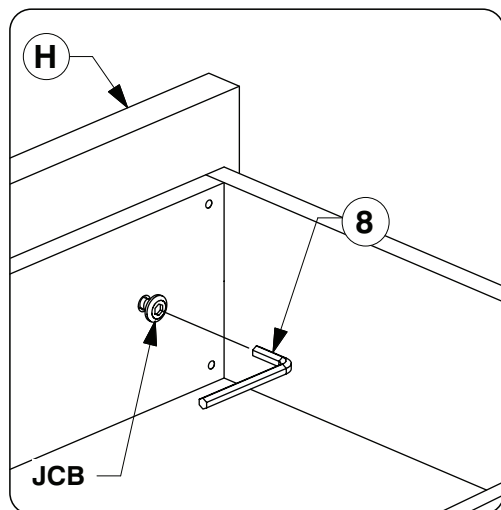



### 13 After the Drawer Faces (H) are aligned, secure with wood screws.

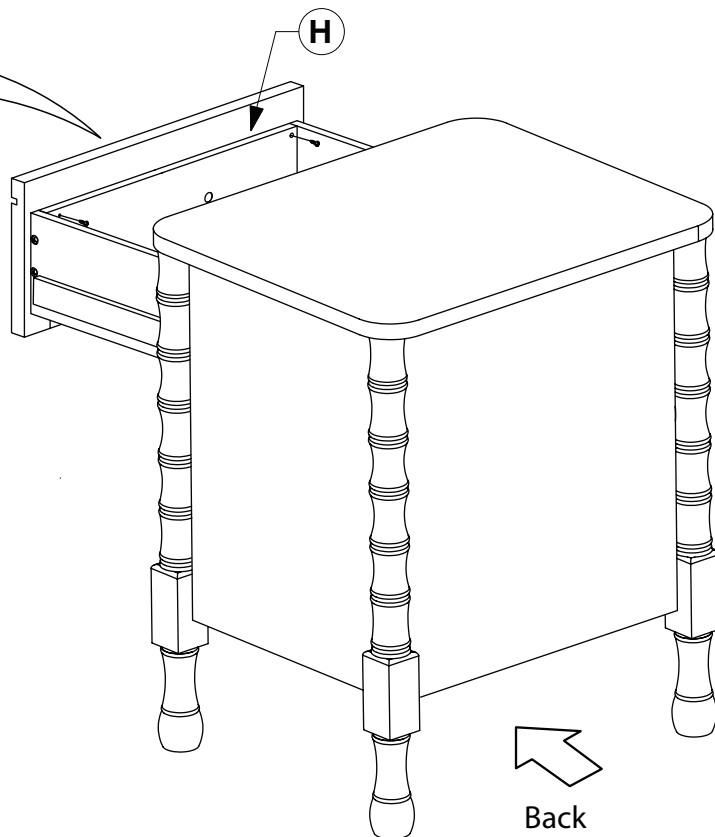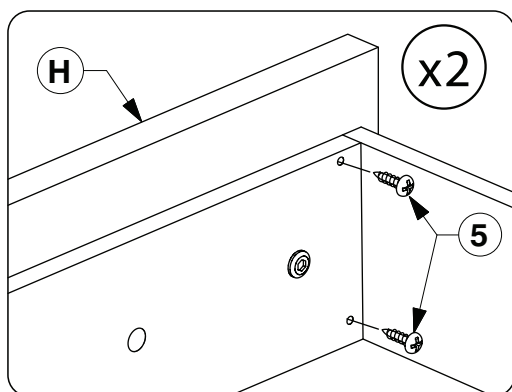


# 9017 4 Drawer Chest

## Assembly Instructions

WI-0425

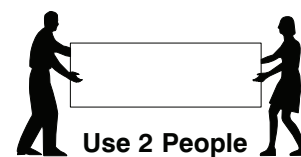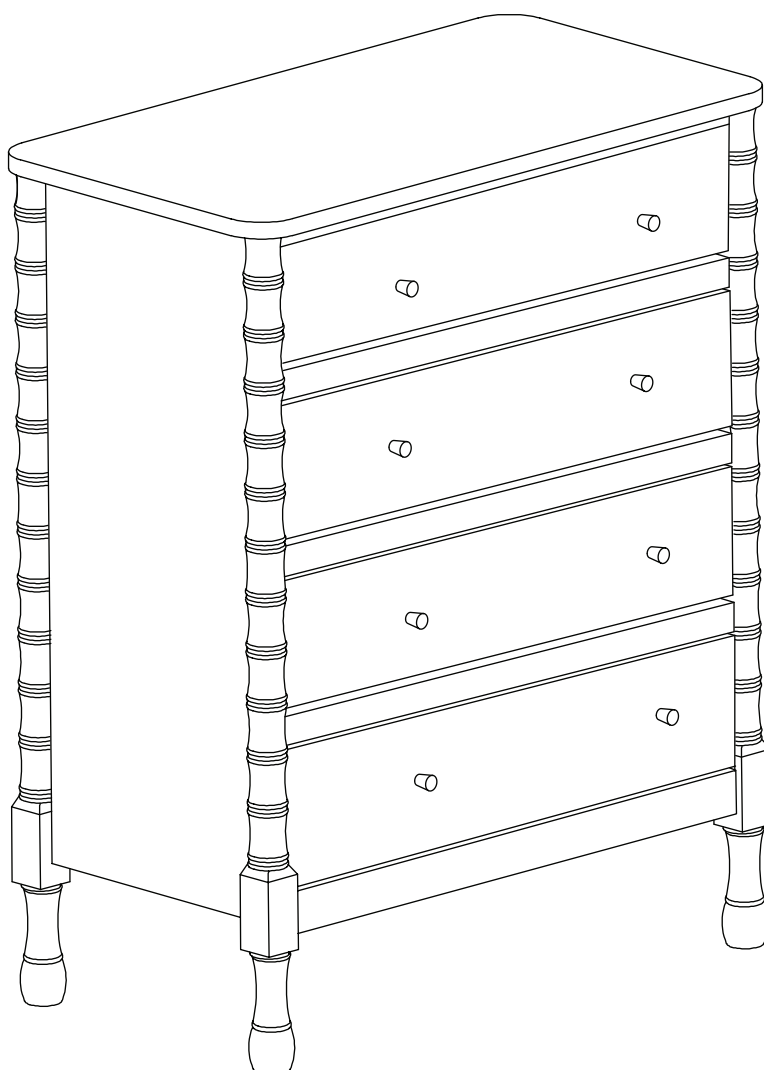


Use 2 People

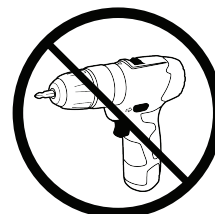

**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened

### WARNING

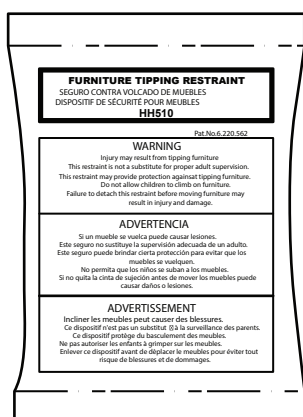

Anti Tipping Kit  
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.


# 9017 4 Drawer Chest

## Assembly Instructions


WI-0425

### 1 Parts List


#### Parts in Box A:

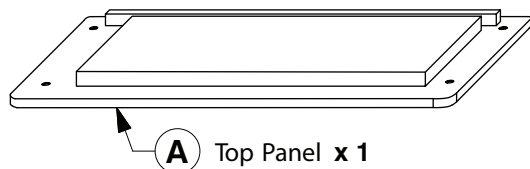

**A** Top Panel x 1



**B** Bottom Panel x 1




**C** Back Panel x 2




**D** Upper Support Bar x 2



**E** Bottom Front Support Bar x 1




**F** Bottom Rear Support Bar x 1



**G** Drawer Back x 4




**H** Drawer Bottom x 4



**J** Drawer Face x 4




**K** Drawer Rail x 4




**L** Bottom Support x 4

#### Parts in Box B:

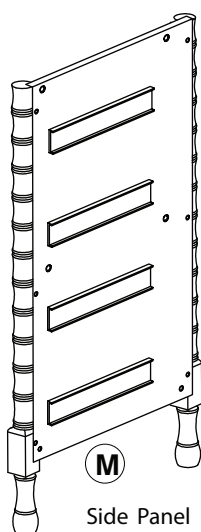


**M** Side Panel (Left Hand) x 1

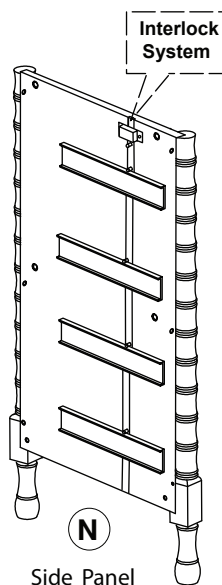


**N** Side Panel (Right Hand) x 1

**O** Drawer Side (Left Hand) x 4

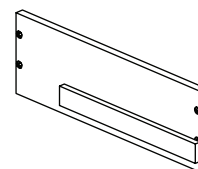

**P** Drawer Side (Right Hand) x 4










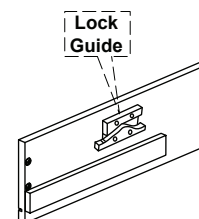


# 9017 4 Drawer Chest


## Assembly Instructions

WI-0425

### 2 Hardware List

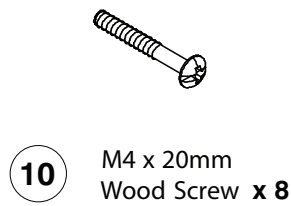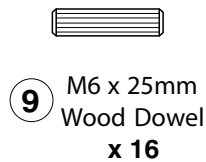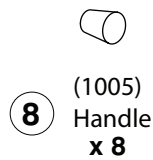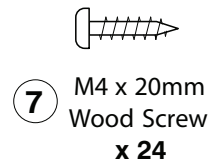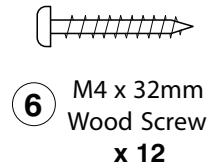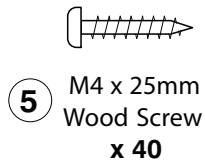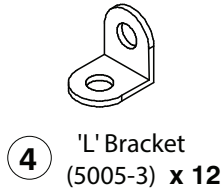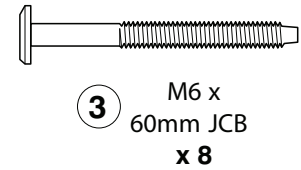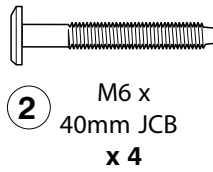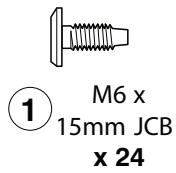

### 3 Assemble the Drawer Sides (O & P) & Drawer Rail (K) to the Drawer Face (J).

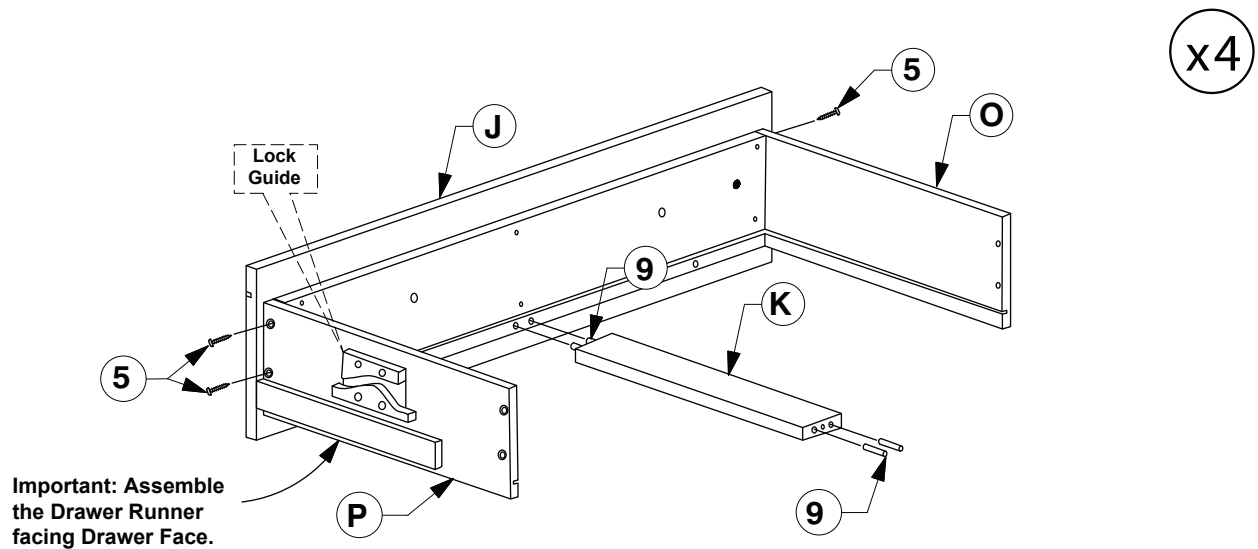


# 9017 4 Drawer Chest

## Assembly Instructions

WI-0425


- 4** Slide the Drawer Bottom (H) into the groove on the Drawer Sides (O & P).

x4

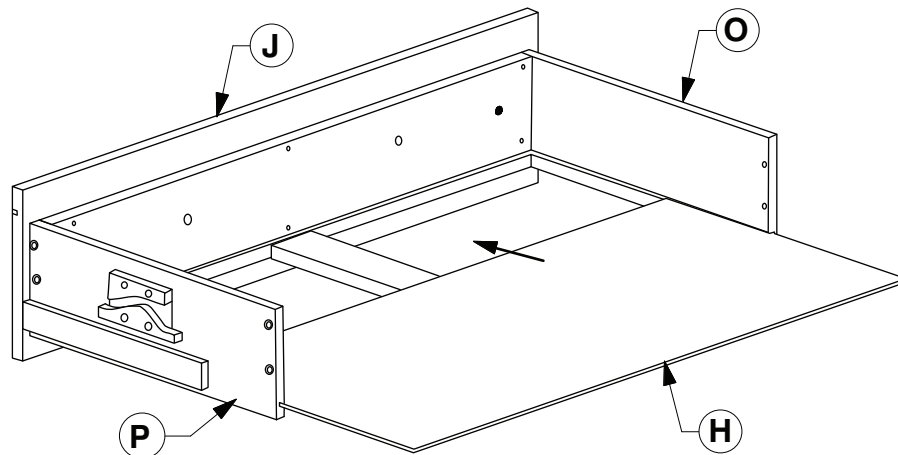


- 5** Assemble the Drawer Back (G) to the Drawer Sides (O & P). Fit the Handle (8) to the Drawer Face (J).

x4

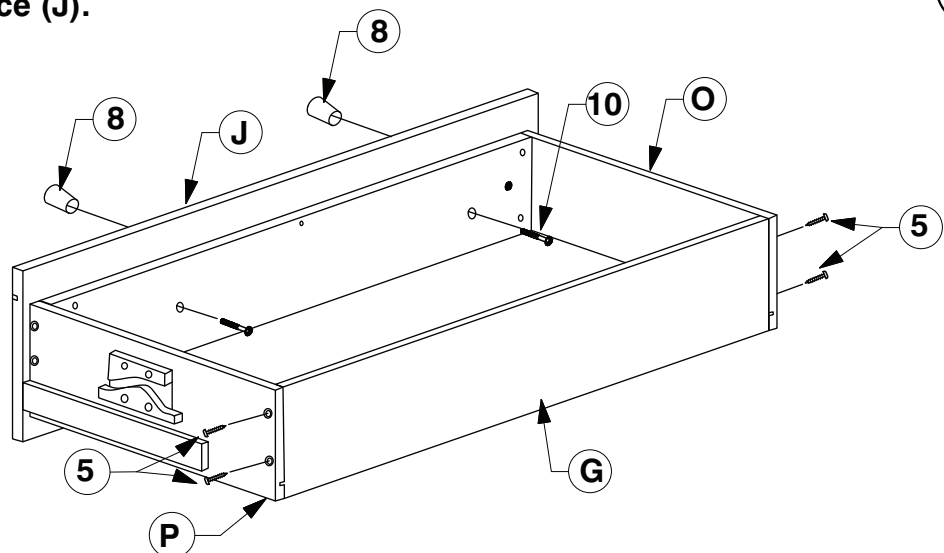

- 6** Turn the Drawer over to fit angled 25mm Wood screws (5) to the Drawer Rail (K).

x4

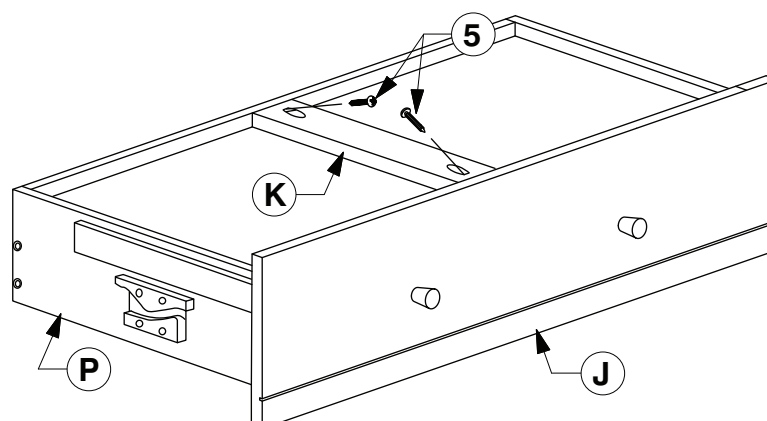




# 9017 4 Drawer Chest

Assembly Instructions

WI-0425

- 7** Fit the 'L' Bracket (4) to the Side Panel (M & N).

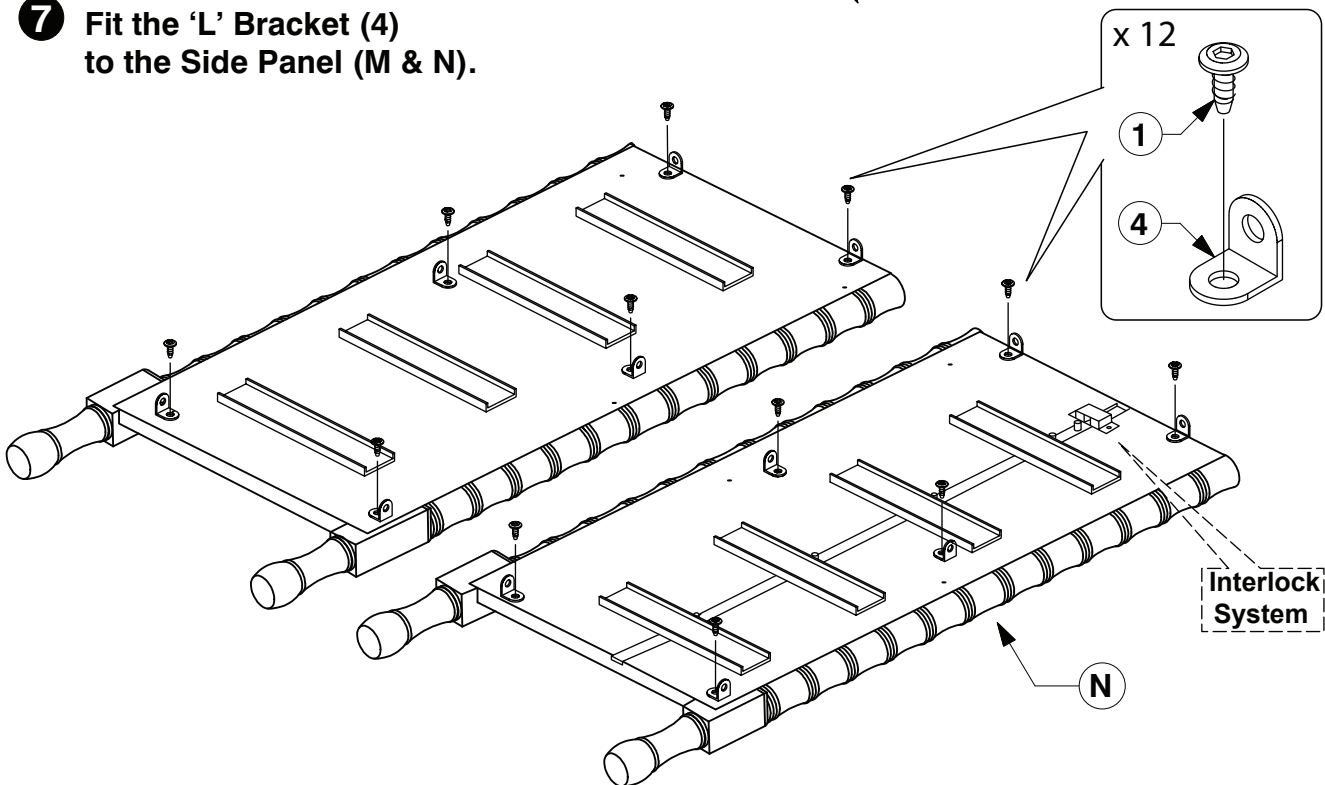

- 8** Assembled the Top Panel (A) to the Side Panel (M & N).




# 9017 4 Drawer Chest


## Assembly Instructions

WI-0425

- 9** Fit the Support Bar Upper & Bottom (D & E & F) to the Side Panel (M & N) as shown.

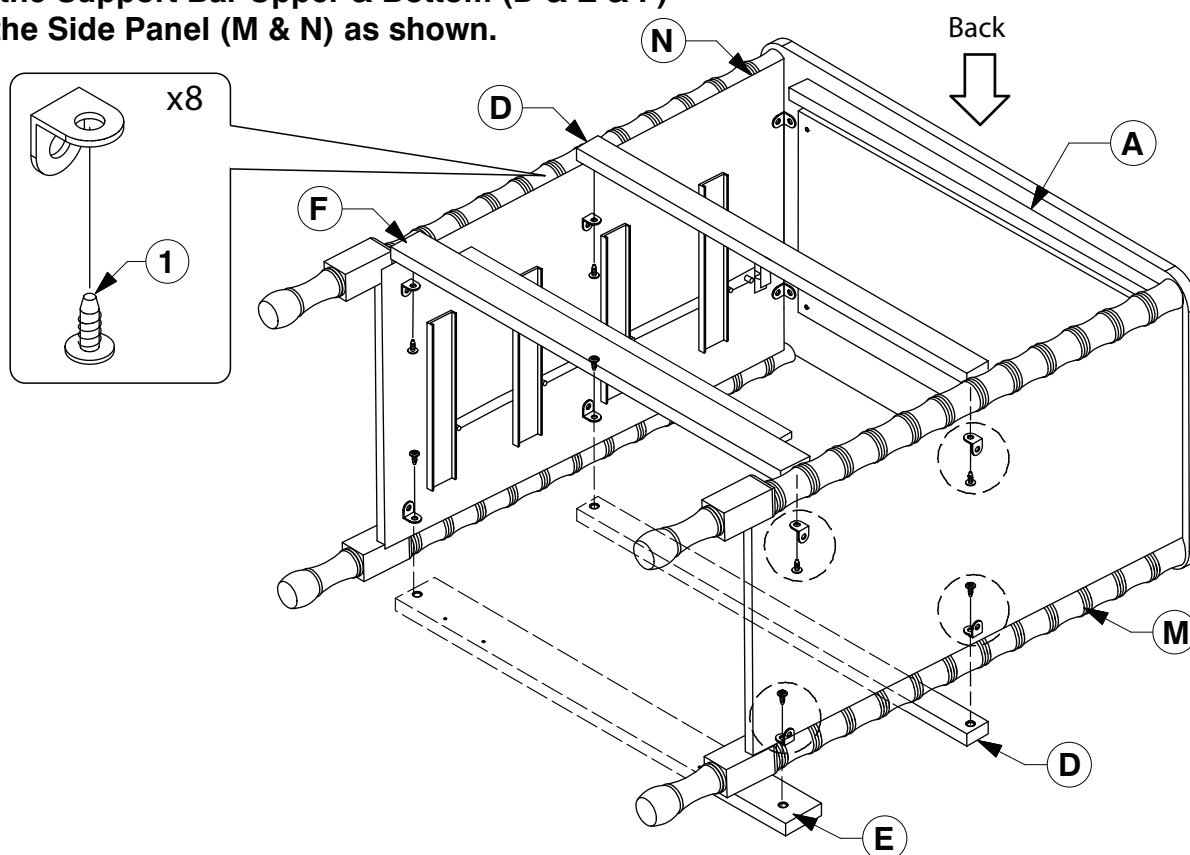

- 10** Assembled the Bottom Support (L) to the Bottom Front & Rear Support Bar (E & F) as shown.

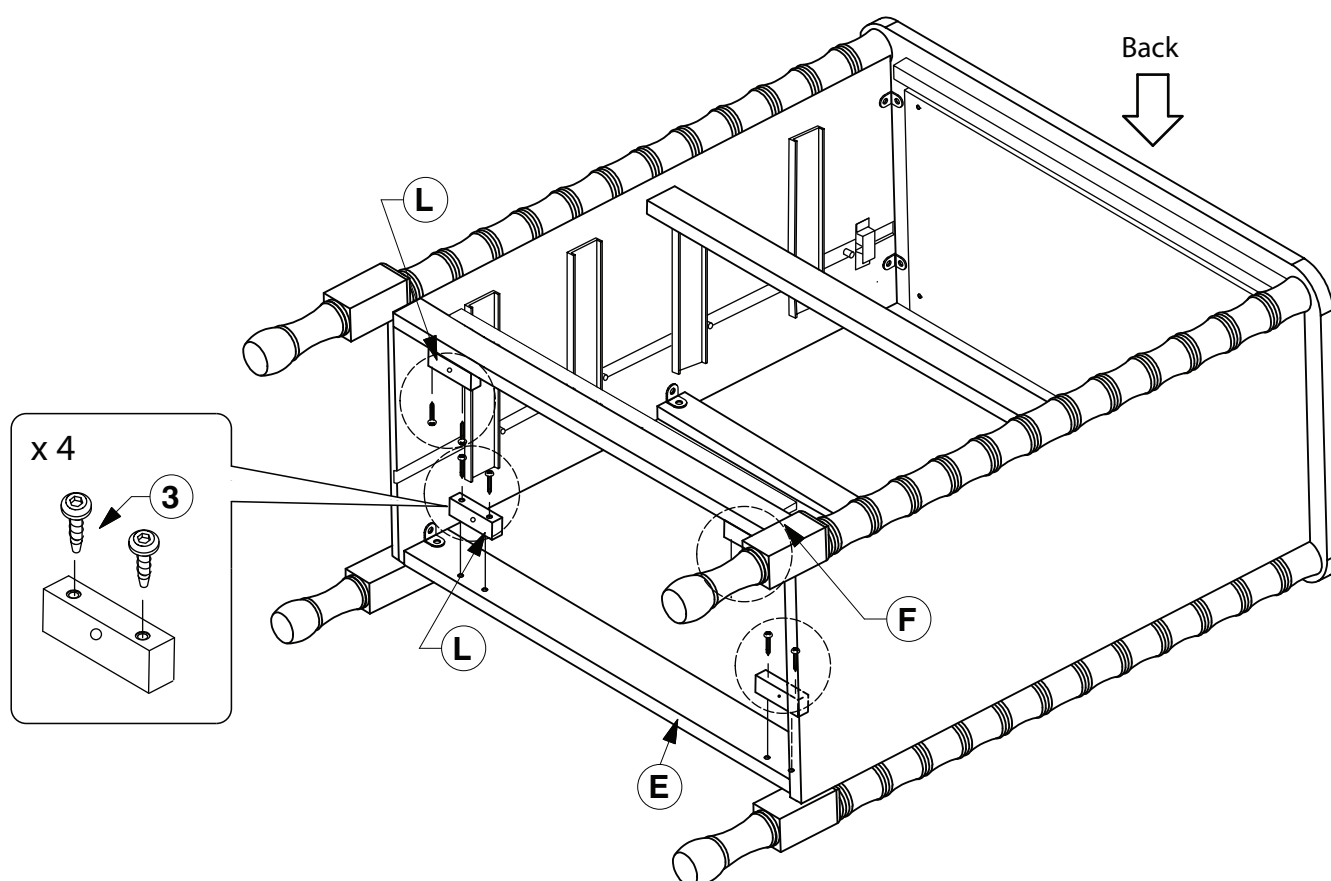


# 9017 4 Drawer Chest


## Assembly Instructions

WI-0425

- 11** Bolt the Bottom Support (L) to the Bottom Panel (B) as shown.

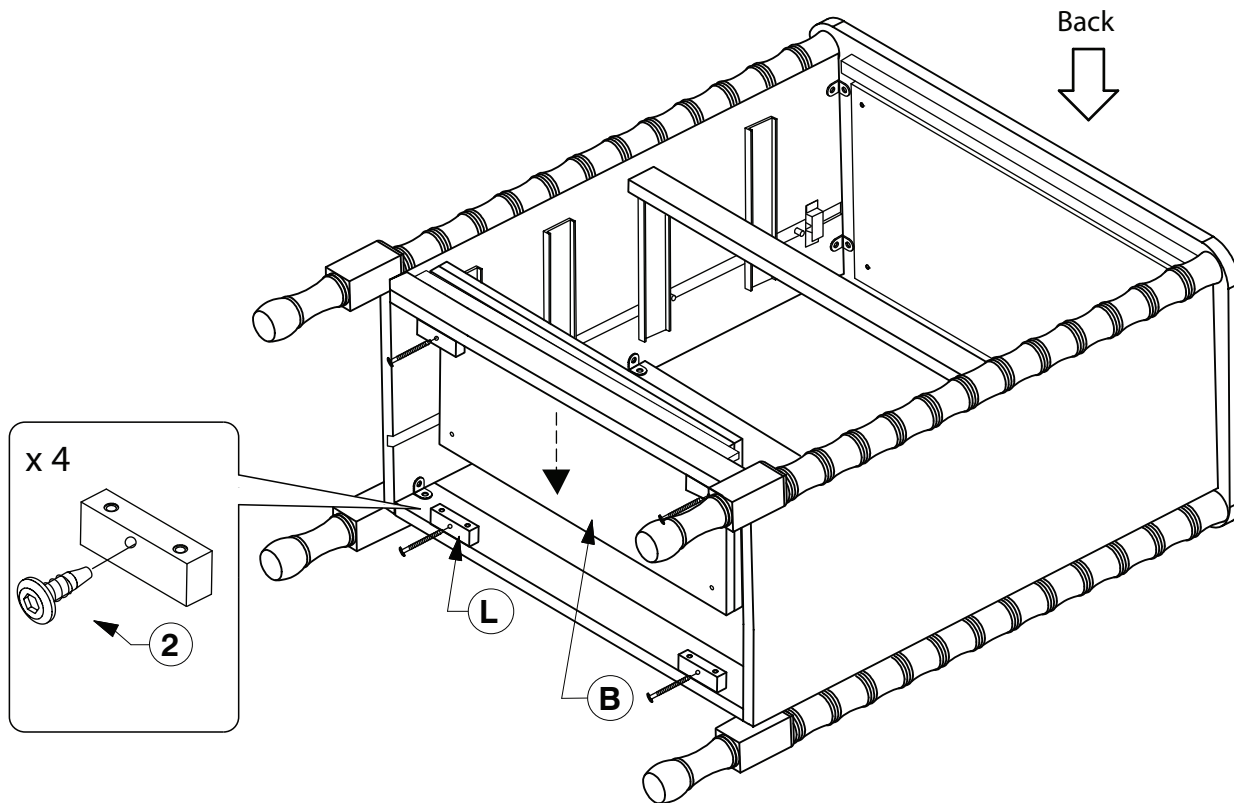

- 12** Attached the Back Panel (C) to the back of the frame.

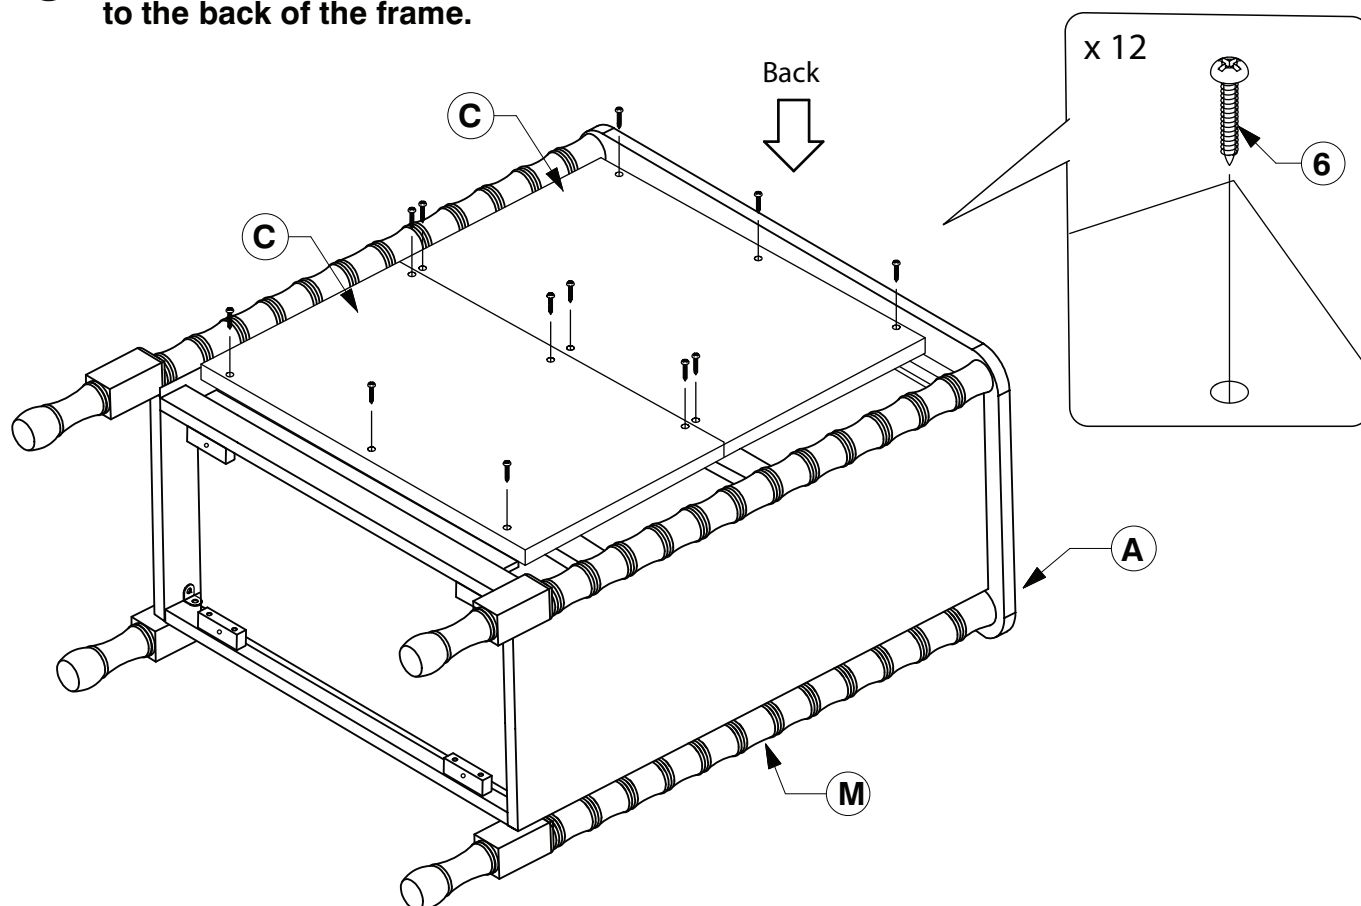


# 9017 4 Drawer Chest

## Assembly Instructions

WI-0425


### 13 Install the Drawer.

- Push the Interlock bar **upwards** before inserting the drawers.

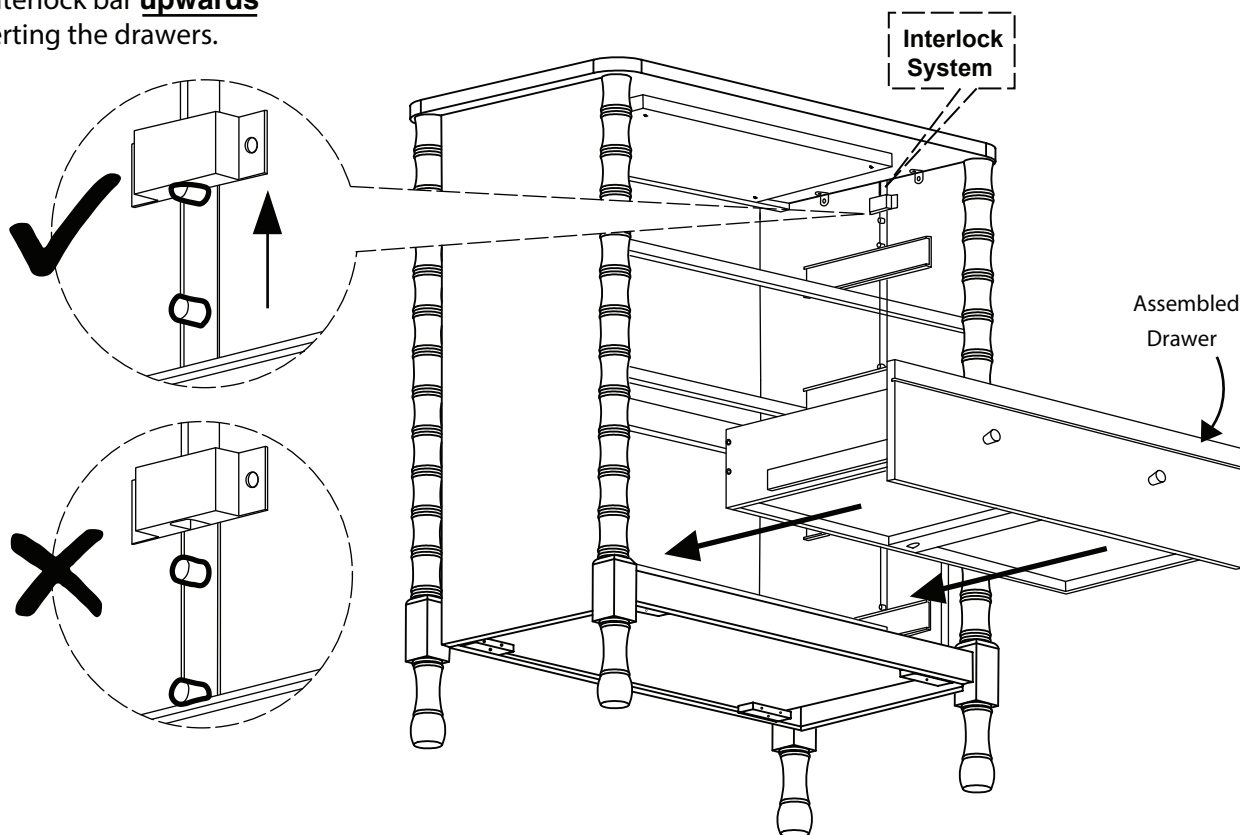


### 14 Fit and adjust the Drawer Face (J).

- \* NOTE: Before fitting the Wood Screws .  
Losen the JCBs on the Drawer Face if the face needs alignment .

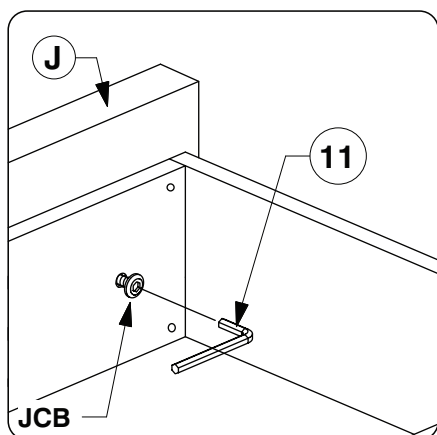

- \* NOTE: Only one Drawer can be open at a time.

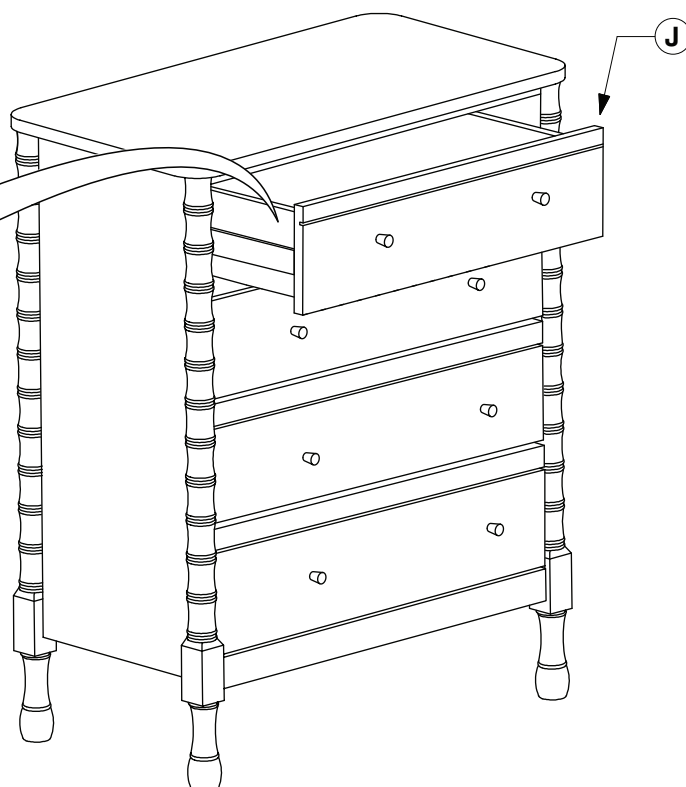


# 9017 4 Drawer Chest

## Assembly Instructions

WI-0425

- 15** After the Drawer Faces (J) are aligned secure with wood screws.

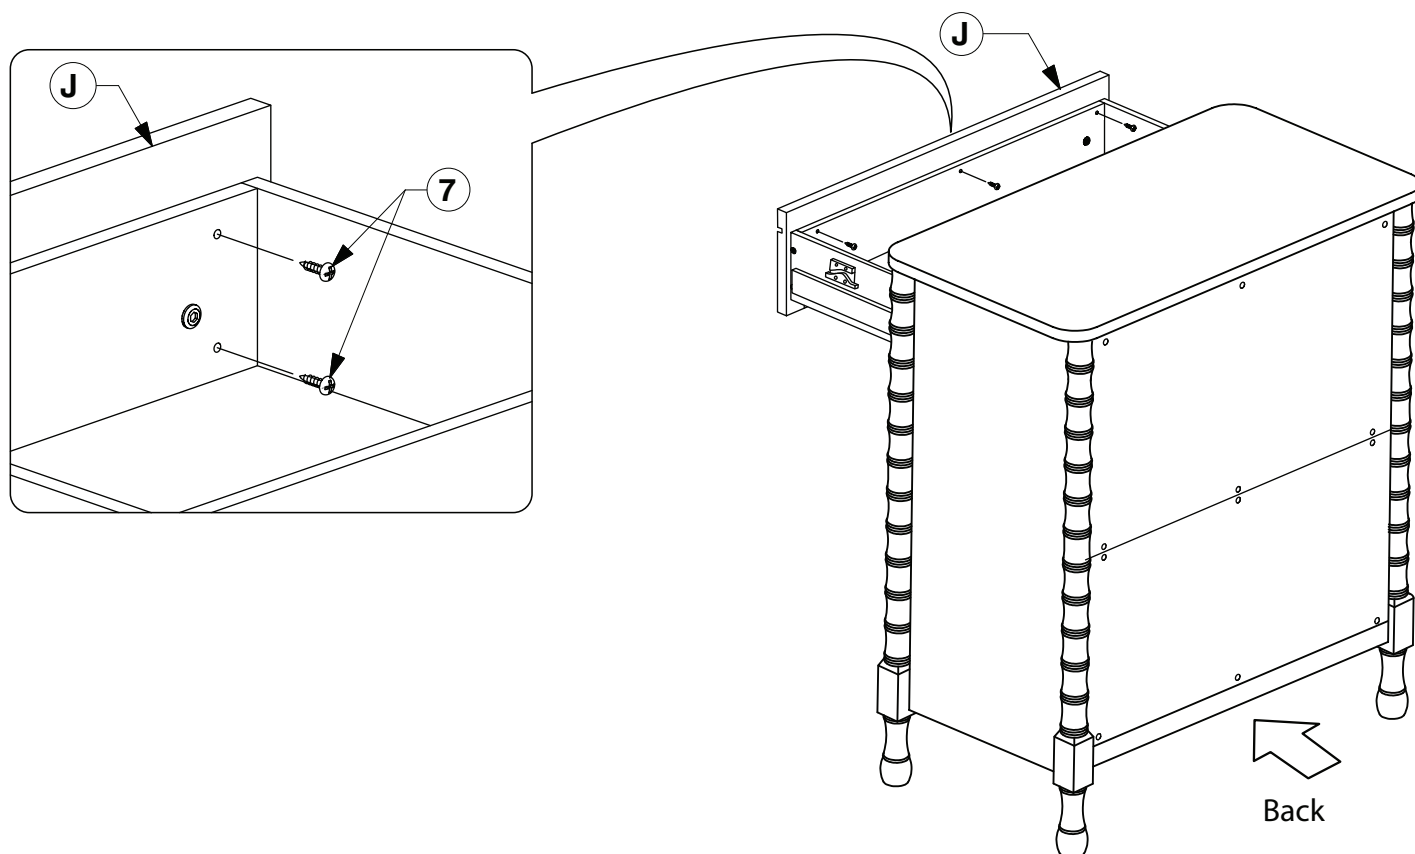




# 9017 4 Drawer Chest

## Assembly Instructions


WI-0425

### 16 Remove the Drawers.

- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

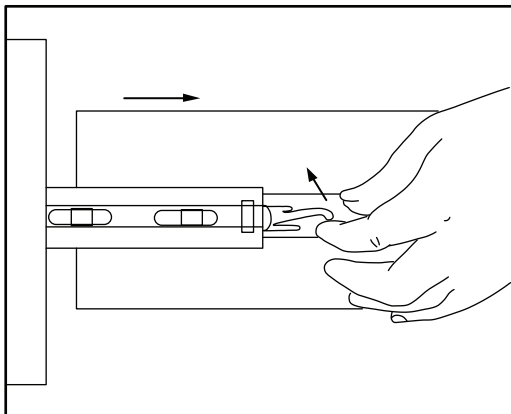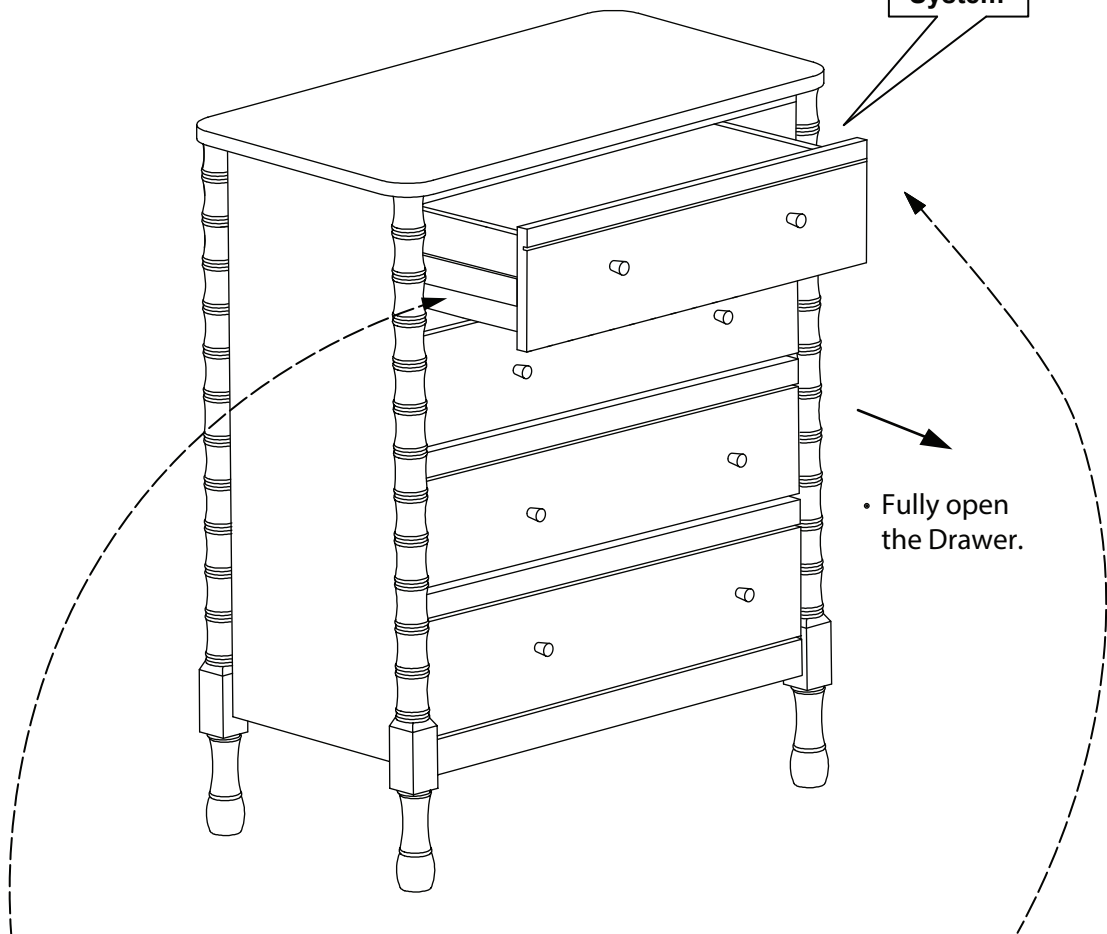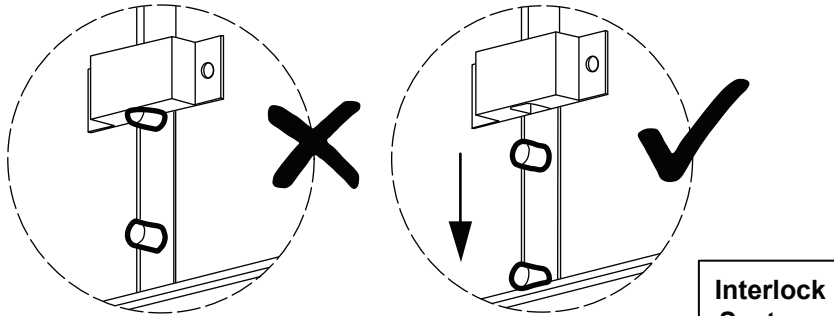

- Lift the **LEFT** side clip up.

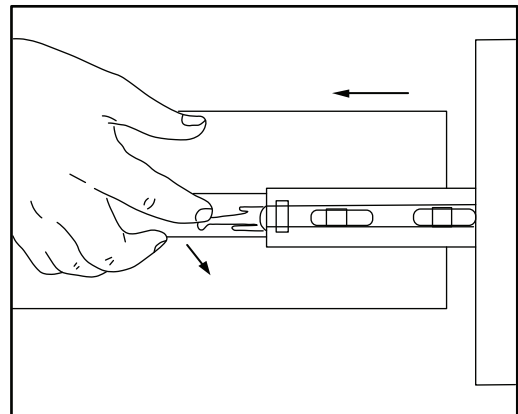

- Push the **RIGHT** side clip down.