

Suggestion:

For a simpler and quicker assembly process,
we recommend that two people work together.
Due to the product's structure, the estimated assembly time is 100 minutes.

IMPORTANT:

1. Please read the instructions carefully before assembling the product.
2. Before starting the assembly process, check the package carefully to make sure all necessary boards and parts are included.
3. If there are any defective or missing parts after unpacking, please stop assembly and immediately contact us.
4. Before assembly, put all parts and boards in an open area. Ensure that you have the correct parts before screwing them in place.


Warning:

1. During assembly, keep all small objects out of the reach of children, as they may be fatalif swallowed or inhaled
2. Never allow children to climb or play around the product to protect children from injury caused by the tilting of the product.
3. To avoid the potential dangers of suffocation, please keep all parts and packaging away from children.

Self equipped tools








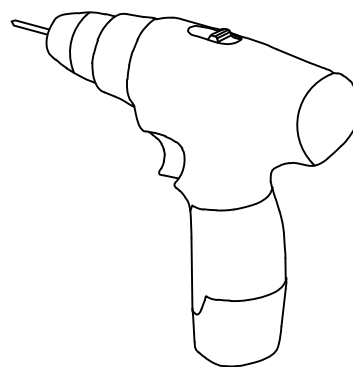






Slotted Screwdriver
(Not included)



Electric Drill
(Not included)

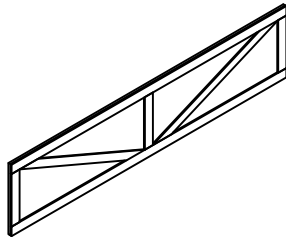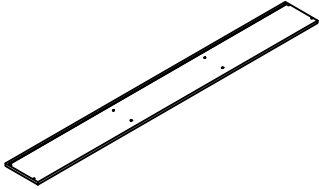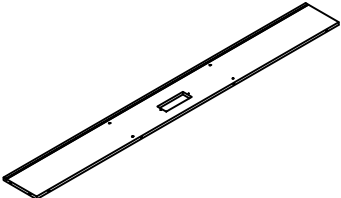
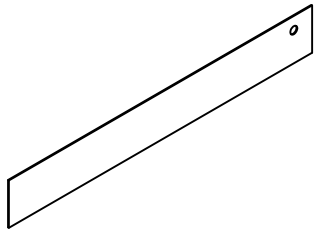

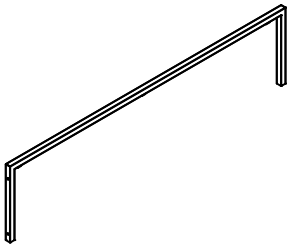
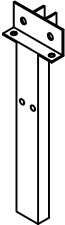
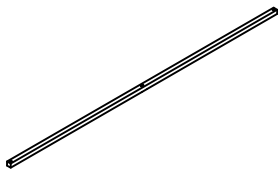
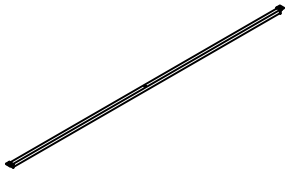
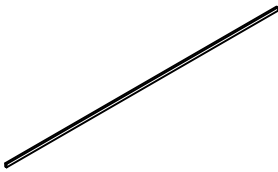
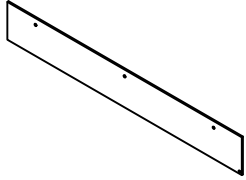
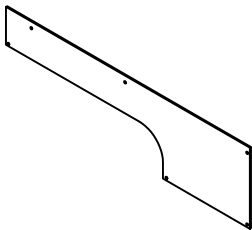
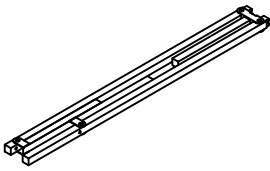
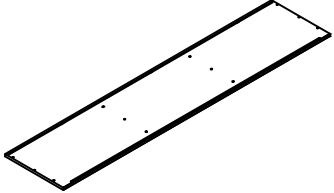
Parts Identification1/3

Not actual size
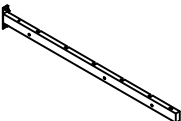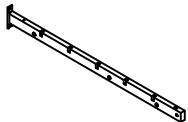
<p>①</p>  <p>Q'ty: 1</p>	<p>②</p>  <p>Q'ty: 1</p>	<p>③</p>  <p>Q'ty: 1</p>
<p>④</p>  <p>Q'ty: 1</p>	<p>⑤</p>  <p>Q'ty: 1</p>	<p>⑥</p>  <p>Q'ty: 1</p>
<p>⑦</p>  <p>Q'ty: 1</p>	<p>⑧</p>  <p>Q'ty: 1</p>	<p>⑨</p>  <p>Q'ty: 1</p>
<p>⑩</p>  <p>Q'ty: 1</p>	<p>⑪</p>  <p>Q'ty: 1</p>	<p>⑫</p>  <p>Q'ty: 1</p>













Parts Identification2/3

Not actual size

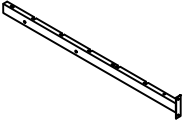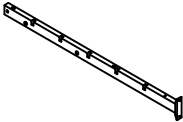
<p>13</p>  <p>Q'ty: 1</p>	<p>14</p>  <p>Q'ty: 1</p>	<p>15</p>  <p>Q'ty: 2</p>
<p>16</p>  <p>Q'ty: 1</p>	<p>17</p>  <p>Q'ty: 2</p>	<p>18</p>  <p>Q'ty: 1</p>
<p>19</p>  <p>Q'ty: 2</p>	<p>20</p>  <p>Q'ty: 10</p>	<p>21</p>  <p>Q'ty: 2</p>
<p>22</p>  <p>Q'ty: 2</p>	<p>23</p>  <p>Q'ty: 1</p>	<p>24</p>  <p>Q'ty: 1</p>

Parts Identification3/3

Not actual size
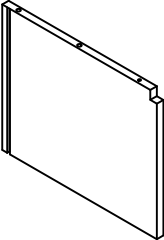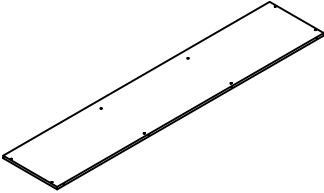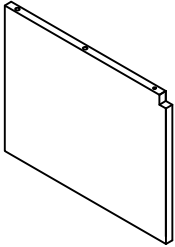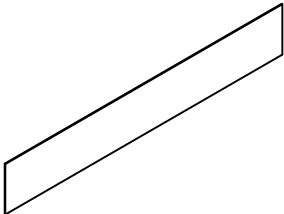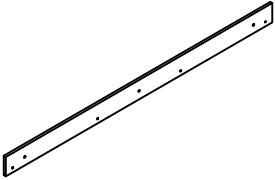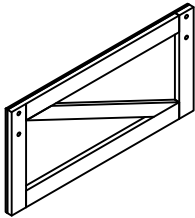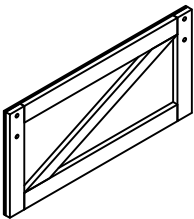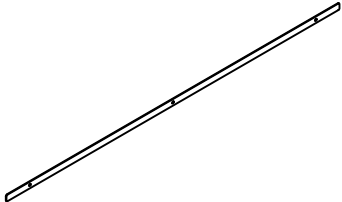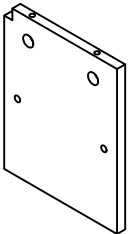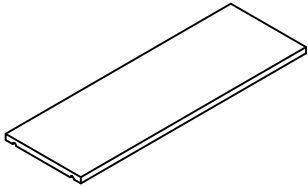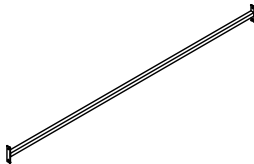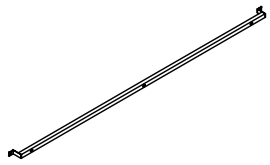
<p>25</p>  <p>Q'ty: 2</p>	<p>26</p>  <p>Q'ty: 1</p>	<p>27</p>  <p>Q'ty: 2</p>
<p>28</p>  <p>Q'ty: 1</p>	<p>29</p>  <p>Q'ty: 1</p>	<p>30</p>  <p>Q'ty: 1</p>
<p>31</p>  <p>Q'ty: 1</p>	<p>32</p>  <p>Q'ty: 1</p>	<p>33</p>  <p>Q'ty: 2</p>
<p>34</p>  <p>Q'ty: 1</p>	<p>35</p>  <p>Q'ty: 1</p>	<p>36</p>  <p>Q'ty: 1</p>

Hardware List



(A)

x 22+2



(B)


x 22+2



Ø5 x 38mm

(C)


x 30+3



Ø1/4" x 11mm

(D)


x 27+2



Ø1/4" x 16mm

(E)


x 12+1



Ø1/4" x 25mm

(F)


x 21+1



Ø1/4" x 28mm

(G)


x 3+1



Ø1/4" x 60mm

(H)


x 5+1



Ø1/4" x 28mm

(I)


x 3+1



M8 x 28mm

(J)


x 2+1



M8 x 50mm

(K)


x 4+1



M4

(L)

x 1

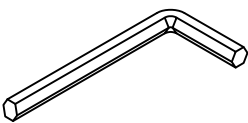

M5

(M)


x 1



M3


(N)

x 1

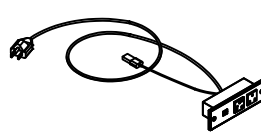


(O)

x 1

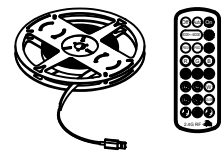


(P)

x 1



(Q)

x 1




(R)

x 20+6



(S)



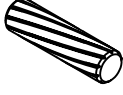
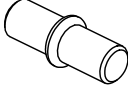
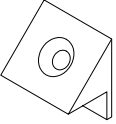

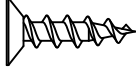

x 4



(T)

x 3

Hardware List

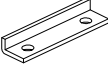
 <div> U x 2 </div>	 <div> V x 4 </div>	 <div> $\varnothing 6 \times 30\text{mm}$ <div> W x 8+1 </div> </div>	 <div> X x 4+1 </div>
 <div> Y x 4 </div>	 <div> $\varnothing 3 \times 15\text{mm}$ <div> Z x 4 </div> </div>	 <div> $\varnothing 4 \times 12\text{mm}$ <div> AA x 6+1 </div> </div>	 <div> BB x 1 </div>

★ In many cases, we include additional hardware. So after following the assembly instructions, don't worry if there are still extra pieces left over-they're included as a "just in case" for your convenience.

★ NOTE: When assembling, please do not tighten the screws one by one completely first, until making sure that all the corresponding screws are placed in the right positions.

Parts Identification

Not actual size

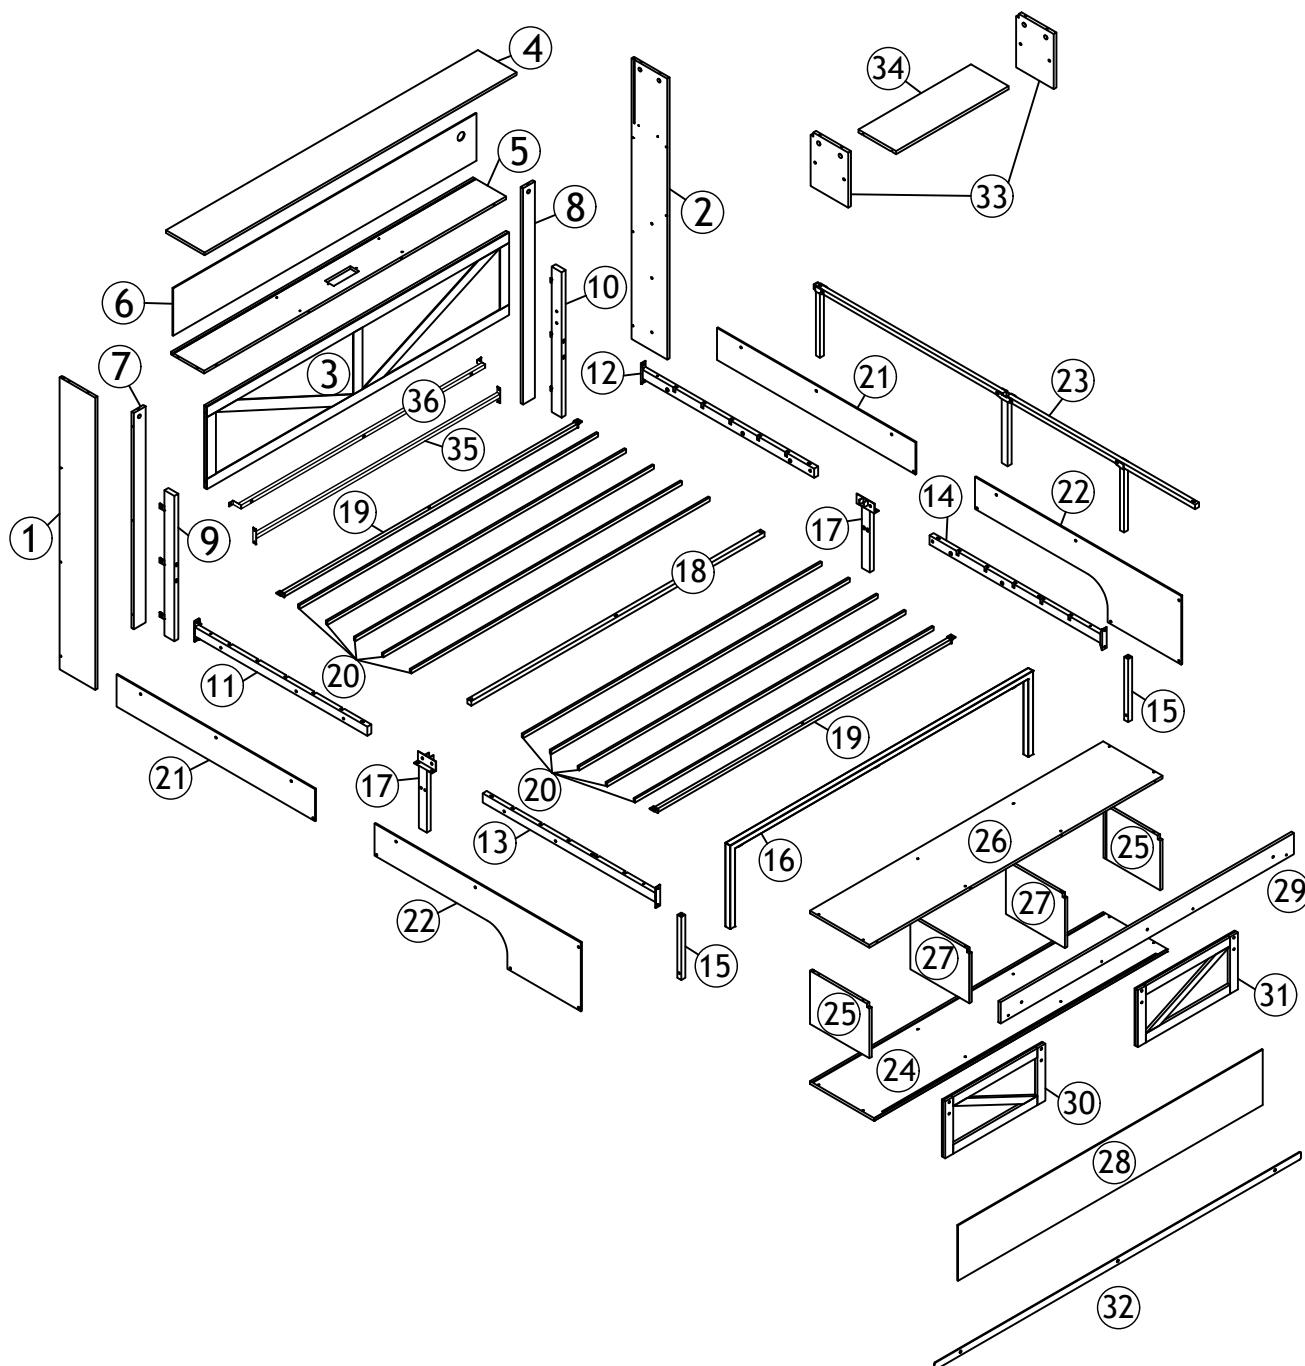

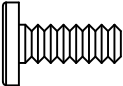










ATTENTION


When you begin each step, please check carefully whether you have taken the correct parts, so as not to use the wrong parts and cause the wrong assembly.





We recommend that you do not rush to tighten the screws. It is best to tighten the screws to two-thirds first, after all the steps are finished and the position is well adjusted, then tighten.

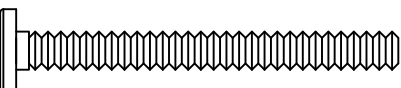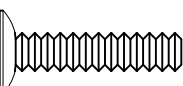Screw Fitting 1:1 Diagram


C		Ø5 x 38mm
D		Ø1/4" x 11mm
E		Ø1/4" x 16mm
F		Ø1/4" x 25mm
G		Ø1/4" x 28mm
H		Ø1/4" x 60mm
I		Ø1/4" x 28mm
J		M8 x 28mm
K		M8 x 50mm
AA		φ4 x 12mm
Z		φ3 x 15mm




STEP 1

 Please screws in this step need to be tightened

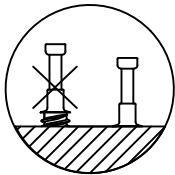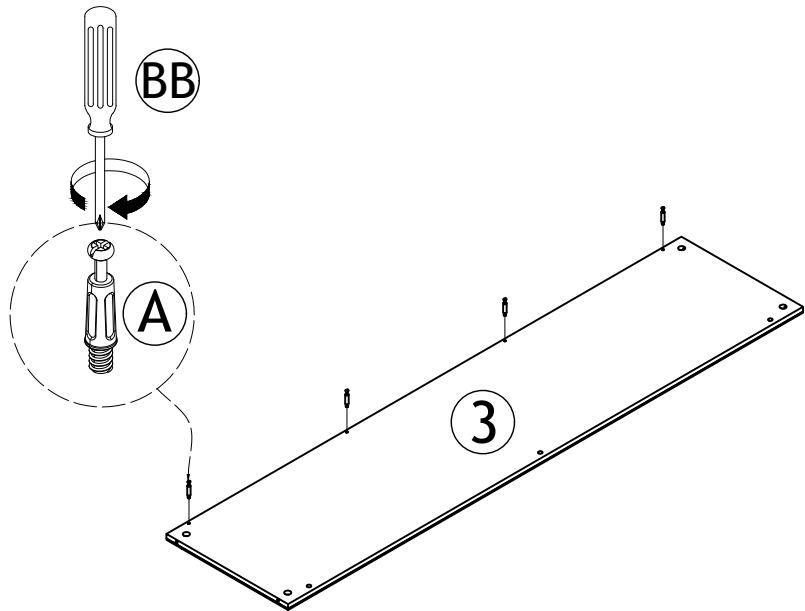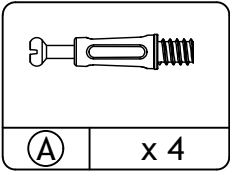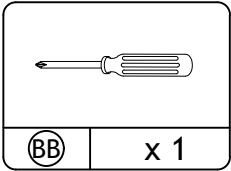


STEP 2






 Please screws in this step need to be tightened

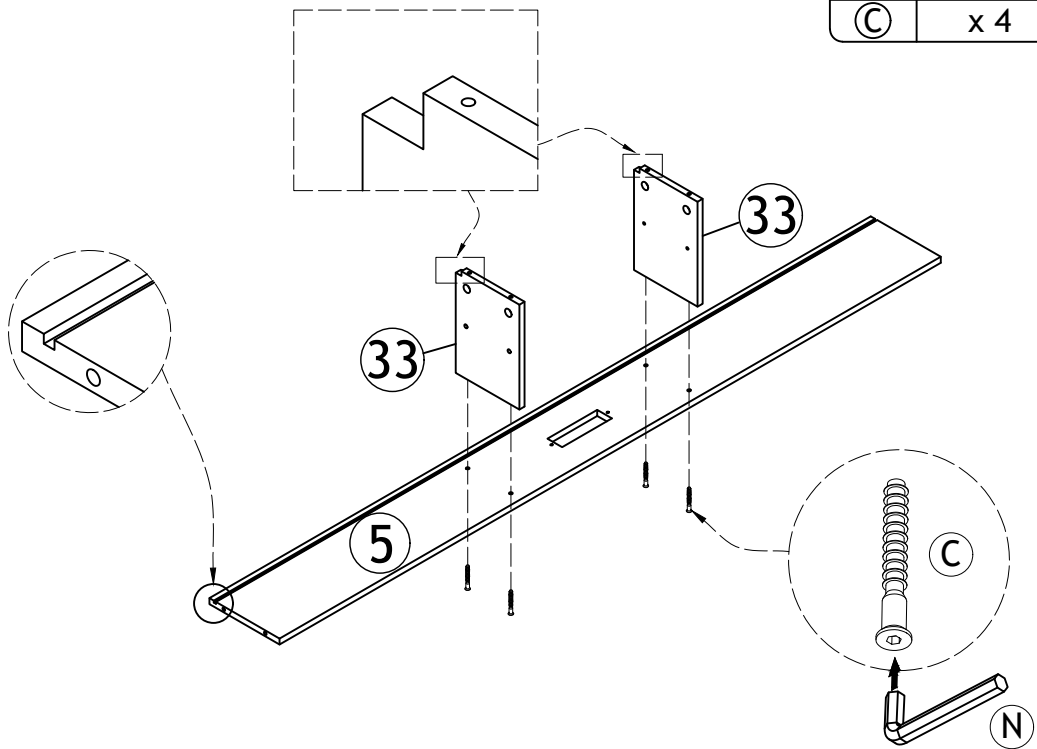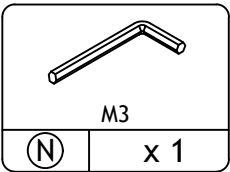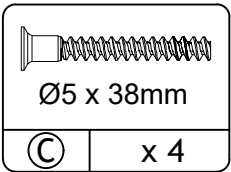





STEP 3

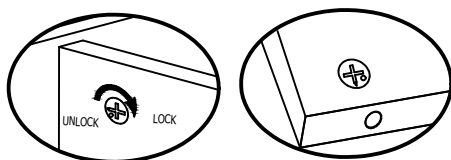


Proper orientation of CAM LOCK

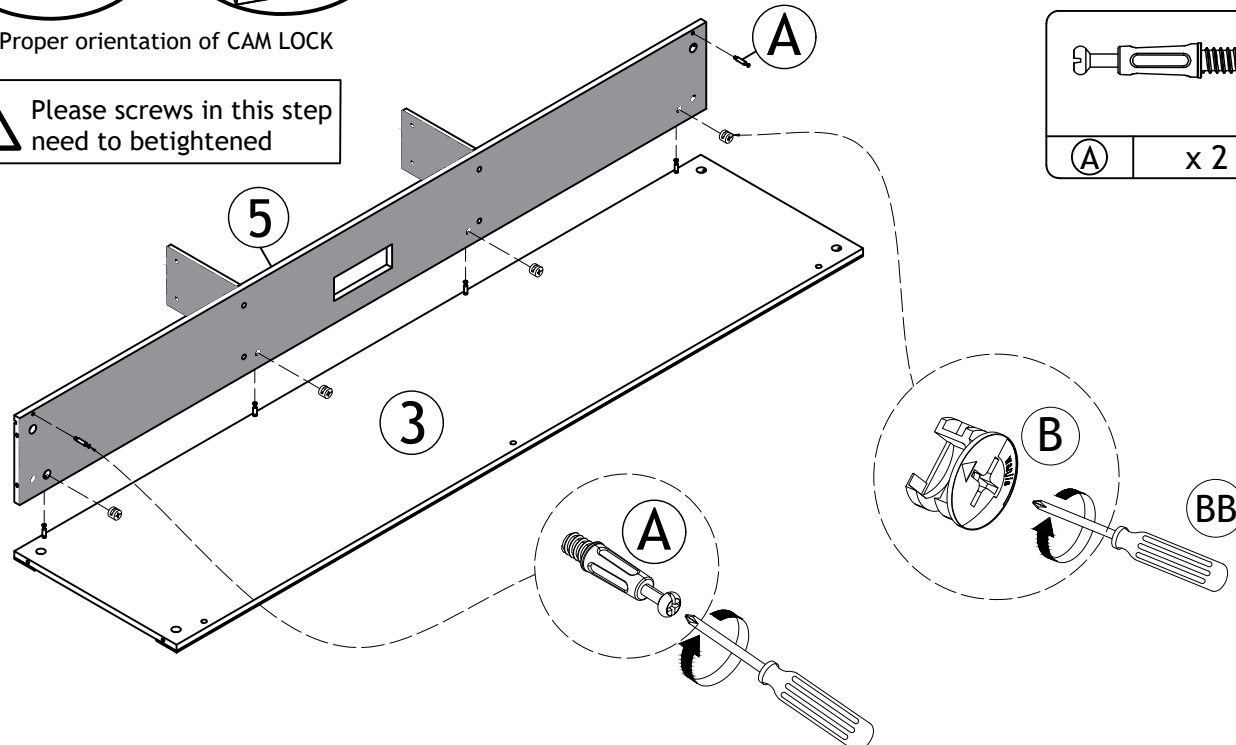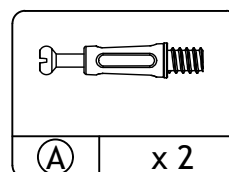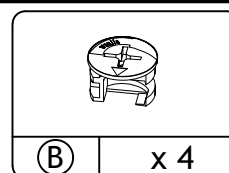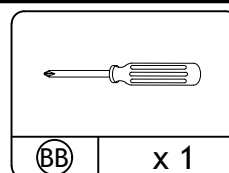


STEP 4

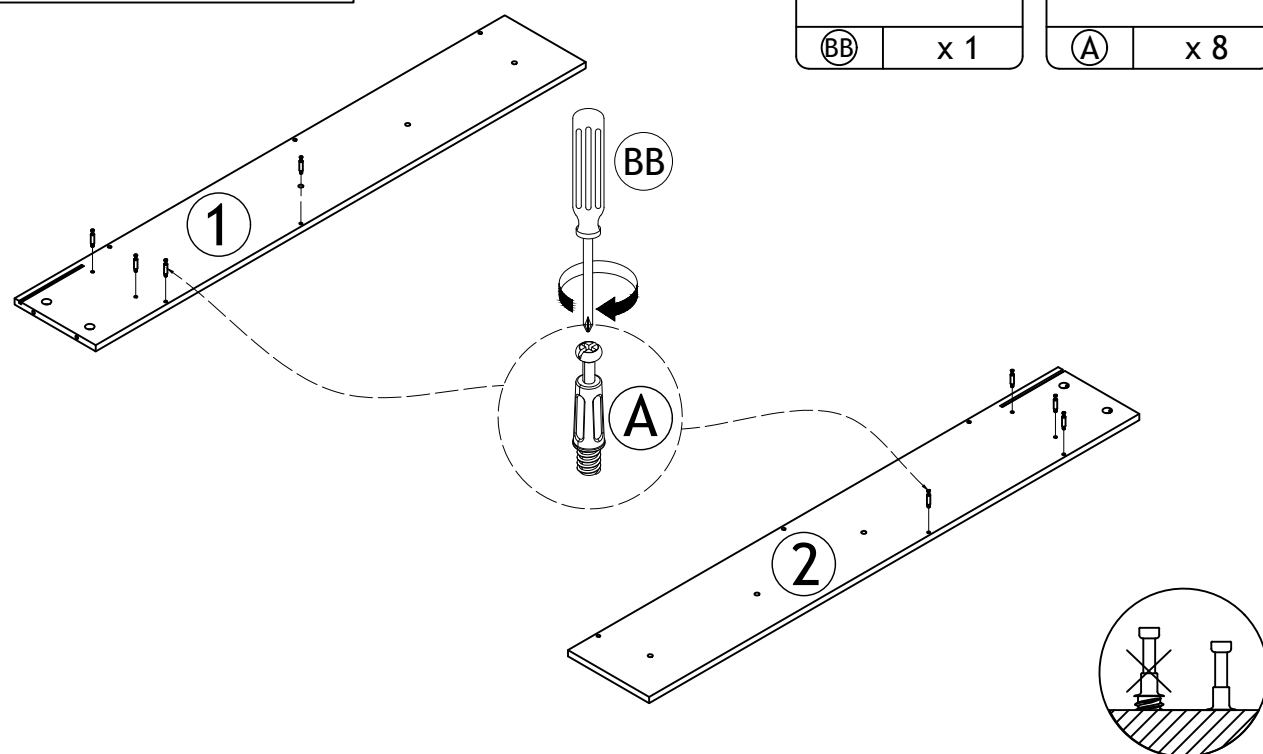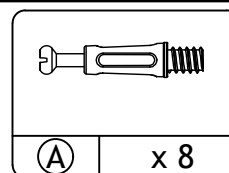
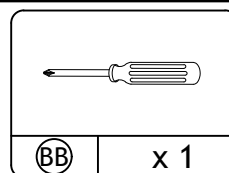



STEP 5

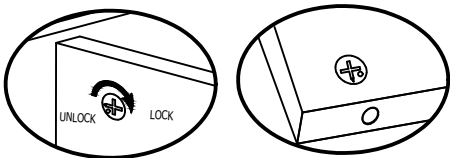


Proper orientation of CAM LOCK


 Please screws in this step need to betightened

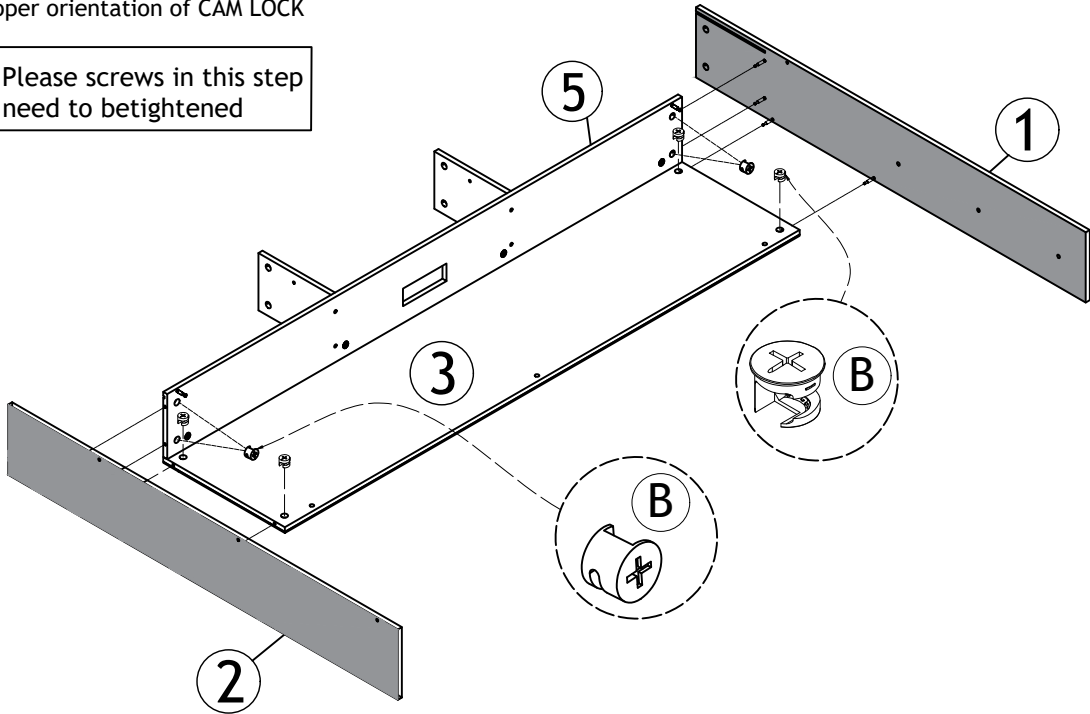
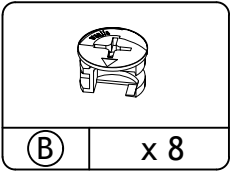
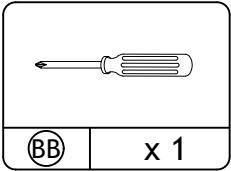


STEP 6

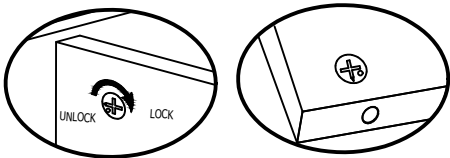



Proper orientation of CAM LOCK

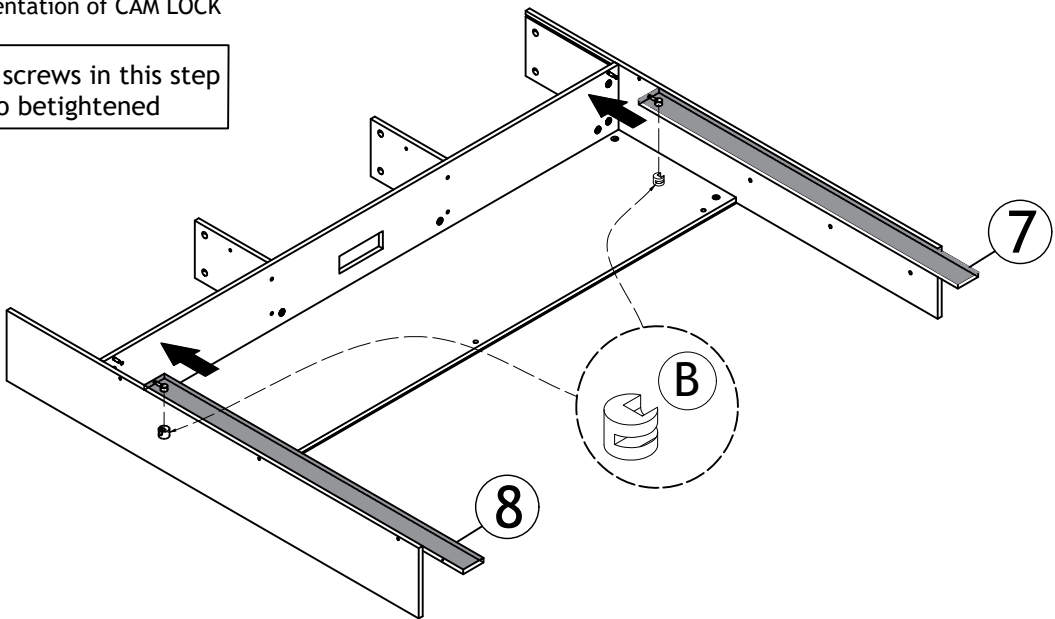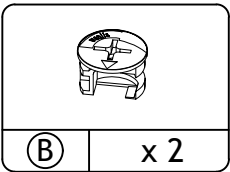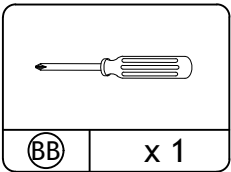
 Please screws in this step need to betightened




STEP 7


 Please screws in this step need to be tightened



 Ø5 x 38mm	
(C)	x 6


 M3	
(N)	x 1

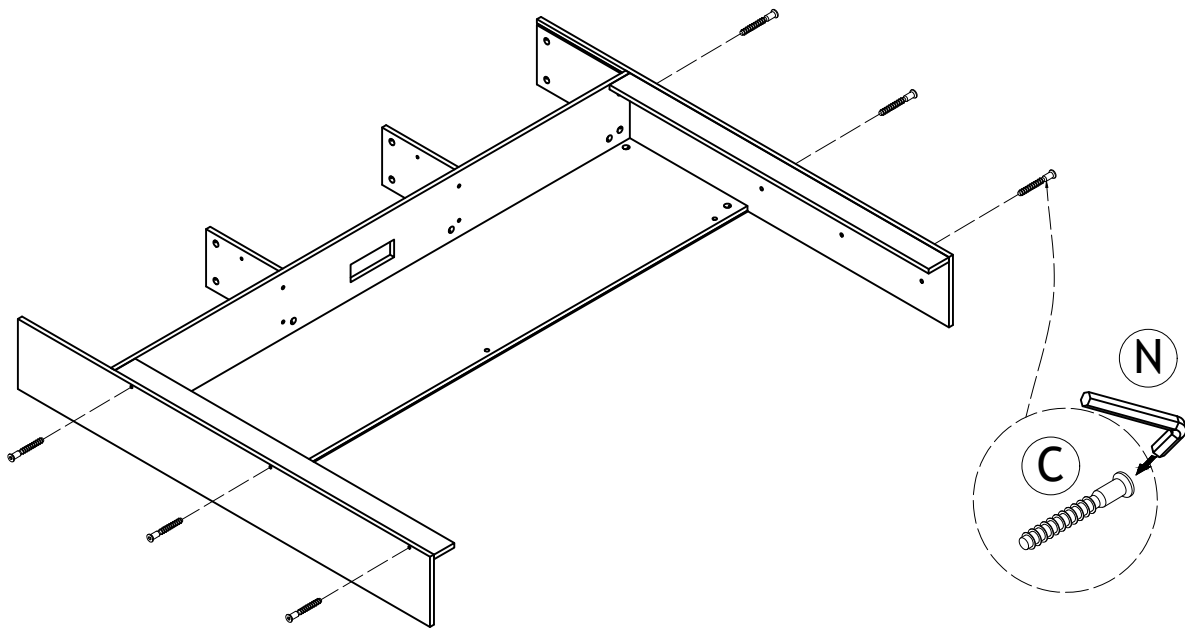


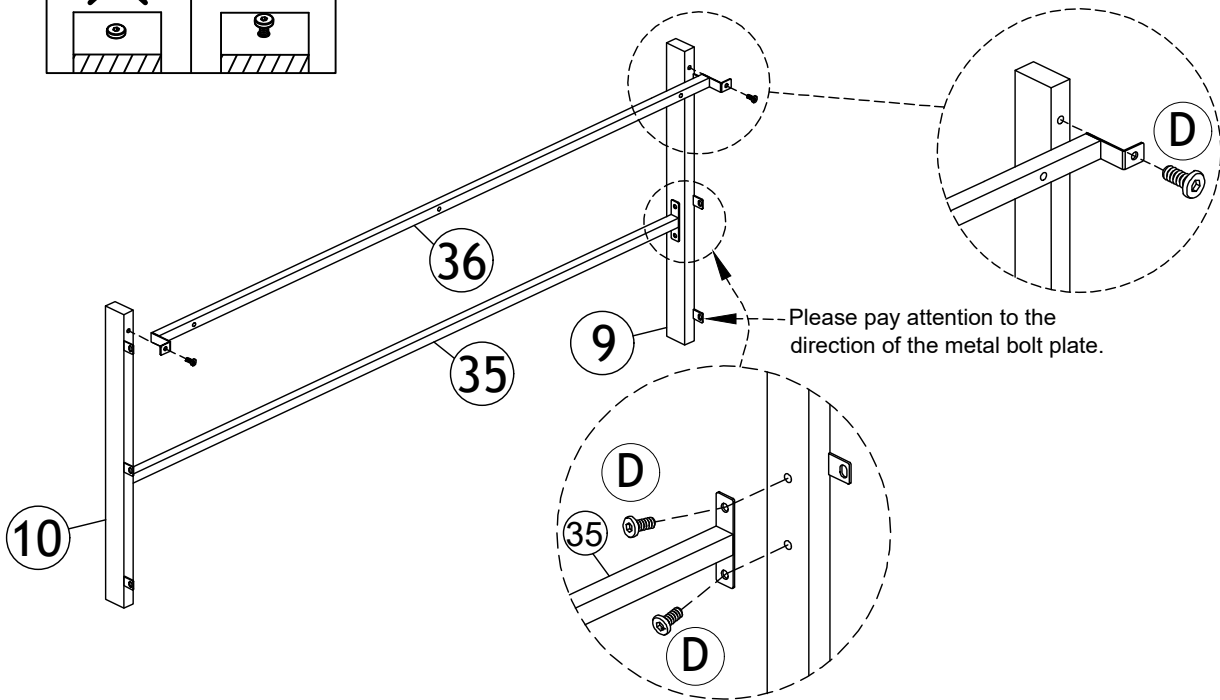
STEP 8

 Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.


	
---	---

 Ø1/4" x 11mm	
(D)	x 6


 M4	
(L)	x 1




STEP 9




Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.

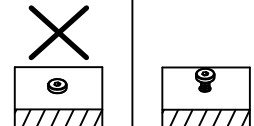




Ø1/4" x 28mm

G	x 3
---	-----




Ø1/4" x 11mm

D	x 6
---	-----




M4


L	x 1
---	-----

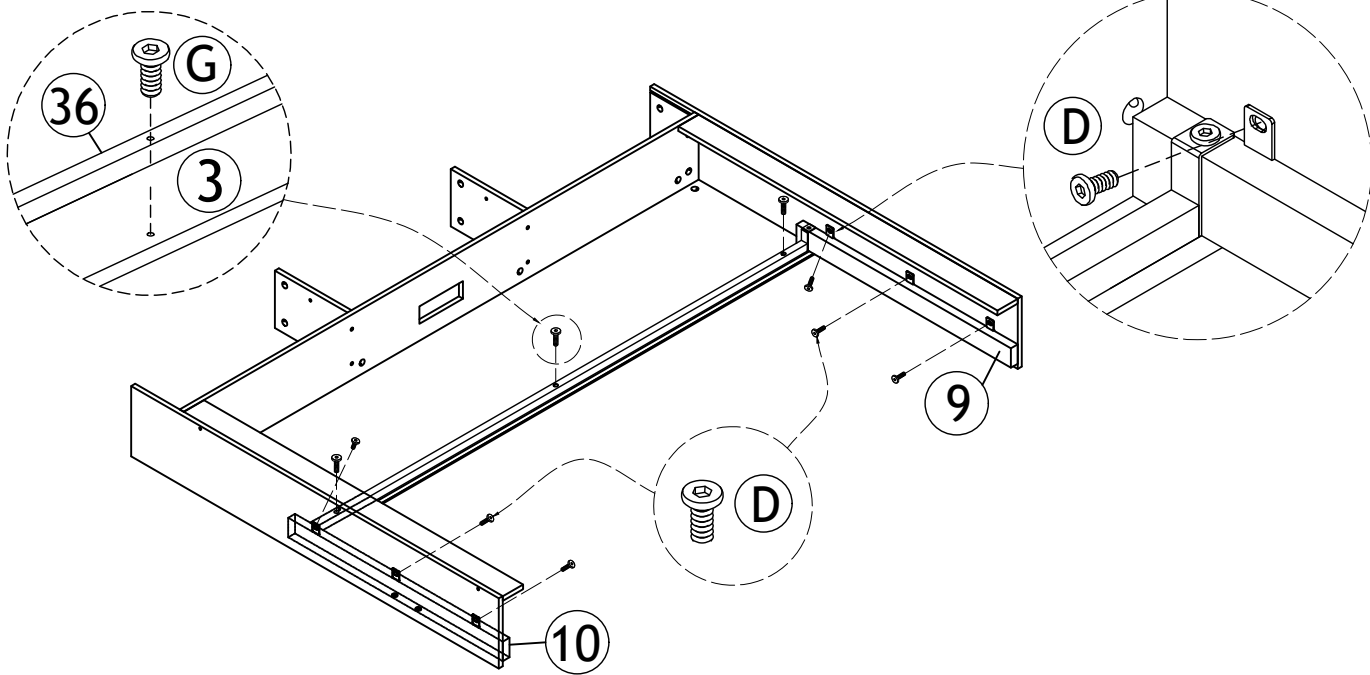

STEP 10




Please screws in this step need to be tightened




0

0	x 1
---	-----




Ø4 x 12mm

AA	x 2
----	-----

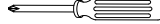


BB


BB	x 1
----	-----




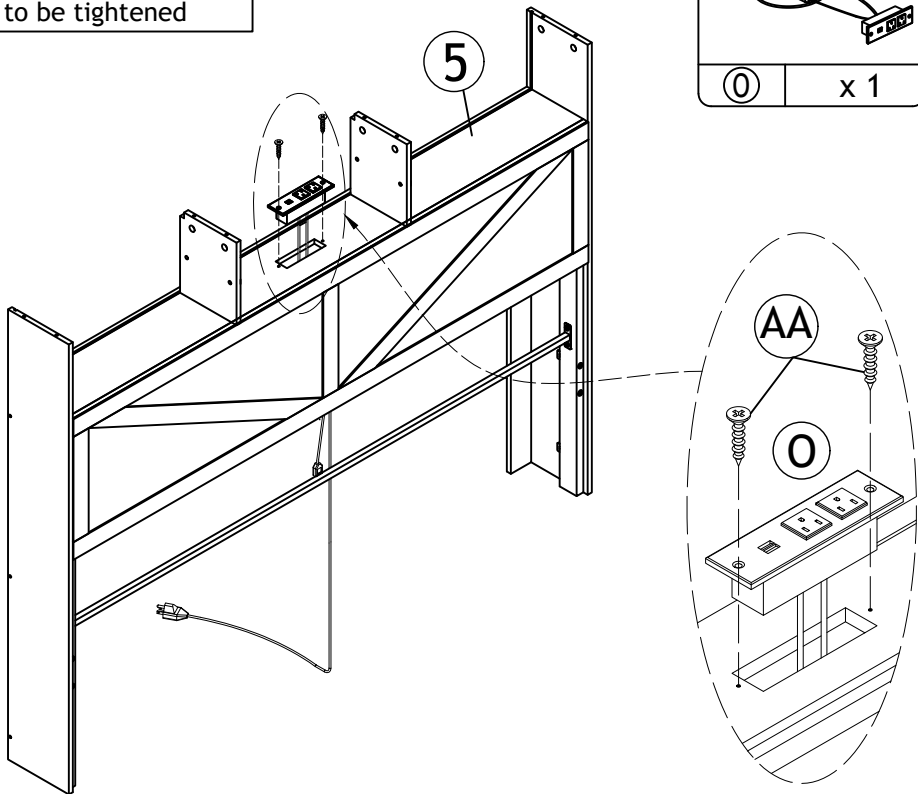


STEP 11

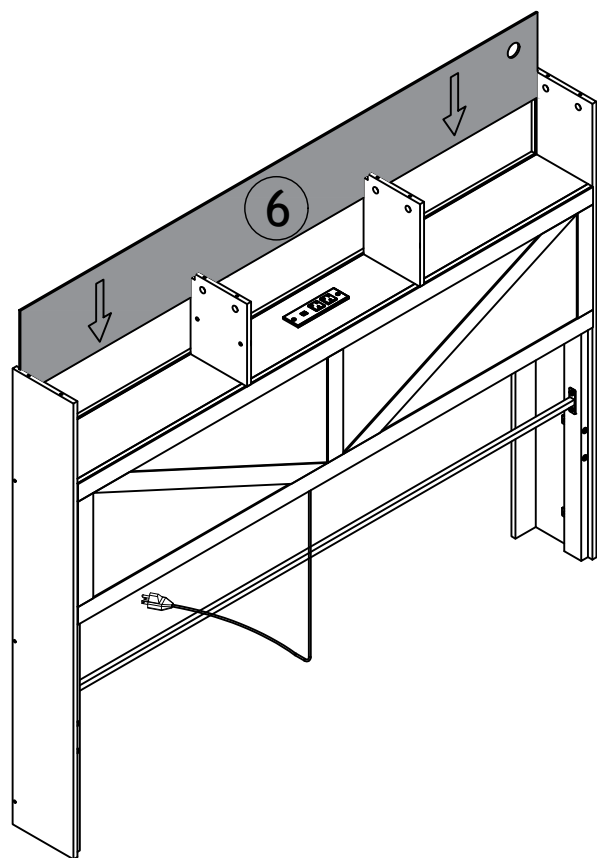


STEP 12


 Please screws in this step need to be tightened

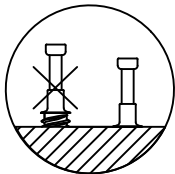
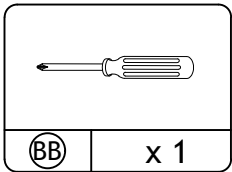
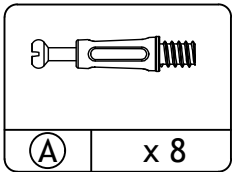
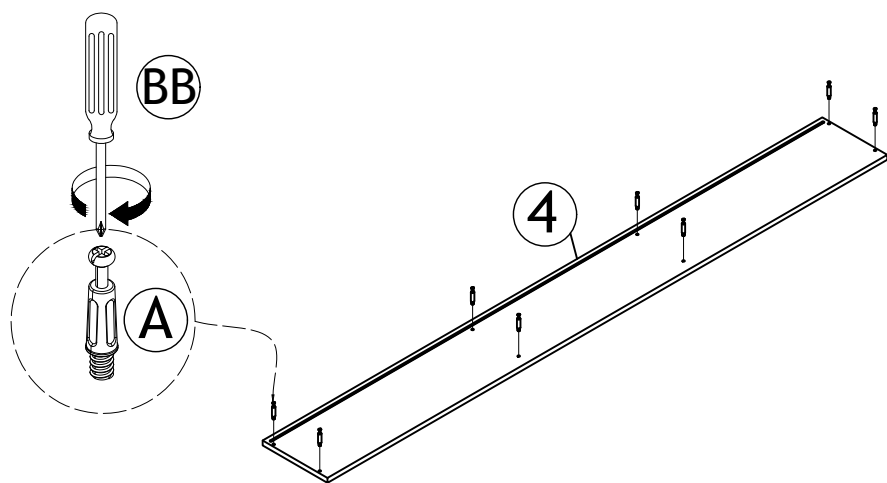


STEP 13




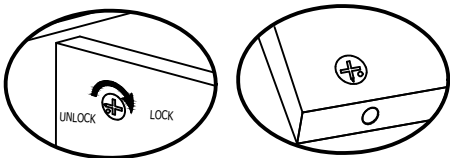


Proper orientation of CAM LOCK


 Please screws in this step need to betightened

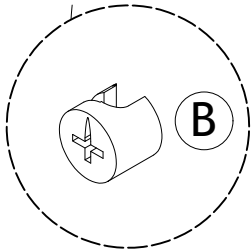
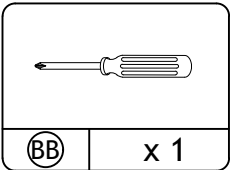
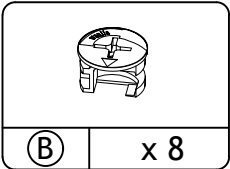
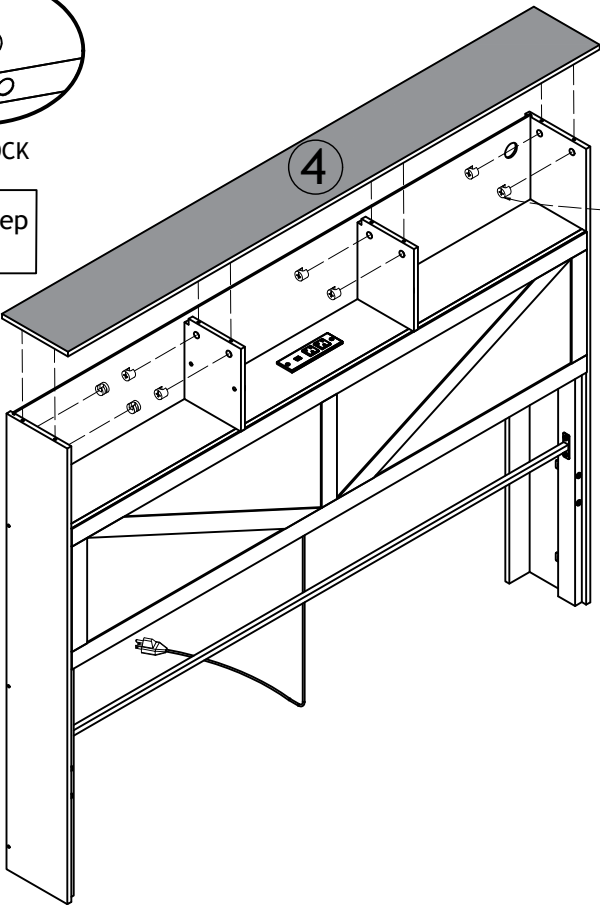


STEP 14

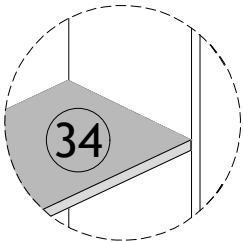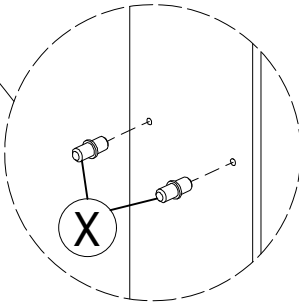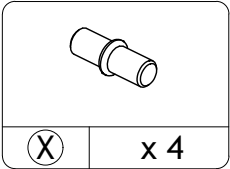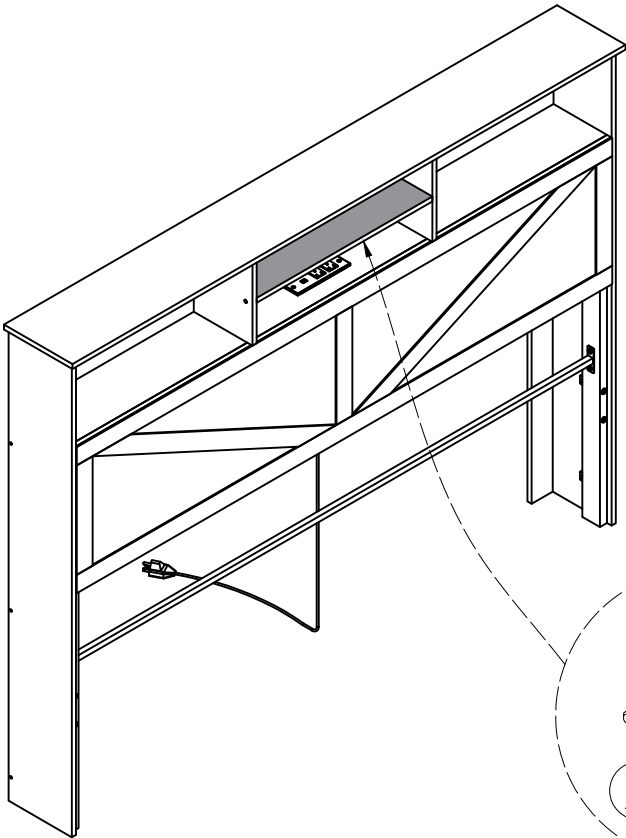




STEP 15




 Please screws in this step need to be tightened

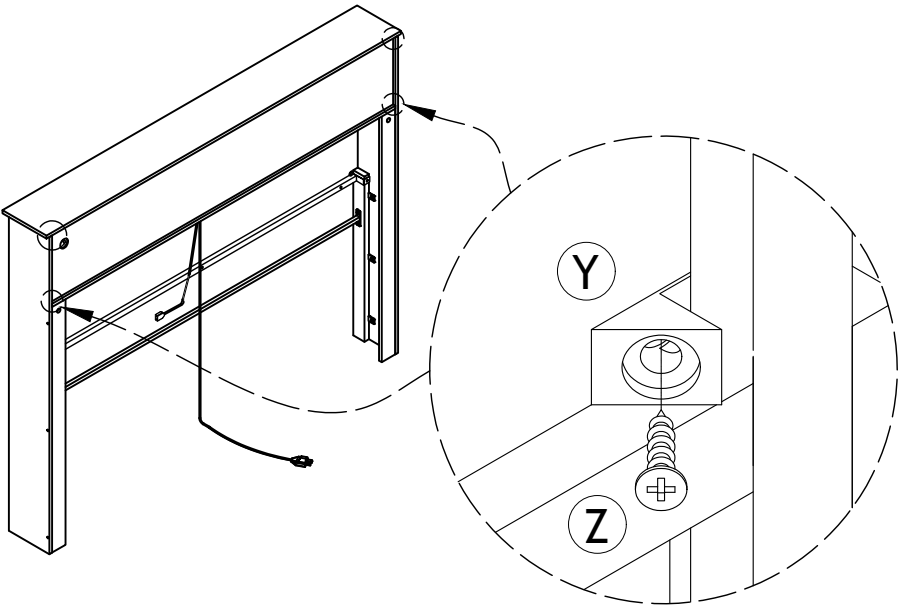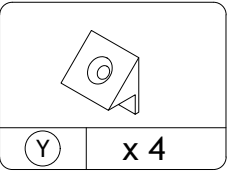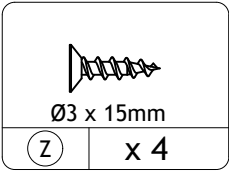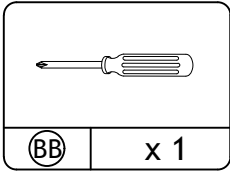


STEP 16

 Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.

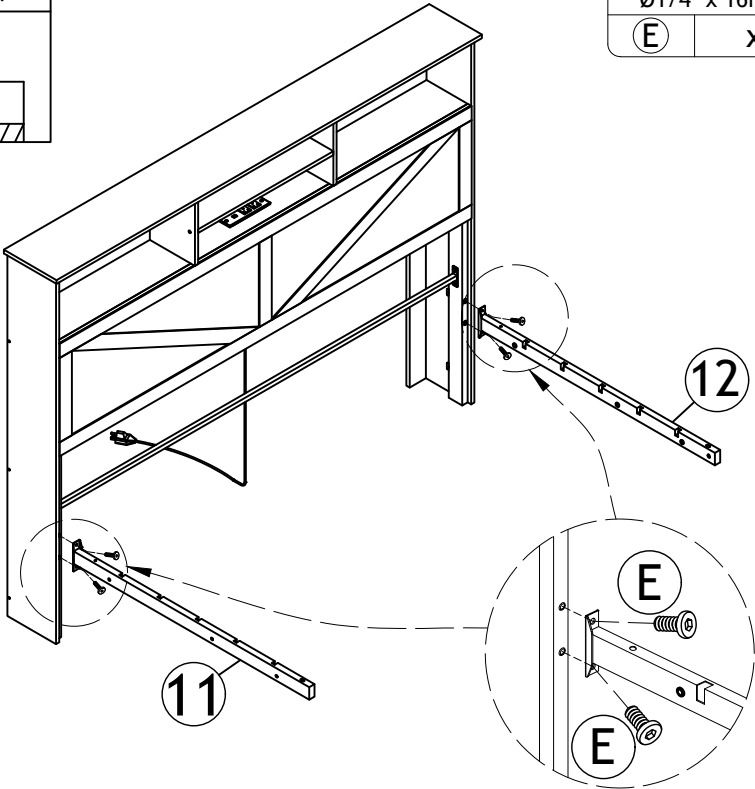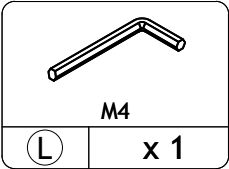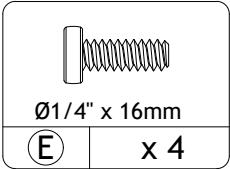

	
---	---




STEP 17




Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.



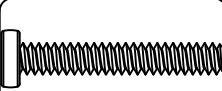


Ø1/4" x 60mm

(H) x 2




M4



(L) x 1

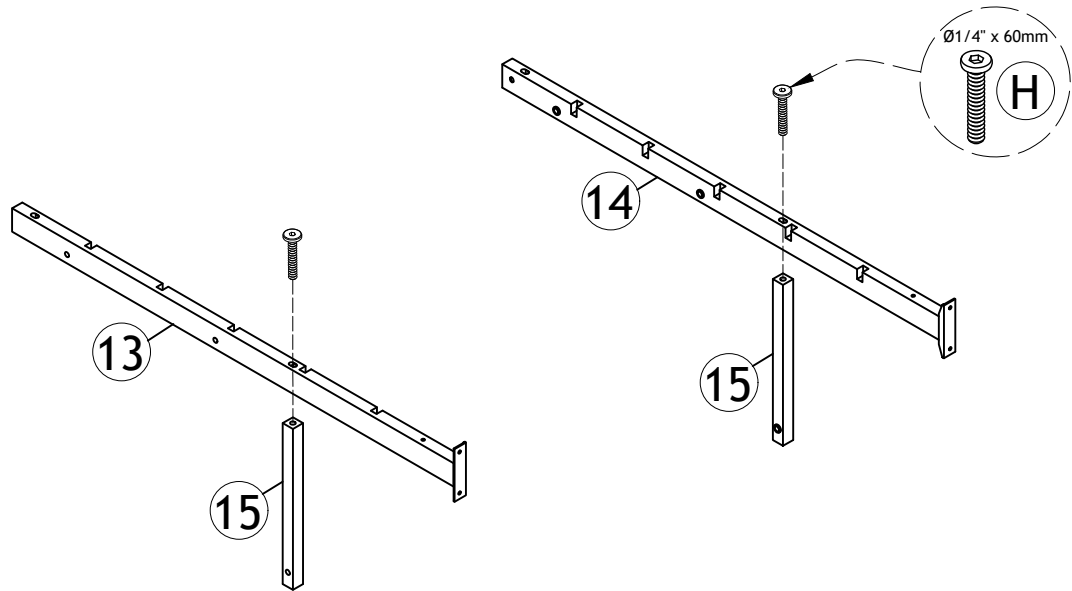


STEP 18




Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.



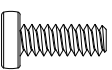


Ø1/4" x 16mm

(E) x 4

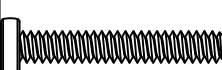


M8 x 50mm

(K) x 4




M4

(L) x 1




M5



(M) x 1

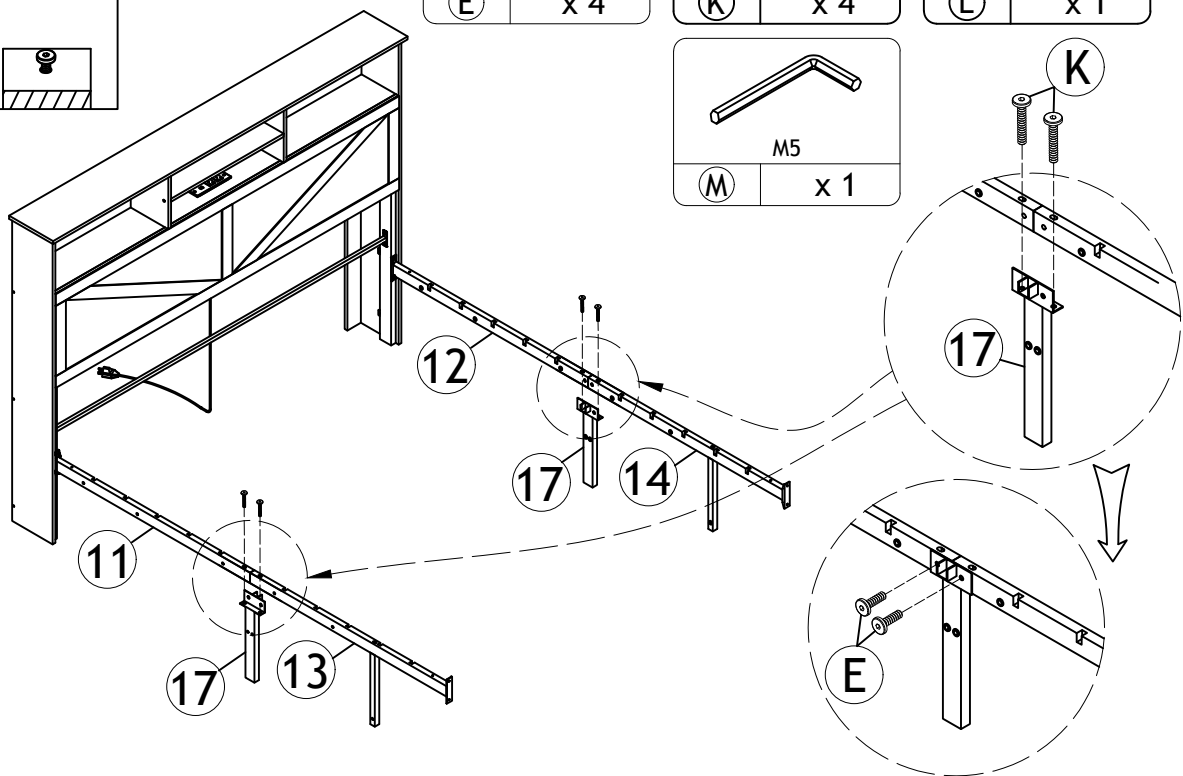


STEP 19




Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.

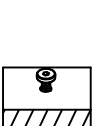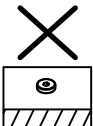




Ø1/4" x 11mm

(D)	x 4
-----	-----




M4

(L)	x 1
-----	-----

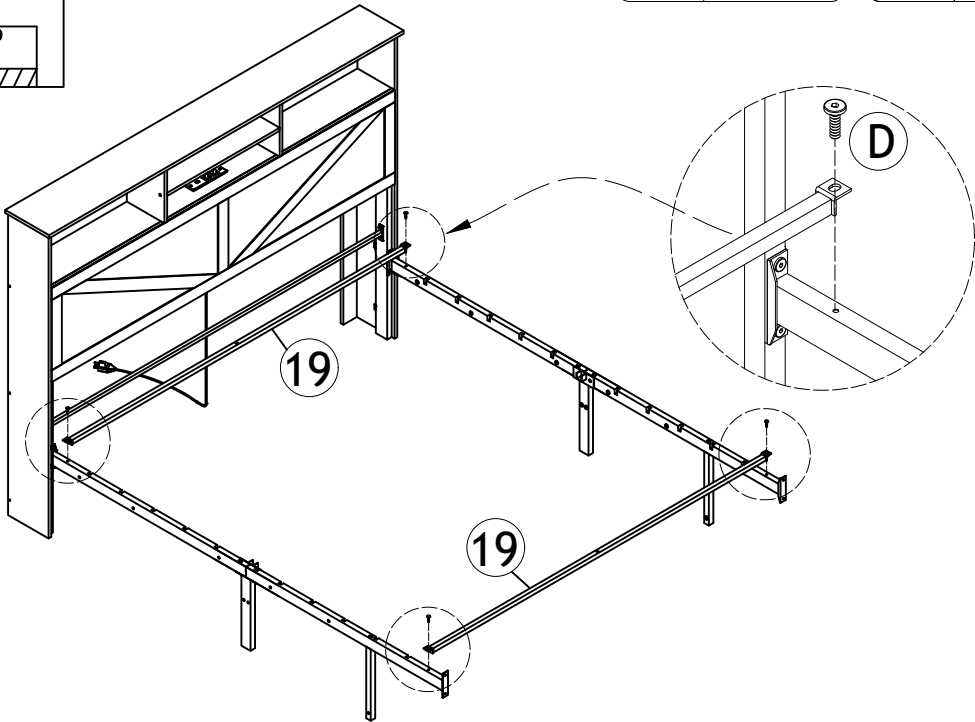


STEP 20

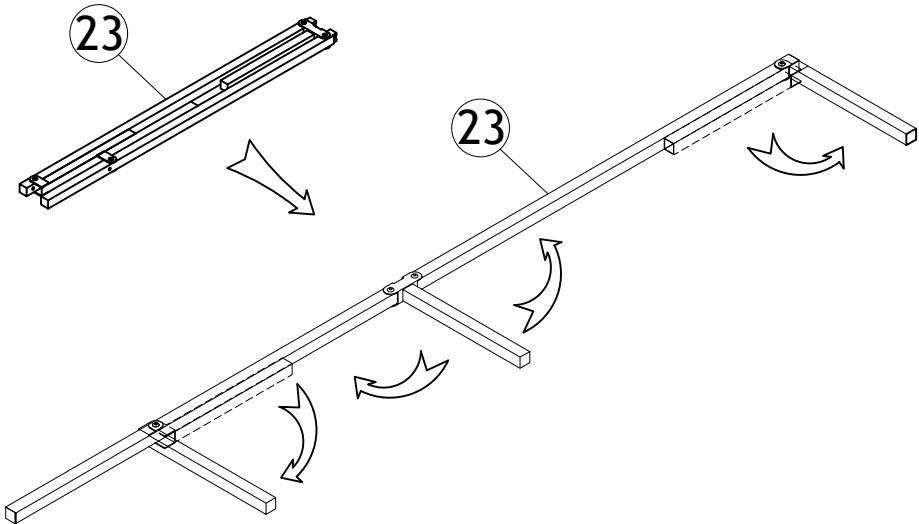



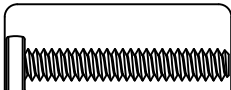
Expand the folded portion

STEP 21




Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.






Ø1/4" x 60mm

(H)	x 2
-----	-----




M4

(L)	x 1
-----	-----

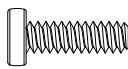


Ø1/4" x 25mm



(F)	x 1
-----	-----

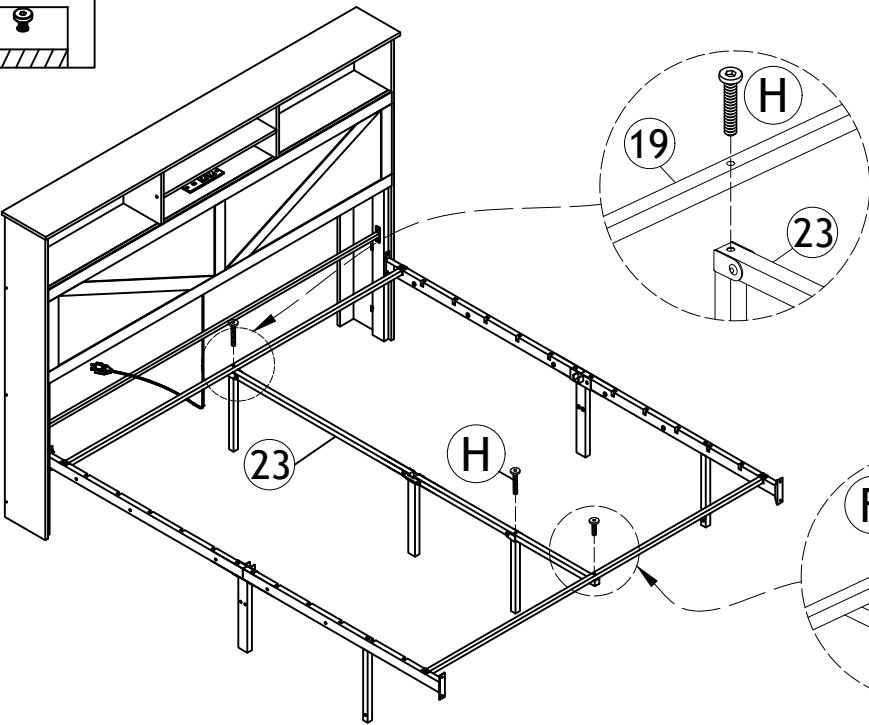


STEP 22




Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.






M8 x 28mm

(J)	x 2
-----	-----

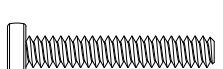


Ø1/4" x 60mm

(H)	x 1
-----	-----




M4

(L)	x 1
-----	-----




M5


(M)	x 1
-----	-----

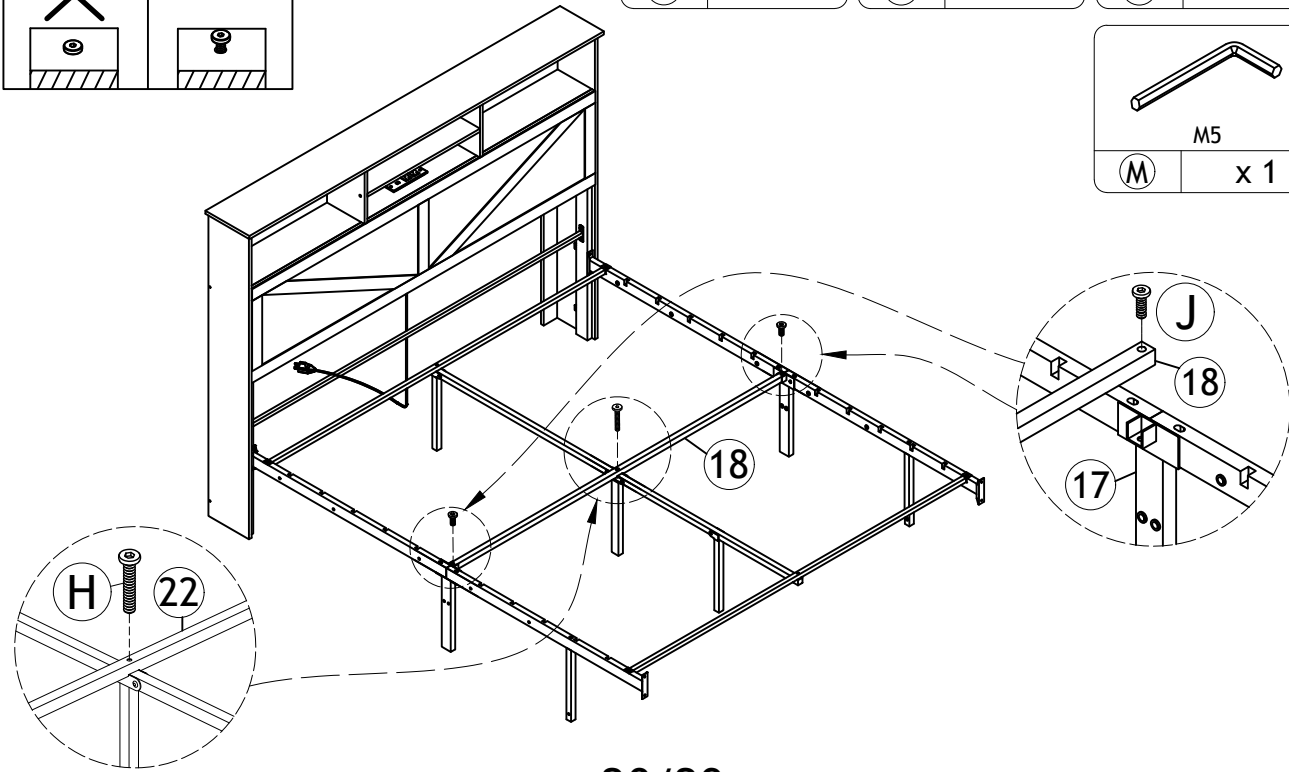


STEP 23

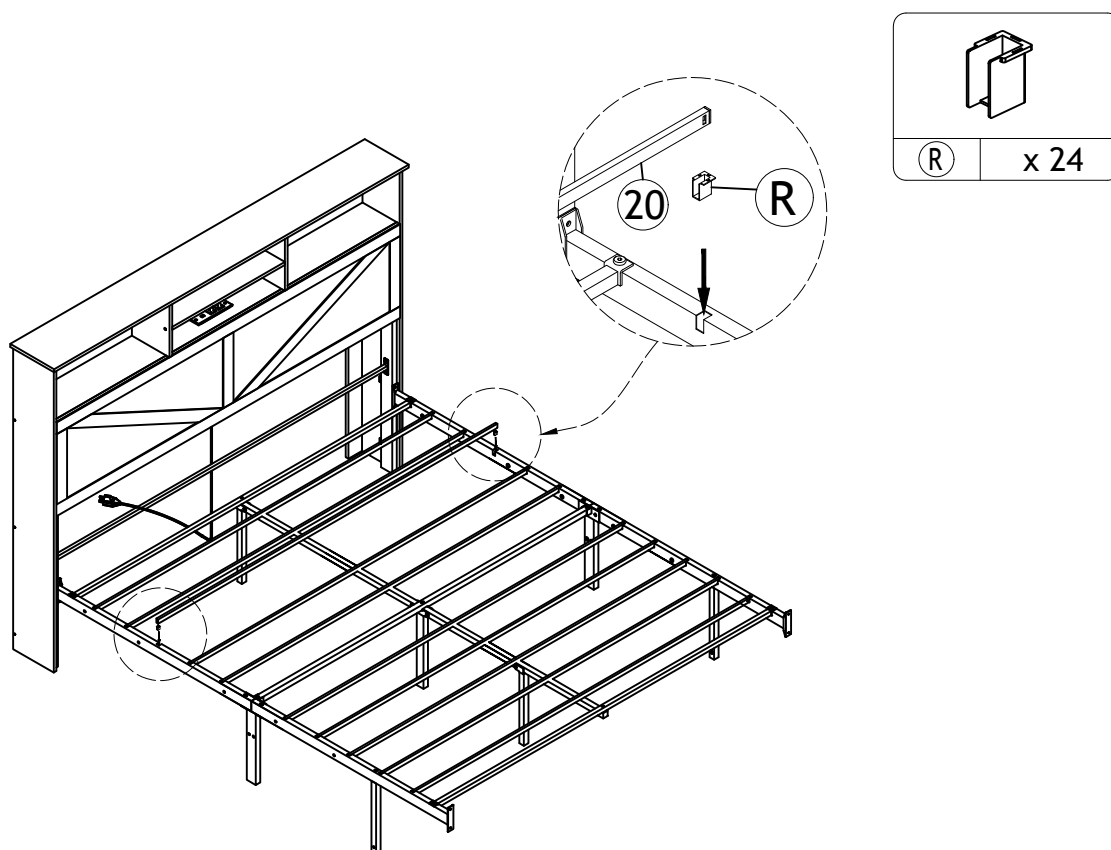


Assemble the slats

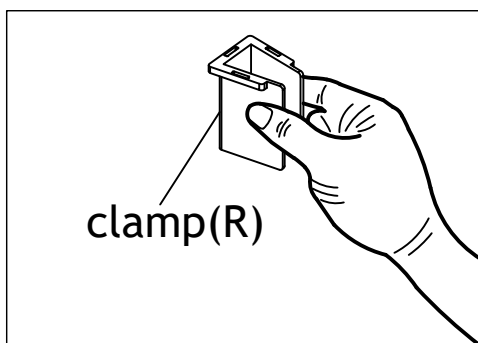


1. Squeeze the clamp (R) tightly.

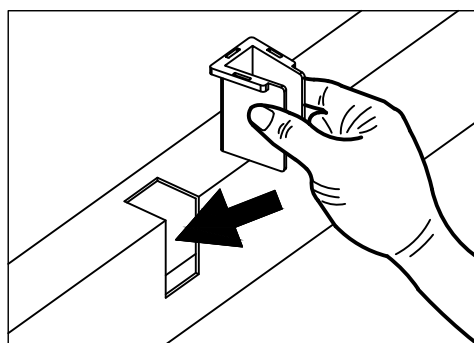

2. Put the clamp into the gaps.


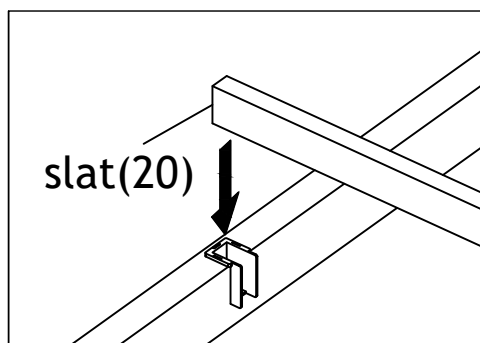


3. Put the slat (20) into the clamp.

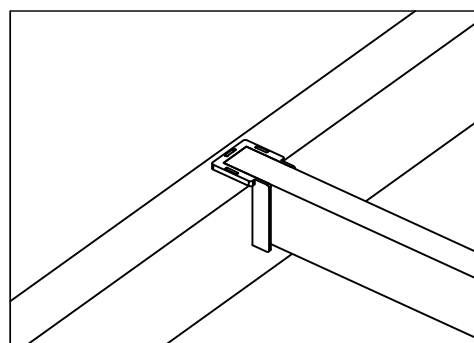


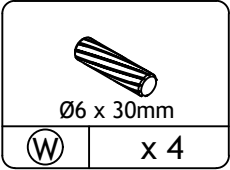
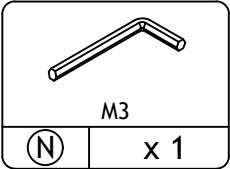
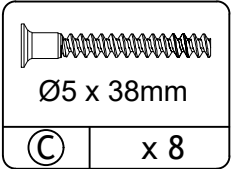
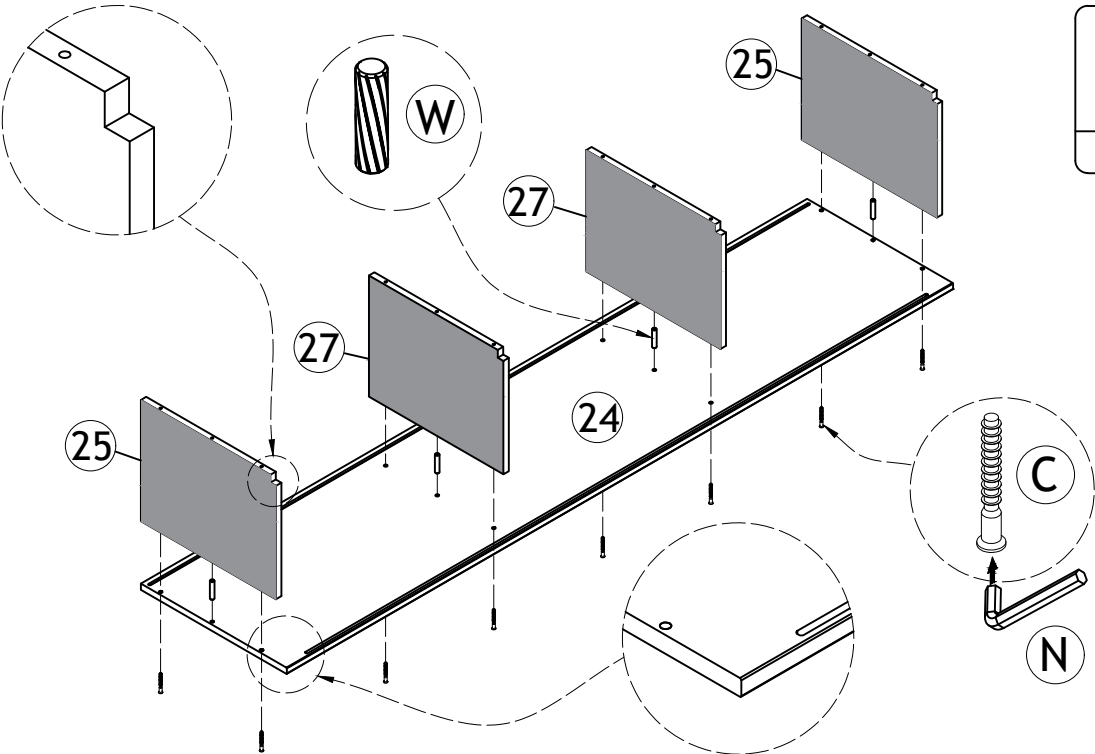
4. Finished.

STEP 24

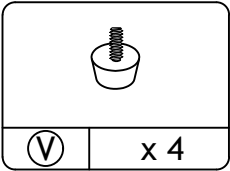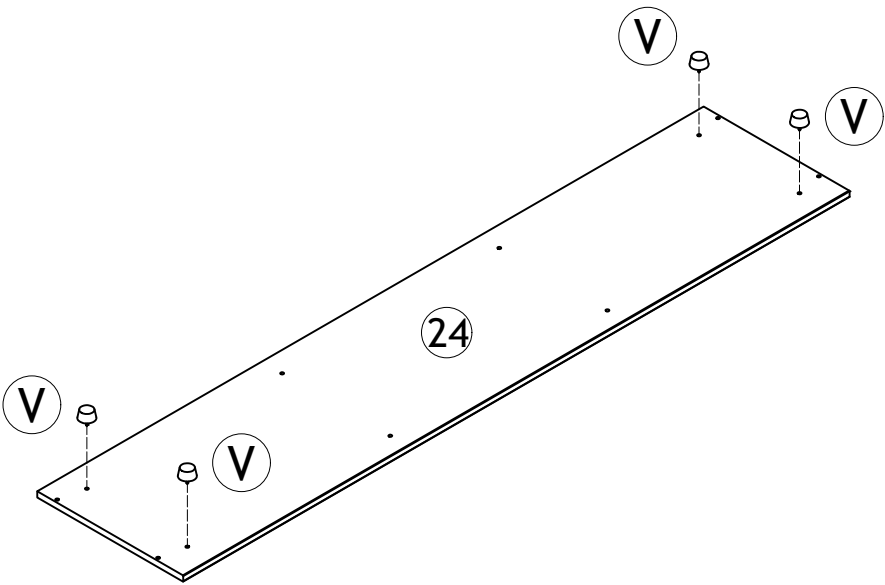


STEP 25


 Please screws in this step need to be tightened






STEP 26

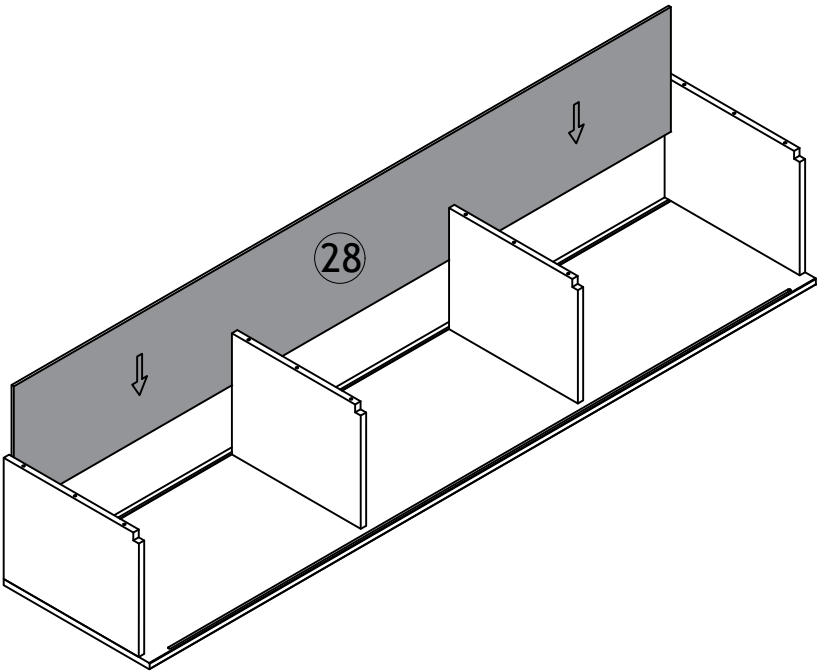


STEP 27





 Please screws in this step need to be tightened

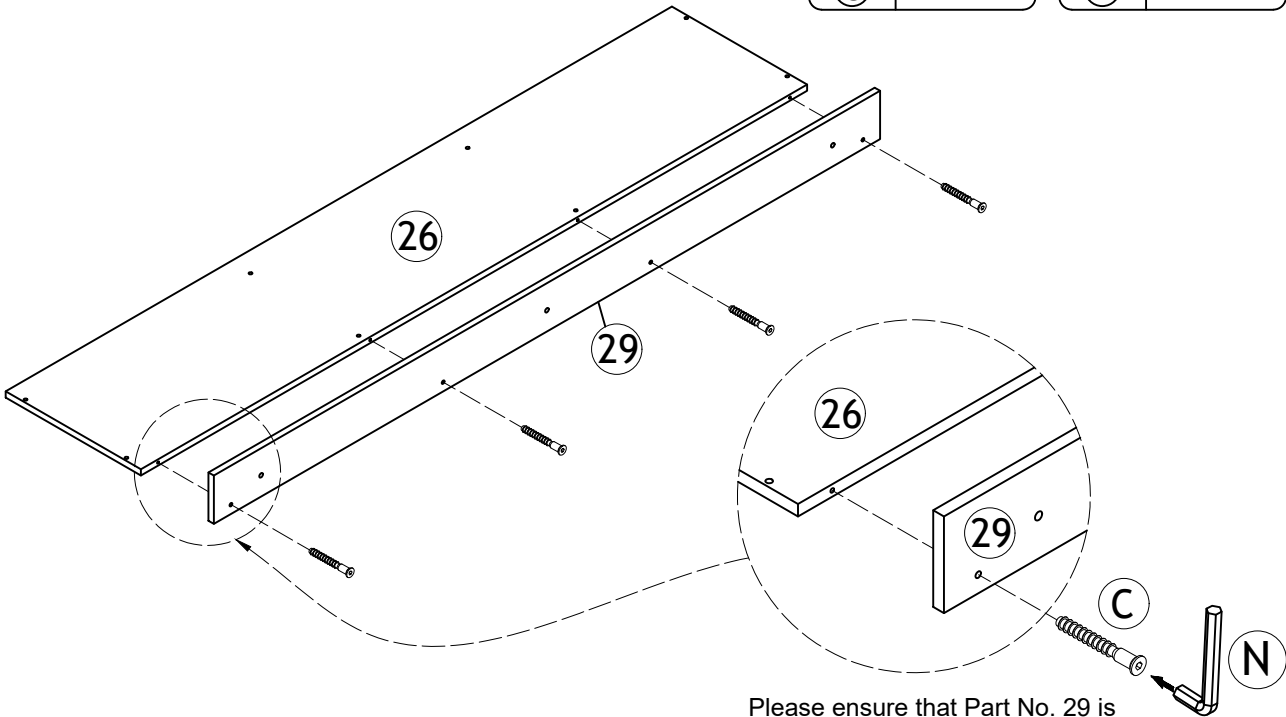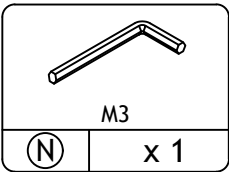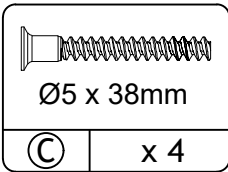


Please ensure that Part No. 29 is installed in the correct orientation



STEP 28





 Please screws in this step need to be tightened

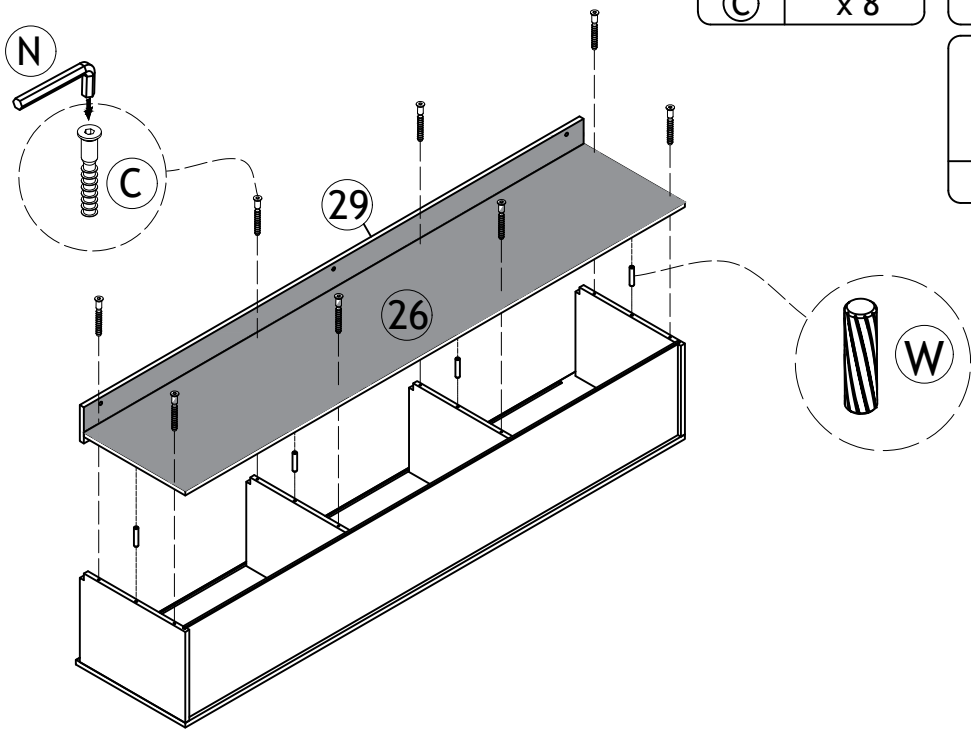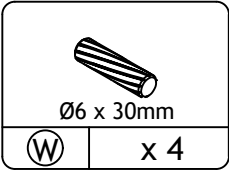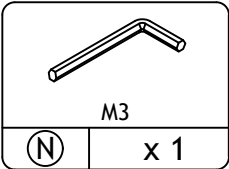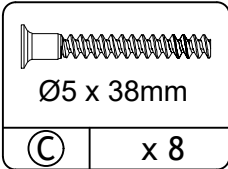


STEP 29





 Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.

	
---	---

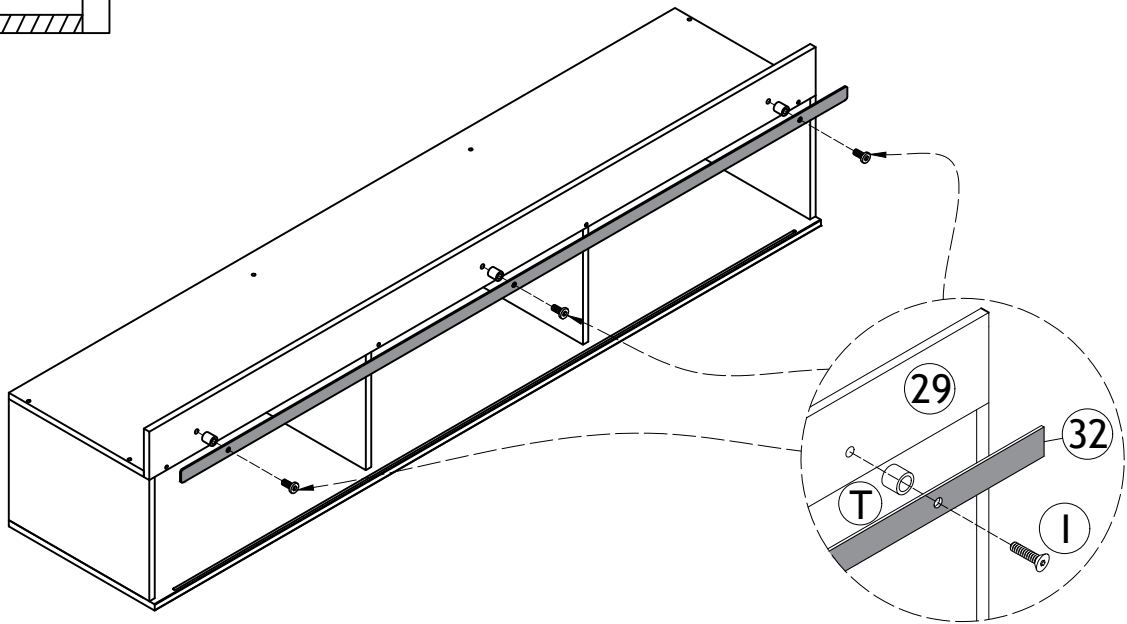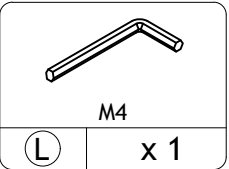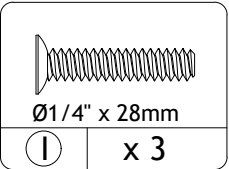
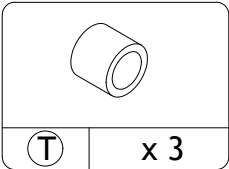


STEP 30


 Please screws in this step need to be tightened

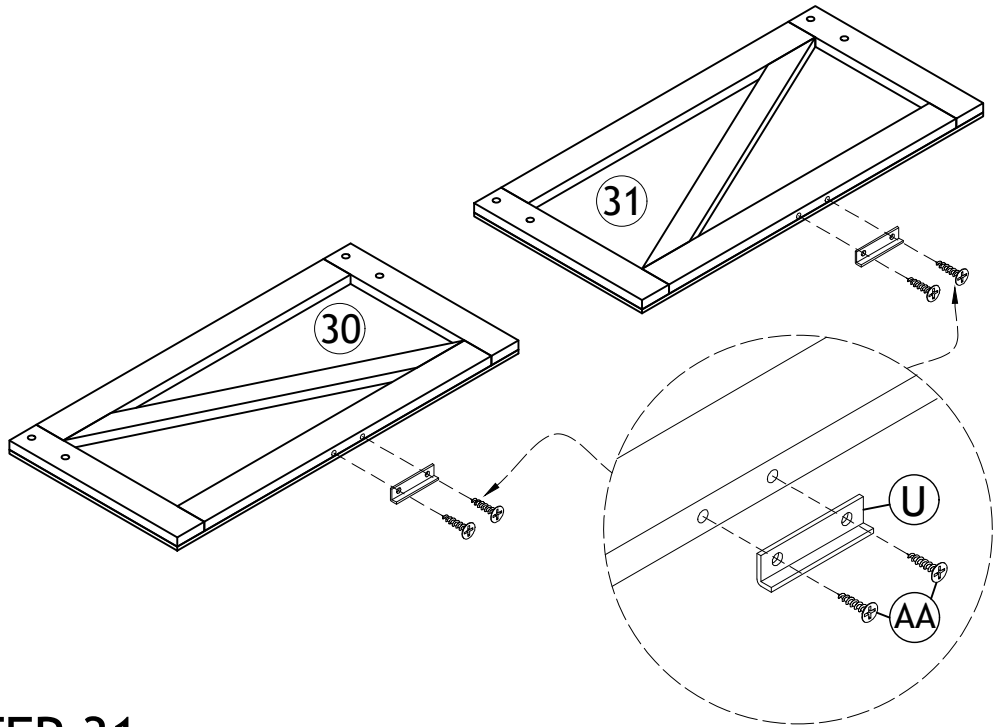
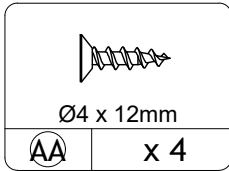
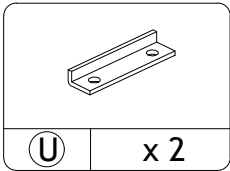
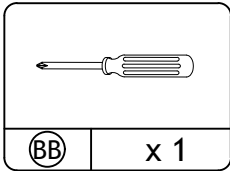


STEP 31

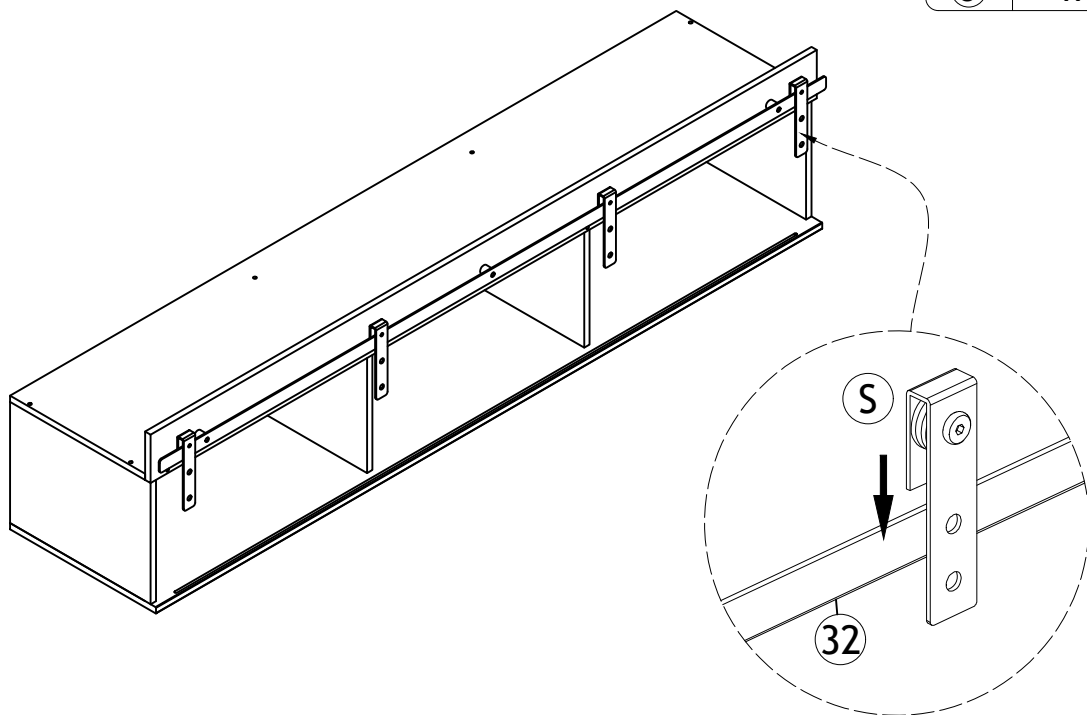
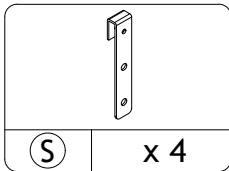


STEP 32

 Please screws in this step need to be tightened

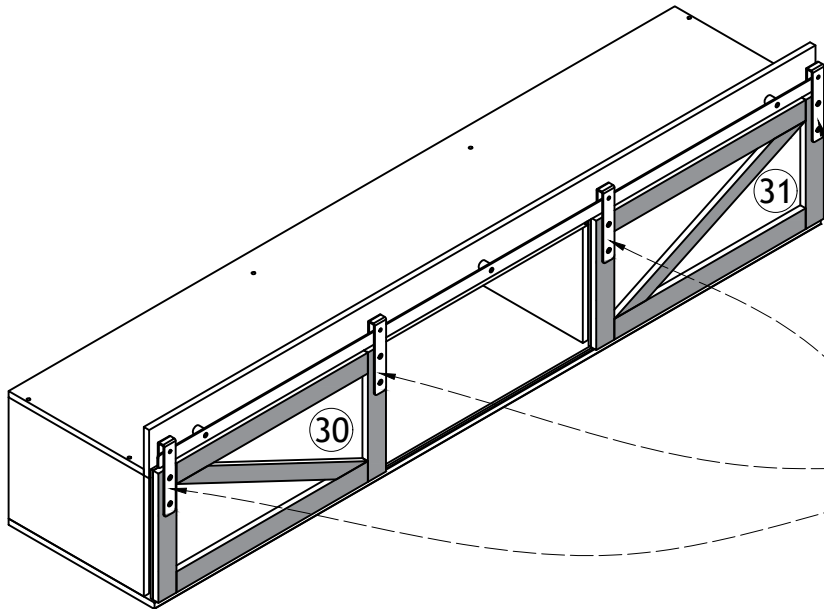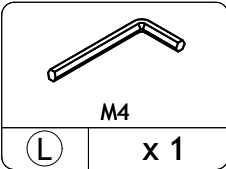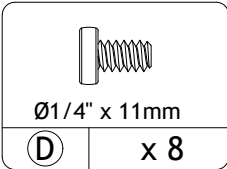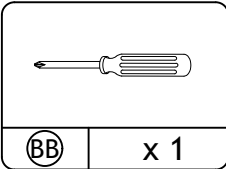


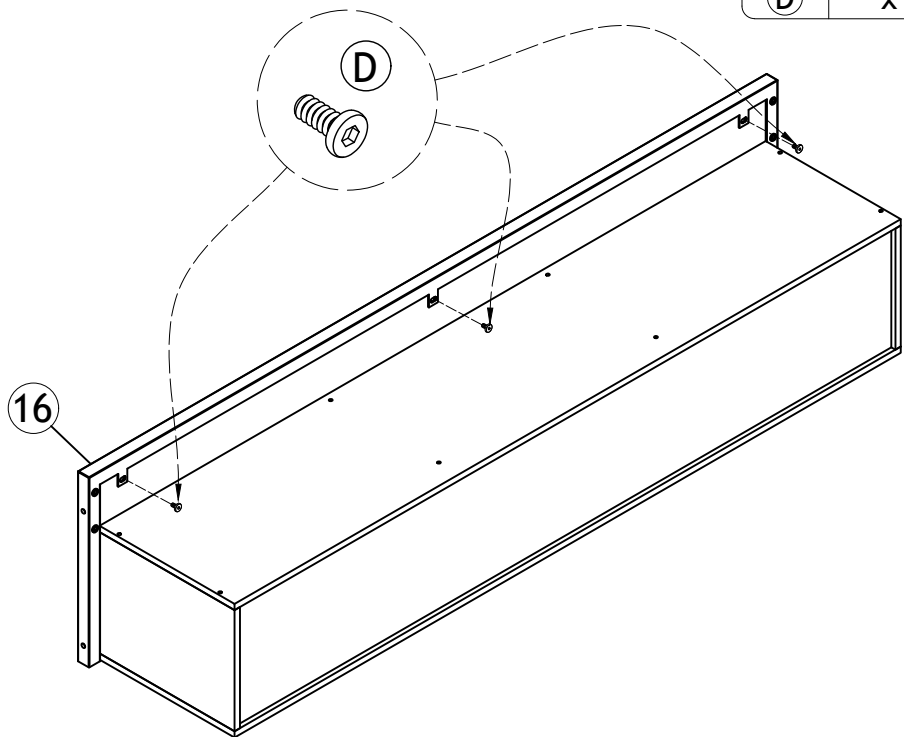
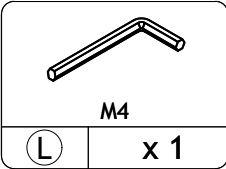
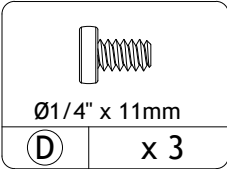
Insert metal plates (U) under door (30/31) into the groove on panel (24).

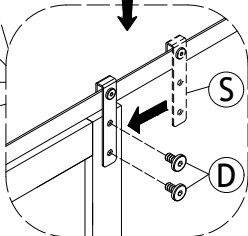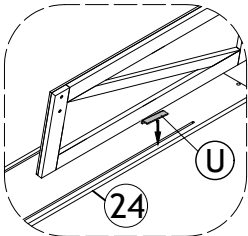


Connect door (30/31) metal pulley (S) with bolt (D)


STEP 33

 Please screws in this step need to be tightened




STEP 34


 Please screws in this step need to be tightened


Ø1/4" x 16mm


(E)	x 4
-----	-----

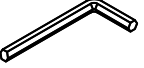
M4



(L)	x 1
-----	-----

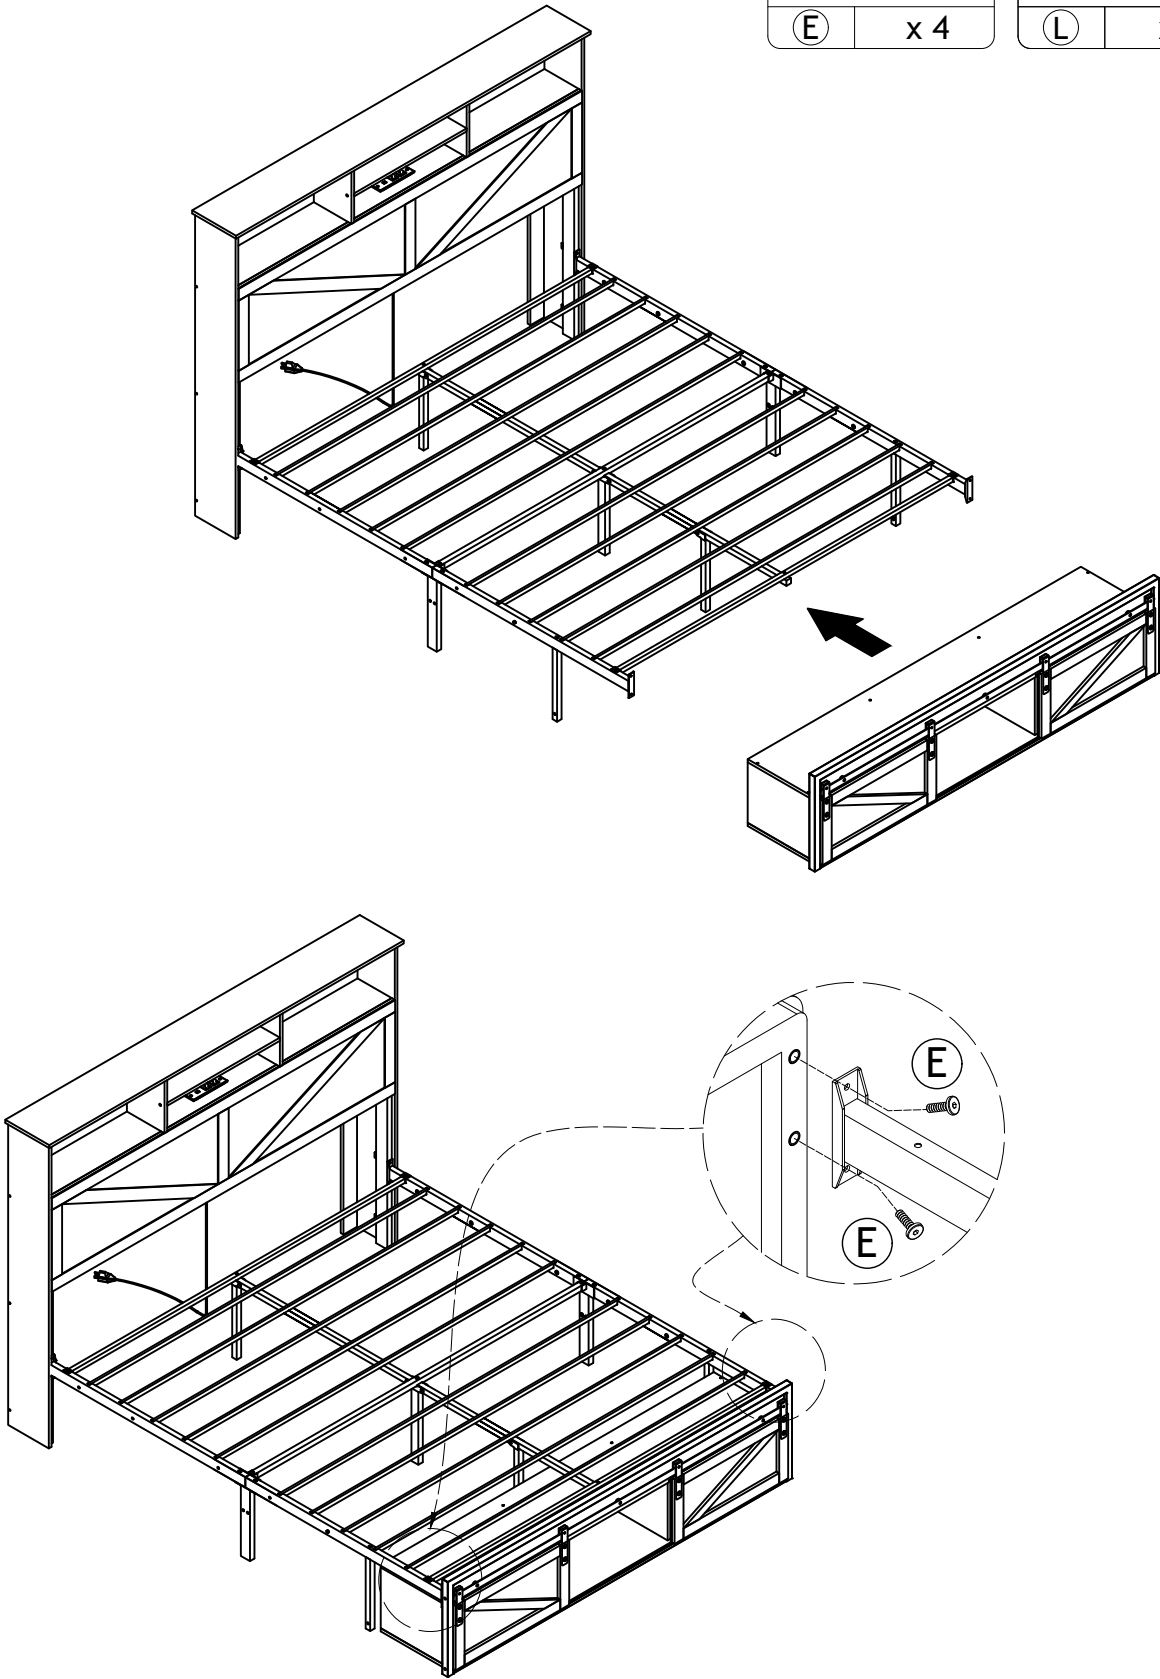


STEP 35




Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.

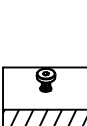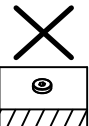




Ø1/4" x 25mm

(F)	x 20
-----	------



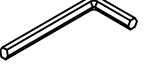


M4


(L)	x 1
-----	-----

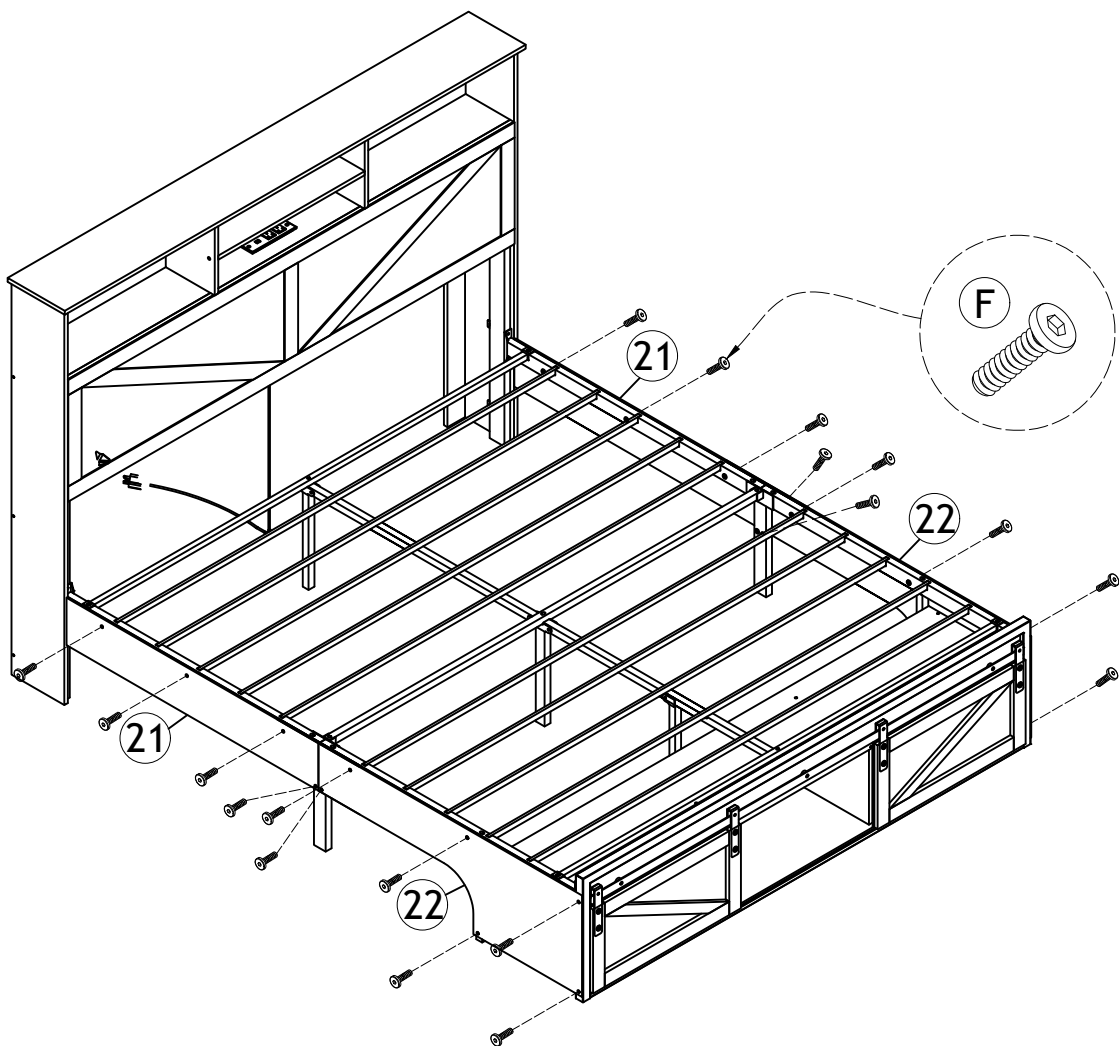

STEP 36

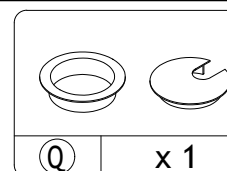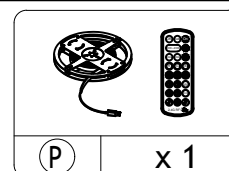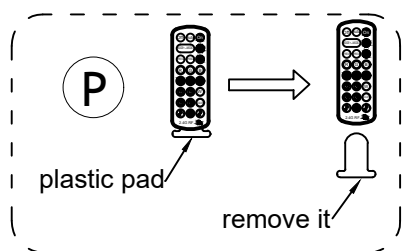

Please pull the plastic block out of the remote control.

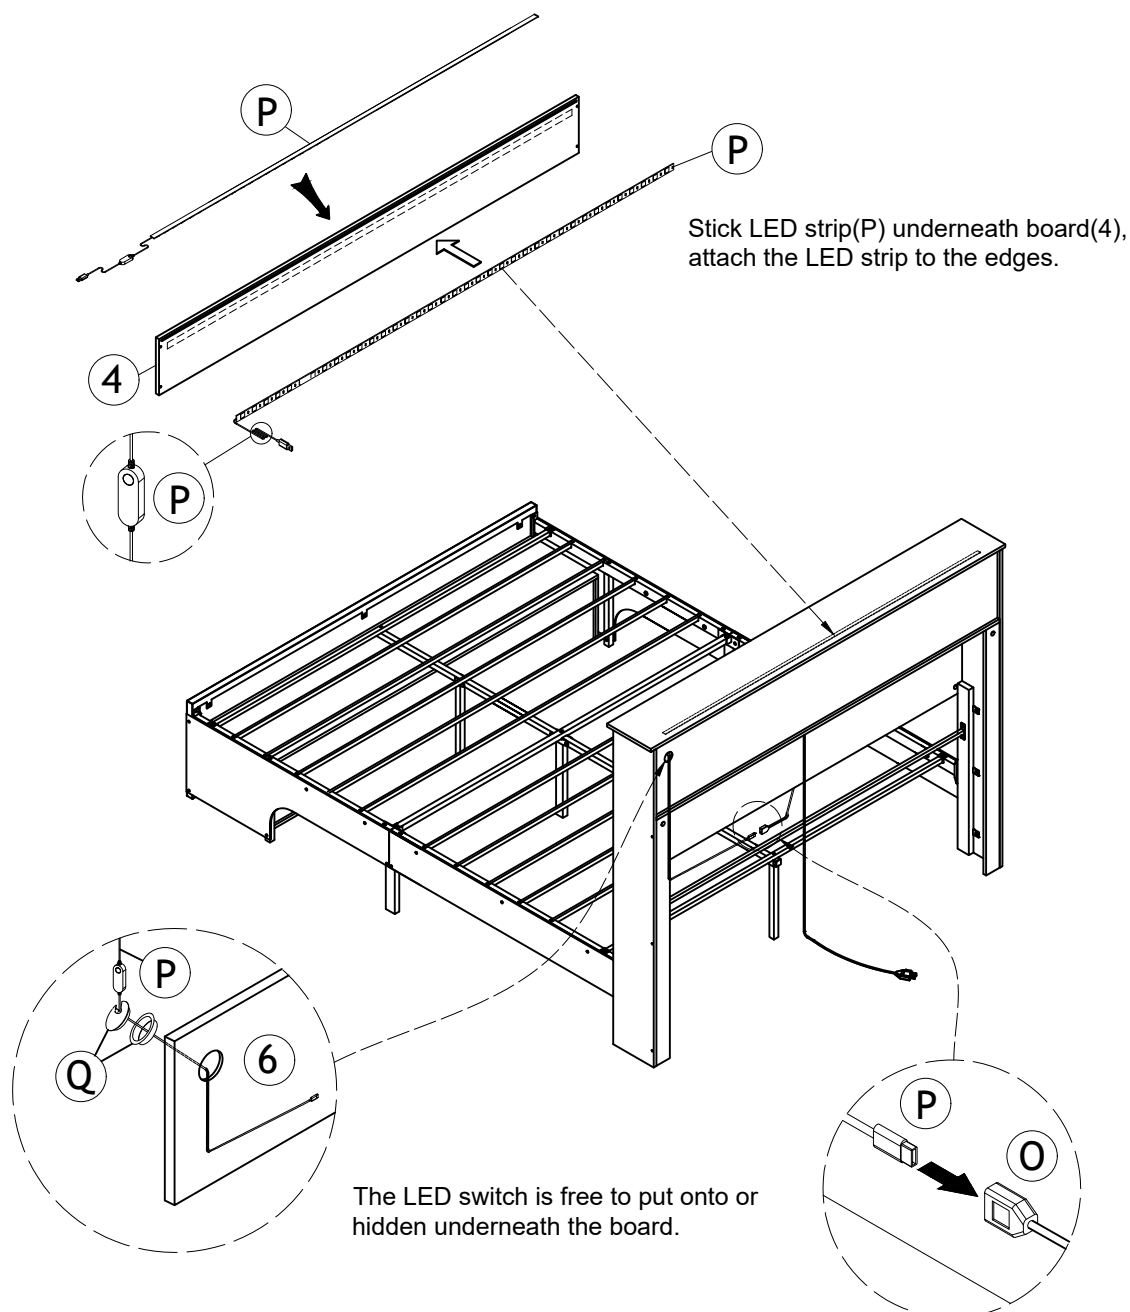

Congratulation:

Congratulations to you on completing the assembly of the product through your own efforts, you have done a great job.

The assembly of this product may have been difficult, but you still had the patience and perseverance to get it done.

Notes:

1. The product is designed for indoor use only and must be assembled and used according to the provided manual. Modifying or altering the product from its original design may result in personal injury or damage to the product.

Product Maintenance:

1. Please place this item on the level solid ground.
2. Avoid long-term exposure to humid environments to prevent mildew.
3. Keep the product away from high temperature environments or fire sources.
4. If accidentally spill water or another liquid on the surface, immediately wipe with a dry towel.
5. Regularly inspect the tightness of screws while using the product. If necessary, re-tighten to ensure structural stability.