



Assembly Instruction

———— CBN141 ————

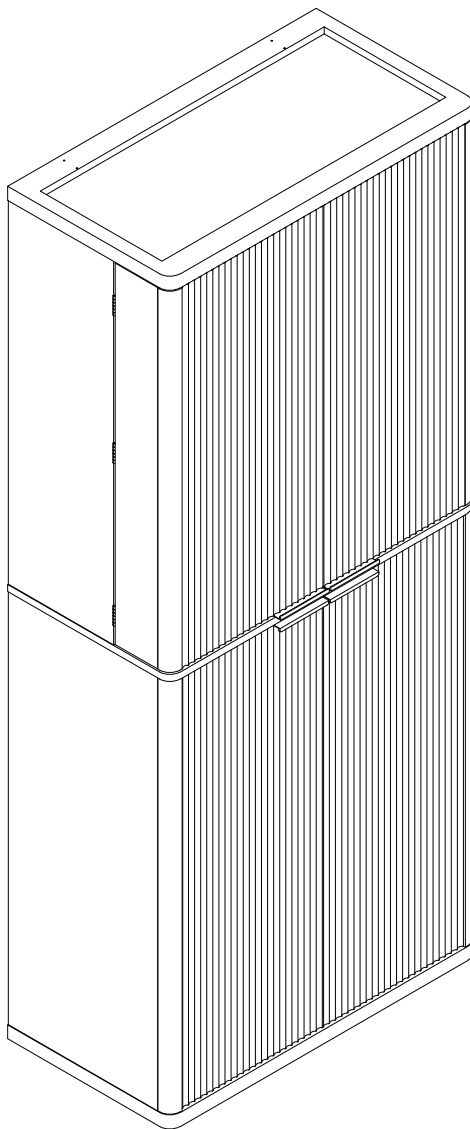

“

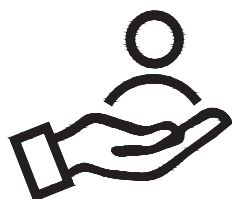

Warm Reminder

If you experience any issues with our product (including missing parts, damage, or not meeting expectations), please contact us. We'll ensure satisfactory assistance within 24hours.

Email: vipservice2023@yeah.net

”

General Guidelines

- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.


Notes

- The product is intended for indoor use only. The product must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to product may occur if products are used outside of their intended purposes and/or if products have been changed/modified from their original design. The seller does not assume any responsibility or liability with respect to any injury/damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface and do not place the unwrapped product directly on the ground to avoid product damage.
- Please do not stand or sit on the wooden boards.
- Please wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Please match the corresponding part and fitting based on the part number in the manual.
- If the part does not match with the fitting, please check the piece as specified in this manual.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.
- Periodically inspect screw tightness while the product is in use. If necessary, retighten to ensure structural integrity.
- If you accidentally spill water or another liquid on the surface, immediately wipe clean with a dry towel.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.
- Please place this item on level, solid ground during use.





Warnings

- During assembly, keep all small parts out of the reach of children. It may be fatal if swallowed or inhaled.
- Children should not climb or play on the product in order to avoid tipping over the furniture and causing serious injury.
- To avoid the potential dangers of suffocation, please keep all parts and packaging (film, plastic bags, foam, etc.) away from babies and children.
- Keep sharp objects and corrosive items away from the product to avoid any damage or injury.
- Do not shake or move violently during use to avoid tipping over the product.

Parts List (EN)




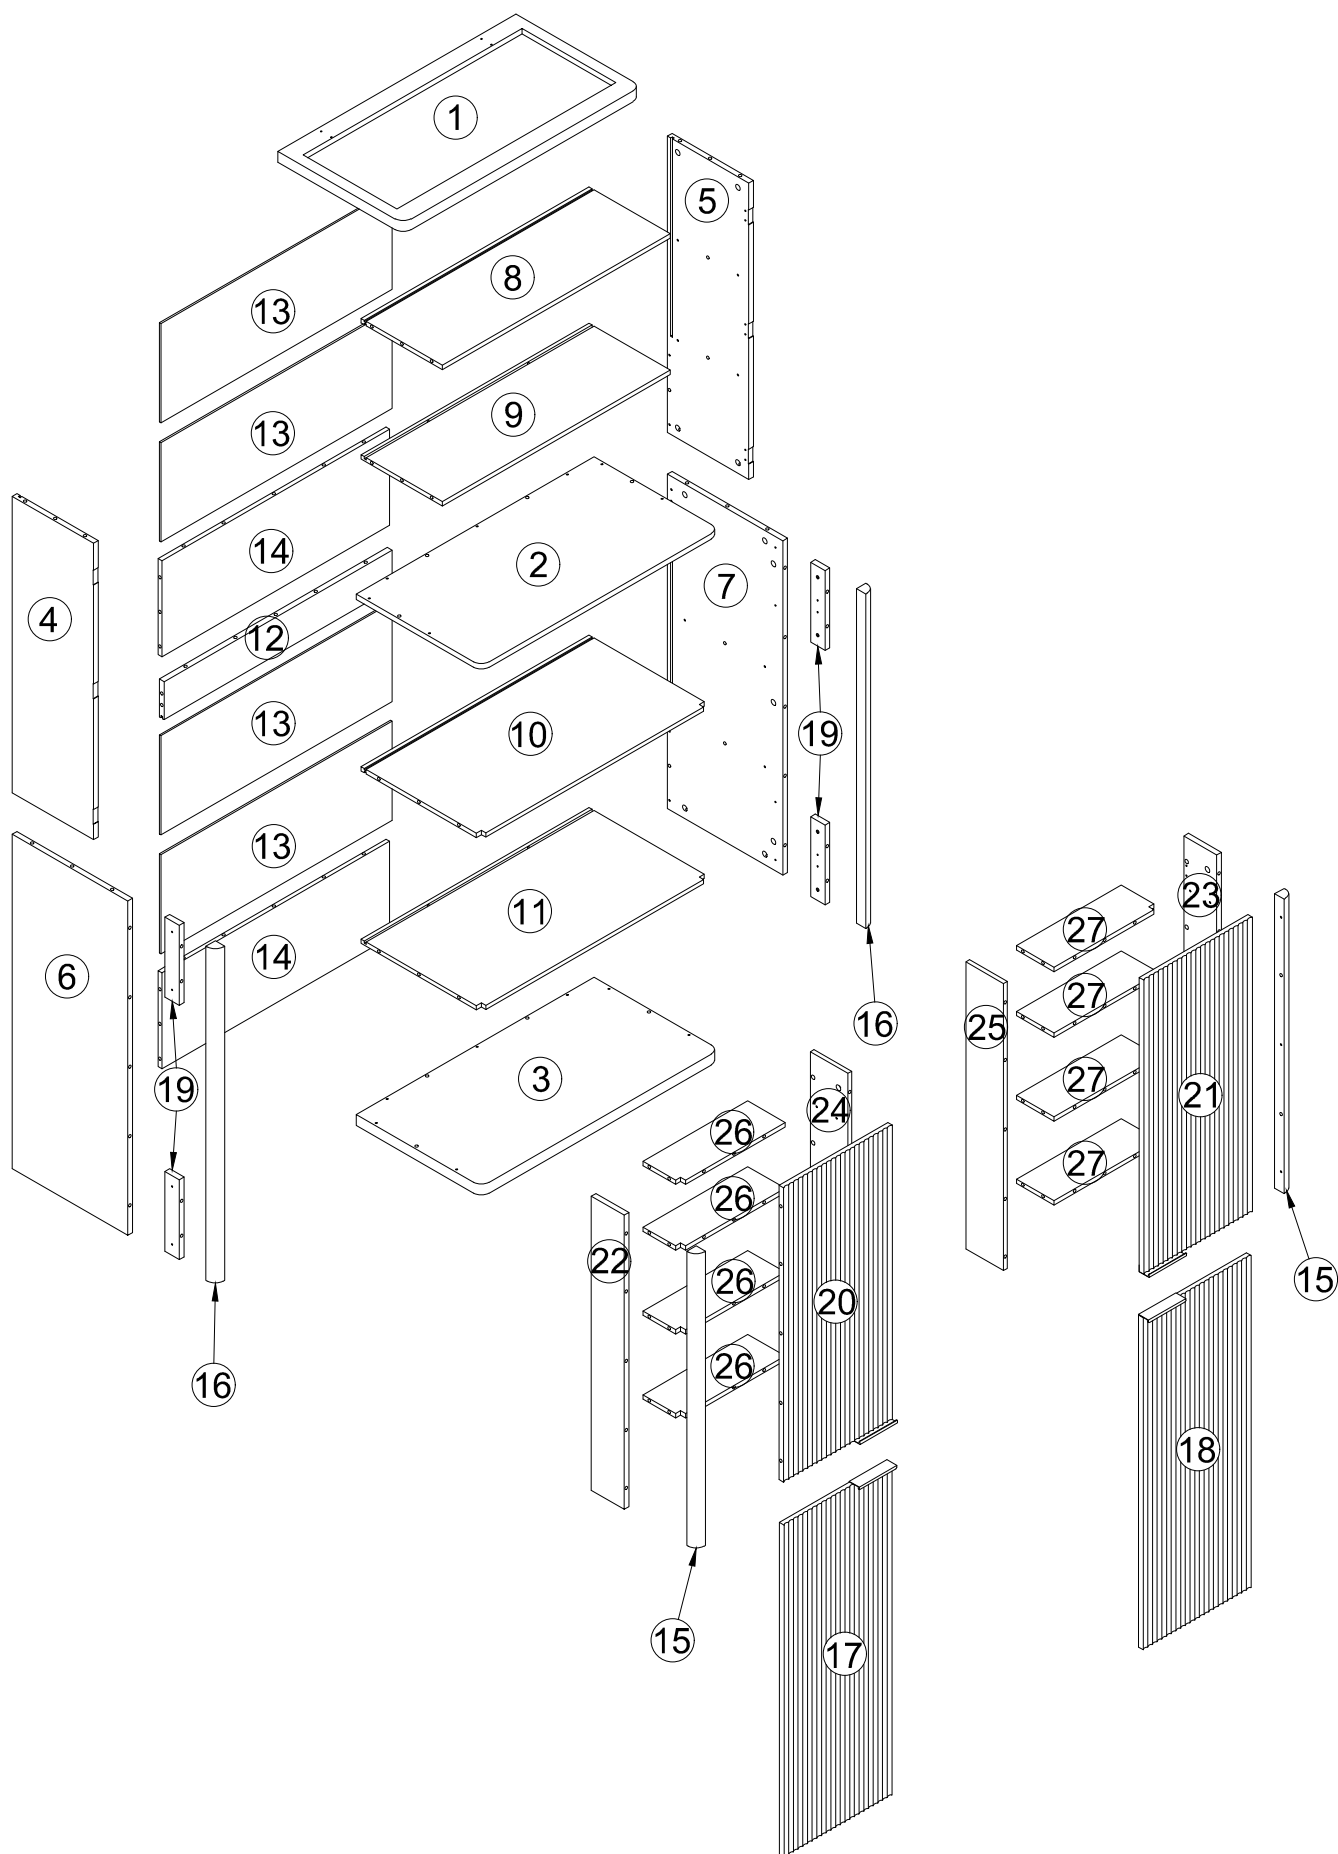


Parts List (EN)

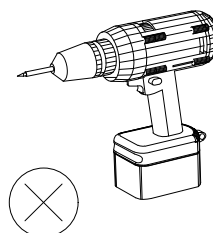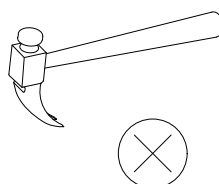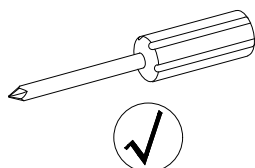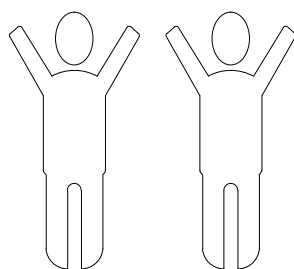





1 1PCS	2 1PCS	3 1PCS	4 1PCS
5 1PCS	6 1PCS	7 1PCS	8 1PCS
9 1PCS	10 1PCS	11 1PCS	12 1PCS
13 4PCS	14 2PCS	15 2PCS	16 2PCS

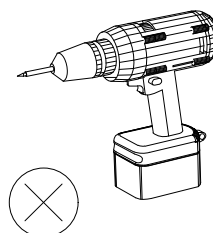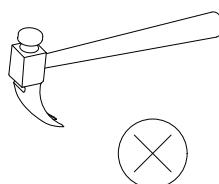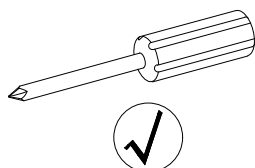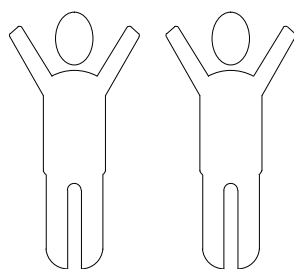








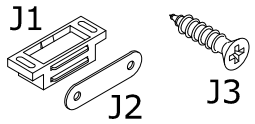
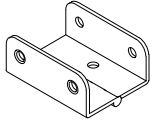
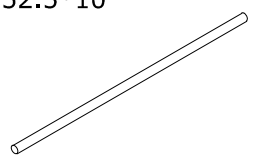
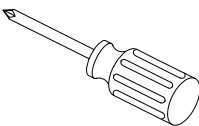

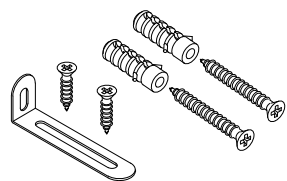

Parts List (EN)




<p>17</p> <p>1PCS</p>	<p>18</p> <p>1PCS</p>	<p>19</p> <p>4PCS</p>	<p>20</p> <p>1PCS</p>
<p>21</p> <p>1PCS</p>	<p>22</p> <p>1PCS</p>	<p>23</p> <p>1PCS</p>	<p>24</p> <p>1PCS</p>
<p>25</p> <p>1PCS</p>	<p>26</p> <p>4PCS</p>	<p>27</p> <p>4PCS</p>	

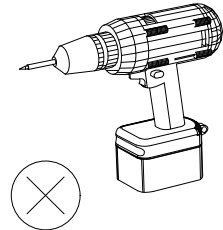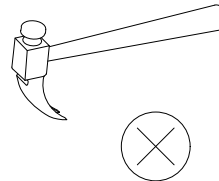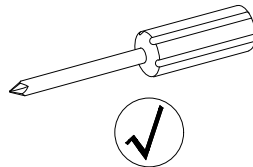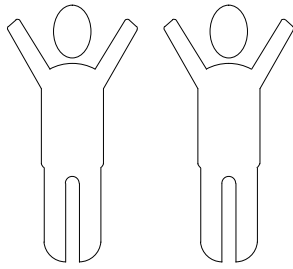Parts List (EN)




No. A Quantity:131+5 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:131+5 Pcs Cam $\phi 15$ 	No. C Quantity:100+4 Pcs Sticker $\phi 20$ 	No. D Quantity:62+3 Pcs Dowel 8*30mm 
No. E Quantity:4 Pcs Hinge 	No. F Quantity:4 Pcs Handle 	No. G Quantity:48+3 Pcs Screw M3.5*14mm 	No. H Quantity:8+1 Pcs Screw M3.5*25mm 
No. I Quantity:6+1 Pcs Foot Pad $\phi 15$ 	No. J Quantity:2 Sets Magnetic Door Catcher 	No. K Quantity:6 Pcs Hinge 	No. L Quantity:8 Pcs Hardware round bar 352.5*10 
No. M Quantity:1 Pcs Screwdriver 	No. N Quantity:16+2 Sets Plastic Wedge 	No. O Quantity:2 Sets Hardware anti-falling belt 	No. P Quantity:8+2 Pcs Screw M3.5*12mm 

Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

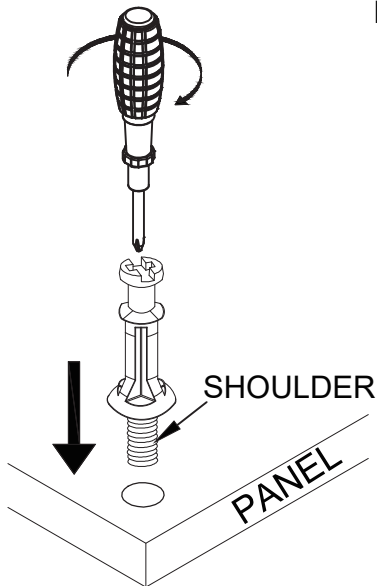

Place Cam-bolt on pre-drilled hole and screw in vertically

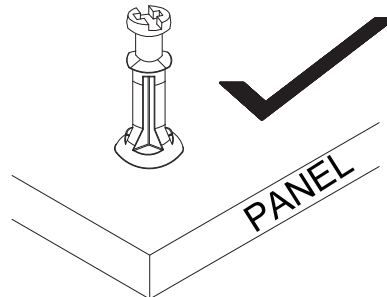


Shoulder is flushed (on the same level) with the panel.

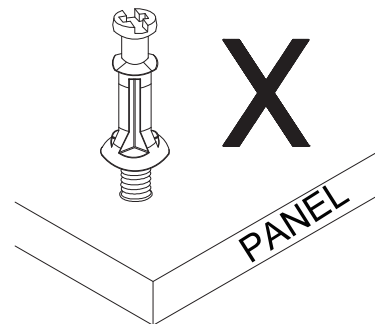

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

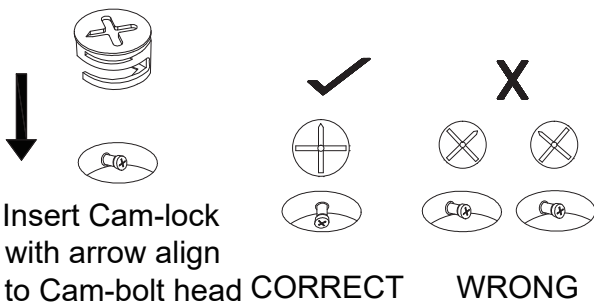


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG






Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

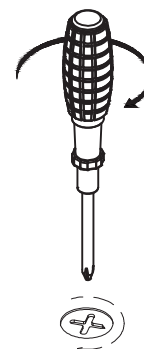


TIGHTENING CAM-LOCK




Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


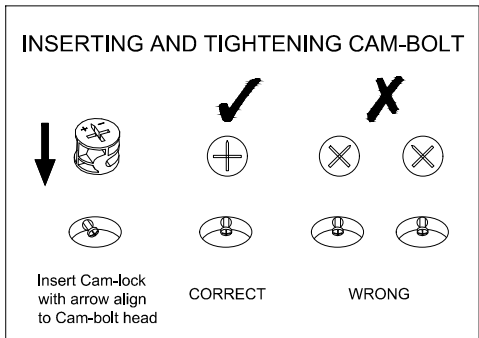
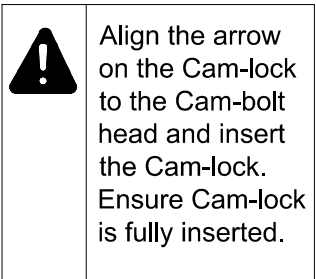
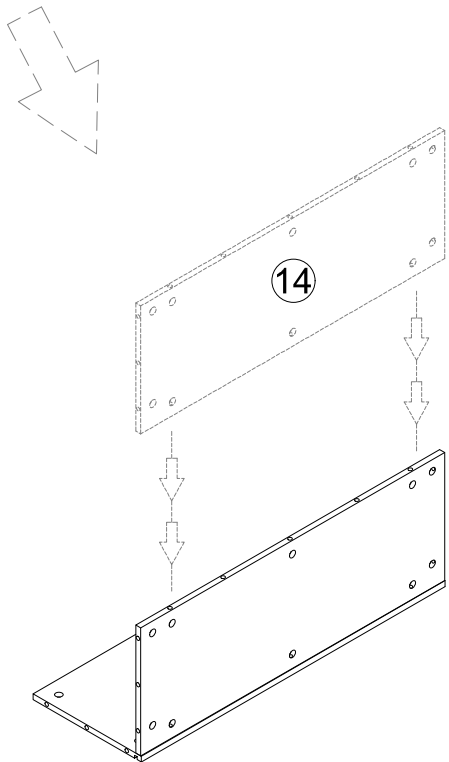
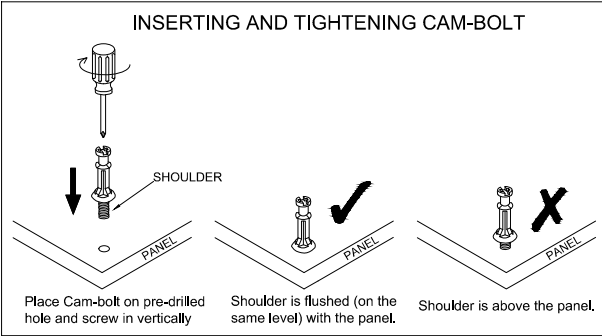
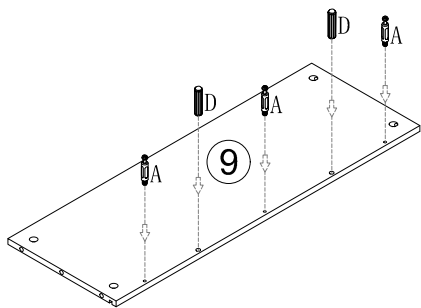
STEP 1

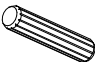

	A×3PCS
	B×3PCS
	D×2PCS







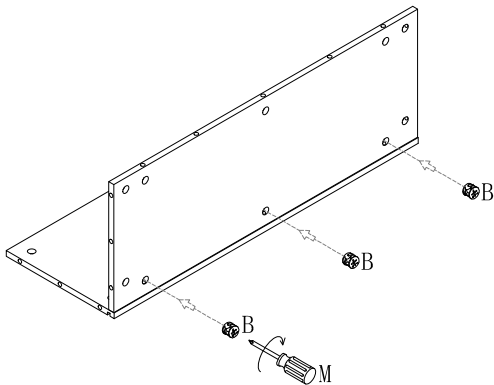


STEP 2

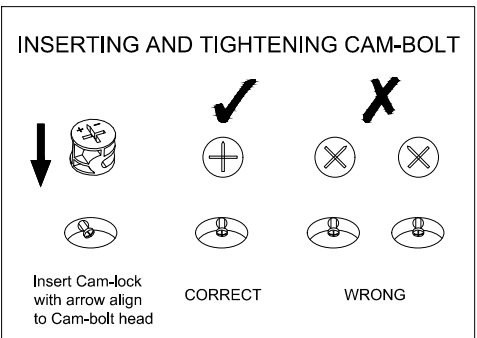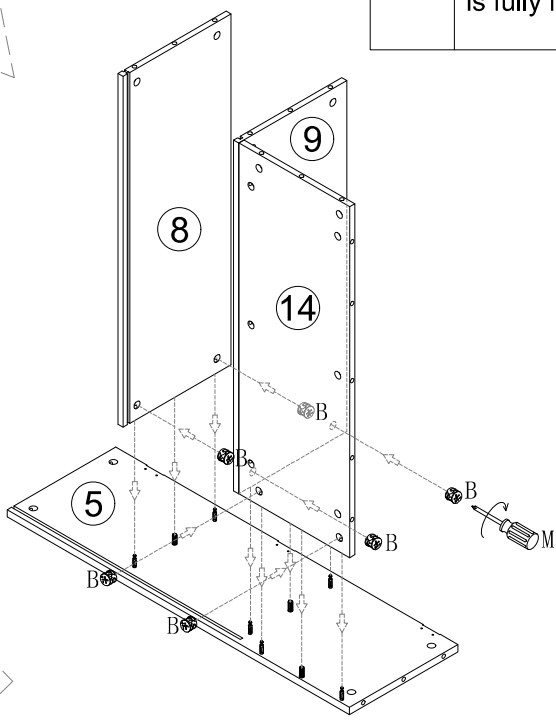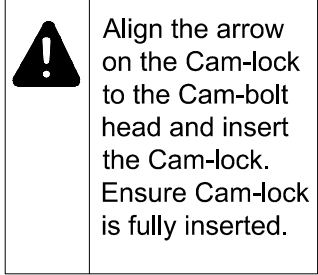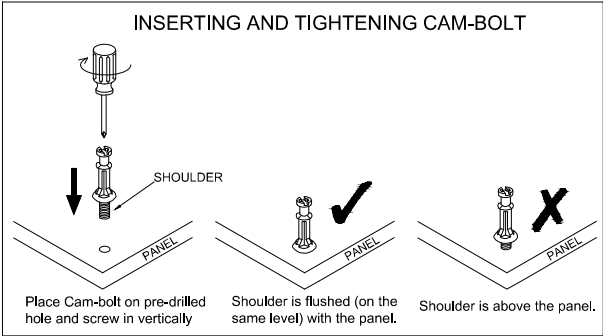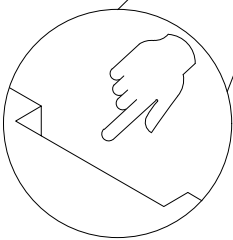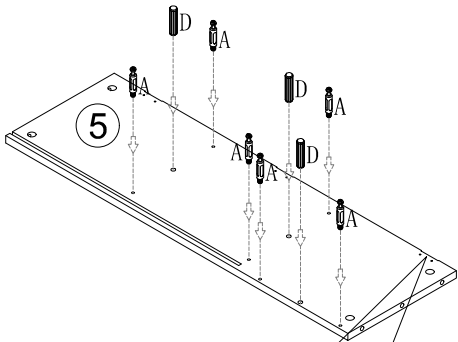





	A×6PCS
	B×6PCS
	D×3PCS

STEP 3

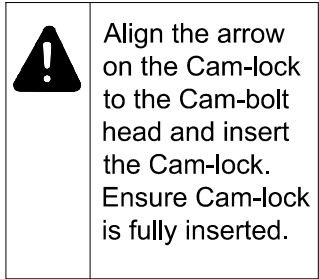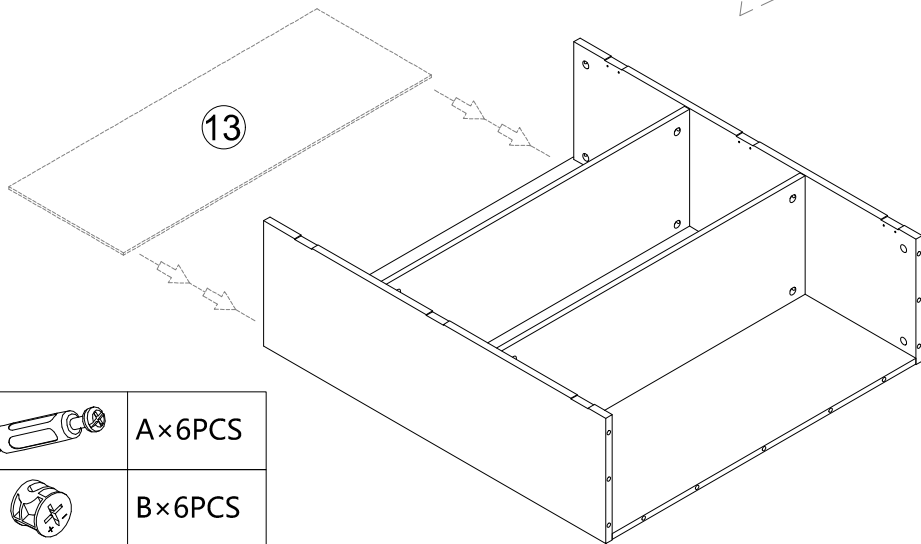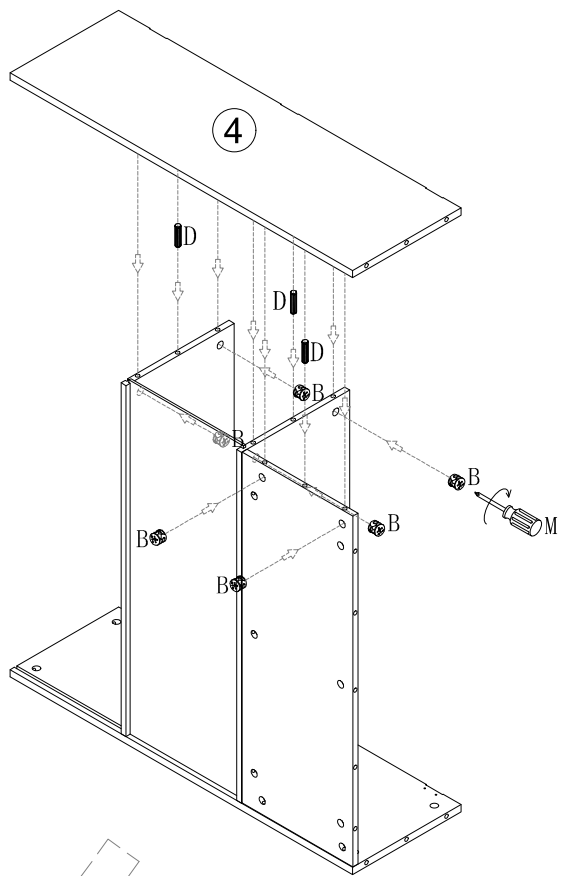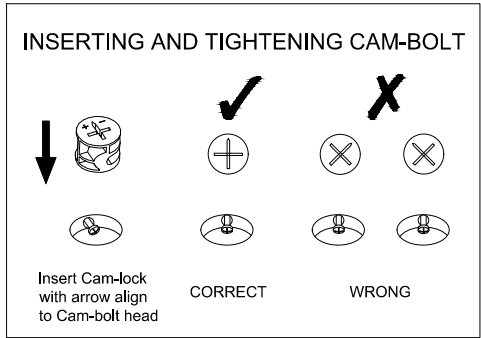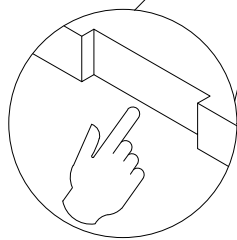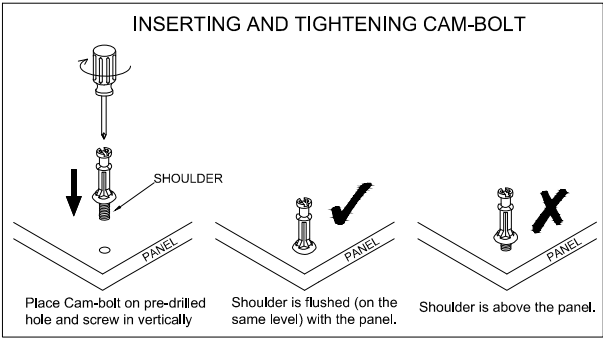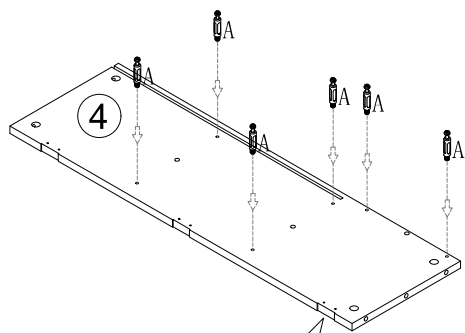


	A×6PCS
	B×6PCS
	D×3PCS



STEP 4

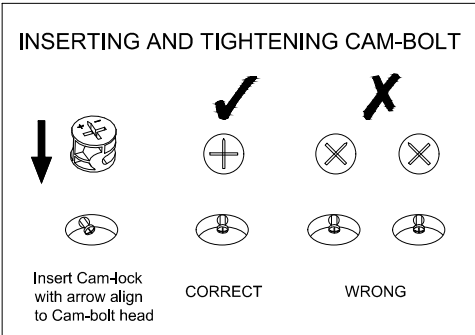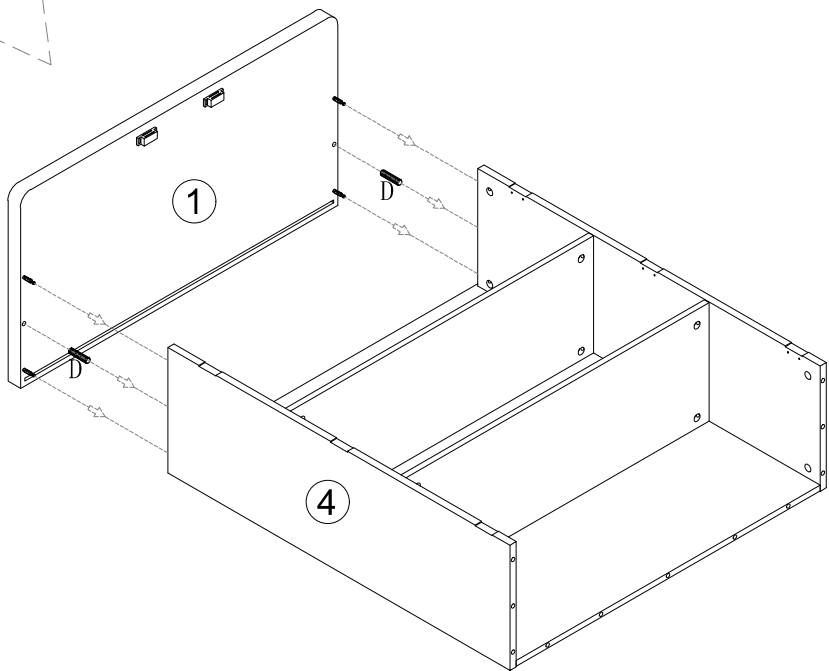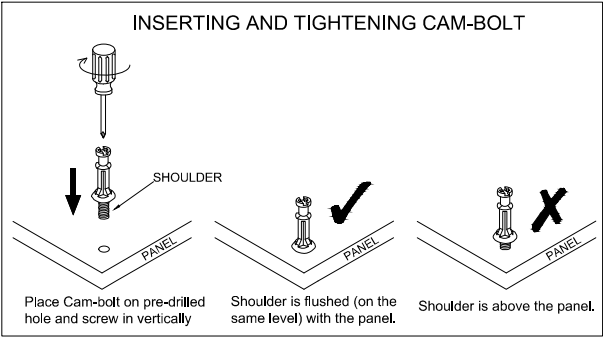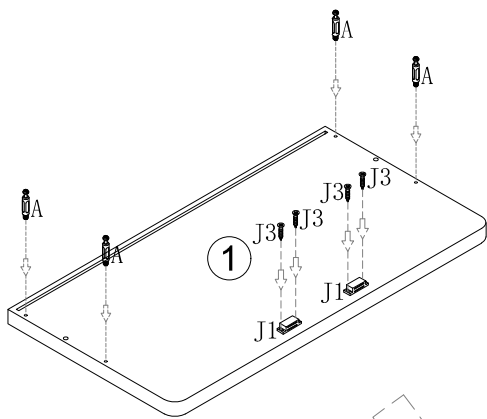

	A×4PCS
	B×4PCS
	D×2PCS
	J1×2PCS
	J3×4PCS


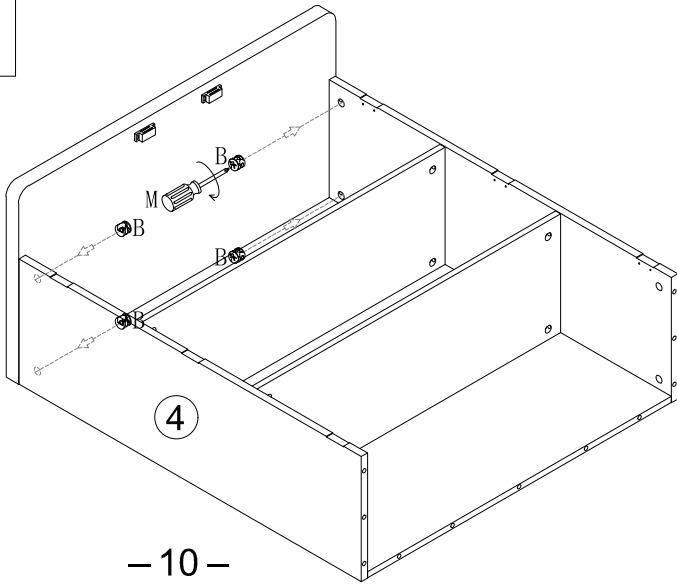


STEP 5

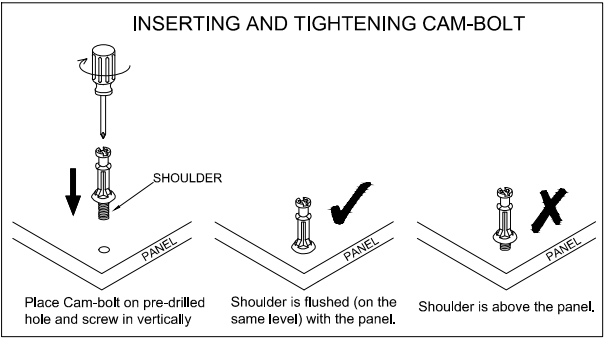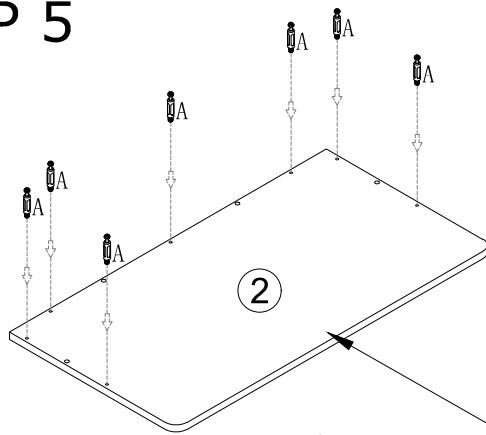







Note: This block has holes on both sides, please pay attention to the difference.

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

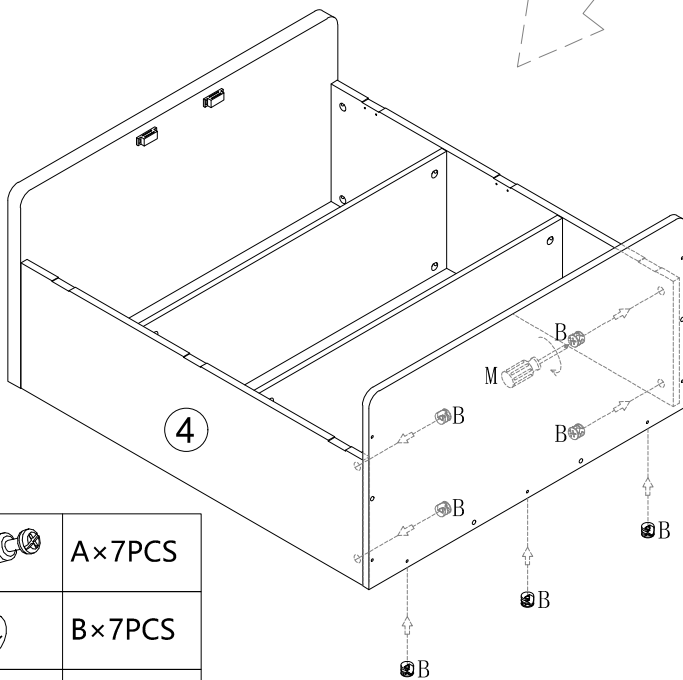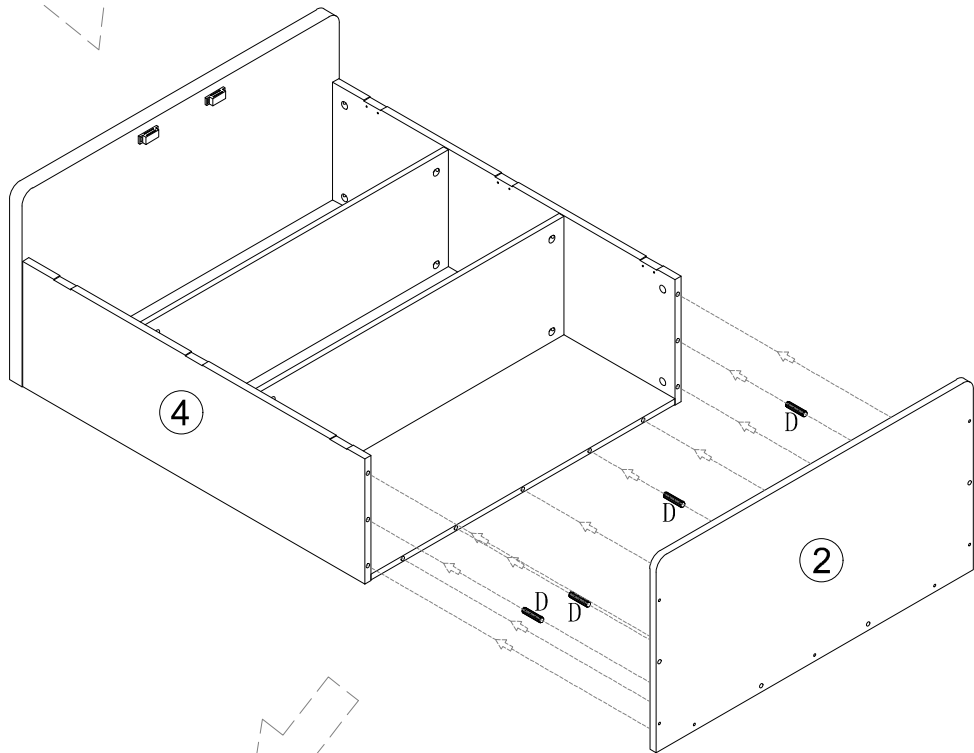







	A×7PCS
	B×7PCS
	D×4PCS

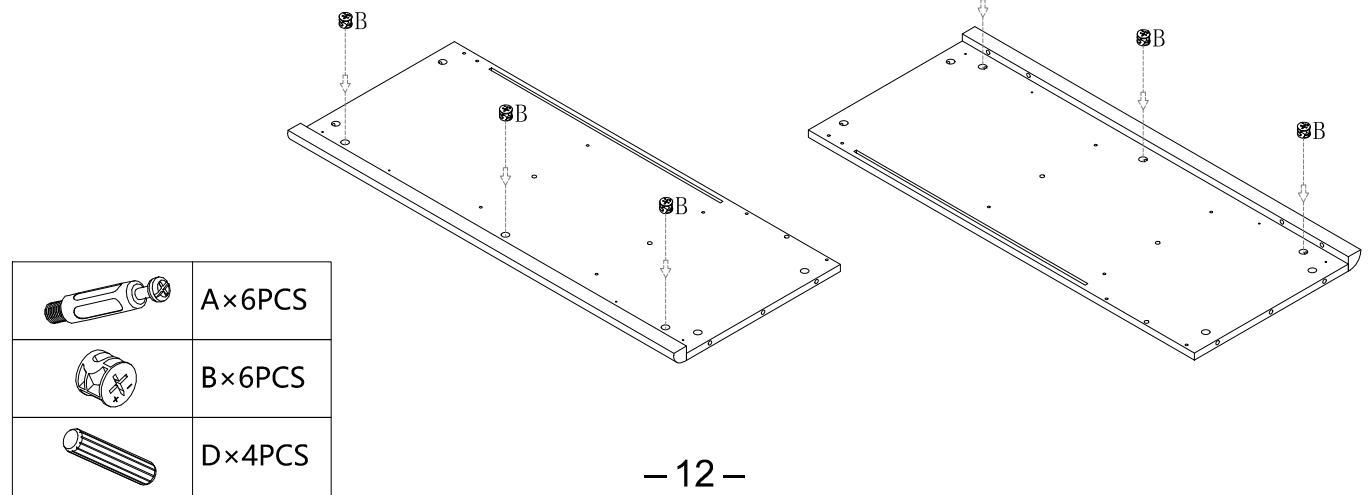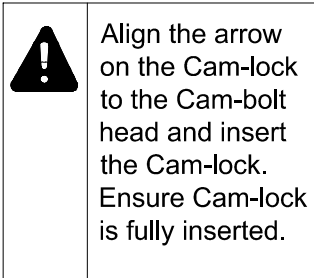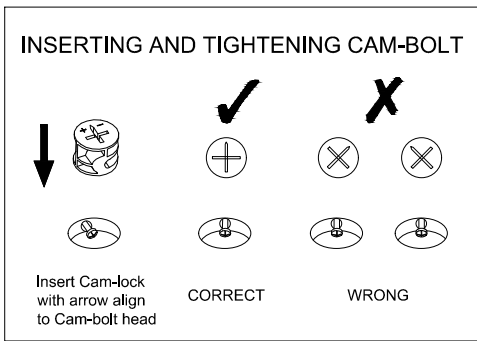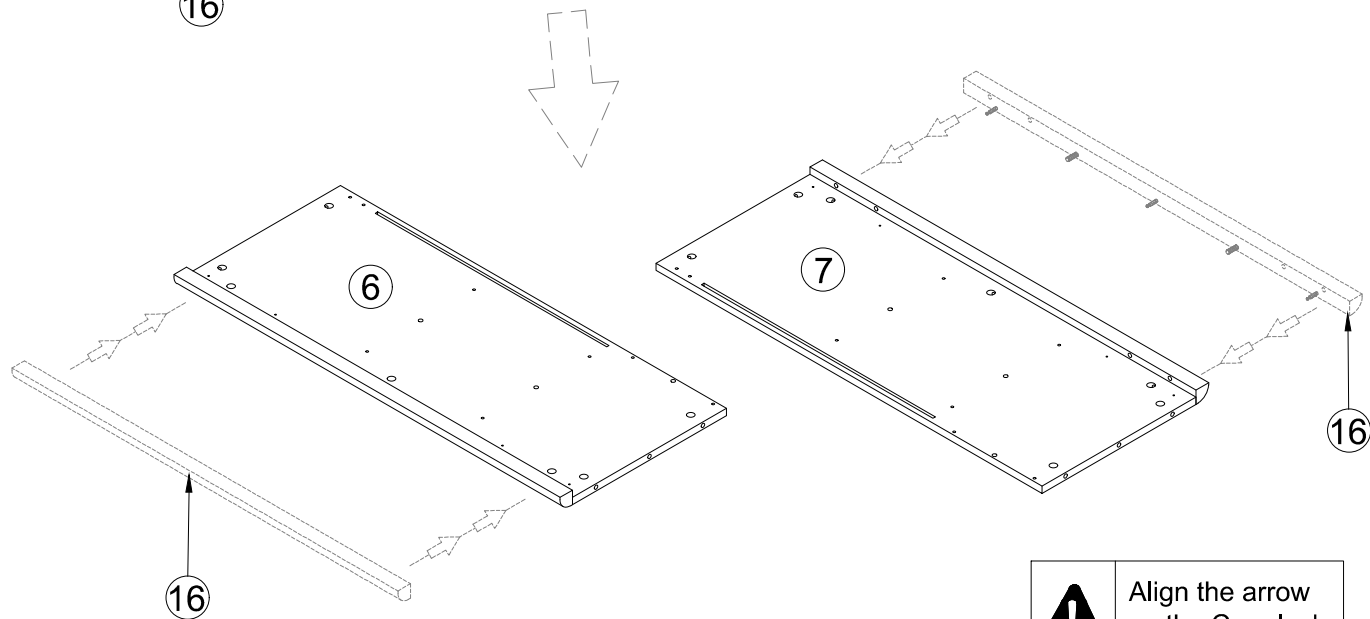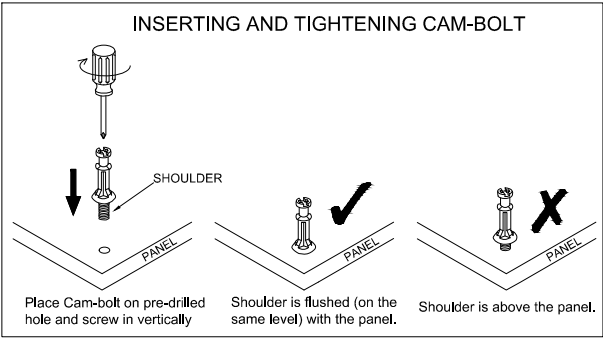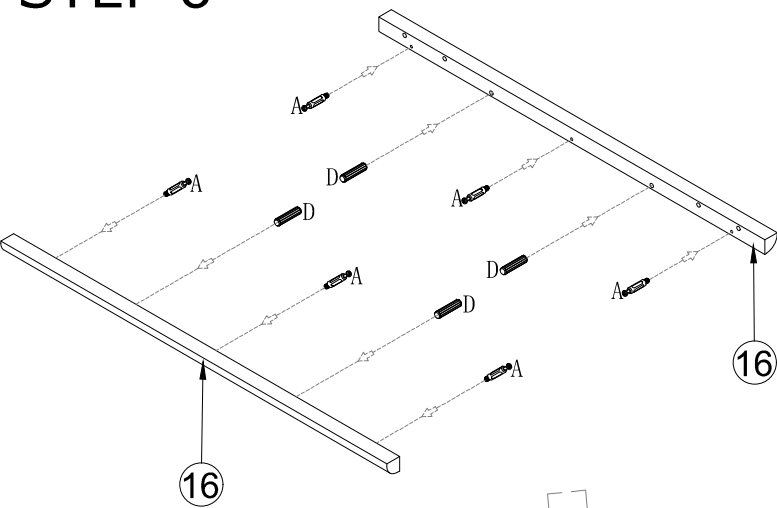


STEP 6









	A×6PCS
	B×6PCS
	D×4PCS

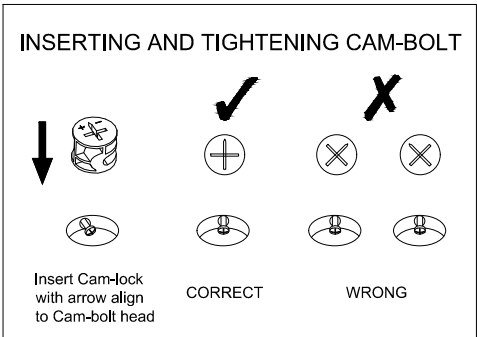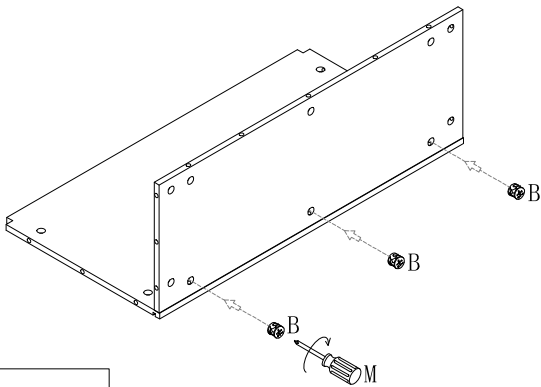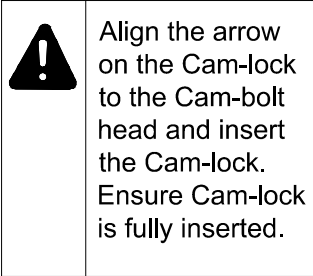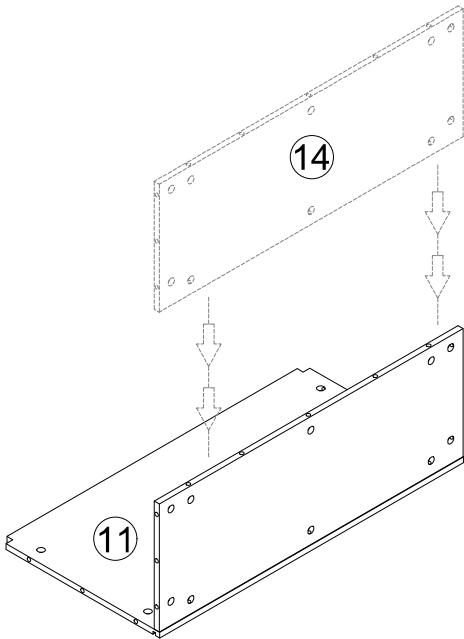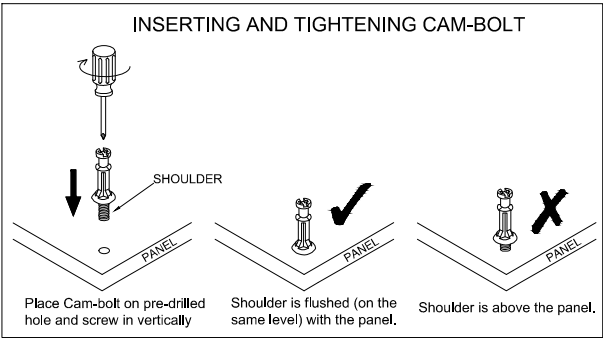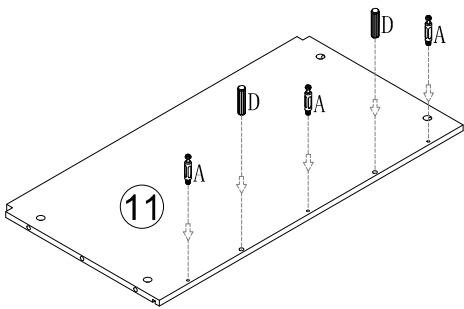


STEP 7









	A×3PCS
	B×3PCS
	D×2PCS

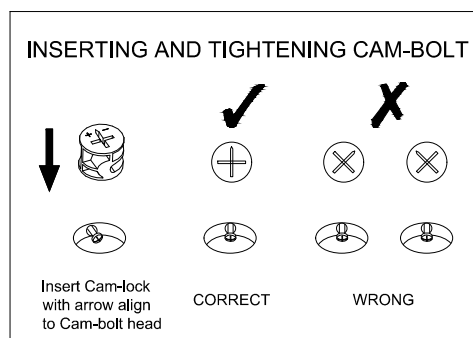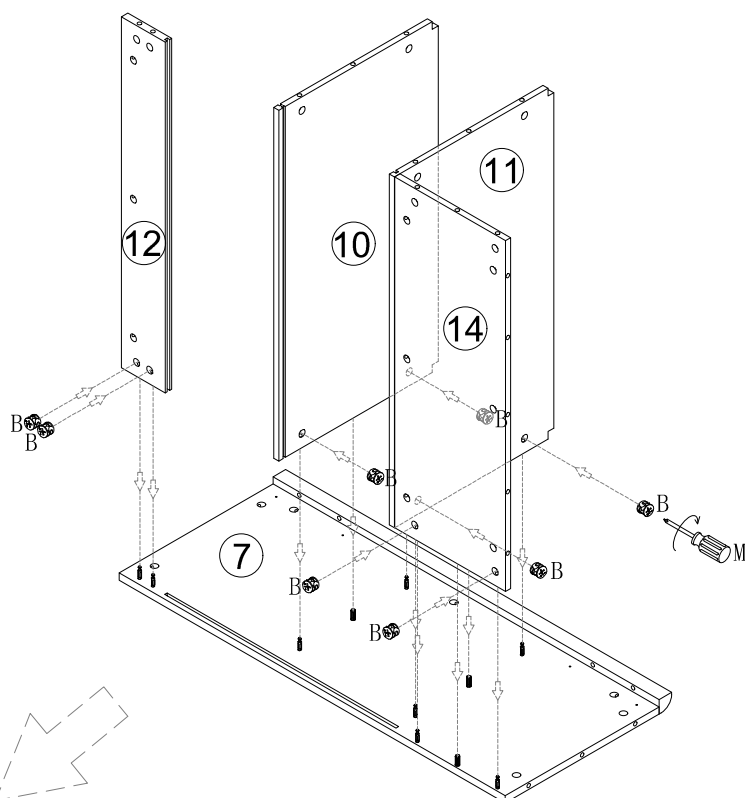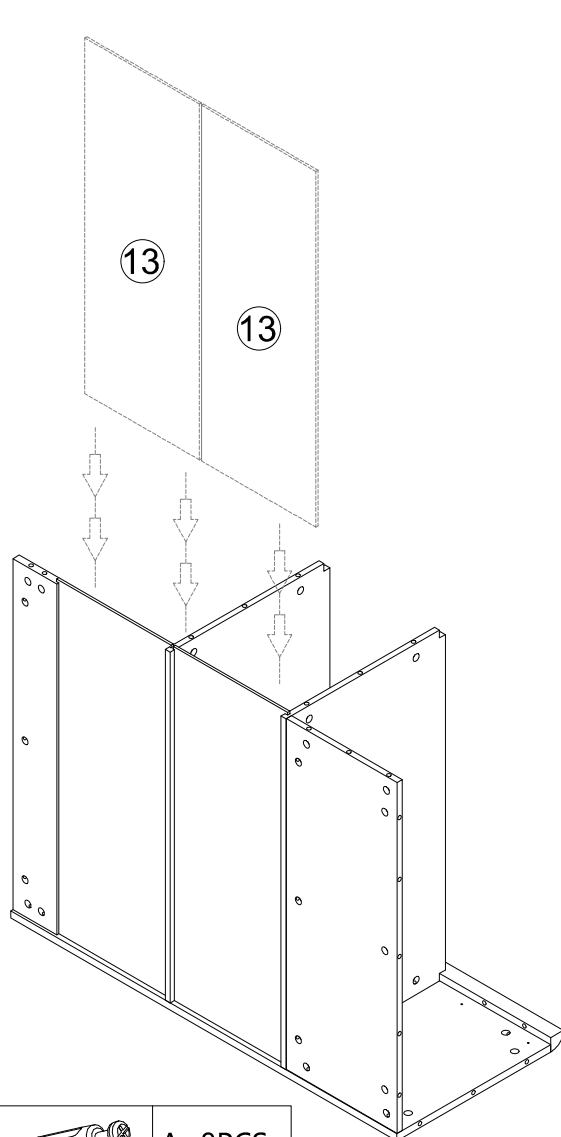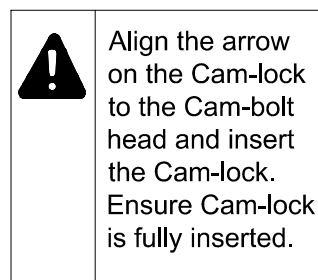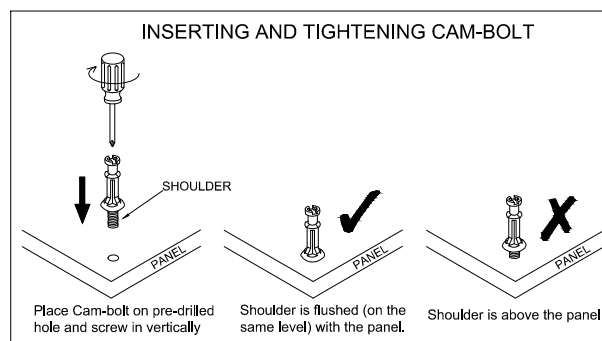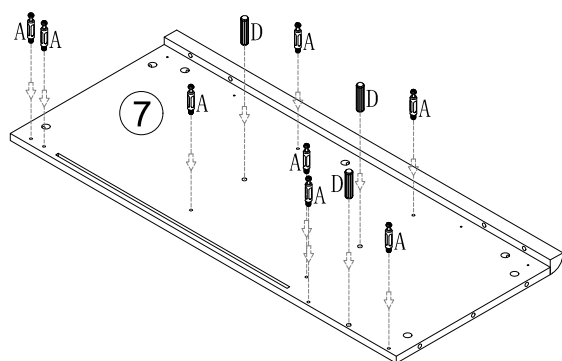


STEP 8



	A×8PCS
	B×8PCS
	D×3PCS

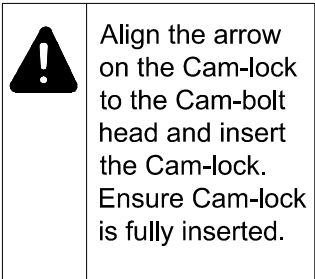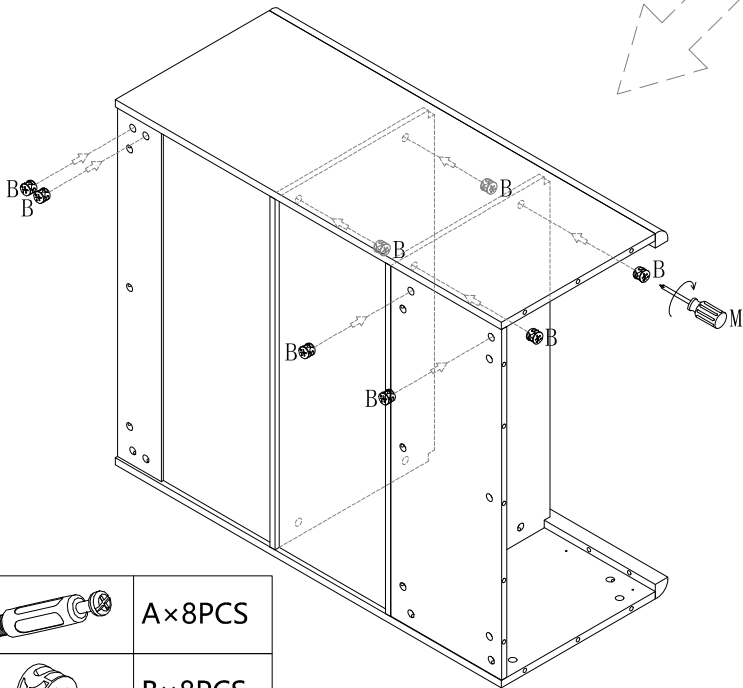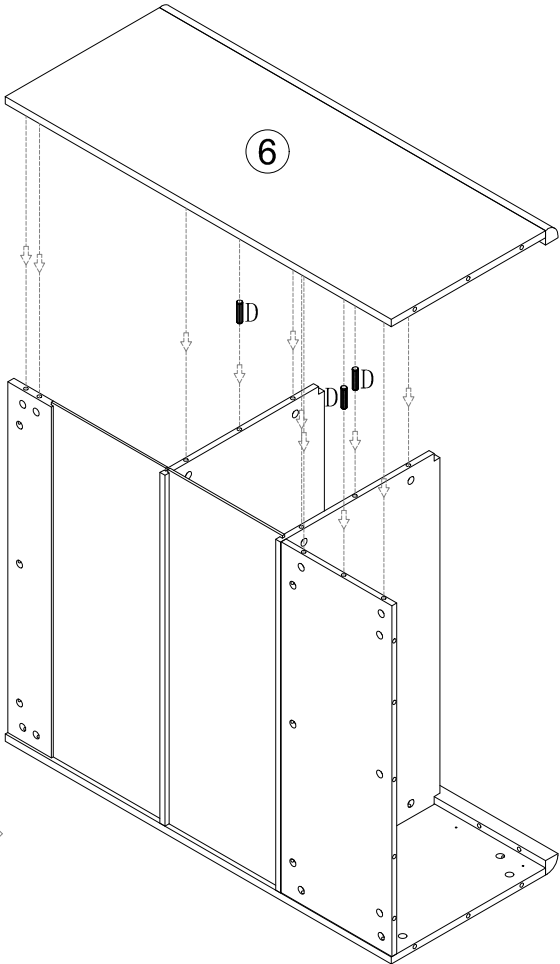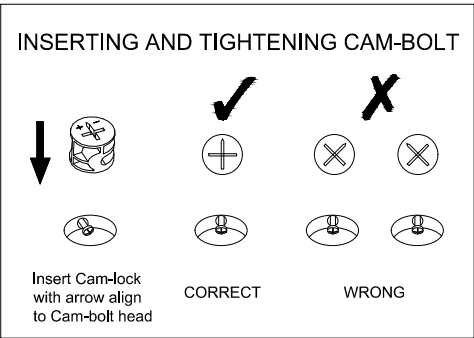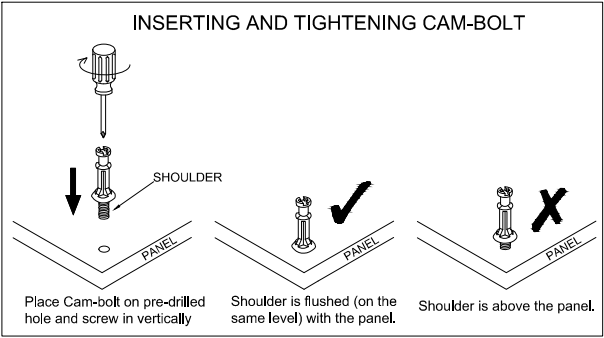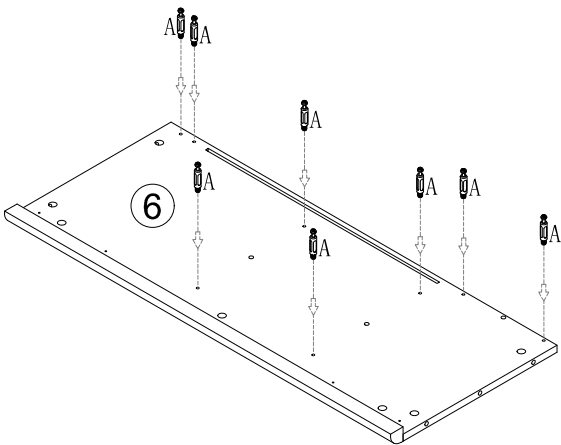STEP 9



	A×8PCS
	B×8PCS
	D×3PCS

STEP 10

INSERTING AND TIGHTENING CAM-BOLT



SHOULDER


PANEL

Place Cam-bolt on pre-drilled hole and screw in vertically

Shoulder is flushed (on the same level) with the panel.

Shoulder is above the panel.

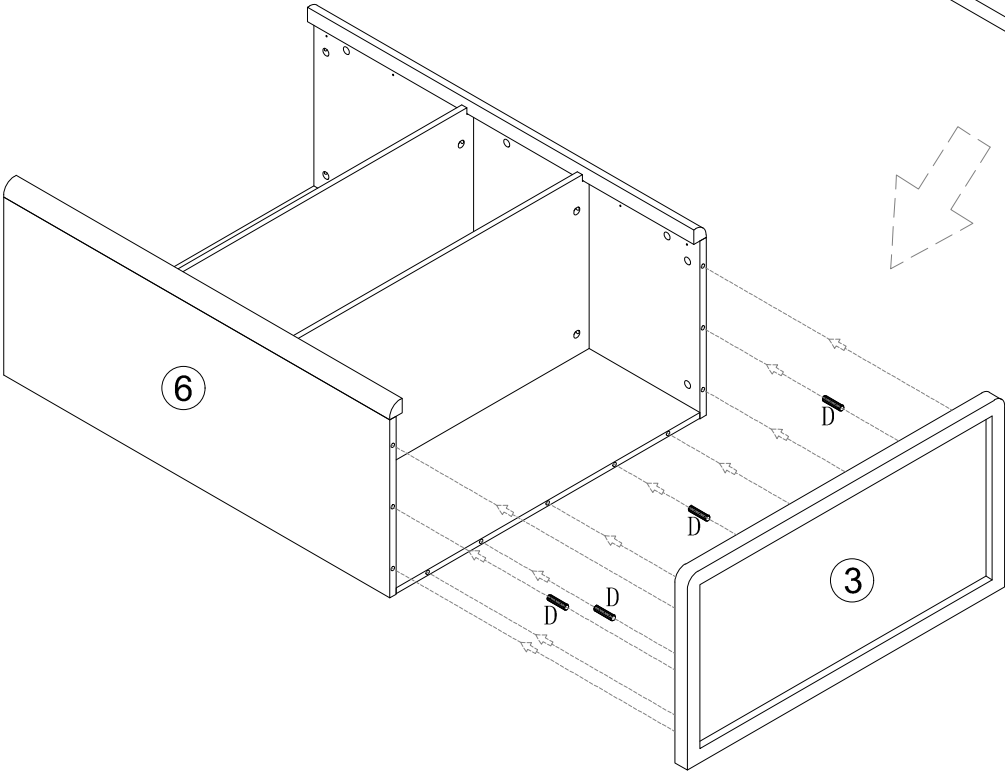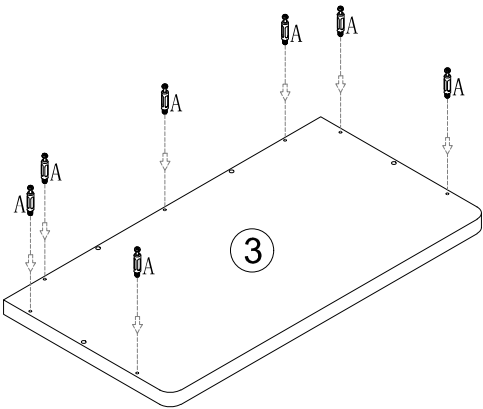


 Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.




INSERTING AND TIGHTENING CAM-BOLT

Insert Cam-lock with arrow align to Cam-bolt head



CORRECT

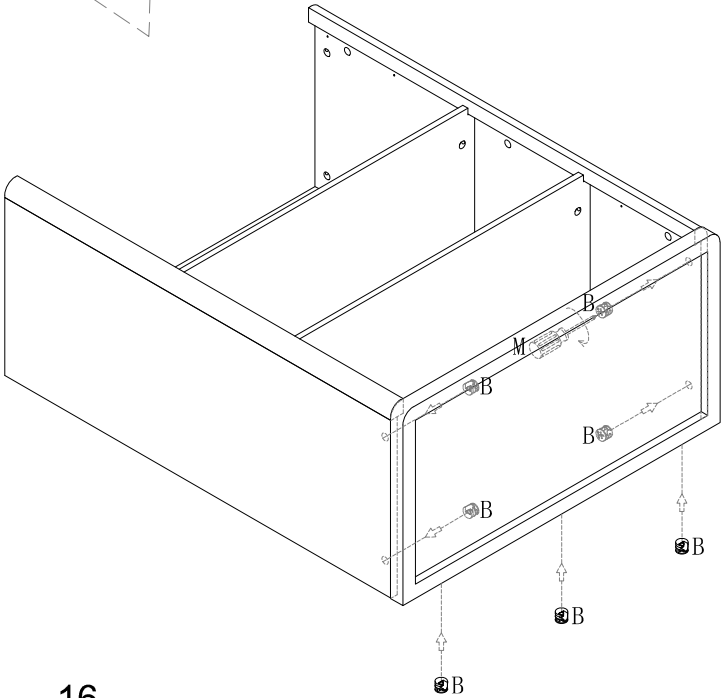WRONG




	A×7PCS
	B×7PCS
	D×4PCS


STEP 11

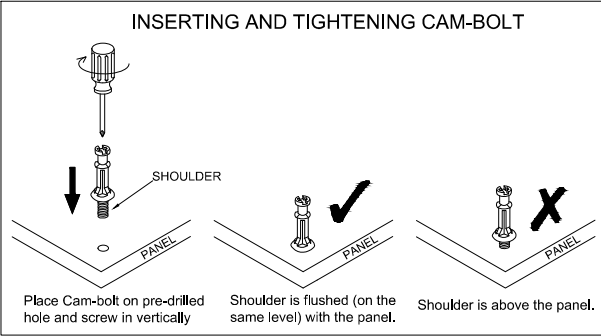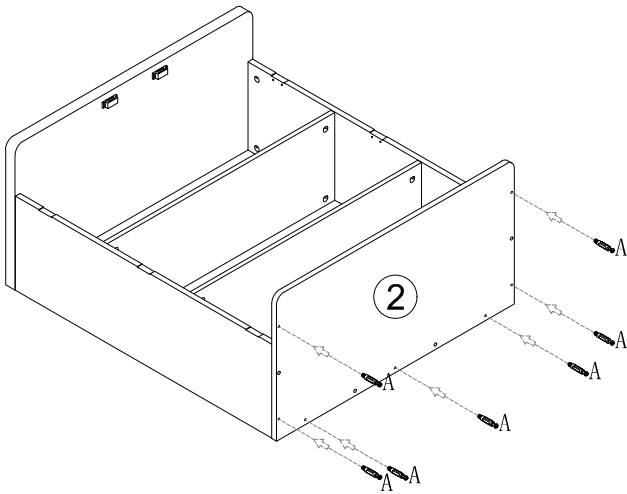

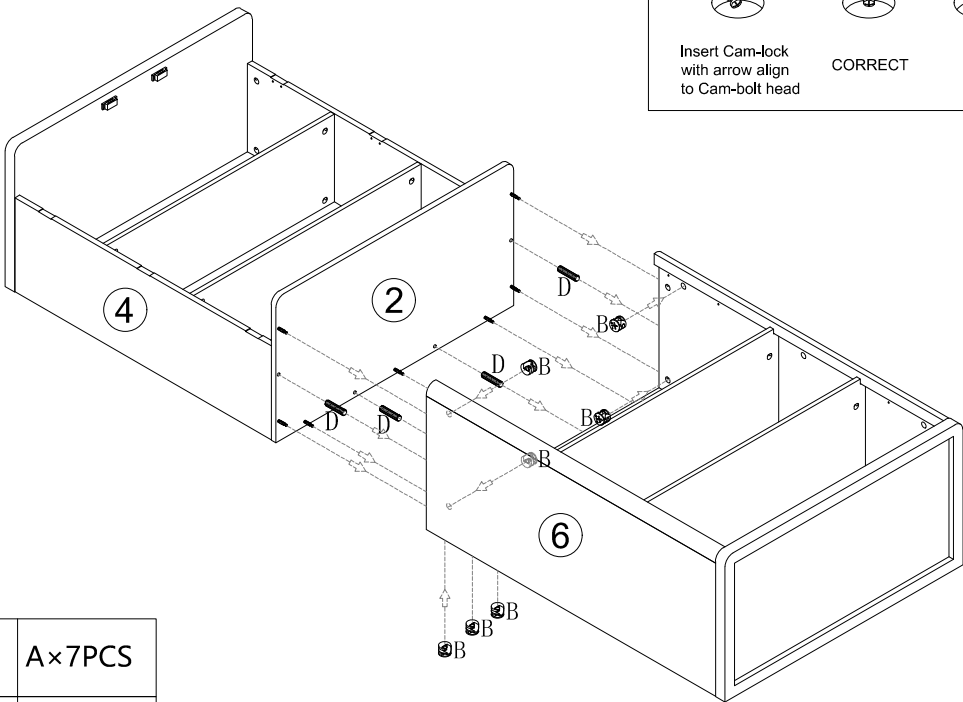


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.






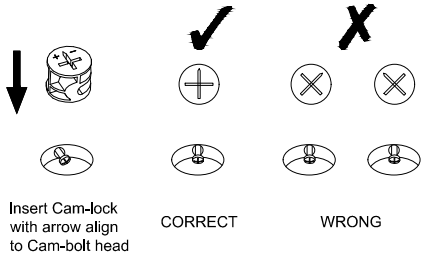


INSERTING AND TIGHTENING CAM-BOLT







	A×7PCS
	B×7PCS
	D×4PCS

STEP 12

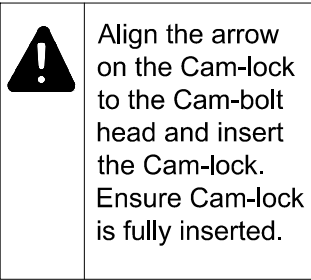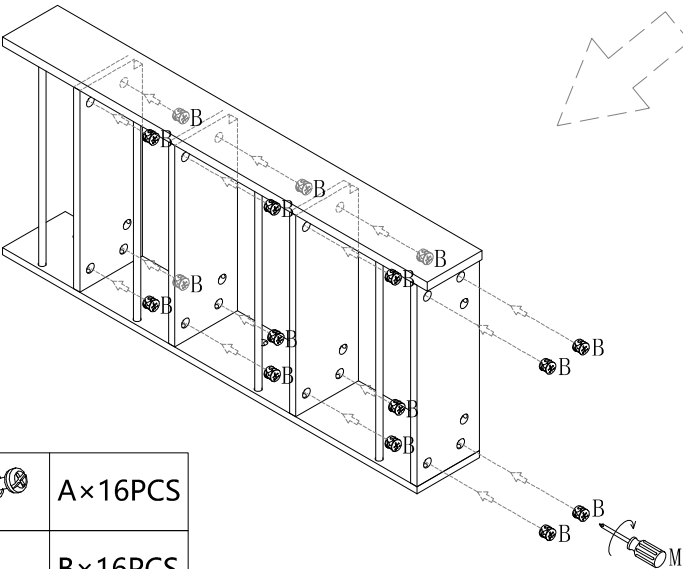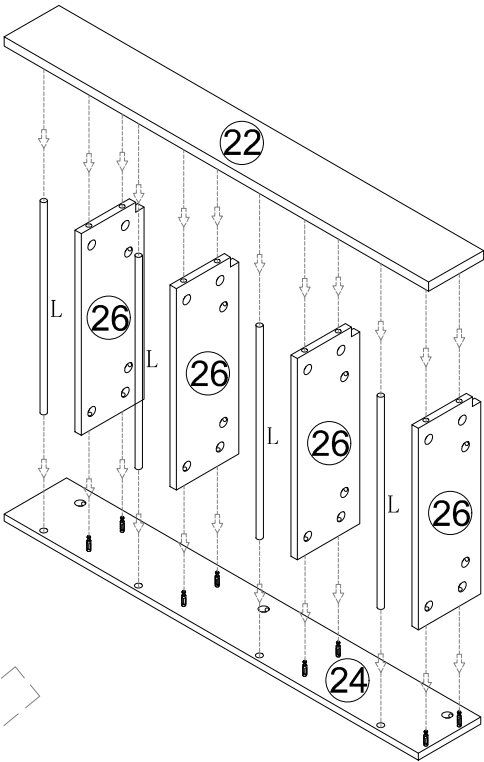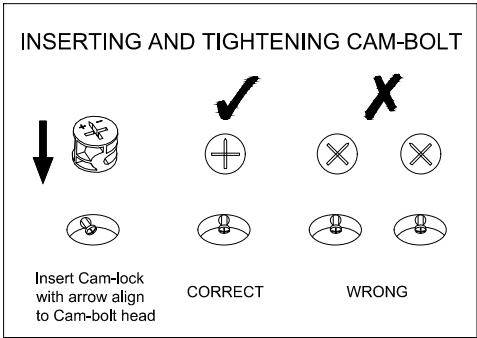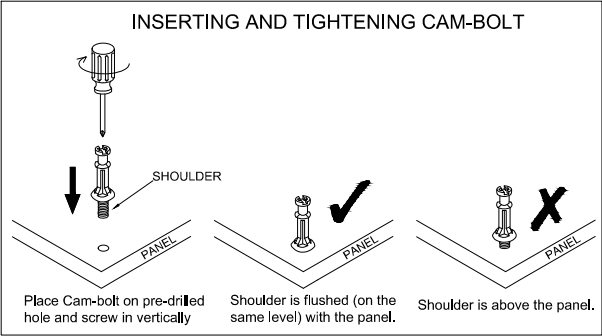
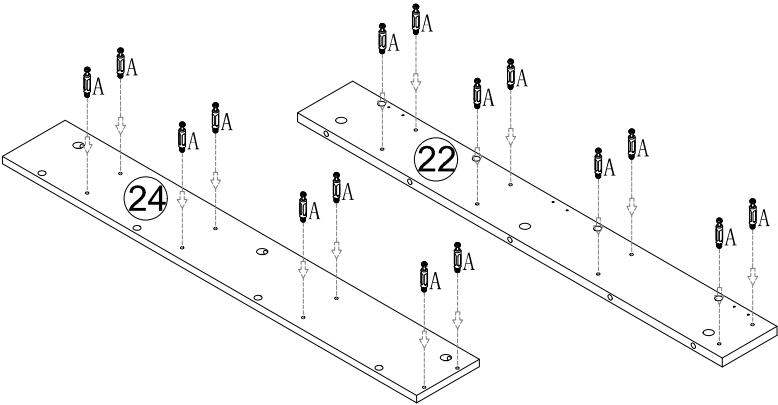


	A×16PCS
	B×16PCS
	L×4PCS






STEP 13

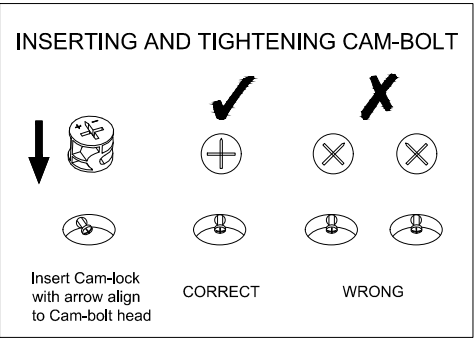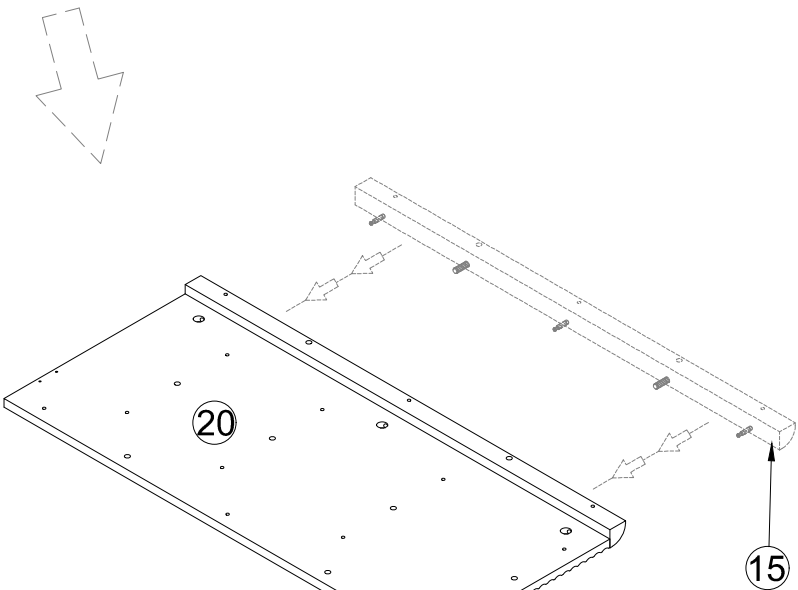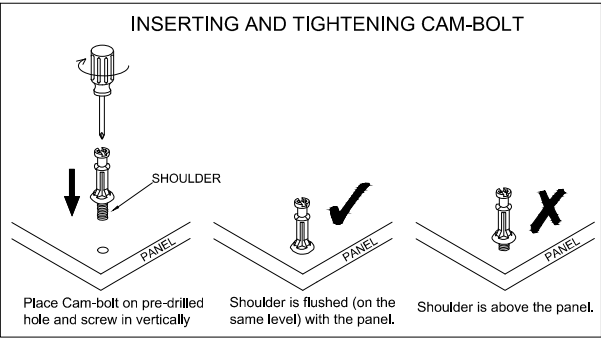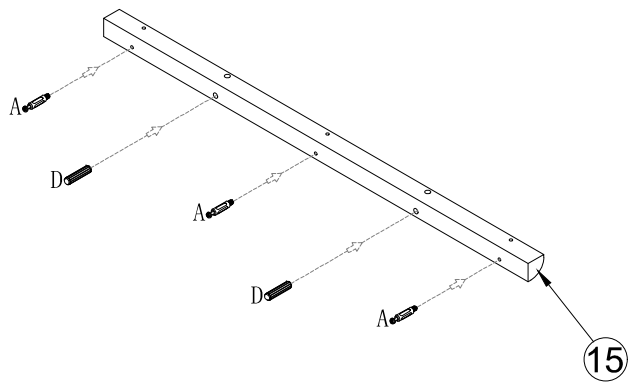


	A×3PCS
	B×3PCS
	D×2PCS
	J2×1PCS
	J3×2PCS

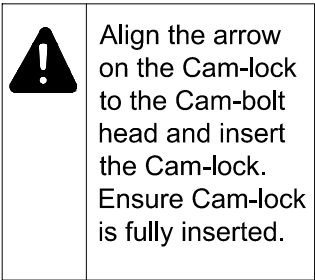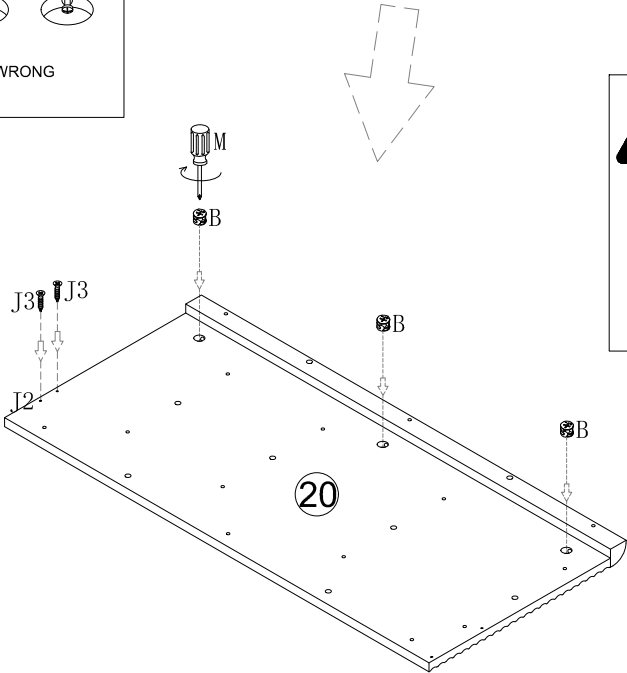







STEP 14

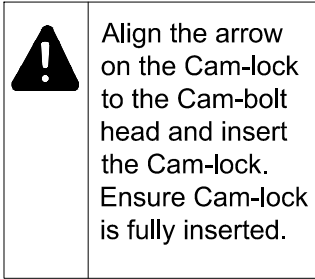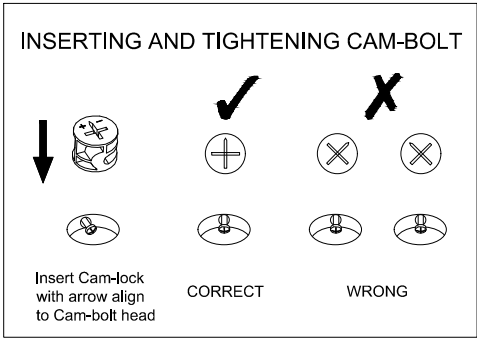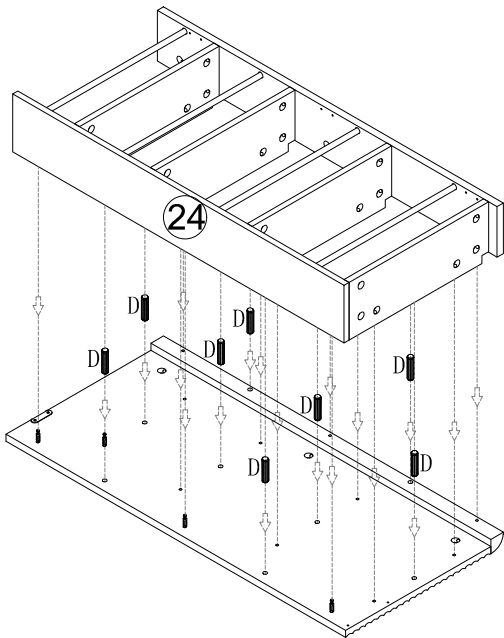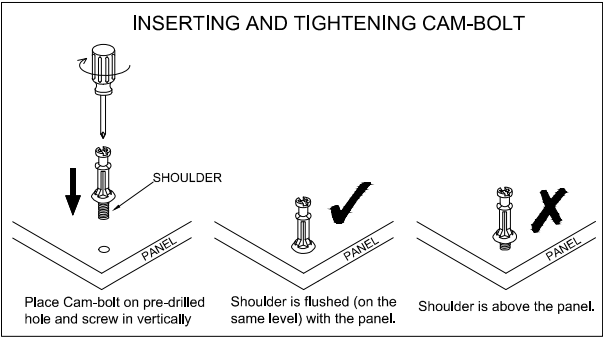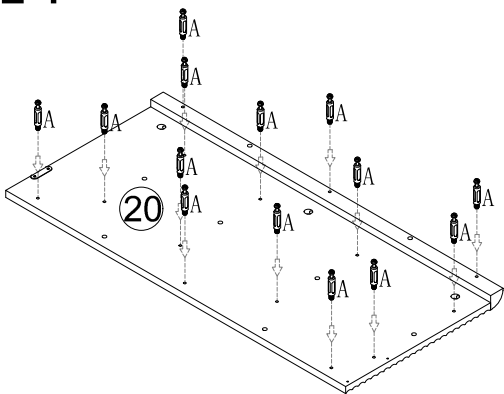


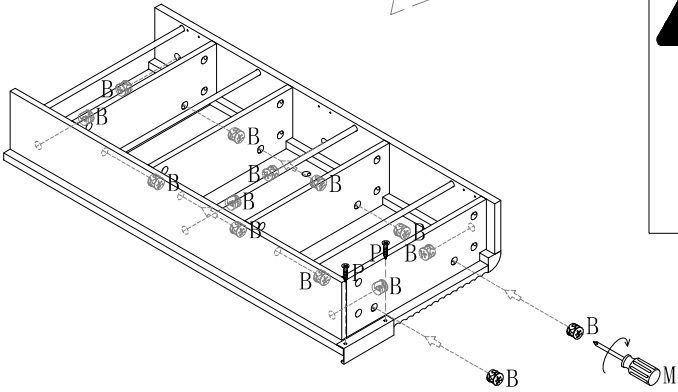

	A×14PCS
	B×14PCS
	D×8PCS
	F×1PCS
	P×2PCS

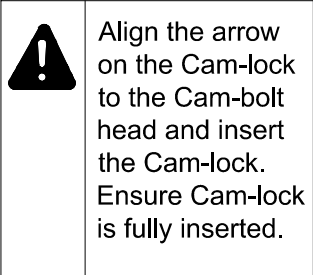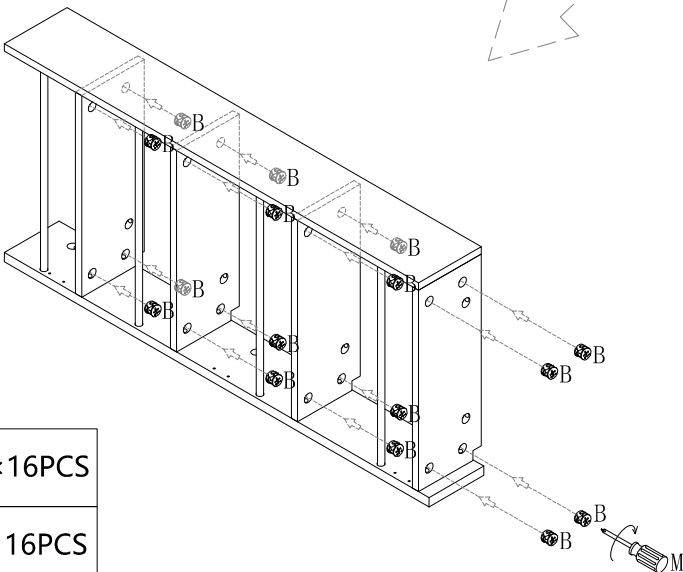
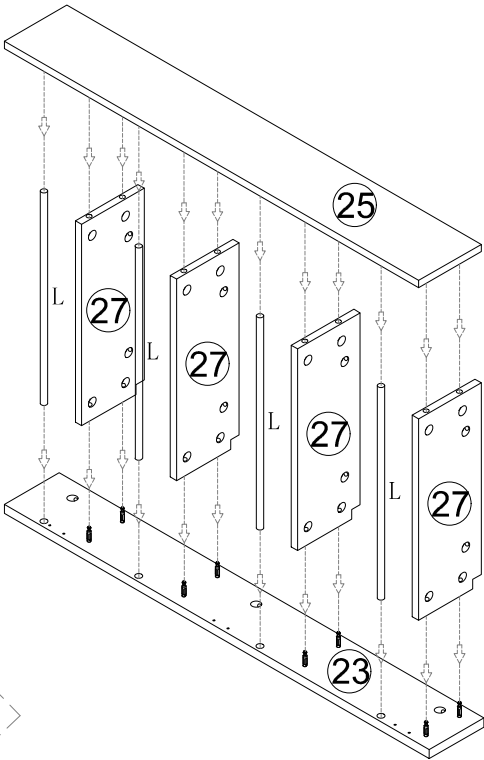
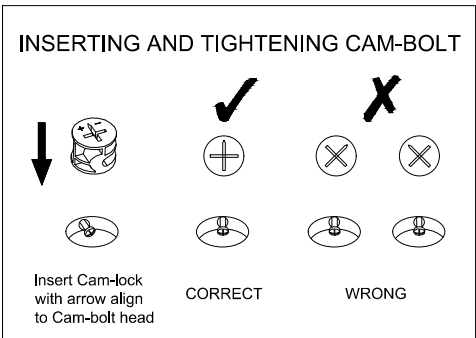
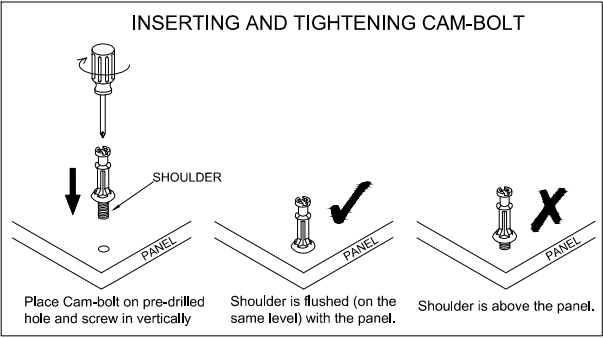
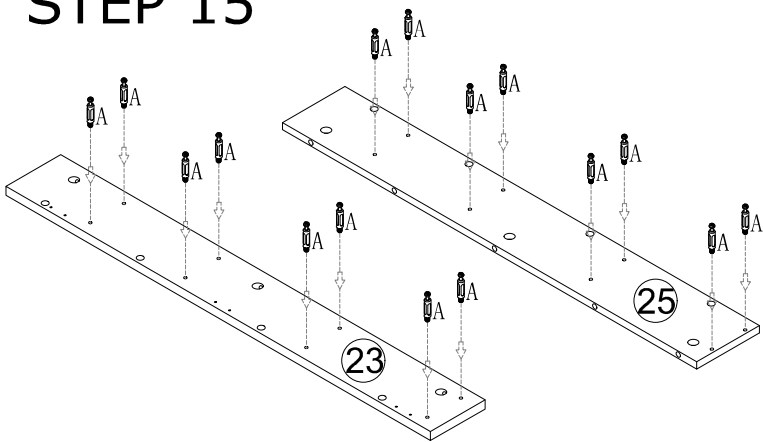


STEP 15




	A×16PCS
	B×16PCS
	L×4PCS







STEP 16

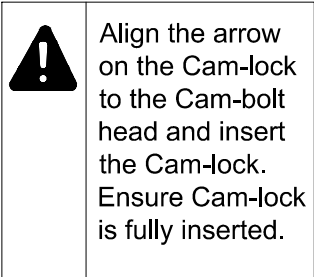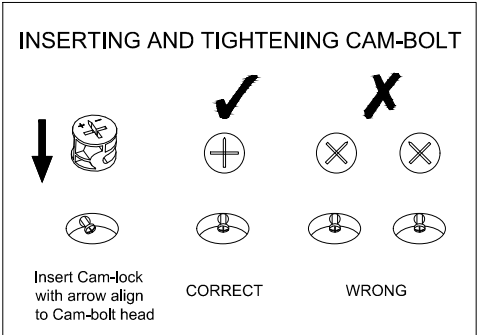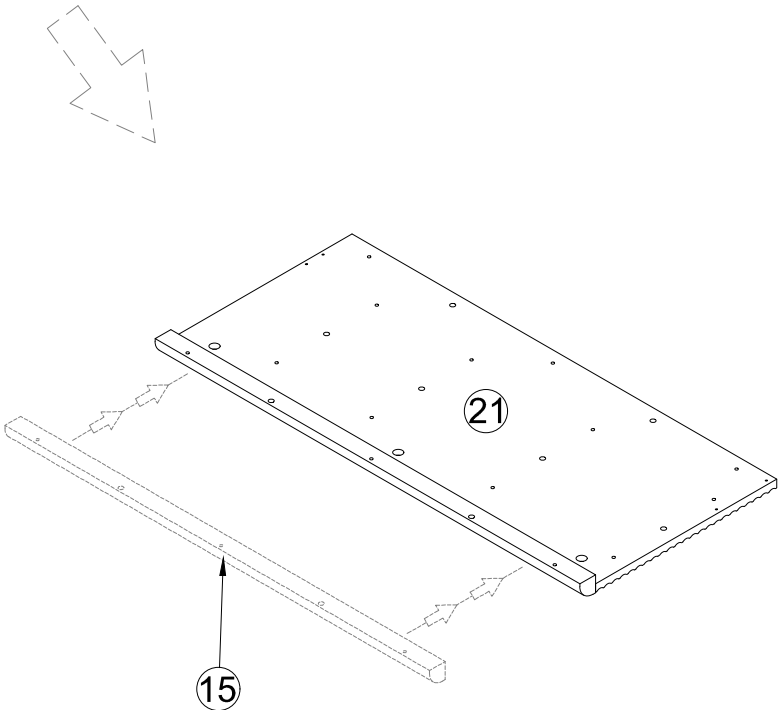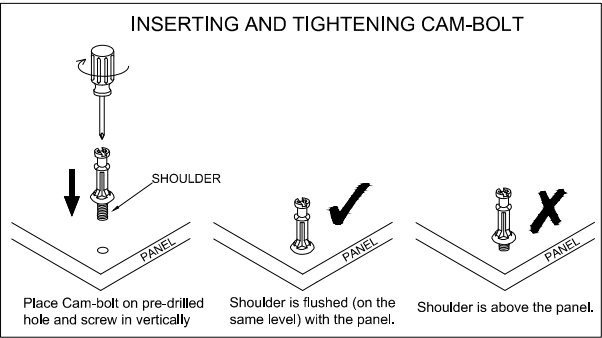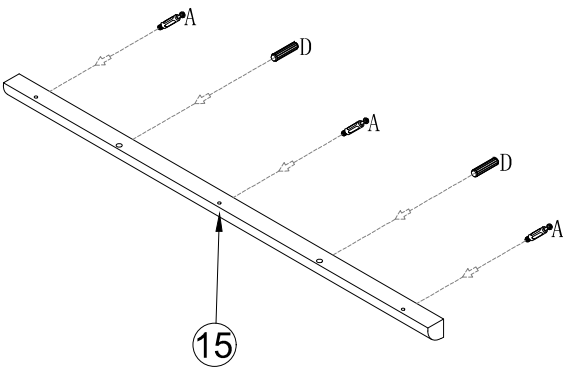

	A×3PCS
	B×3PCS
	D×2PCS
	J2×1PCS
	J3×2PCS

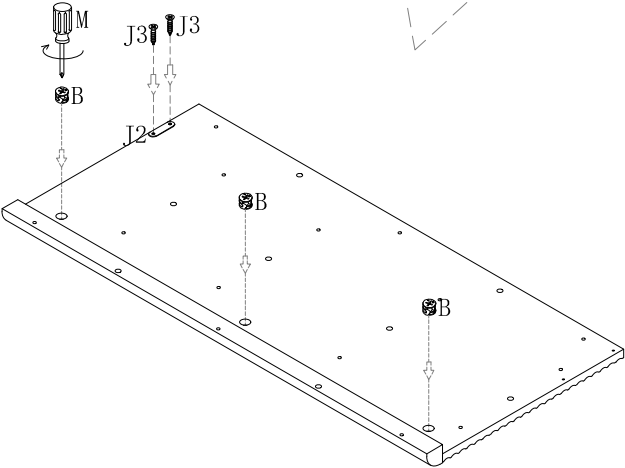




STEP 17

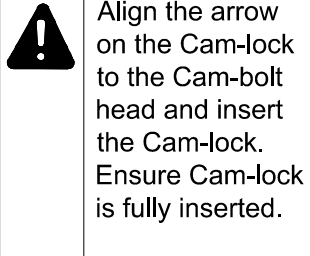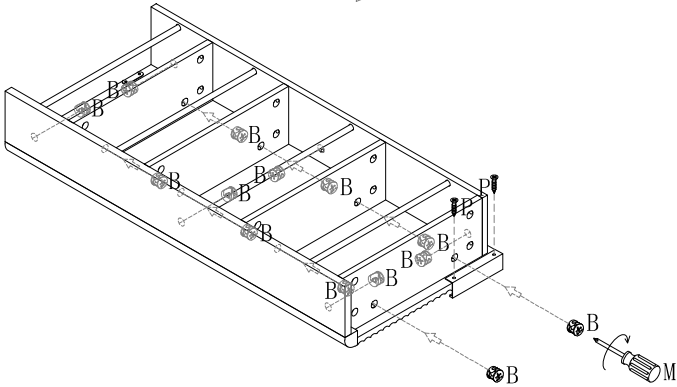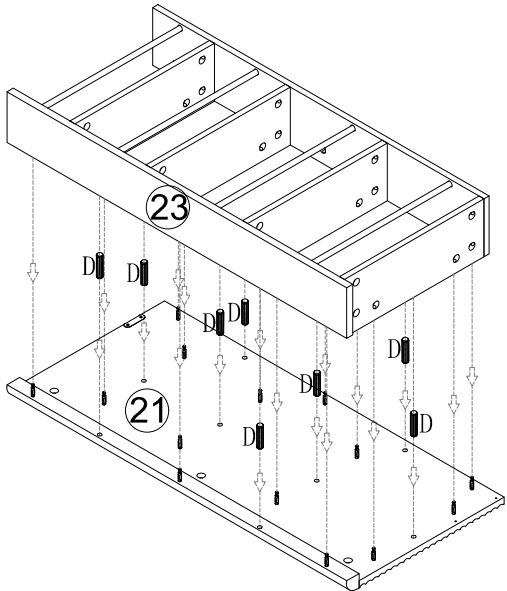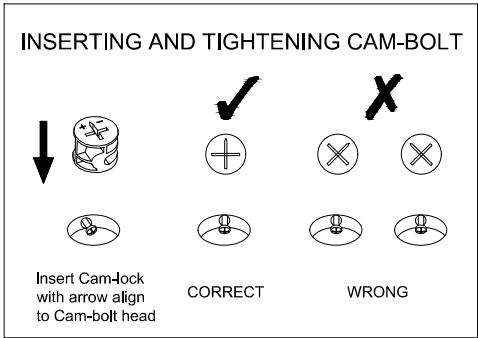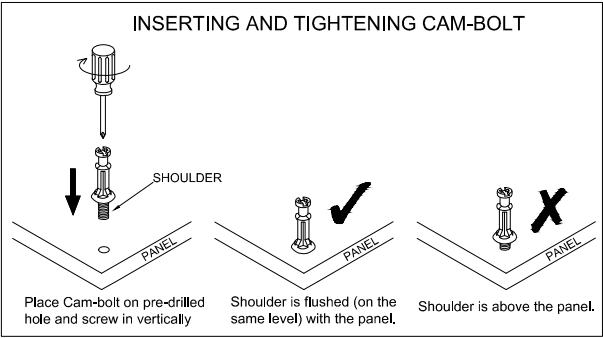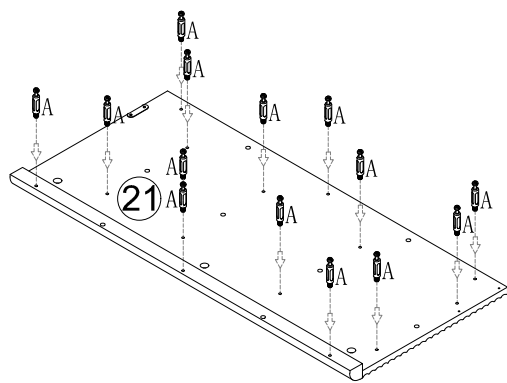


	A×14PCS
	B×14PCS
	D×8PCS
	F×1PCS
	P×2PCS

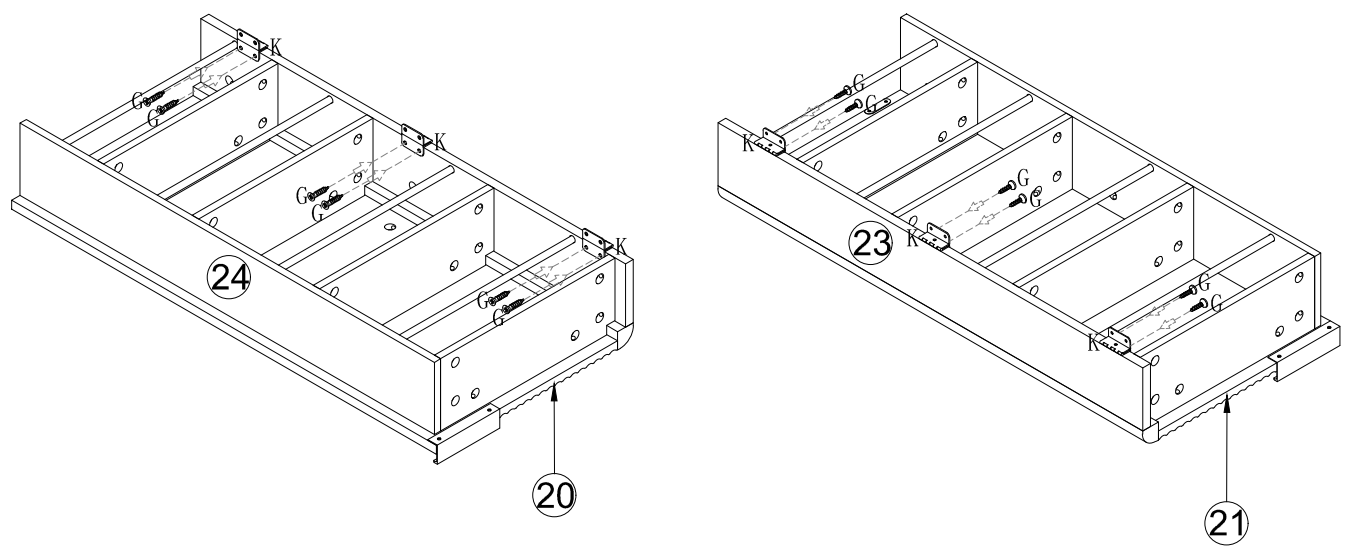

STEP 18




	G×12PCS
	K×6PCS


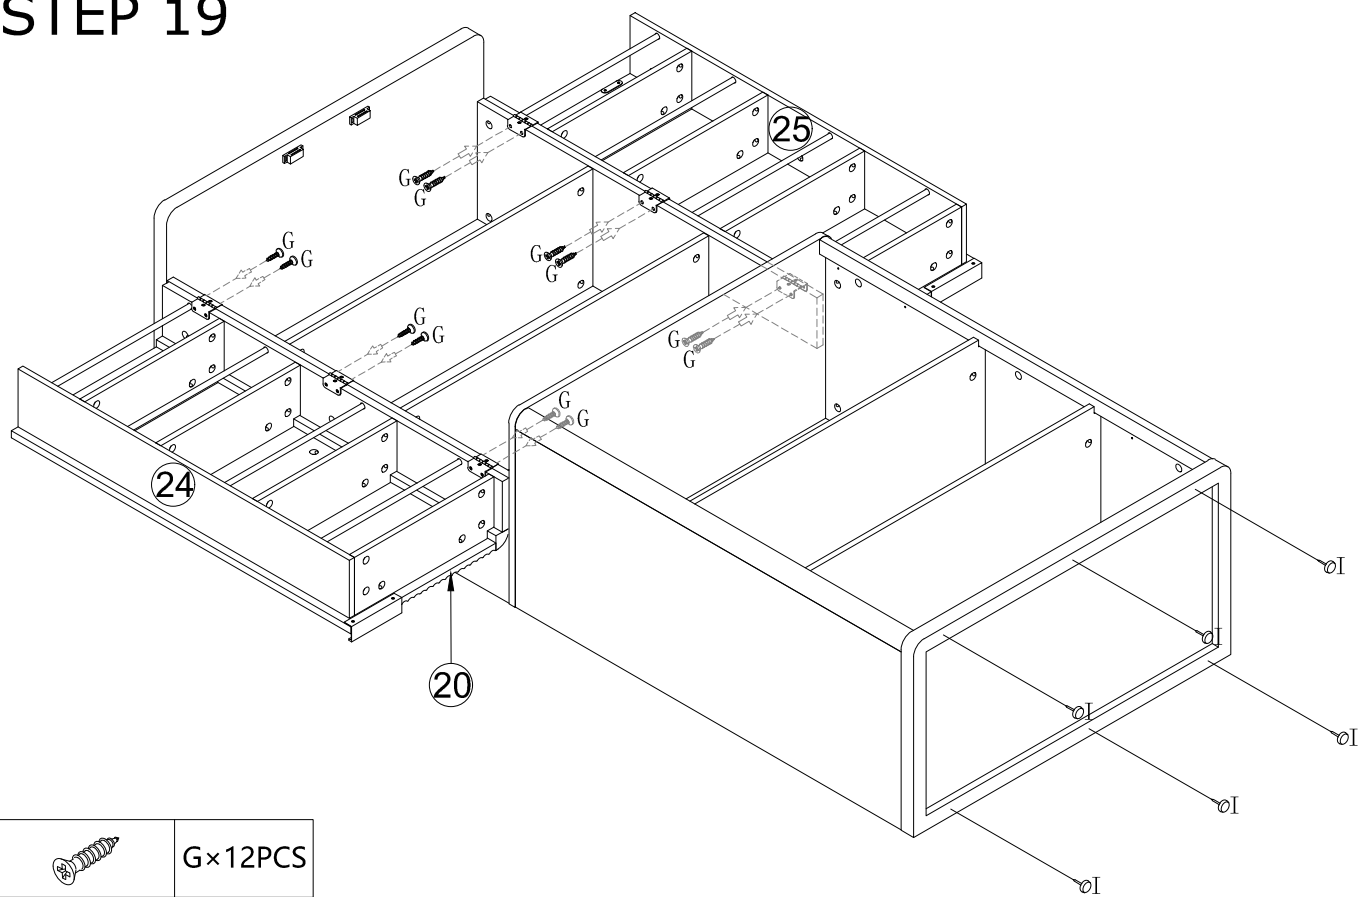
STEP 19




	G×12PCS
	I×6PCS


STEP 20

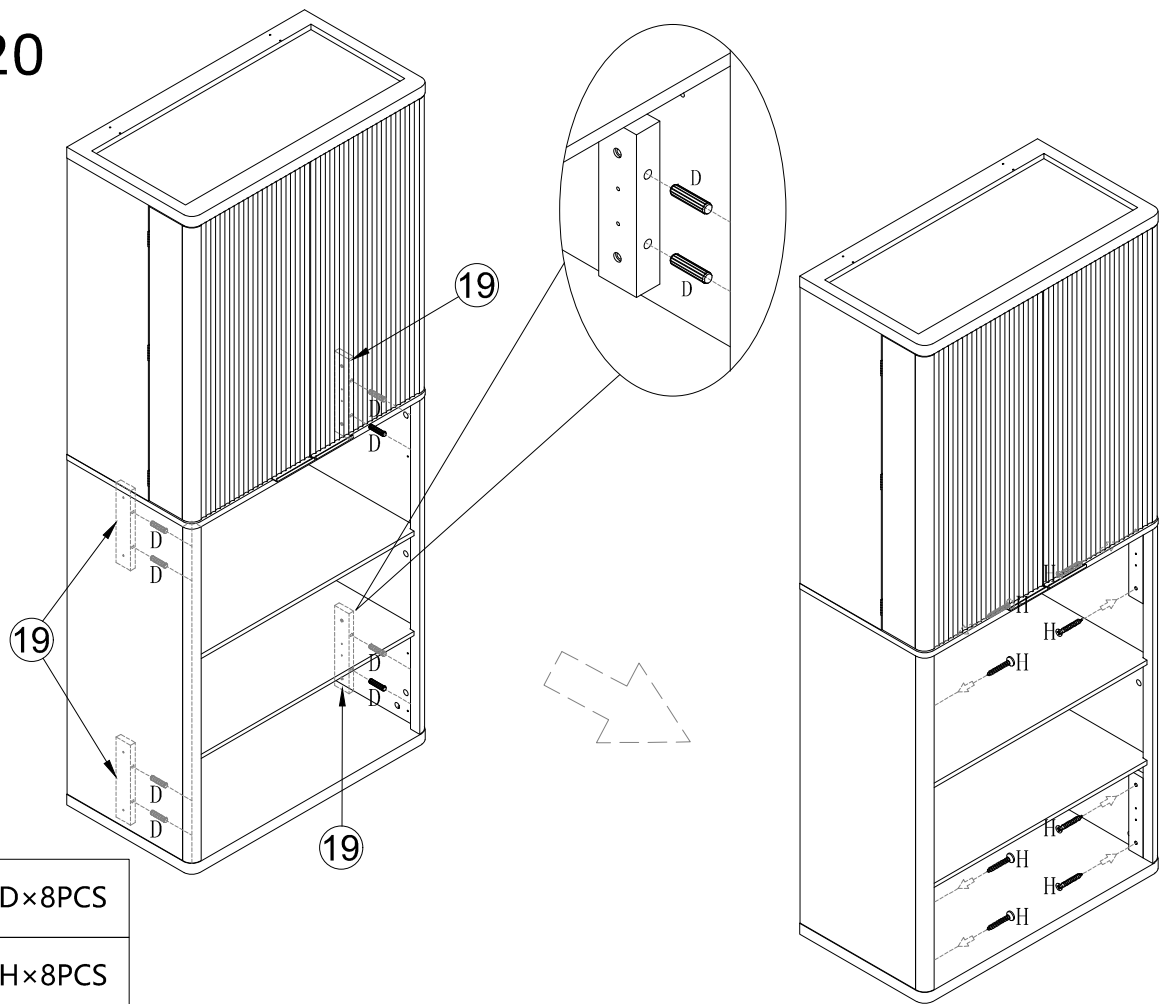

	D×8PCS
	H×8PCS

STEP 21

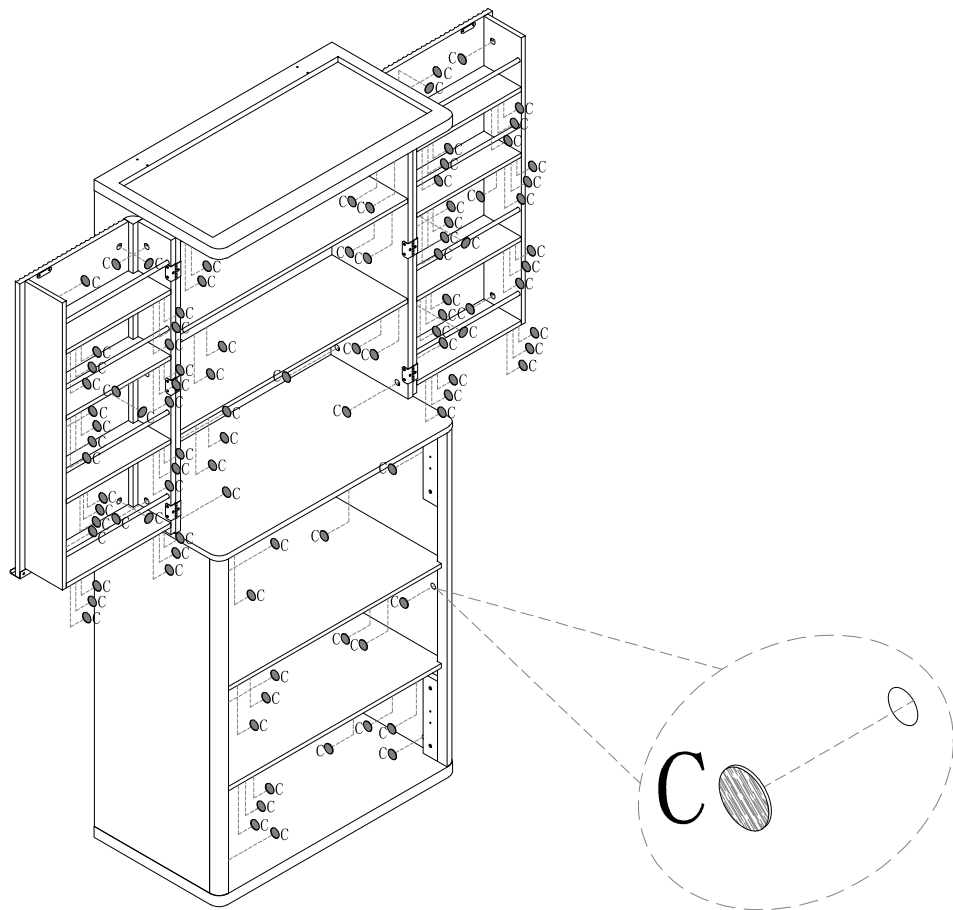


	C×100PCS
---	----------





If you encounter the following situation, please follow the steps to correct it.

1. The function of the front screw is to adjust the size of the gap between the door and the side panel.
2. The function of the rear screw is to adjust the distance between the front and rear of the door.

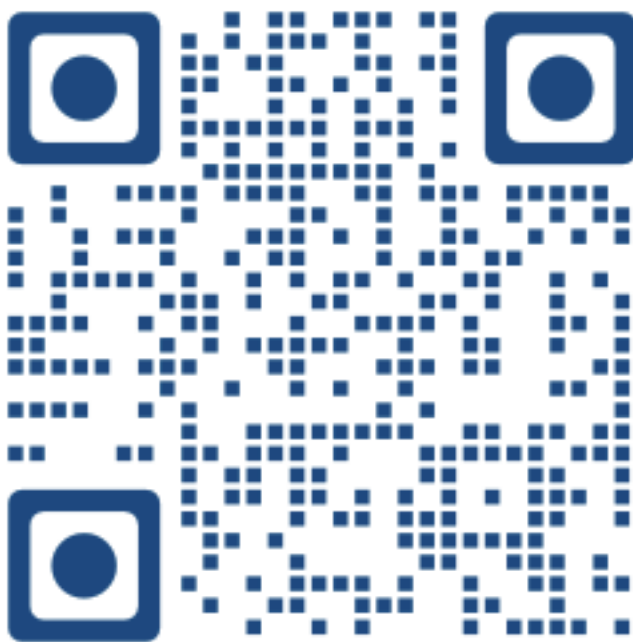



Scan the QR code to get the hinge video installation method

22-A. When the door panel is higher than the side panel.

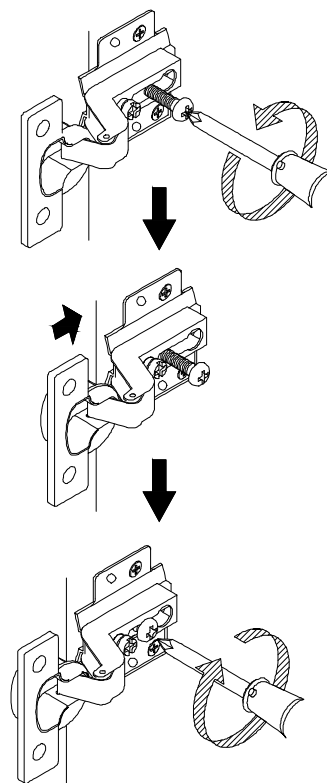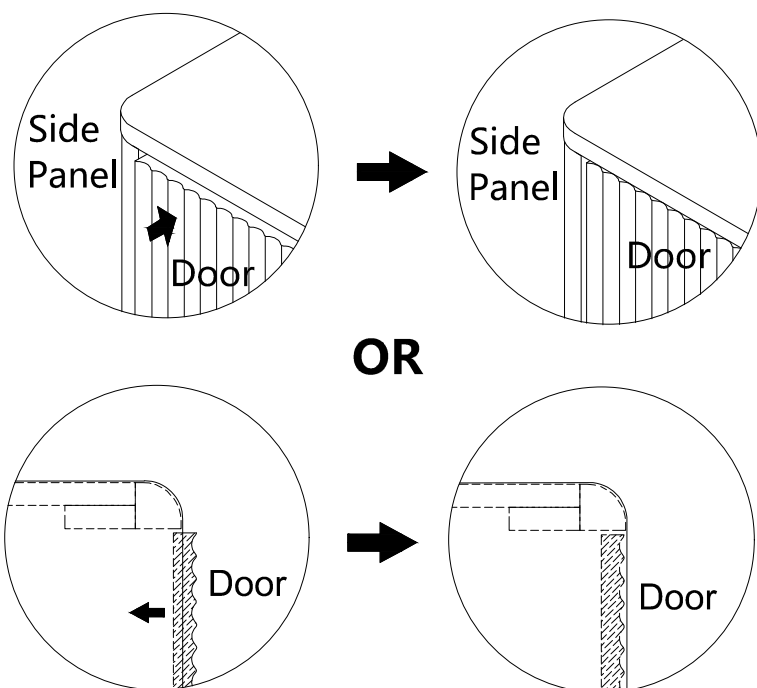


If the gap is too big between side panel and door or the door is over the edge of side panel, loose the back screw as shown, then move in the door with hinge and tighten the back screw as shown when the gap is just well.

22-B. When the door panel is lower than the side panel, an indentation occurs.

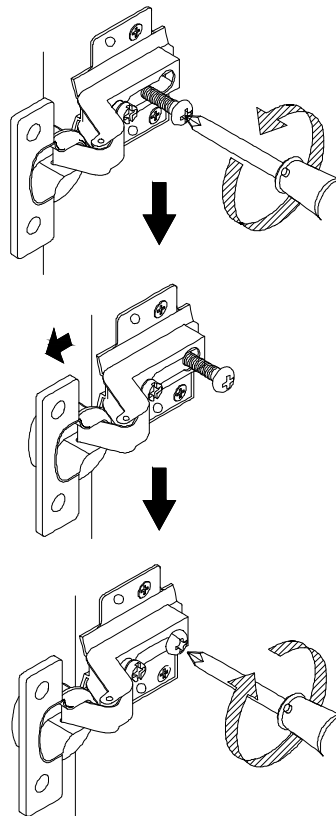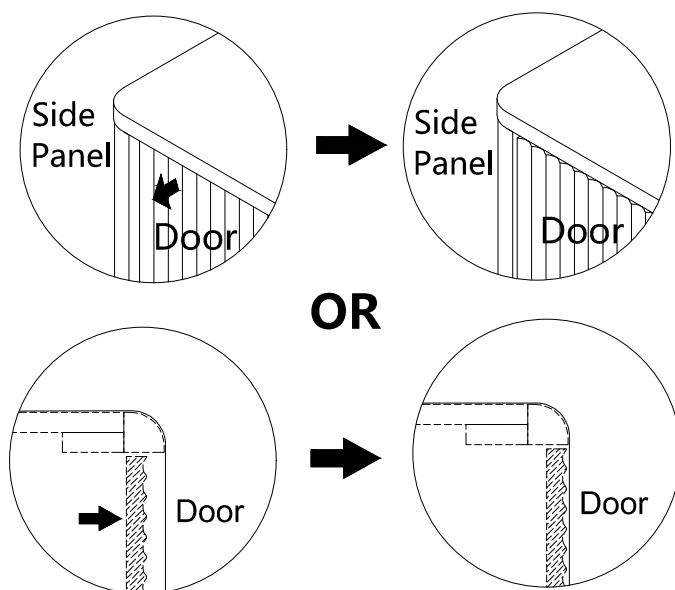


If the gap is too small between side panel and door or the door sank in side panel, loose the back screw as shown, then move out the door with hinge and tighten the back screw as shown when the gap is just well.


22-C

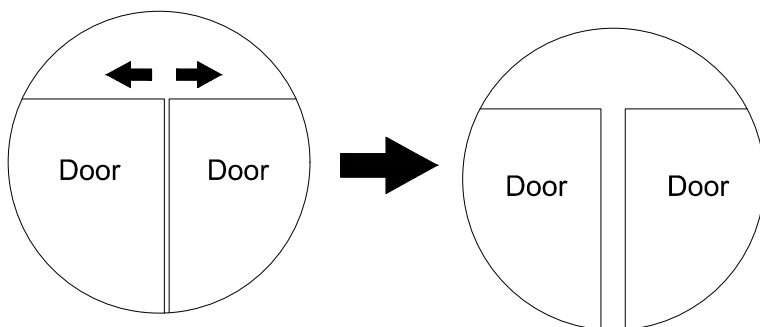


If the gap between the two doors is too small, follow the diagram.

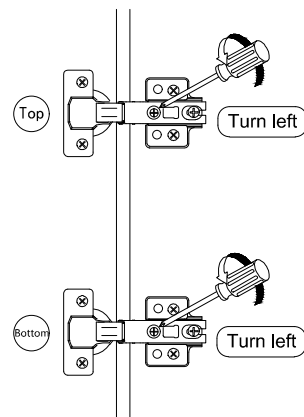


22-D

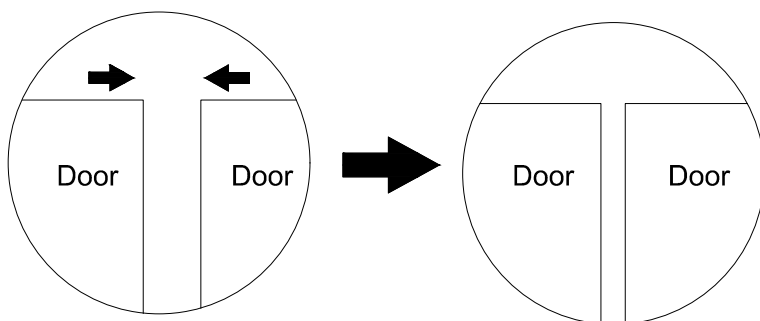


If the gap between the two doors is too large, follow the diagram.

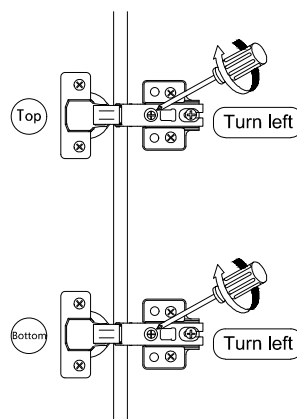


22-E

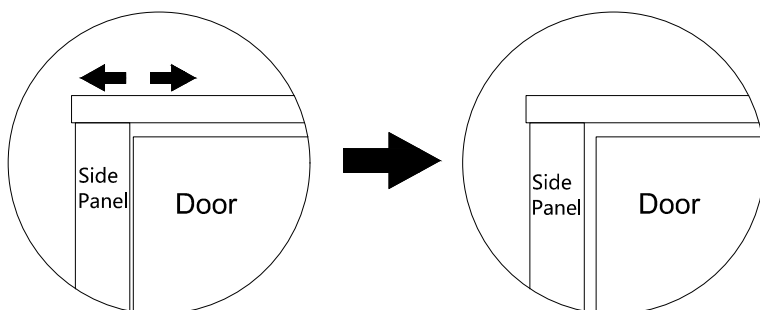


If the gap between the door and the side panel is too small, loose the front screw as shown.

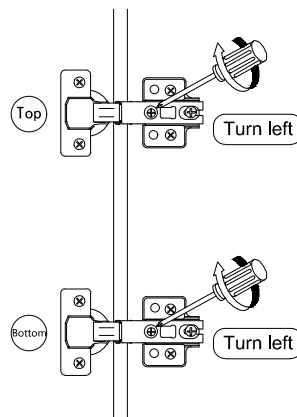



22-F

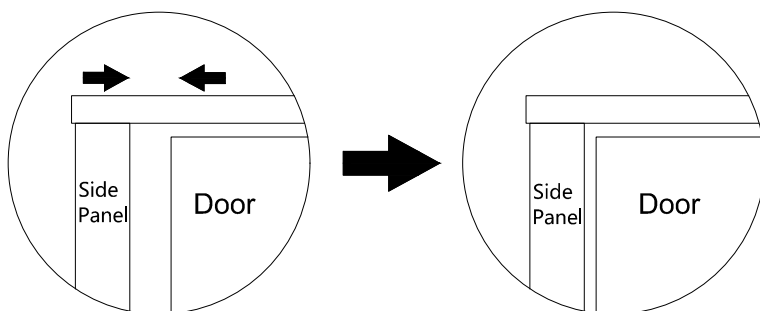



If the gap between the door and the side panel is too large, tighten the front screw as shown.

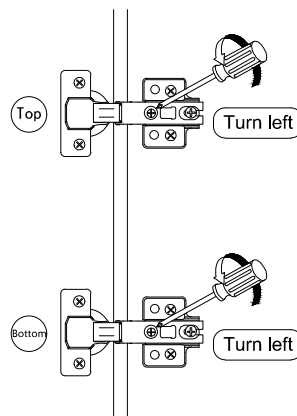




22-G. When door is leaning

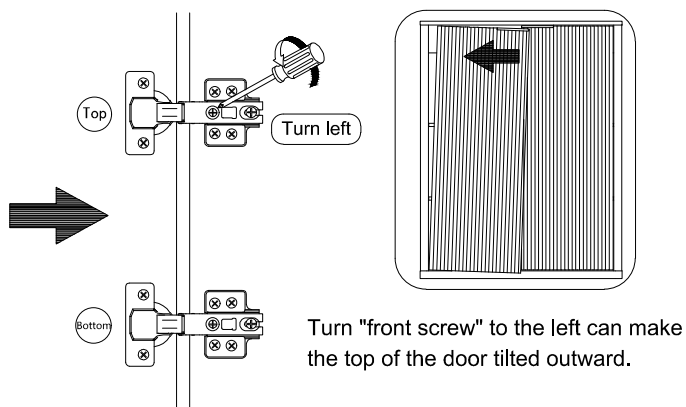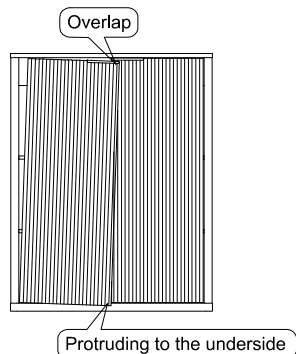

22-H. When door is leaning

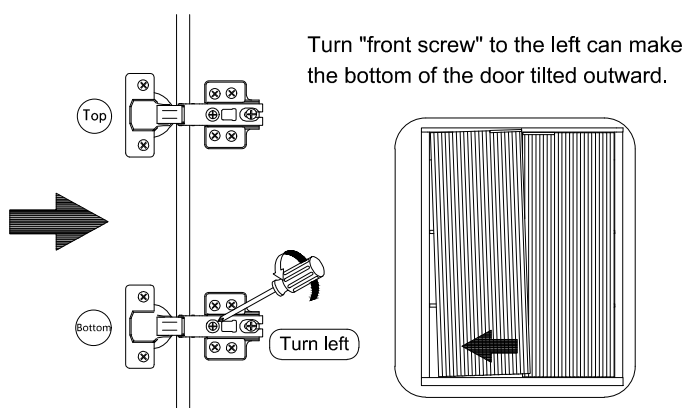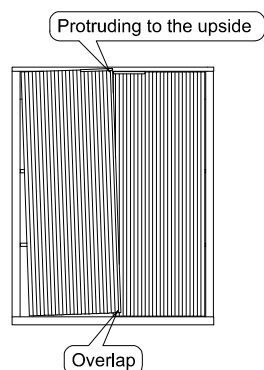



22-I. When the door is higher on fop

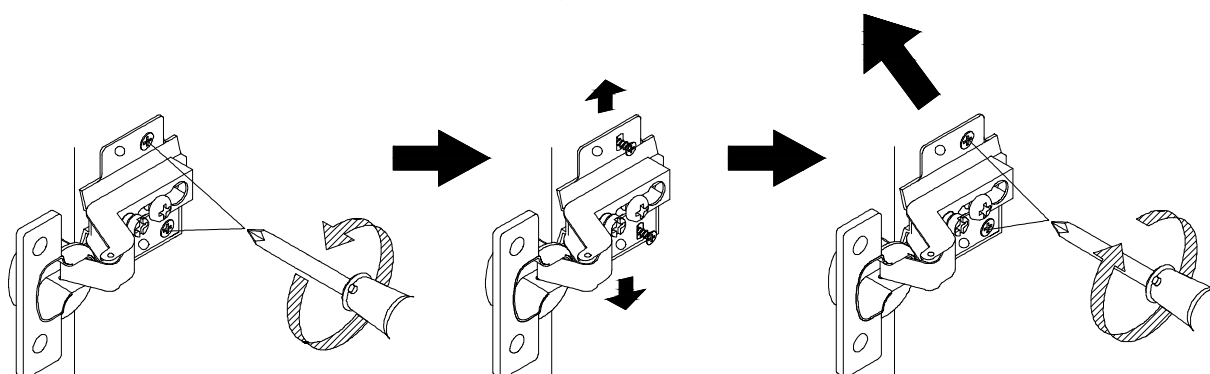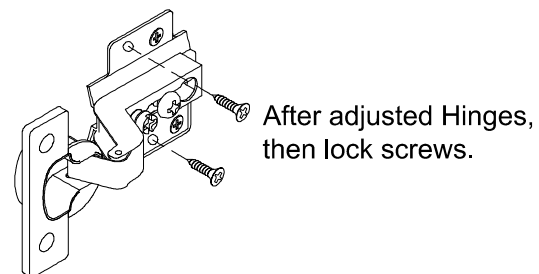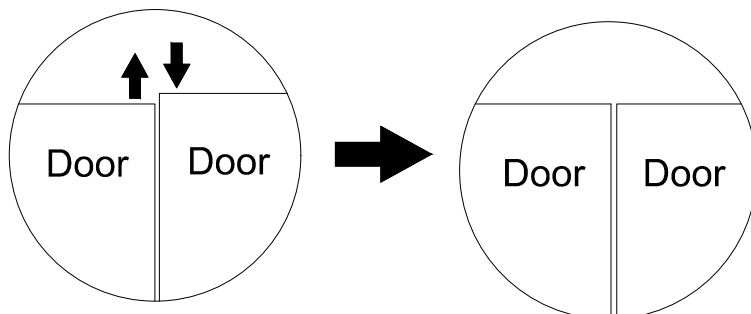






If the doors are not in same level, losse the back screws on wing, then adjust the door up and down, tighten the screws when both doors are in same level.
Screw front two screws on wing when all are in place.

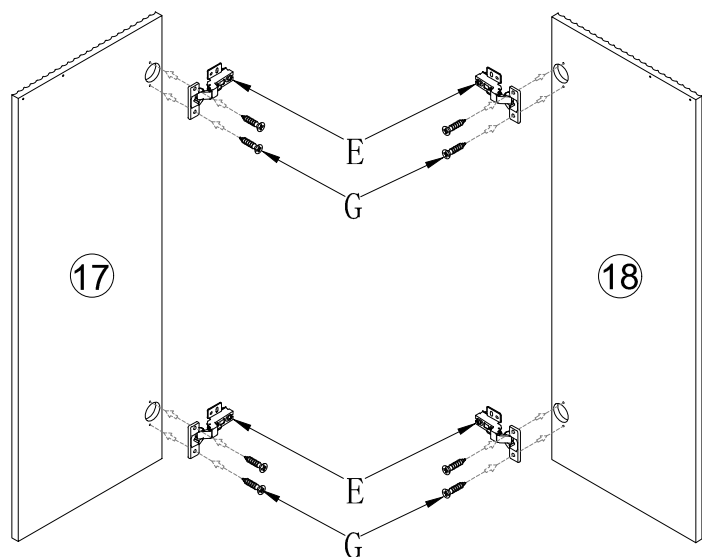STEP 23

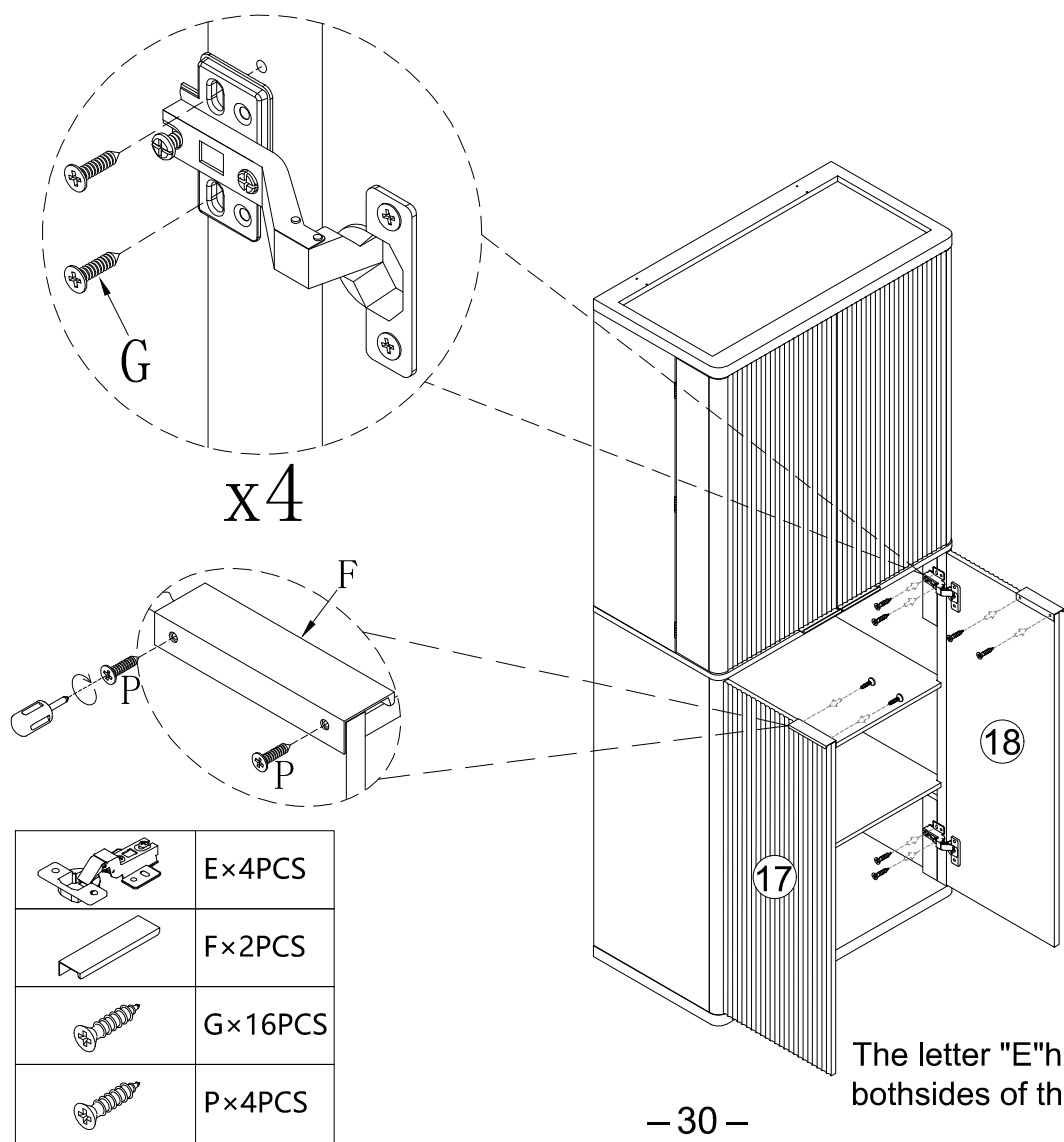


 Before installing the door panels, please study and read the following steps. For possible problems, we have given some suggestions to solve the problems you encounter.

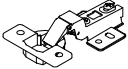

	E×4PCS
	F×2PCS
	G×16PCS
	P×4PCS

The letter "E" hinge door is installed on both sides of the cabinet.

STEP 24

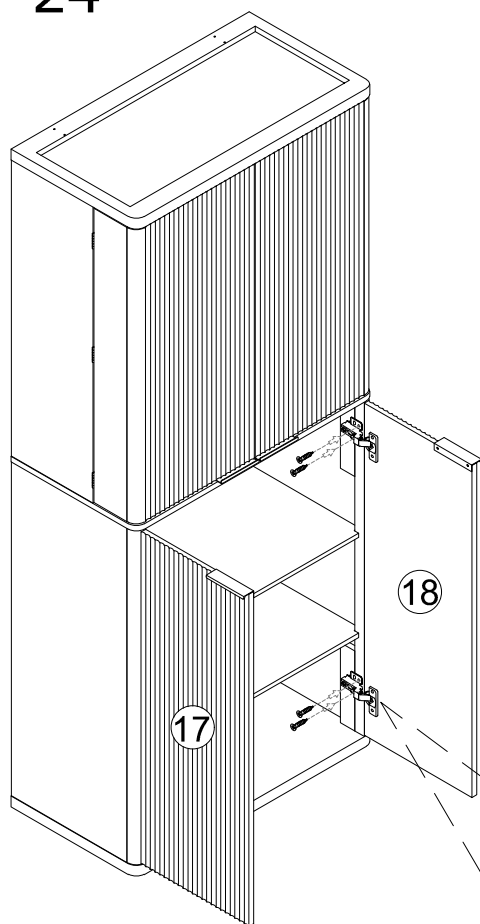


Tighten the screws when both doors are in same level.
Screw front two screws on wing when all are in place

NOTE:

If there is a large gap in the installation of the door, you can return to page 26 or page 27 to view the installation video and installation tutorial.

If it doesn't work after checking the installation tutorial, you can contact our after-sales email via vipservice2023@yeah.net and we will have someone to serve you

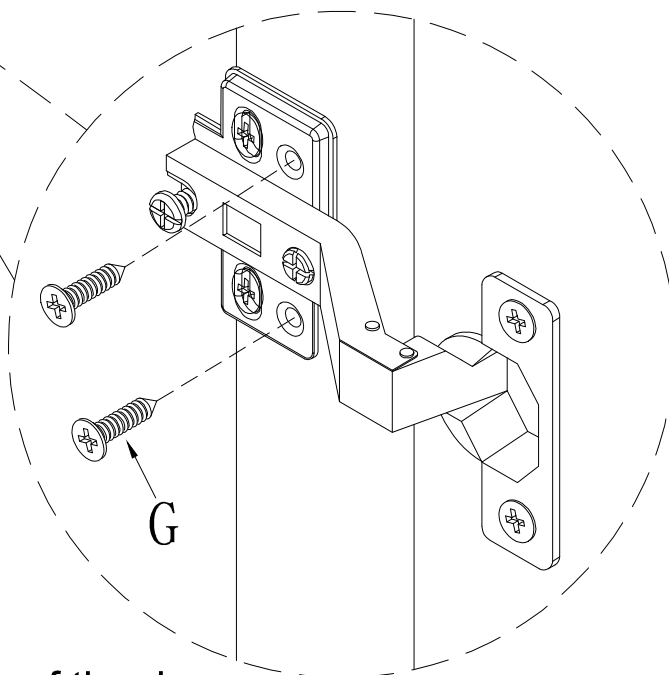


x4



G×8PCS


STEP 25

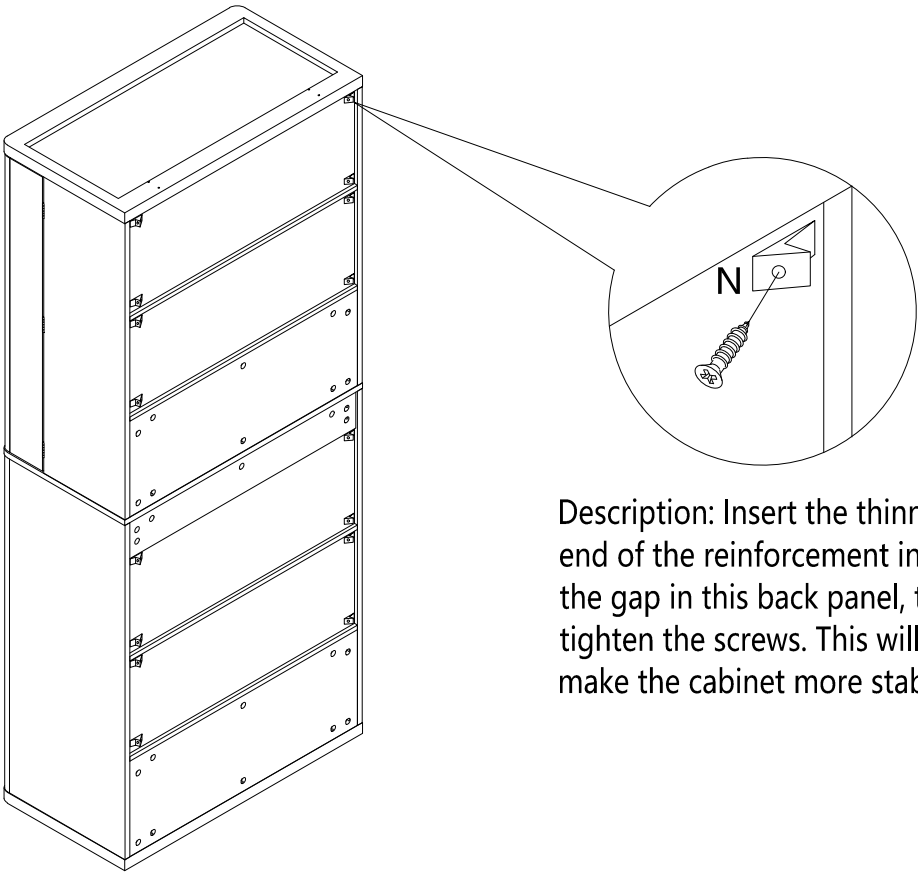



Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.








STEP 26

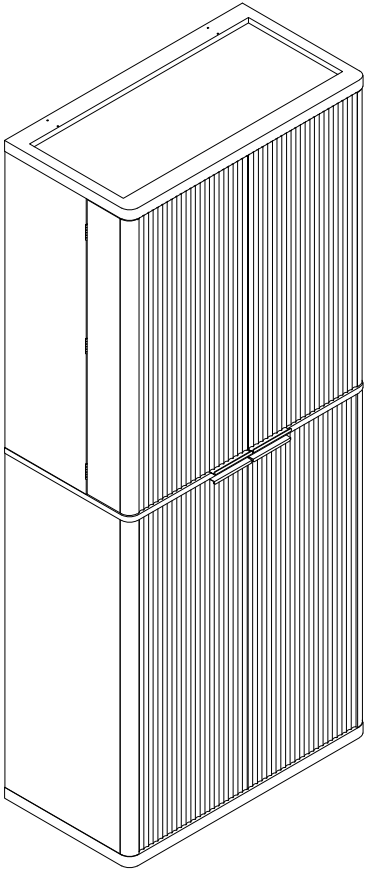

STEP 27

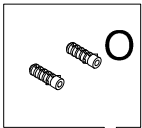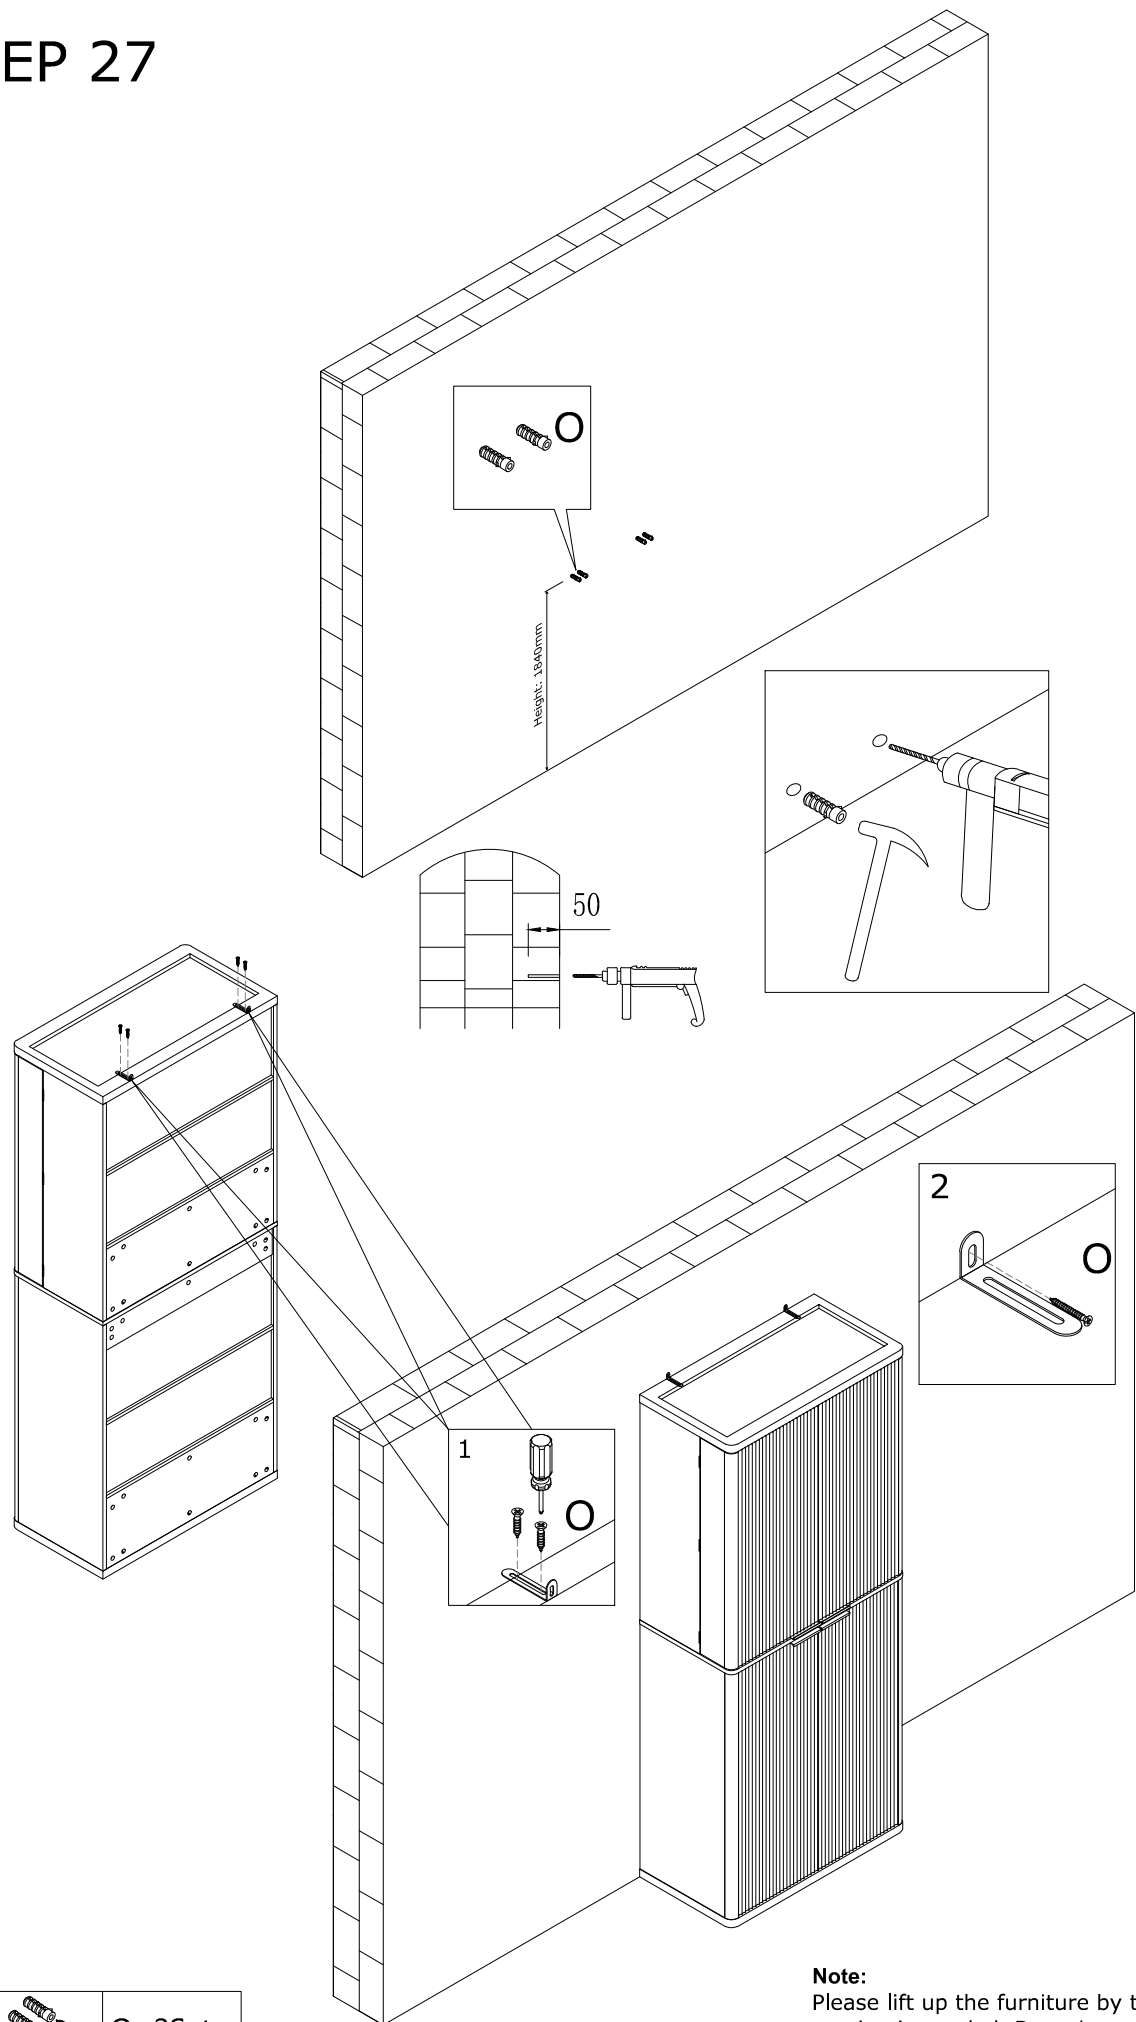

Height: 1840mm

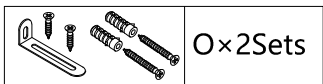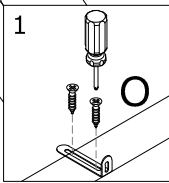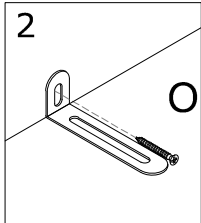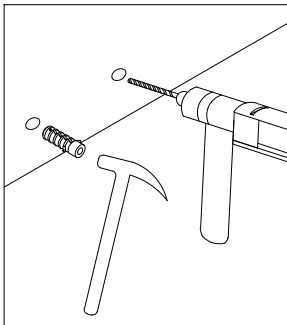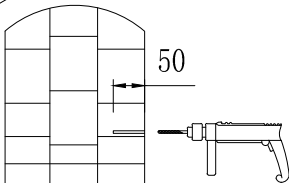

Note:
Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.