
# ASSEMBLY INSTRUCTIONS 30INCH-BATH VANITY-CABINET

SKU - BW00383

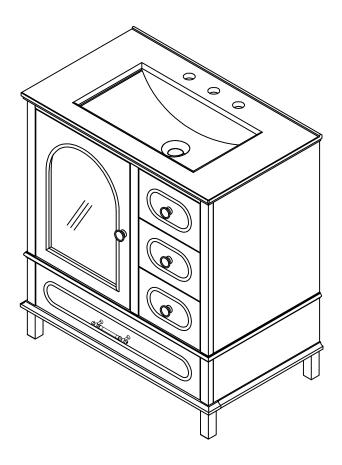

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED



\*Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!

\* Please assemble on a clean soft surface to avoid damage.







### **Tools Required**






IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

# PLEASE DO NOT RETURN TO STORE

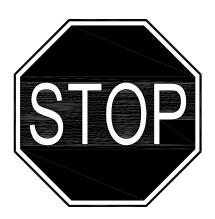

Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


# **Before Installation**


## Important- Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

# **Cam Lock Assembly Instructions**

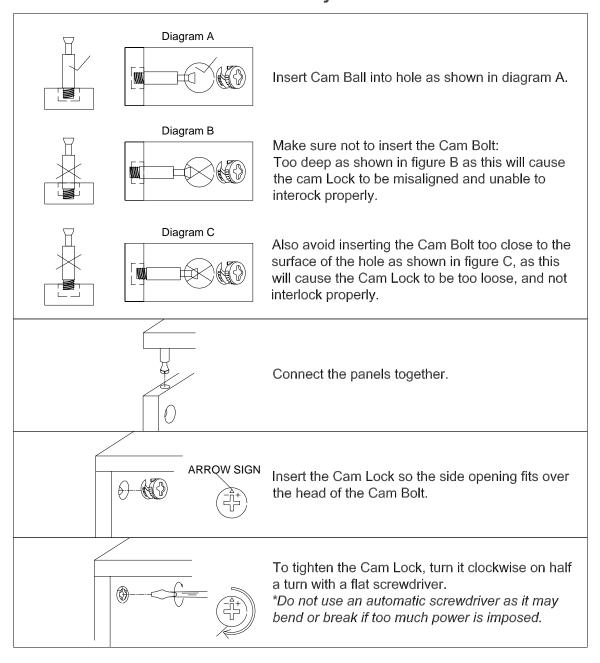


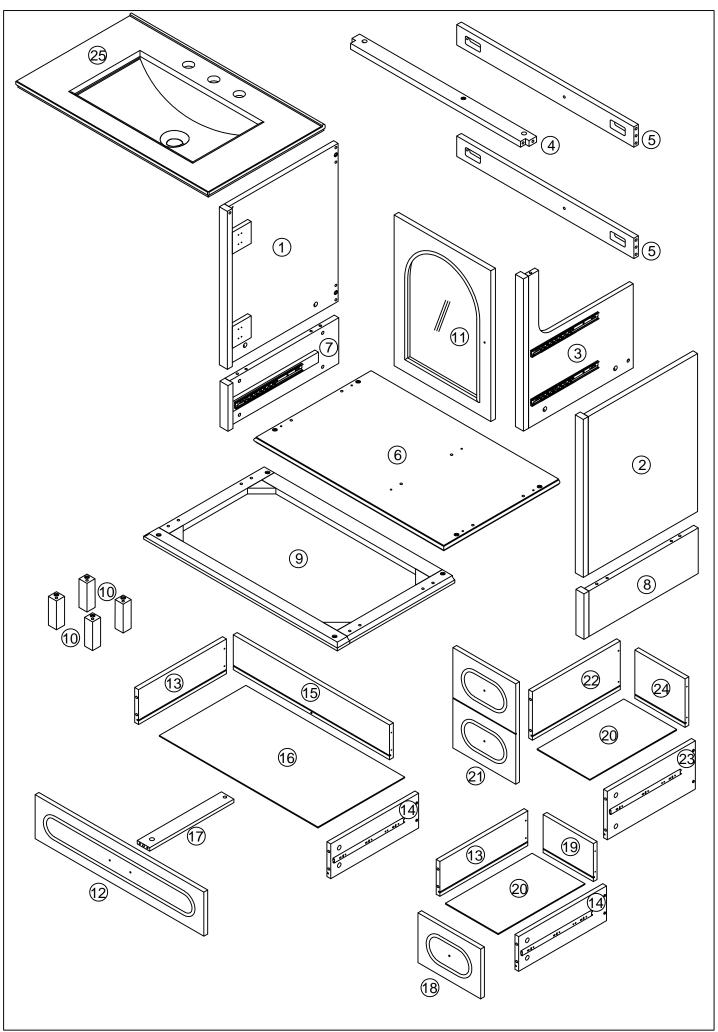


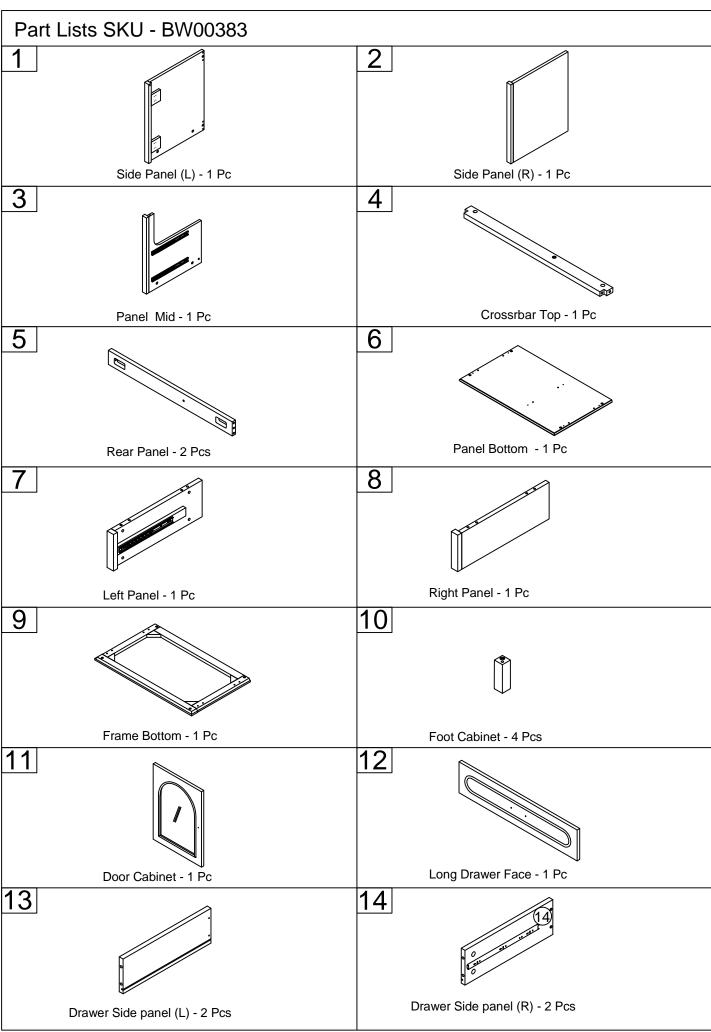

Part Lists BW00383				
15	<i>e</i>	16		
	Long Drawer Rear Panel - 1 Pc			
17		Long Drawer Panel Bottom - 1 Pc		
17		18		
	**	$\downarrow$		
40	Support Drawer Bottom Panel - 1 Pc	Small Drawer Face - 1 Pc		
19		20		
	Small Drawer Rear Panel - 1 Pc	Drawer Bottom Panel - 2 Pcs		
21		22		
	Double Drawer Face - 1 Pc	Double Drawer Side (L) - 1 Pc		
23		24		
	0			
	Double Drawer Side (R) - 1 Pc	Double Drawer Rear Panel - 1 Pc		
25	$\sim$			
	30" Sink - 1 Pc			


Hardware Lists BW00383				
A	B	C		
Ø8*30mm	Ø6*32mm	Ø14.5*9.5mm		
Wood dowel (28pcs)	Three in one bolts (21pcs)	Three in one locks (21pcs)		
	E	F		
Ø8xØ4*30mm	Ø10 * 10mm	2 Set 12 Pcs		
Round head screw (13pcs)	Plasstic Nut (13pc)	Damping hinge (4sets)		
G	H	M4*20mm		
Knob(4pcs)	Handle(1pc)	Handle screw (6pcs)		
M	N	P		
K4mm	Ø10 * 12mm	M6 x 45mm		
Allen key (1pc)	Barrel Nut (10 pcs)	Head bolt (18pcs)		
R	S Ammunian Amb			
Ø6*20mm				
Wood dowel (2pcs)	Anti fall Hardware (2sets)			

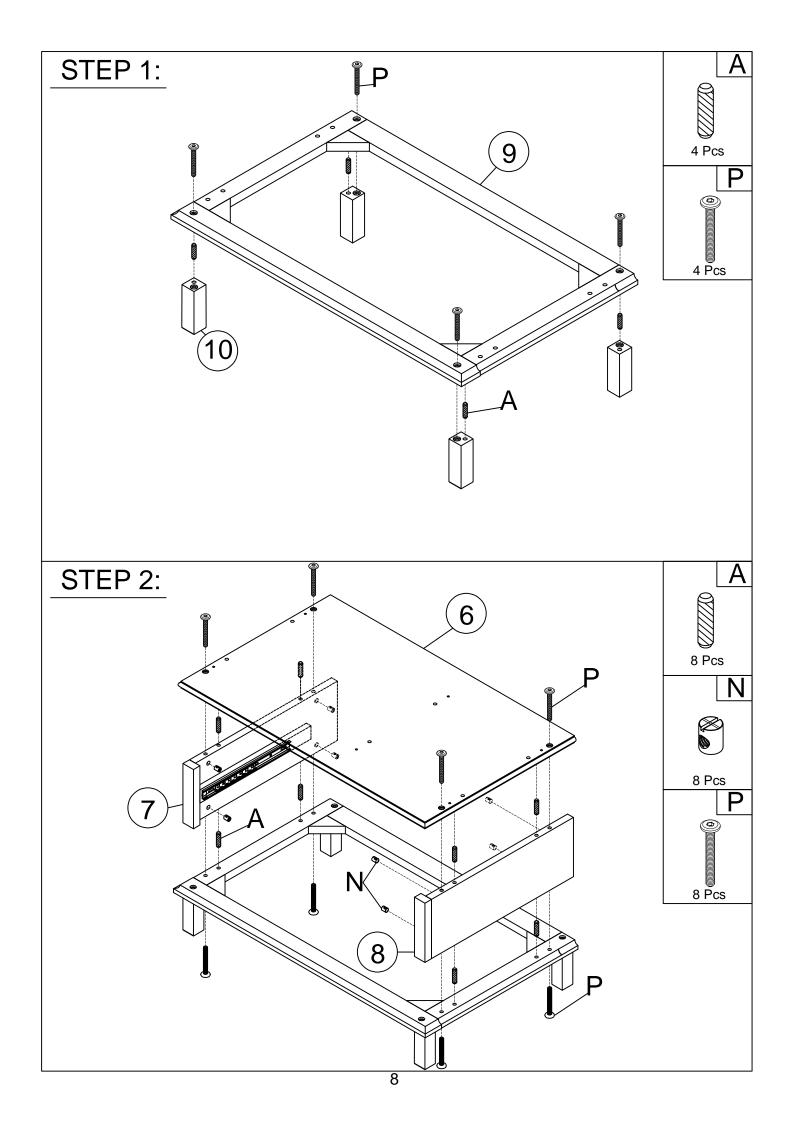


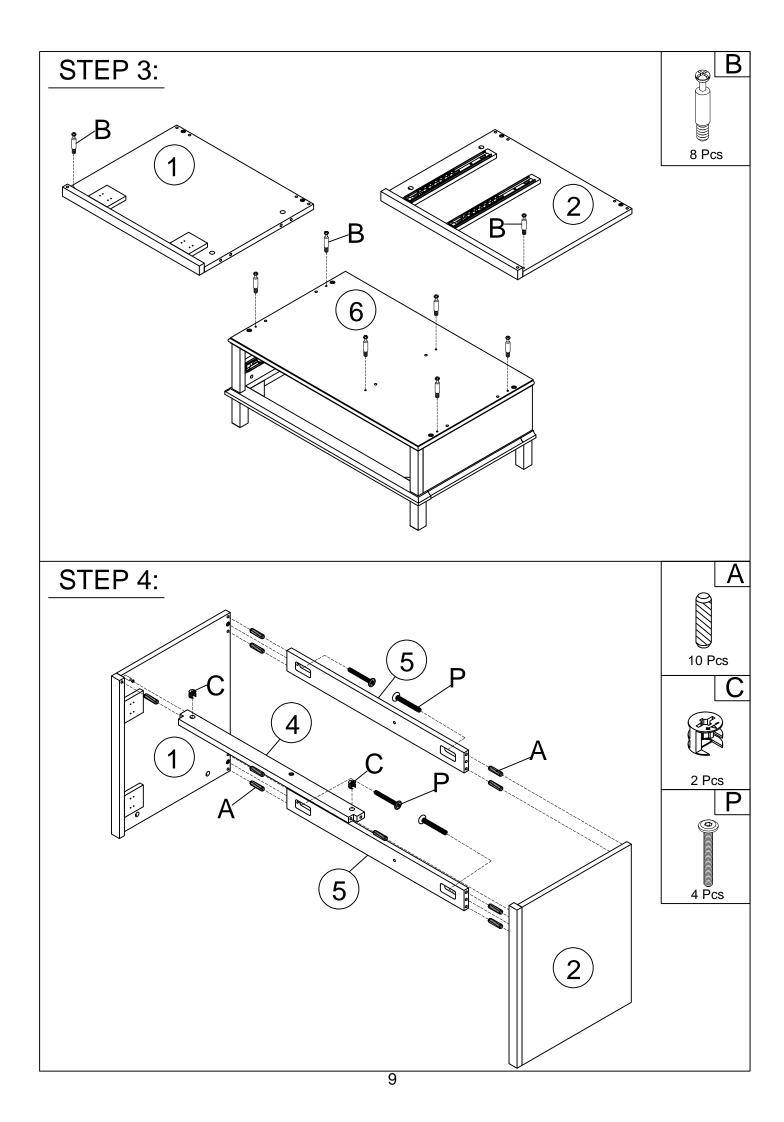



# STEP 5: 2 Pcs 2 Pcs Α STEP 6: 4 Pcs 4 Pcs


10

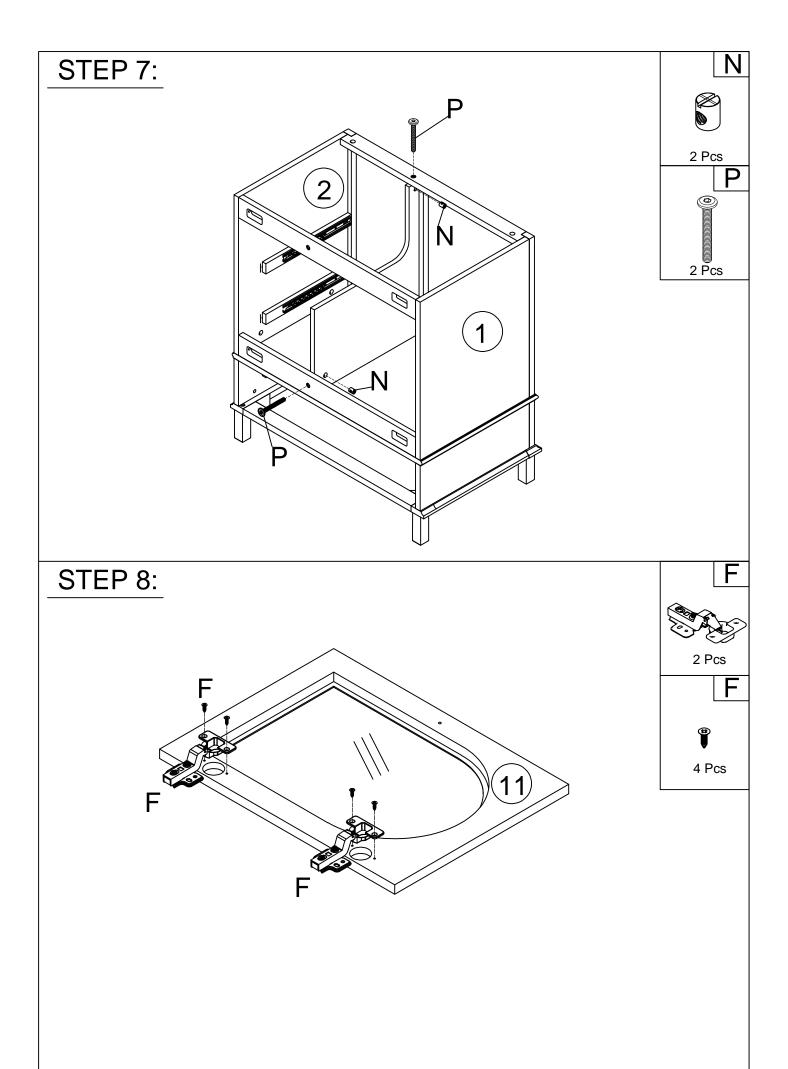


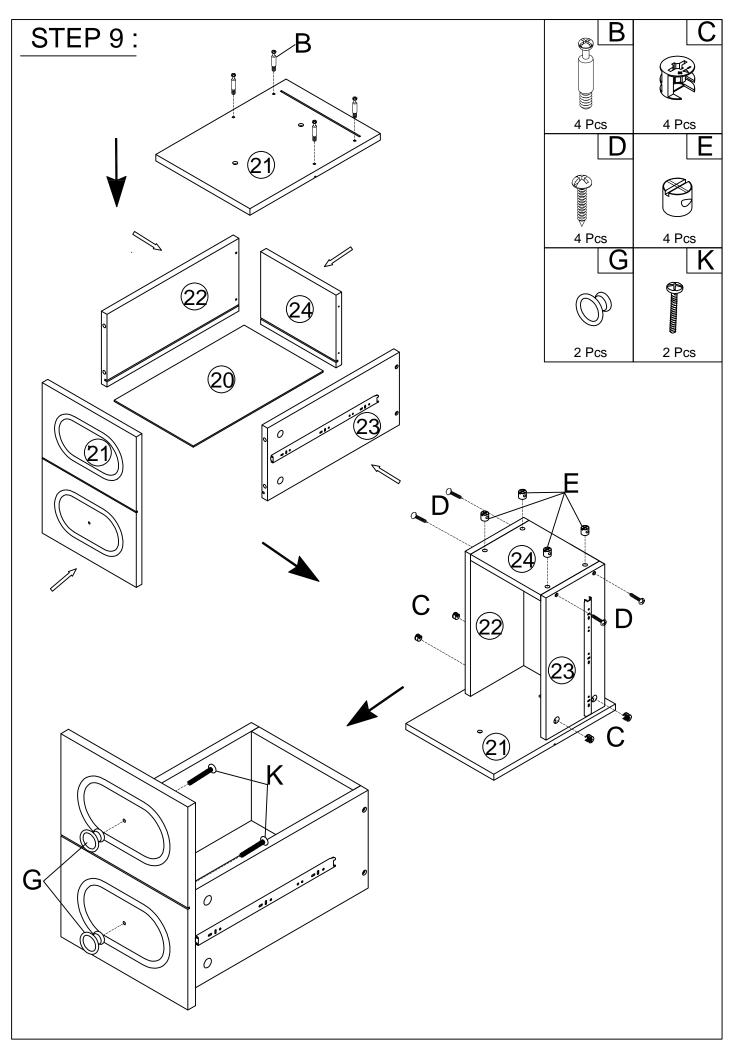

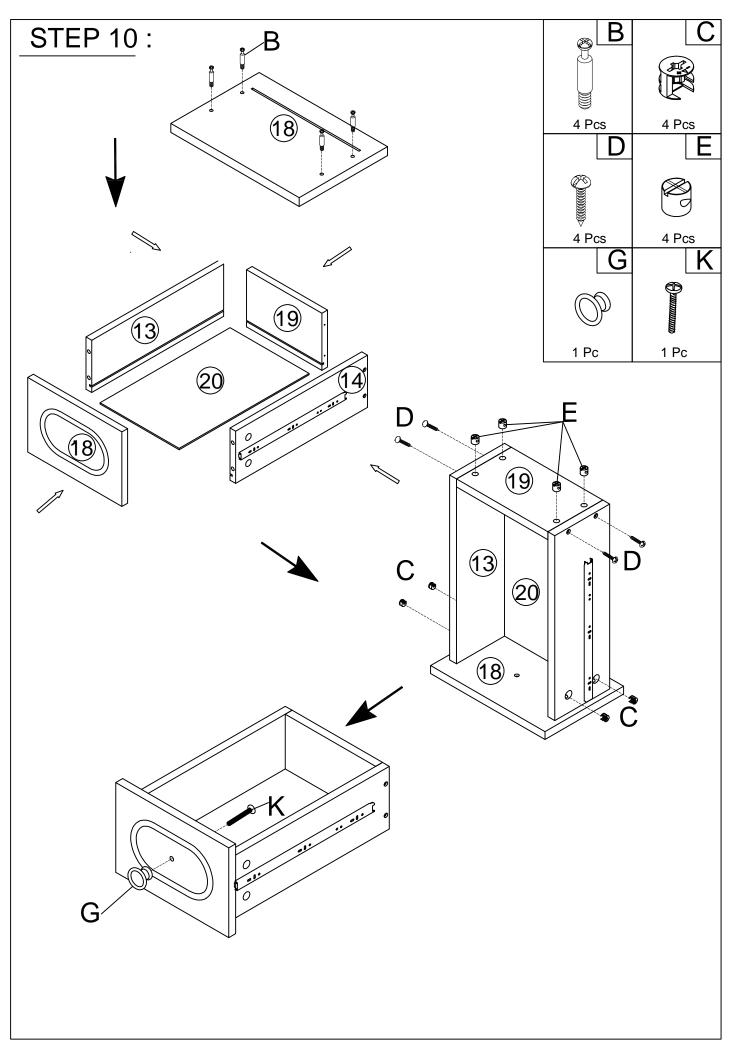

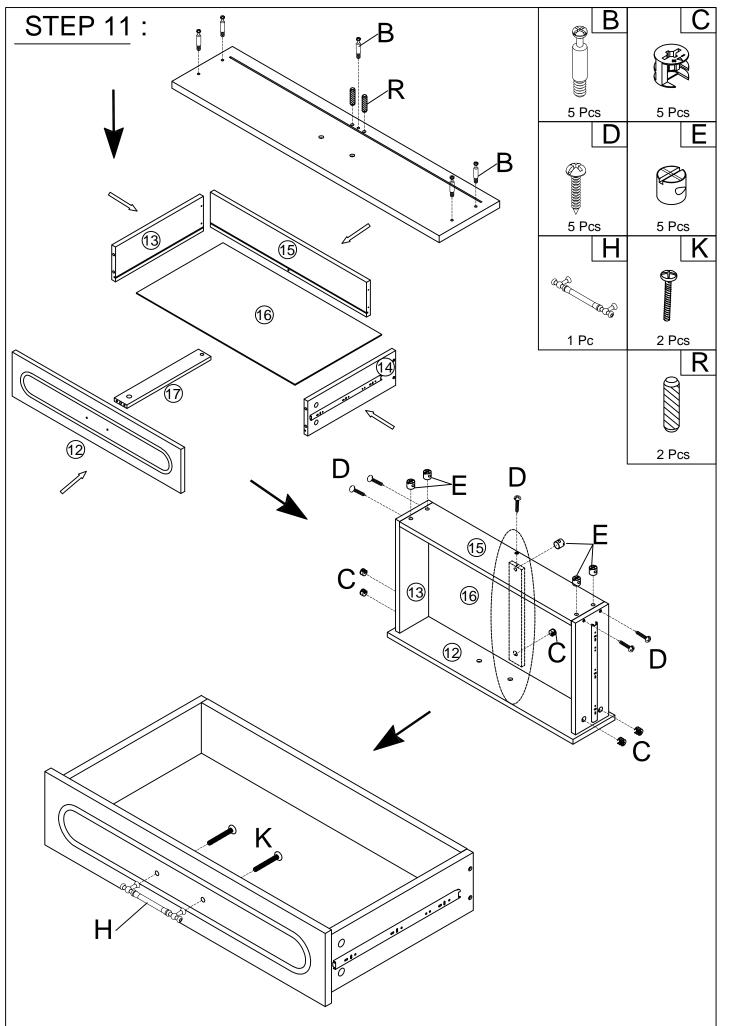


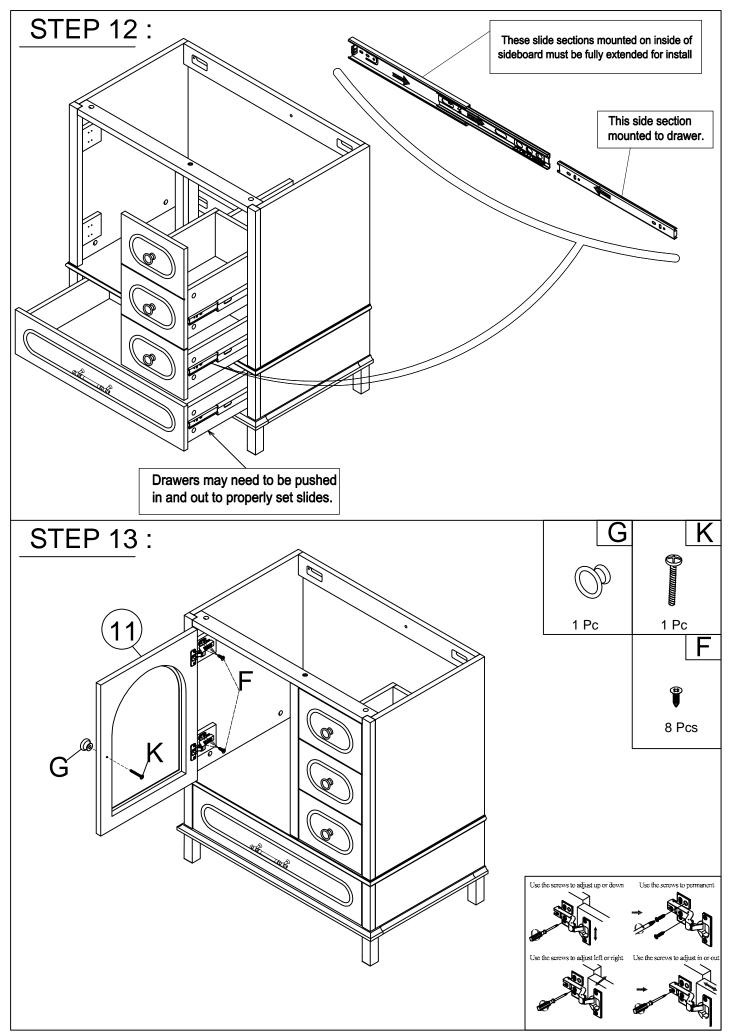

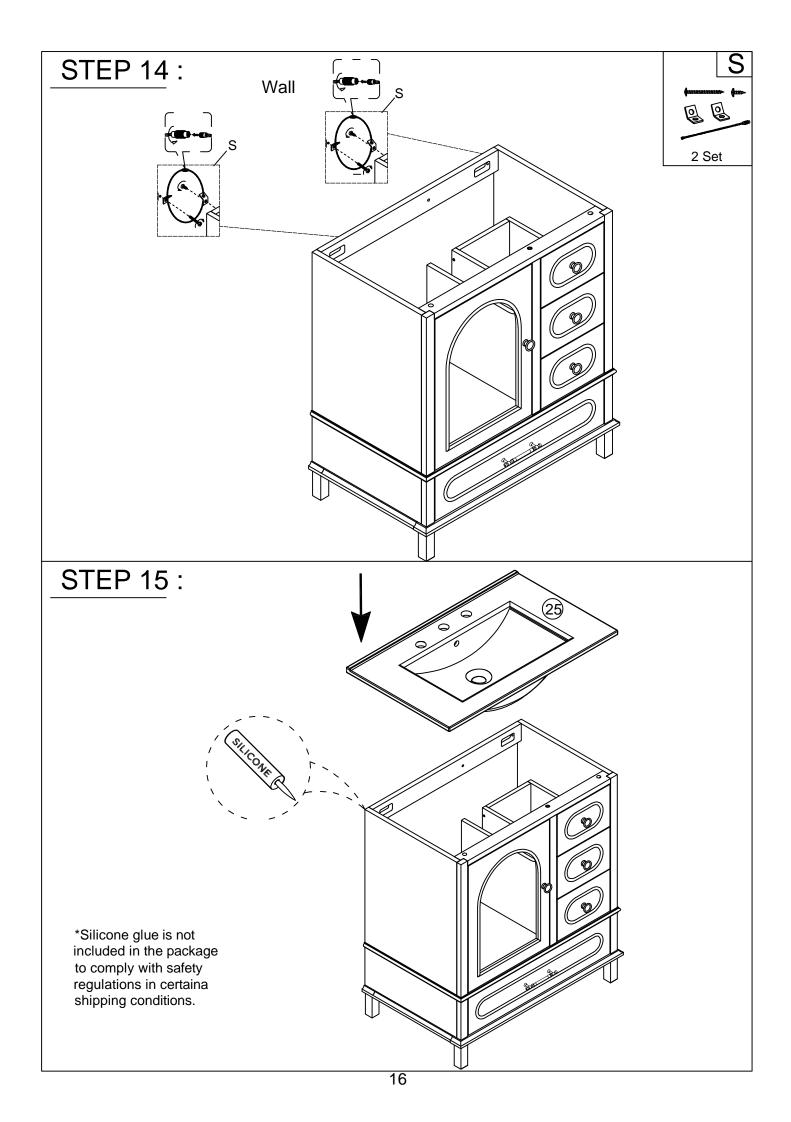

# STEP 16: Instrustions

# HINGE ADJUSTMENTS

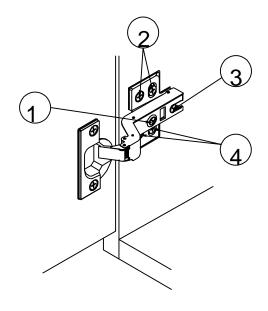

# 1 Sideways / Tilt adjustment

Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

# 2 4 Height adjustment

While supporting the weight of the door, turn the screws clockwise to move the door up anticlockwise to move the door down

# 3 Forward and back adjustment

