


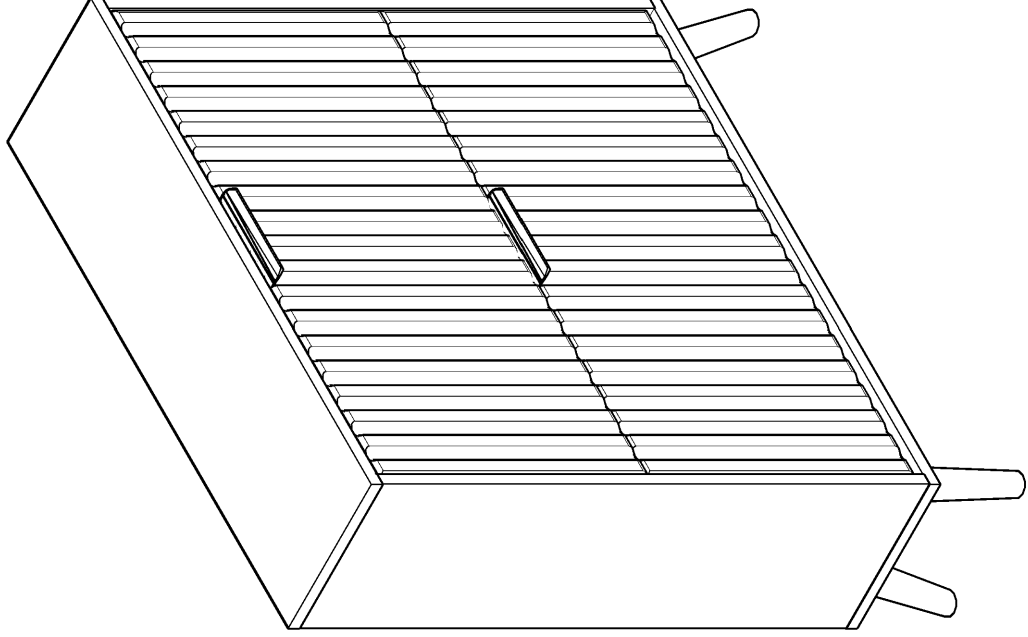
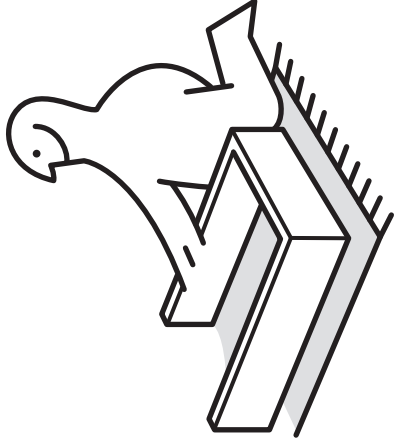
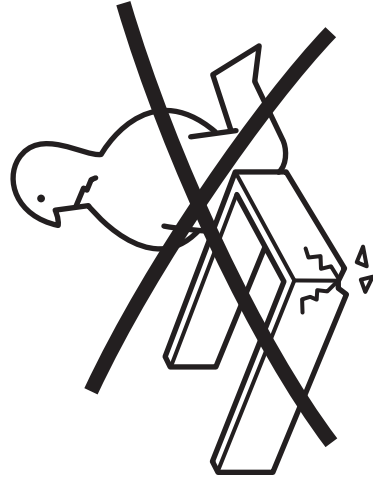


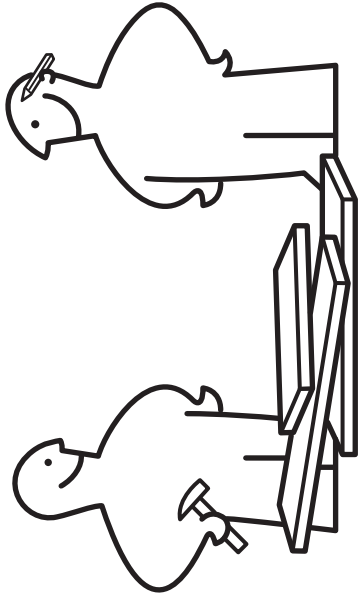

please carefully read the assembly instructions
before installation(Attention:Do not tighten
the screws before all screws are in place).

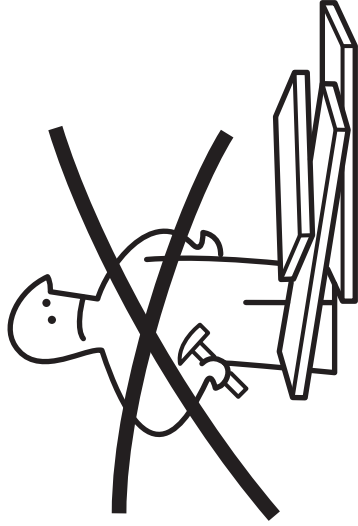


(Tools not provided)
Flat Blade Screwdriver
Phillips Head Screwdriver
Wooden Hammer




To Assemble the Unit
Wooden Hammer

PAGE1
Exploded View


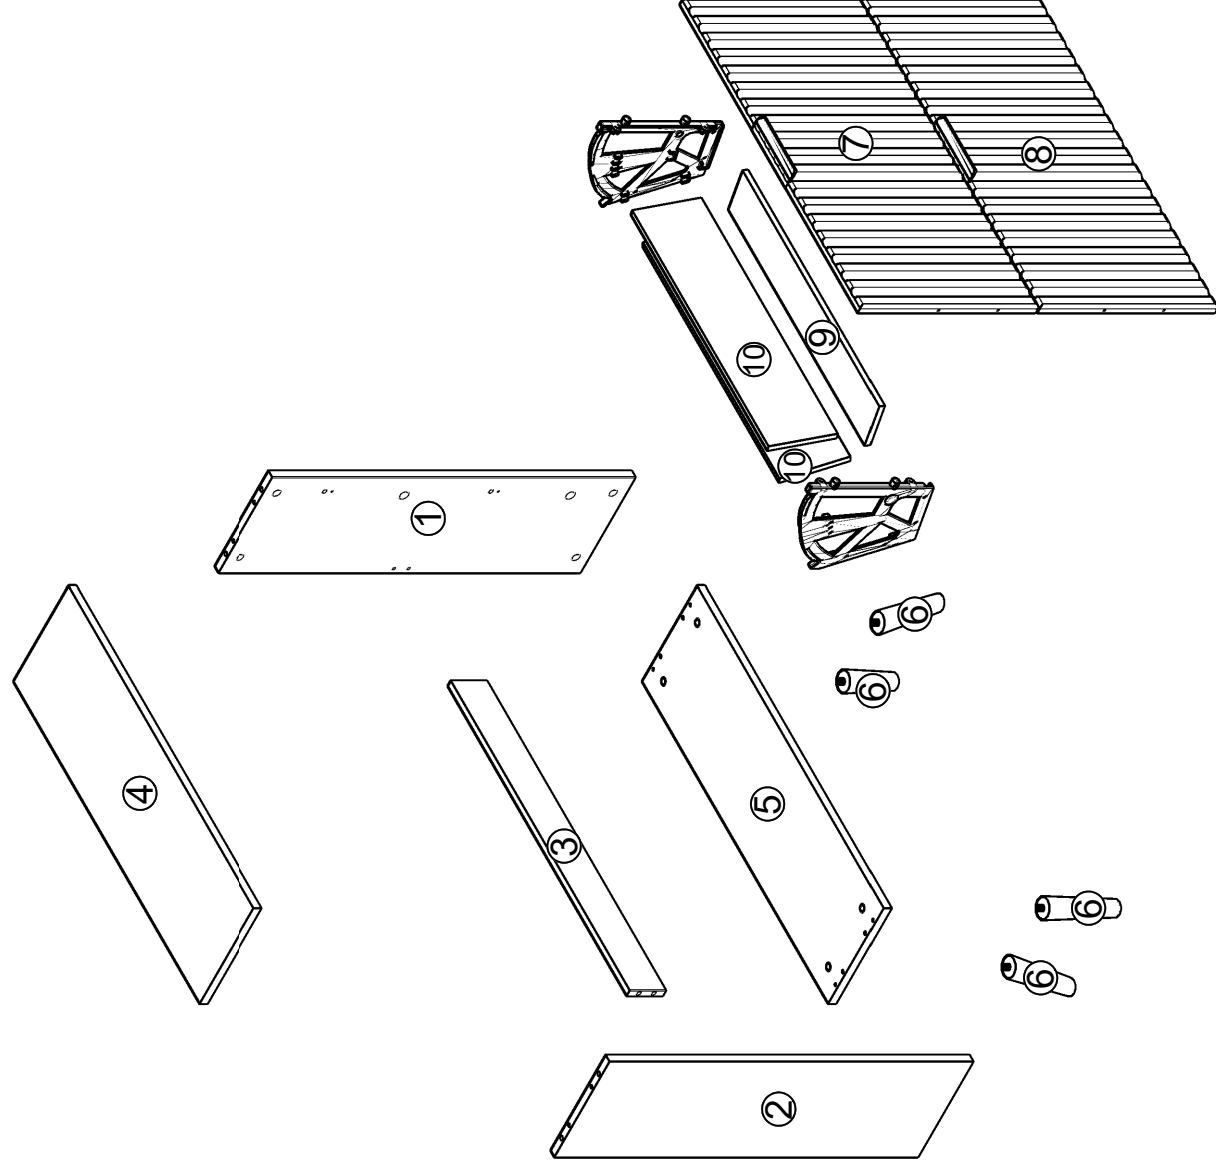


will require these parts


A  M3.5X25M	12+1PCS	B 	12+1PCS	C  M6X30MM	8+2PCS	D  M3.5X16M	8+2PCS
E  M3.5X12MM	8+2PCS	F  M3.5X14M	6+1PCS	G 	2PCS	H 	2PCS
I 	4PCS	J  M4X12MM	4PCS	K 	4PCS	L 	4PCS
M 	2PCS	N  M3X10M	20+2PCS	O  M4X45M	2PCS	P 	4PCS
Q 	2PCS	R  M3.5X12MM	4PCS	S 	2PCS		


will require these parts


STEP1

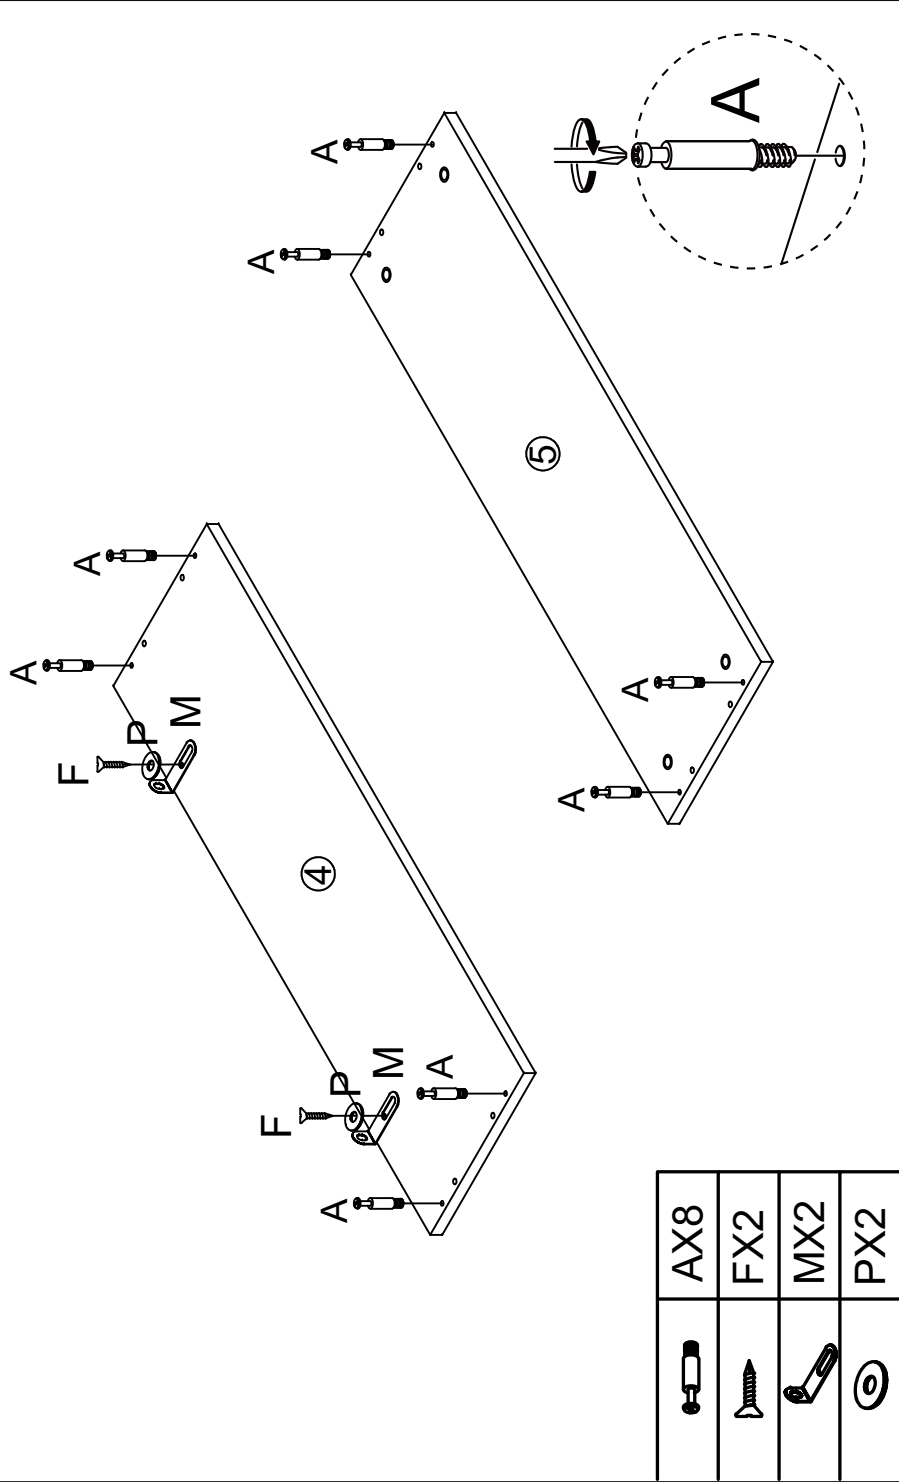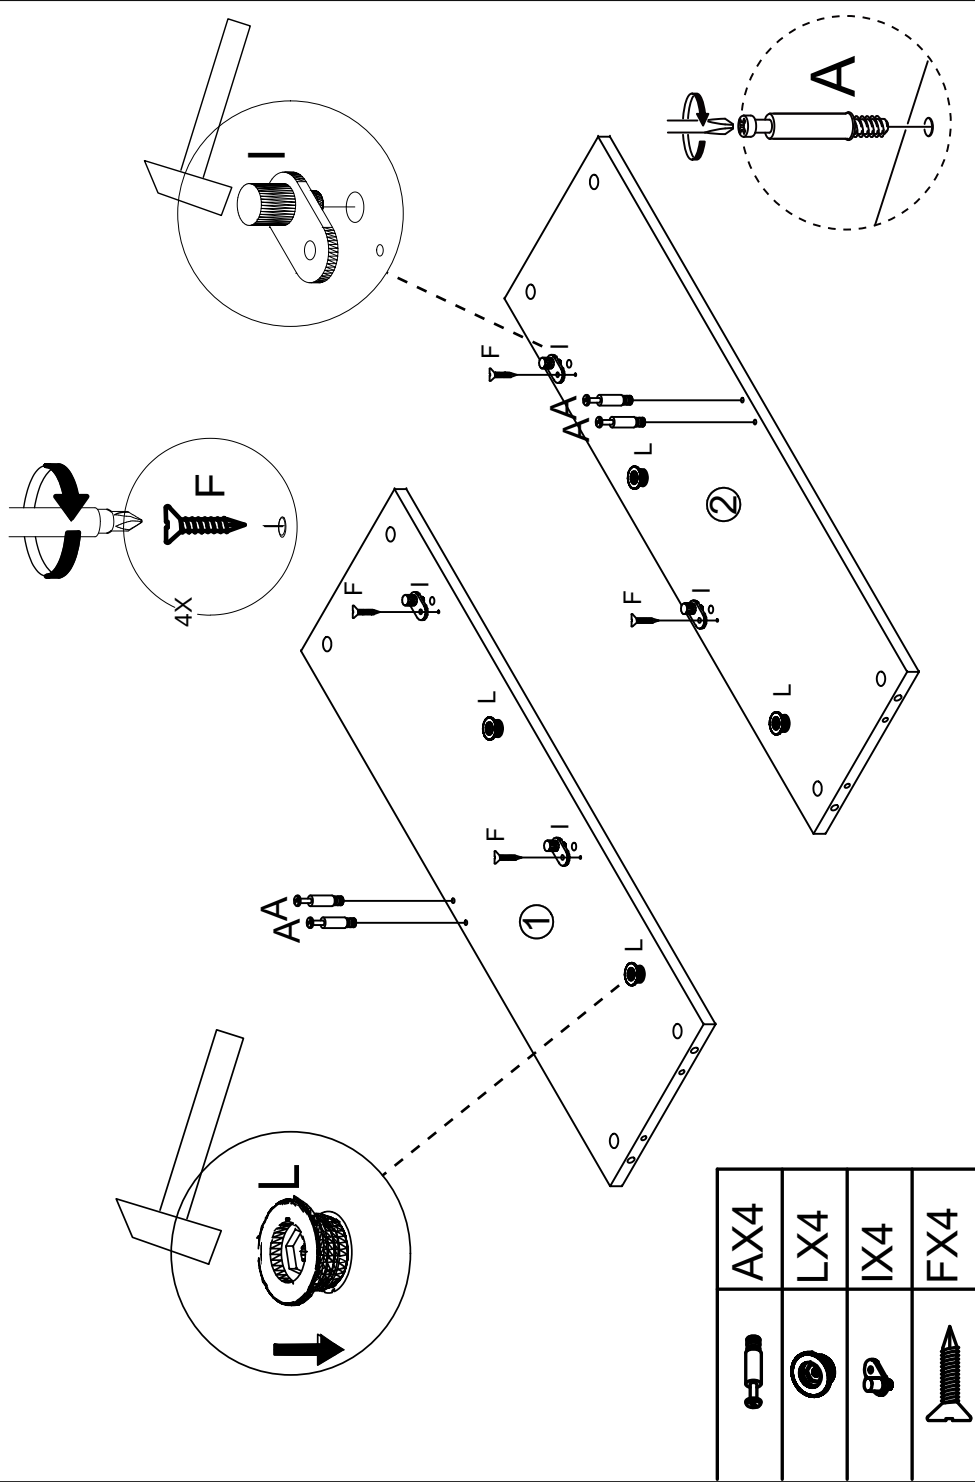

will require these parts

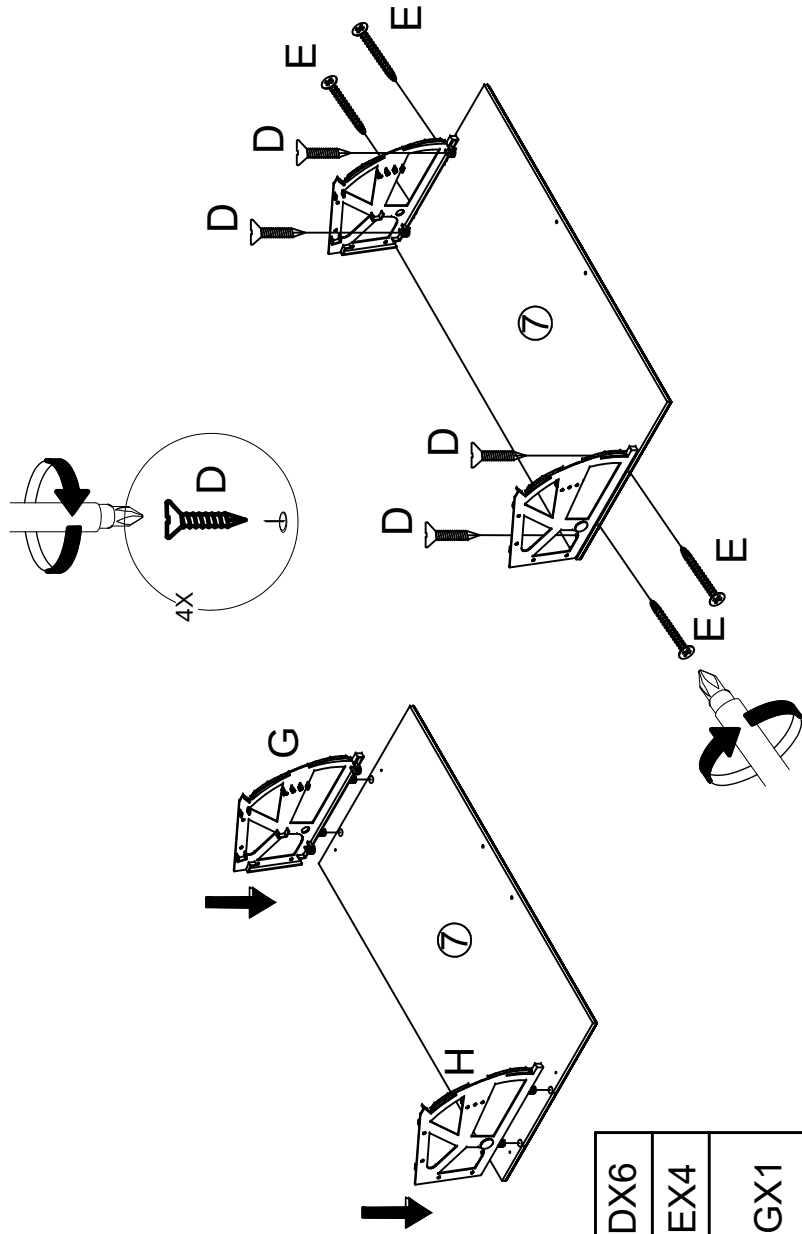


	DX6
	EX4
	GX1
	HX1

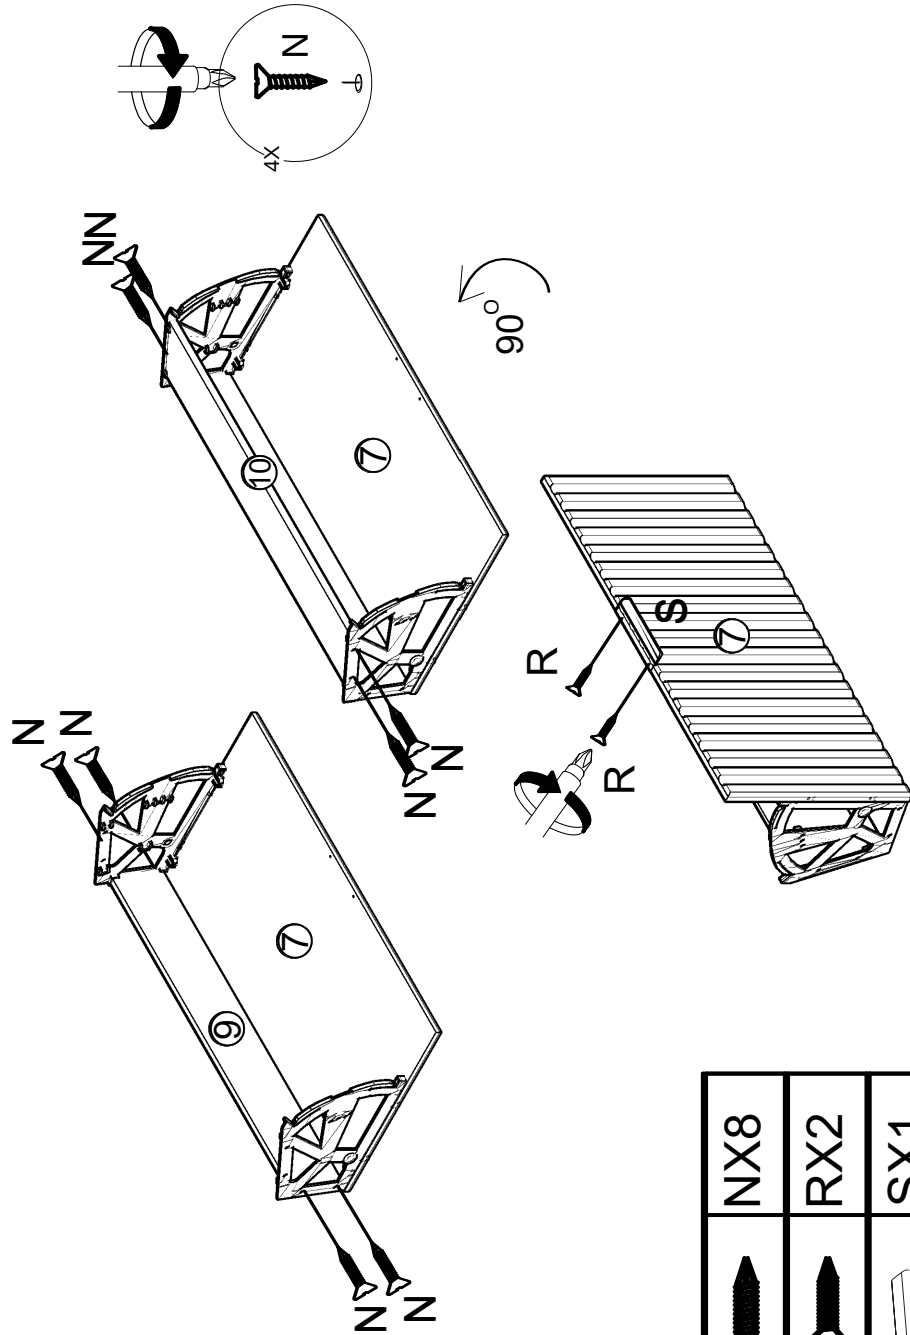


	NX8
	RX2
	SX1

will require these parts


STEP3

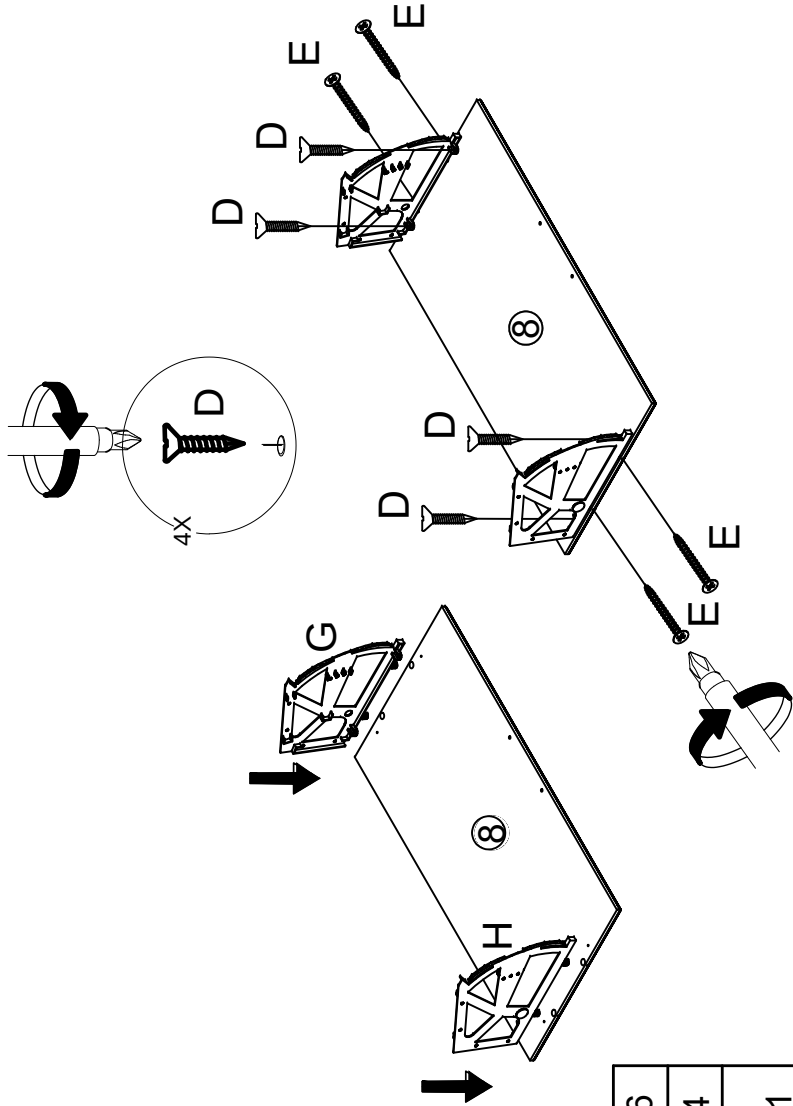




	DX6
	EX4
	GX1
	HX1

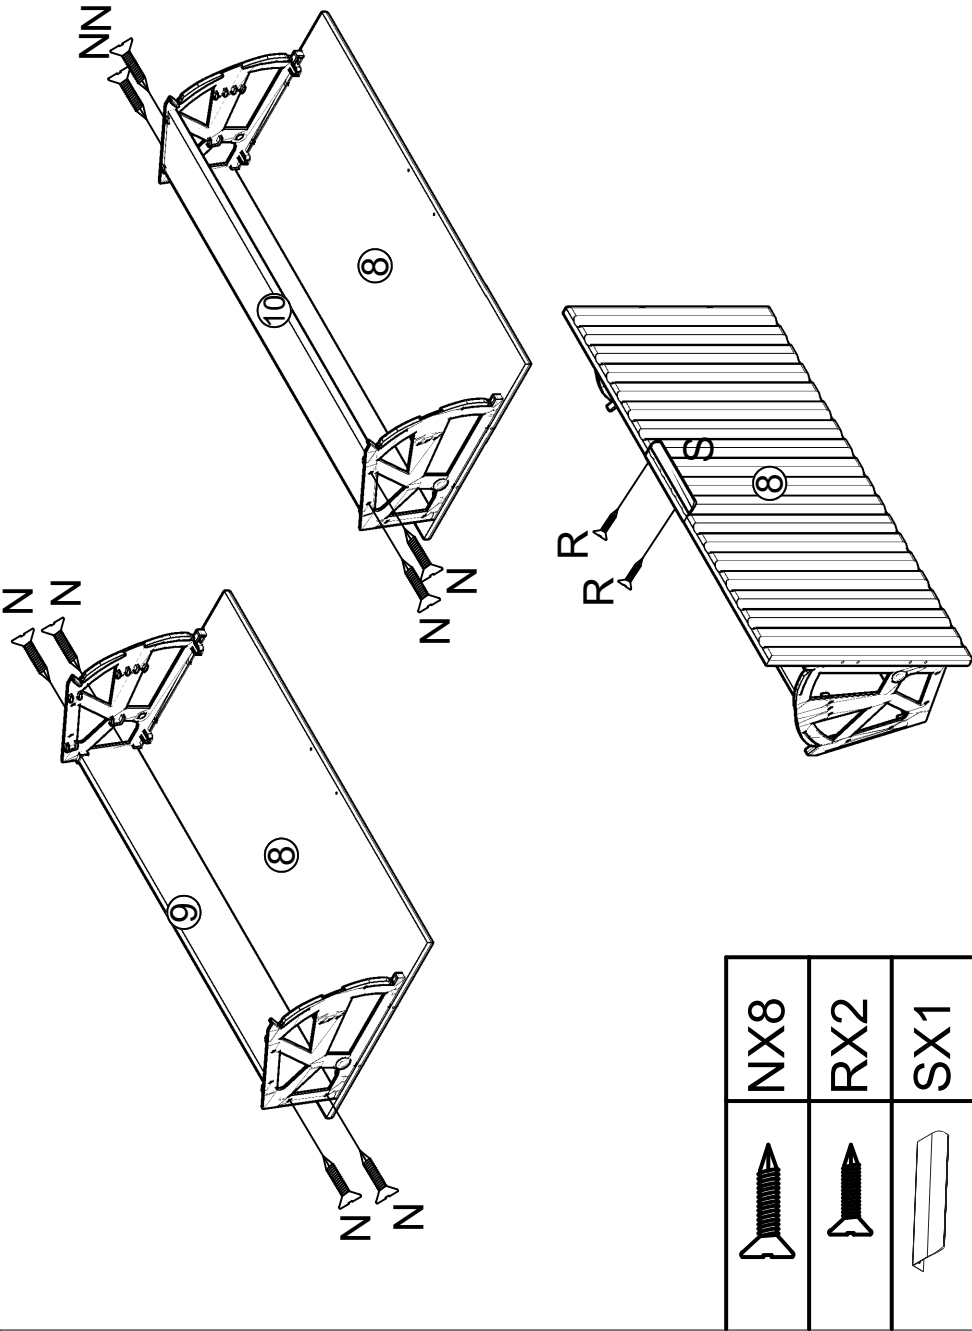


	NX8
	RX2
	SX1

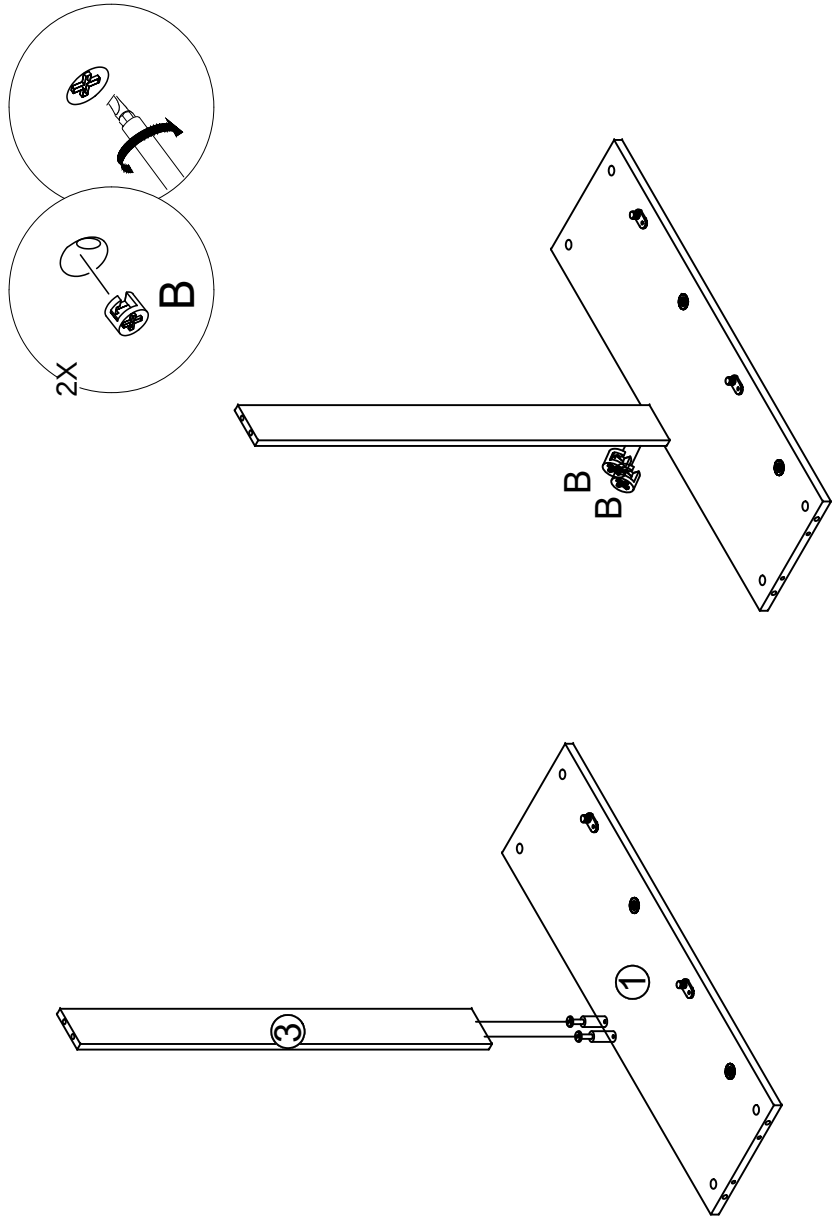



	BX2
--	-----

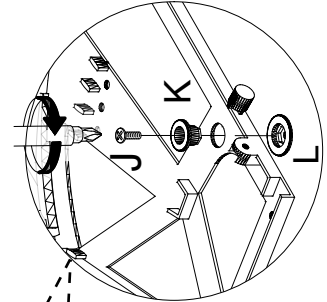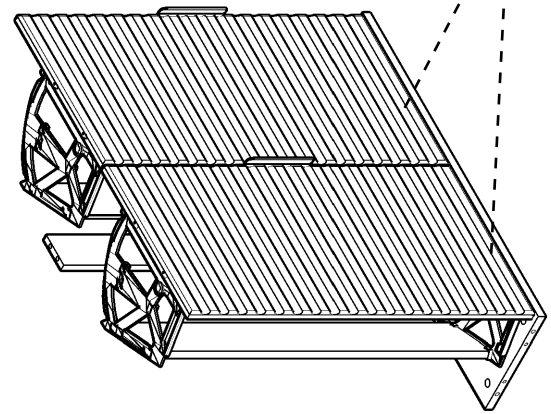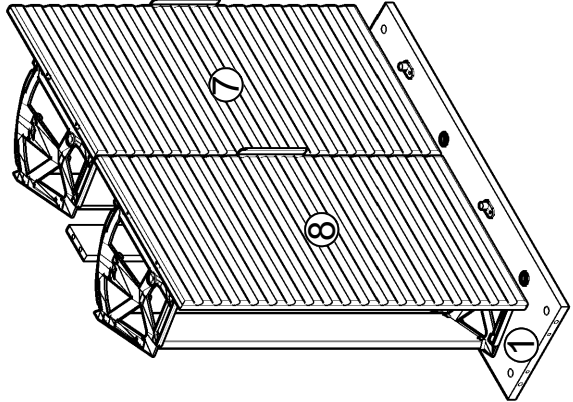



	JX2
	KX2

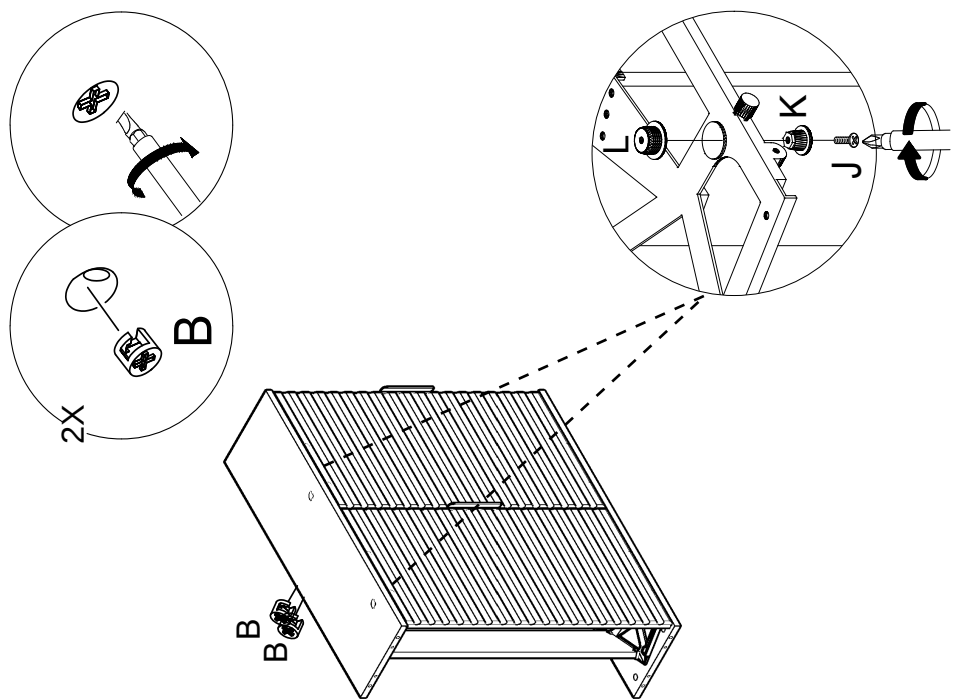




	BX2
	JX2
	KX2

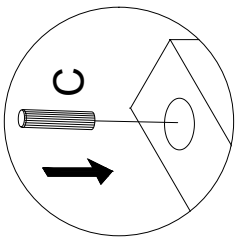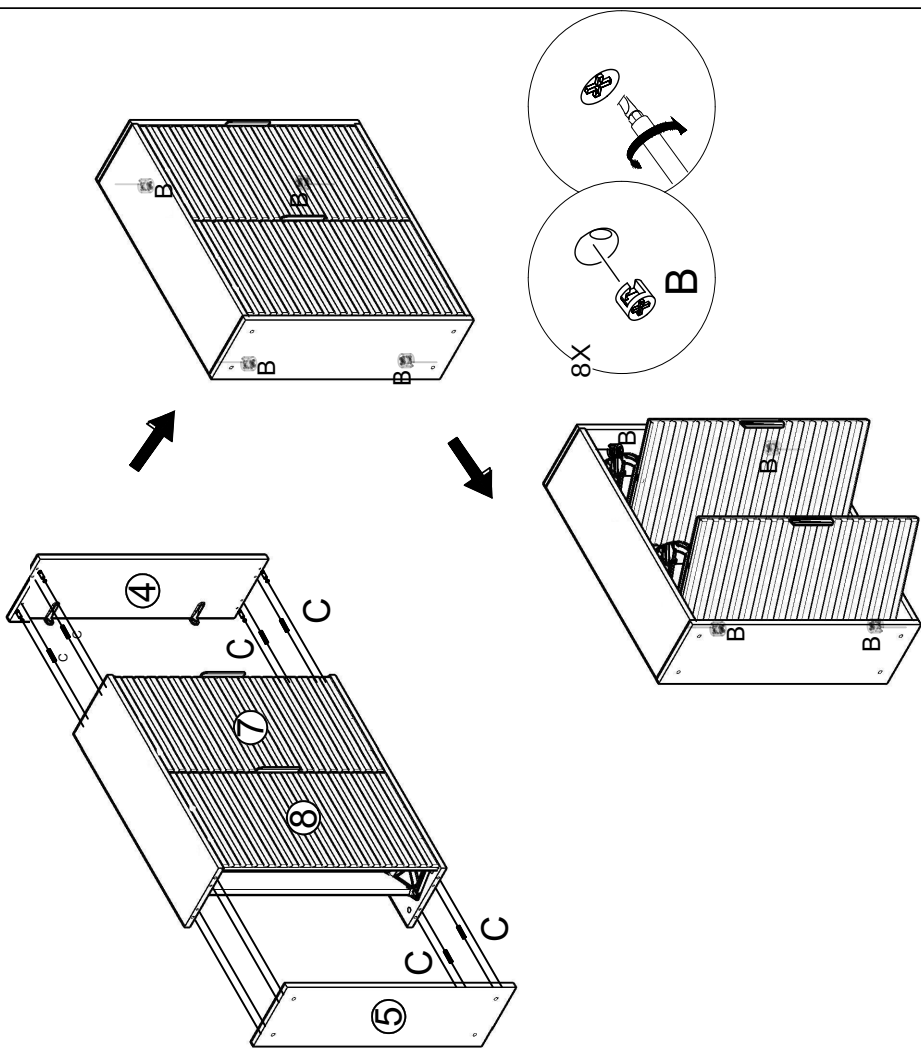


	BX8
	CX8

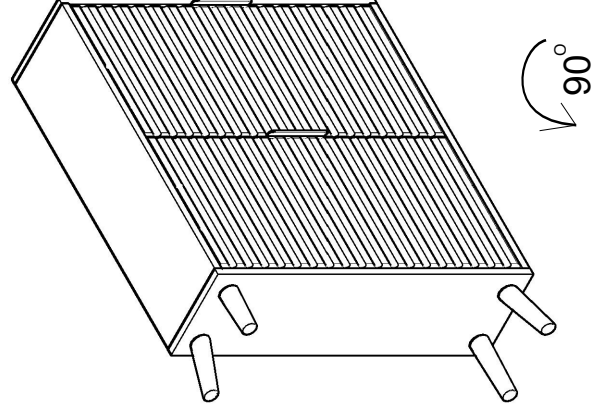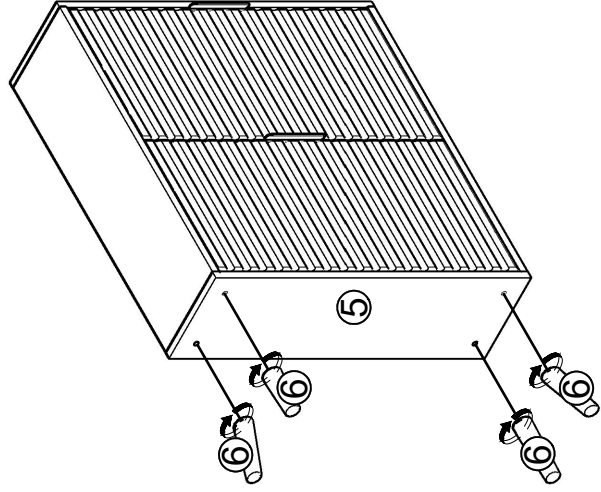


Drill 2 holes on the wall at the required position for anti-falling device installation.

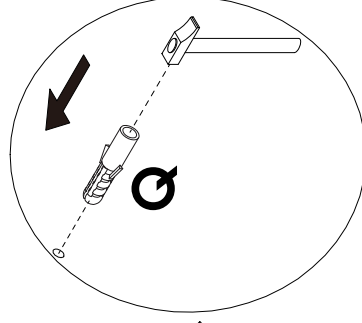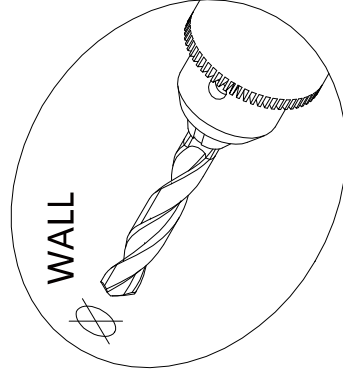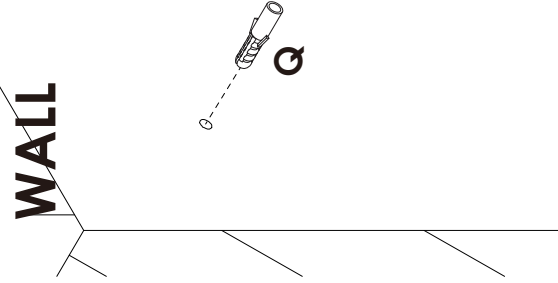

Move the cabinet to the required position, use the "O" long screw to fix the cabinet to the wall.

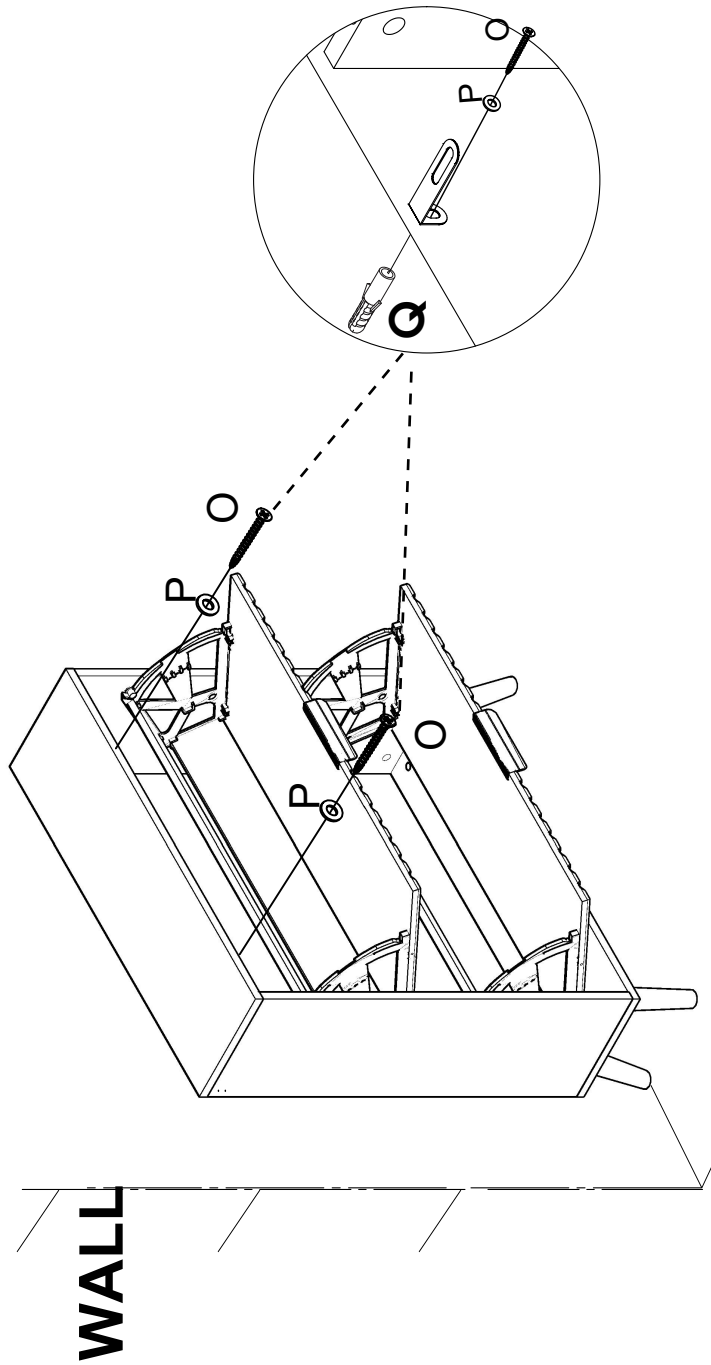

	OX2
	PX2

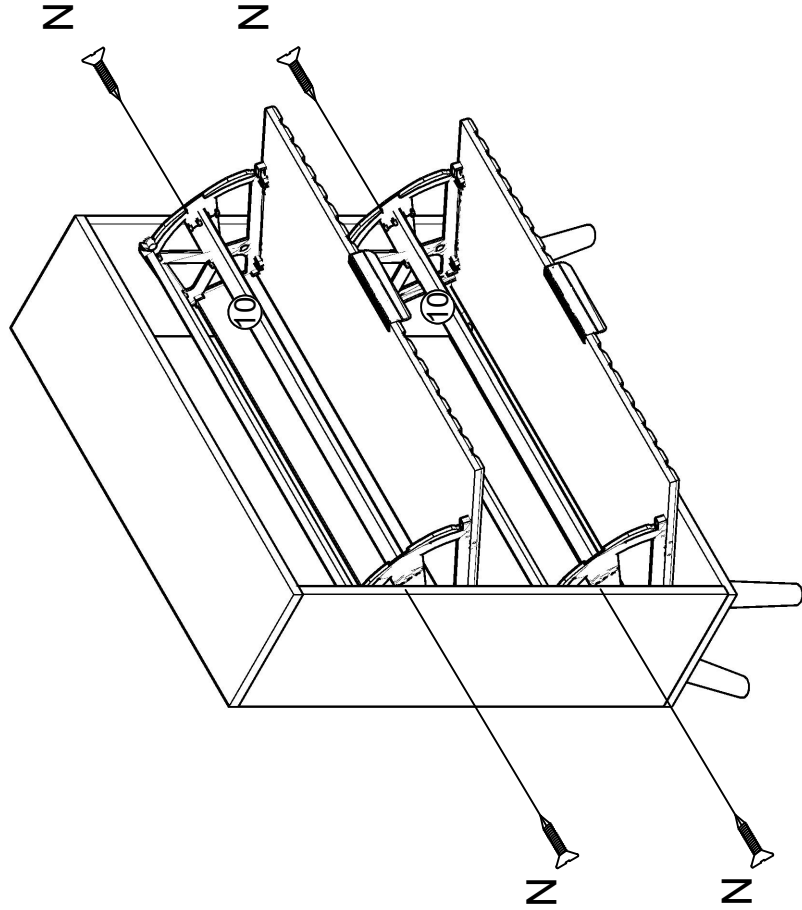

	NX4
---	-----