


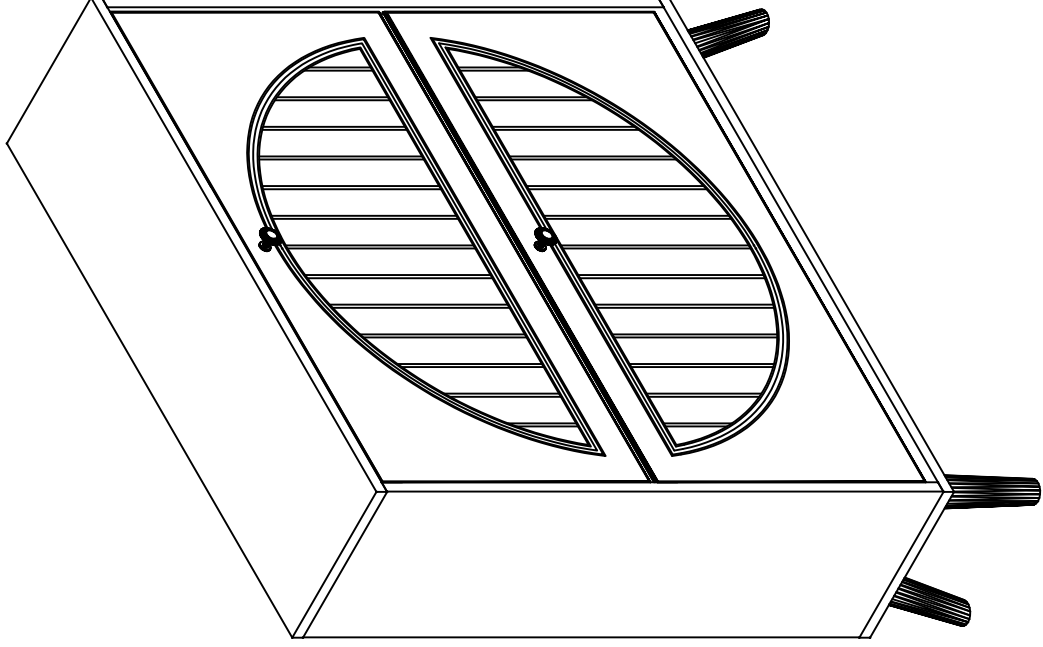
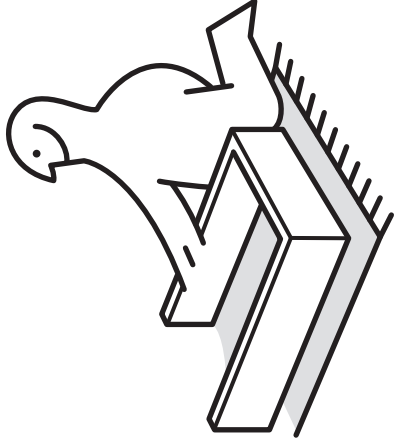
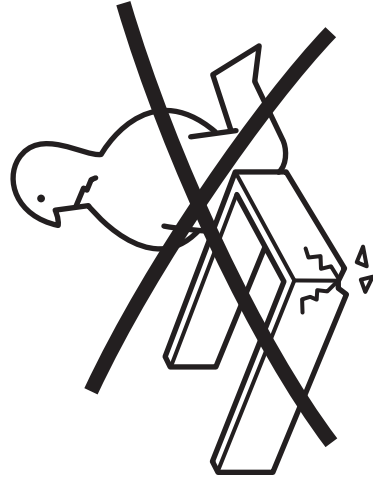


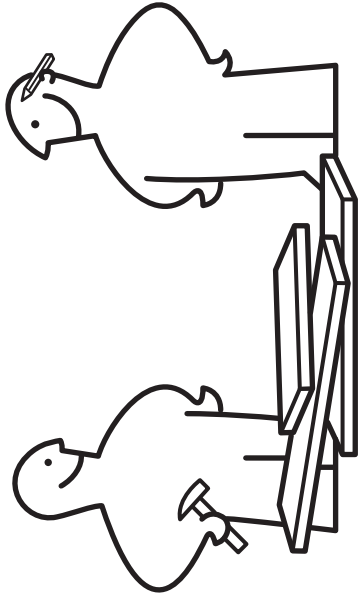

Thanks for purchasing one of our products,
please carefully read the assembly instructions
before installation(Attention:Do not tighten
the screws before all screws are in place).

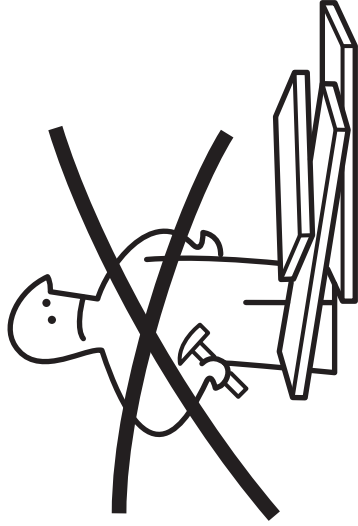


(Tools not provided)
Flat Blade Screwdriver
Phillips Head Screwdriver
Wooden Hammer




To Assemble the Unit
Wooden Hammer

PAGE1
Exploded View

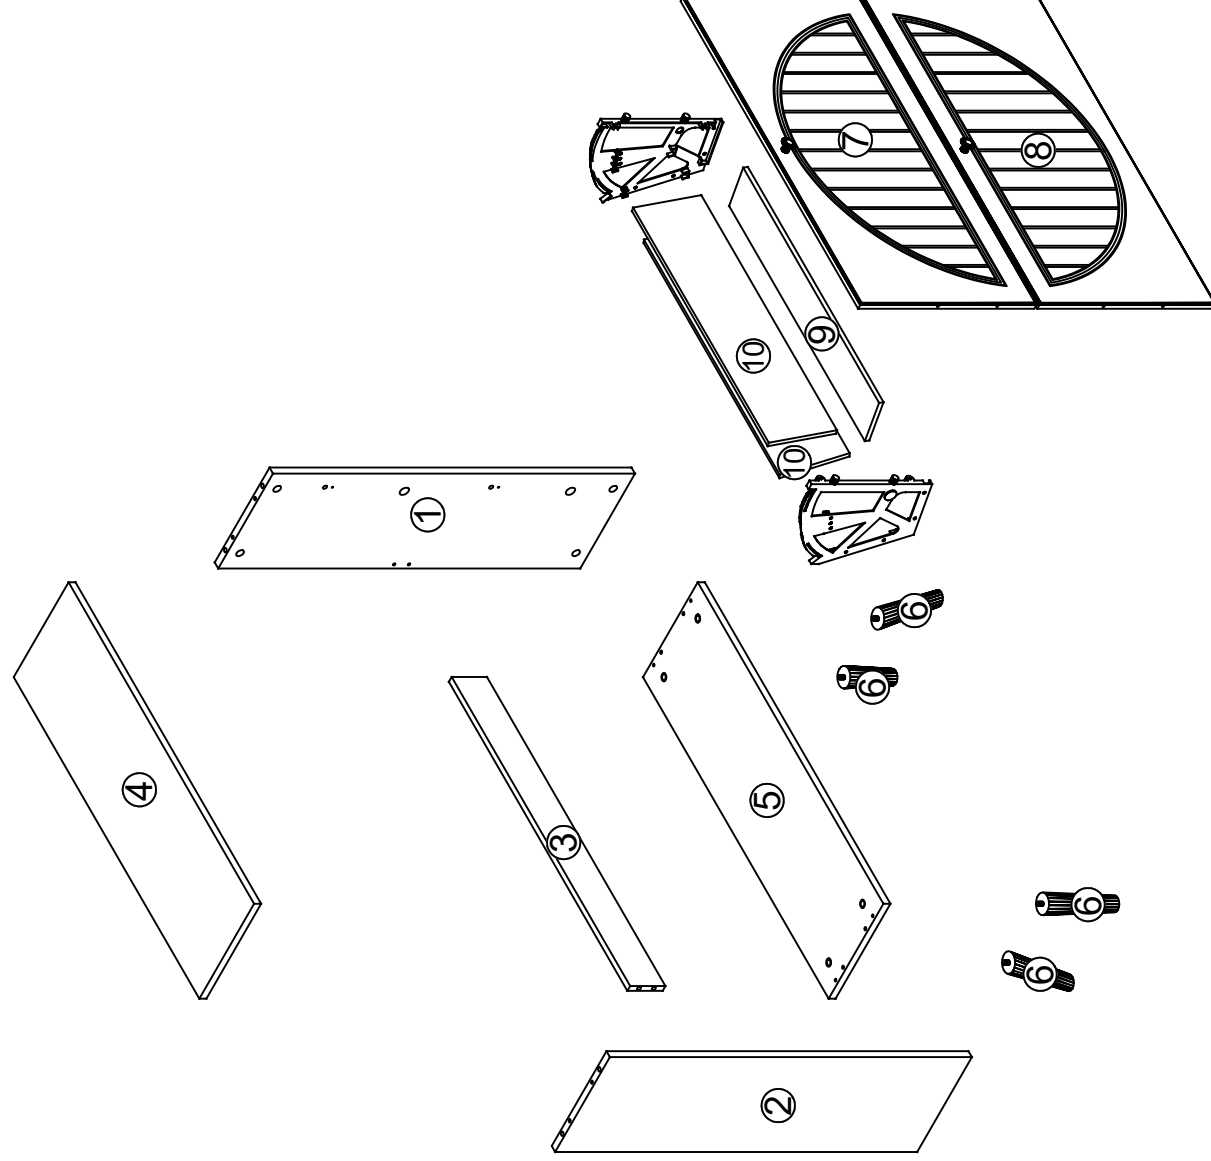



will require these parts

A  M3.5X25M	12+1PCS	B 	12+1PCS	C  M6X30MM	8+2PCS	D  M3.5X16M	8+2PCS
E  M3.5X25M	8+2PCS	F  M3.5X14M	6+1PCS	G 	2PCS	H 	2PCS
I	4PCS	J M4X12MM	4PCS	K	4PCS	L	4PCS
M	2PCS	N M3X10M	20+2PCS	O M4X45M	2PCS	P	4PCS
Q	2PCS	R M4X16MM	2PCS	S	2PCS	T	2PCS


STEP1


PAGE3


will require these parts

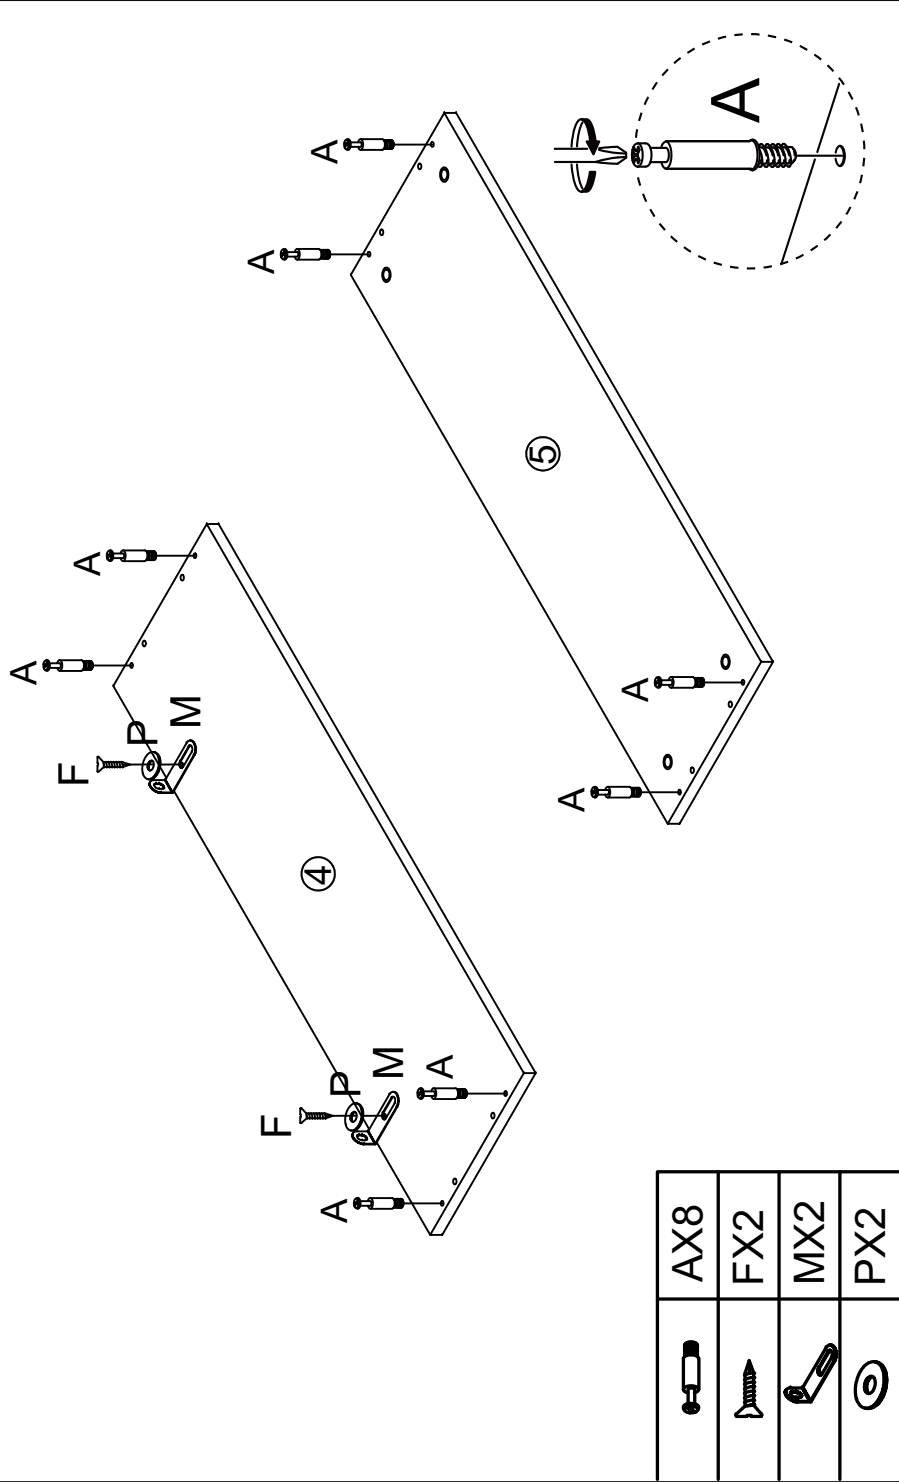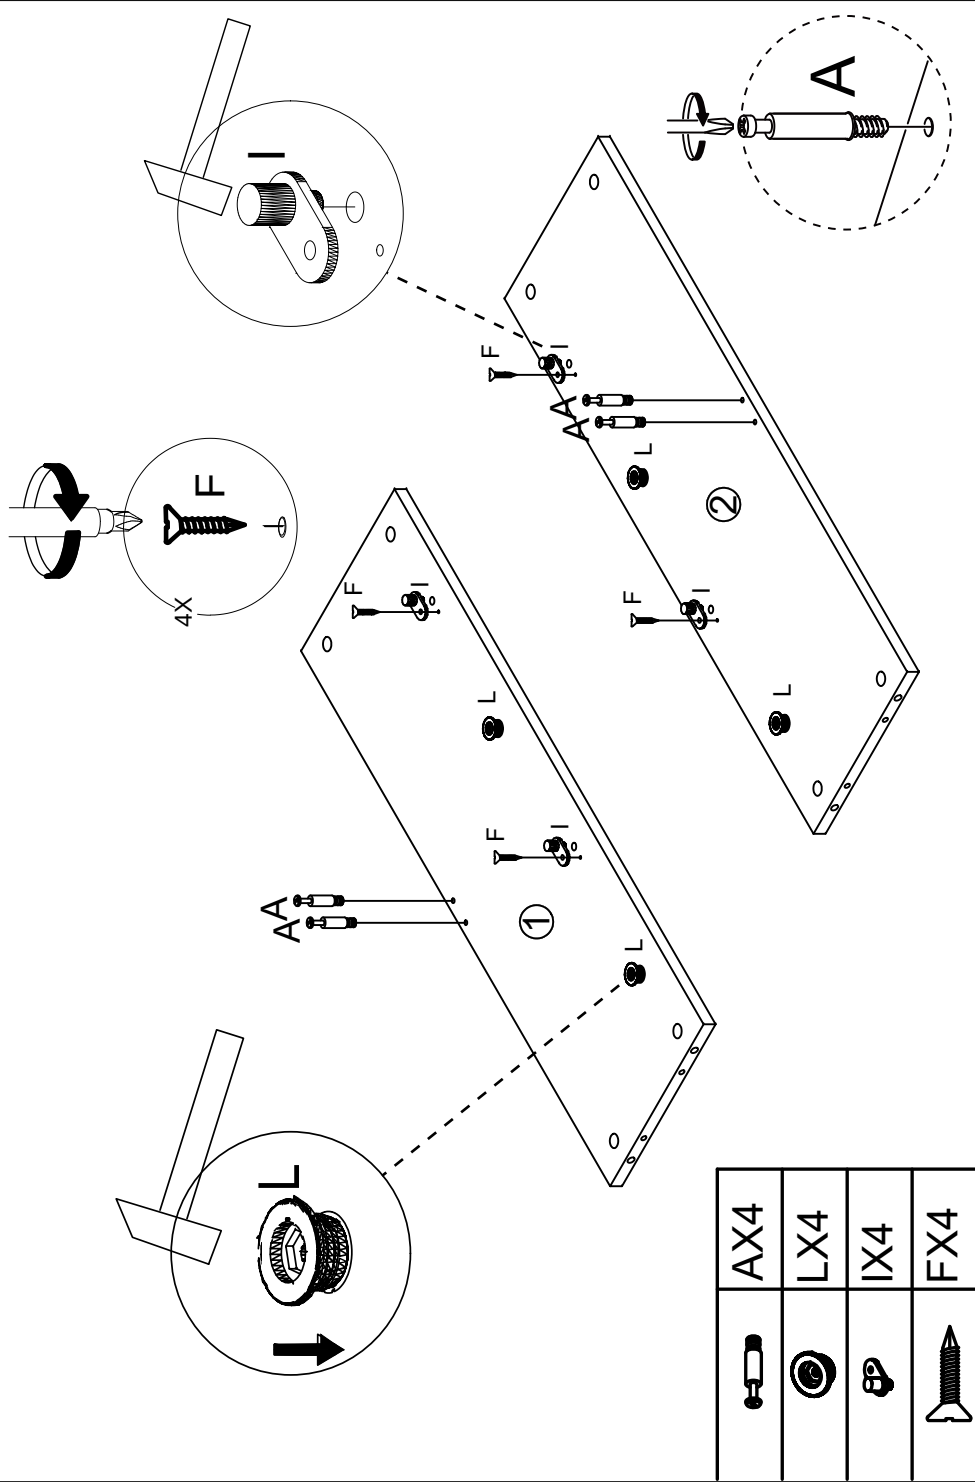

will require these parts

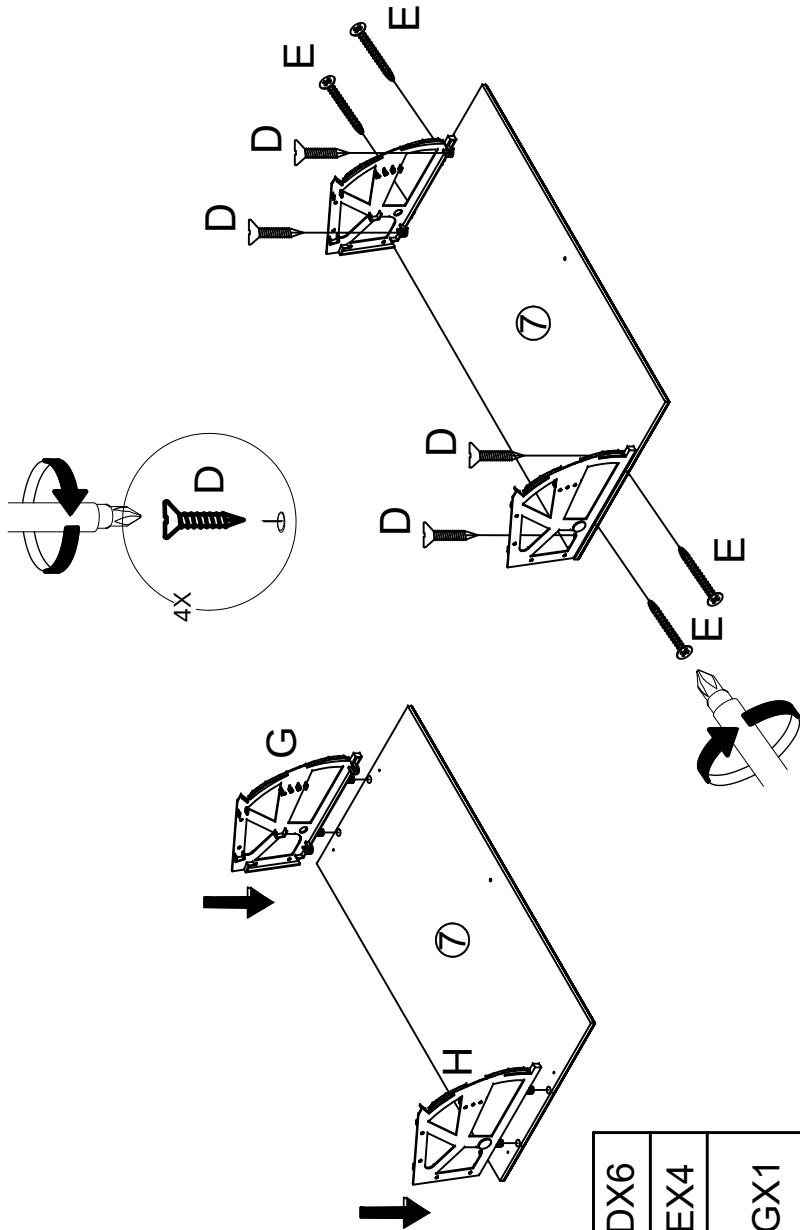


	DX6
	EX4
	GX1
	HX1

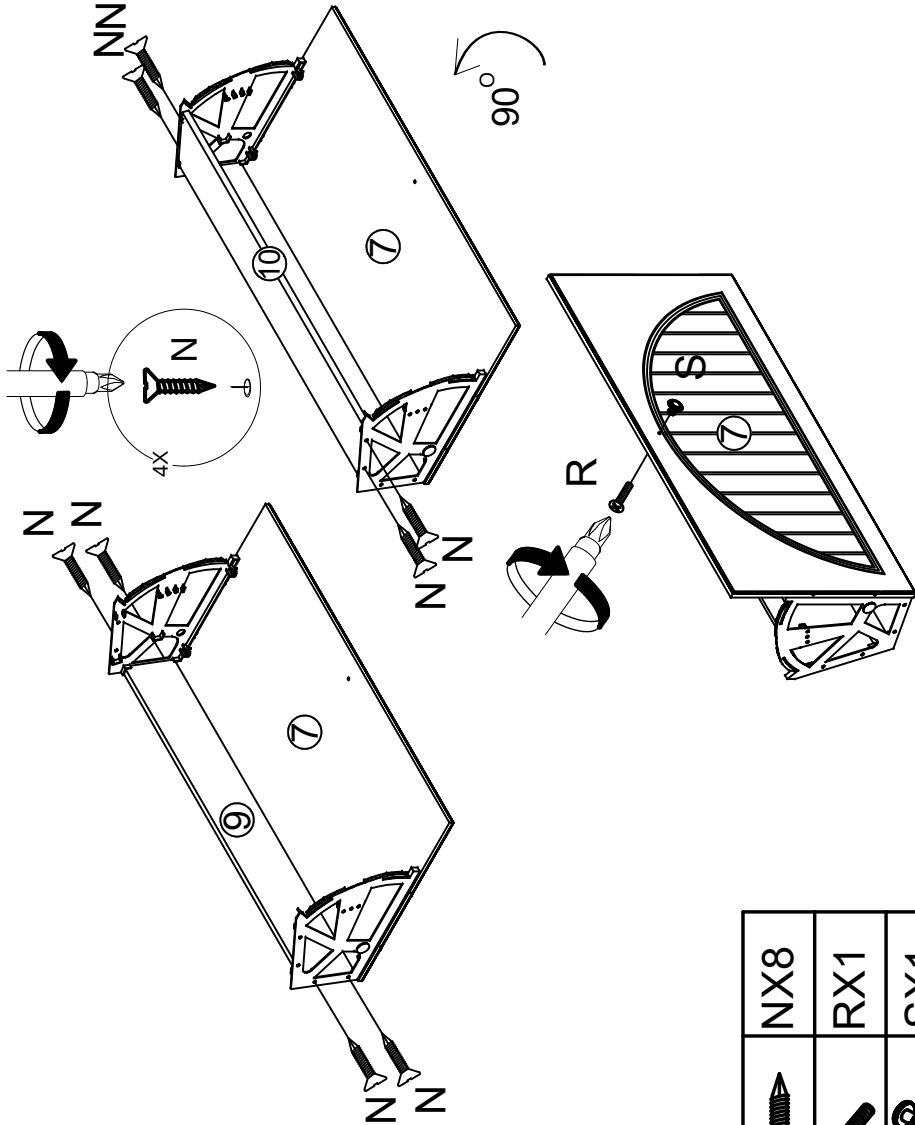


	NX8
	RX1
	SX1

will require these parts

STEP3

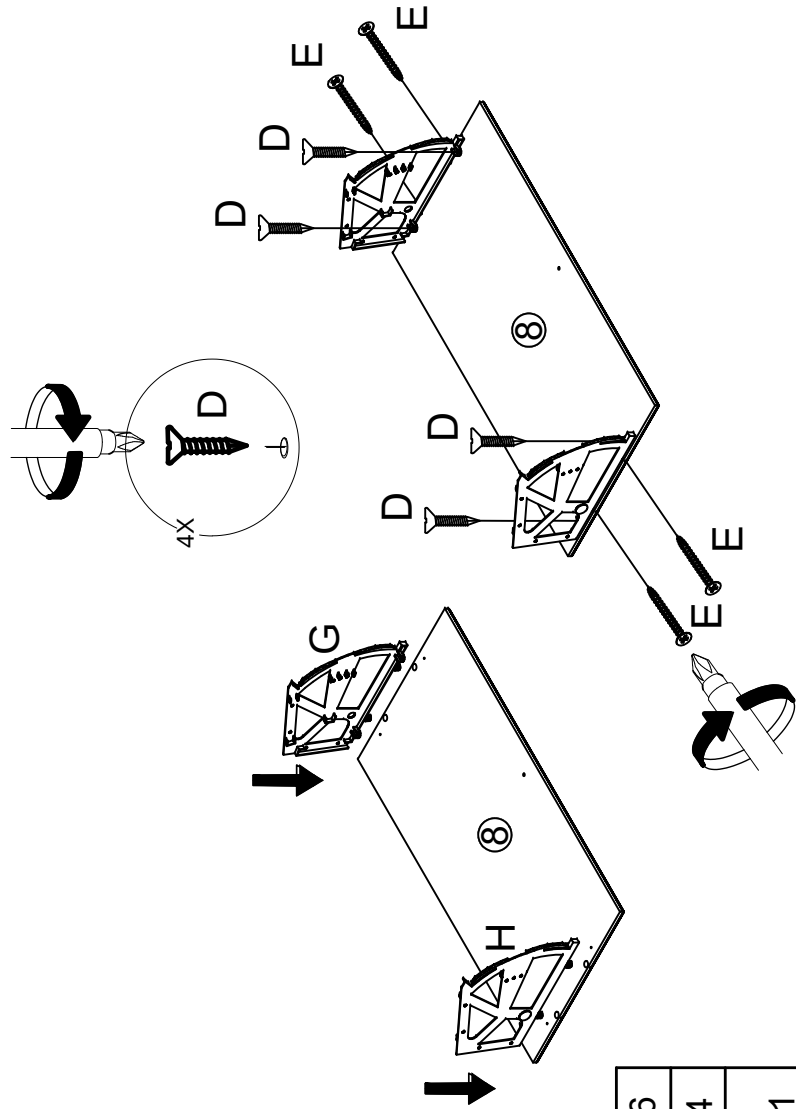


	DX6
	EX4
	GX1
	HX1

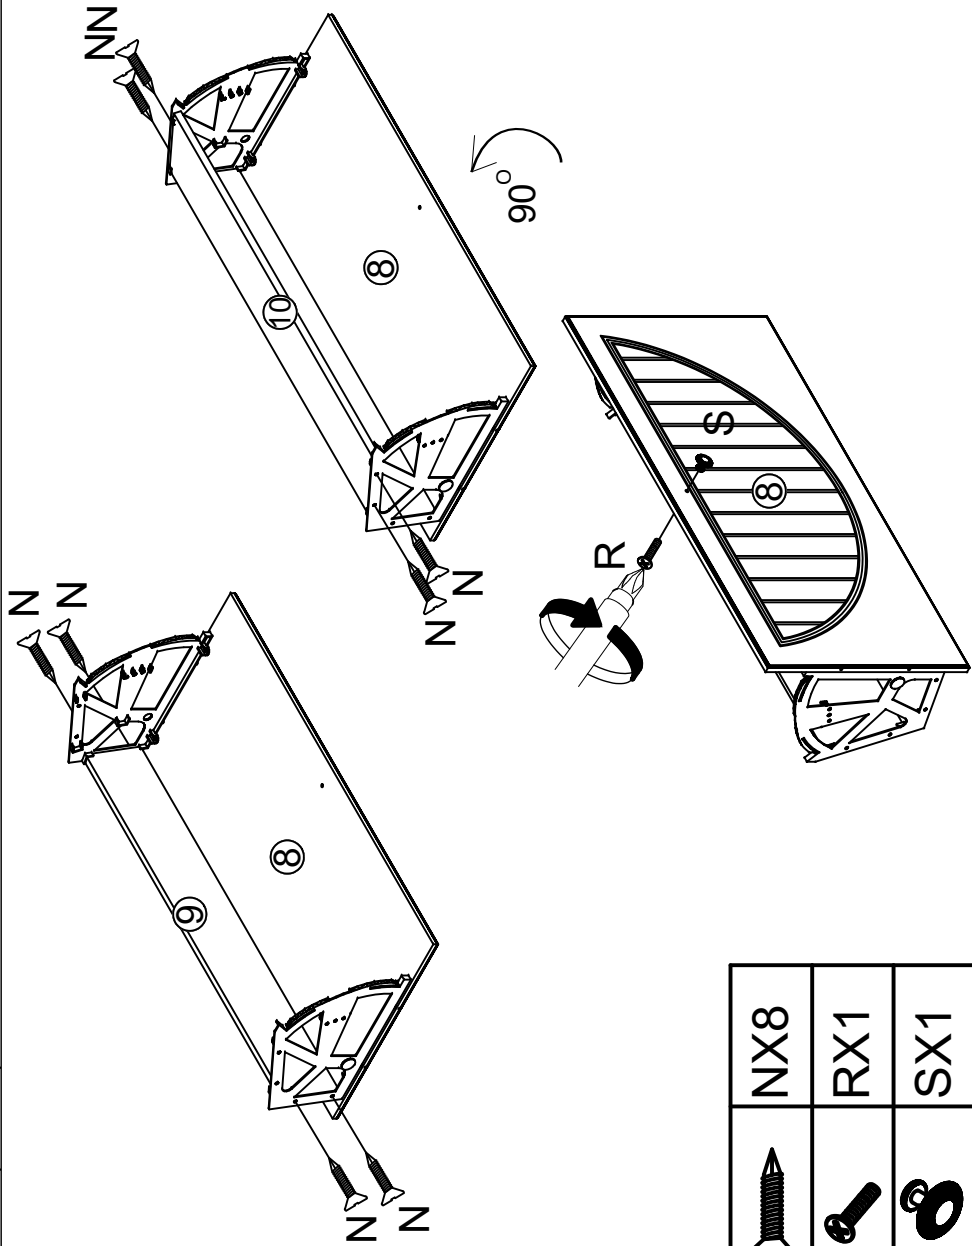




--

STEP4

PAGE6
will require these parts

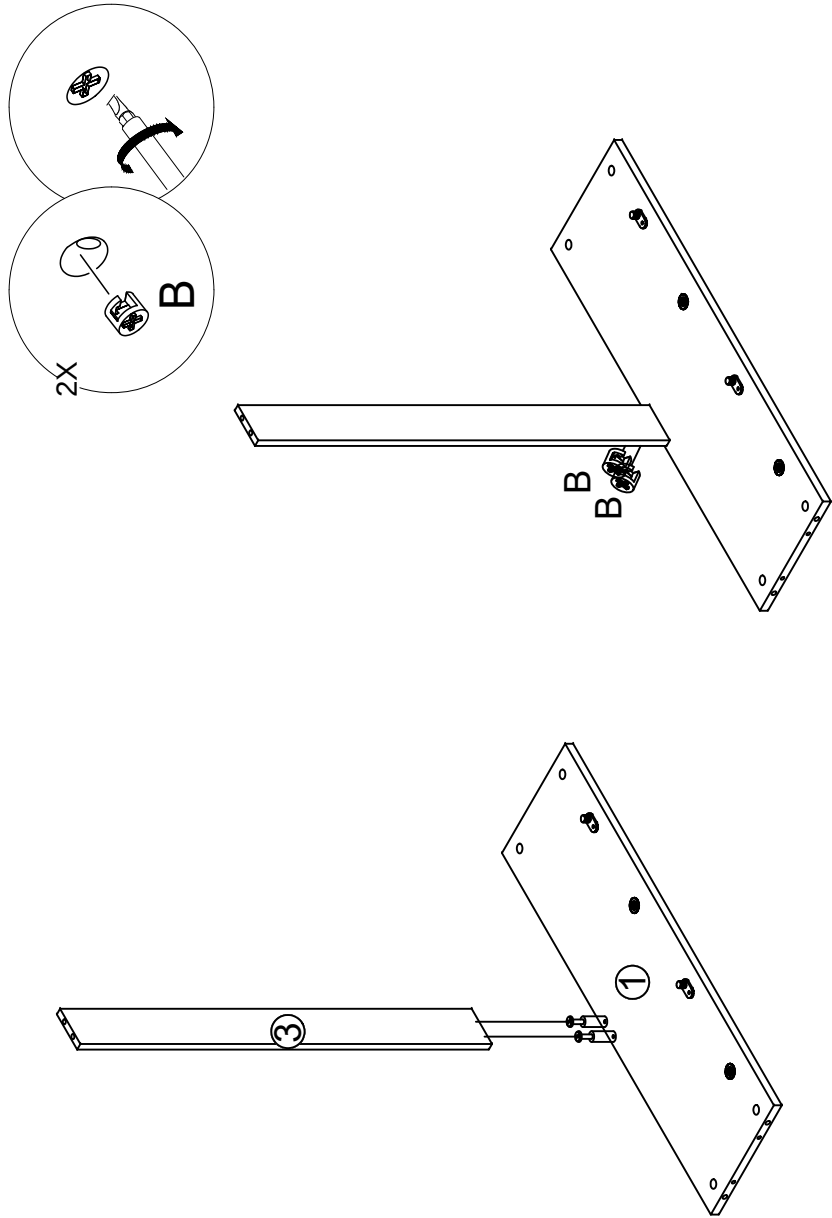

BX2

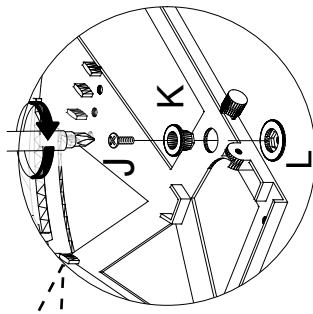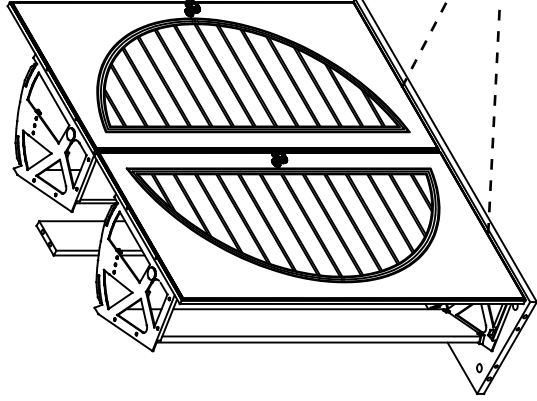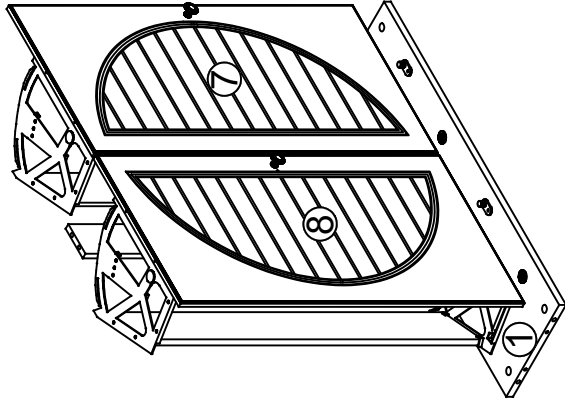


JX2






KX2



will require these parts


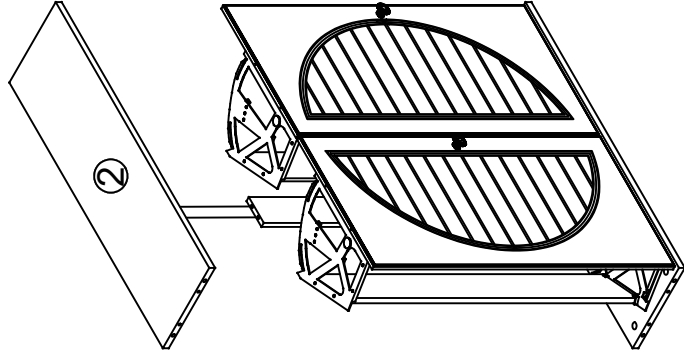


	BX2
	JX2
	KX2

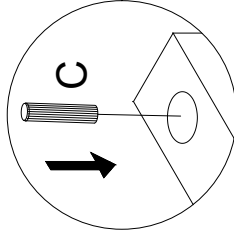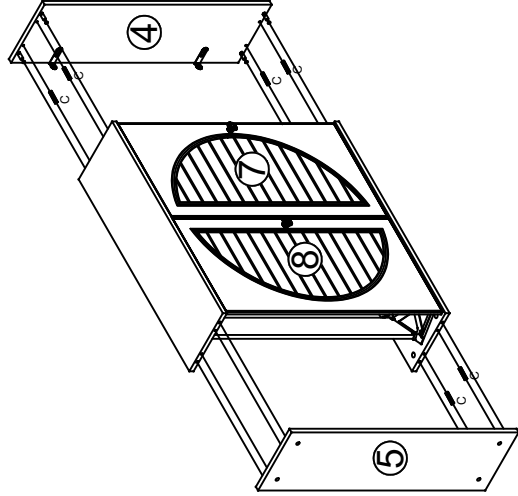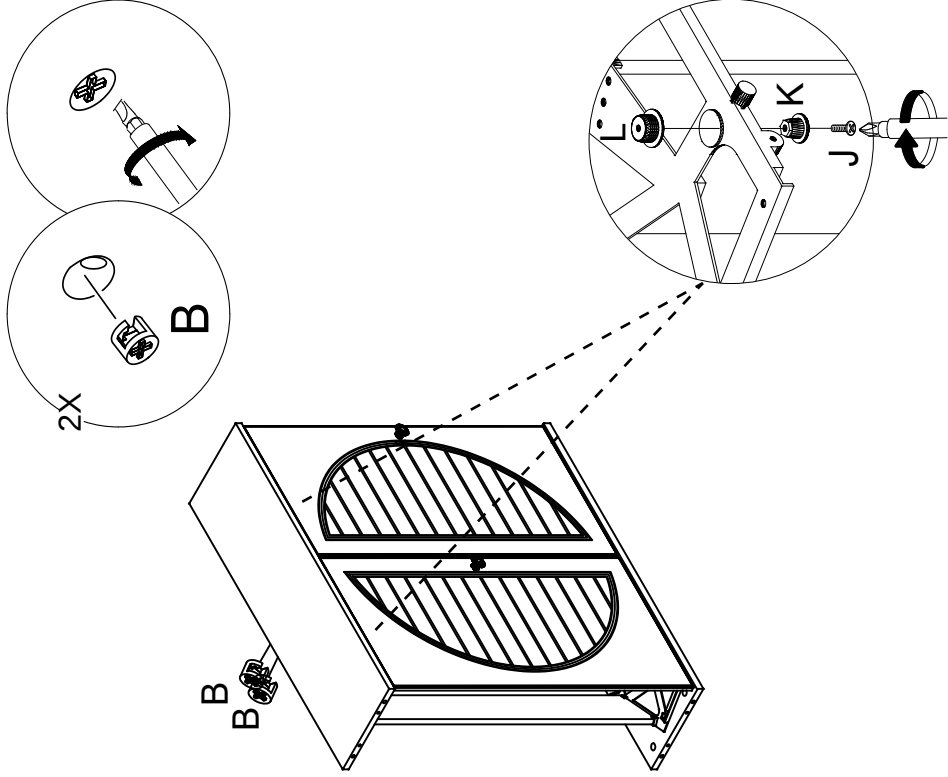



	BX8
	CX8

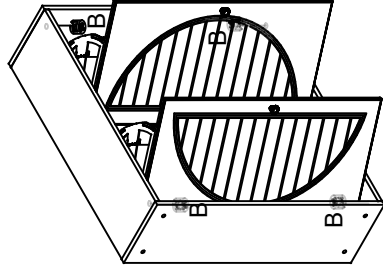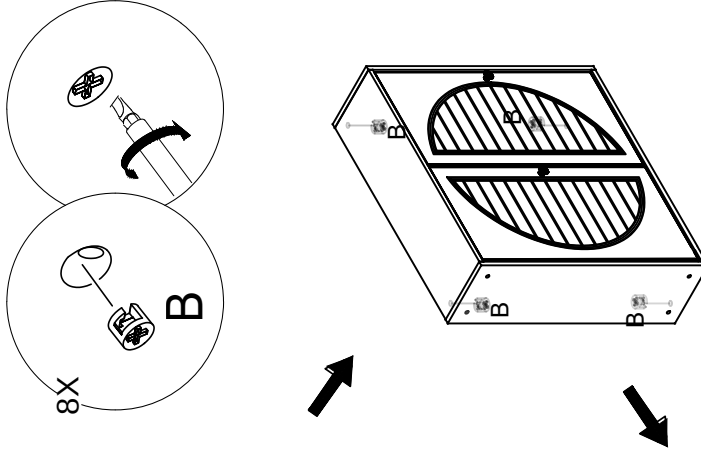

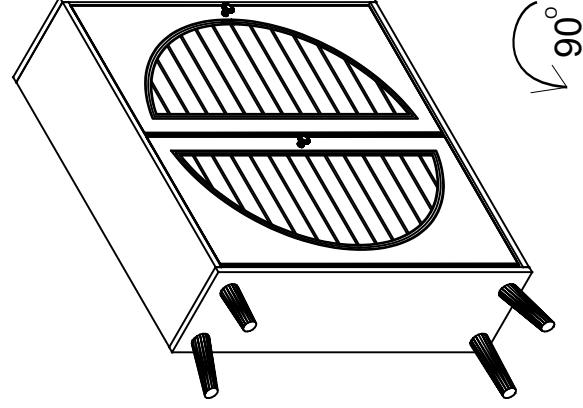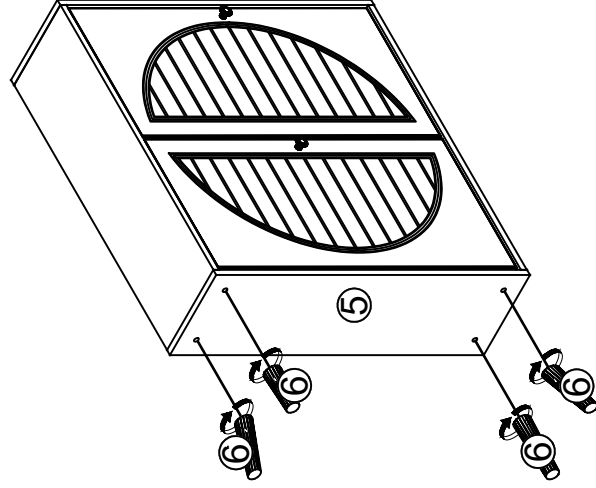


Drill 2 holes on the wall at the required position for anti-falling device installation.

WALL

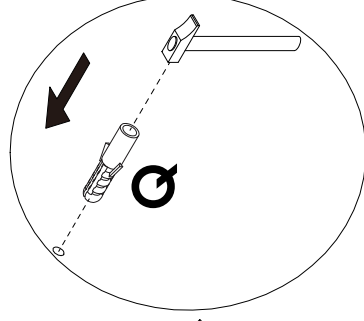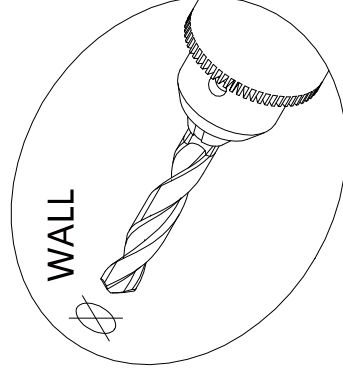


QX2

Move the cabinet to the required position, use the "O" long screw to fix the cabinet to the wall.

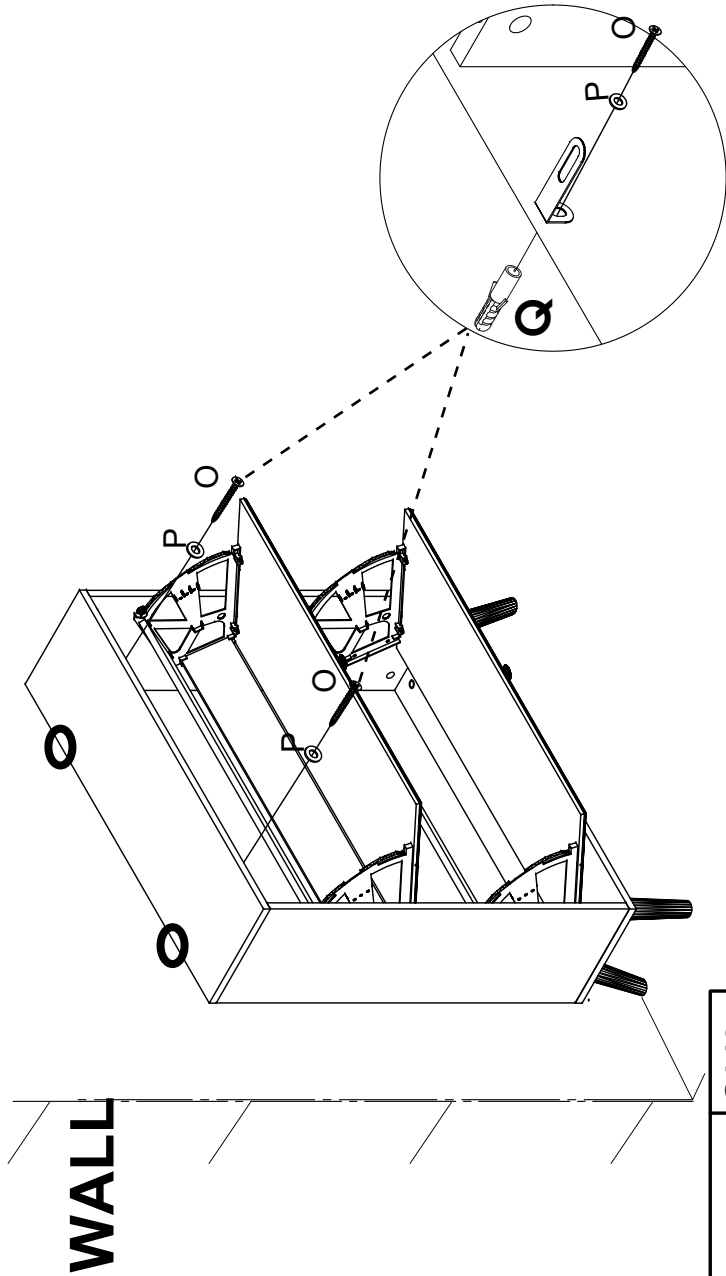

	OX2
	PX2

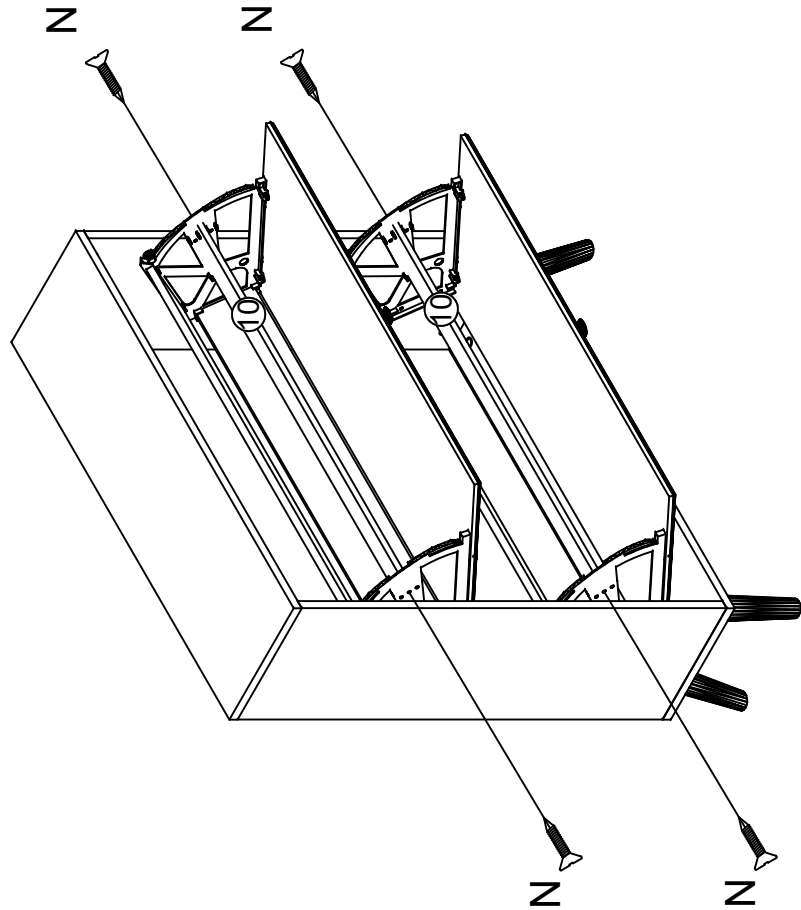

	NX4
---	-----