

# ASSEMBLY INSTRUCTION

MODEL: 1456





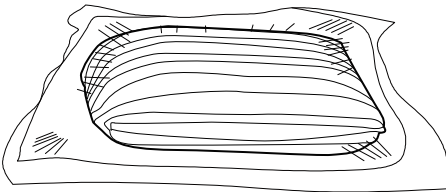
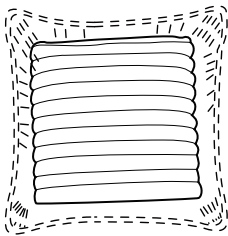












## Friendly Reminder:

1. As the cushions are all vacuum compressed, there will be some wrinkles. Please give your cushions up to 24 hours to reach its original size and the wrinkles will basically disappear.
2. Please read this manual carefully before any operation and keep it properly for future use.


# Components List
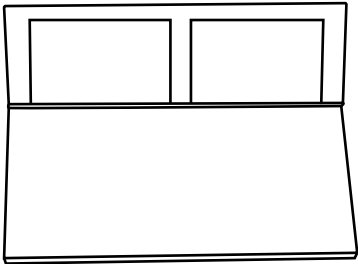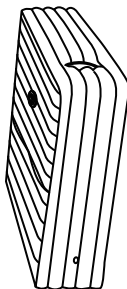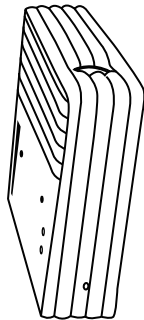
## Box A

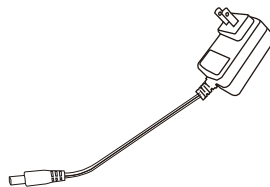			
Seat frame ① *1	Left Armrest ② *1	Right Armrest ③ *1	
			
Side Baffles ④ *2	Pillow ⑤	Backrest cushion ⑥	
			
Connector Angle Iron ⑦ *4	Feet ⑧ *8	Plastic washer ⑨ *8	
			
Power supply ⑩ *1	M6*16mm ① *16	M6*18mm ② *4	
			
M8*45mm ③ *2	M8*70mm ④ *4	M8 ⑤ *6	M6 ⑥ *1


# Components List

## Box B




Metal support rod

⑪ \*1




Front Baffle

⑫ \*1




Rear Baffle

⑬ \*1

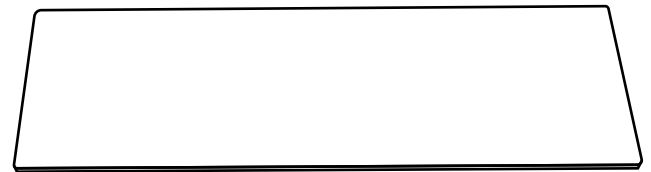








Seat plate

⑭ \*1

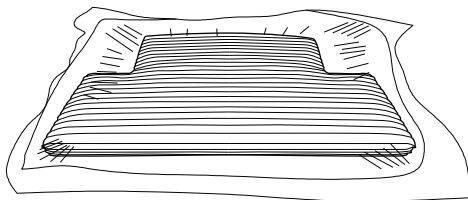


Seat cushion

⑮ \*1

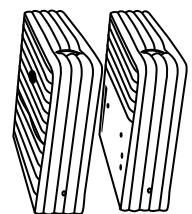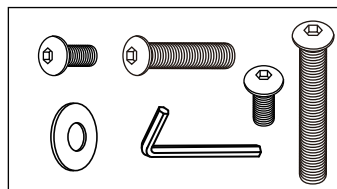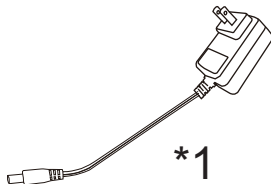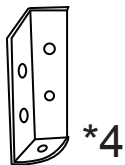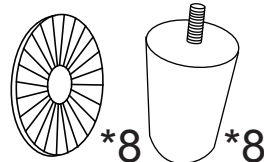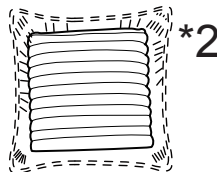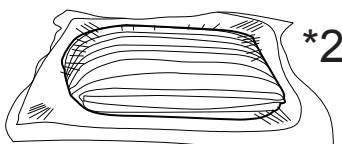


Armrest frame

Please unzip the bottom of the armrest and inspect all the product accessories.

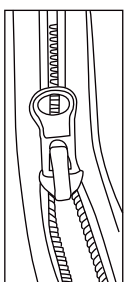


## Step 1

Please install the feet.

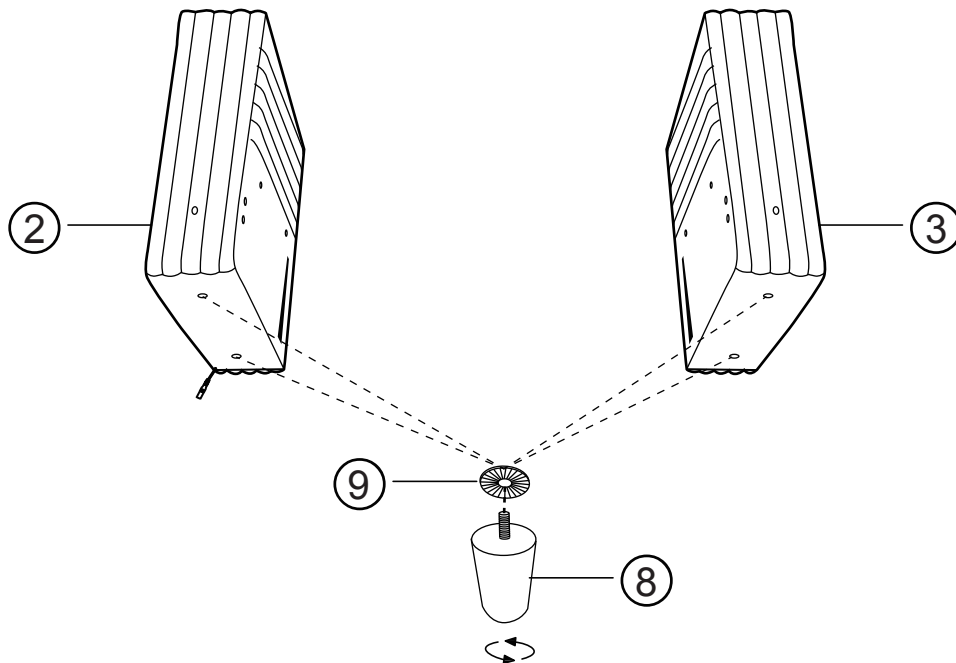


## Step 2

Connect the two armrests to the seat frame (first tighten the screws to 60%, then tighten all four screws to 100% at the same time), Stick the velcro from the seat frame to the armrests.

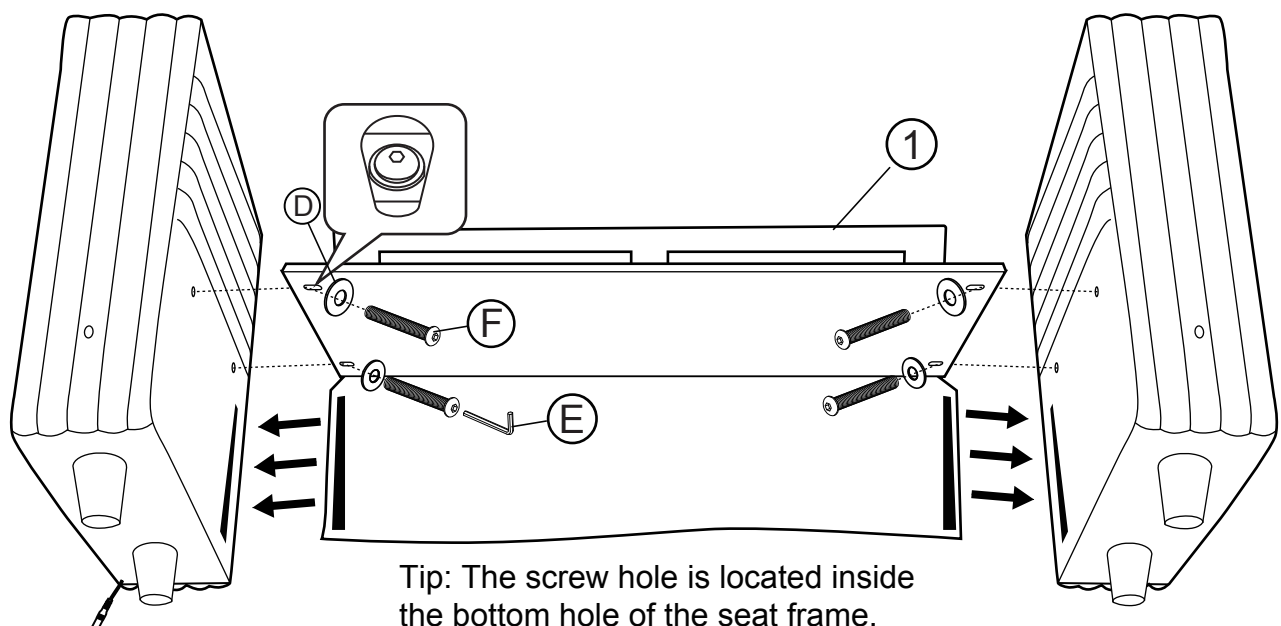


### Step 3

Install metal support rods between the Armrest on both sides.

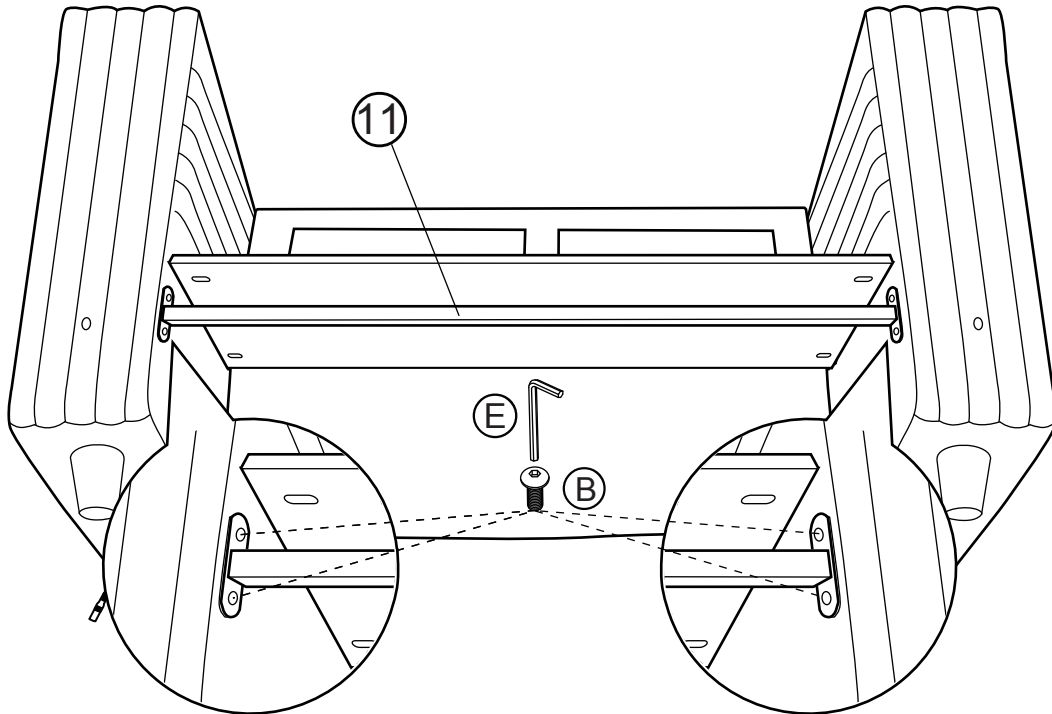

### Step 4


Connect the rear Baffle to both side Baffles using iron connector angle iron.

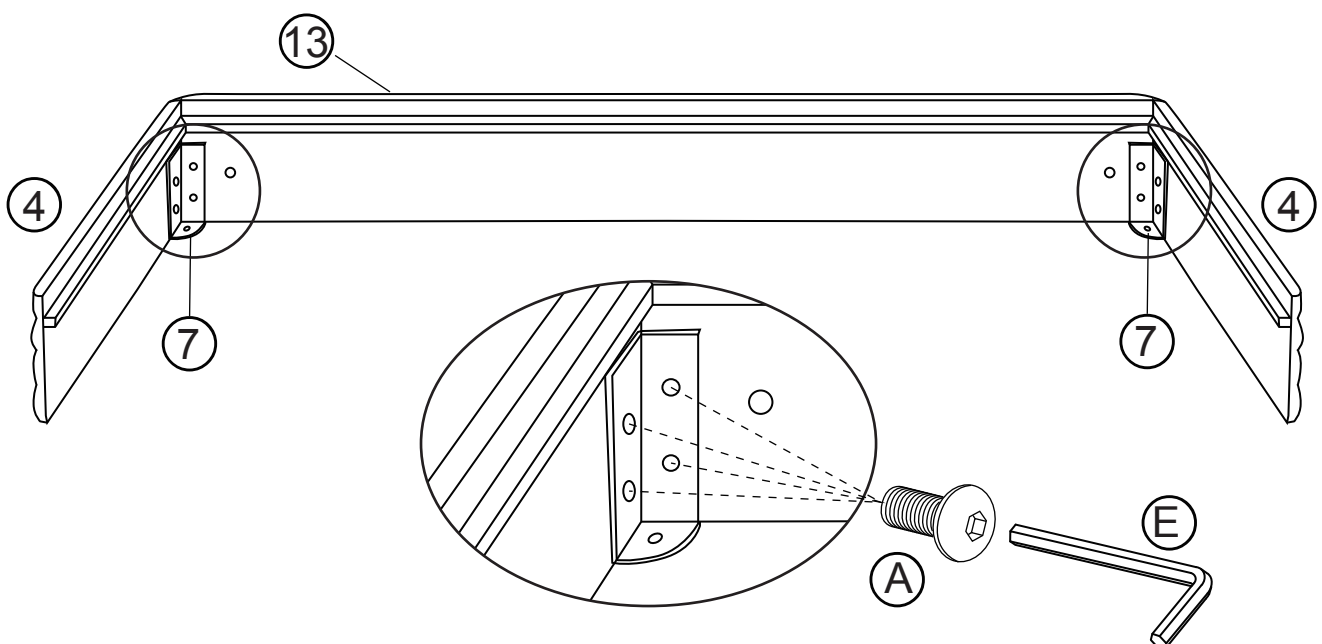

## Assembly Instruction


### Step 5

Connect the front panel with step 3.

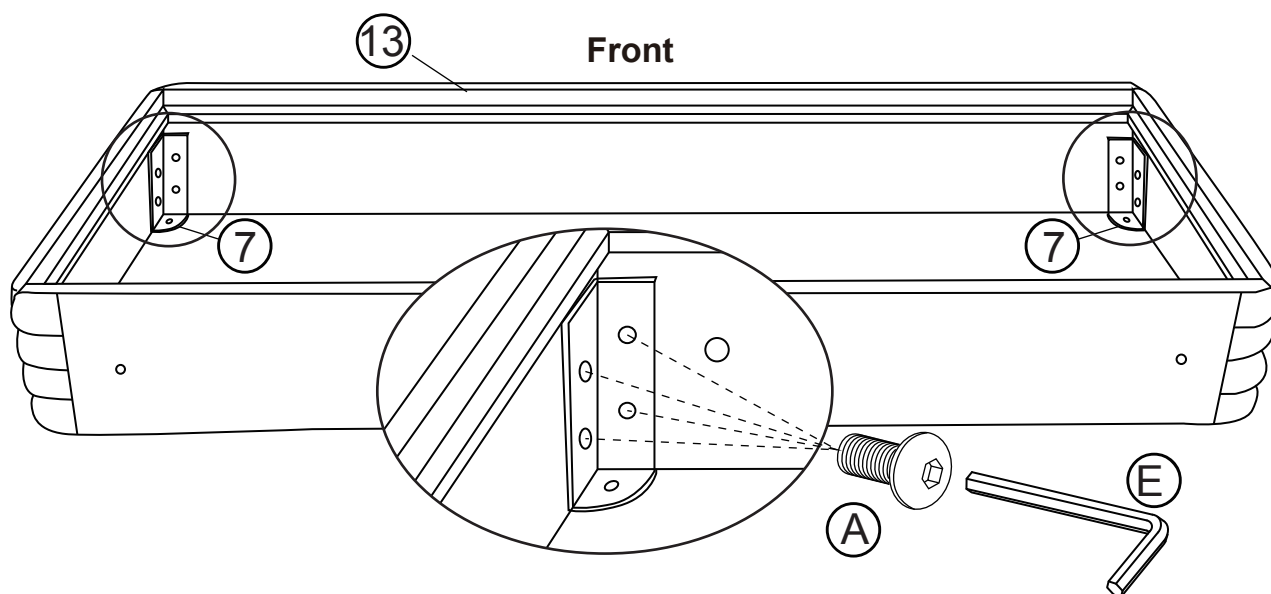

### Step 6


Please install the feet.

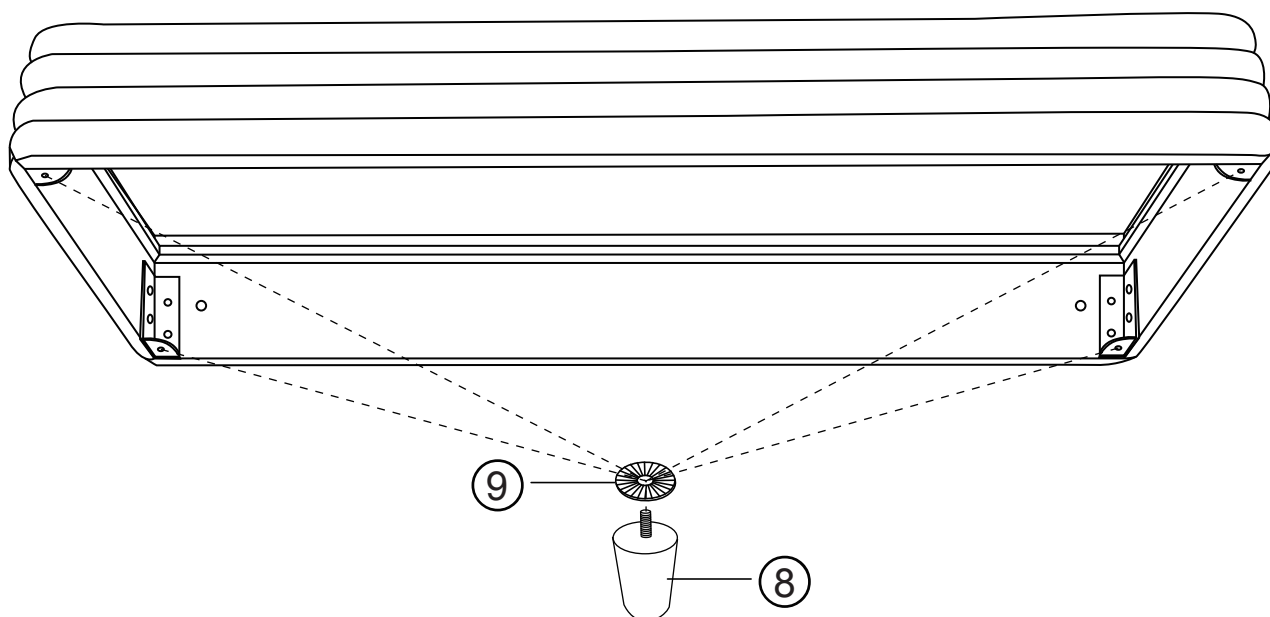

## Assembly Instruction


### Step 7

Connect the footstool to the armrest.

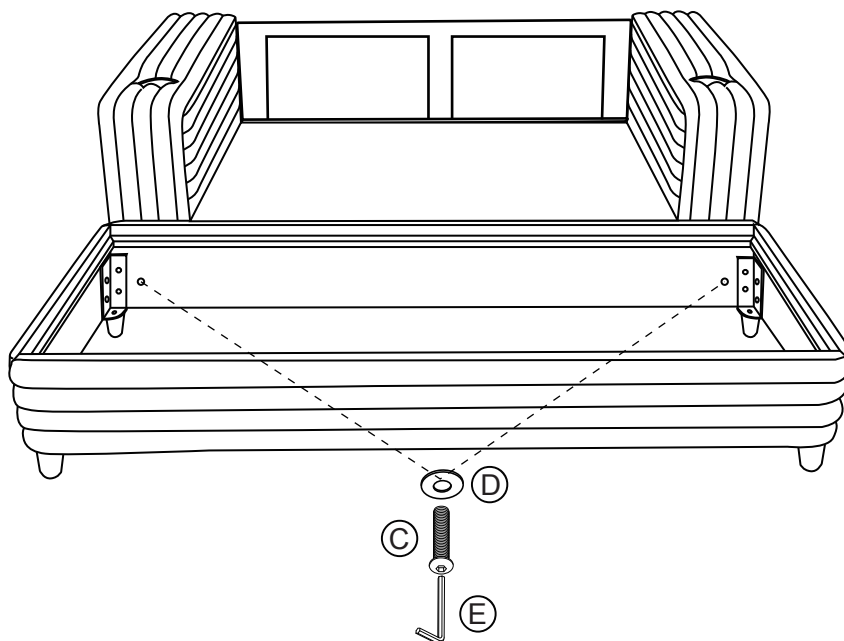

### Step 8


Place the seat plate into the footstool frame as shown in the picture.

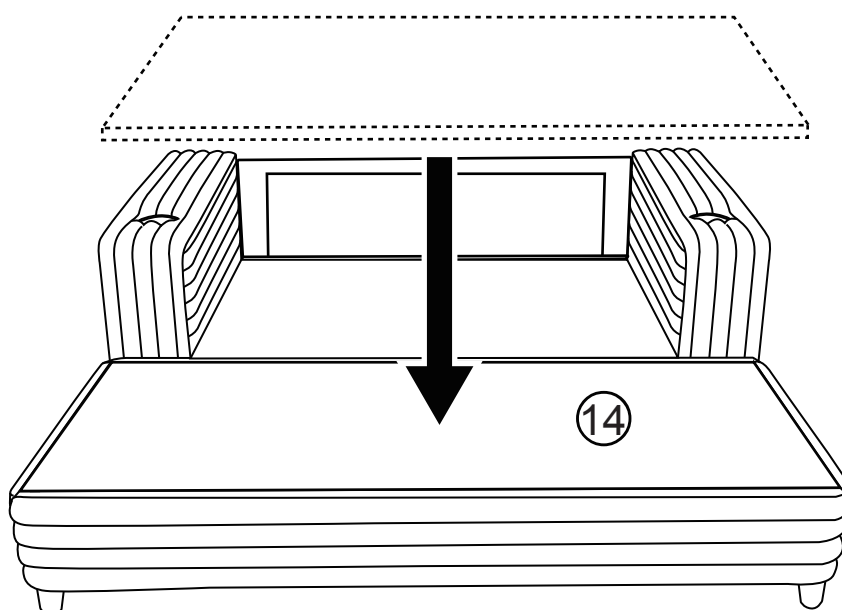

## Assembly Instruction

### Step 9


Open the compression bag and remove the soft bag.

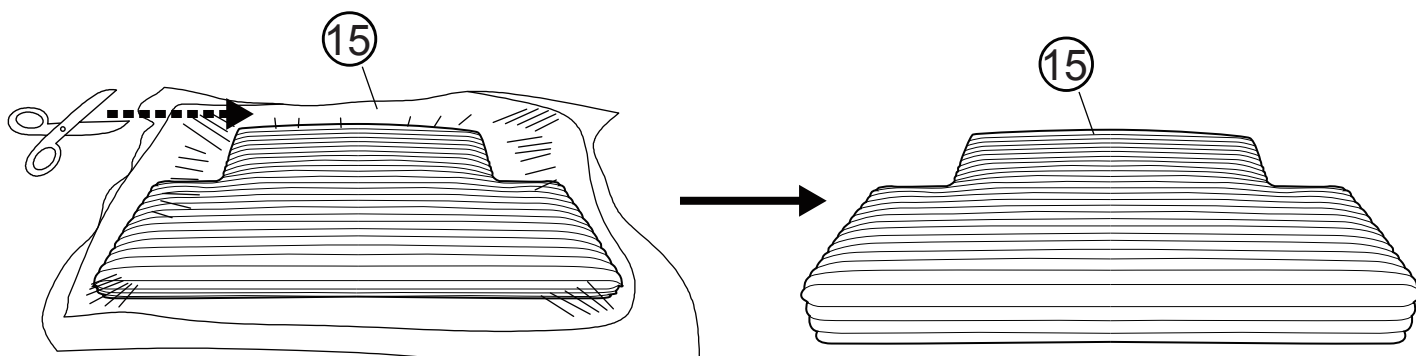

\* NOTE: The seat cushion you received has been vacuum-packed. Open the plastic bag, take out the inner seat cushion, let it breathe to the normal state.

### Step 10

Place the seat cushion on the seat frame.

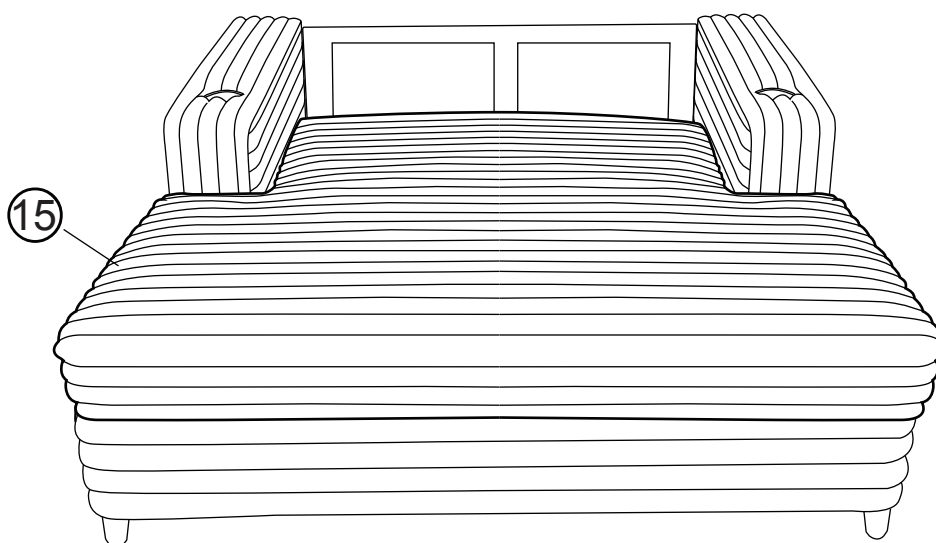




## Assembly Instruction

### Step 11


Open the compression bag and remove the soft bag.

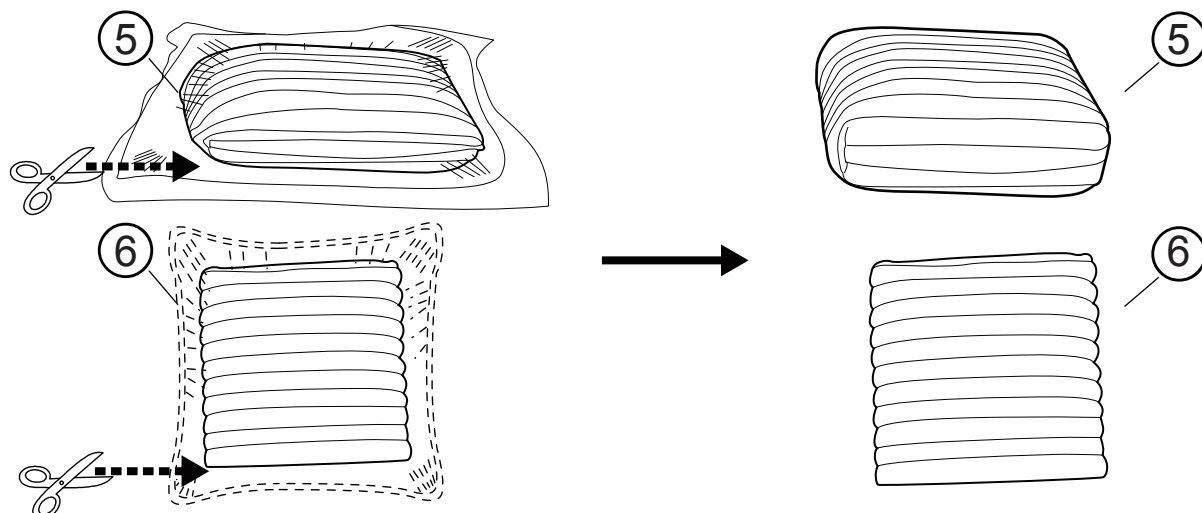

\* NOTE: The cushion you received has been vacuum-packed. Open the plastic bag, take out the inner cushion, let it breathe to the normal state.


### Step 12

Place backrest cushion and pillow.

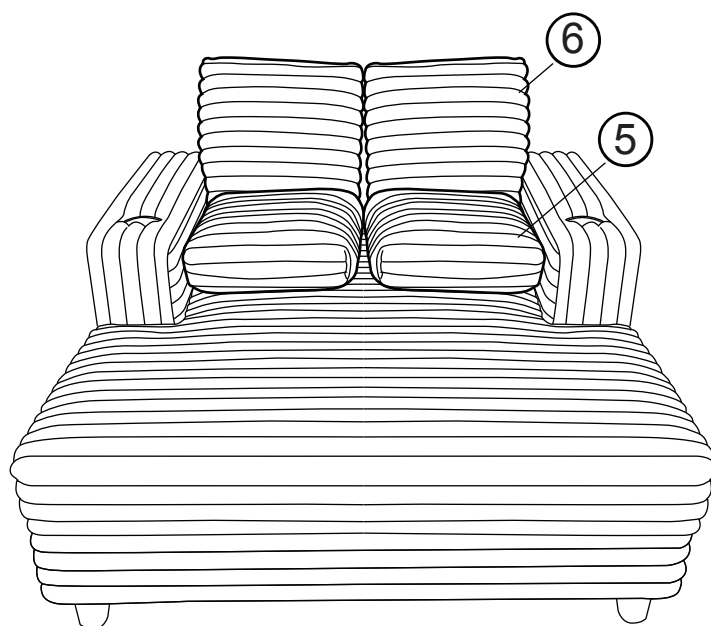


## Assembly Instruction

### Step 13 Connecting the power cord.

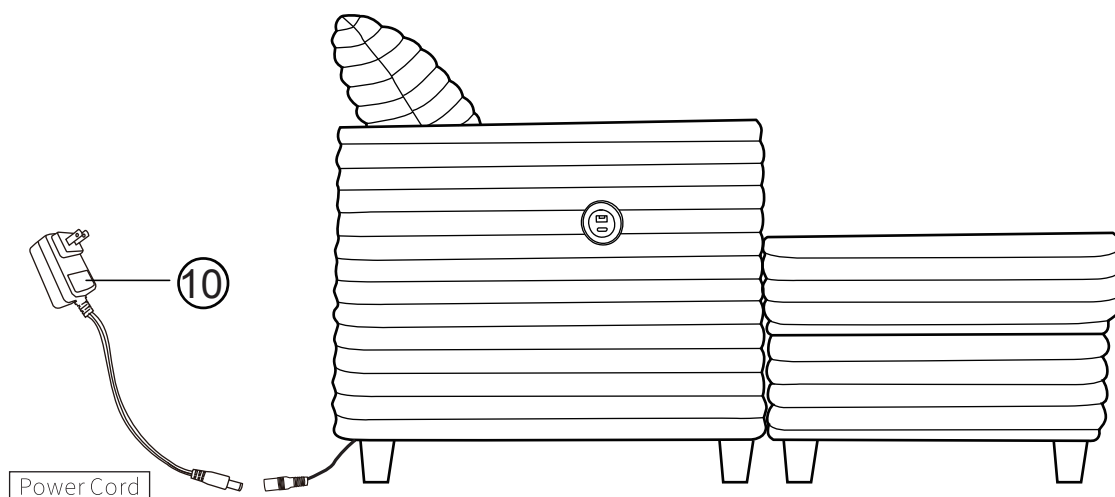

### Step 14 Assembly Done.

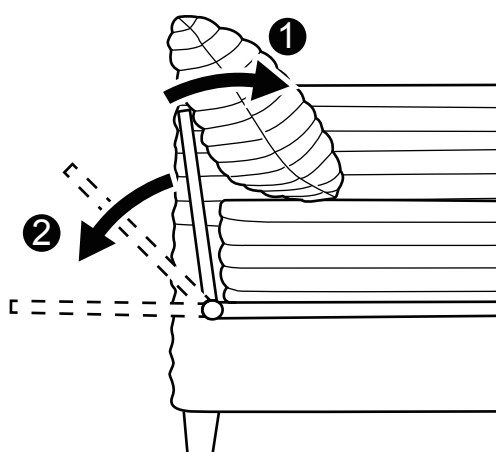

Tip: The backrest can be adjusted to three different angles. First, pull the backrest forward, then push it backward to adjust the angle to the desired position.

