



Assembly Instructions

Caution : You must read this before you proceed


Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.


FULL BED

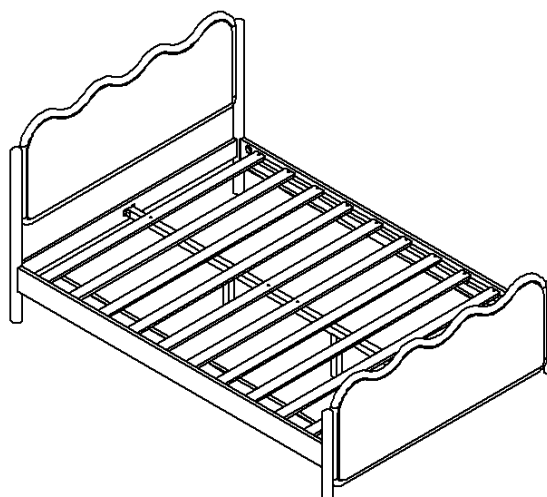


REQUIRED
ASSEMBLY TOOLS



NO POWER
TOOLS NEEDED




2 PERSON
ASSEMBLY

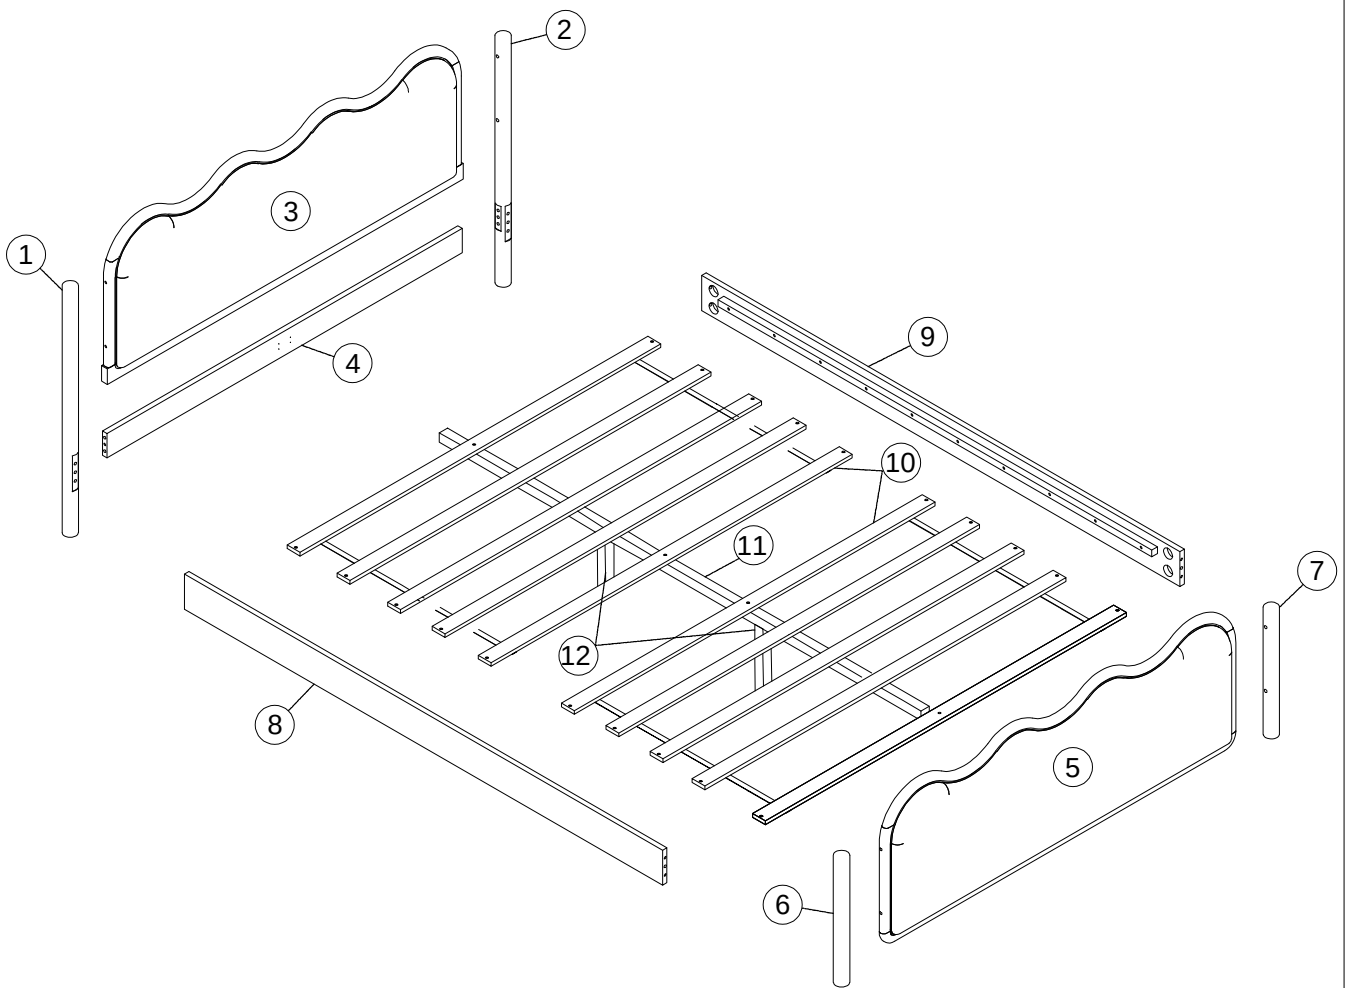

PARTS
N757P349563W
BOX:2/2

Check that you've received all parts listed below

① (1pc)




Leg-left headboard

② (1pc)




Leg-right headboard

④ (1pc)

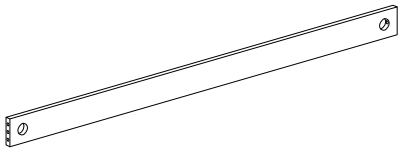

Headboard crossbar

⑥ (1pc)




left leg footboard

⑦ (1pc)




right leg footboard

⑧ (1pc)




Left Side panel

⑨ (1pc)



Right Side panel

⑩ (2pcs)

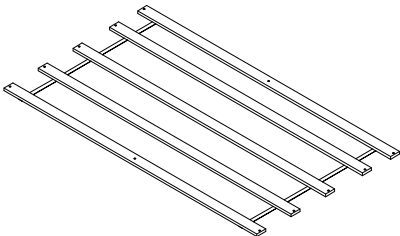

Slats

⑪ 1(pc)



Center rail

⑫ 2(pcs)



Center support leg


HARDWARE




PARTS
N757P349564W
BOX:1/2

Check that you've received all parts listed below


③ (1pc)

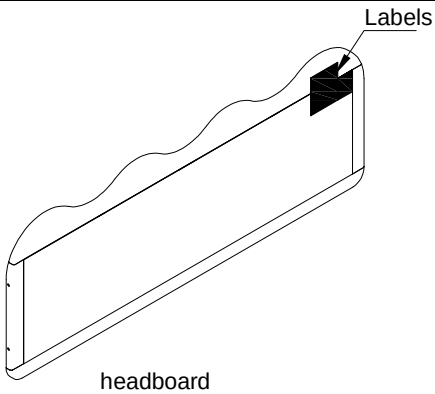

⑤ (1pc)

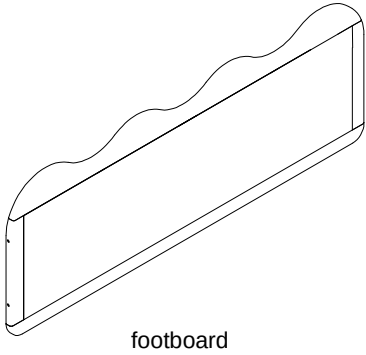


HARDWARE LIST

Label	Picture	Description	Q.ty
A		Vis Ø 4 x 30mm	24+1
B		Vis Ø 4 x 15mm	12+1
C		Threaded Rod Ø5/16"x70mm)	10+1
D		Bolt Ø5/16" x 70mm	8+1
E		Screws Ø6.3x80mm	2+1
F		Allen wrench	1
G		Wooden dowel Ø10 x 30 mm	8+1
H		Metal link (66x35x27mm)	2
I		Leveler Ø1/4 x 25 mm	2
J		Hex nut (M8x6mm)	10+1
K		Half moon washer (27x4x7mm)	10+1
L		Open wrench (90x12mm)	1
M		Screwdriver (Not provided)	1


Hardware :Each of the above hardware including extra 1 pc

STEP 1:

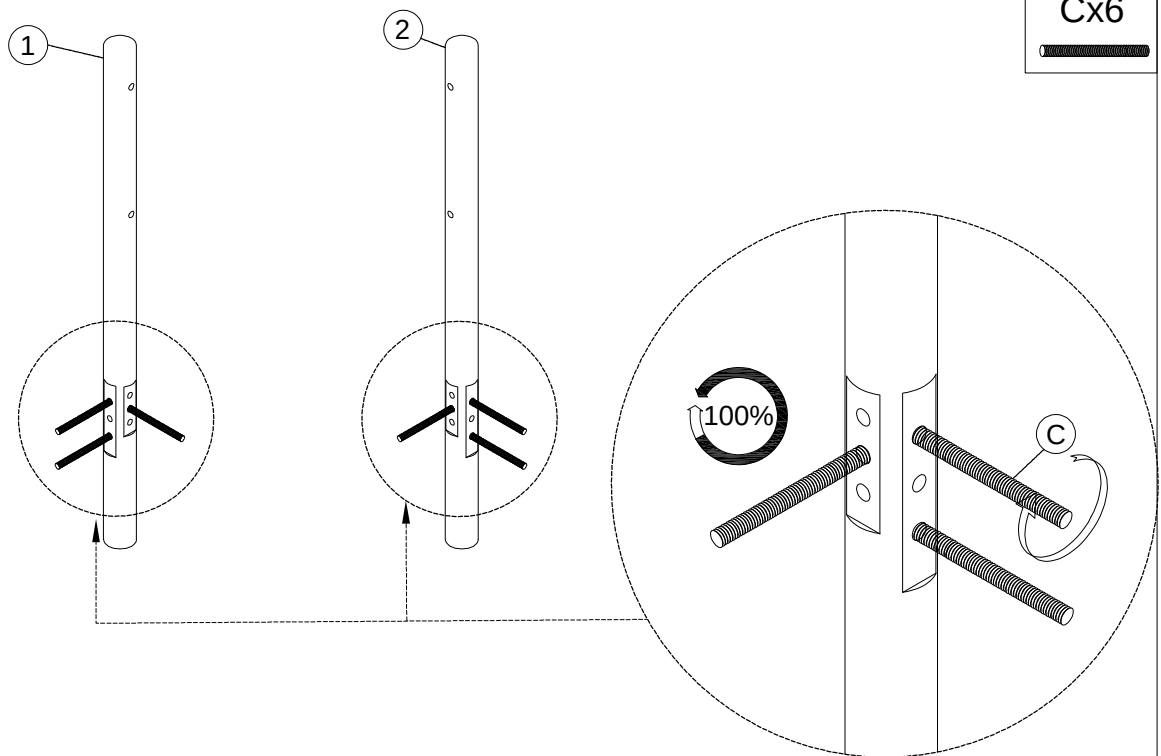

Attach the Threaded Rod (C) to the Leg-left headboard(1) and Leg-right headboard(2) as shown in the illustration.

STEP 2:

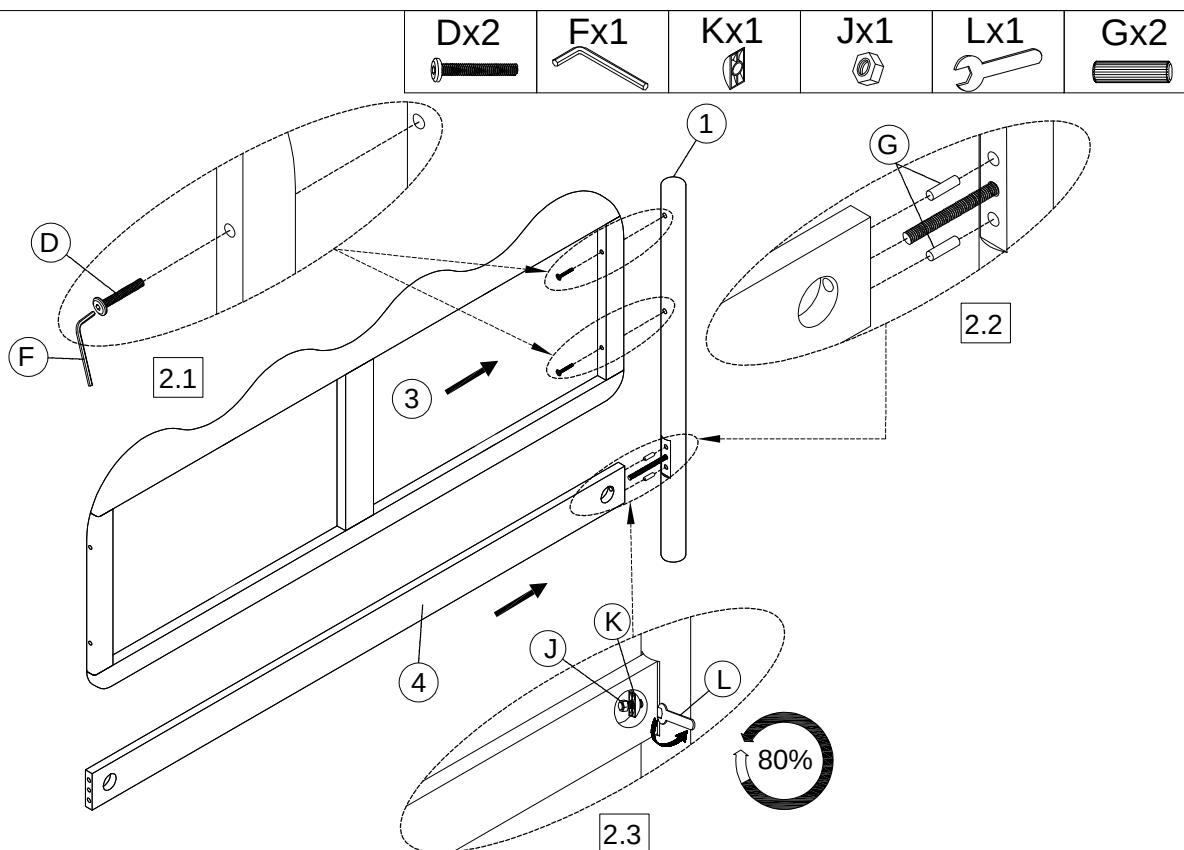


2.1: Attach the headboard (3) to the Leg-left headboard (1) using Bolt (D) and Allen wrench (F) as shown in the picture.

2.2: Attach the headboard crossbar (4) to the Leg-left headboard (1) using the wooden dowel (G) as shown in the image.

2.3: After completing step 2.2, assemble the Half moon washer (K) and Hex nut (J) using an Open wrench (L) as shown in the image.

STEP 3:

Dx2	Fx1	Kx1	Jx1	Lx1	Gx2
					

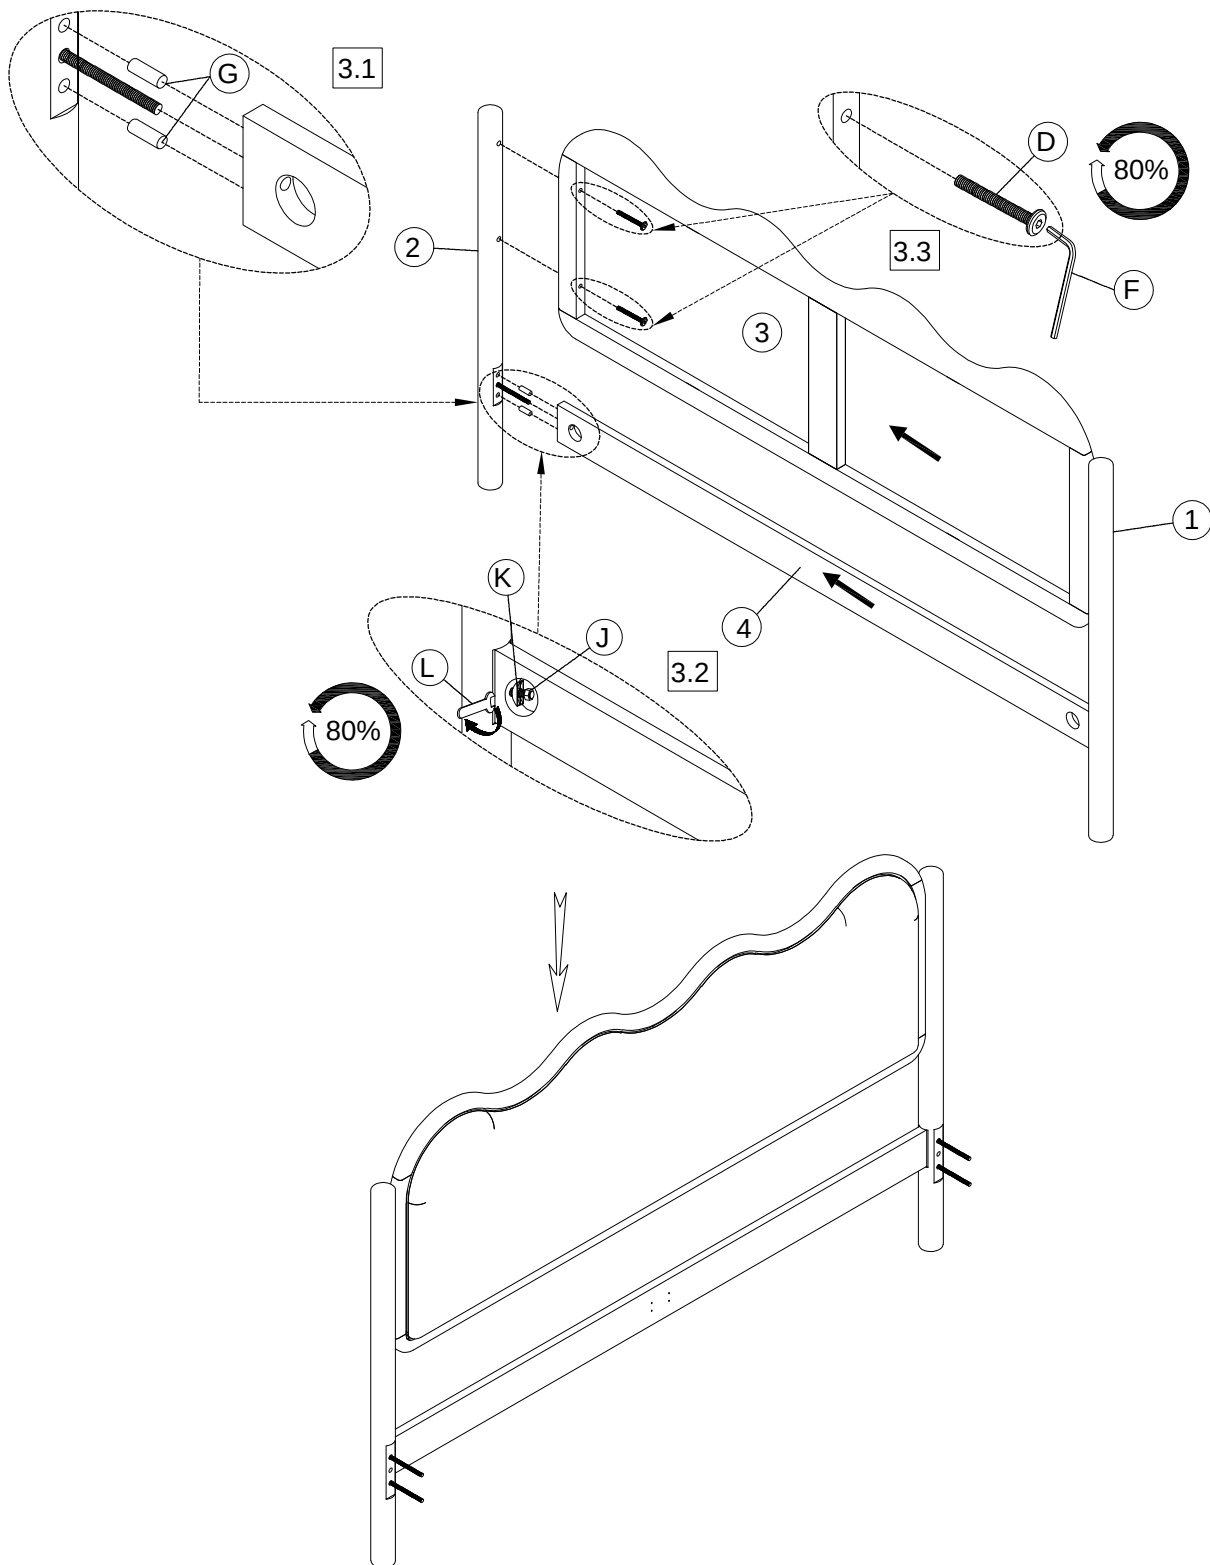


Attach the cluster in step 2 to the right leg of the Leg-right headboard (2).

3.1: Attach the headboard crossbar (4) to the Leg-right headboard (2) using the wooden dowel (G) as shown in the image.

3.2: After step 3.1, assemble the Half moon washer (K) and Hex nut (J) using an Open wrench (L) as shown in the image.


3.3 Attach the headboard (3) to the right leg of the Leg-right headboard (2) using Bolt (D) and Allen wrench (F) as shown in the picture.

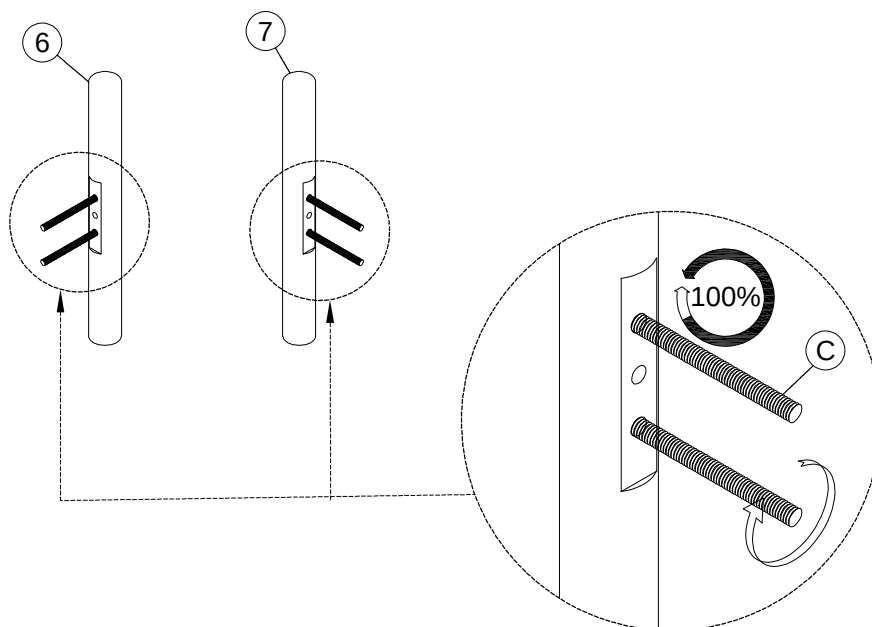STEP 4:

Attach the Threaded Rod (C) to the left leg footboard (6) and the right leg footboard (7) as shown in the illustration.

Dx4

Fx1

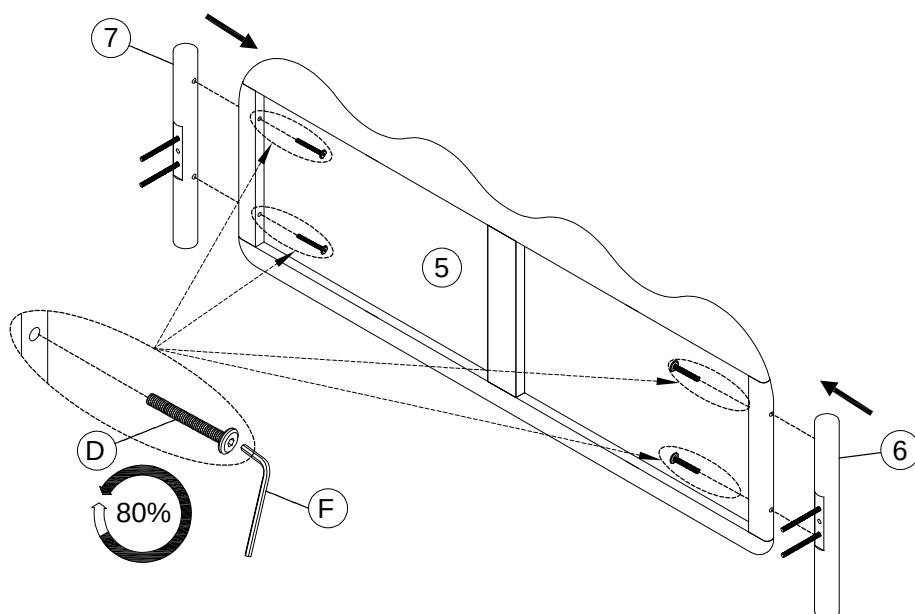STEP 5:

Attach the footboard (5) to the left leg footboard (6) and the right leg footboard (7) using Bolt (D) with Allen wrench (F) as shown in the image.

STEP 6:

Gx2




Kx4




Jx4



Lx1

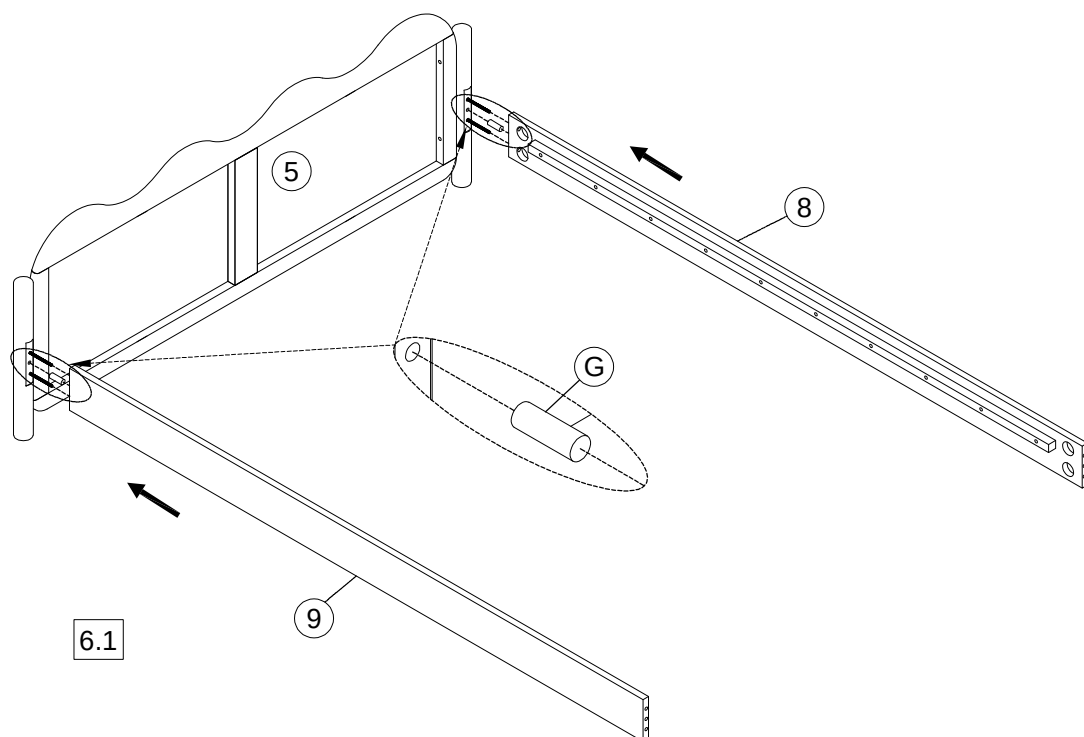

6.1

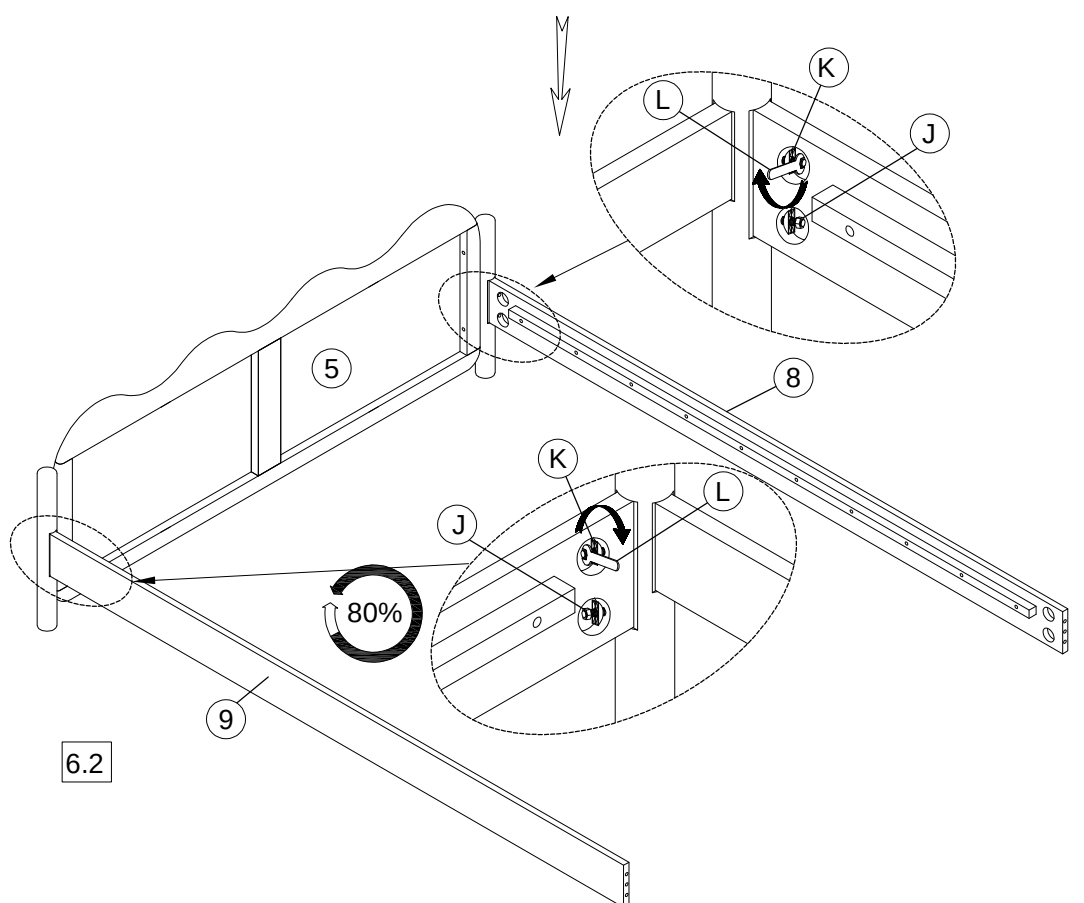


6.2

6.1: Assemble the frame in step 5 into the Left Side panel (8) and Right Side panel (9) using Wooden dowel (G) as shown in the image.

6.2: After completing step 6.1, connect the assembly using the Half moon washer (K), Hex nut (J), and Open wrench (L) as shown in the image.




STEP 7:

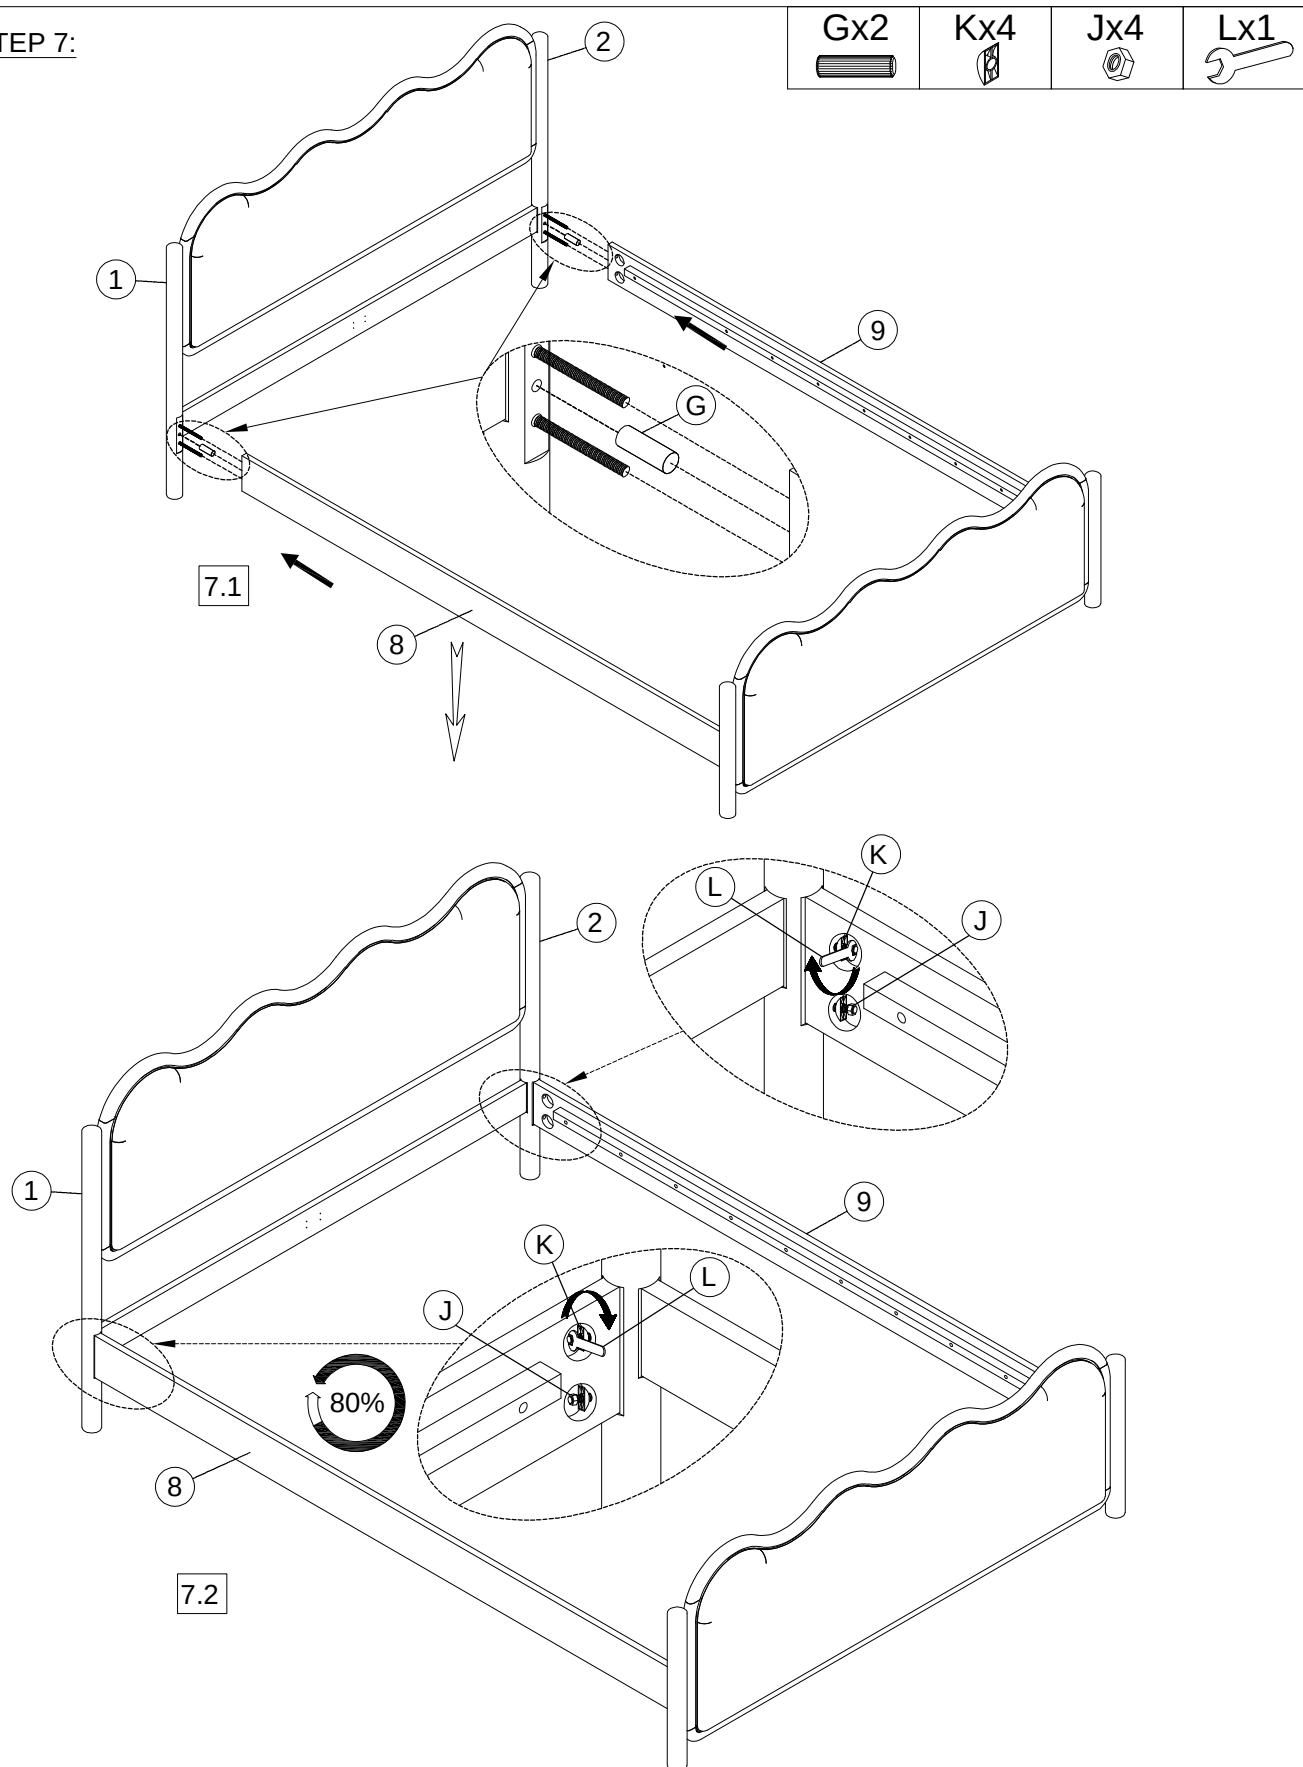

7.1: After completing, assemble the group from step 6 with the group from step 3 using the wooden dowel (G) as shown in the picture.

7.2: After completing step 7.1, we connect the assembly using the Half Moon Washer (K), Hex Nut (J), and Open Wrench (L) as shown in the image.



STEP 8:

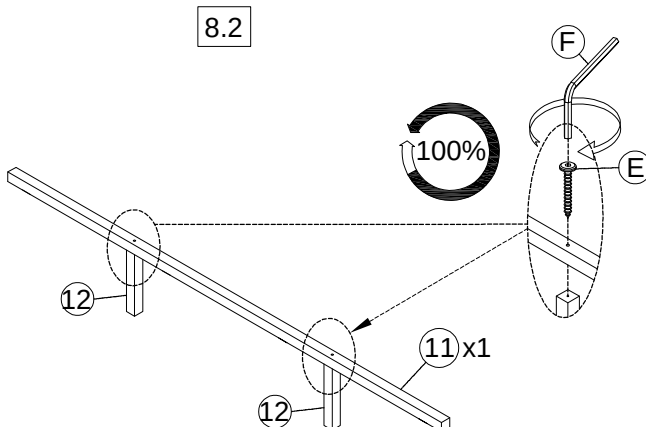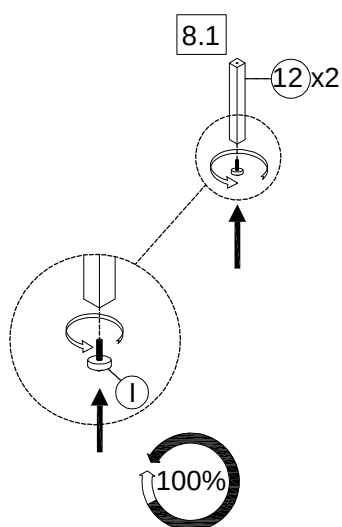

8.1: Attach Leveler (I) to Center support leg (12) as shown in the picture.


8.2: Attach the Center support leg (12) to the center rail (11) using screws (E) and the Allen wrench (F) as shown in the image.

STEP 9:

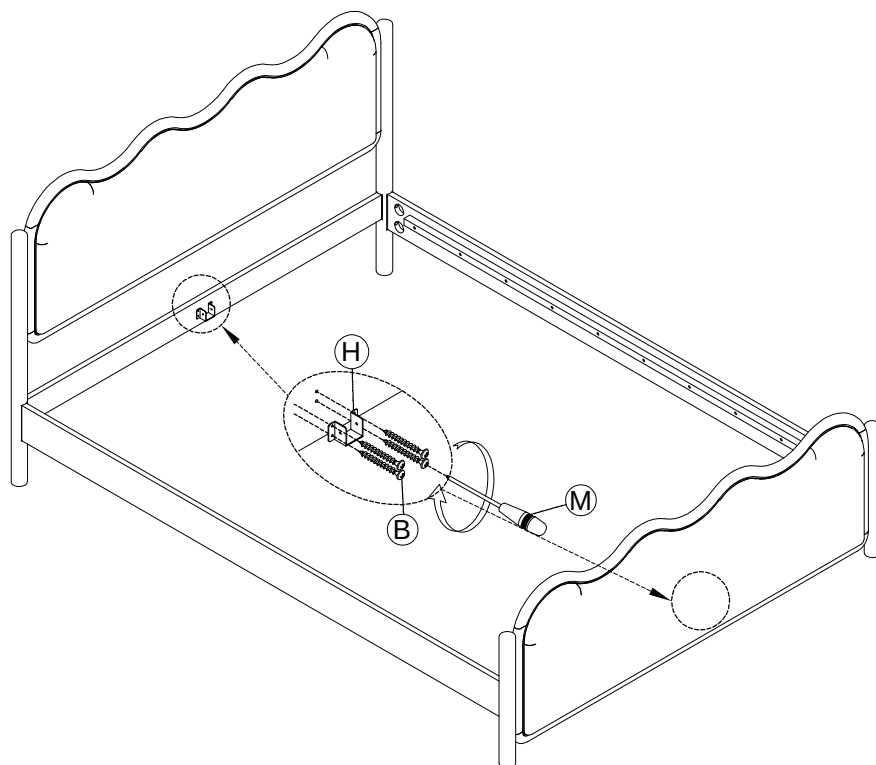

-Attach the Metal link (H) to the headboard using Vis Ø4x15mm (B) and Screwdriver (M) through the drilled hole positions as shown in the image.


STEP 10:

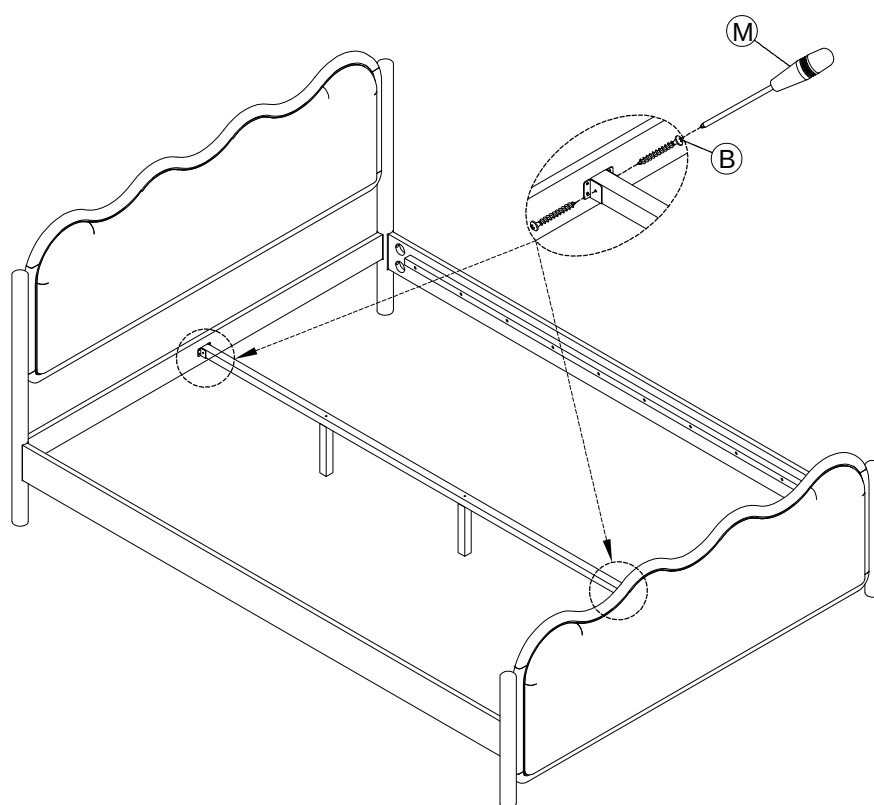

Bx4




Mx1




-Attach the assembly completed in step 8 to the Metal link(H) using Vis Ø4x15mm (B) and Screwdriver (M) as shown in the image.

STEP 11:

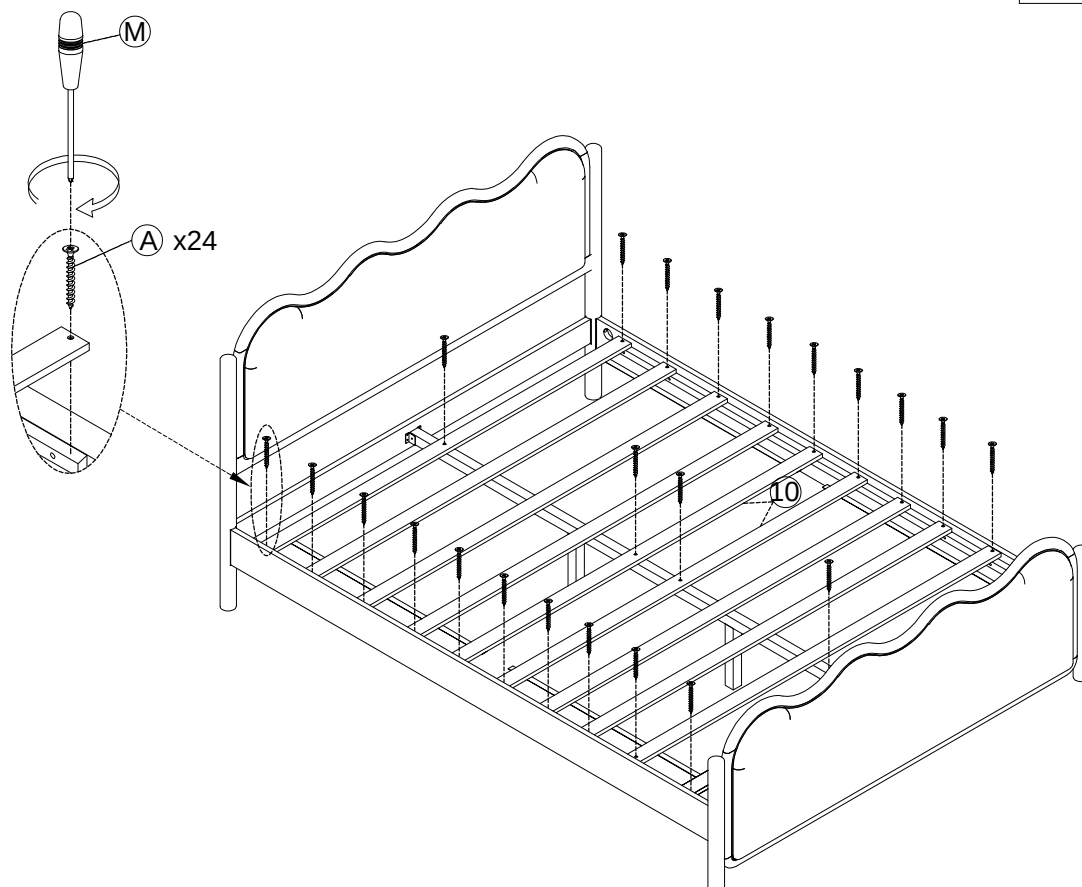

Ax24




Mx1



-Attach the Slats (10) to the bed frame as shown using Vis Ø4x30mm (A) and Screwdriver (M) as illustrated.

Finish

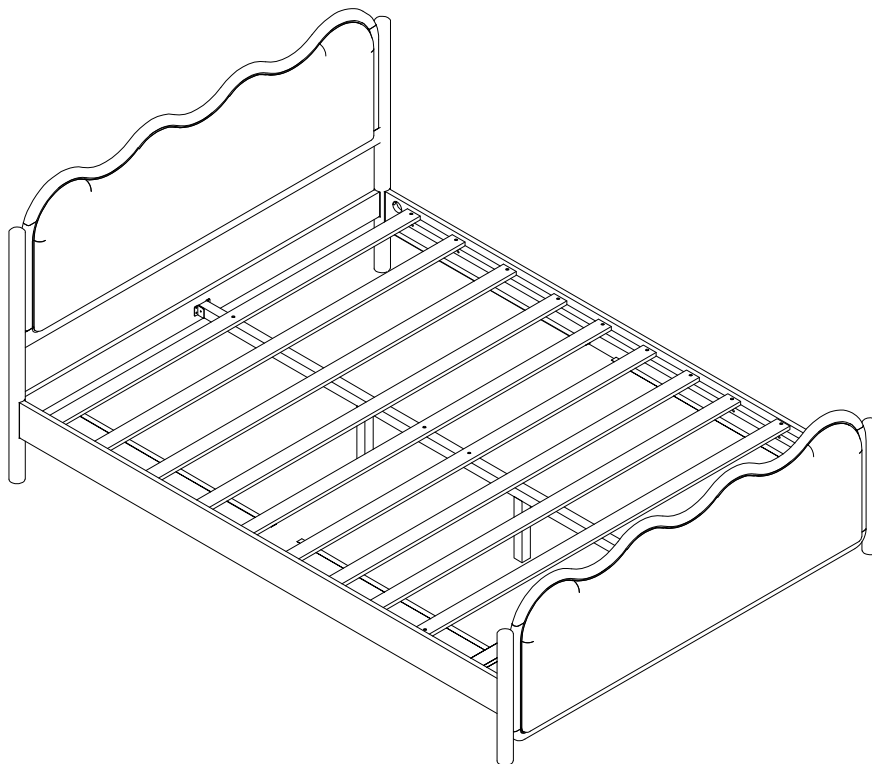

Your Bed is ready for use.
This Bed can only be used on a flat,level surface.

Place the Bed on a LEVEL SURFACE.
Inspect it and make sure all parts are adequately connected.
Don't push too hard,shake on the bed.
This would help to align all the parts at all the joint areas.
CAUTION 1:When tightening these screws,tighten sequentially.
DO NOT tighten any screw fully and then towards the next one.
This would cause the frame to warp.
If there is still wobbles,loosen the screws and execute this same process.DO NOT
tighten any screw fully and then towards the next one.
WARNING!! IF BED IS NOT STABLE,IT COULD LEAD TO DAMAGING THE PRODUCT.
Ensure all screws are fully locked into position.