


# Sunroom

## Instruction manual

size:422Lx292Wx222/312Hcm

---

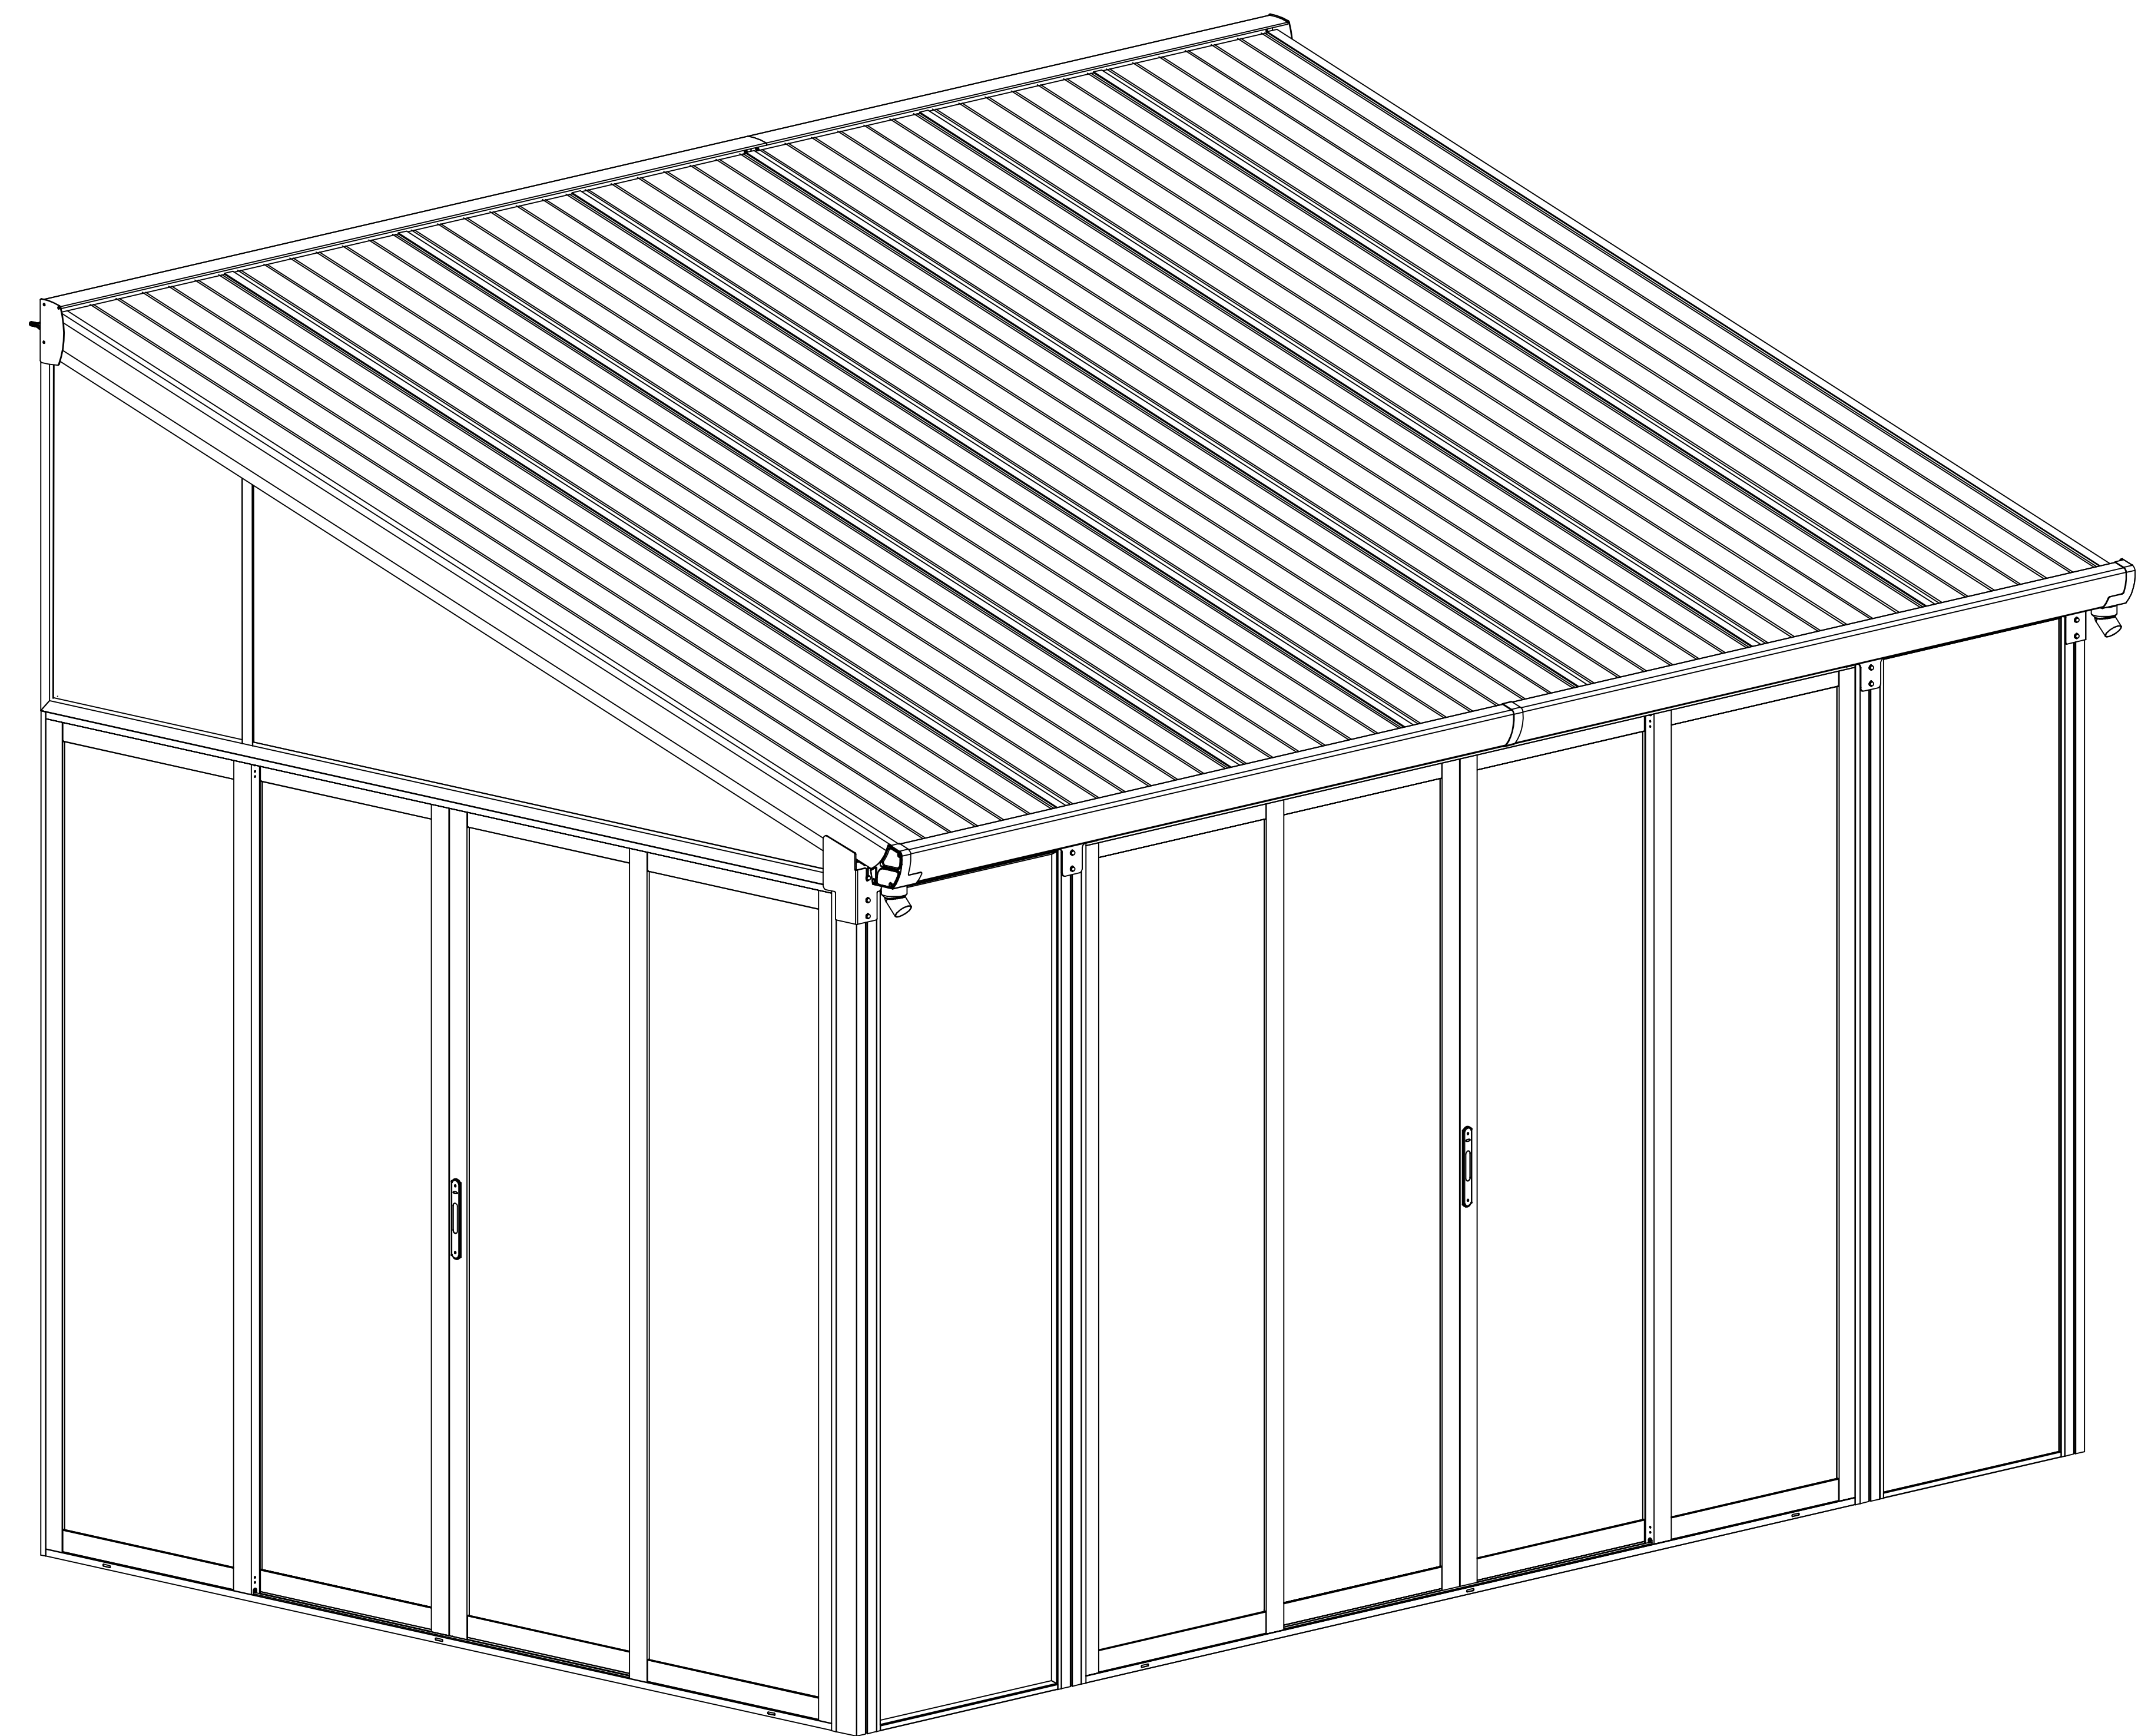

**WG-QA7**

### **IMPORTANT**

You must read this instruction carefully before you start to assemble this .Please ensure that you find all parts in the carton box in the correct type and quantity as mentioned in the list illustrated in every page accordingly.

Please carry out the steps in order according to the instruction.

Do not tighten the steps in until completing the assembly of the polycarbonate panels.

Keep this instruction in a safe place for future reference



**SAFETY ADVICE**

We strongly recommend the use of work gloves during assembly.

Do not attempt to assemble the Sunroom in windy or wet conditions,

Do not touch overhead power cables with the aluminum profiles.

Always wear shoes and safety goggles when working with extruded aluminum.

Dispose of all plastic bags safely-keep them out of reach of small children.

The Sunroom must be positioned and fixed on a flat level surface.

Do not lean against or push the Sunroom during construction.

Keep children away from the assemble area.

Do not position your Sunroom in an area exposed to excessive wind.

Do not attempt to assemble this Sunroom if you are tired, have taken drugs or alcohol or if you are prone to dizzy spells.

If using a step ladder or power tools, pls follow the manufacturer's safety advice.

Hot items such as recently used grills, blowtorches etc.must not be stored in the Sunroom.

Ensure there are no hidden pipes or cables in the ground before inserting the pegs.

**GENERAL ADVICE**

This is a multi-part assembly, pls plan your time carefully.

Selecting a site-choose a sunny level position away from overhanging trees.

If you are fixing your Sunroom directly to a solid concrete foundation, pls use the predrilled holes in the metal base supplied.

The component parts should be checked and laid out close to hand.

Keep all small parts(screws etc)in a bowl so they do not get lost.

Keep roof clear from snow and leaves.

**CARE & MAINTENANCE**

When your Sunroom needs cleaning, use a mild detergent solution and risen with cool clean water.

Do NOT use acetone, abrasive cleaners or other special detergents to clean the clear panels.

**TOOLS & EQUIPMENT REQUIRED**


**Protective Equipment:**

- 1.Helmet
- 2.Glove
- 3.Long Sleeve Cotton Overalls
- 4.Emergency Medicine Cabinet
- 5.Eye Shield




**Measure (metric):**

- 1.The Tape (5 m)
- 2.Angle Square
- 3.Level Meter

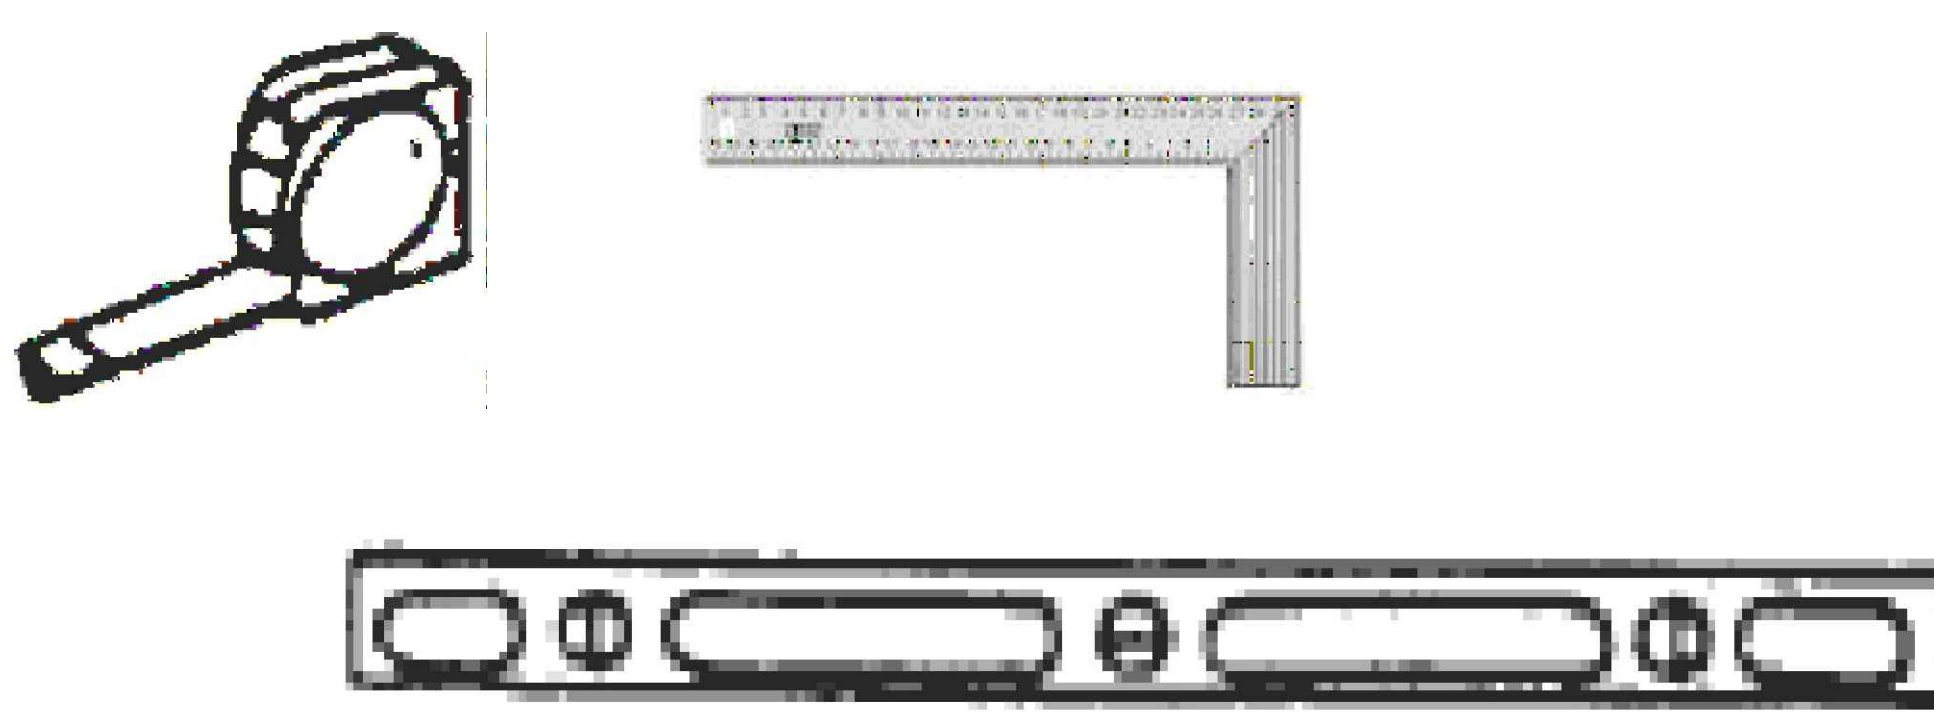

**Installation Tool:**

- 1.Triangle Stairs≈1.5m Height
- 2.Spanner 10mm (Ratchet Wrench is better)
- 3.Spanner 14mm (Install the expansion screw)
- 4.Hexagon wrench 5mm
- 5.Electric screwdriver+5mm Hexagon wrench (suggest)
- 6.Wooden Mallet
- 7.Marking Pen
- 8.Silicon
- 9.Percussion bit(8mm and 10mm)
- 10.Knife
- 11.Phillips screwdriver

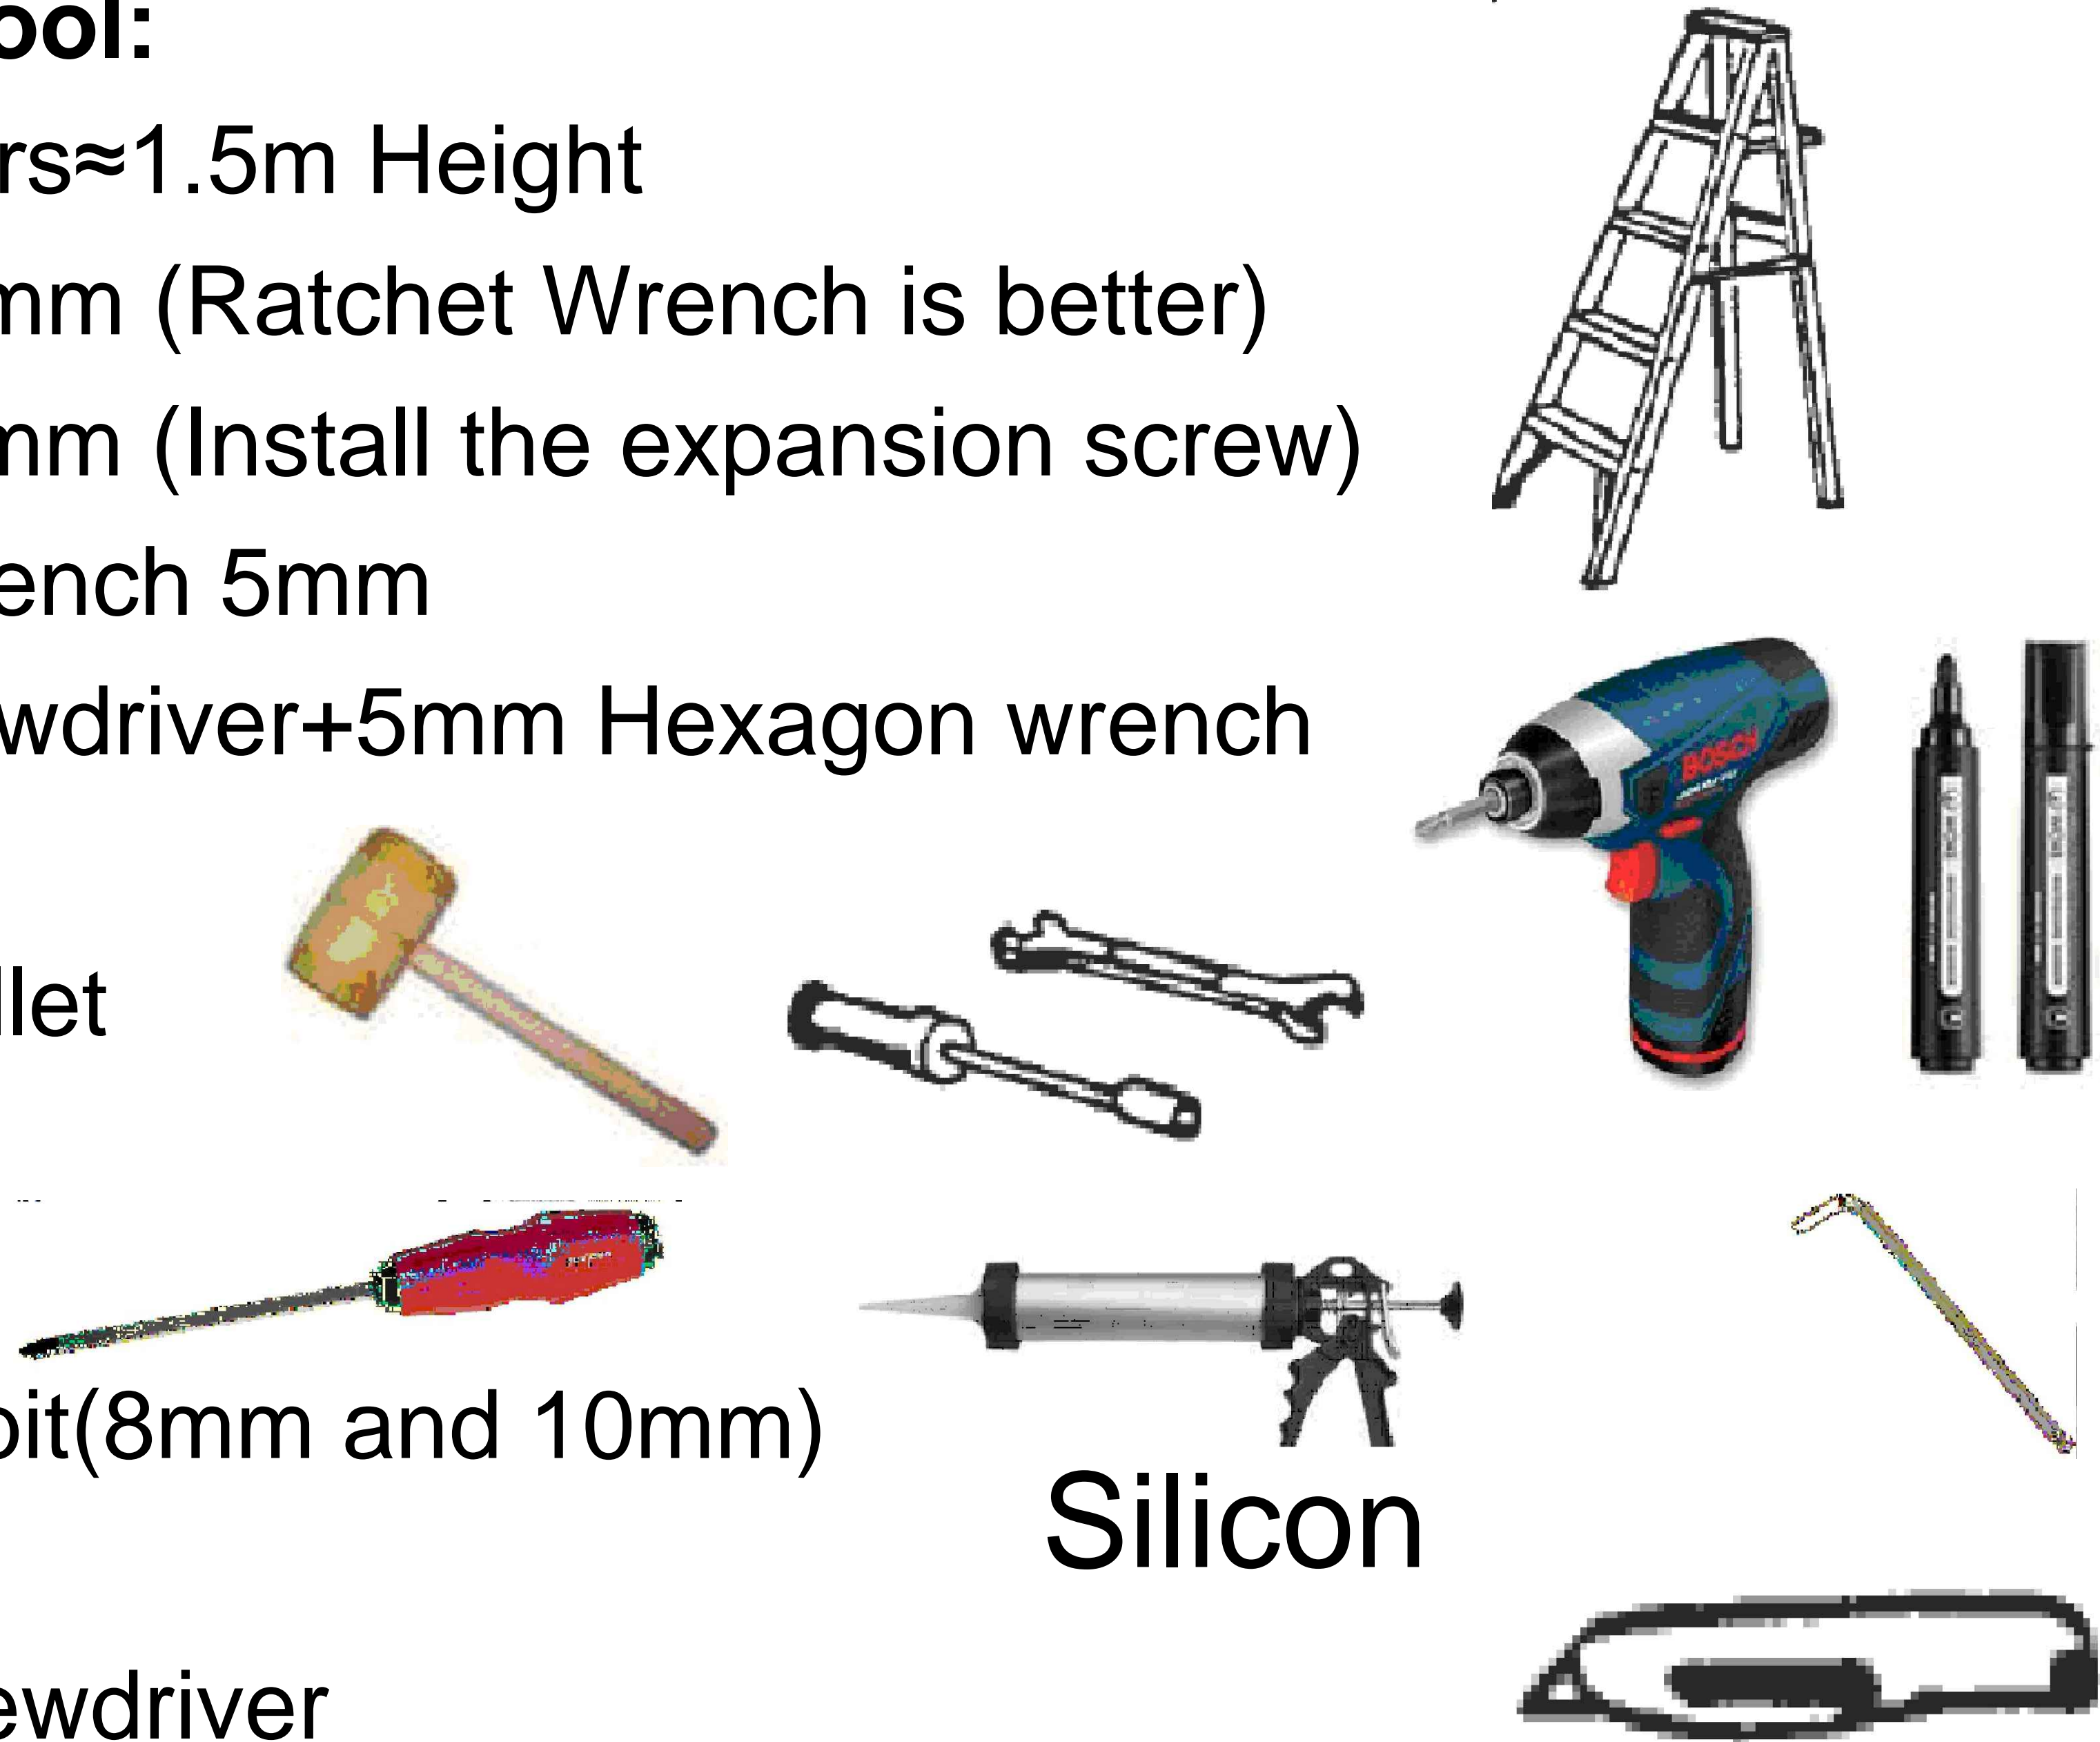




# PRODUCT SIZE









Make sure a good installation location






# OTHER CAUTIONS







- 1. 3 people required, one is for measuring & taking marks to ensure the installation dimension ,the second person is responsible for the installation and the last one do as assistant and assure the safety.
- 2. Firstly, make sure the sunroom is strong enough for installation.
- 3. High-power electric tools are required, ensure the normal work of them and highly pay attention to electric safety.
- 4. Be careful when using the kind of blunt tools, like hammer.
- 5. Wearing long sleeve cotton overalls,gloves and helmet during installation and wear safety glasses when using power tools .
- 6.Don't look up when Working in high position, or the drop screws may hurt your eyes and suffocation causing accidentally when falling into your mouth.
- 7. No climbing, No standing on the sunroom to avoid falling down.
- 8. If injuries immediately, using the first-aid kit to stop bleeding, bind up, In case of emergency, taken immediately to a nearby medical institutions

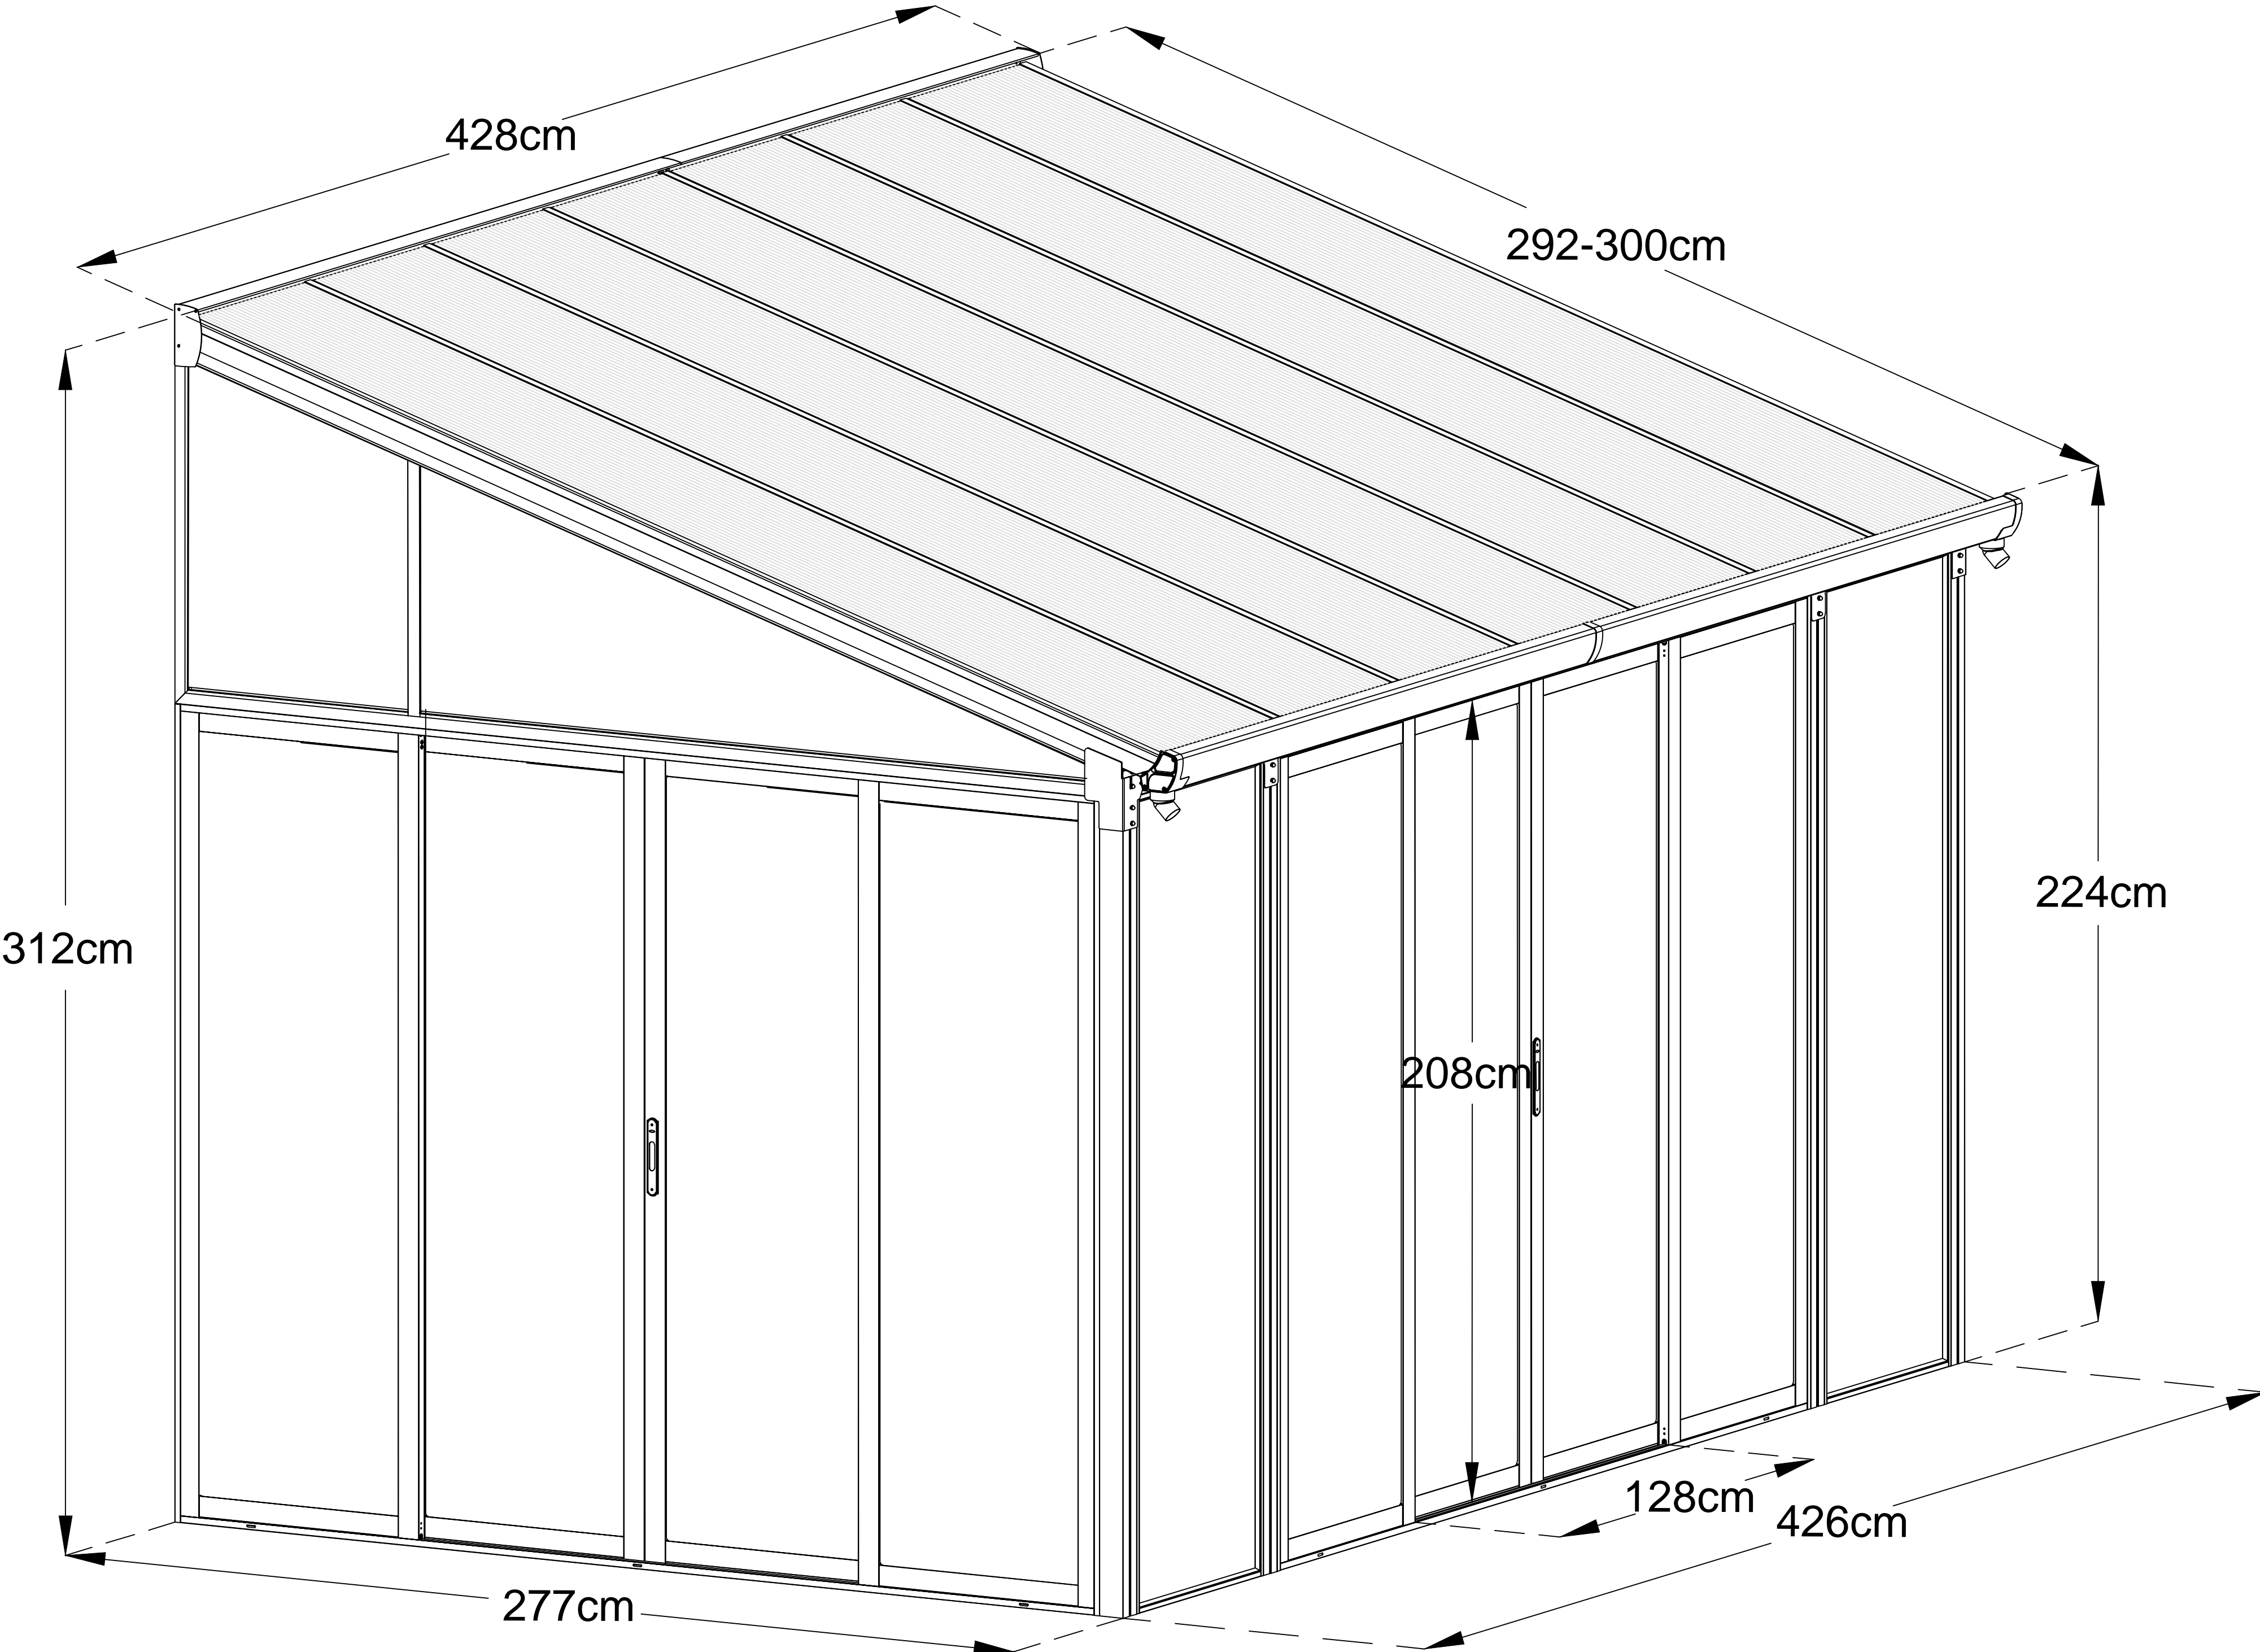

















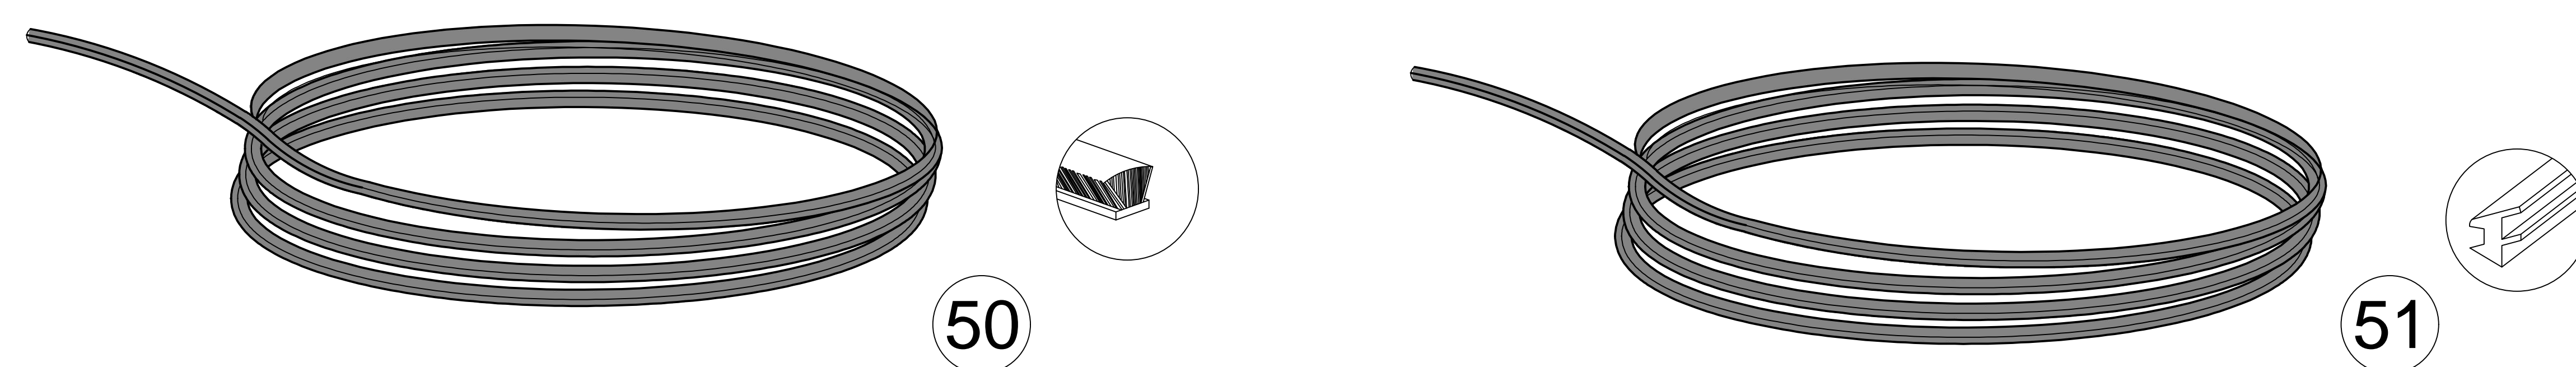
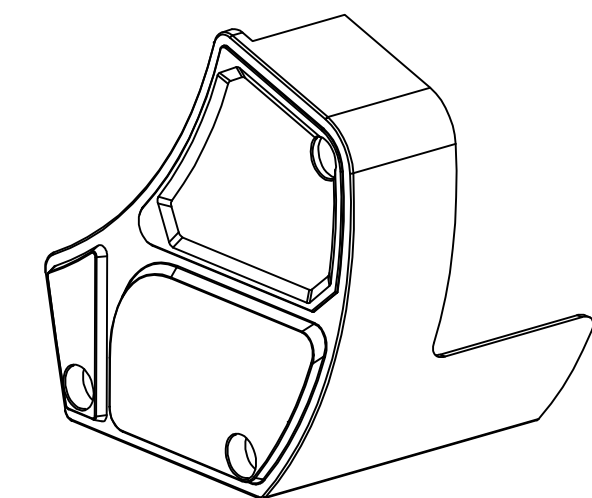
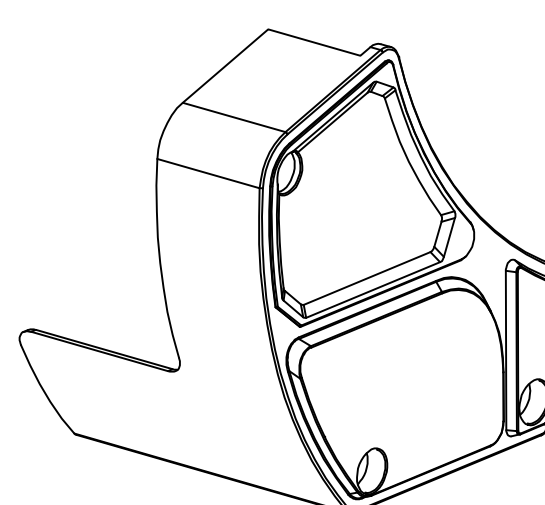
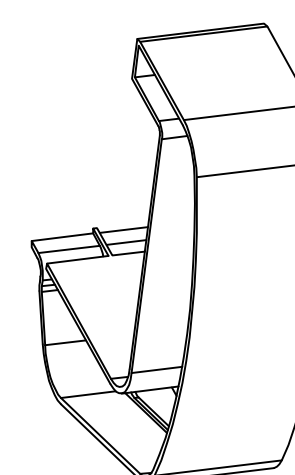
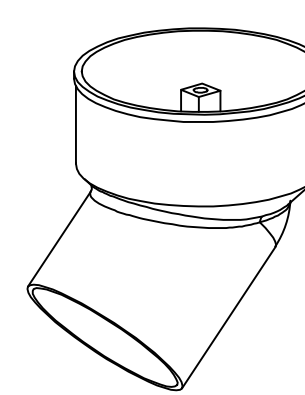
Contents

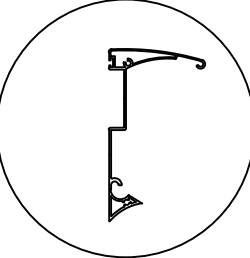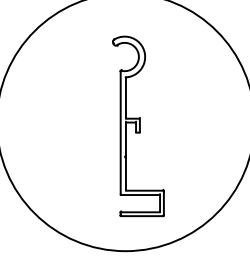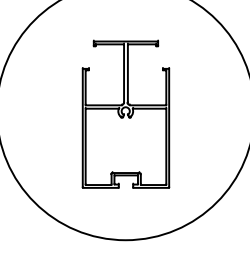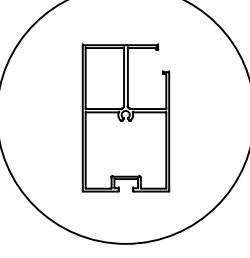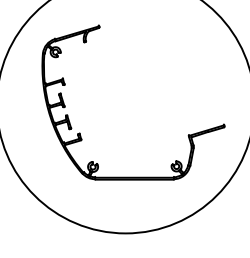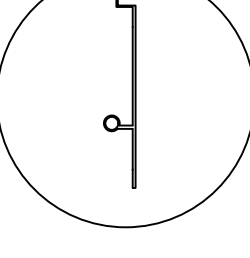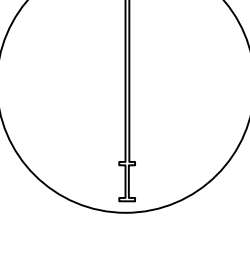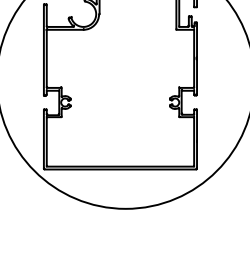Item	Qty	MM
	1L 1 PCS	2448
	1R 1 PCS	1806
	2L 1 PCS	1806
	2R 1 PCS	2448
	3 6 PCS	3000
	4 2 PCS	3000
	4 2 PCS	3000
	12L 1 PCS	2125
	12L 1 PCS	2125
	12R 1 PCS	2125
	13L 1 PCS	2126
	13R 1 PCS	2126
	14 7 PCS	562
	15L 1 PCS	745
	15L 1 PCS	745
	15R 1 PCS	745

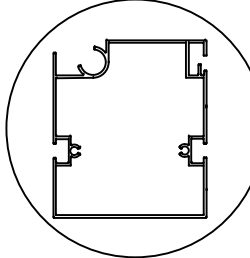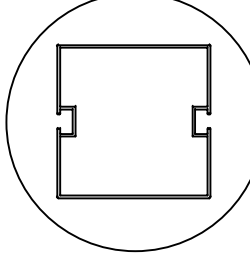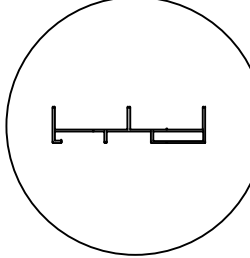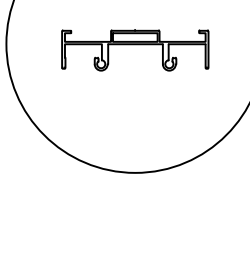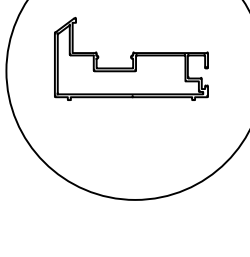Item	Qty	MM
	16 1 PCS	2764
	17 2 PCS	300
	18 4 PCS	2100
	21 6 PCS	2072
	22 3 PCS	2684
	23 3 PCS	2684
	24L 1 PCS	2696
	24R 1 PCS	2696
	25L 1 PCS	907
	25R 1 PCS	907



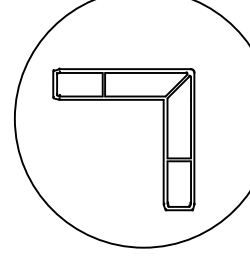
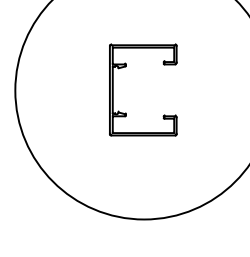
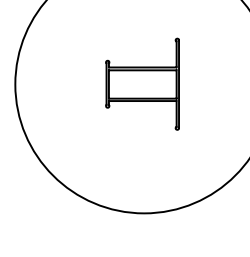
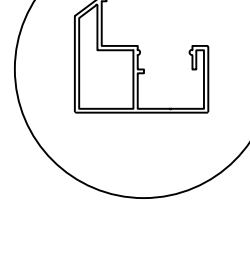
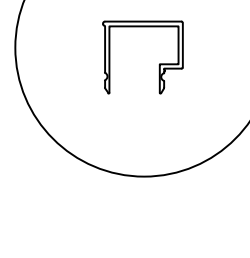
Item	Qty	MM
	26 2 PCS	19
	27L 1 PCS	682
	27L 1 PCS	682
	27R 1 PCS	682
	28L 1 PCS	682
	28R 1 PCS	682
	29 2 PCS	2736
	30 2 PCS	2038
	31 4 PCS	652
	32 2 PCS	1987
	32 2 PCS	858
	33 2 PCS	858




Contents

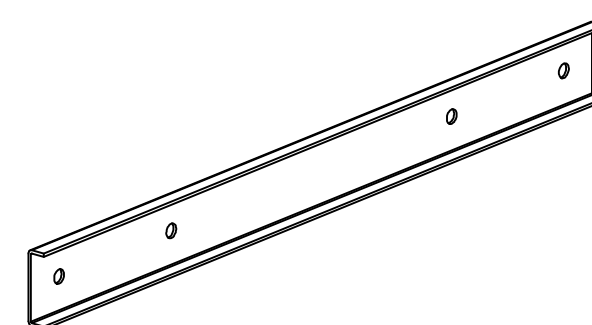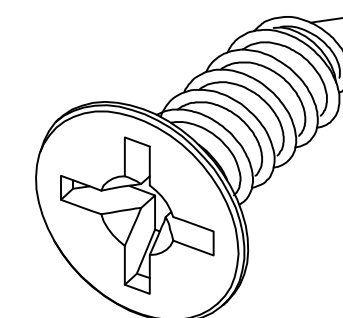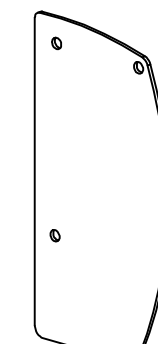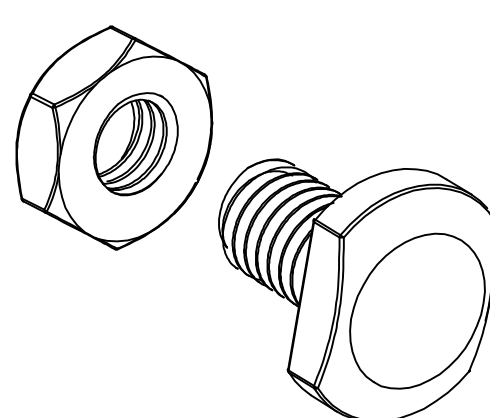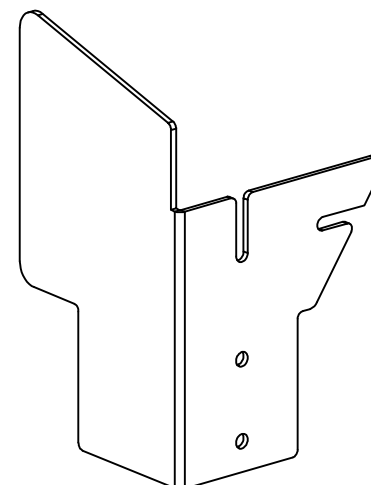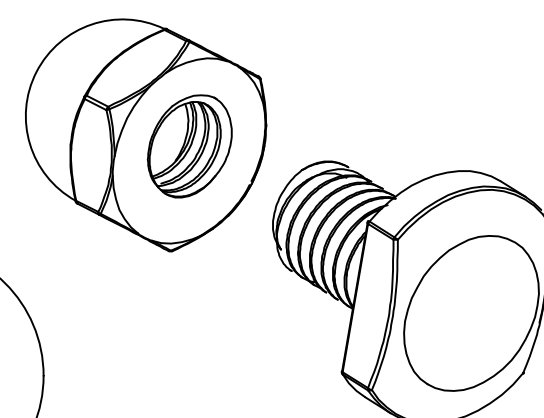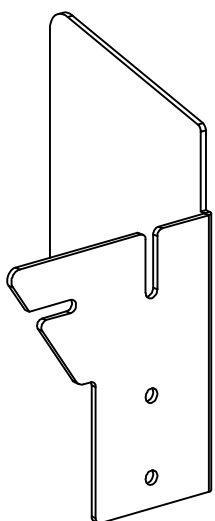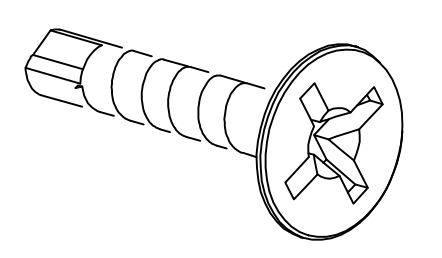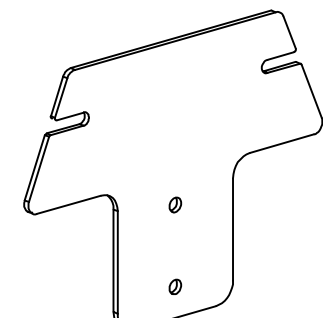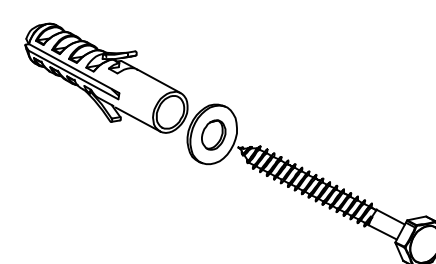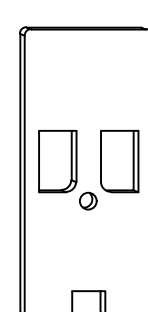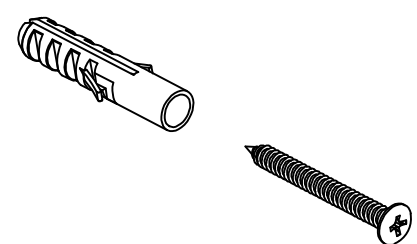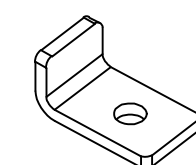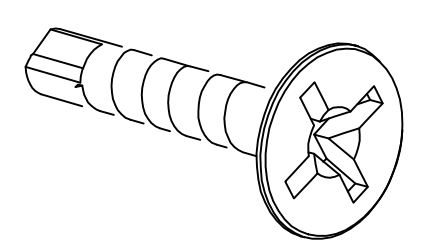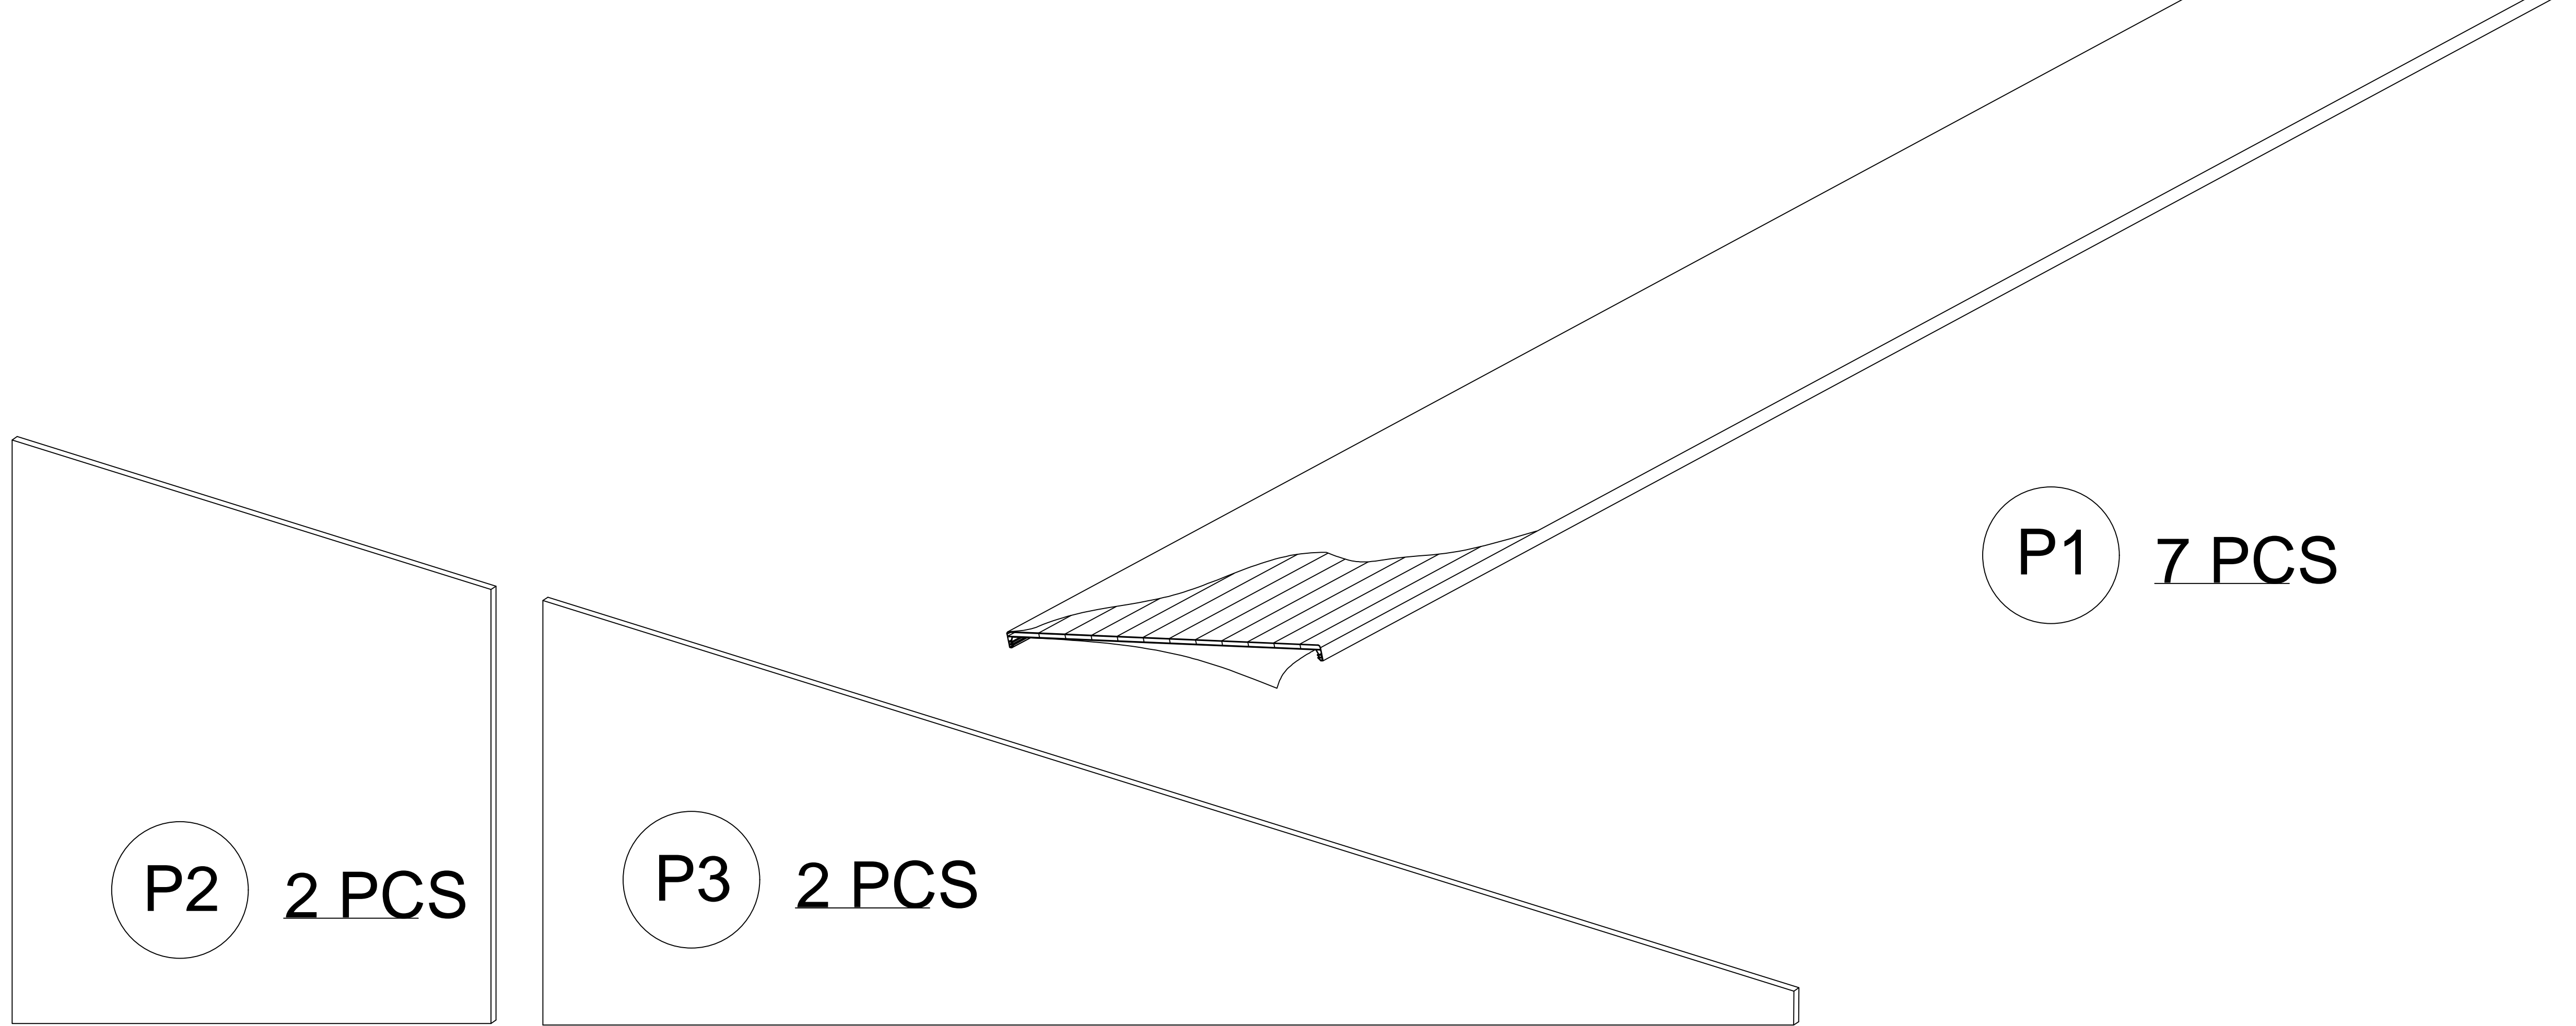Item	Qty	Item	Qty										
34	2 PCS		F1	 46 PCS									
				ST4.2X20									
35	2 PCS		F2	 6 PCS									
				M6X10									
36L	1 PCS		F3	 56 PCS									
				M6X10									
36R	1 PCS		F4	 65 PCS									
				ST4.2X20									
37	4 PCS		F5	 8 PCS									
				ST6.3X60									
38	8 PCS		F6	 29 PCS									
				ST6.3X60									
39	12 PCS		F7	 8 PCS									
				ST6.2X16									
													
				45	2 PCS	41	3 PCS	42	3 PCS	43	3 PCS	44	3 PCS
													
				50		51							
S1L	1 PCS		S1R	1 PCS		S2	1 PCS		S3	2 PCS			





1

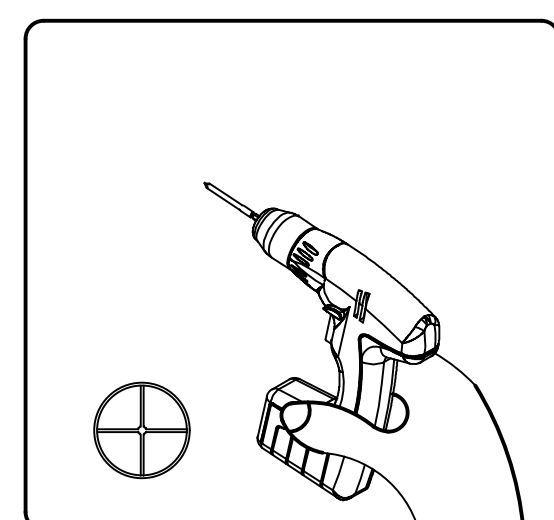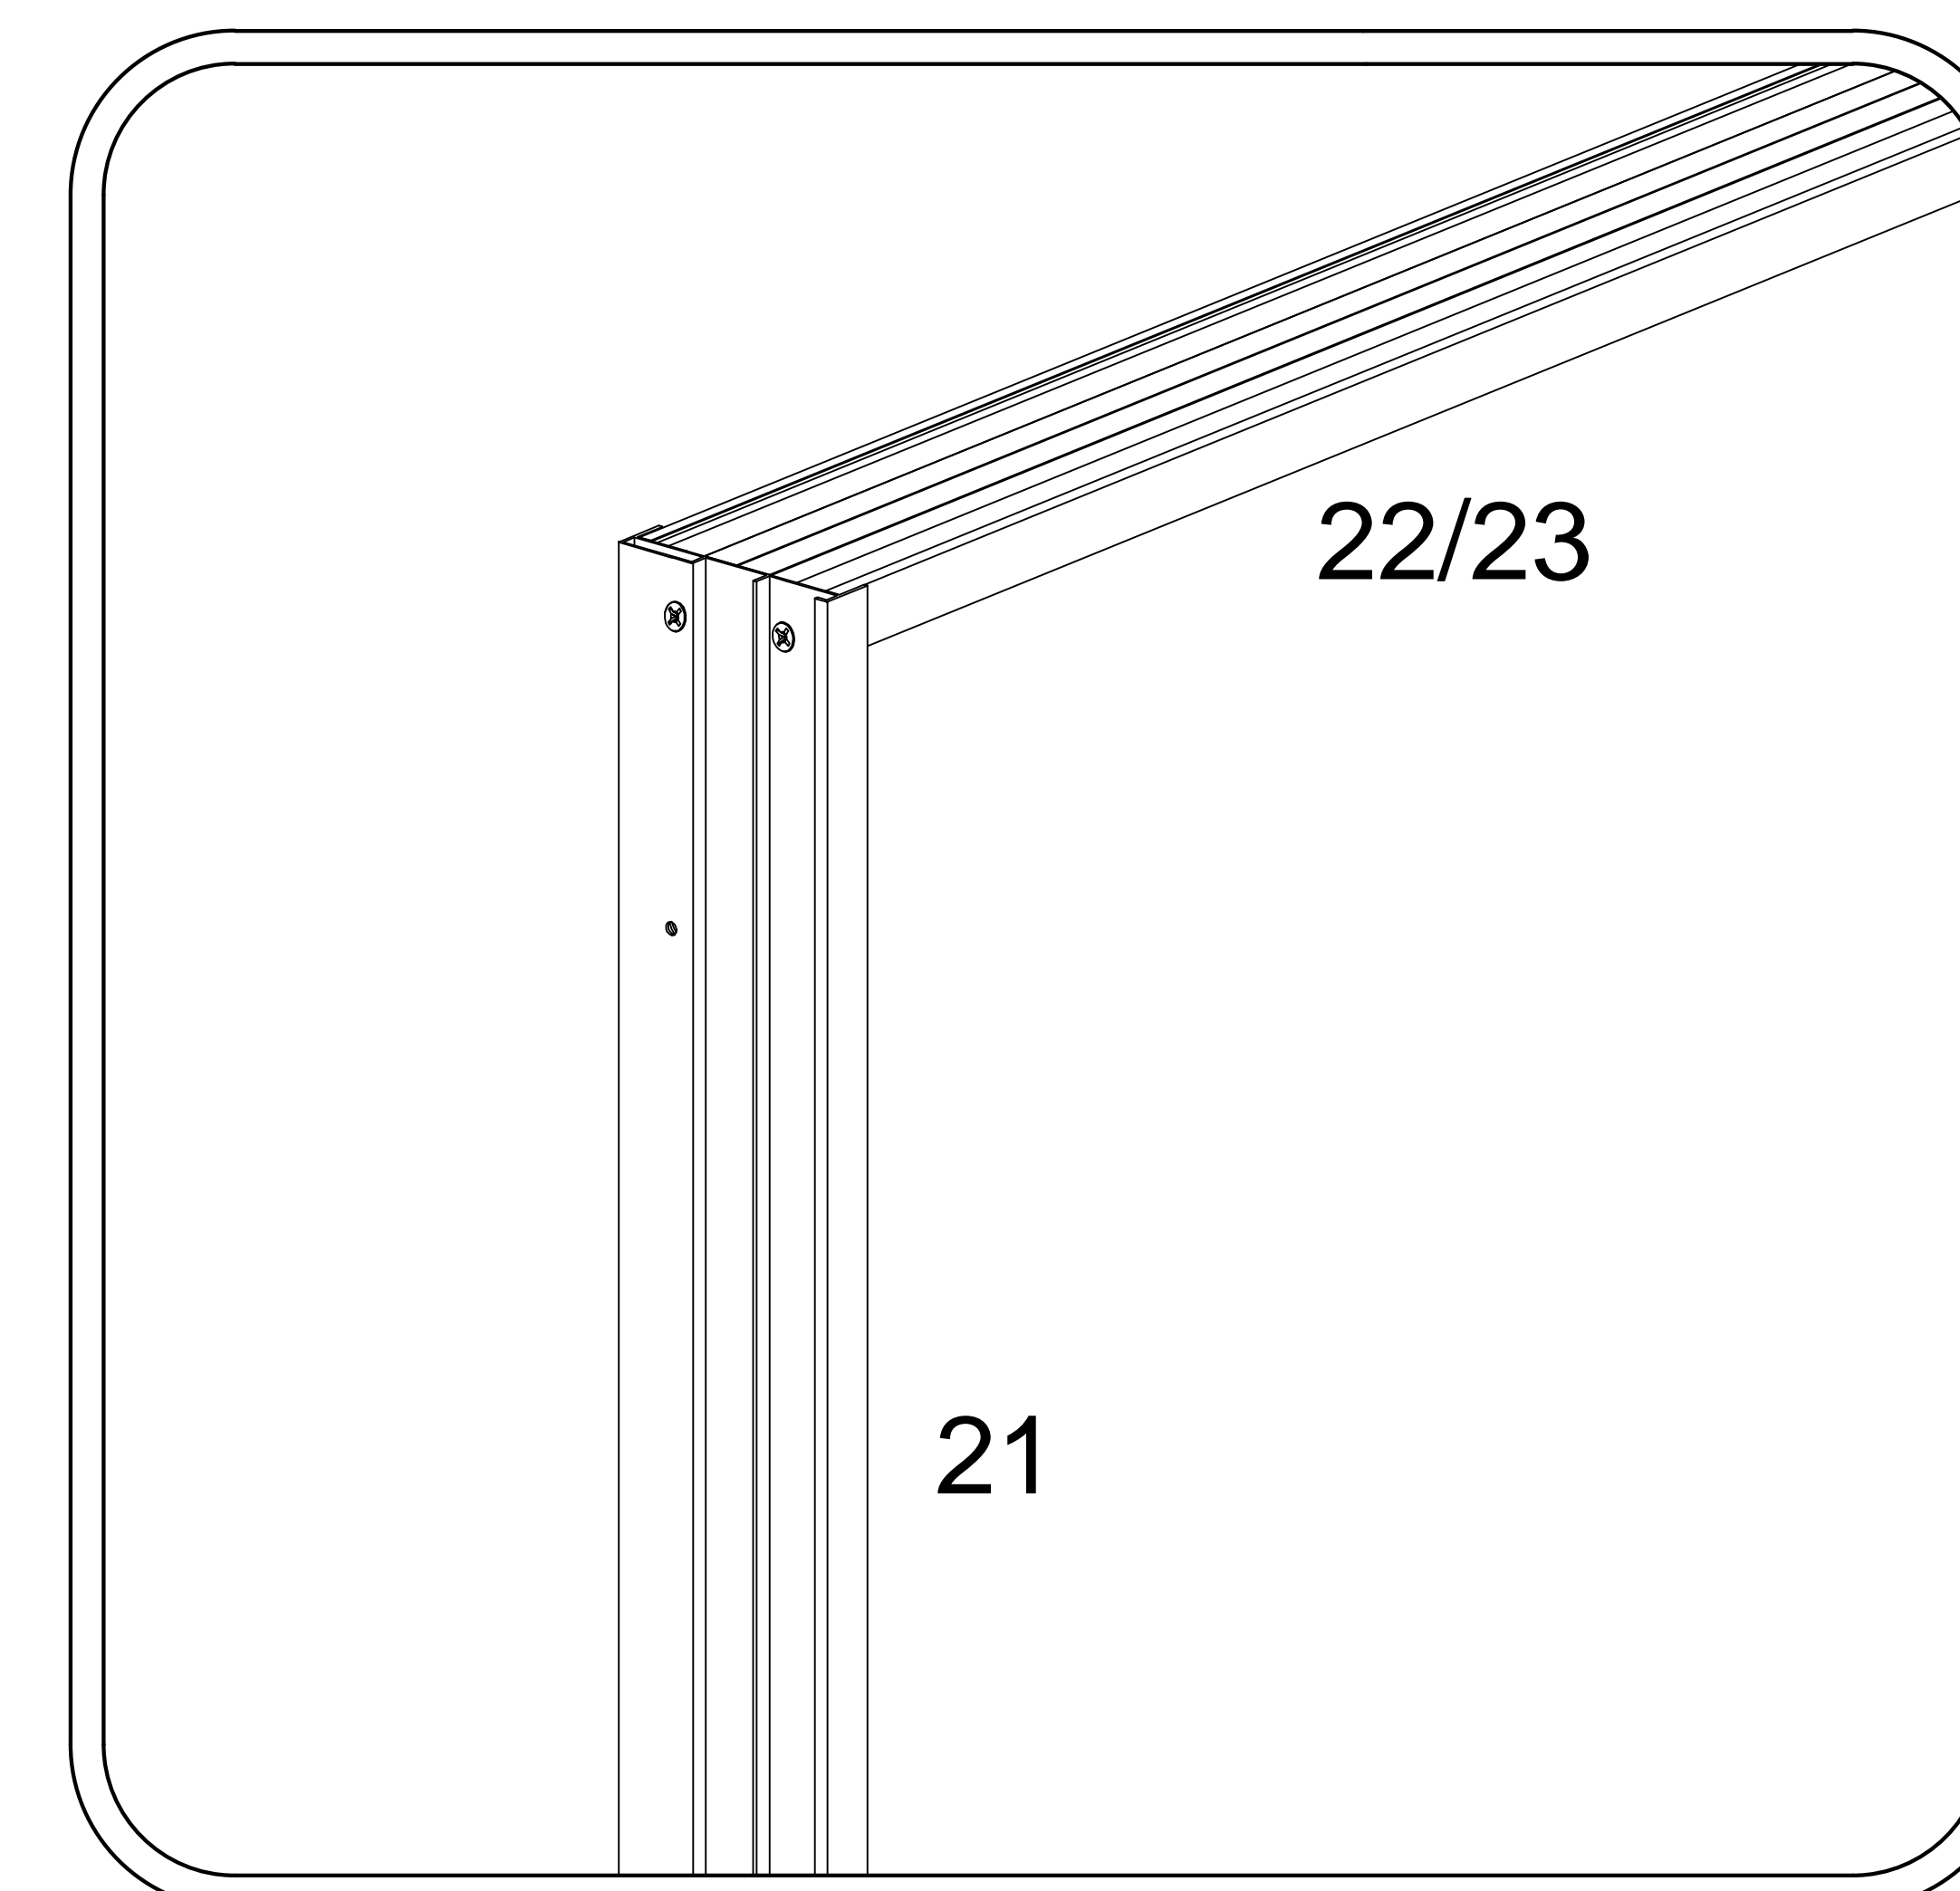
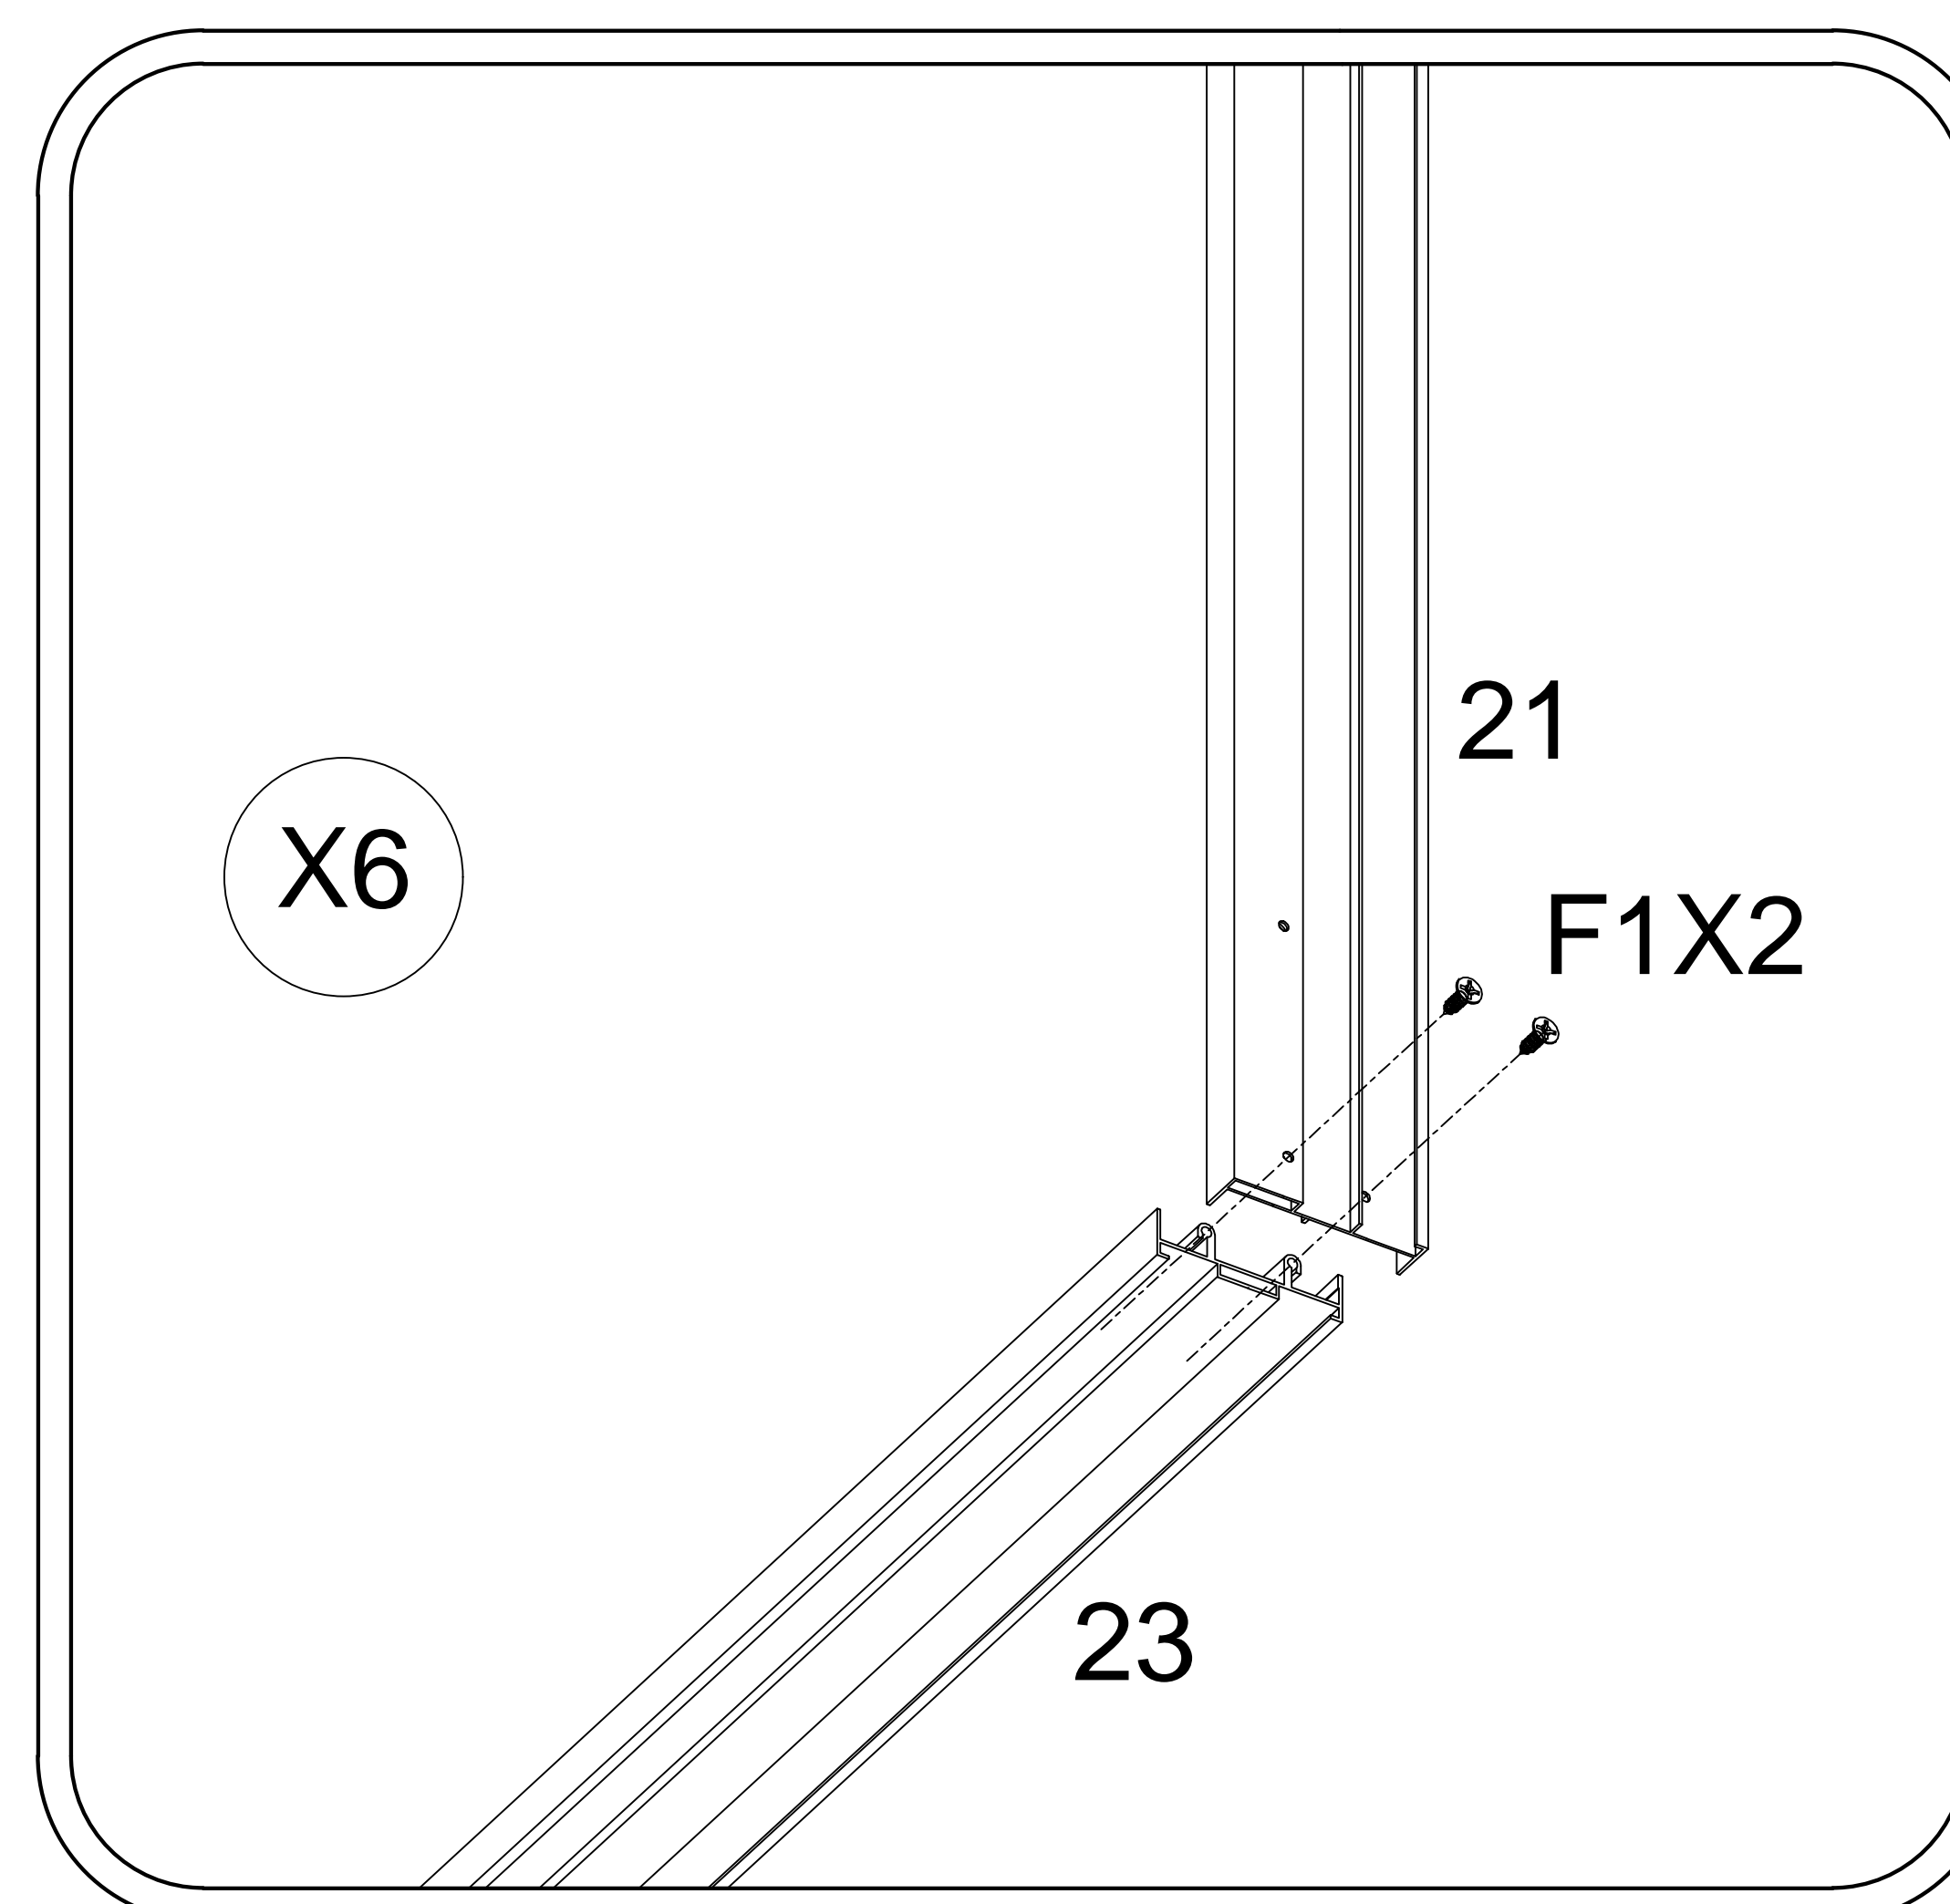
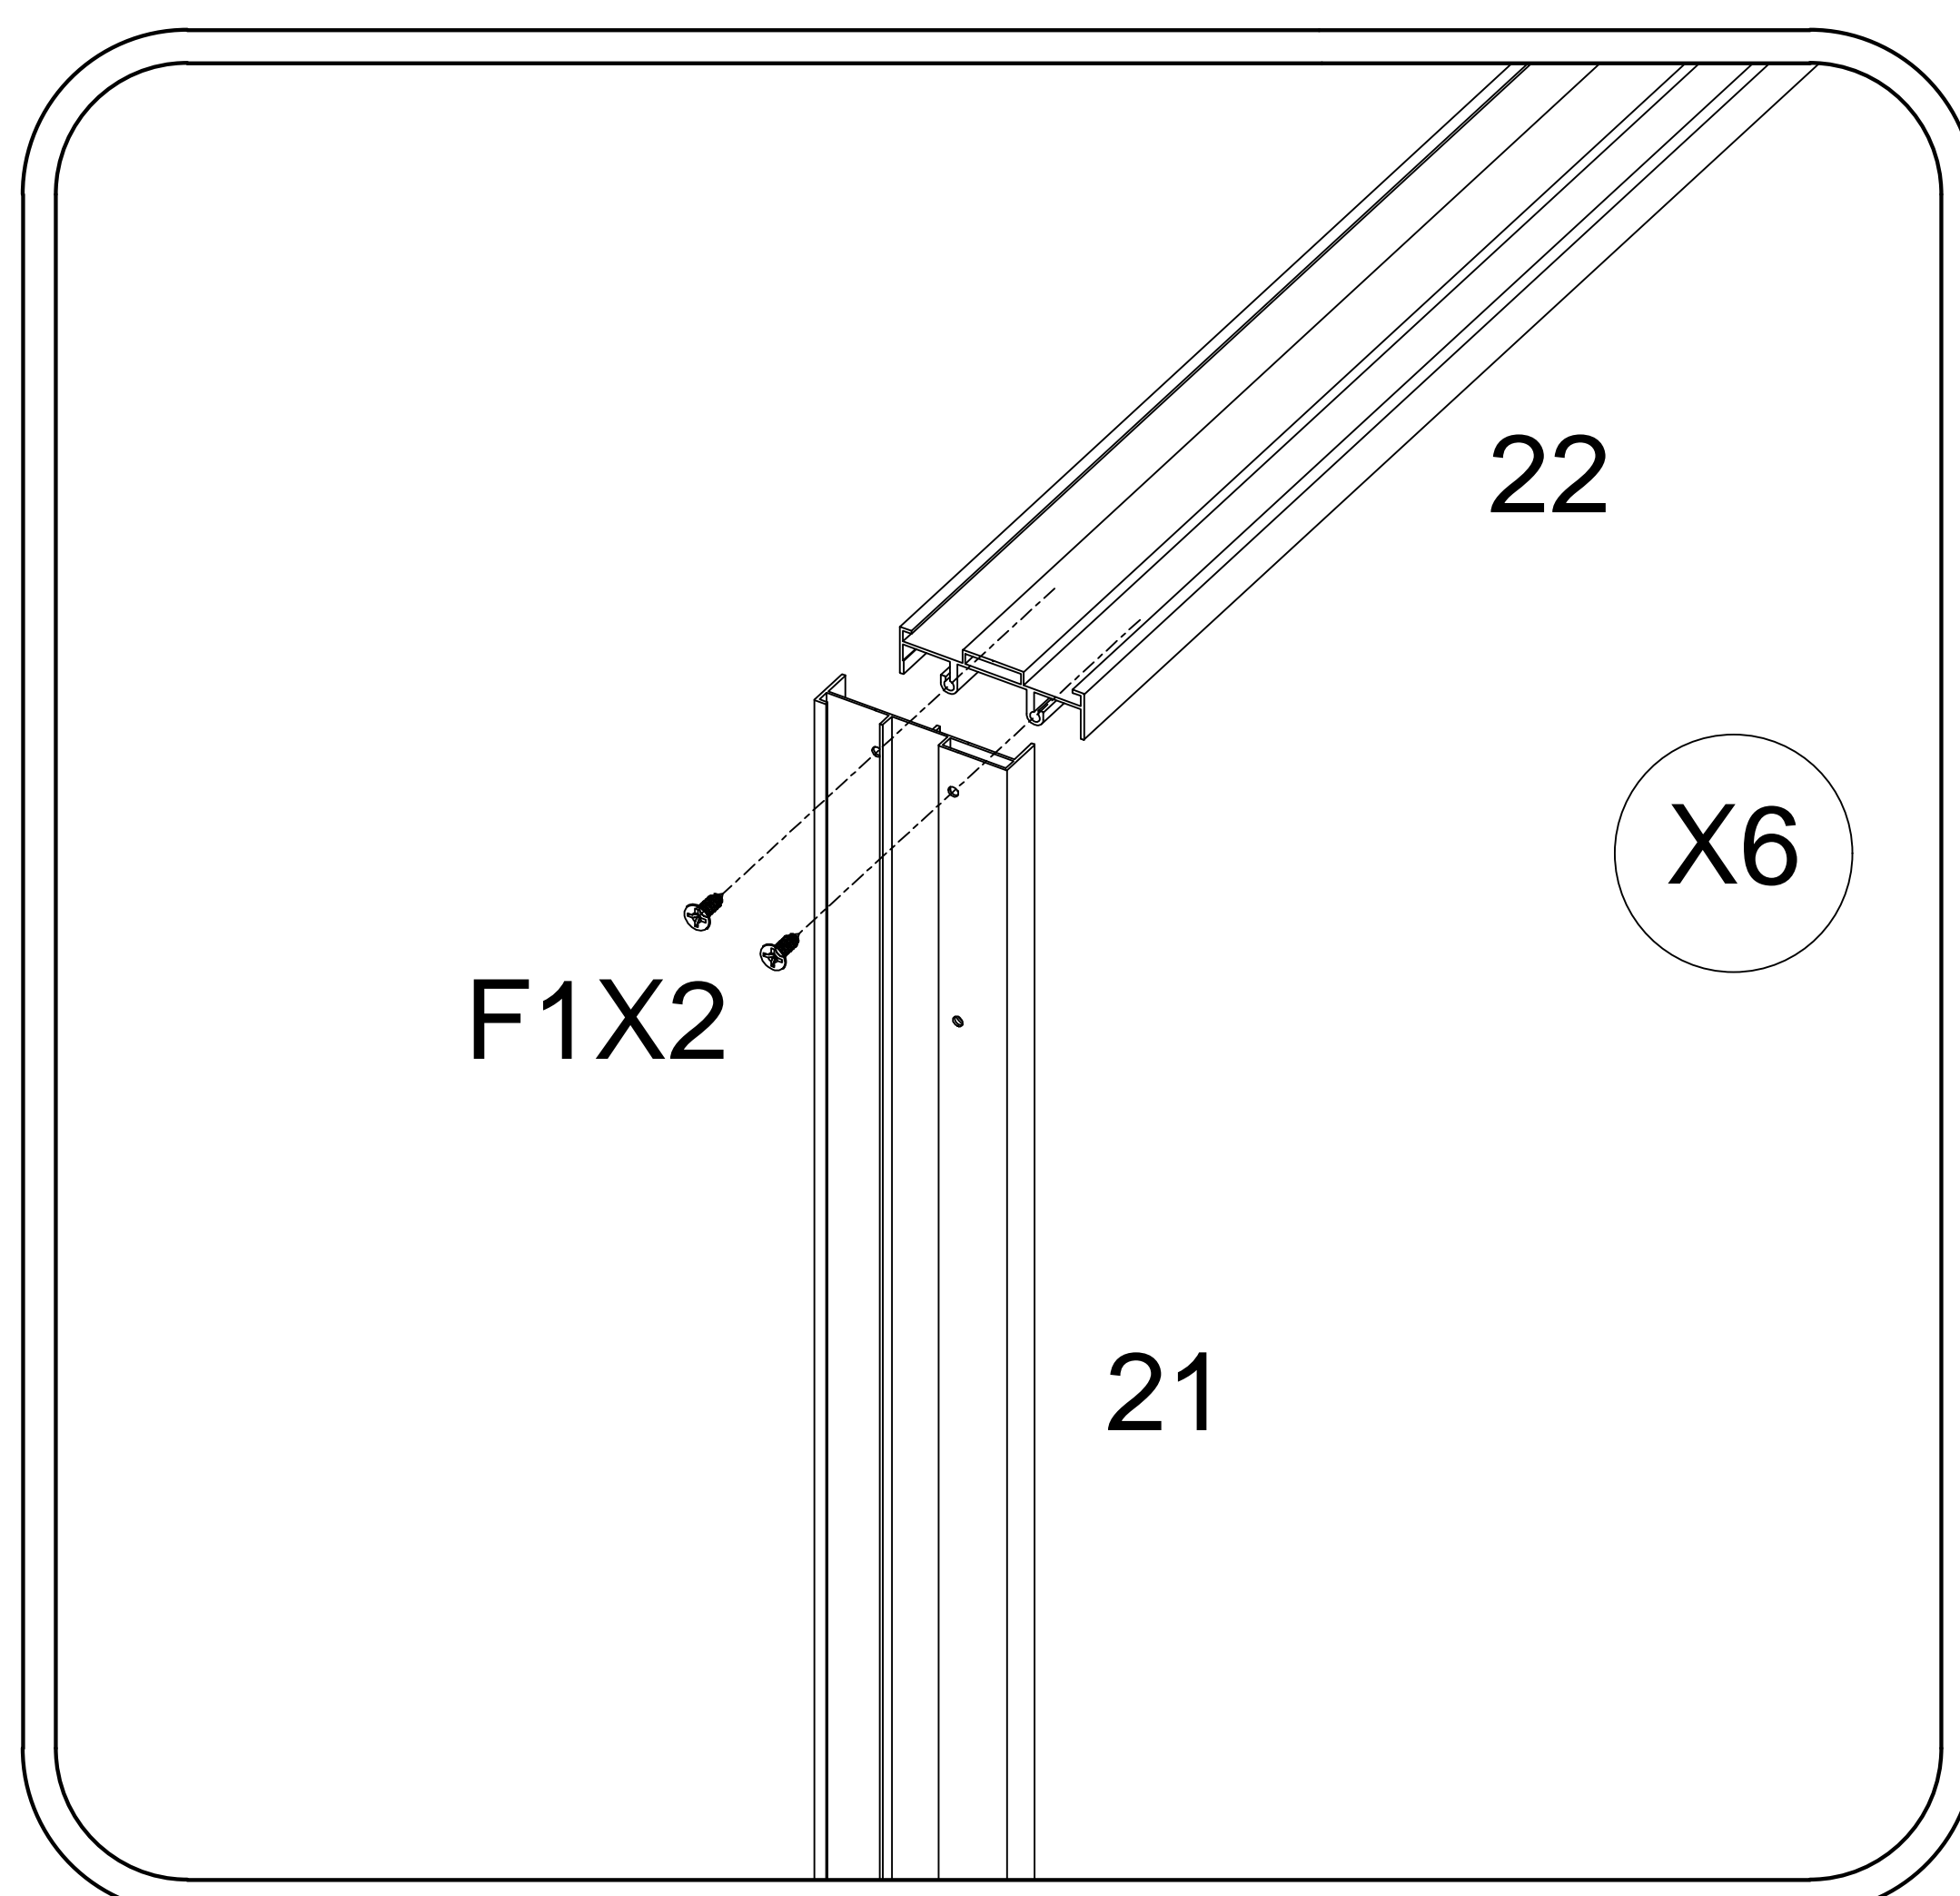
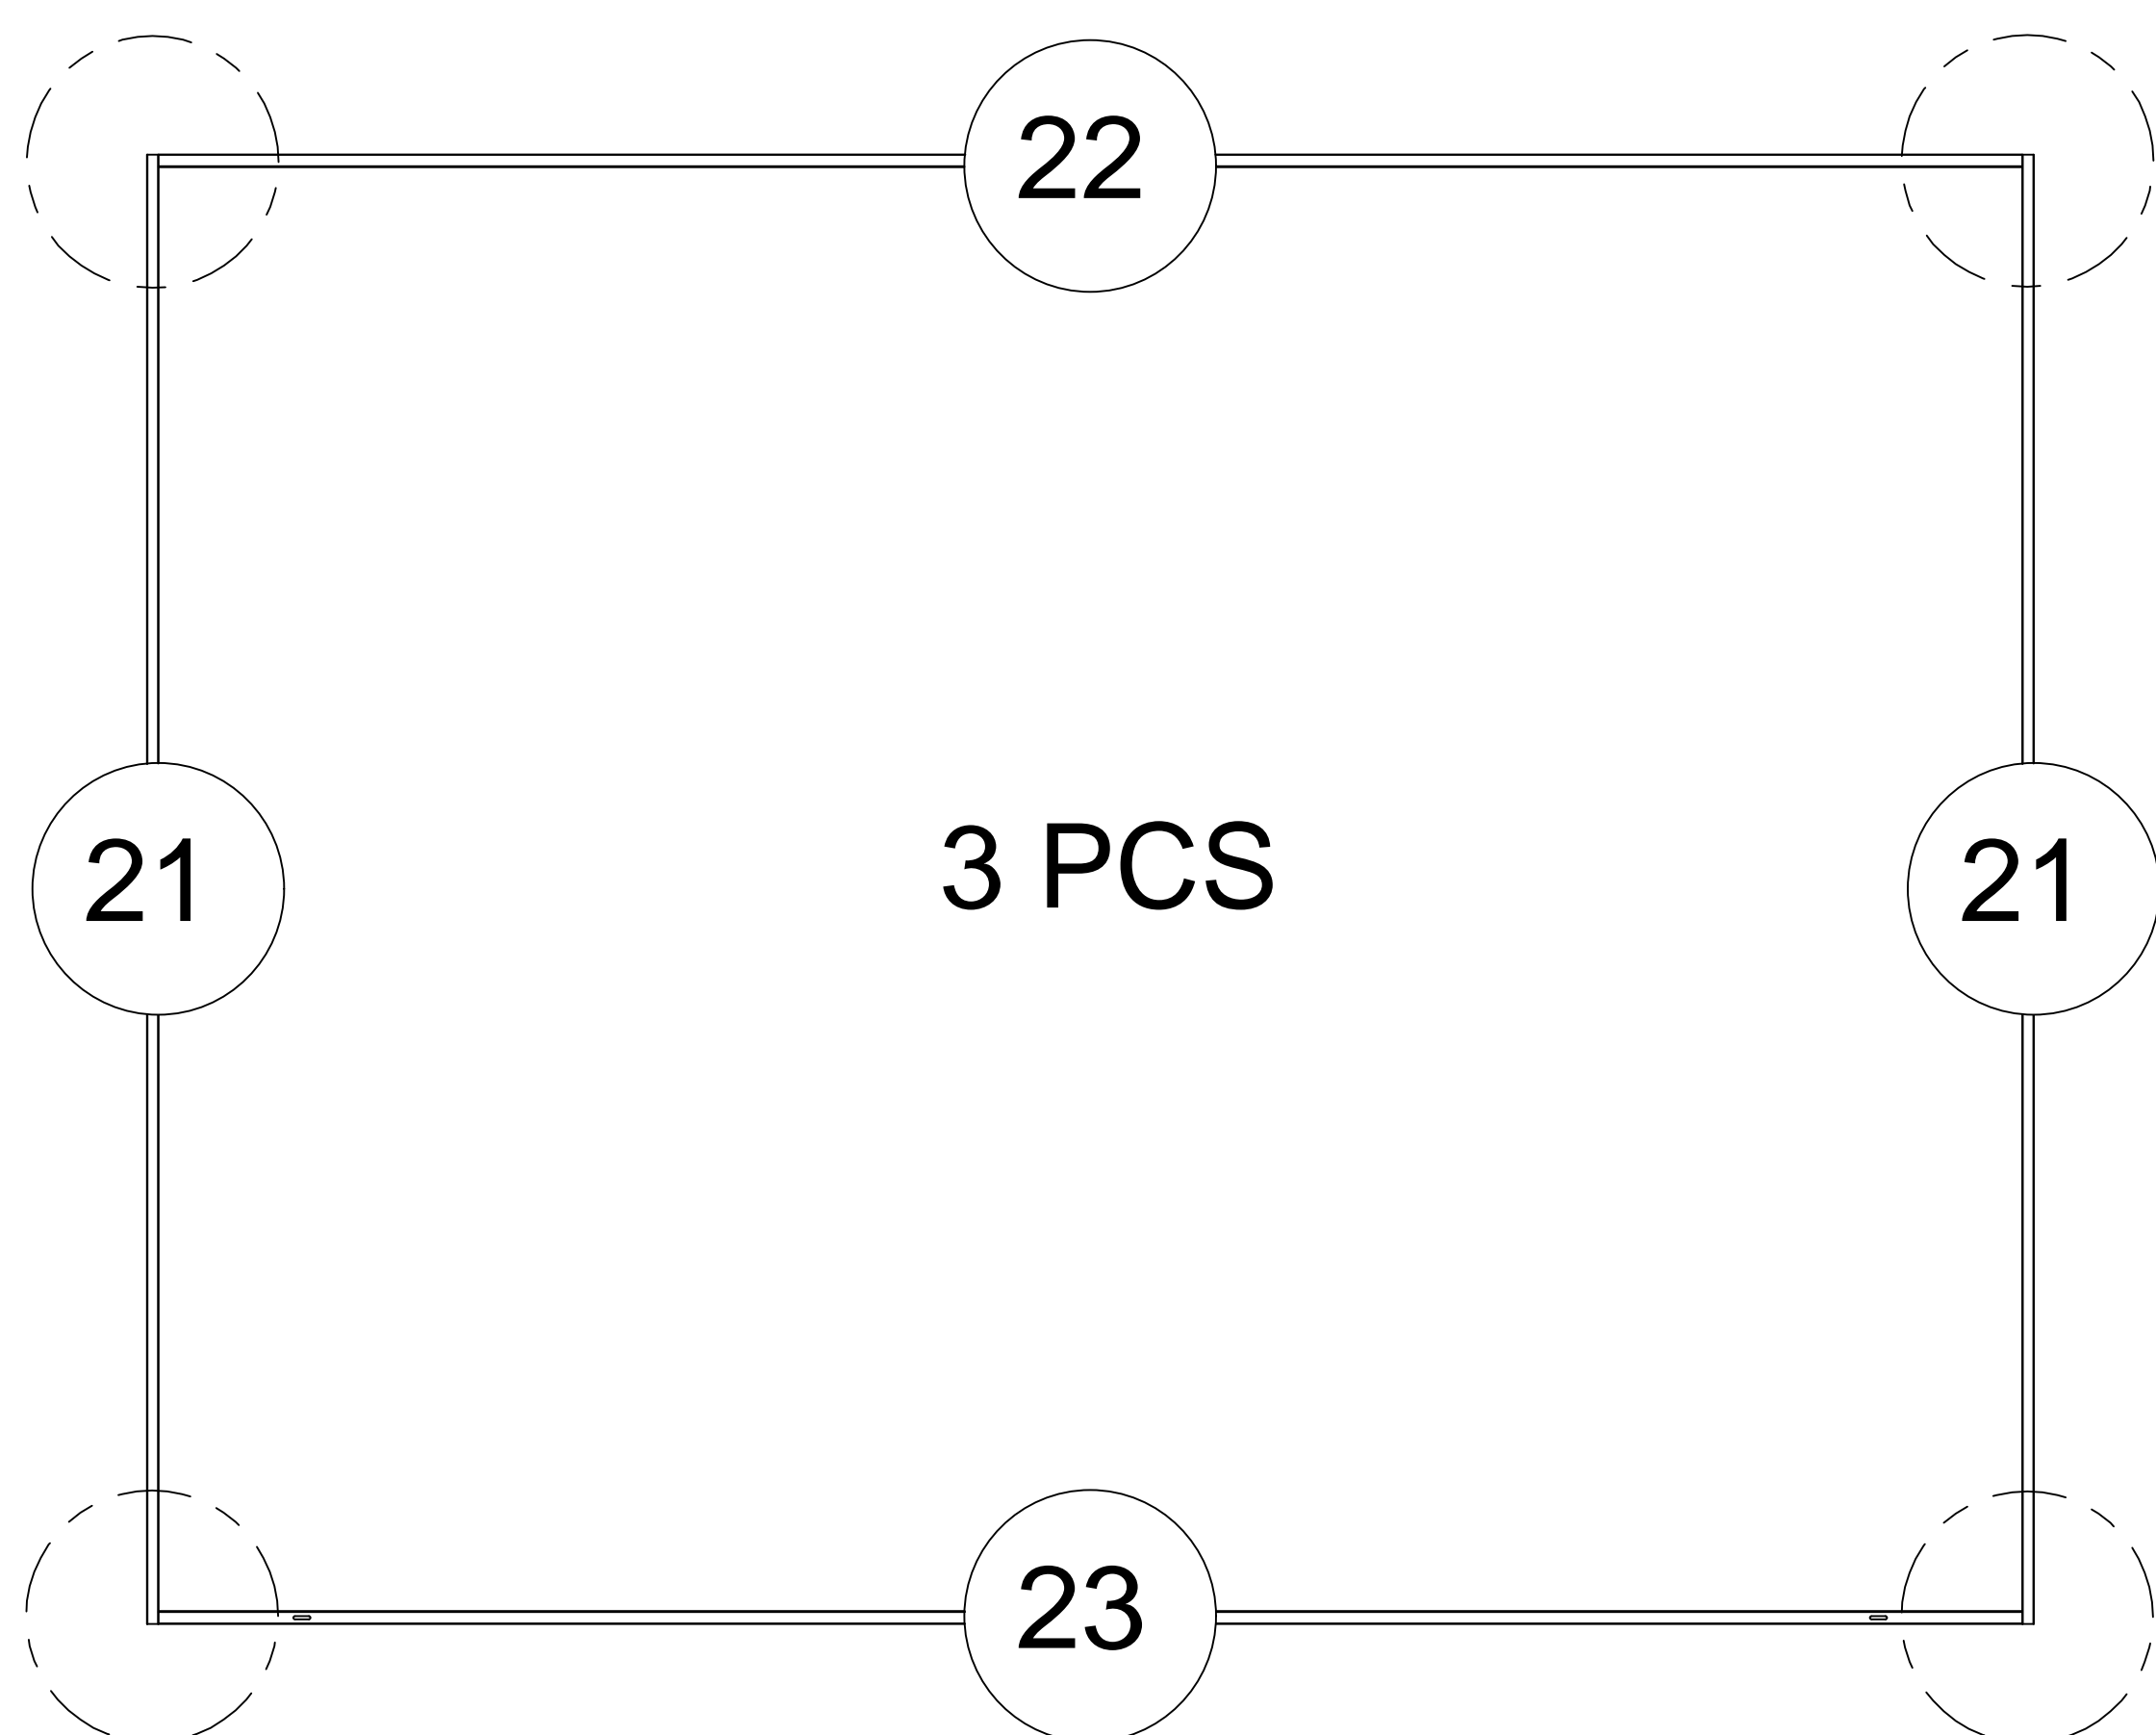
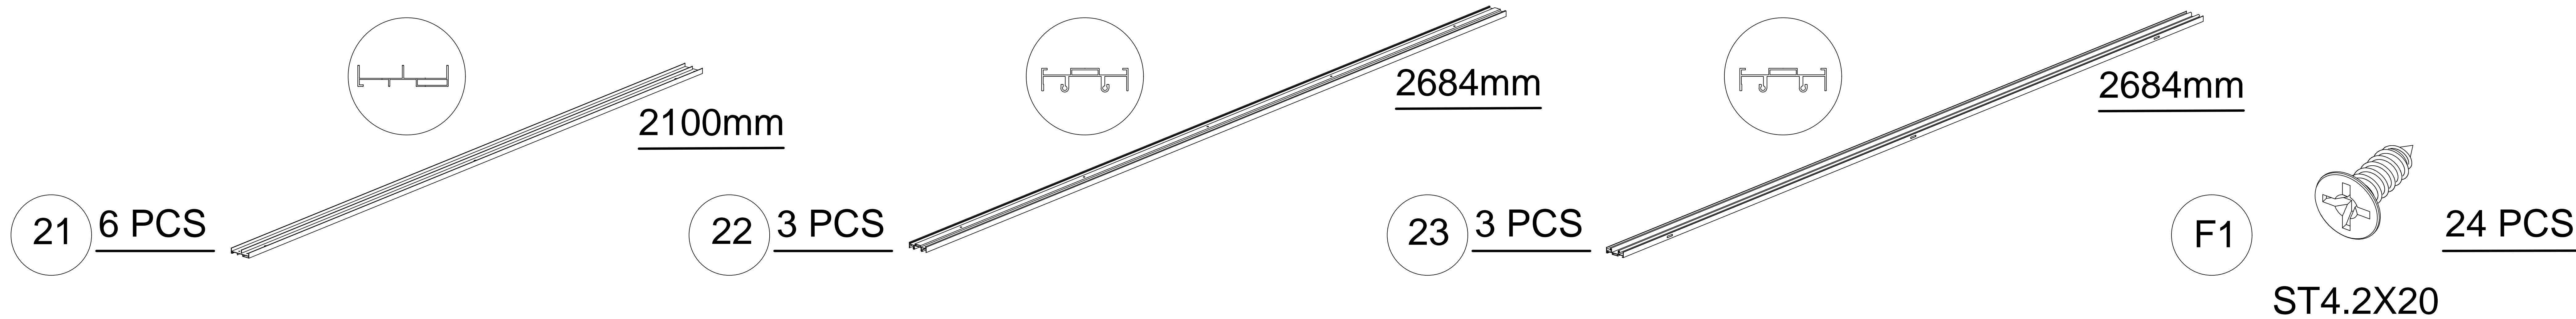
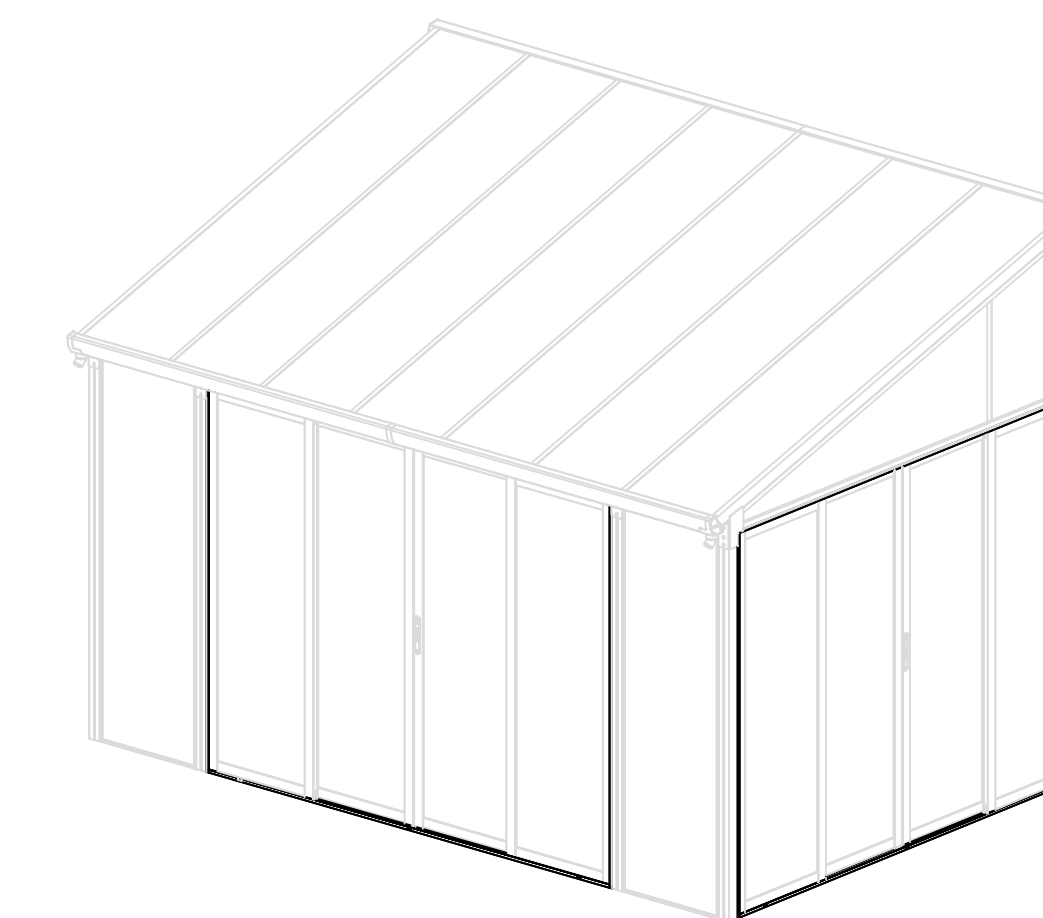


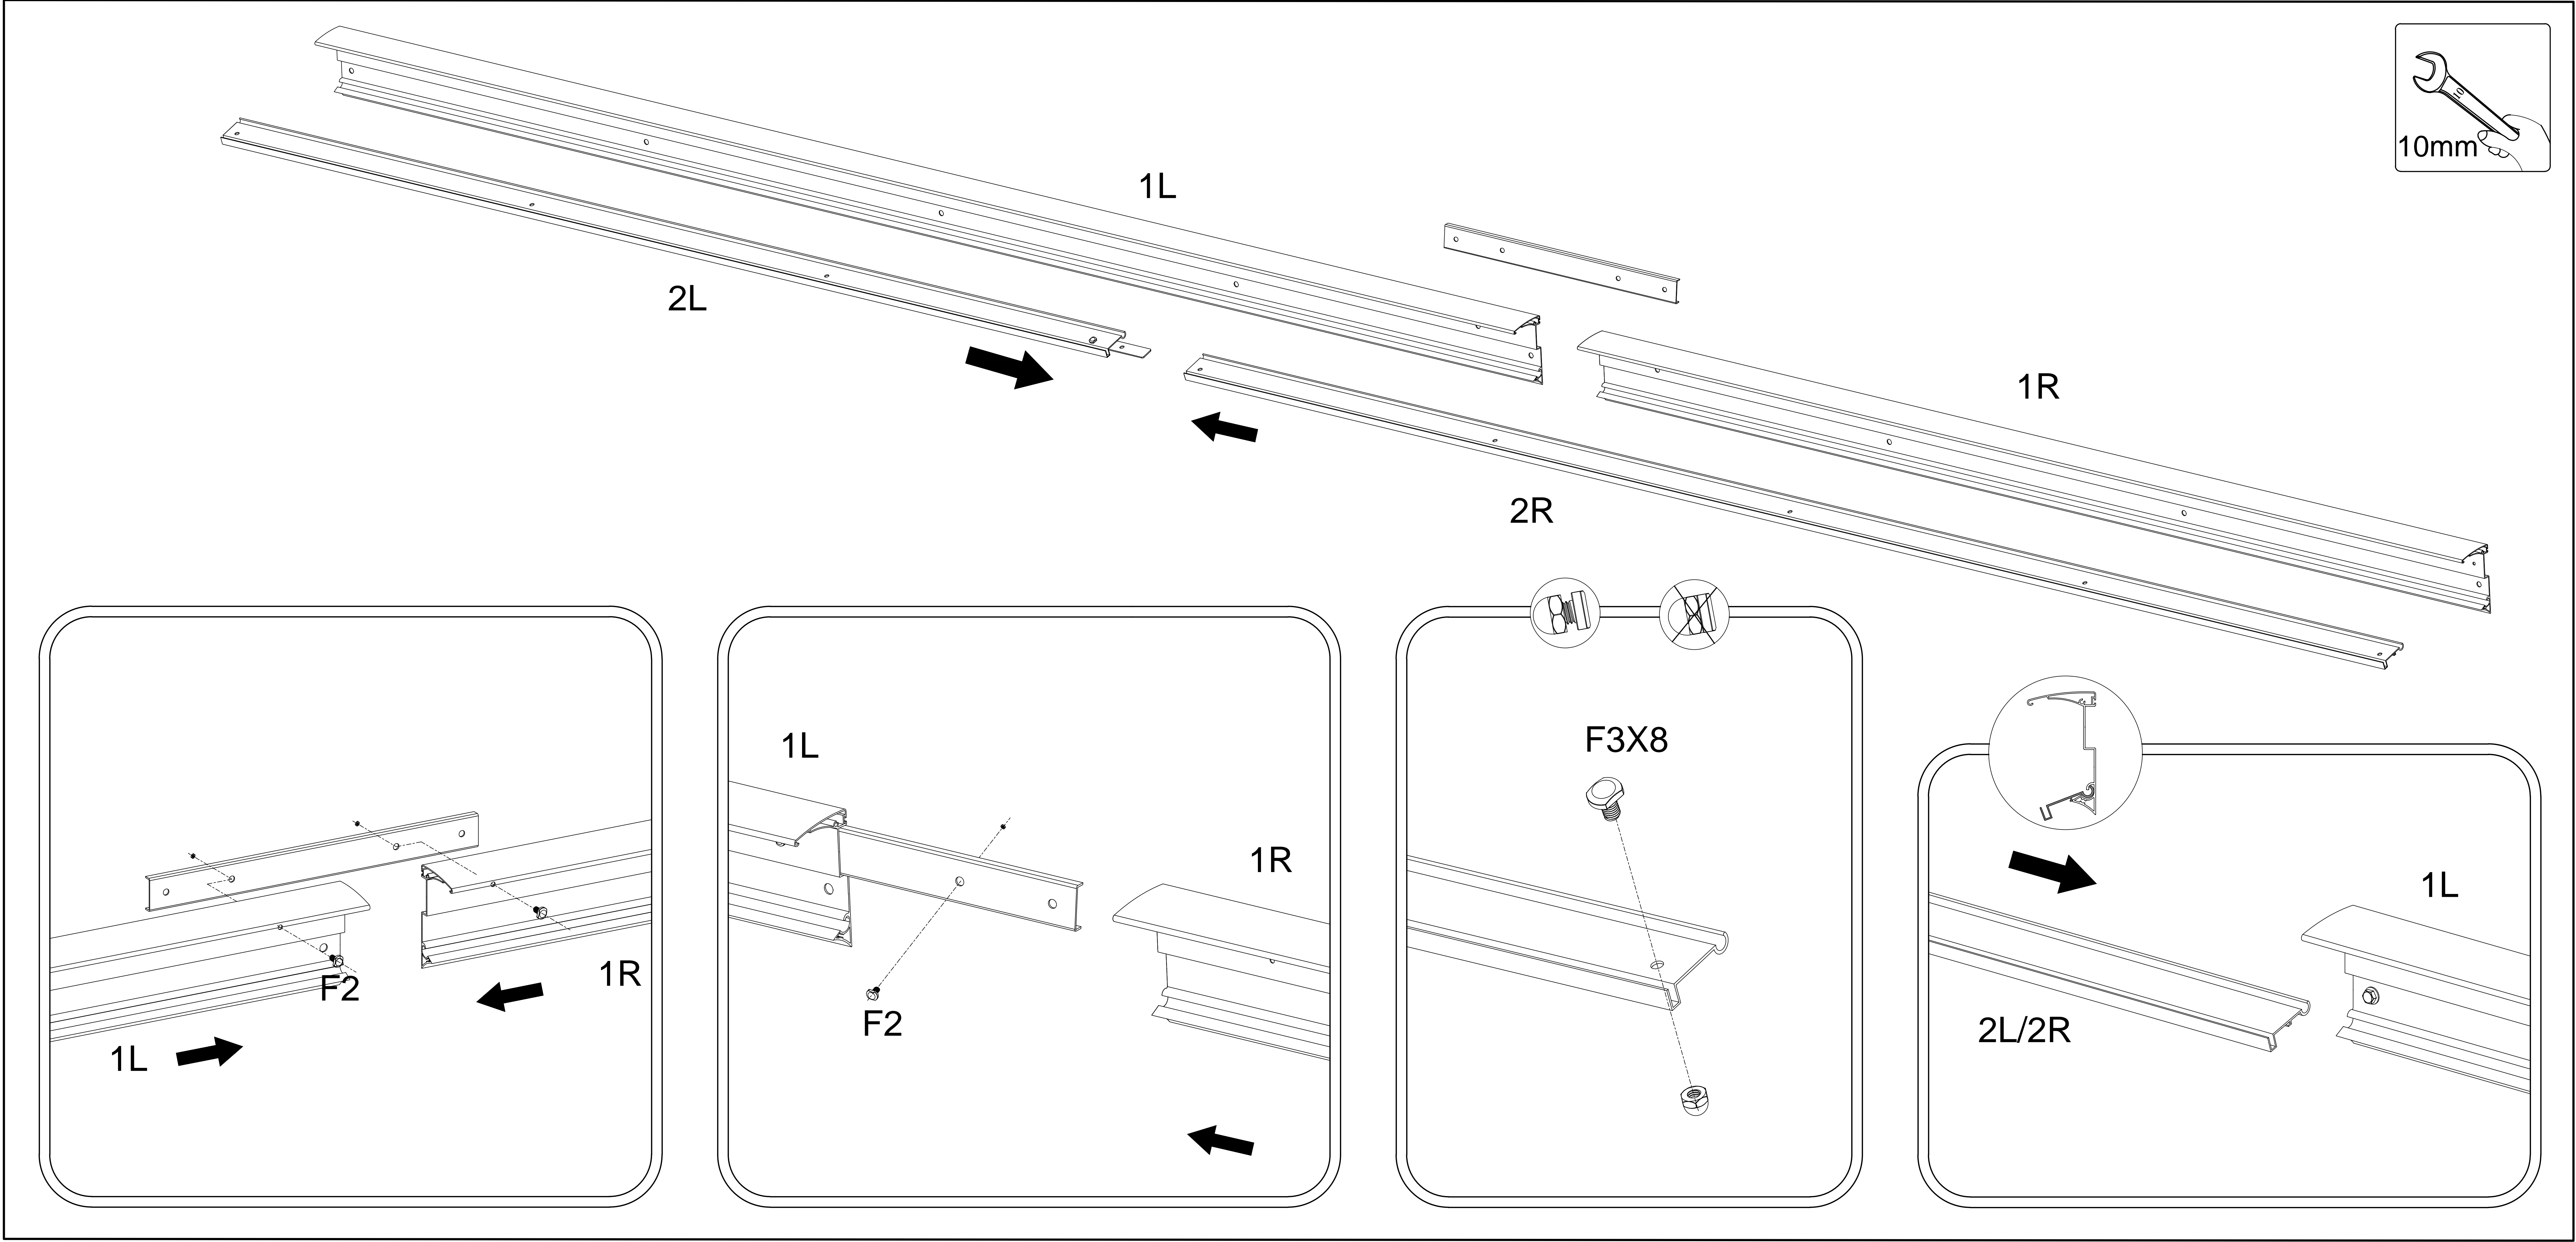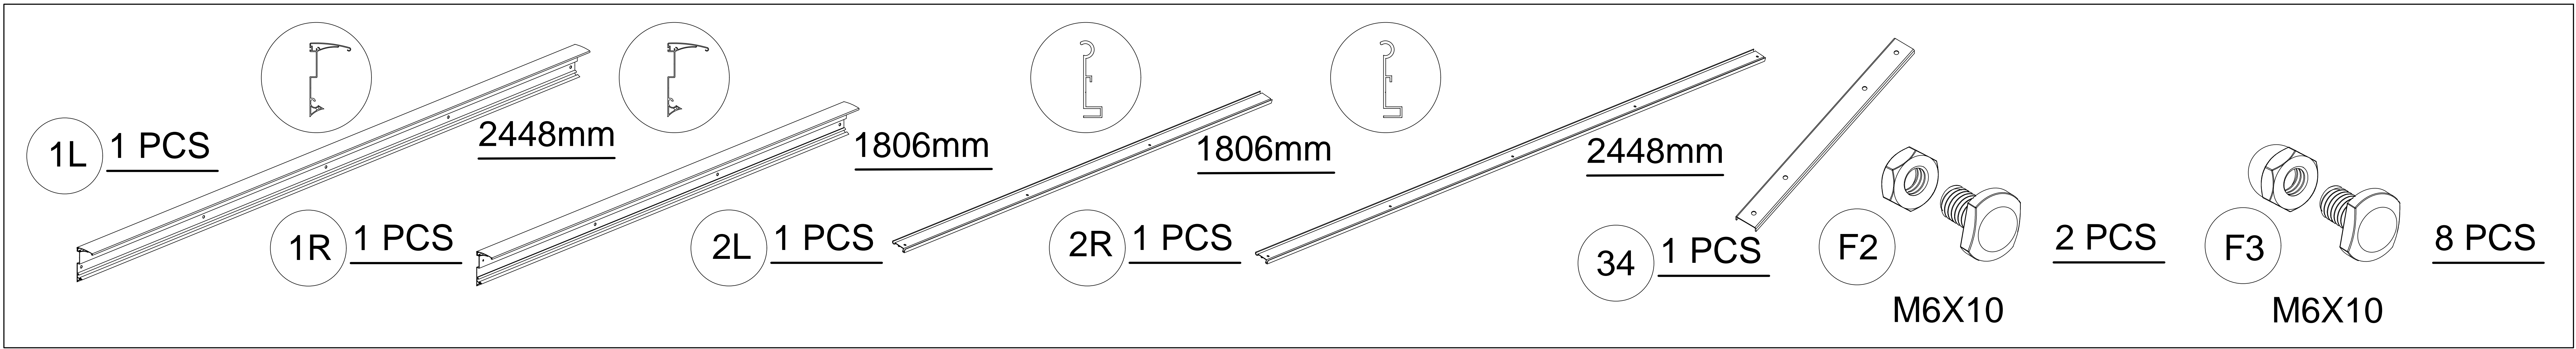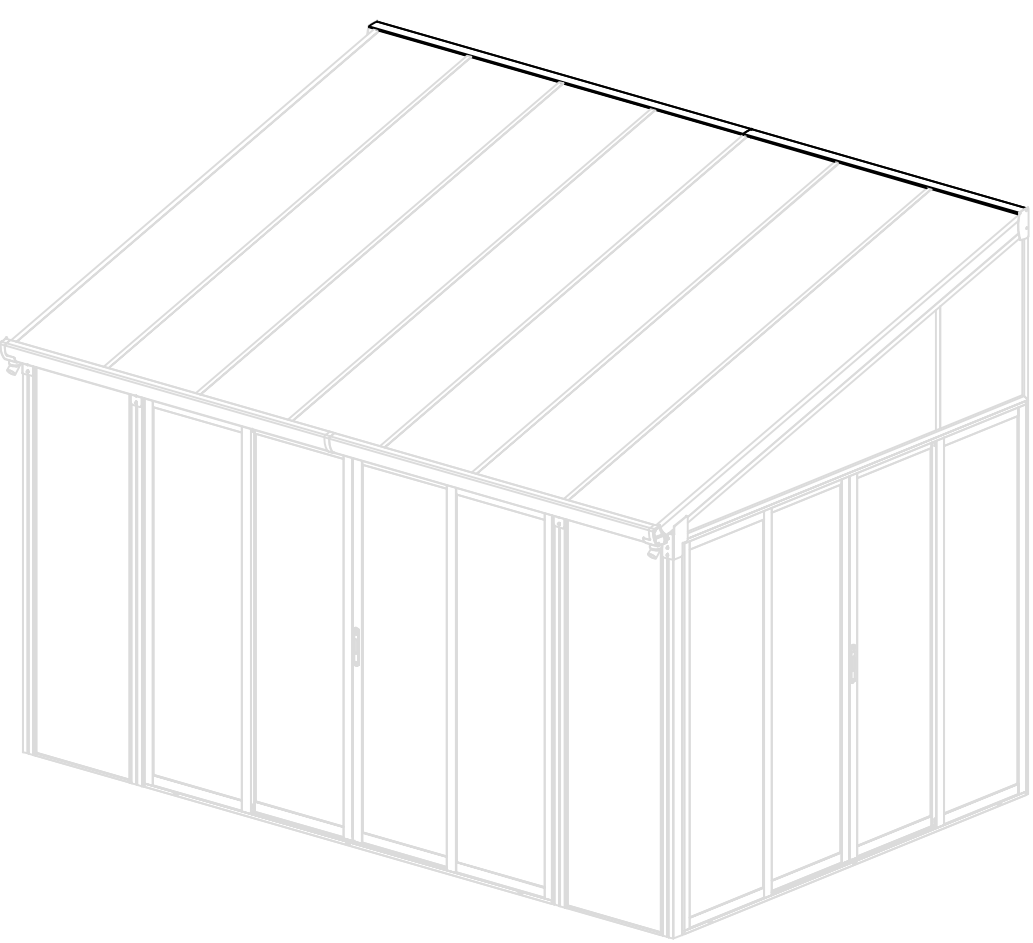

3

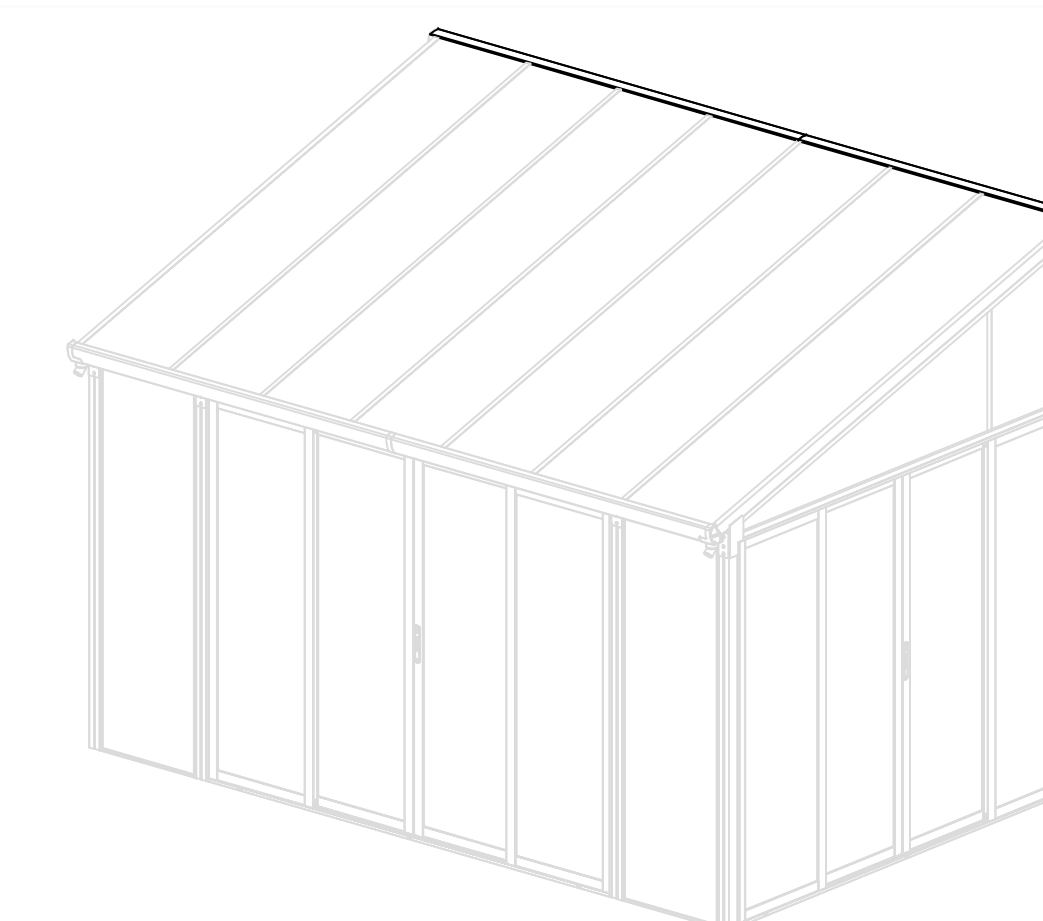


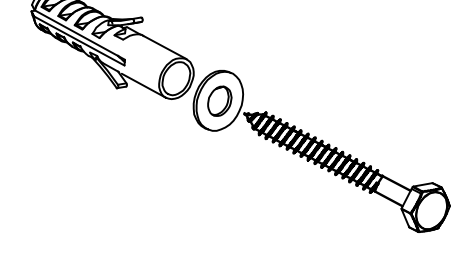F5  8 PCS  
ST6.3X60

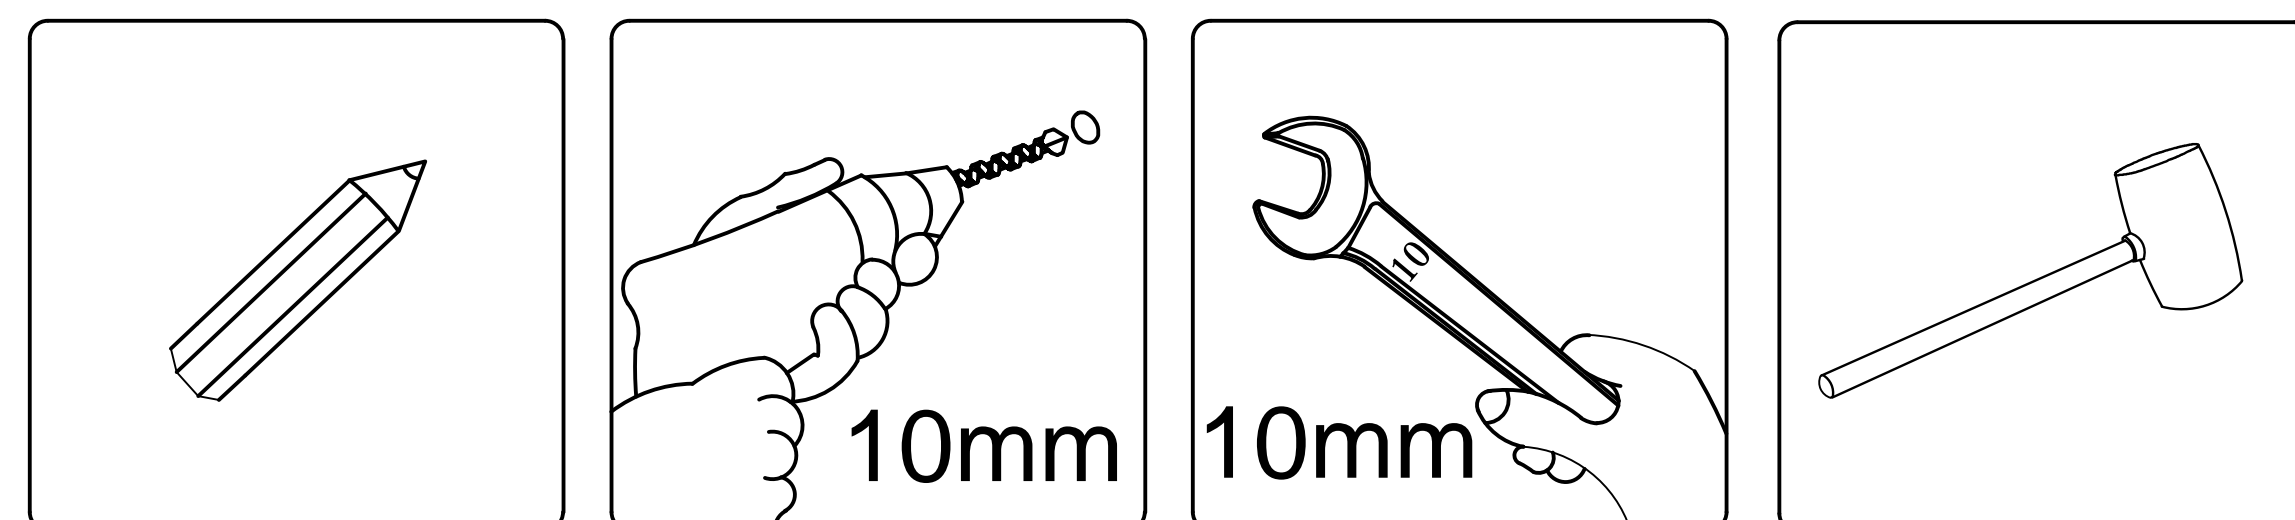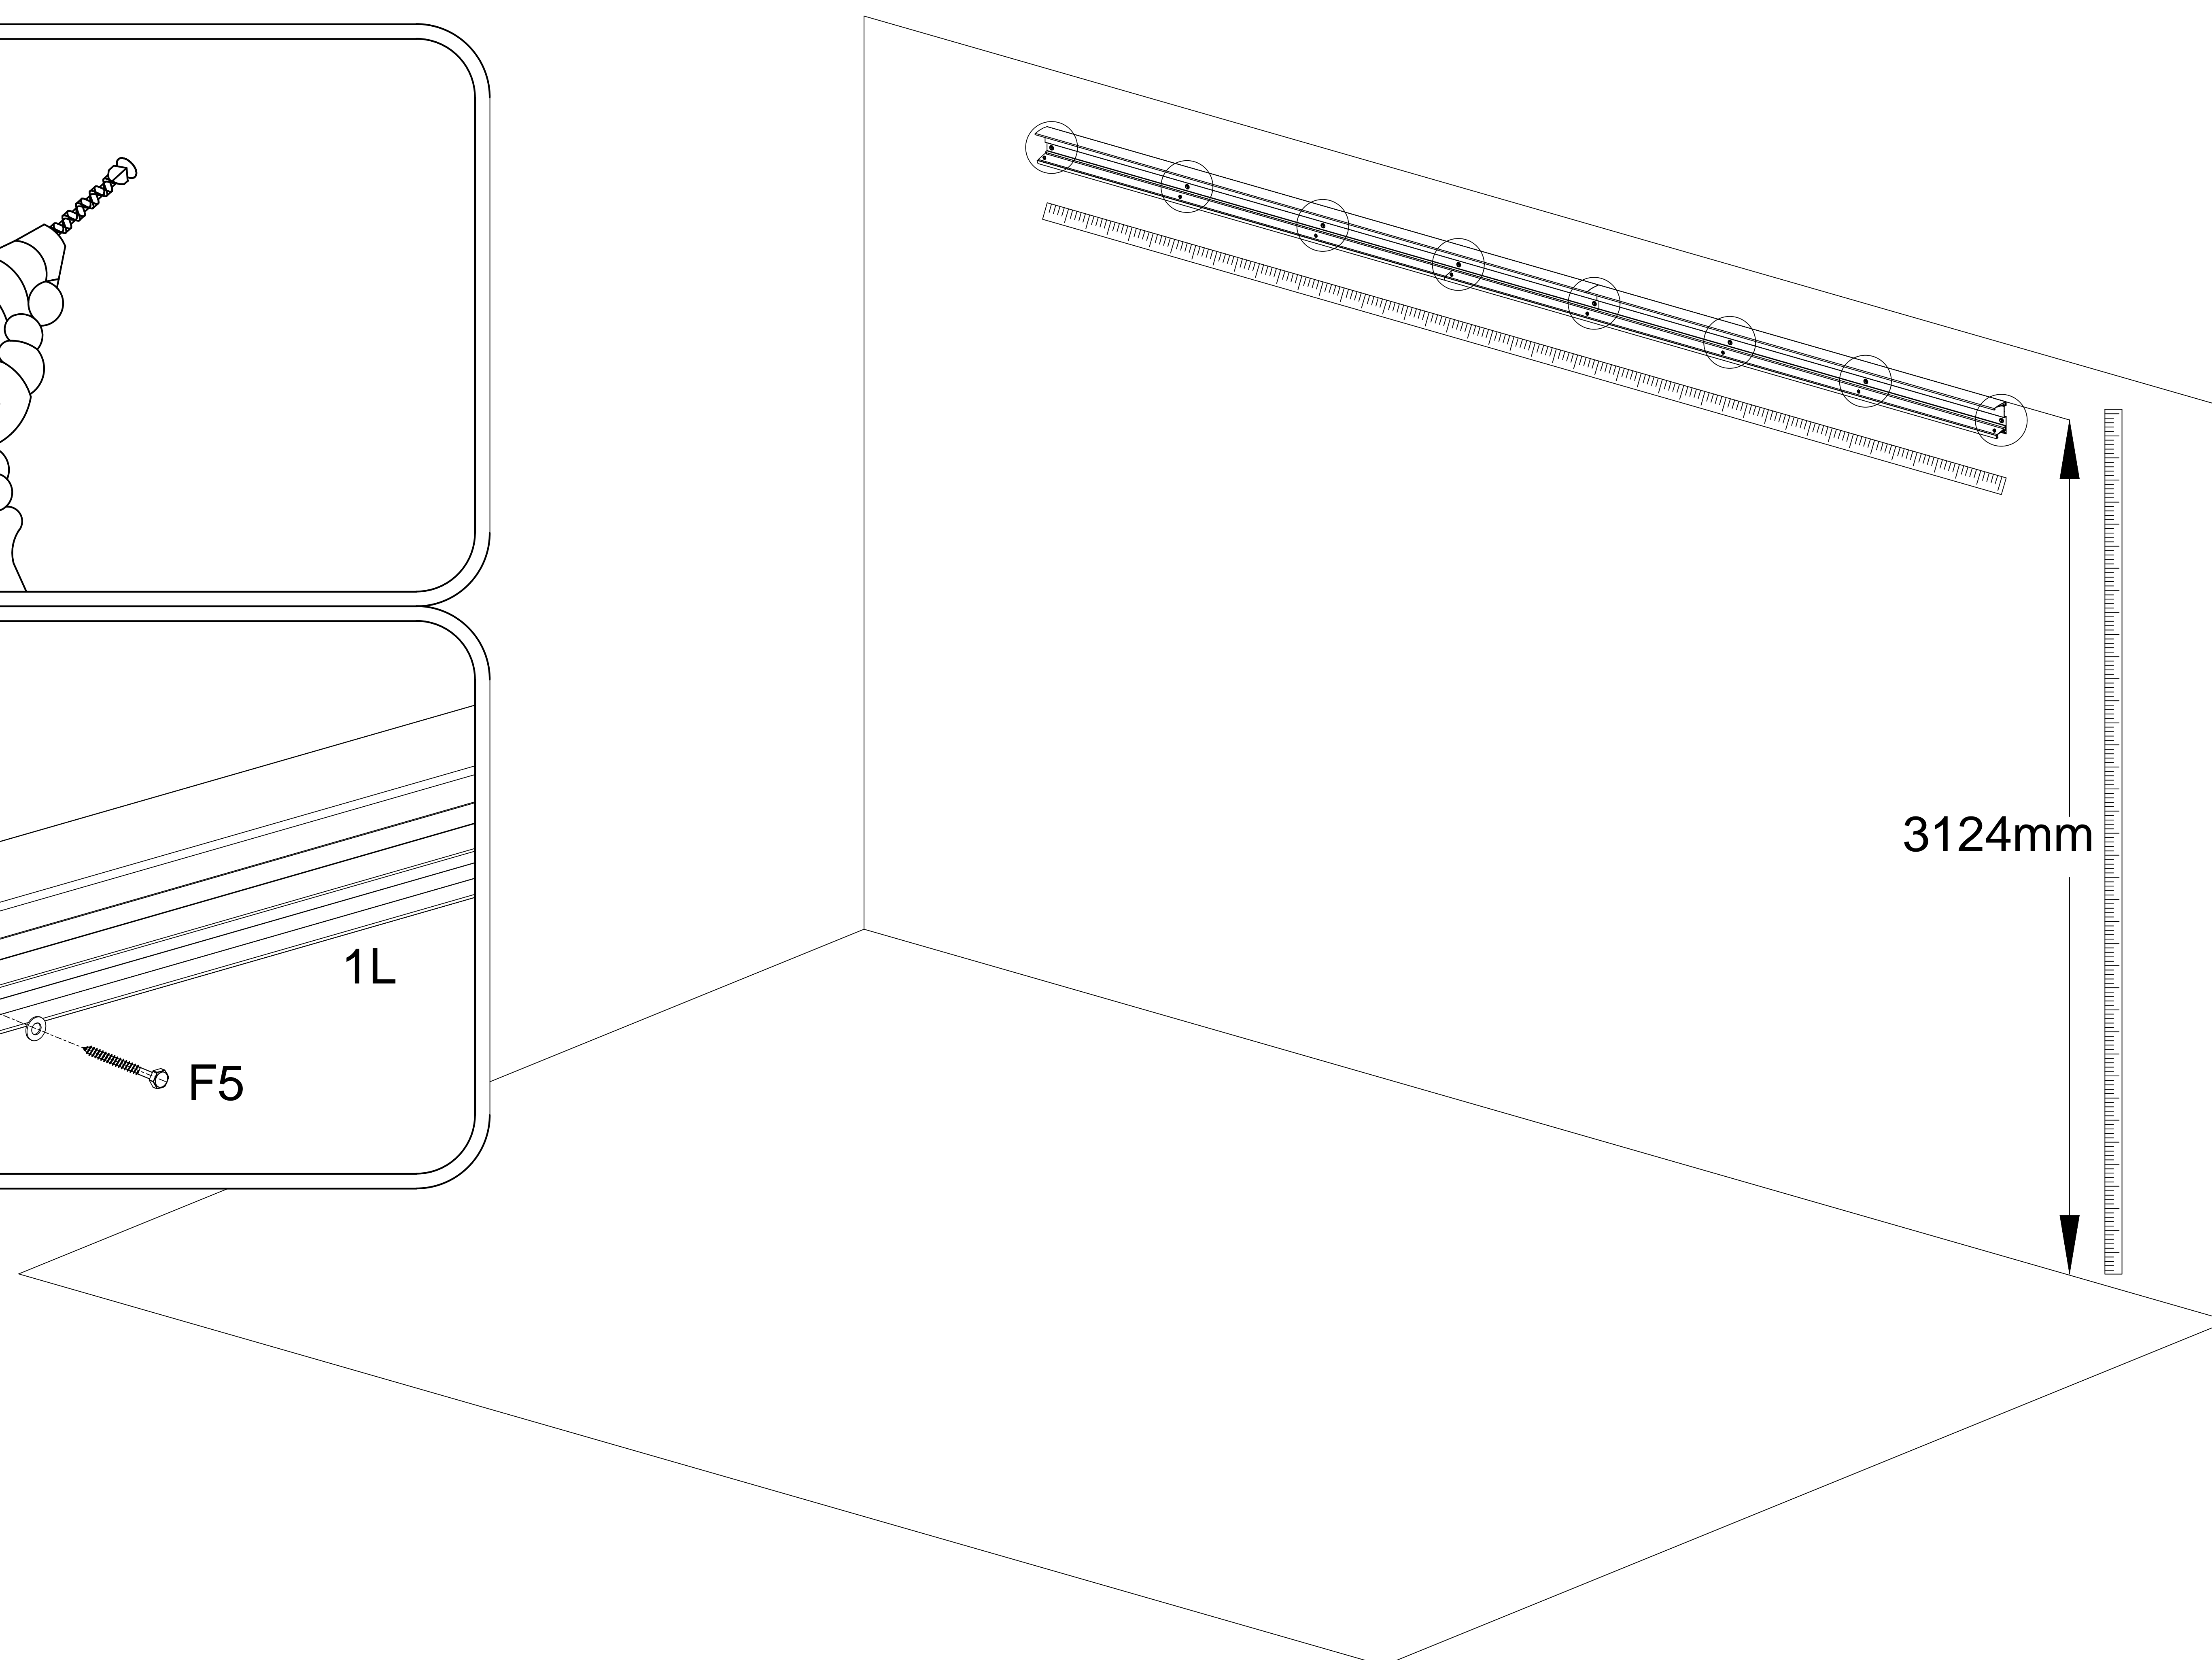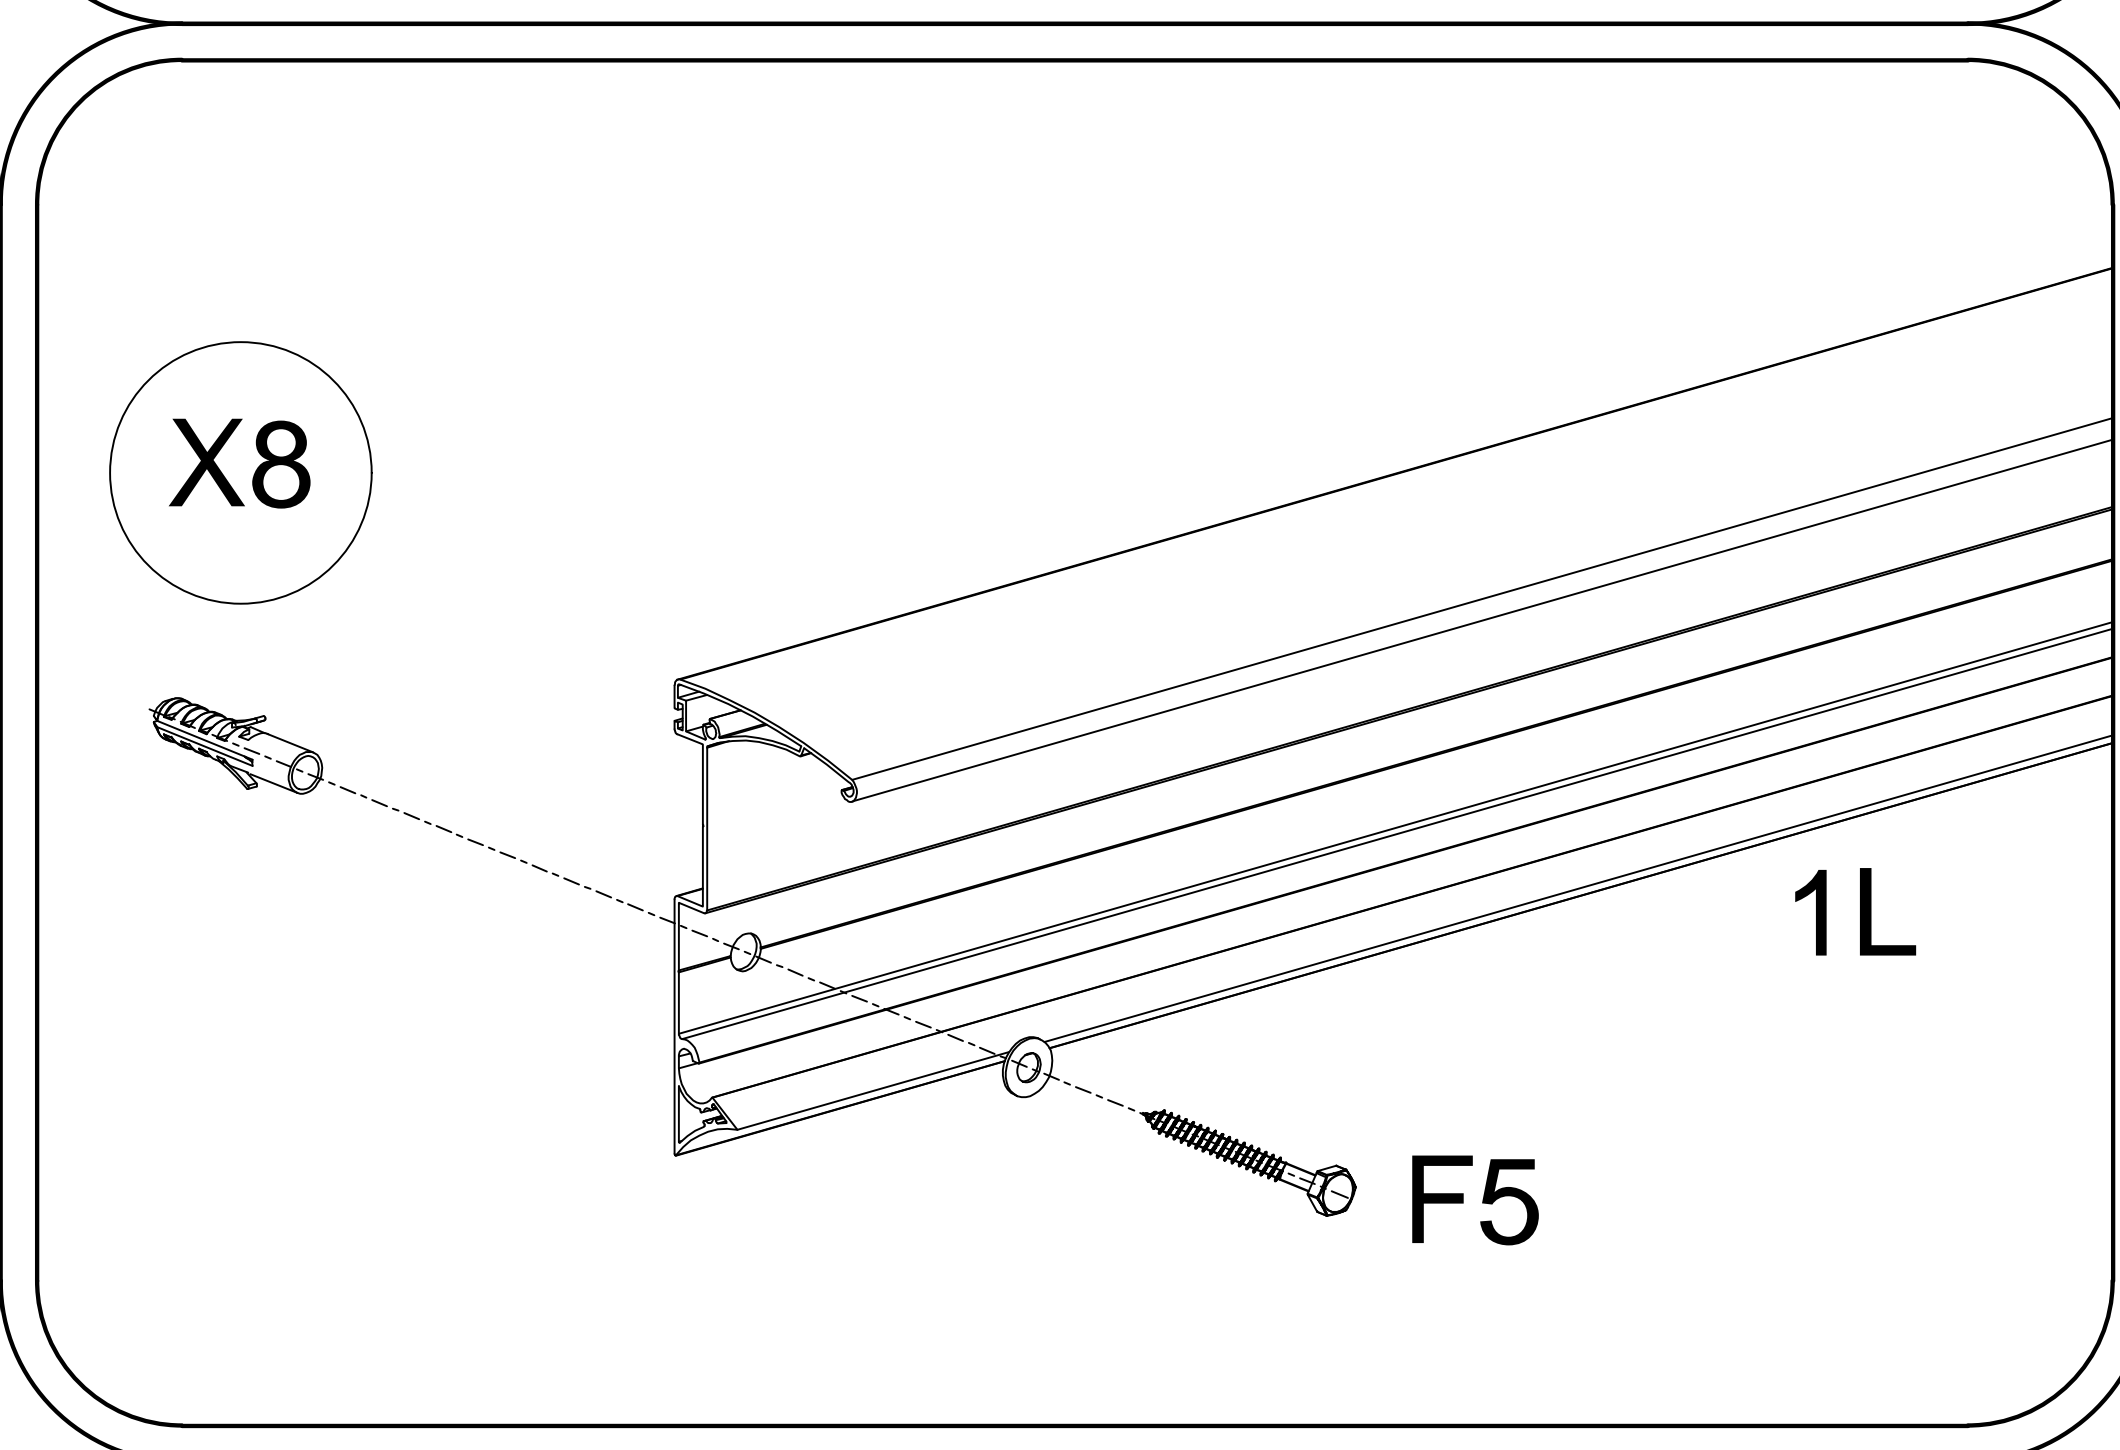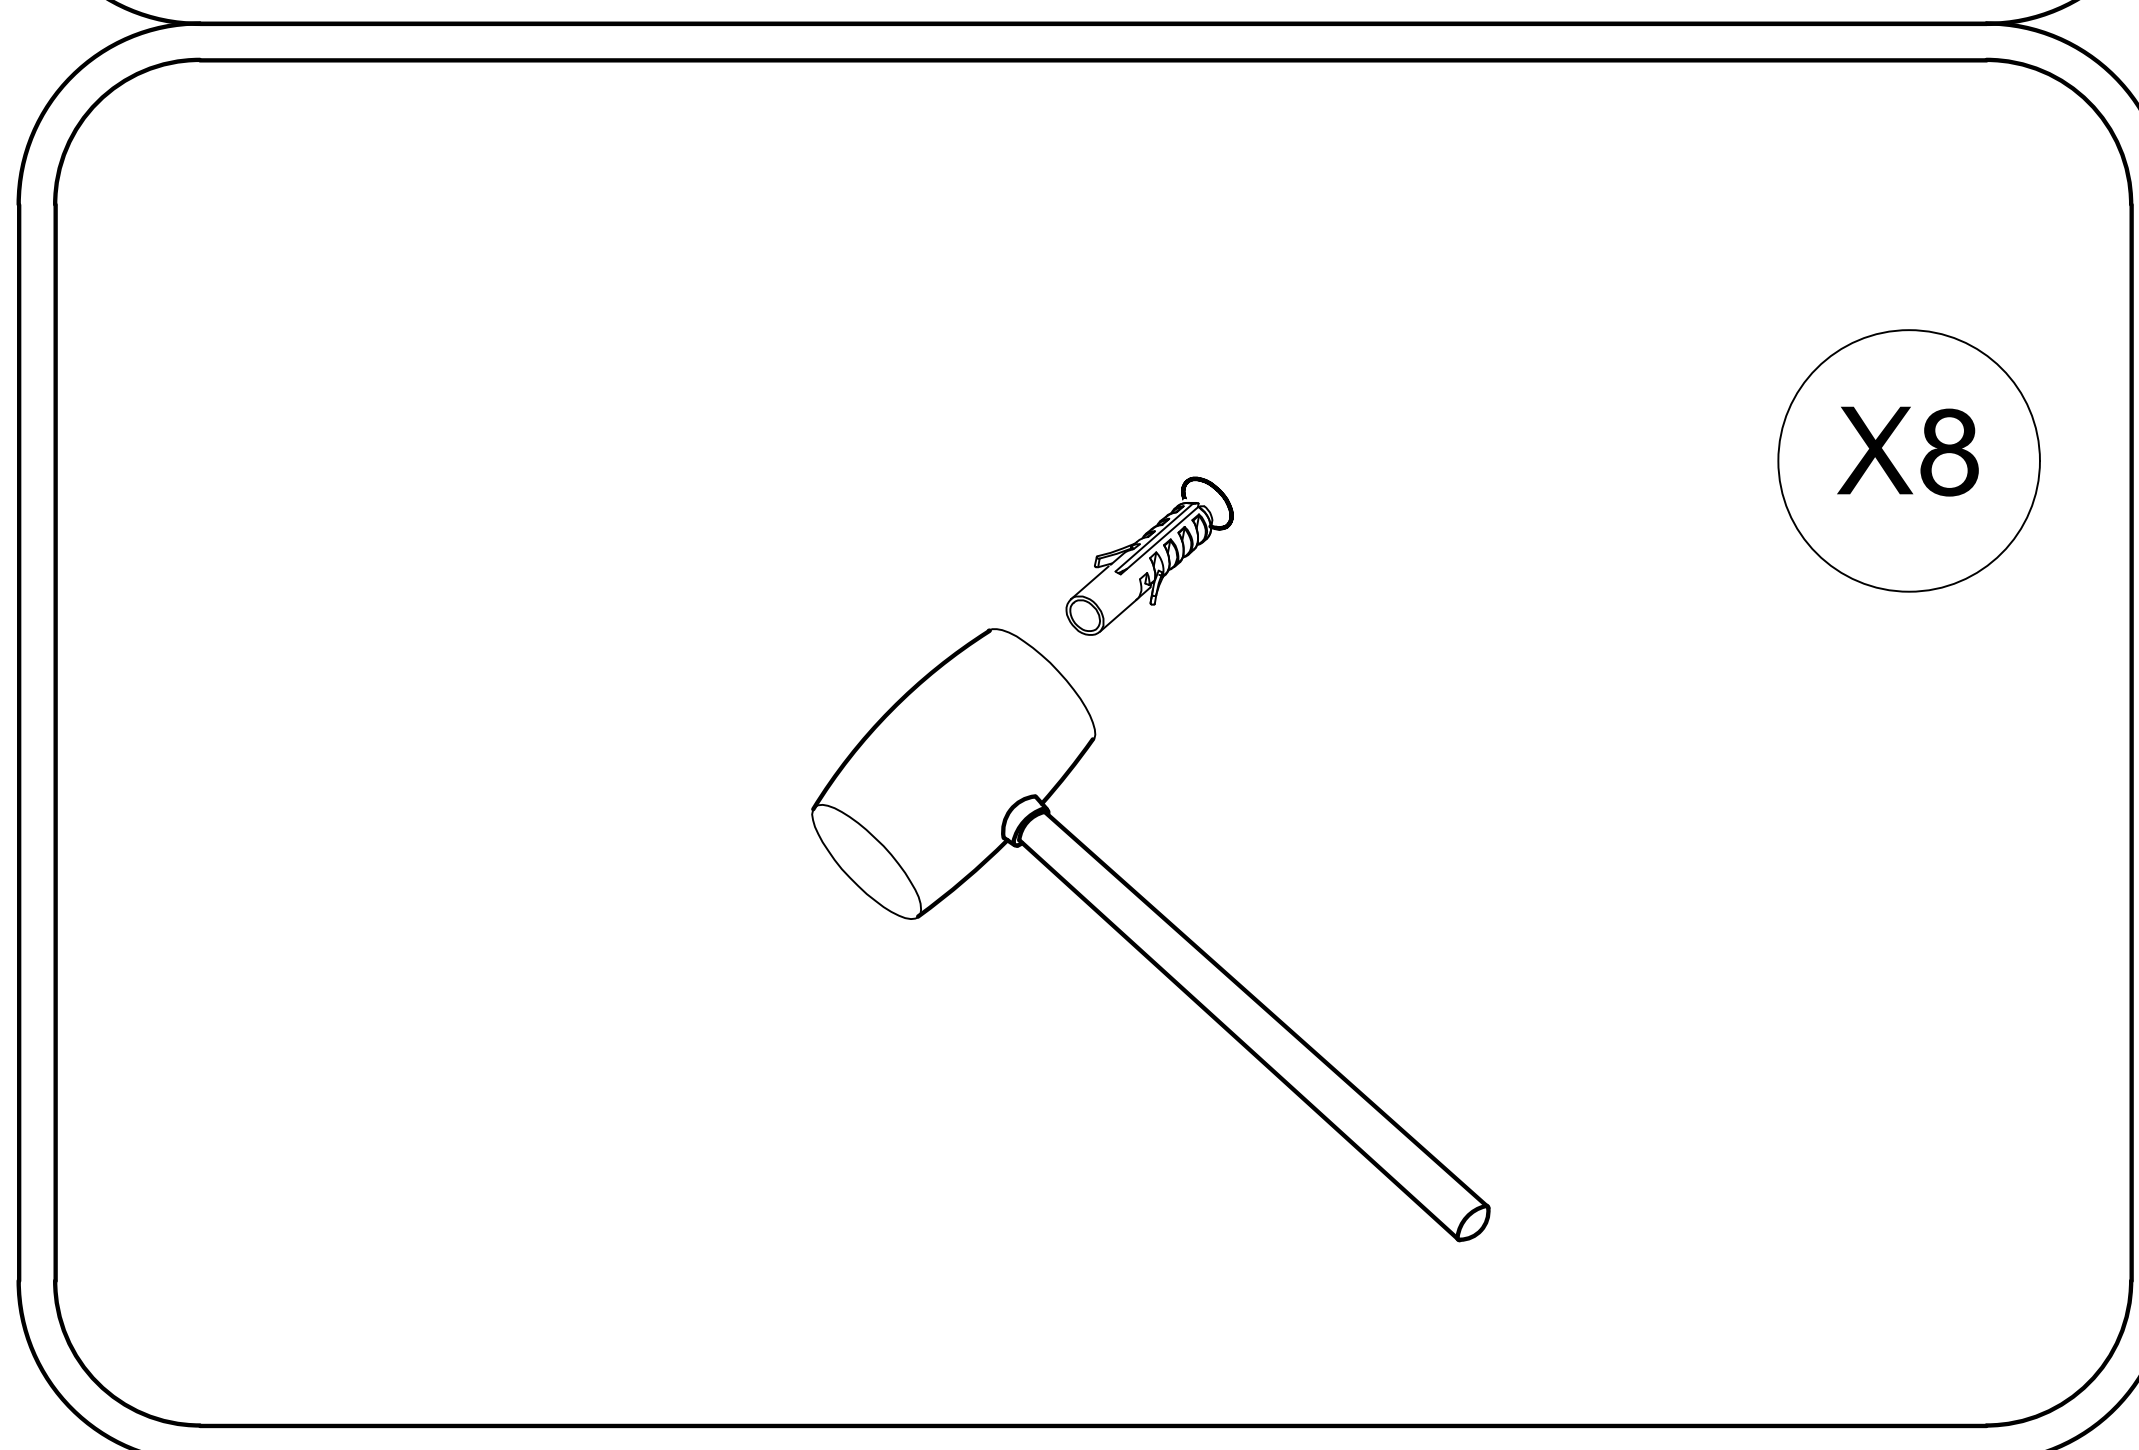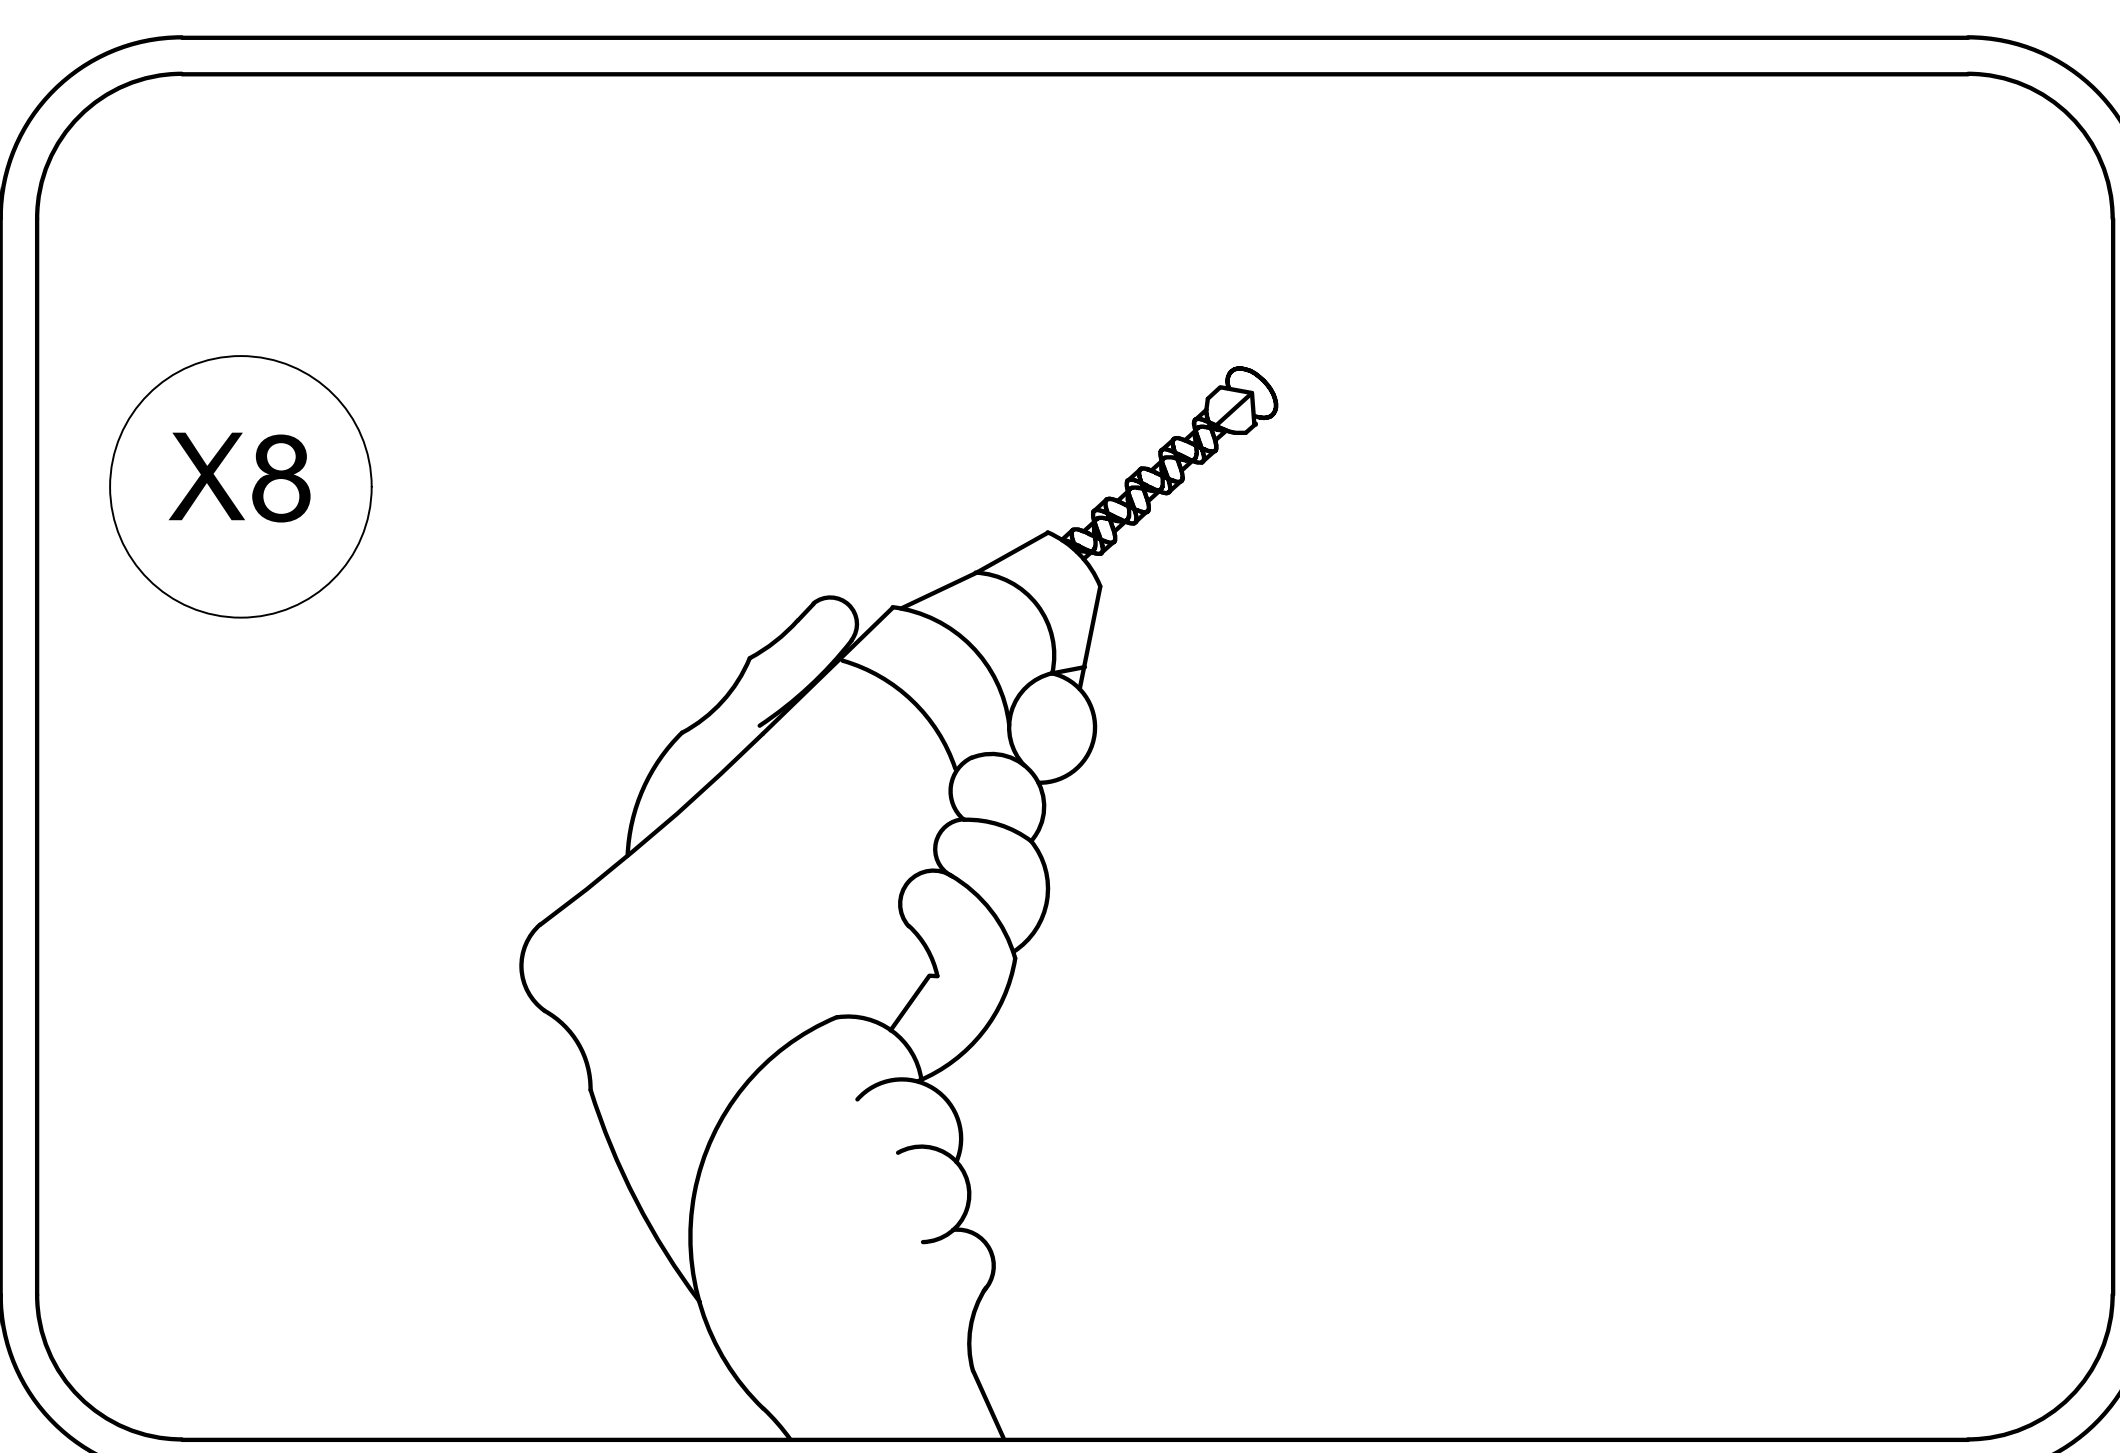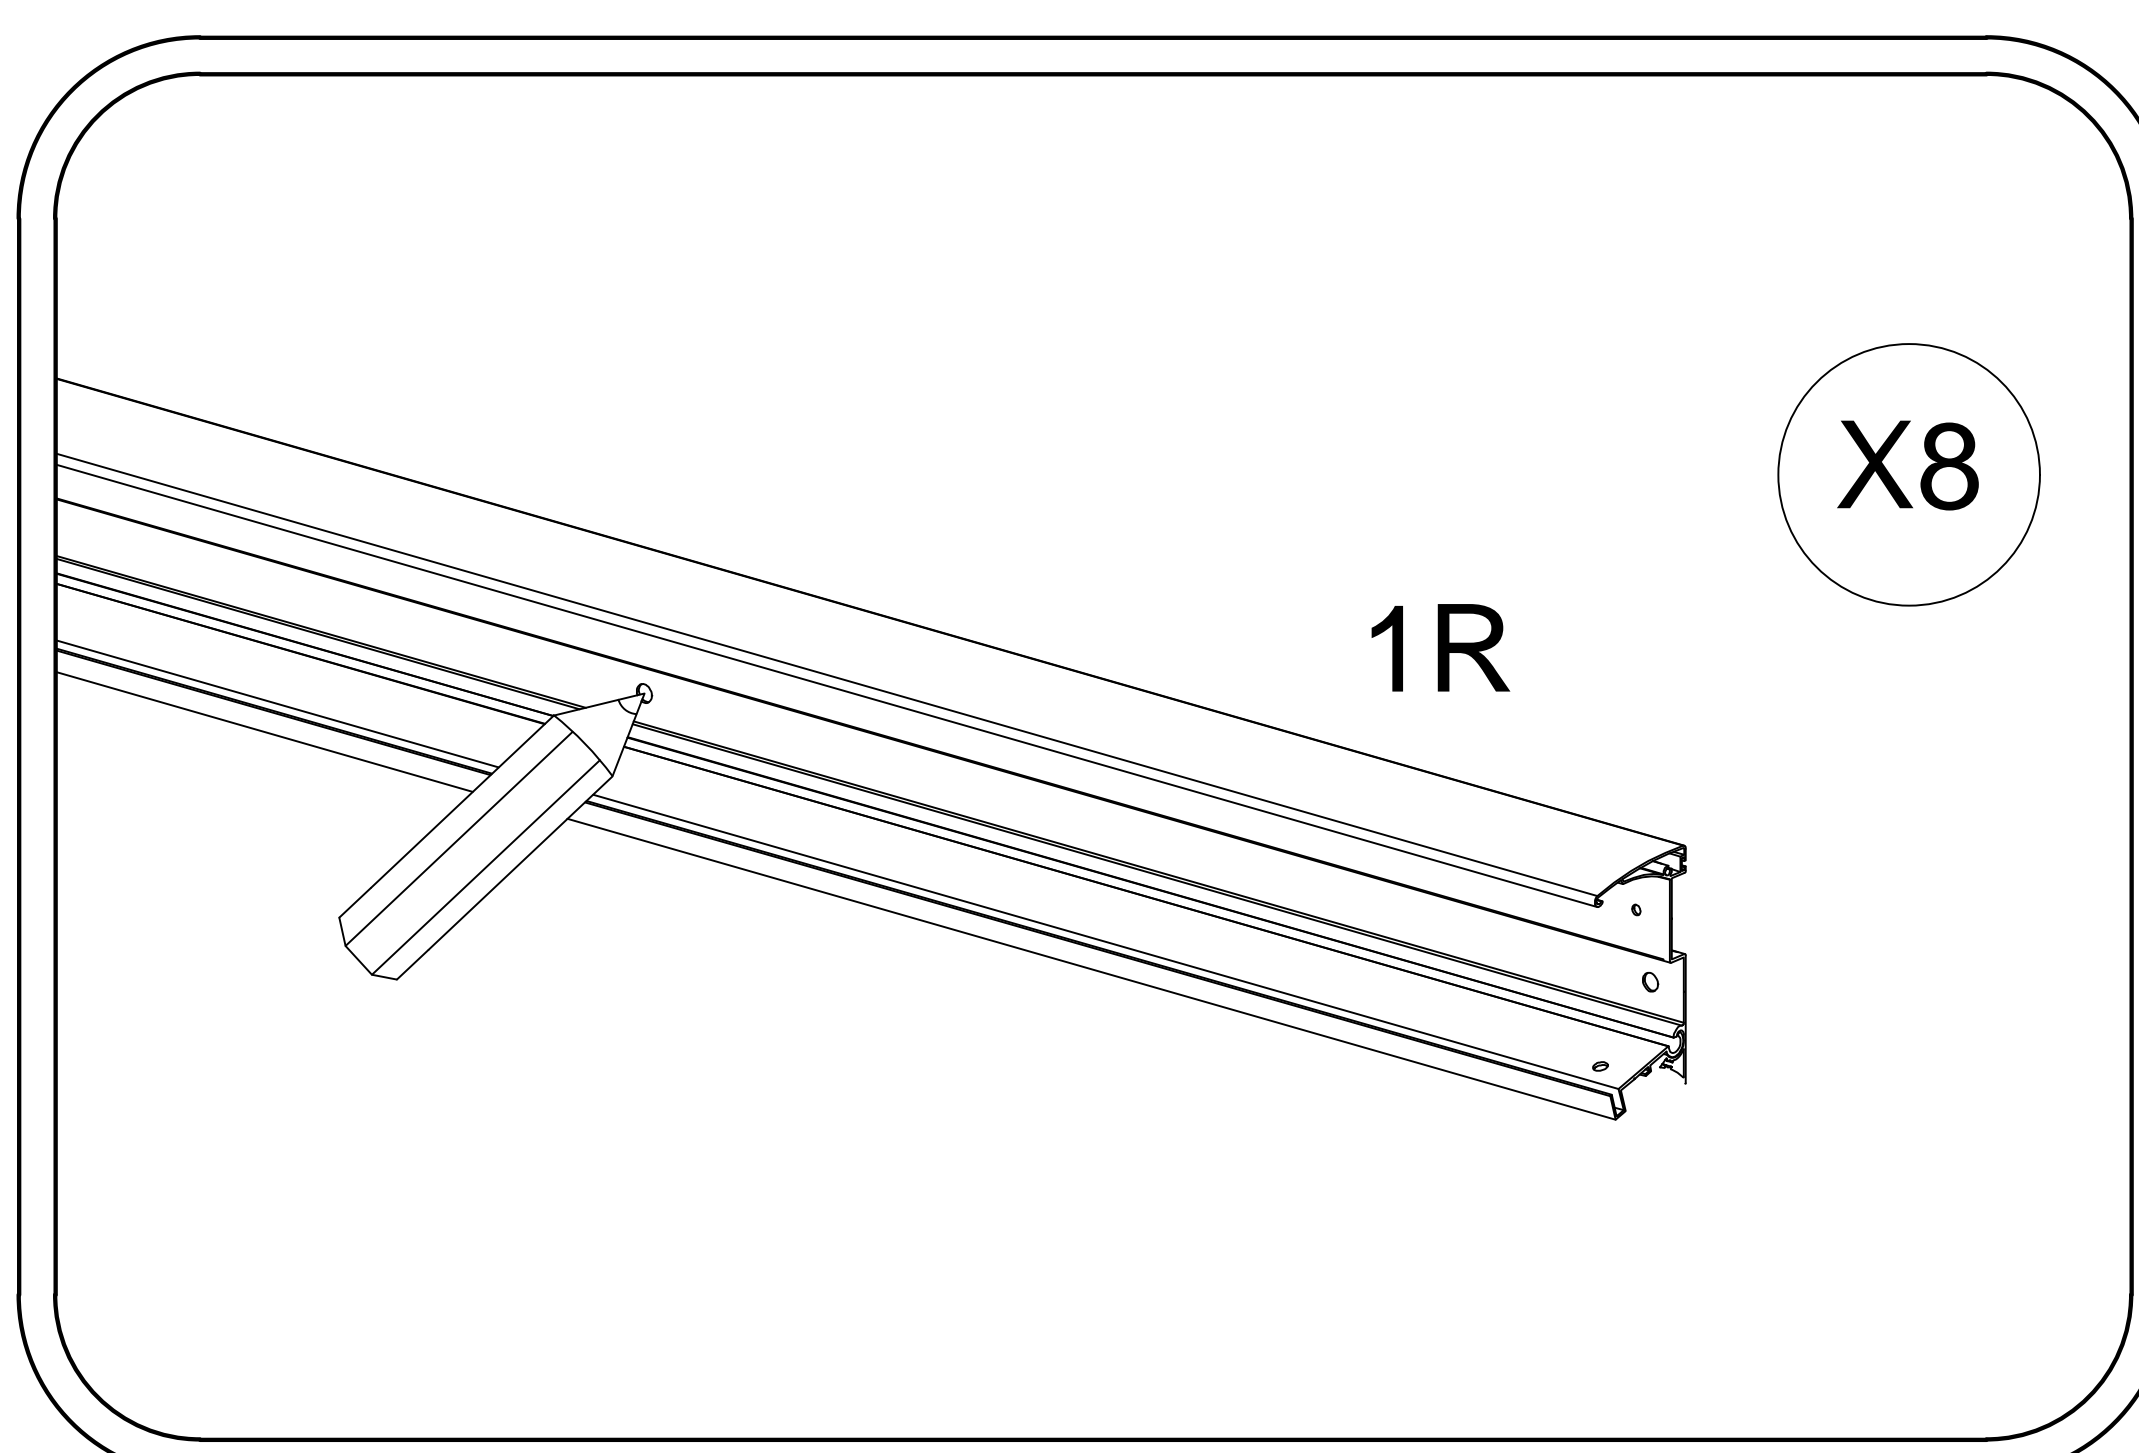





4

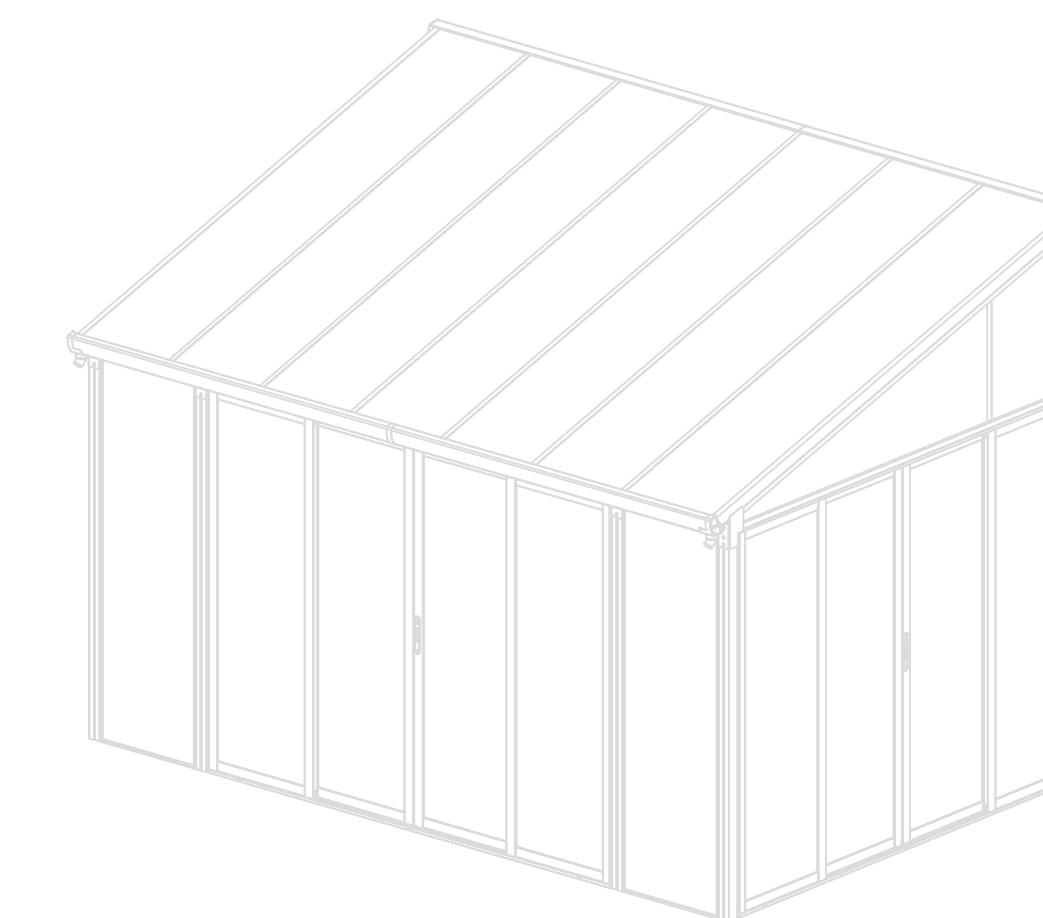

35 2 PCS



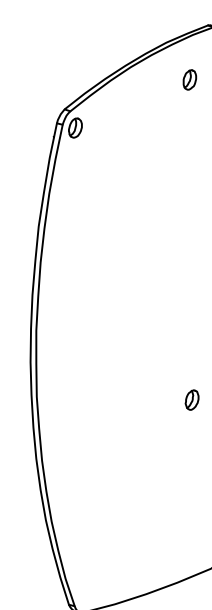



F1

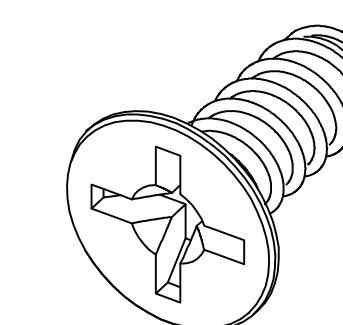








6 PCS

ST4.2X20





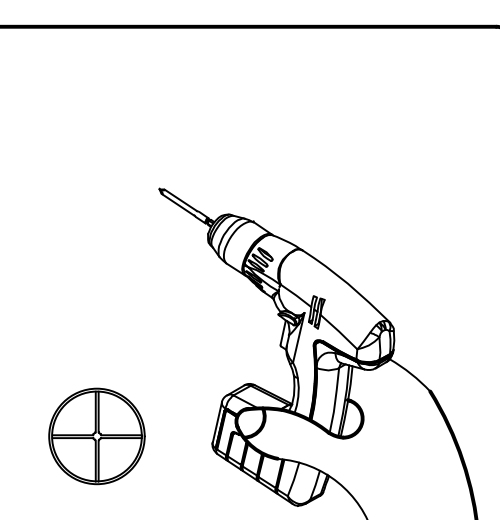
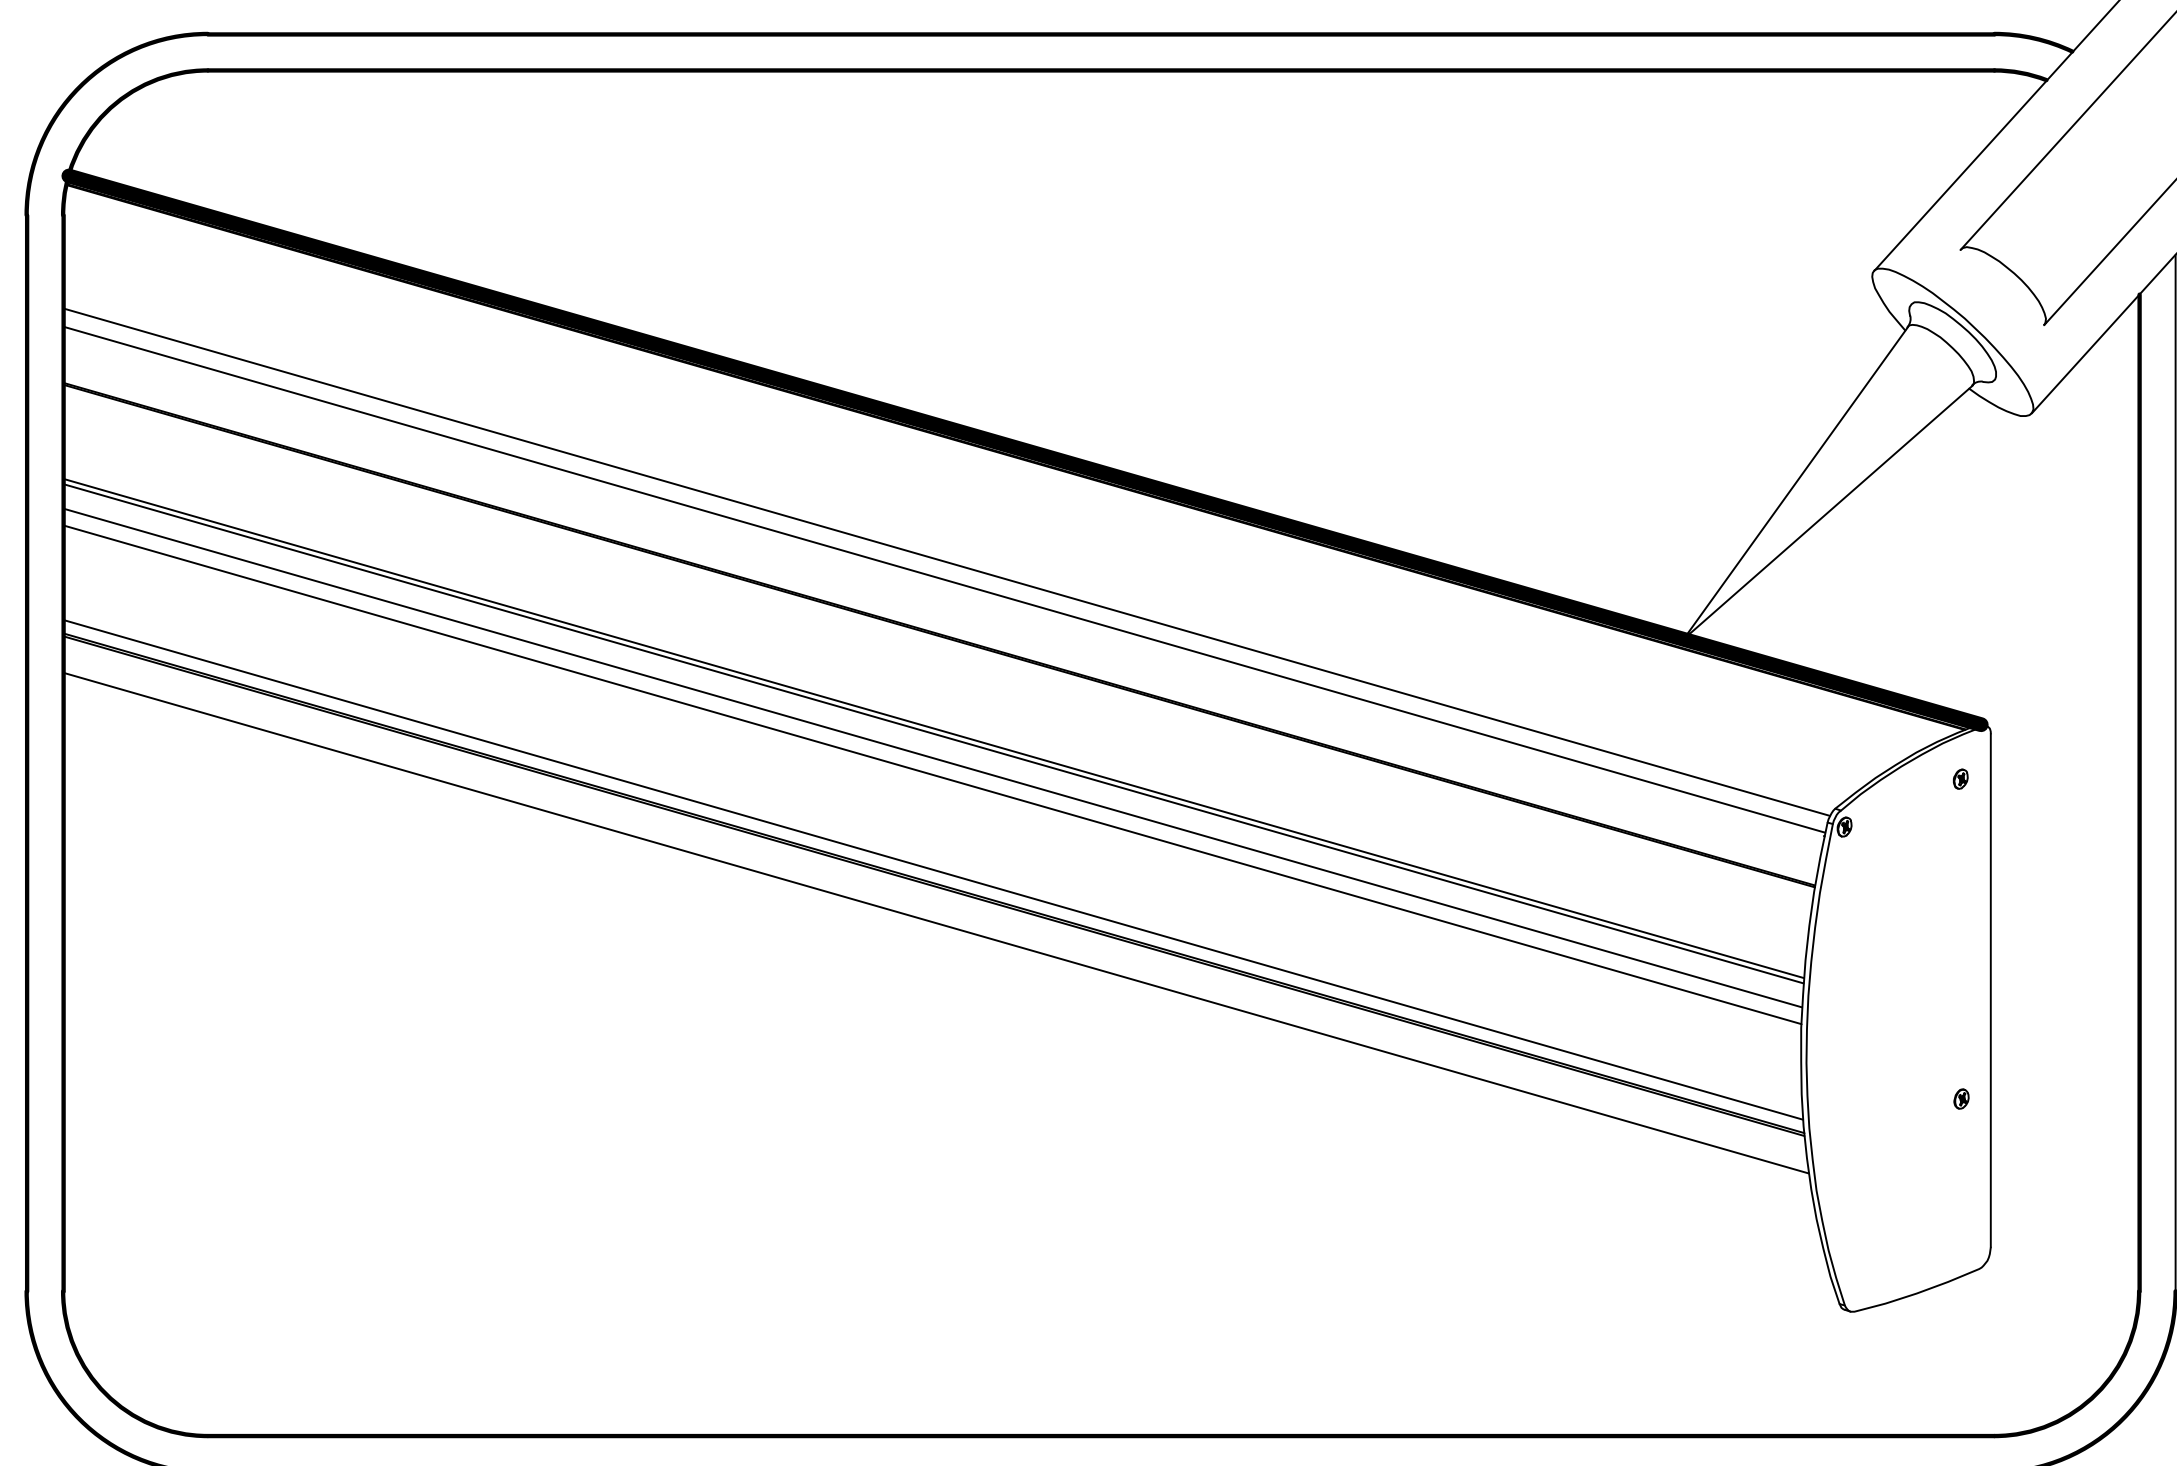
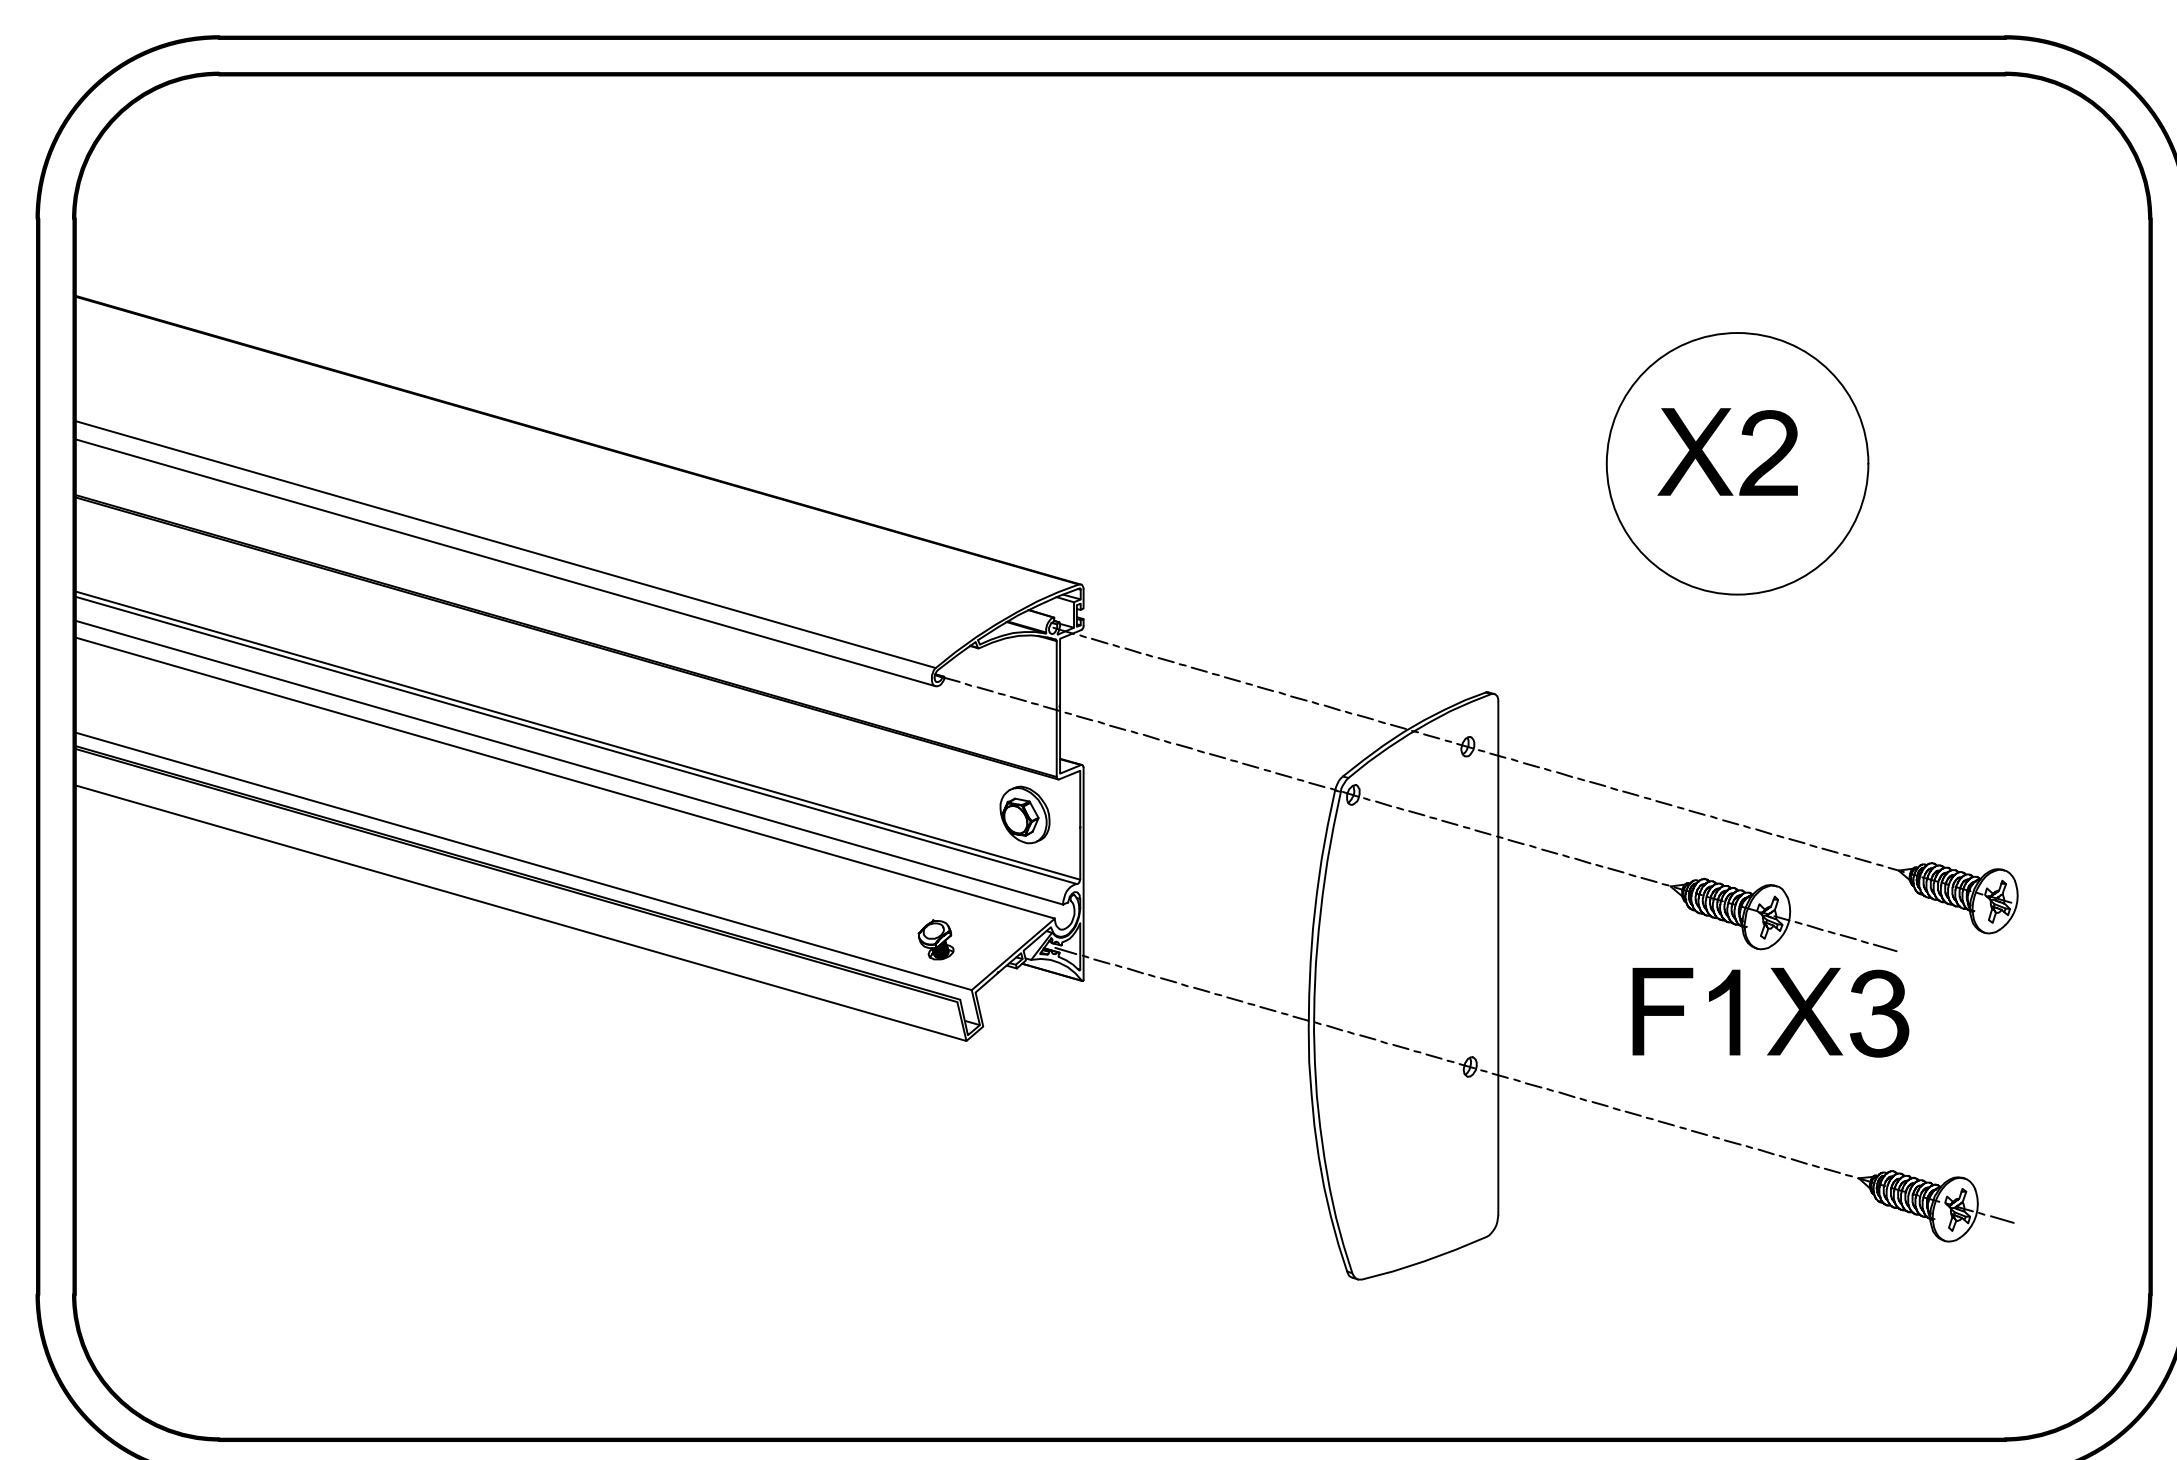


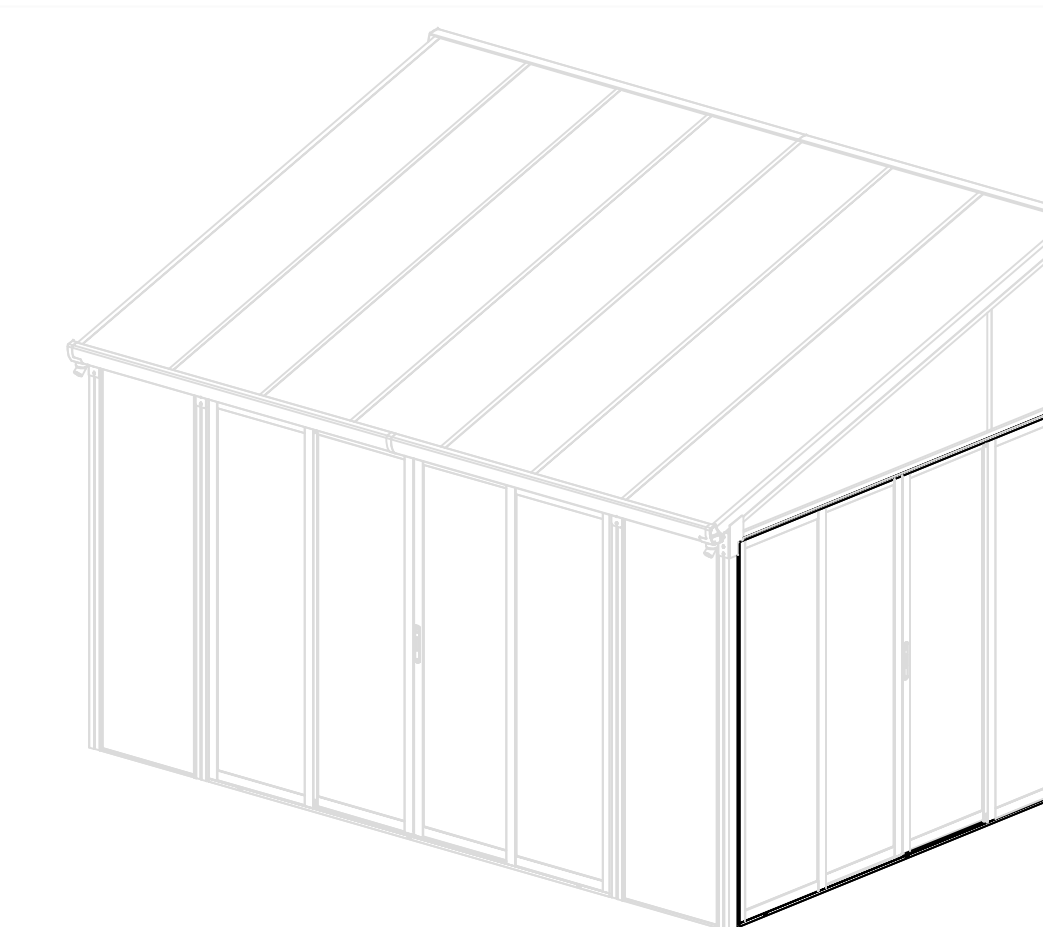


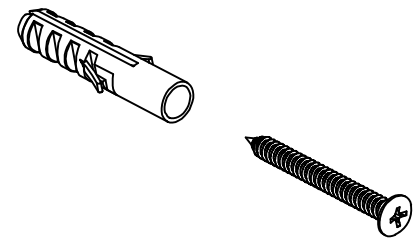F6  16 PCS  
ST6.3X60

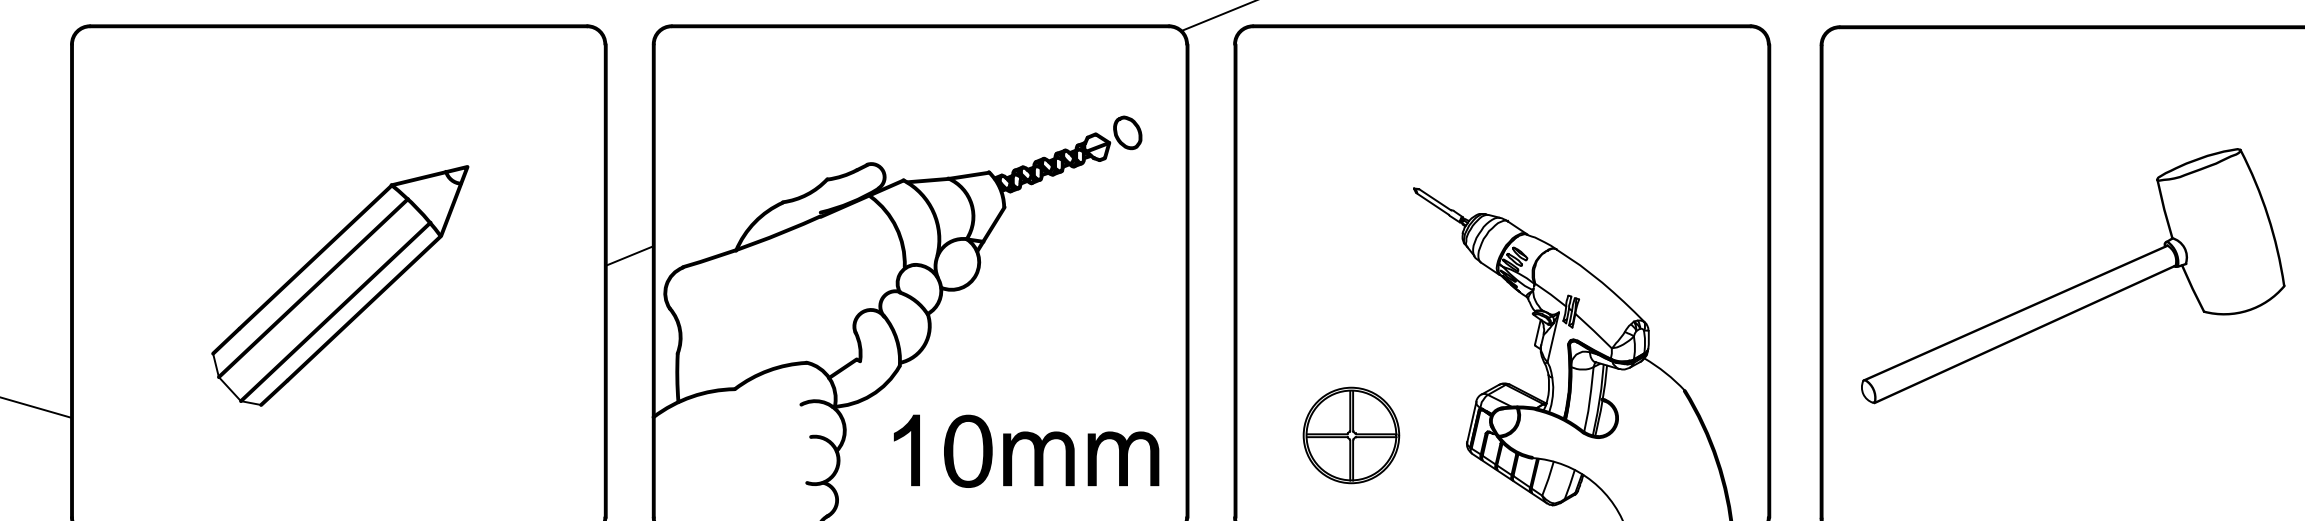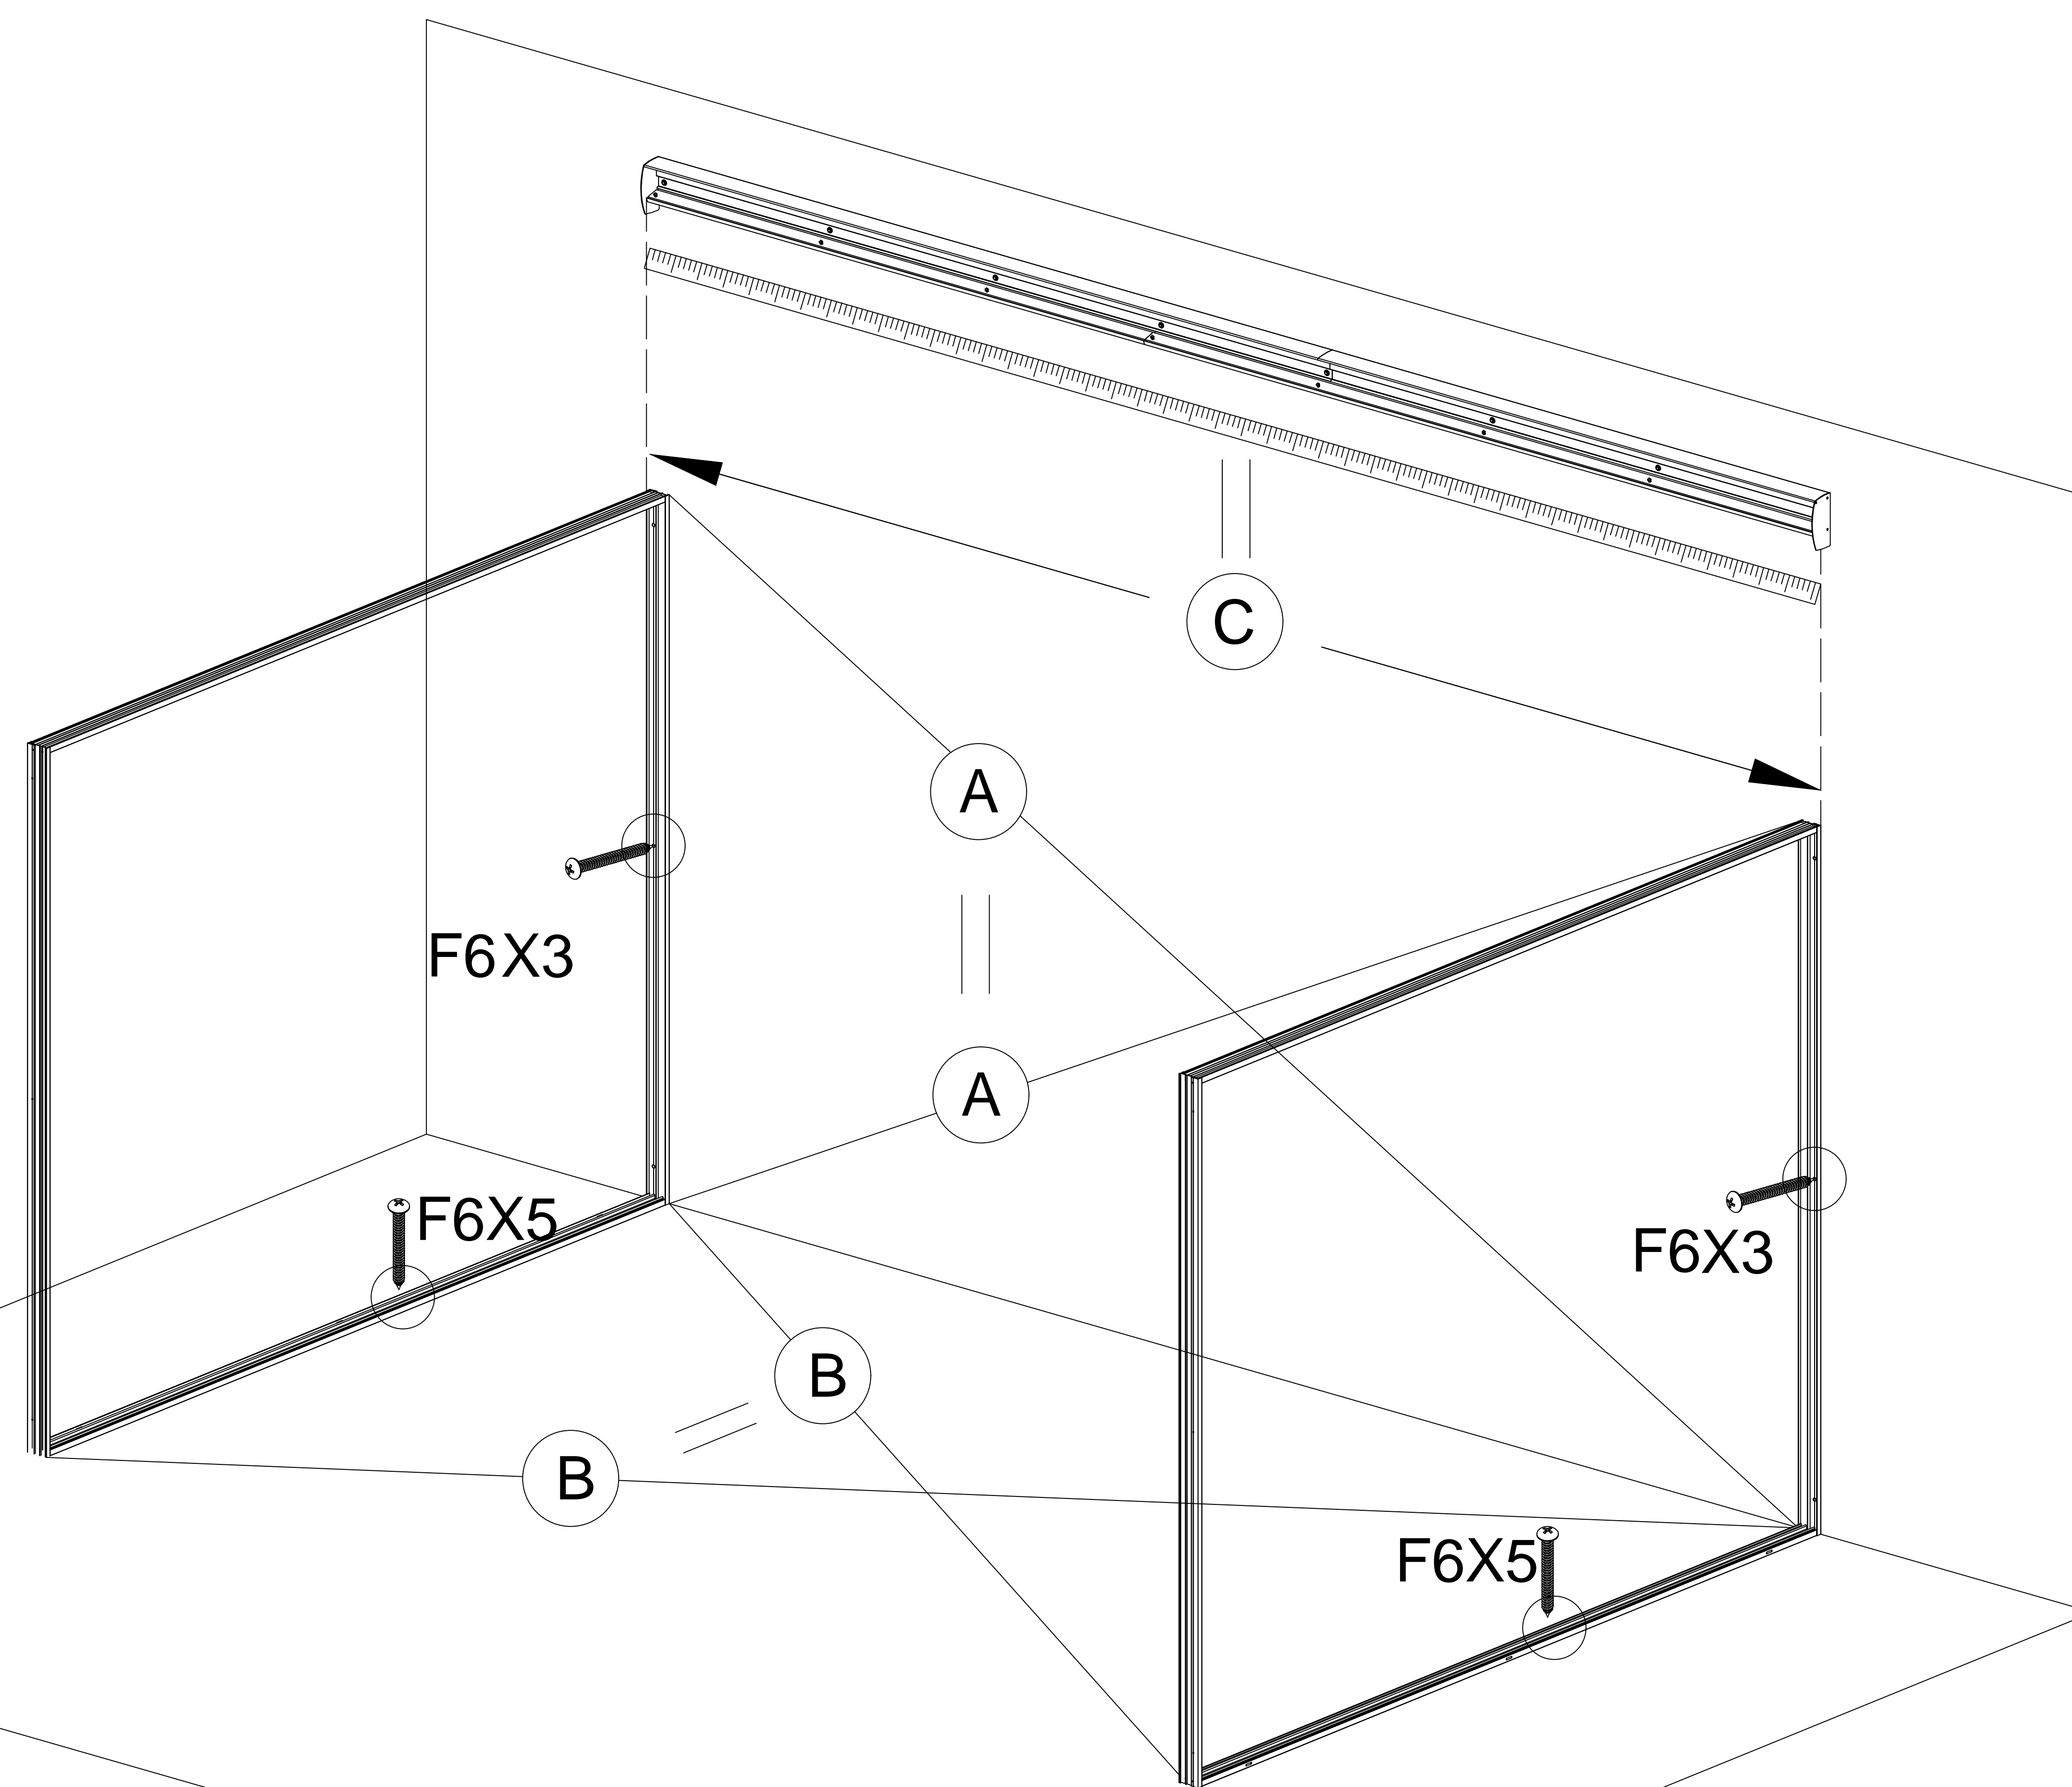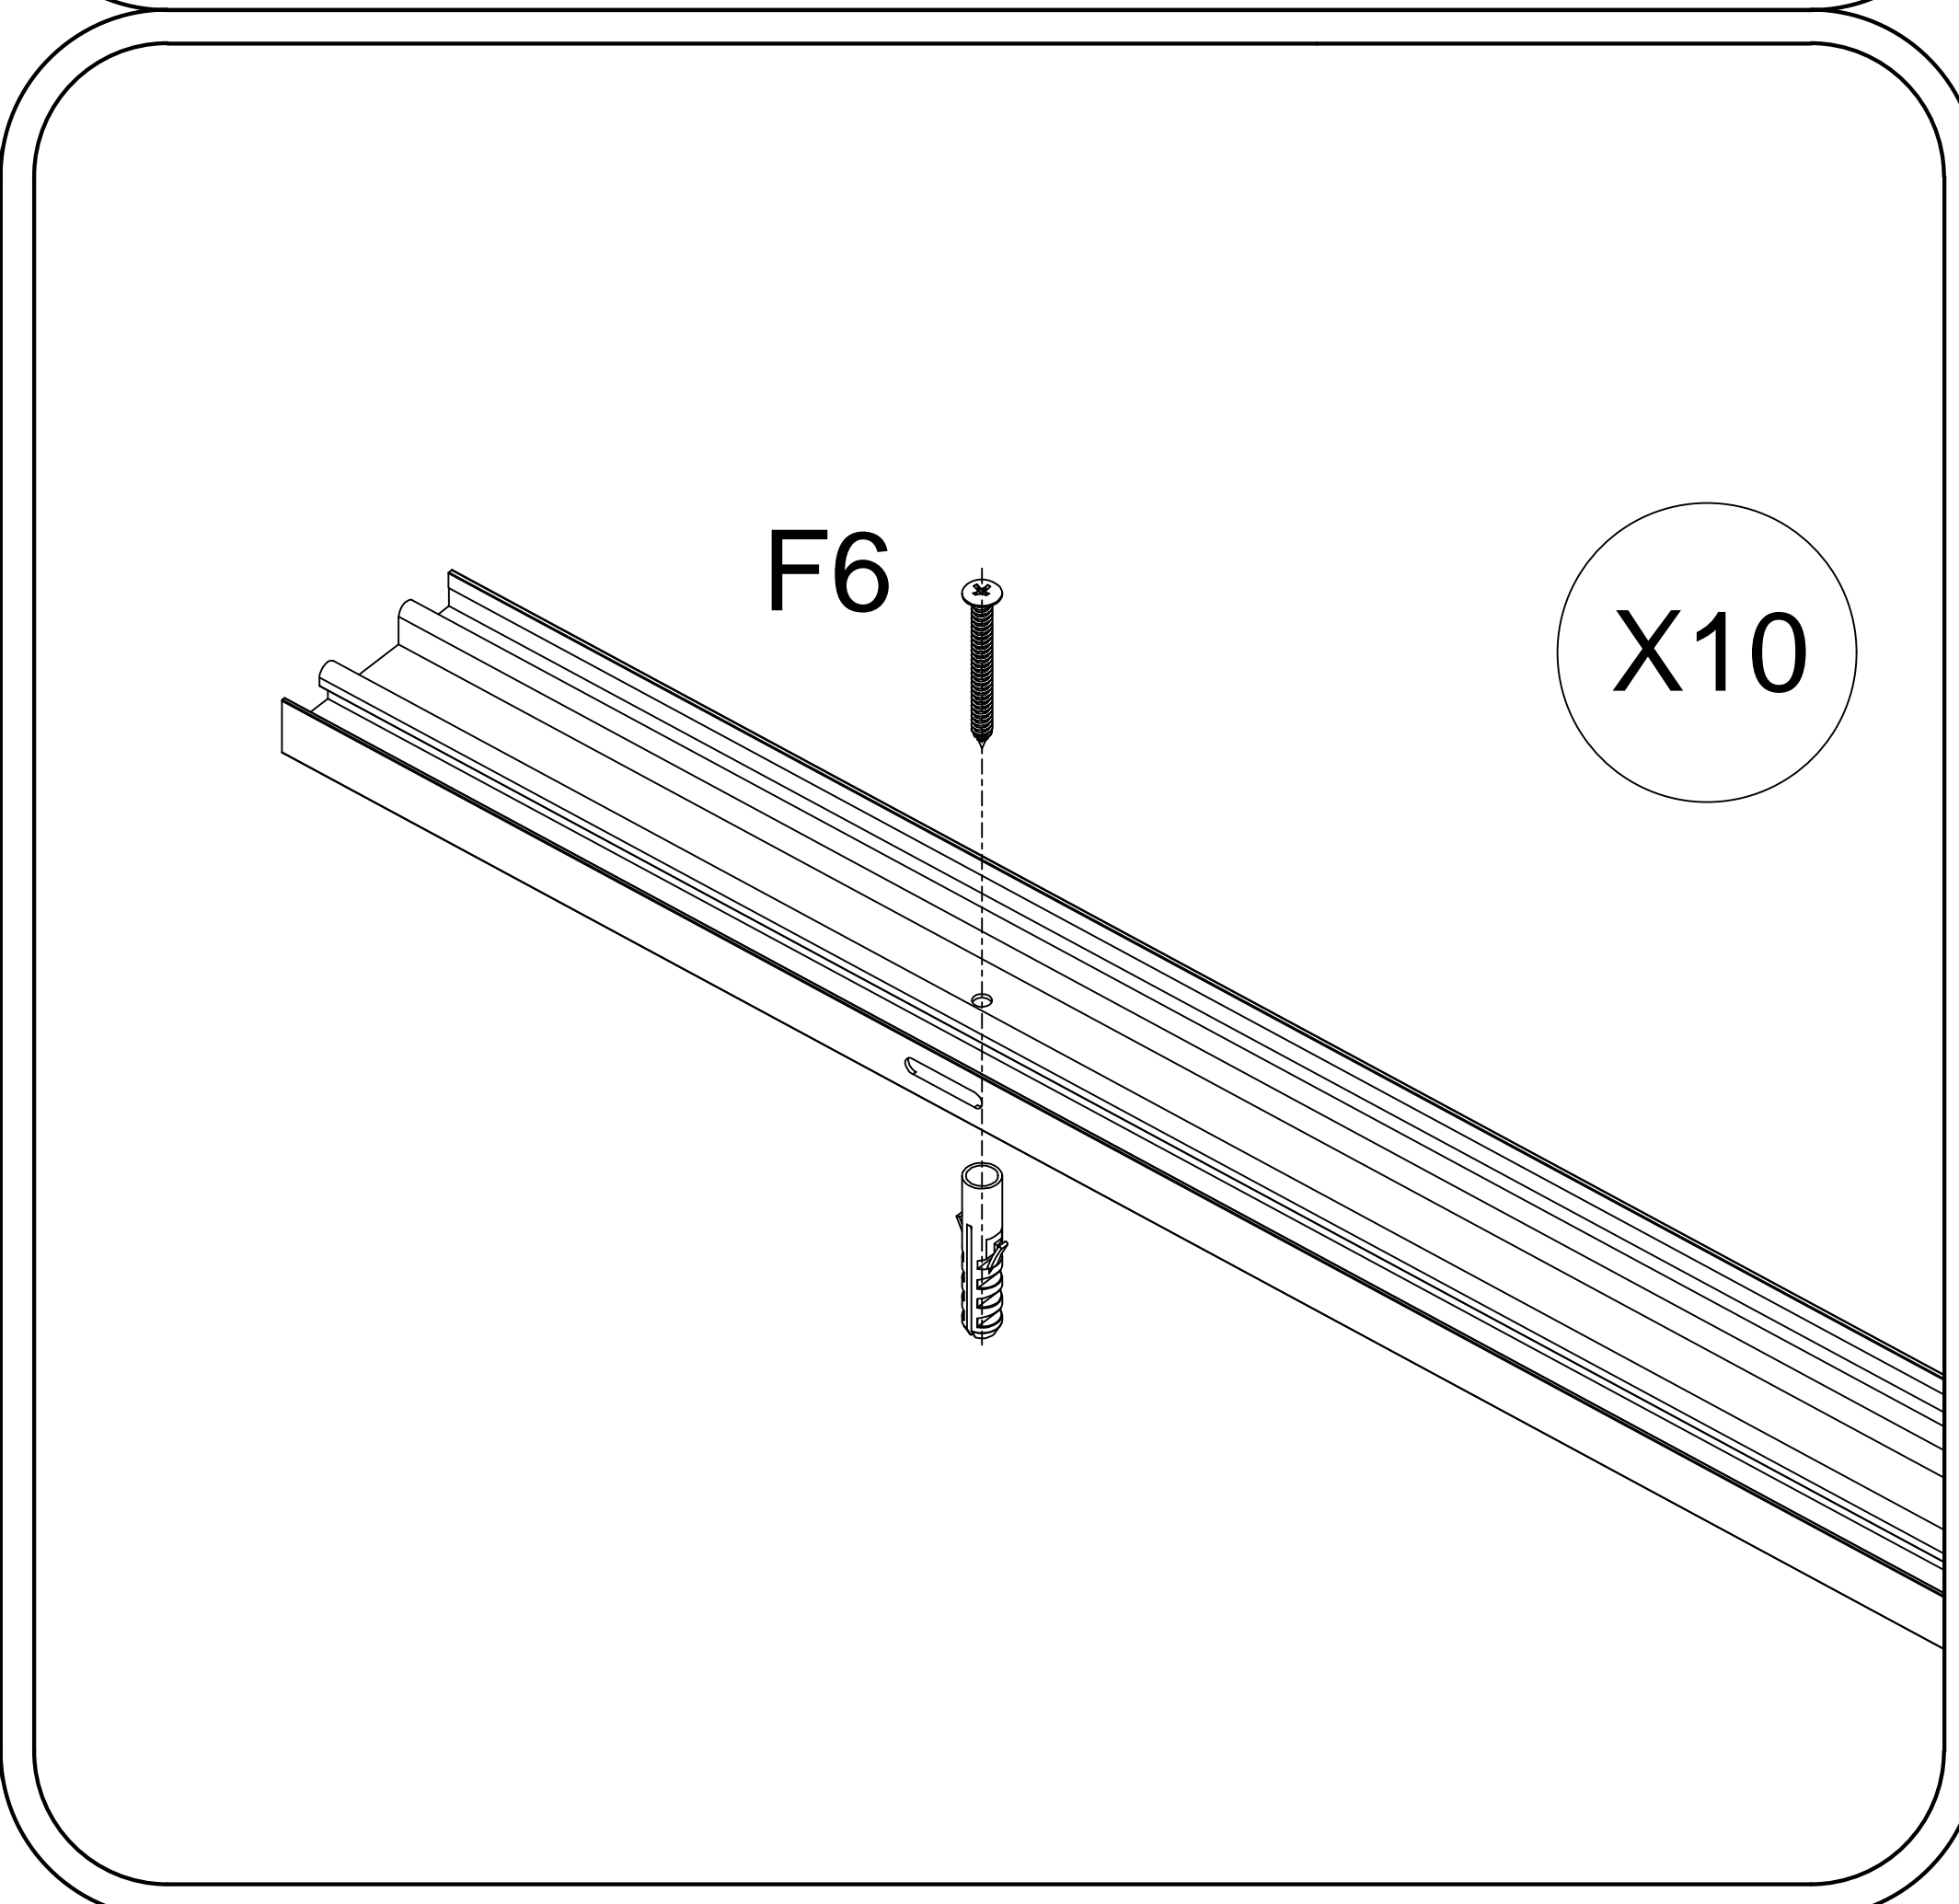
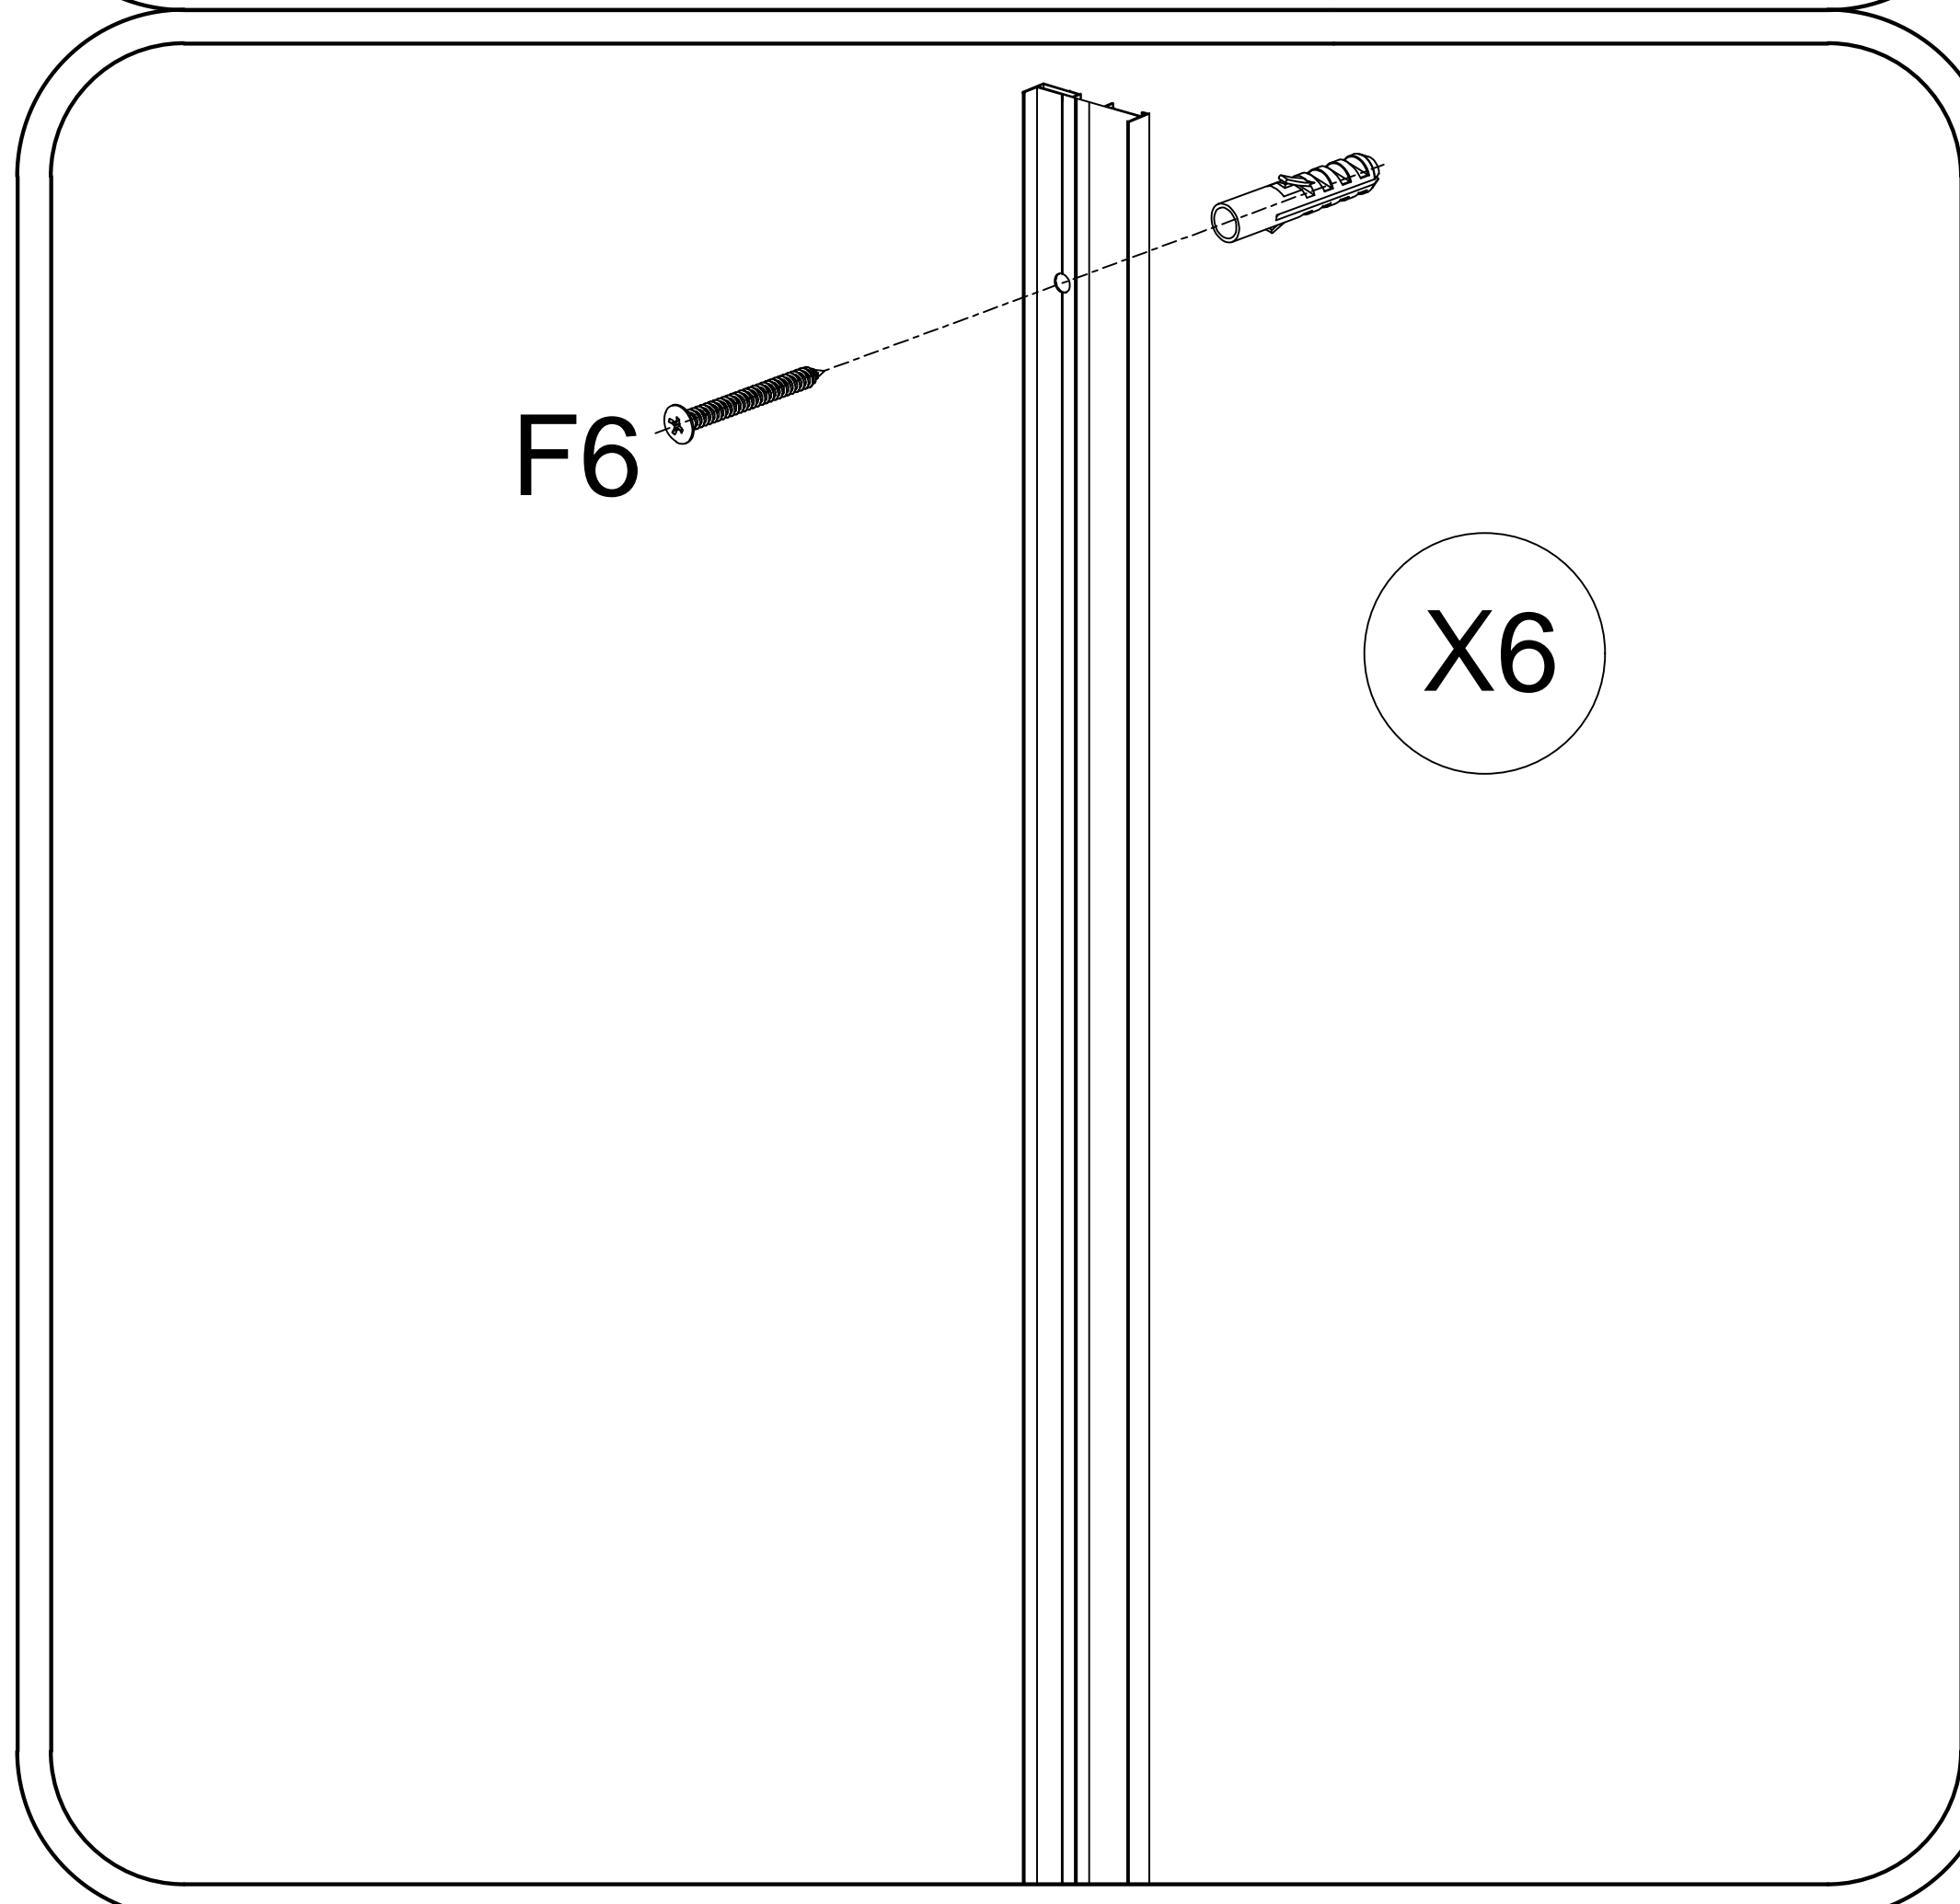
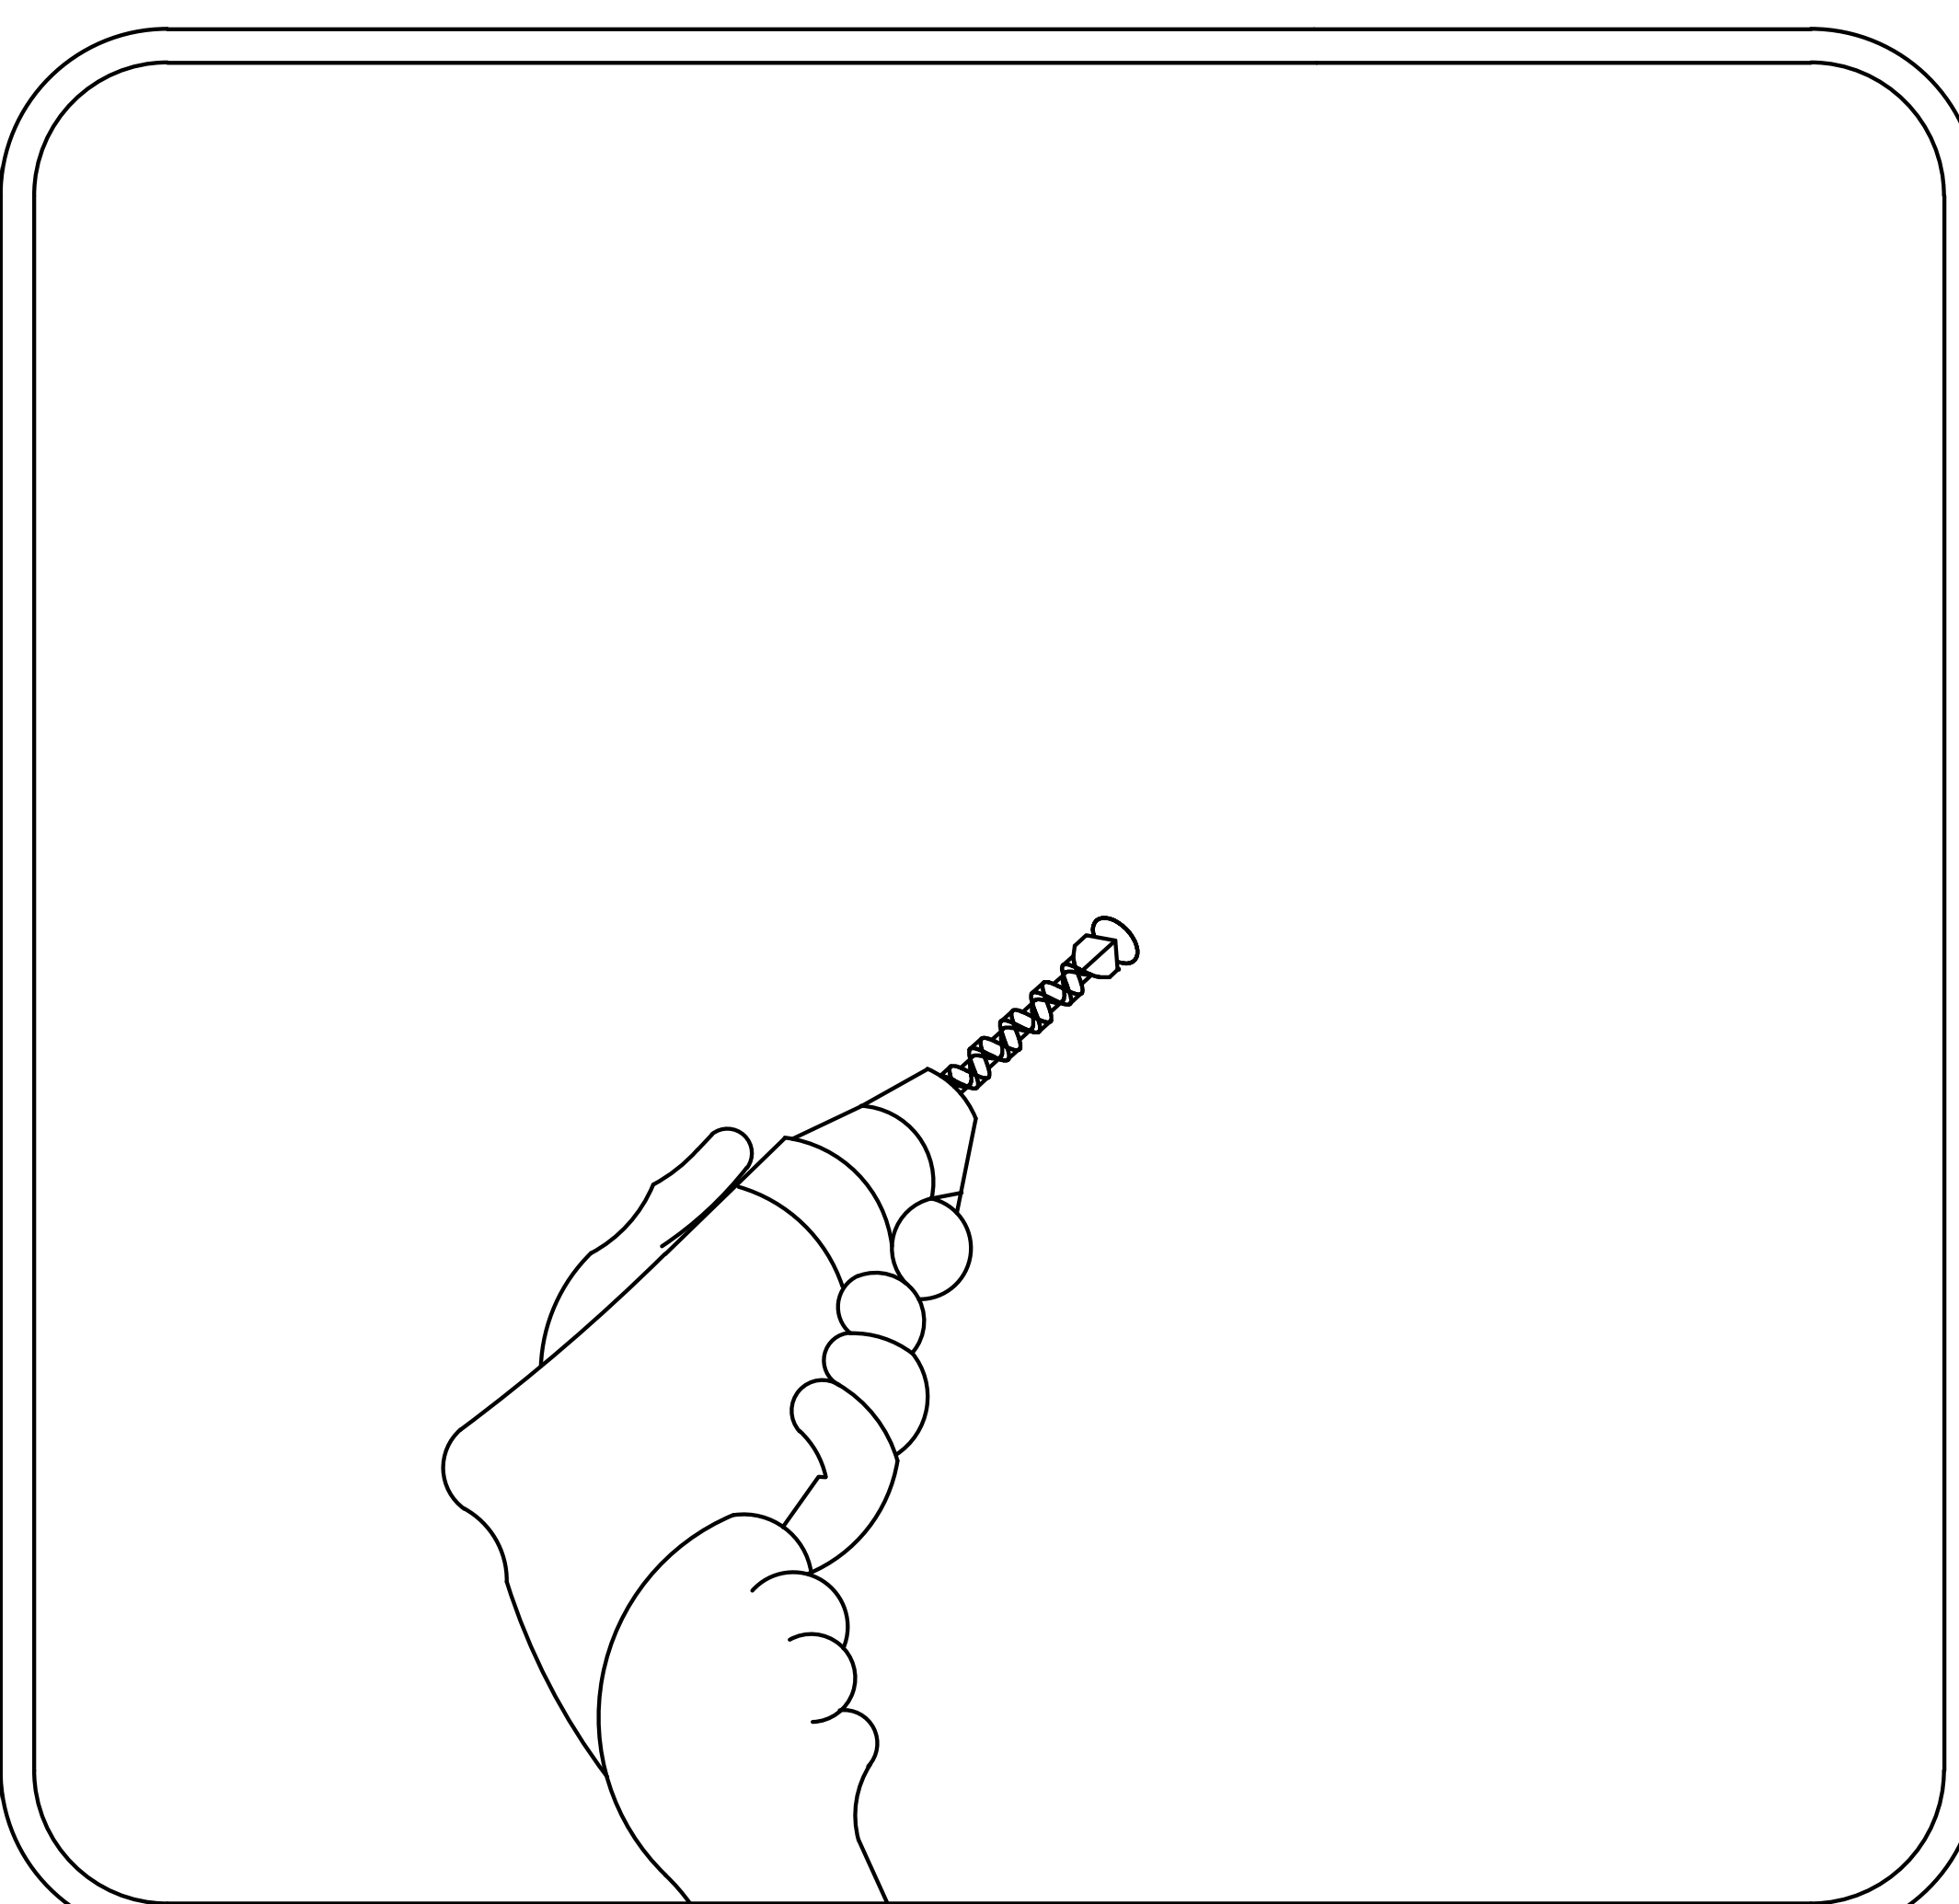
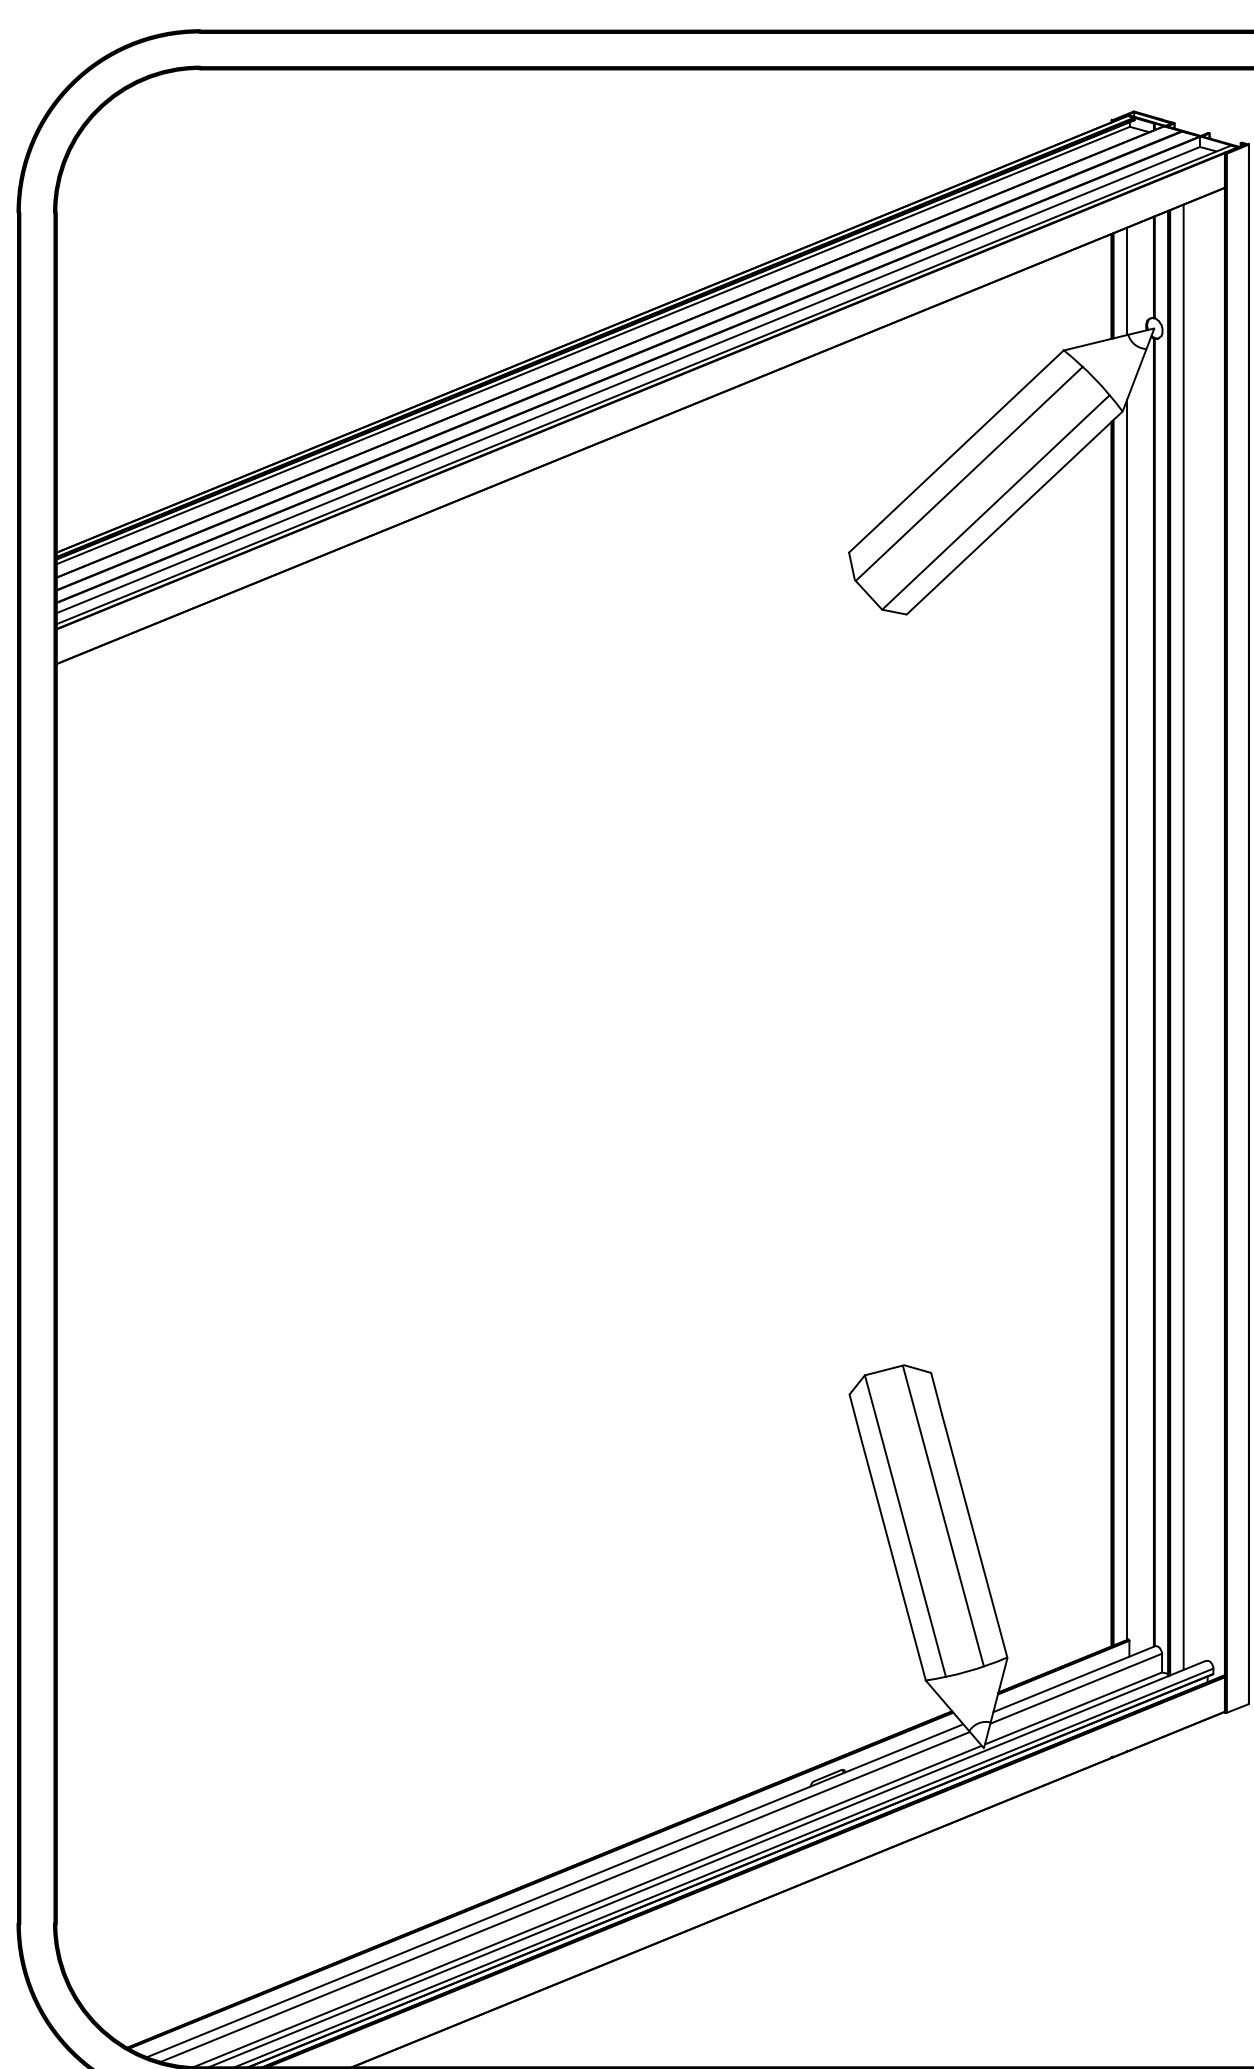








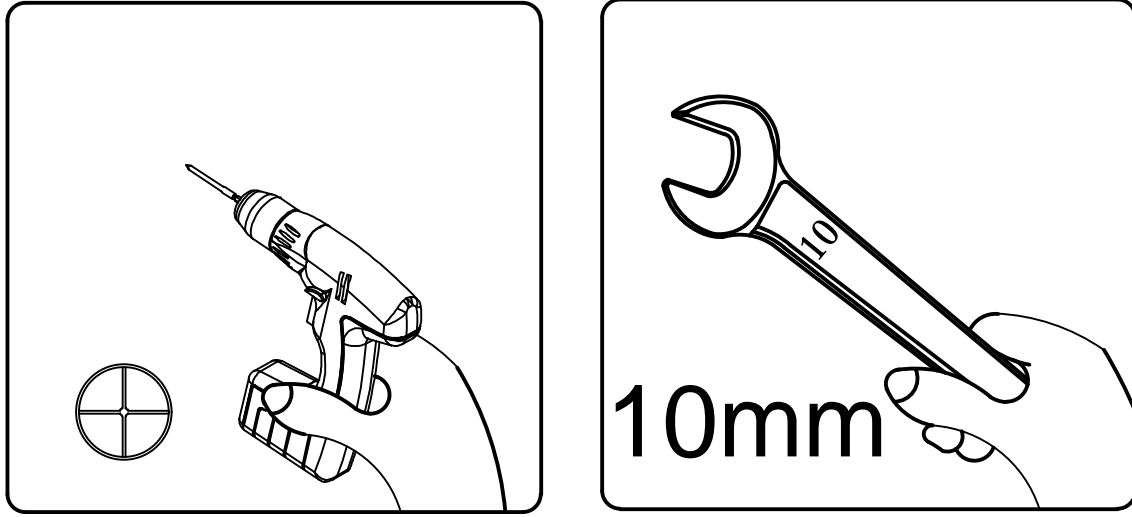
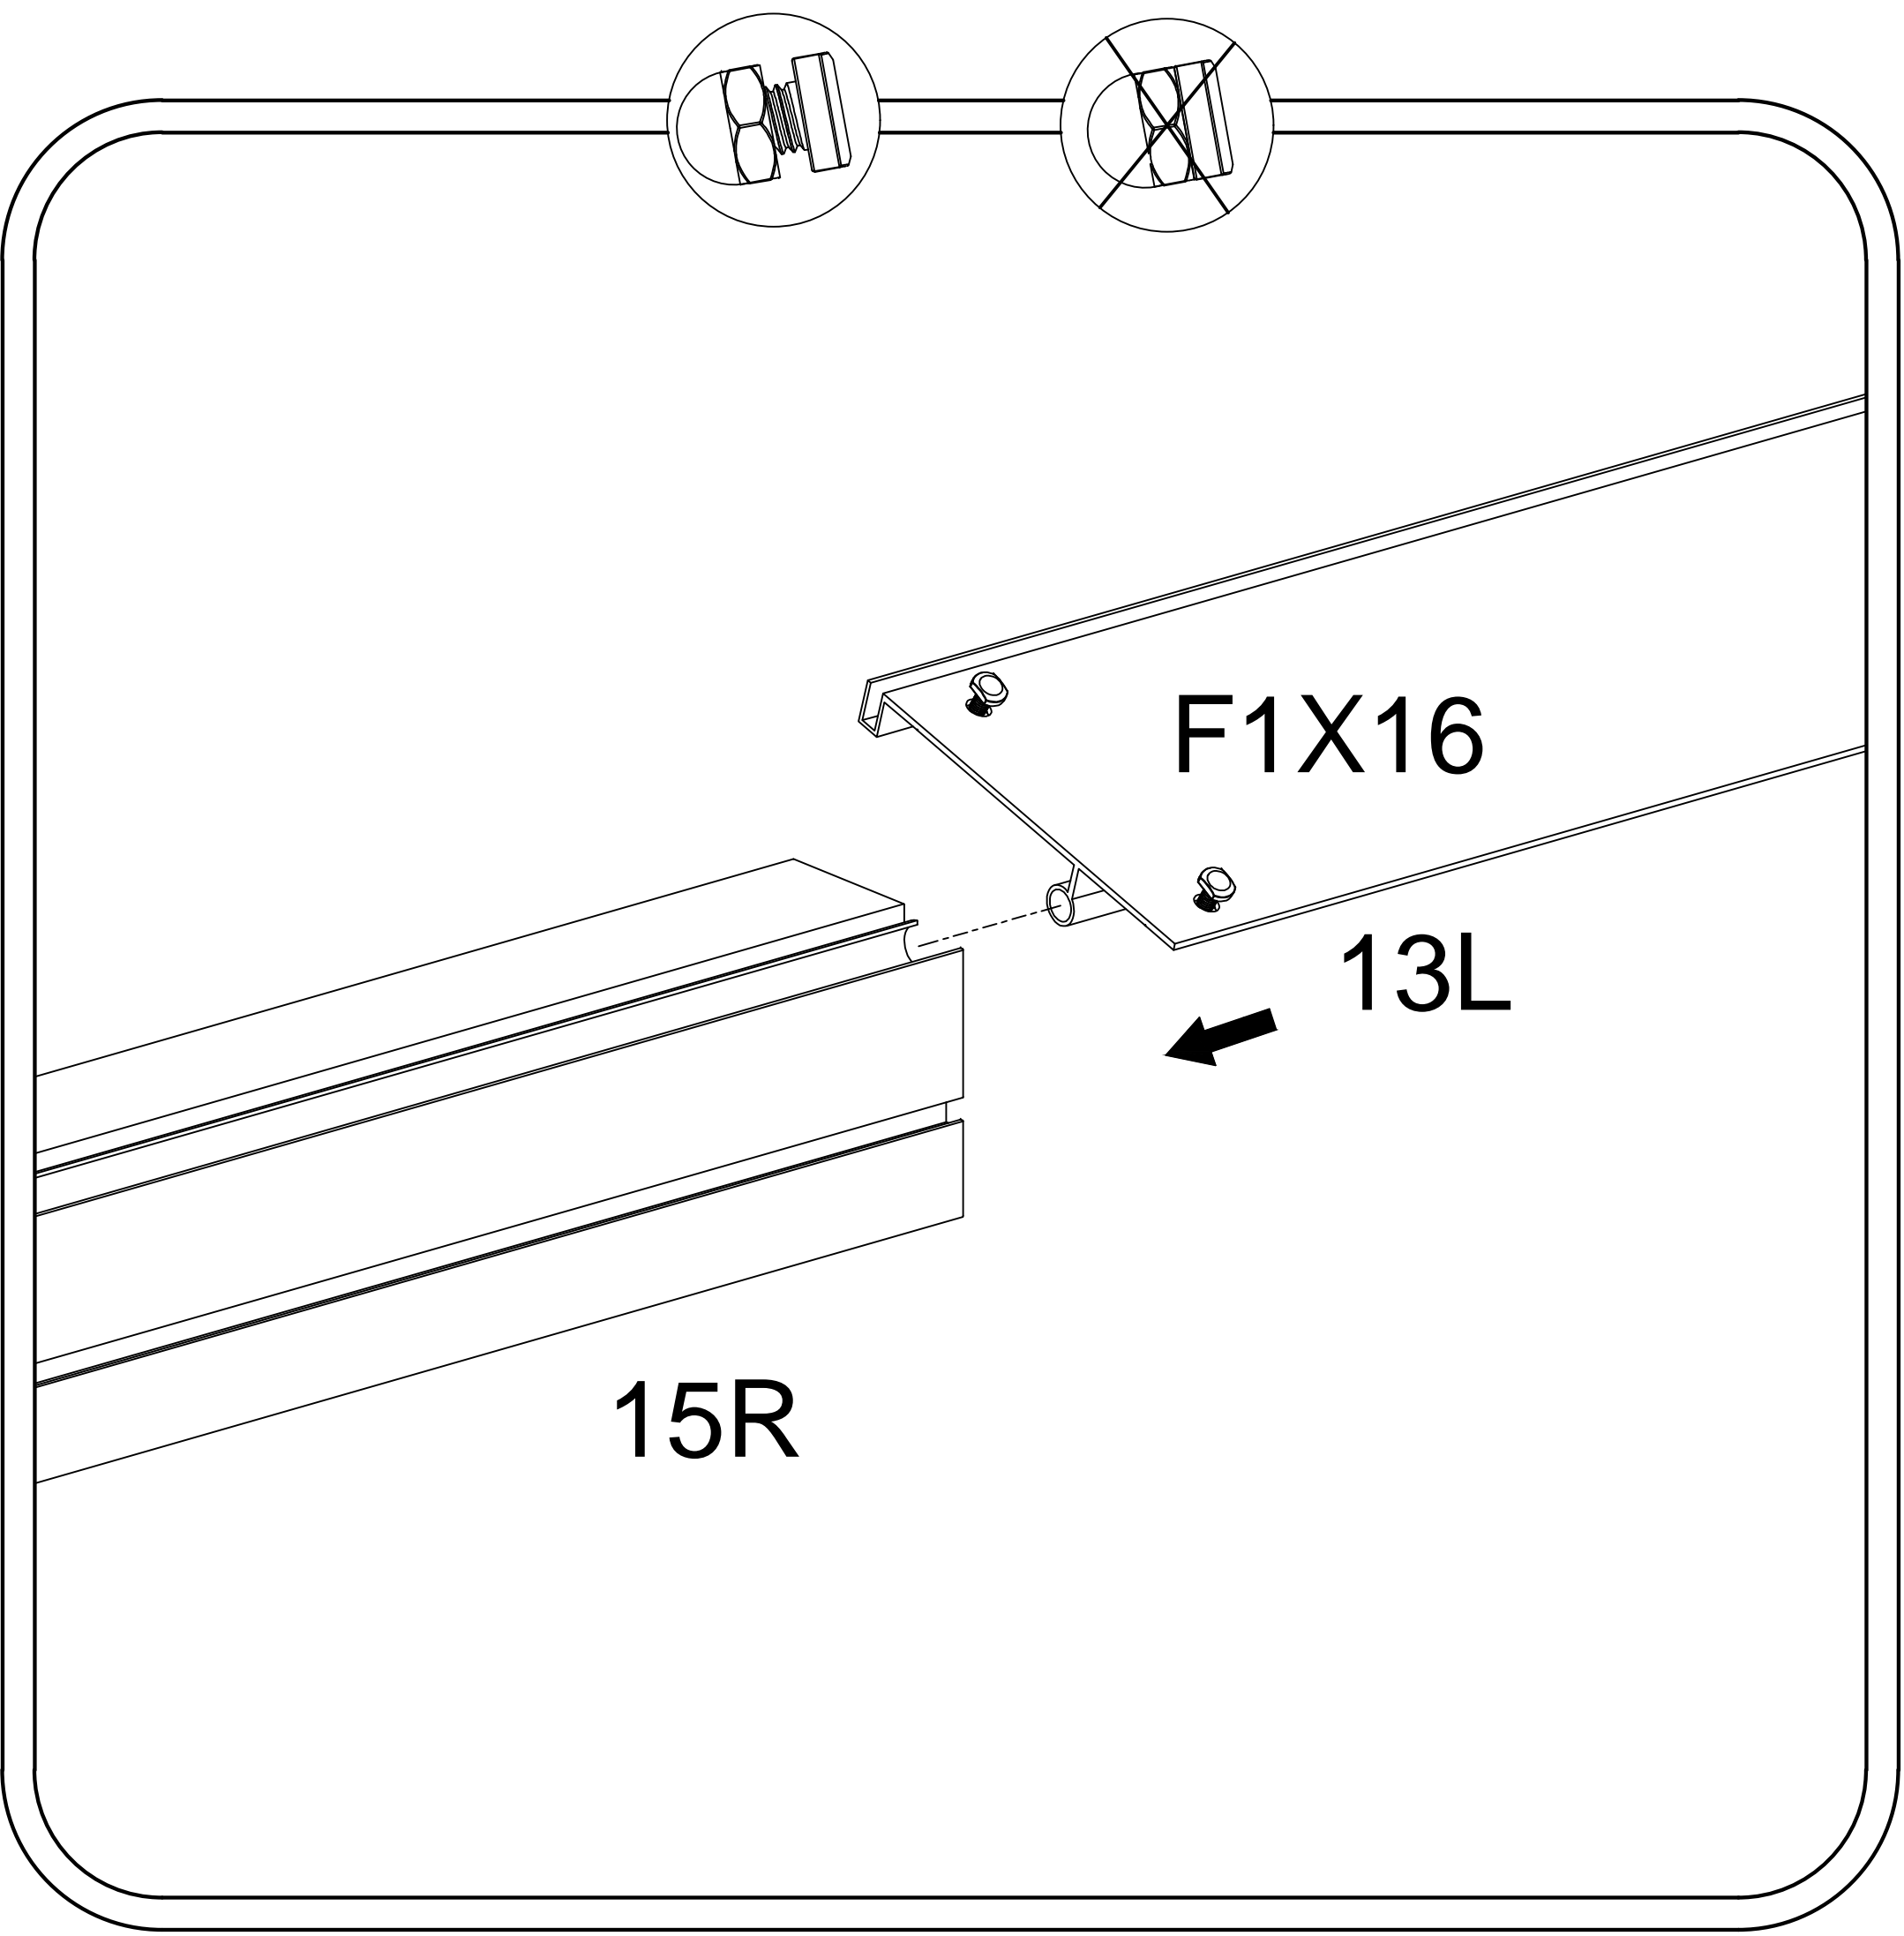
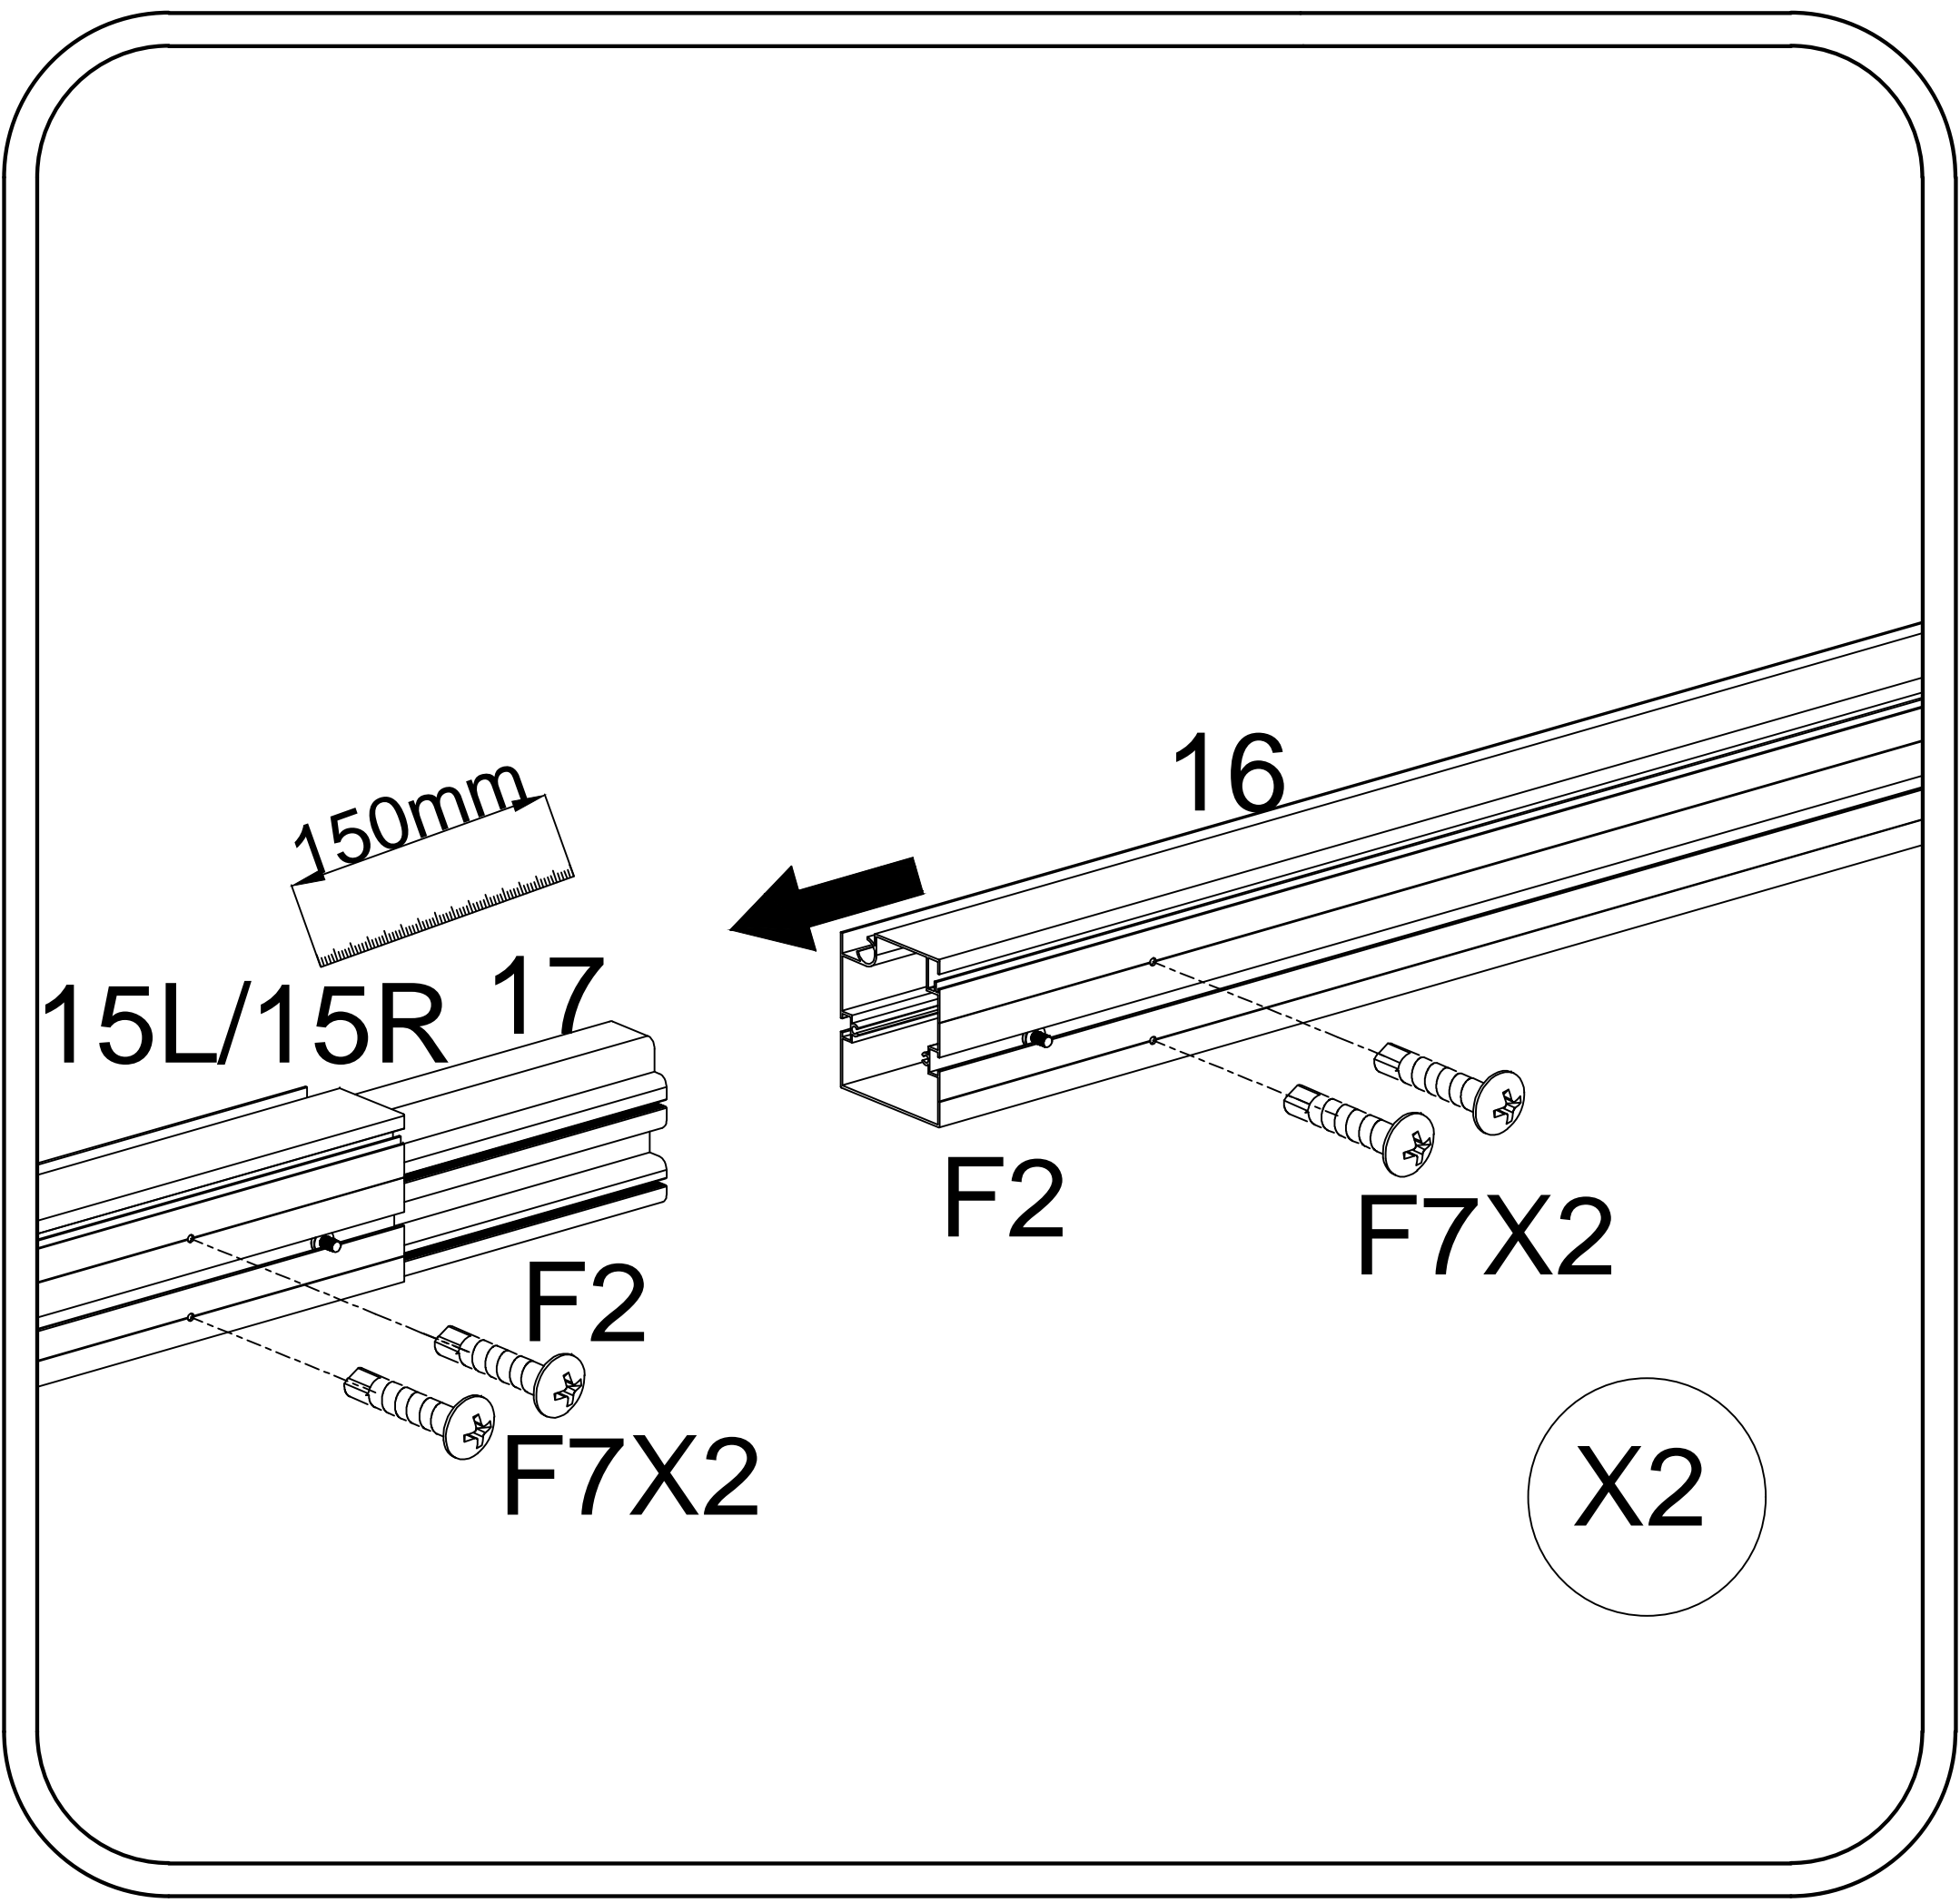
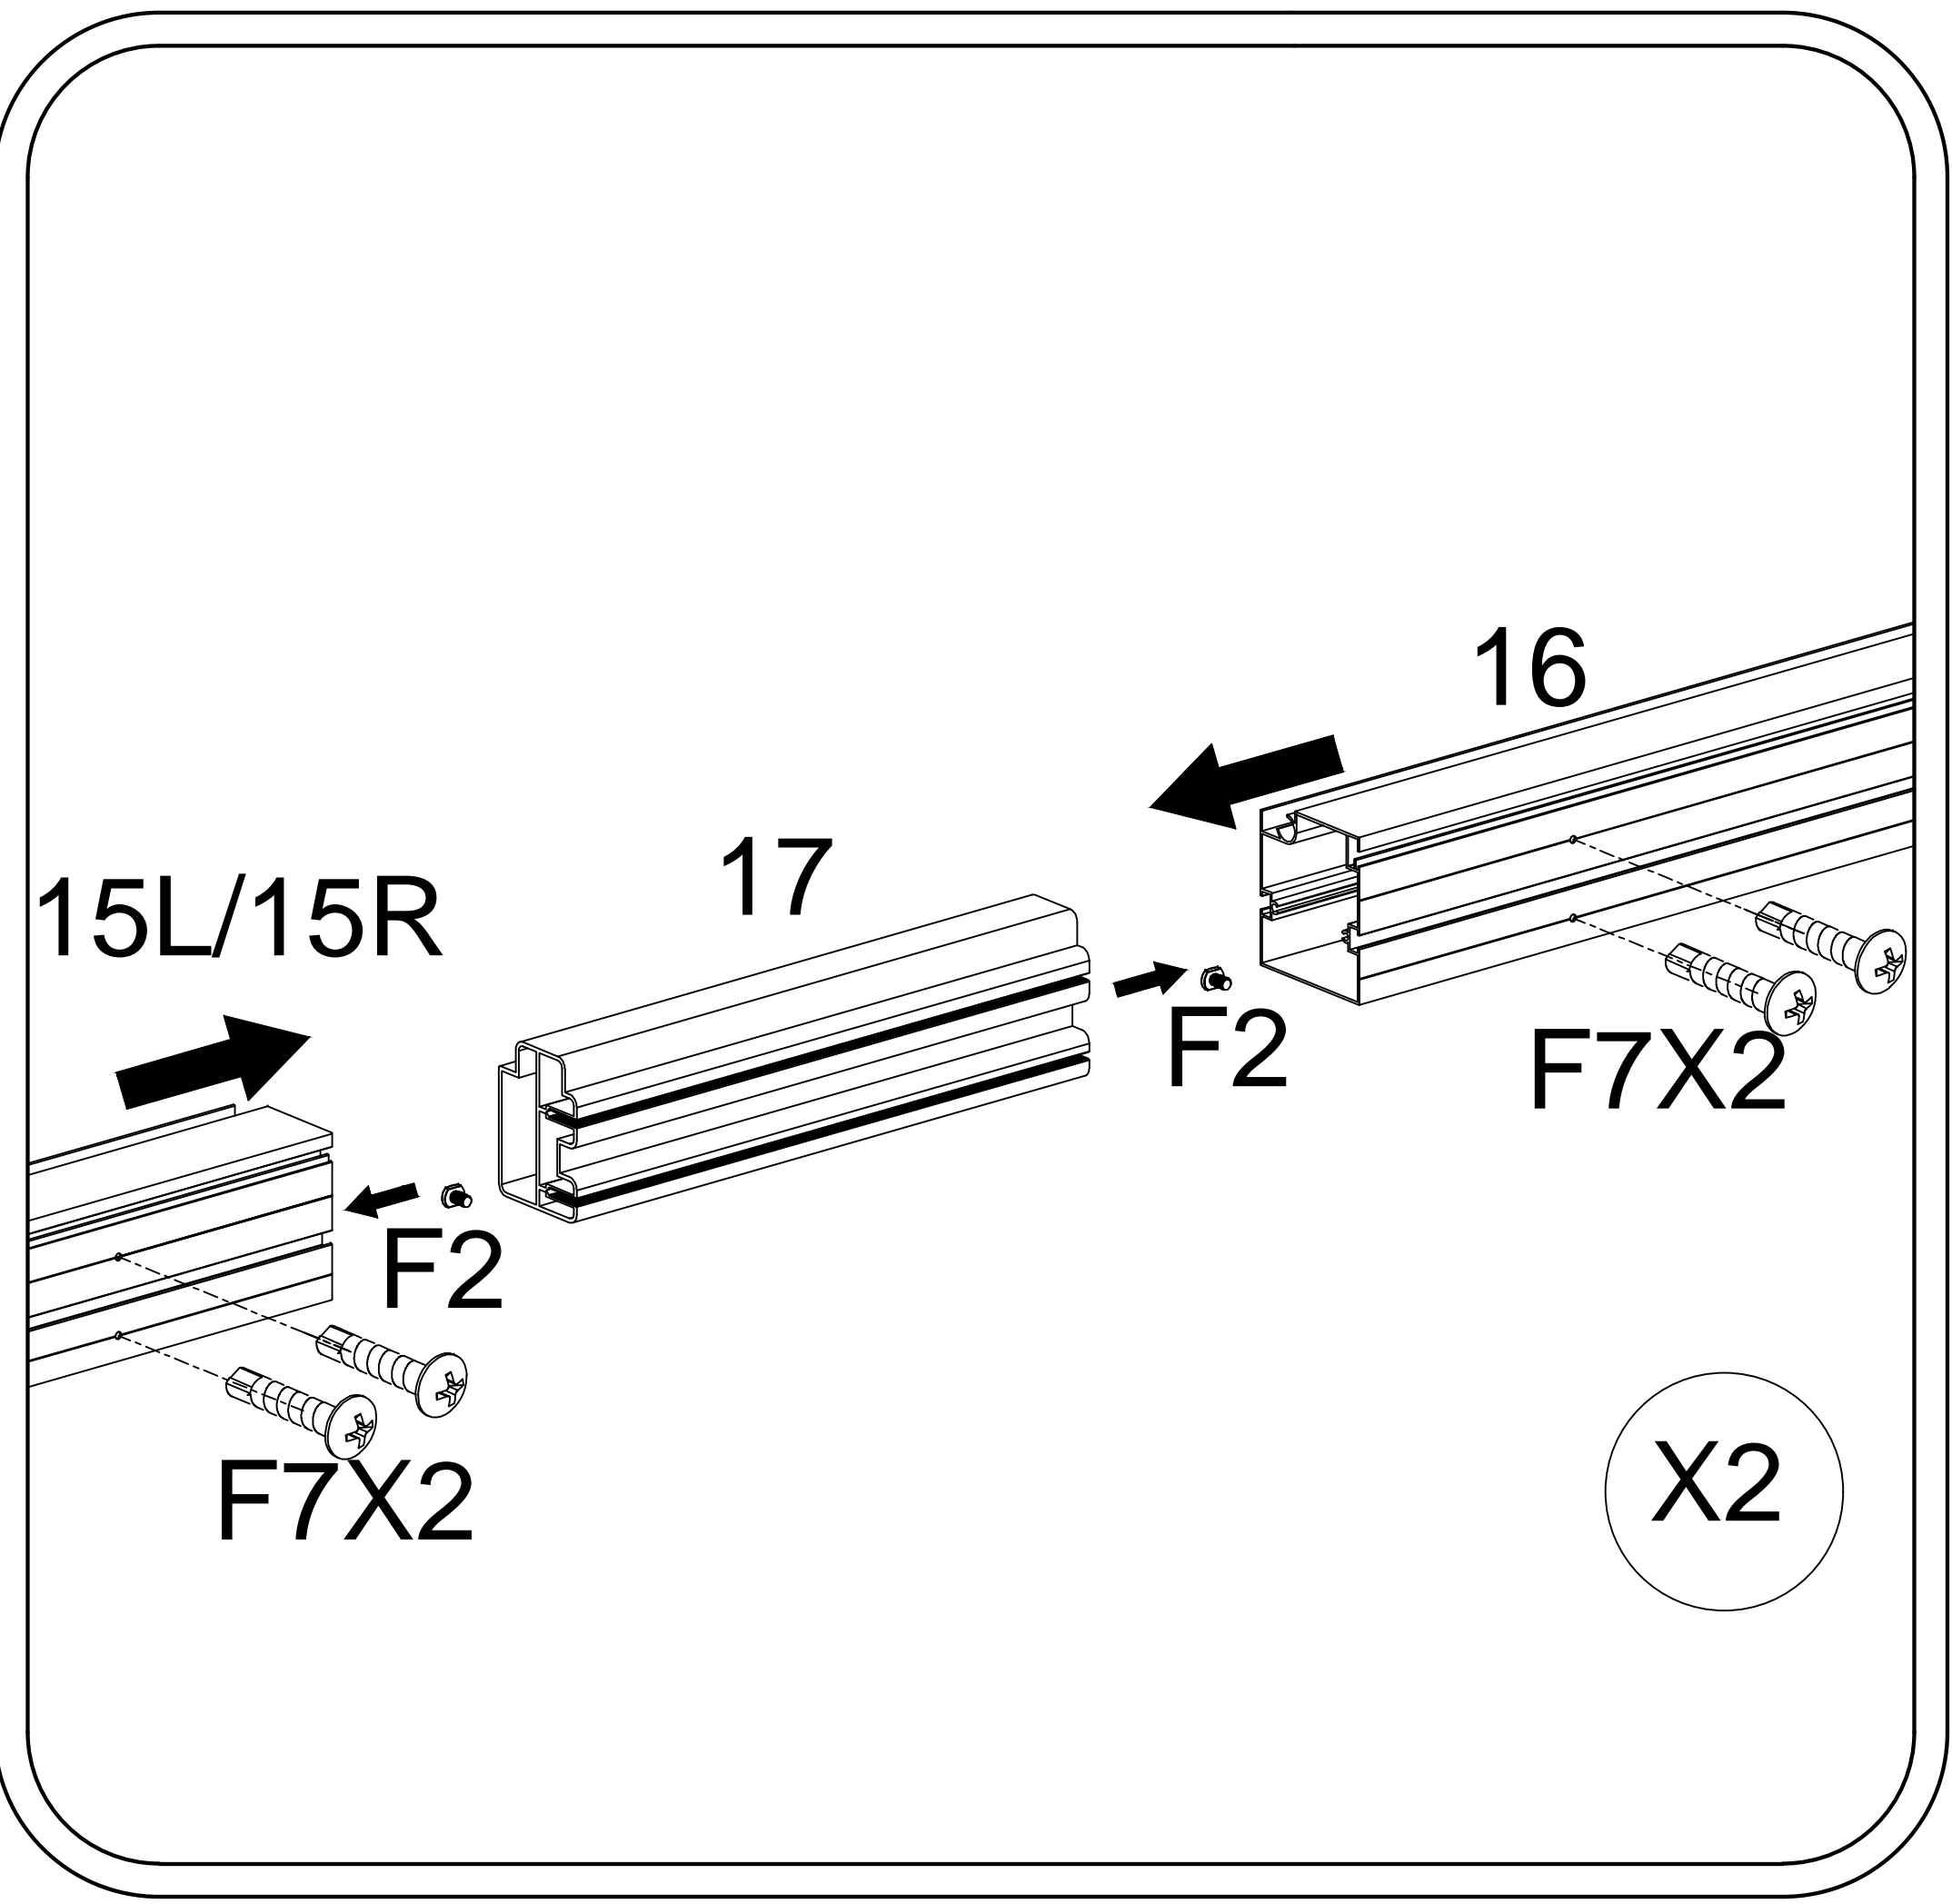
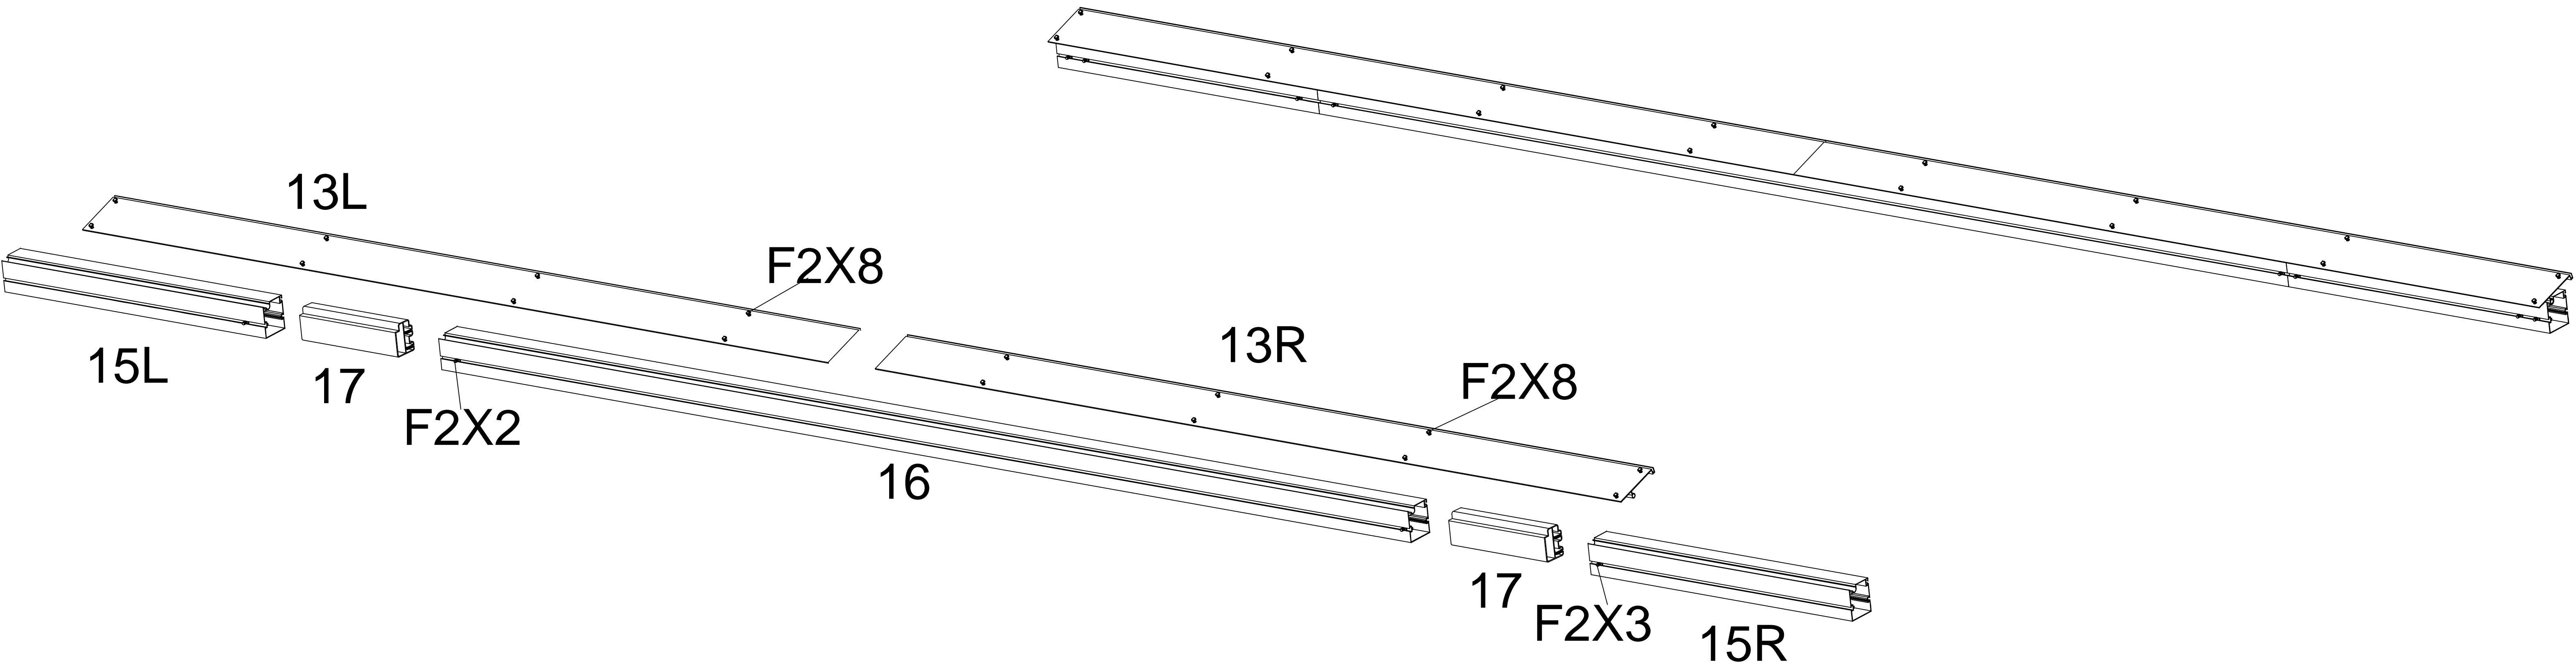
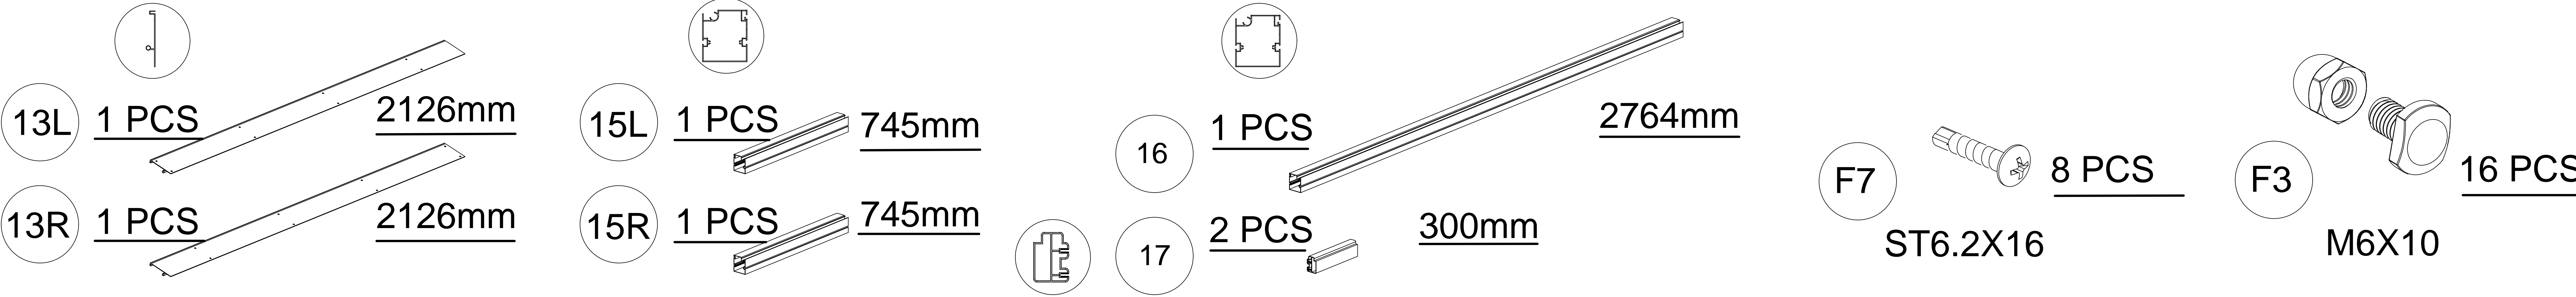
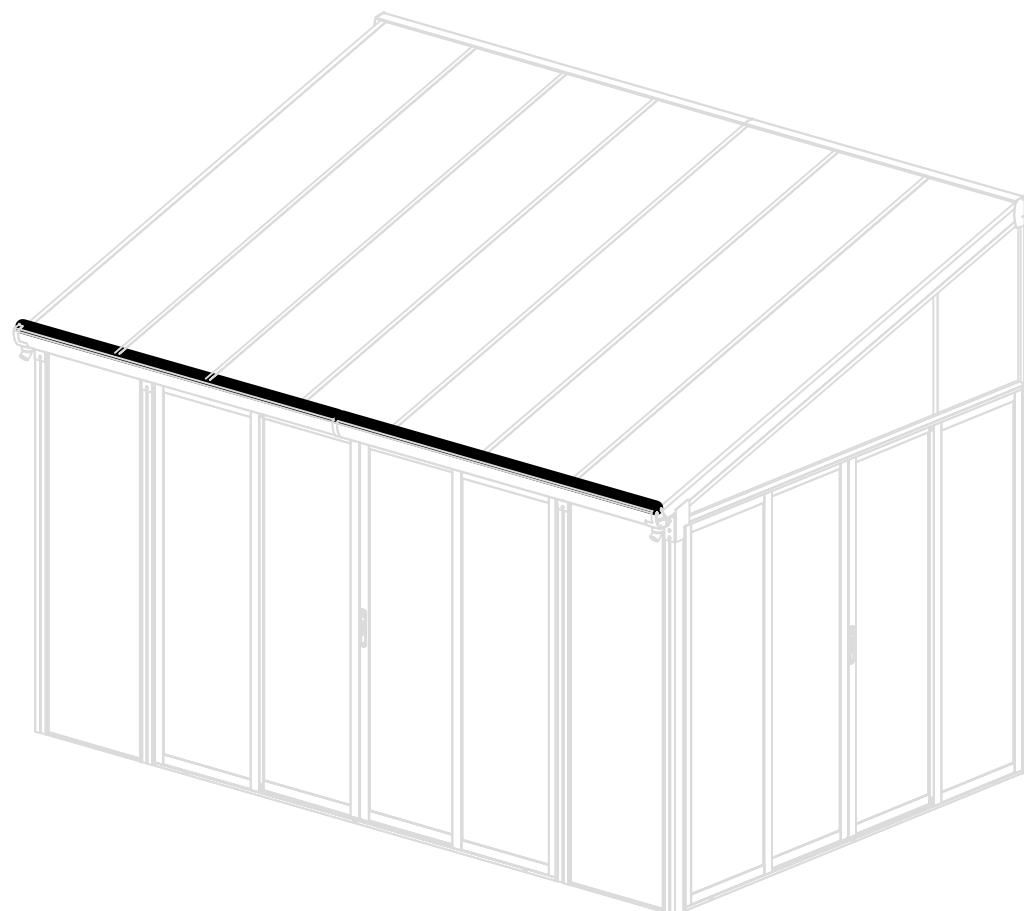


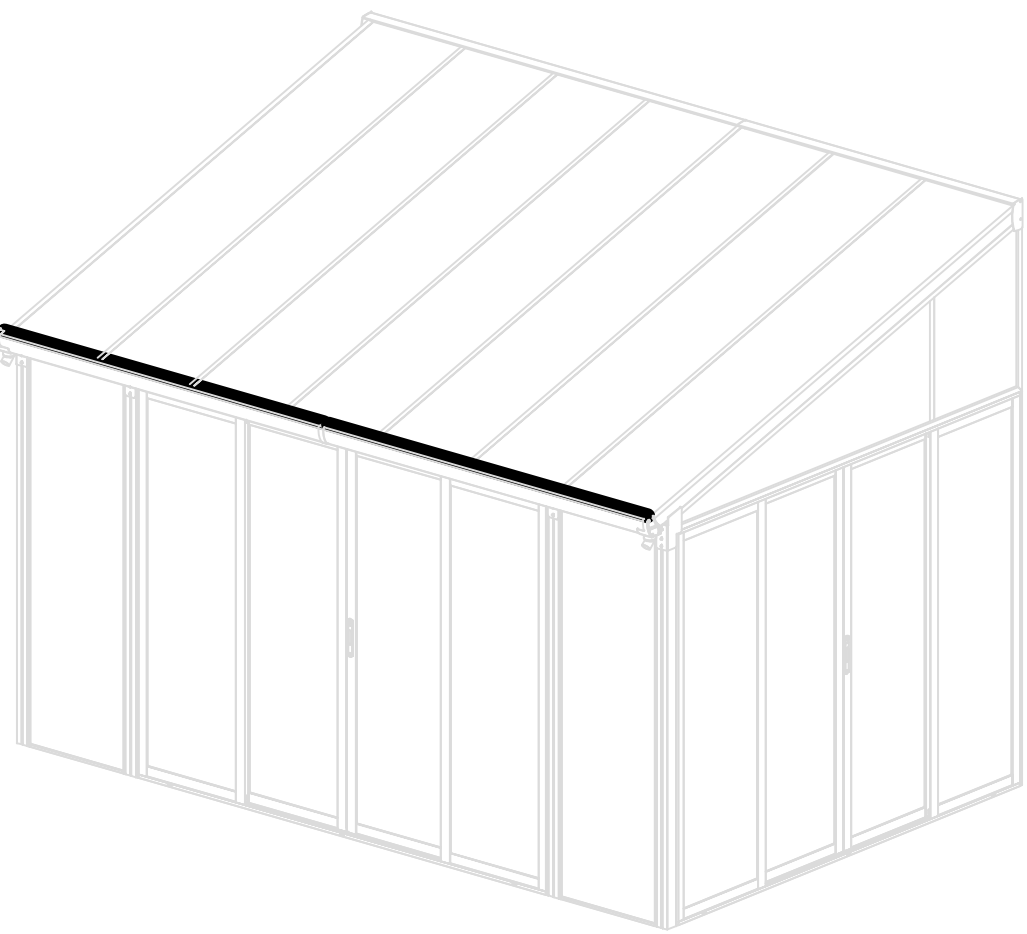


- 18 2 PCS 2100mm
- 36L 1 PCS
- 36R 1 PCS
- F3 12 PCS M6X10
- F4 6 PCS ST4.2X20

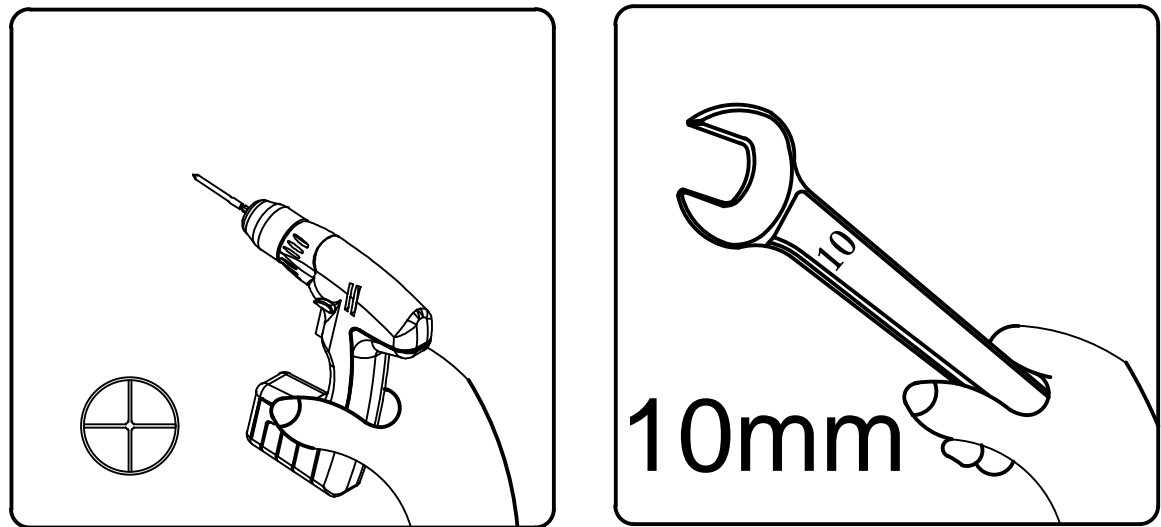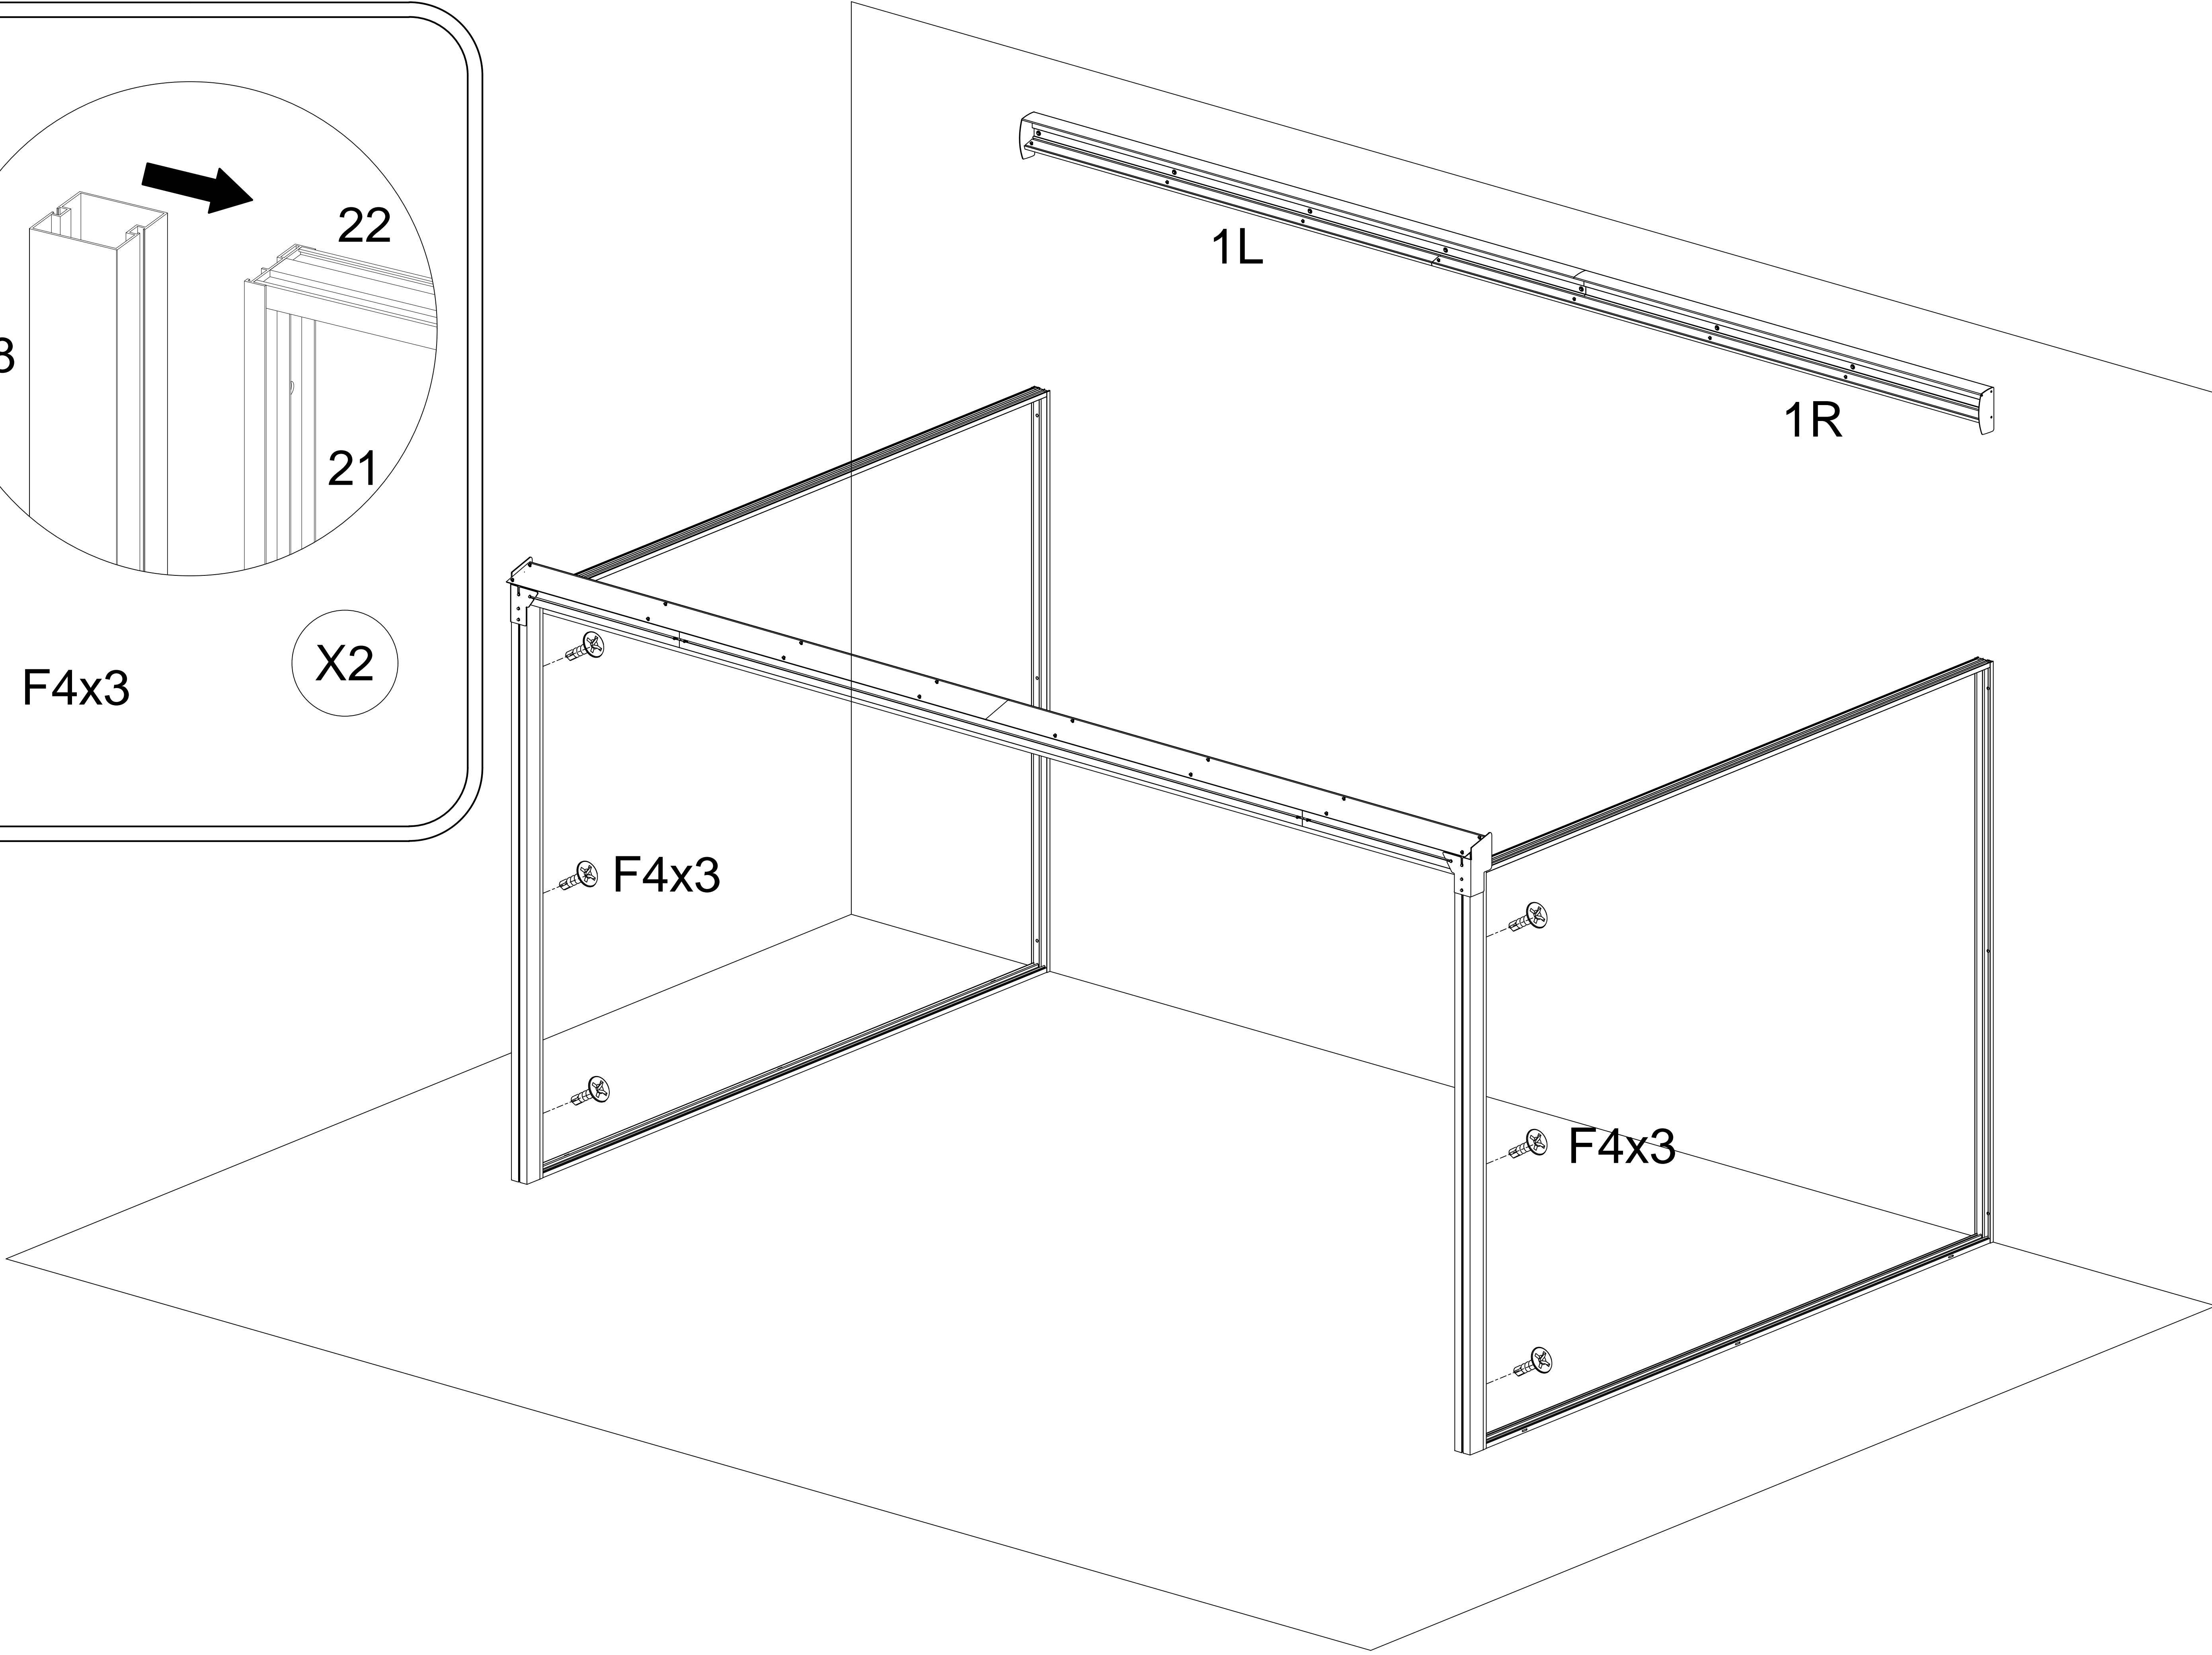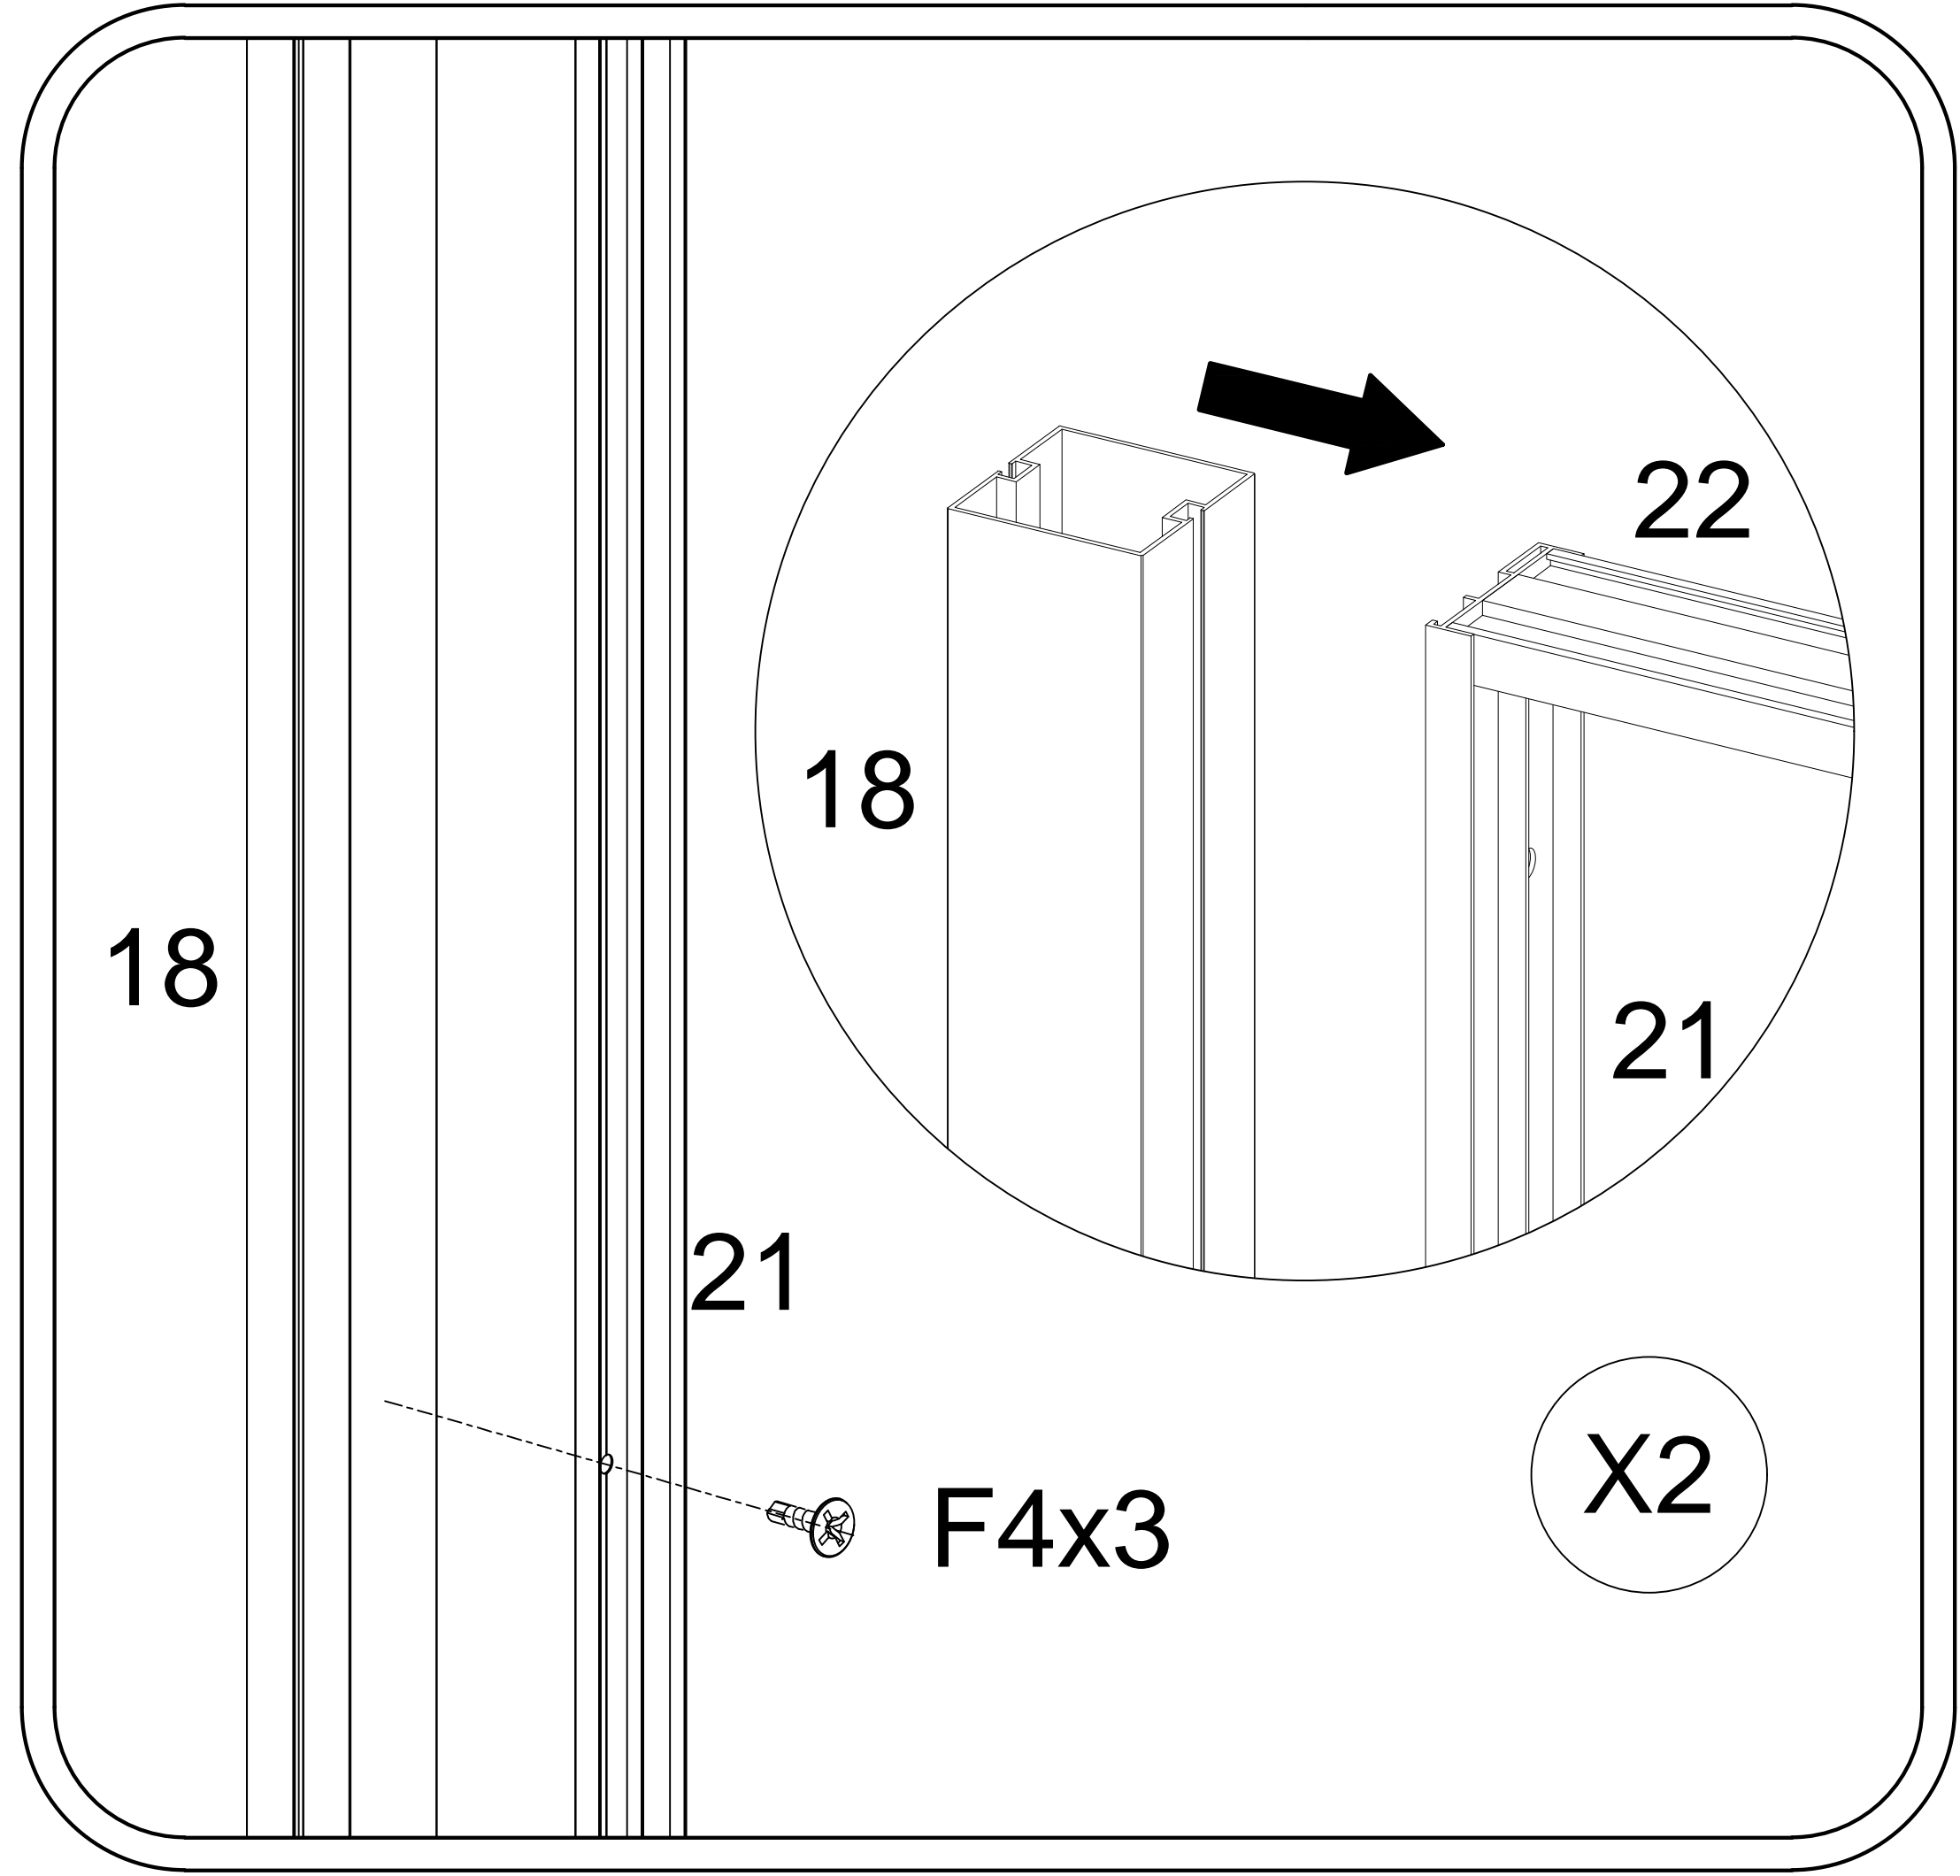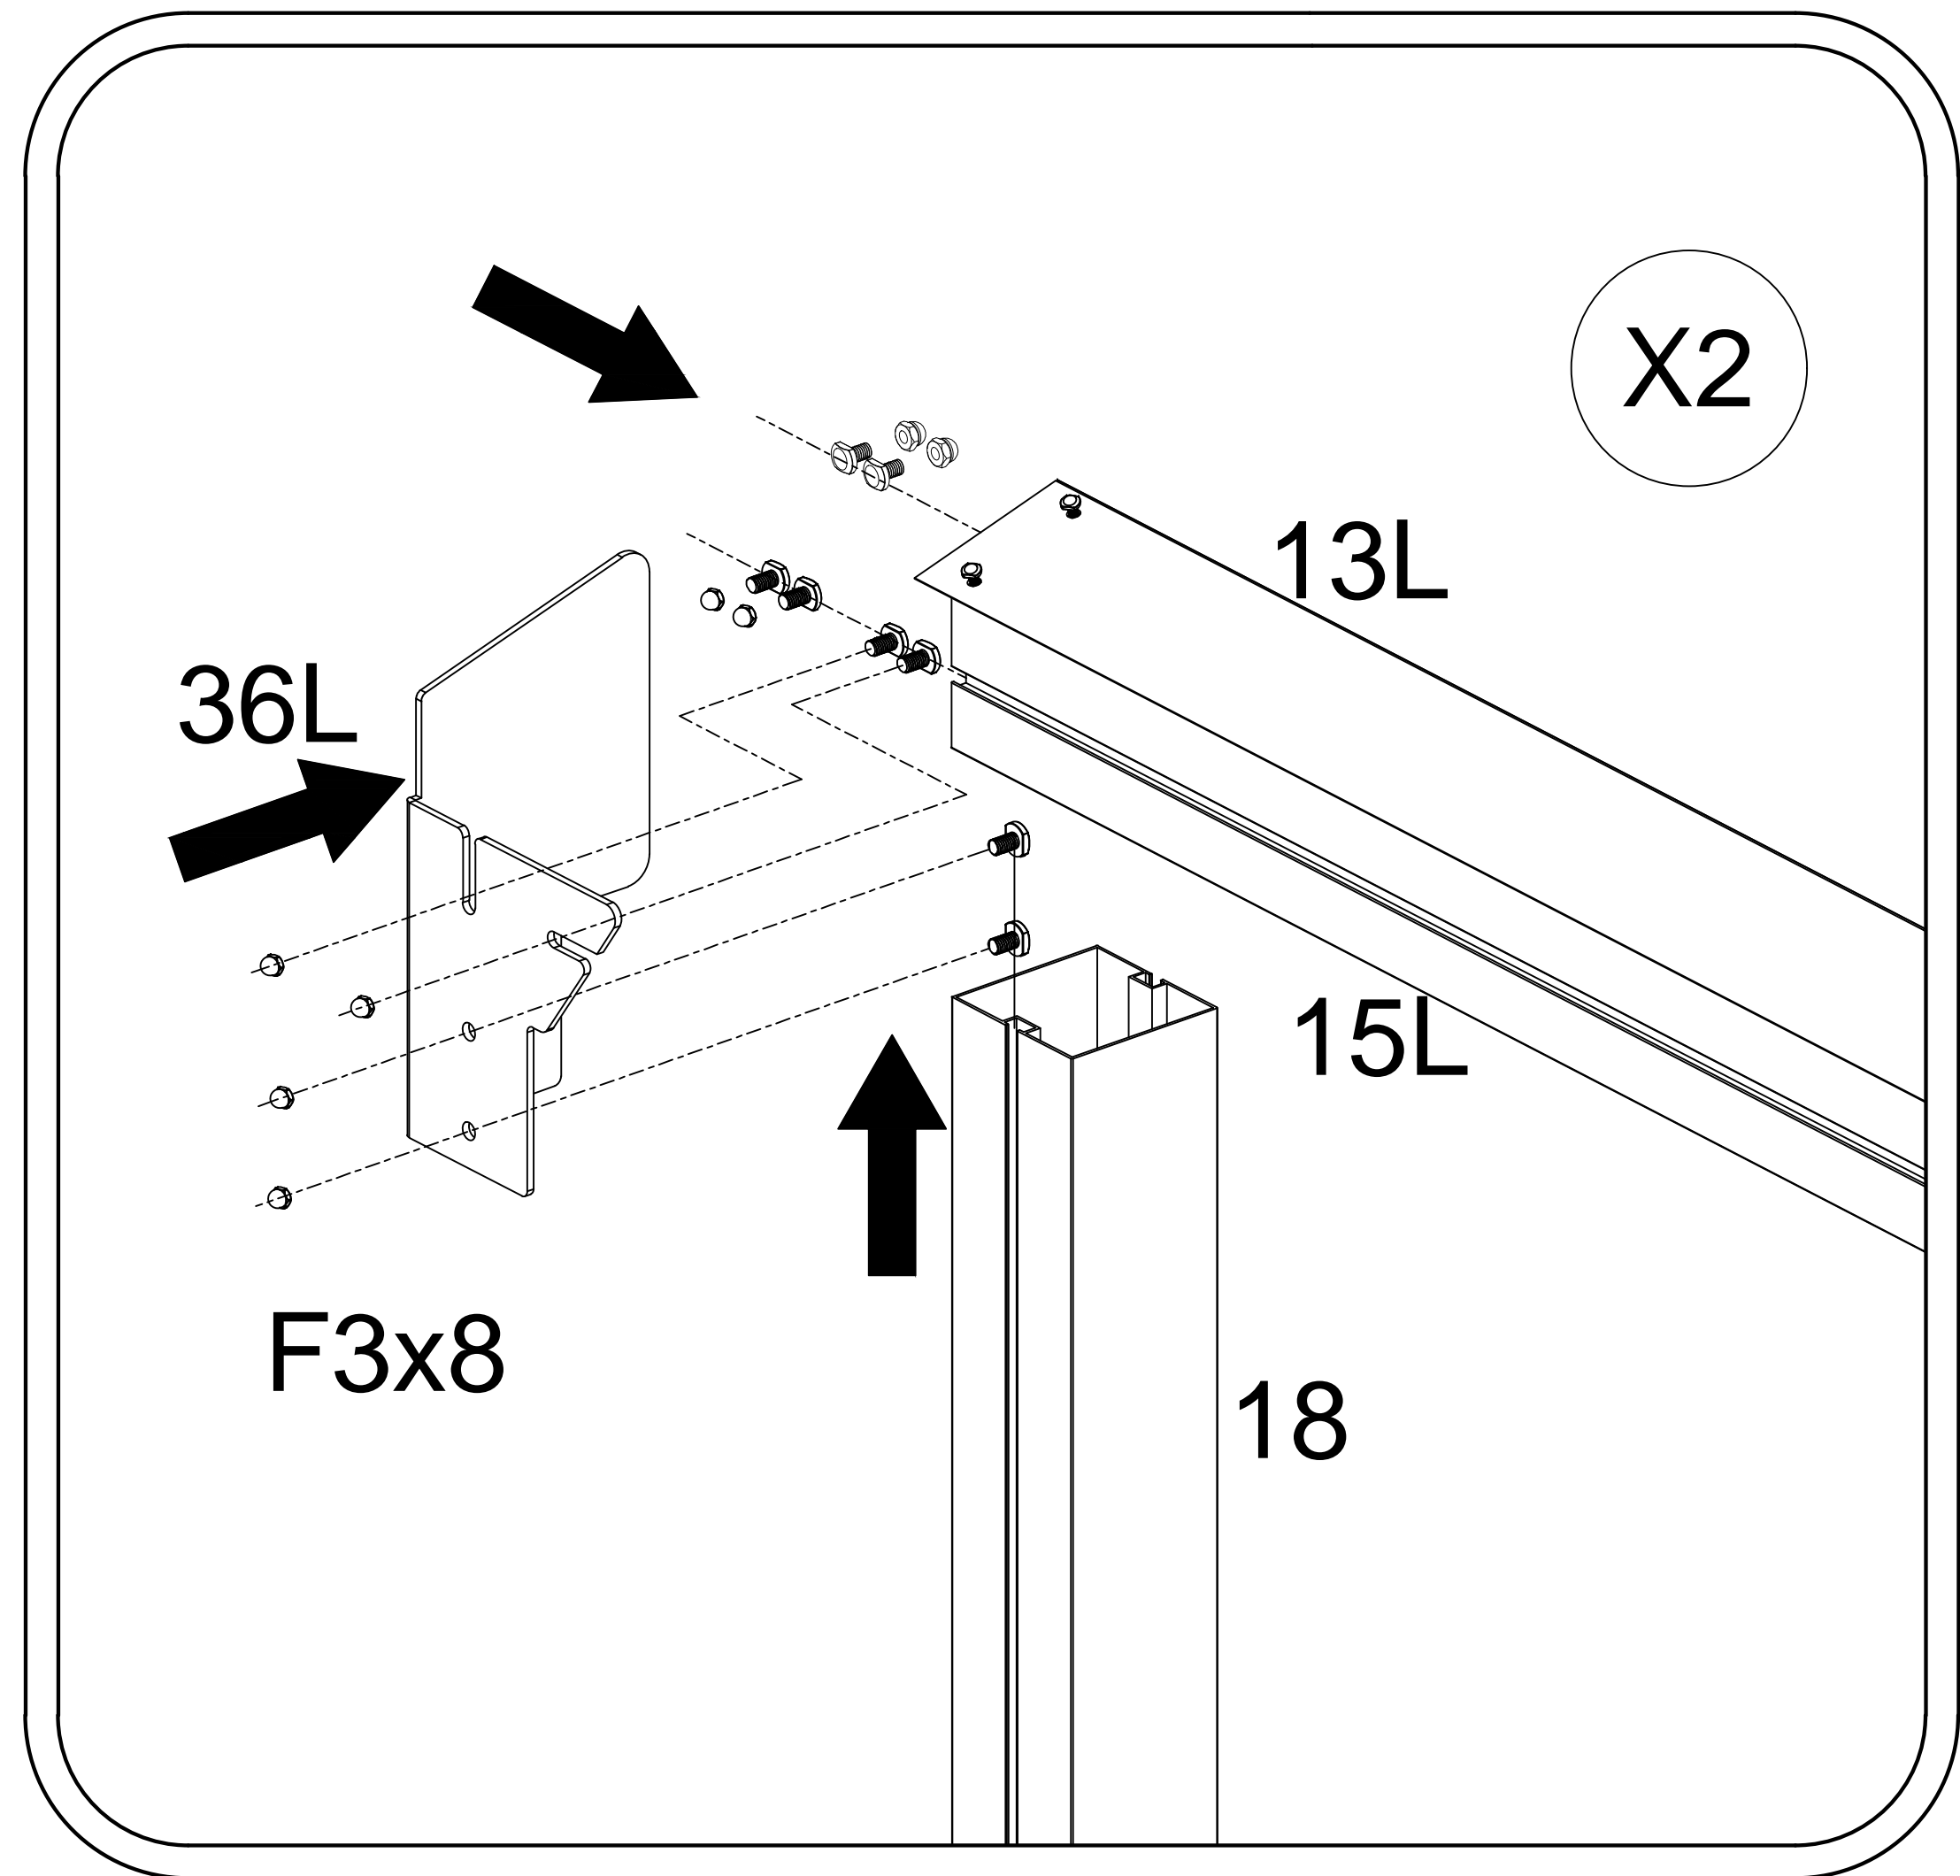












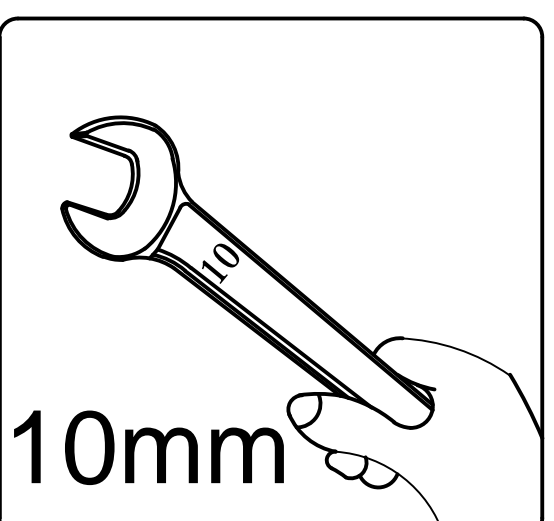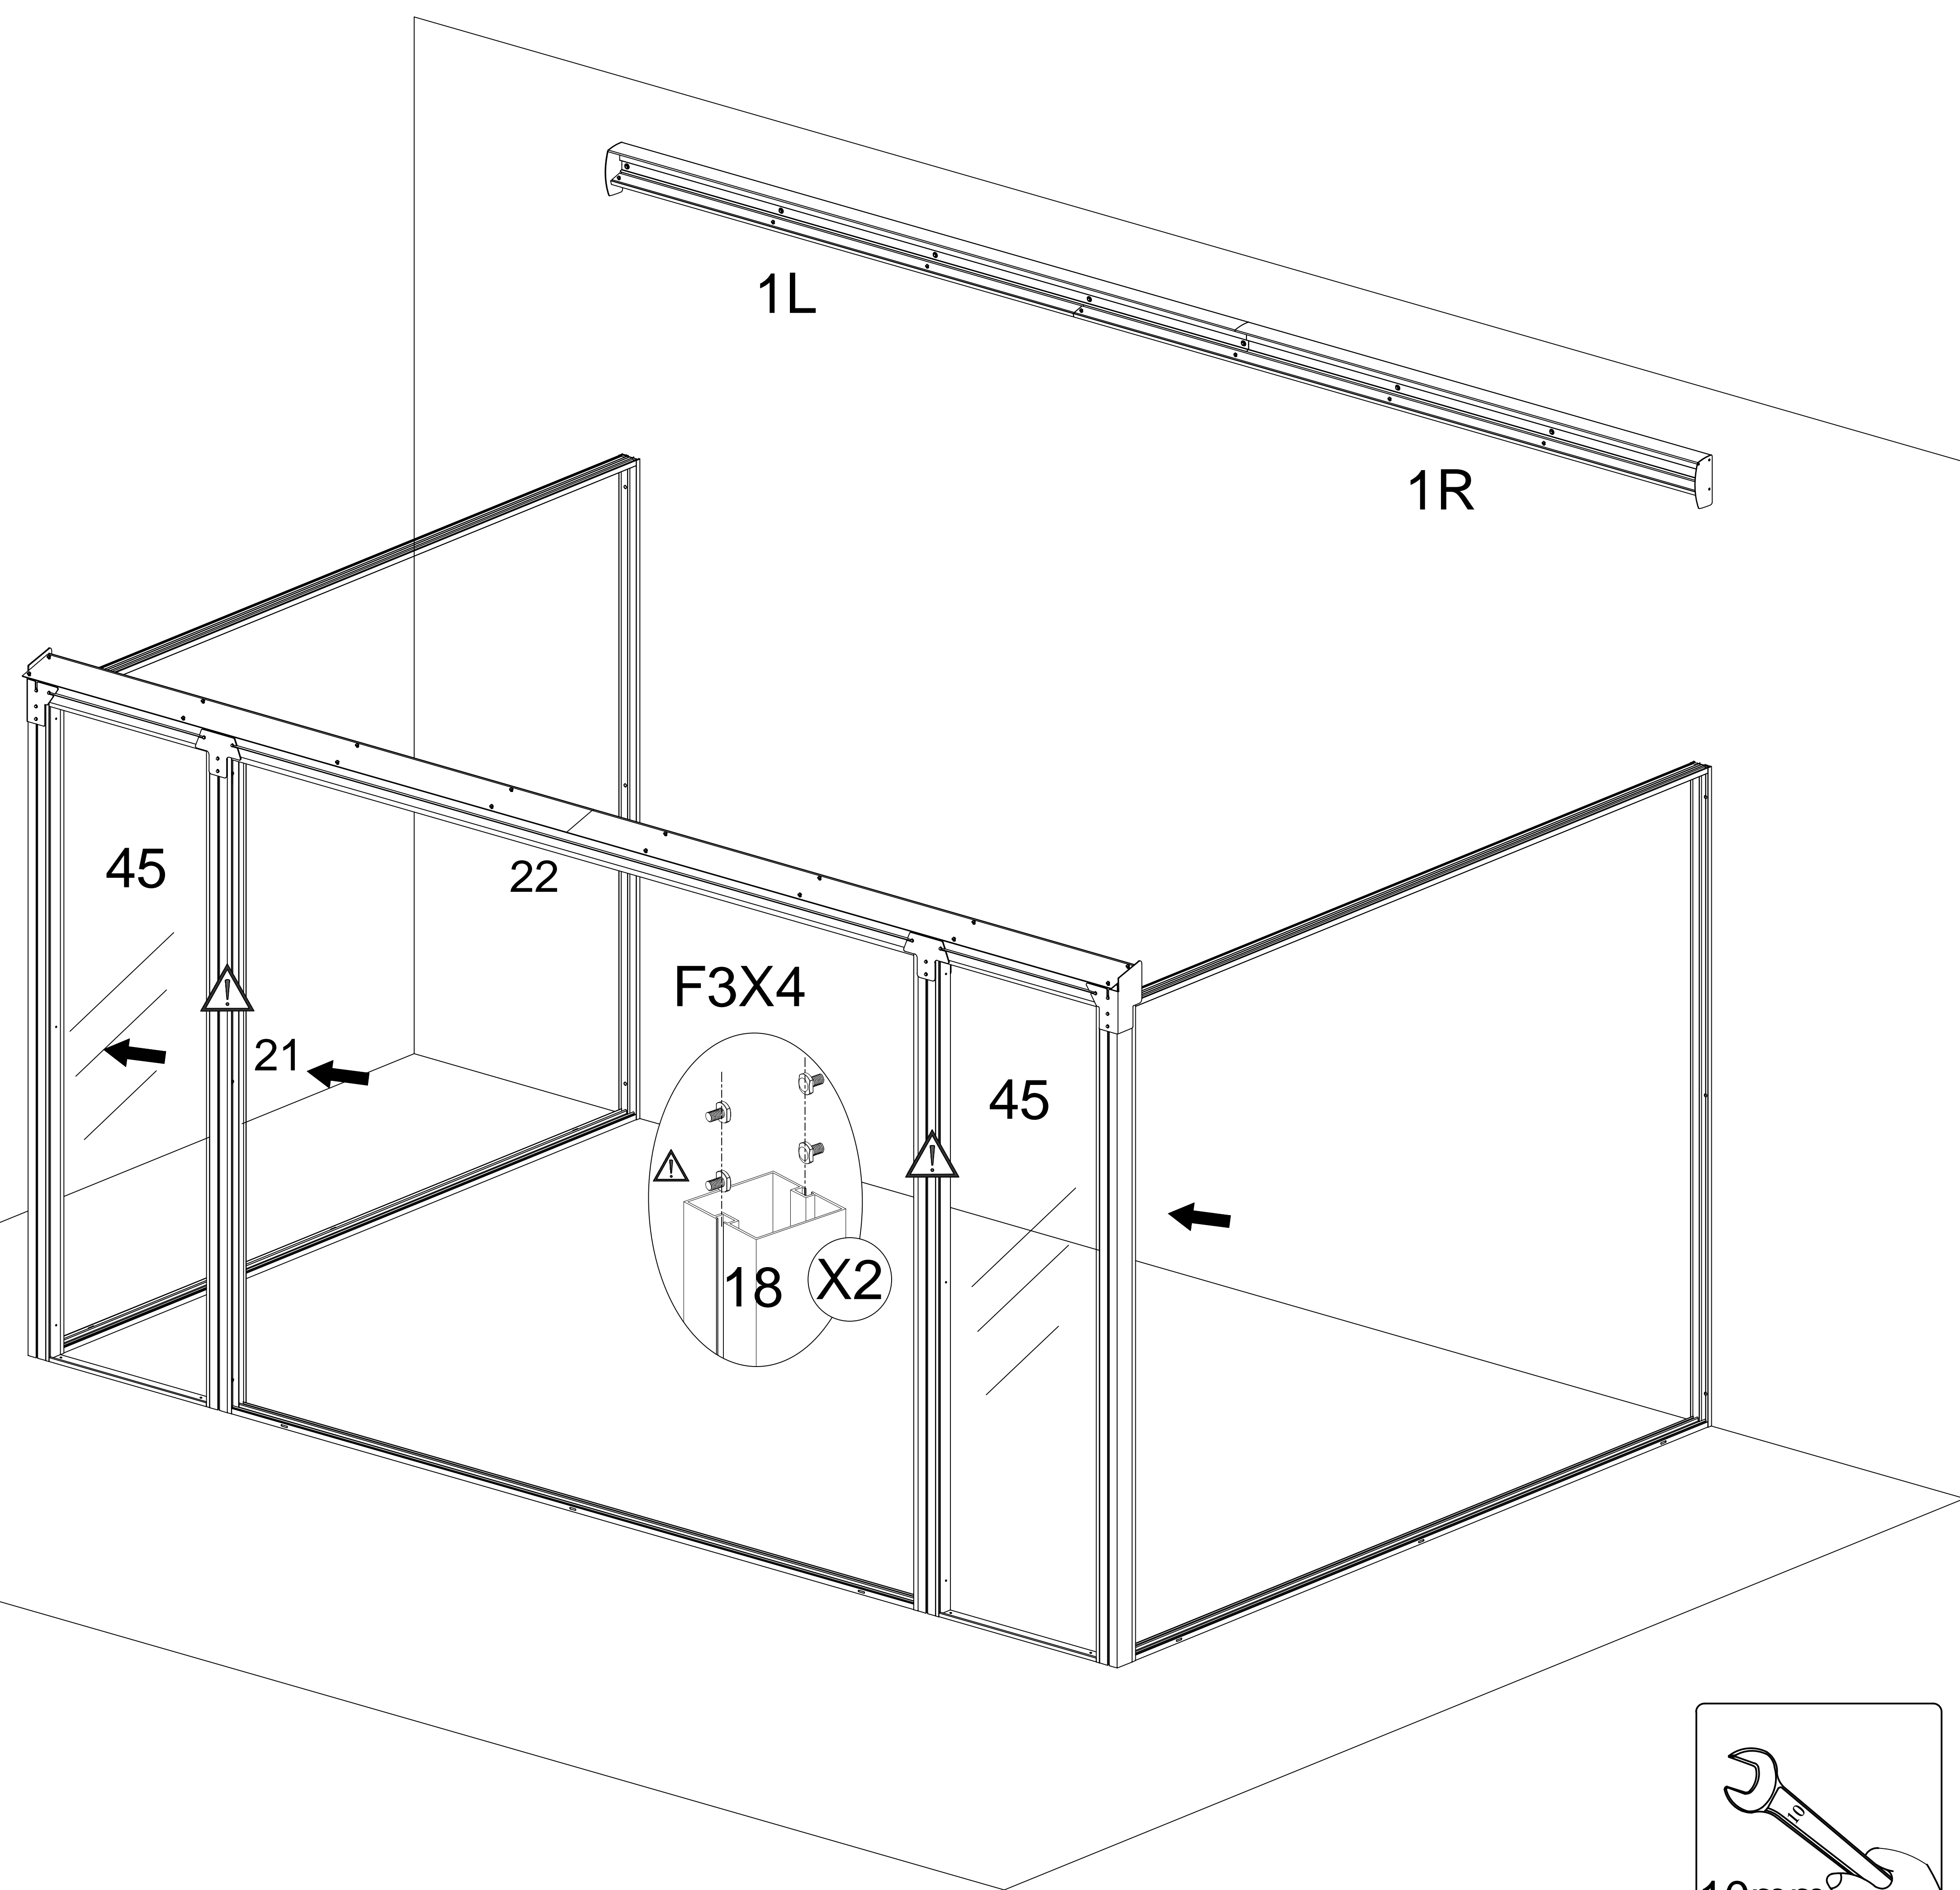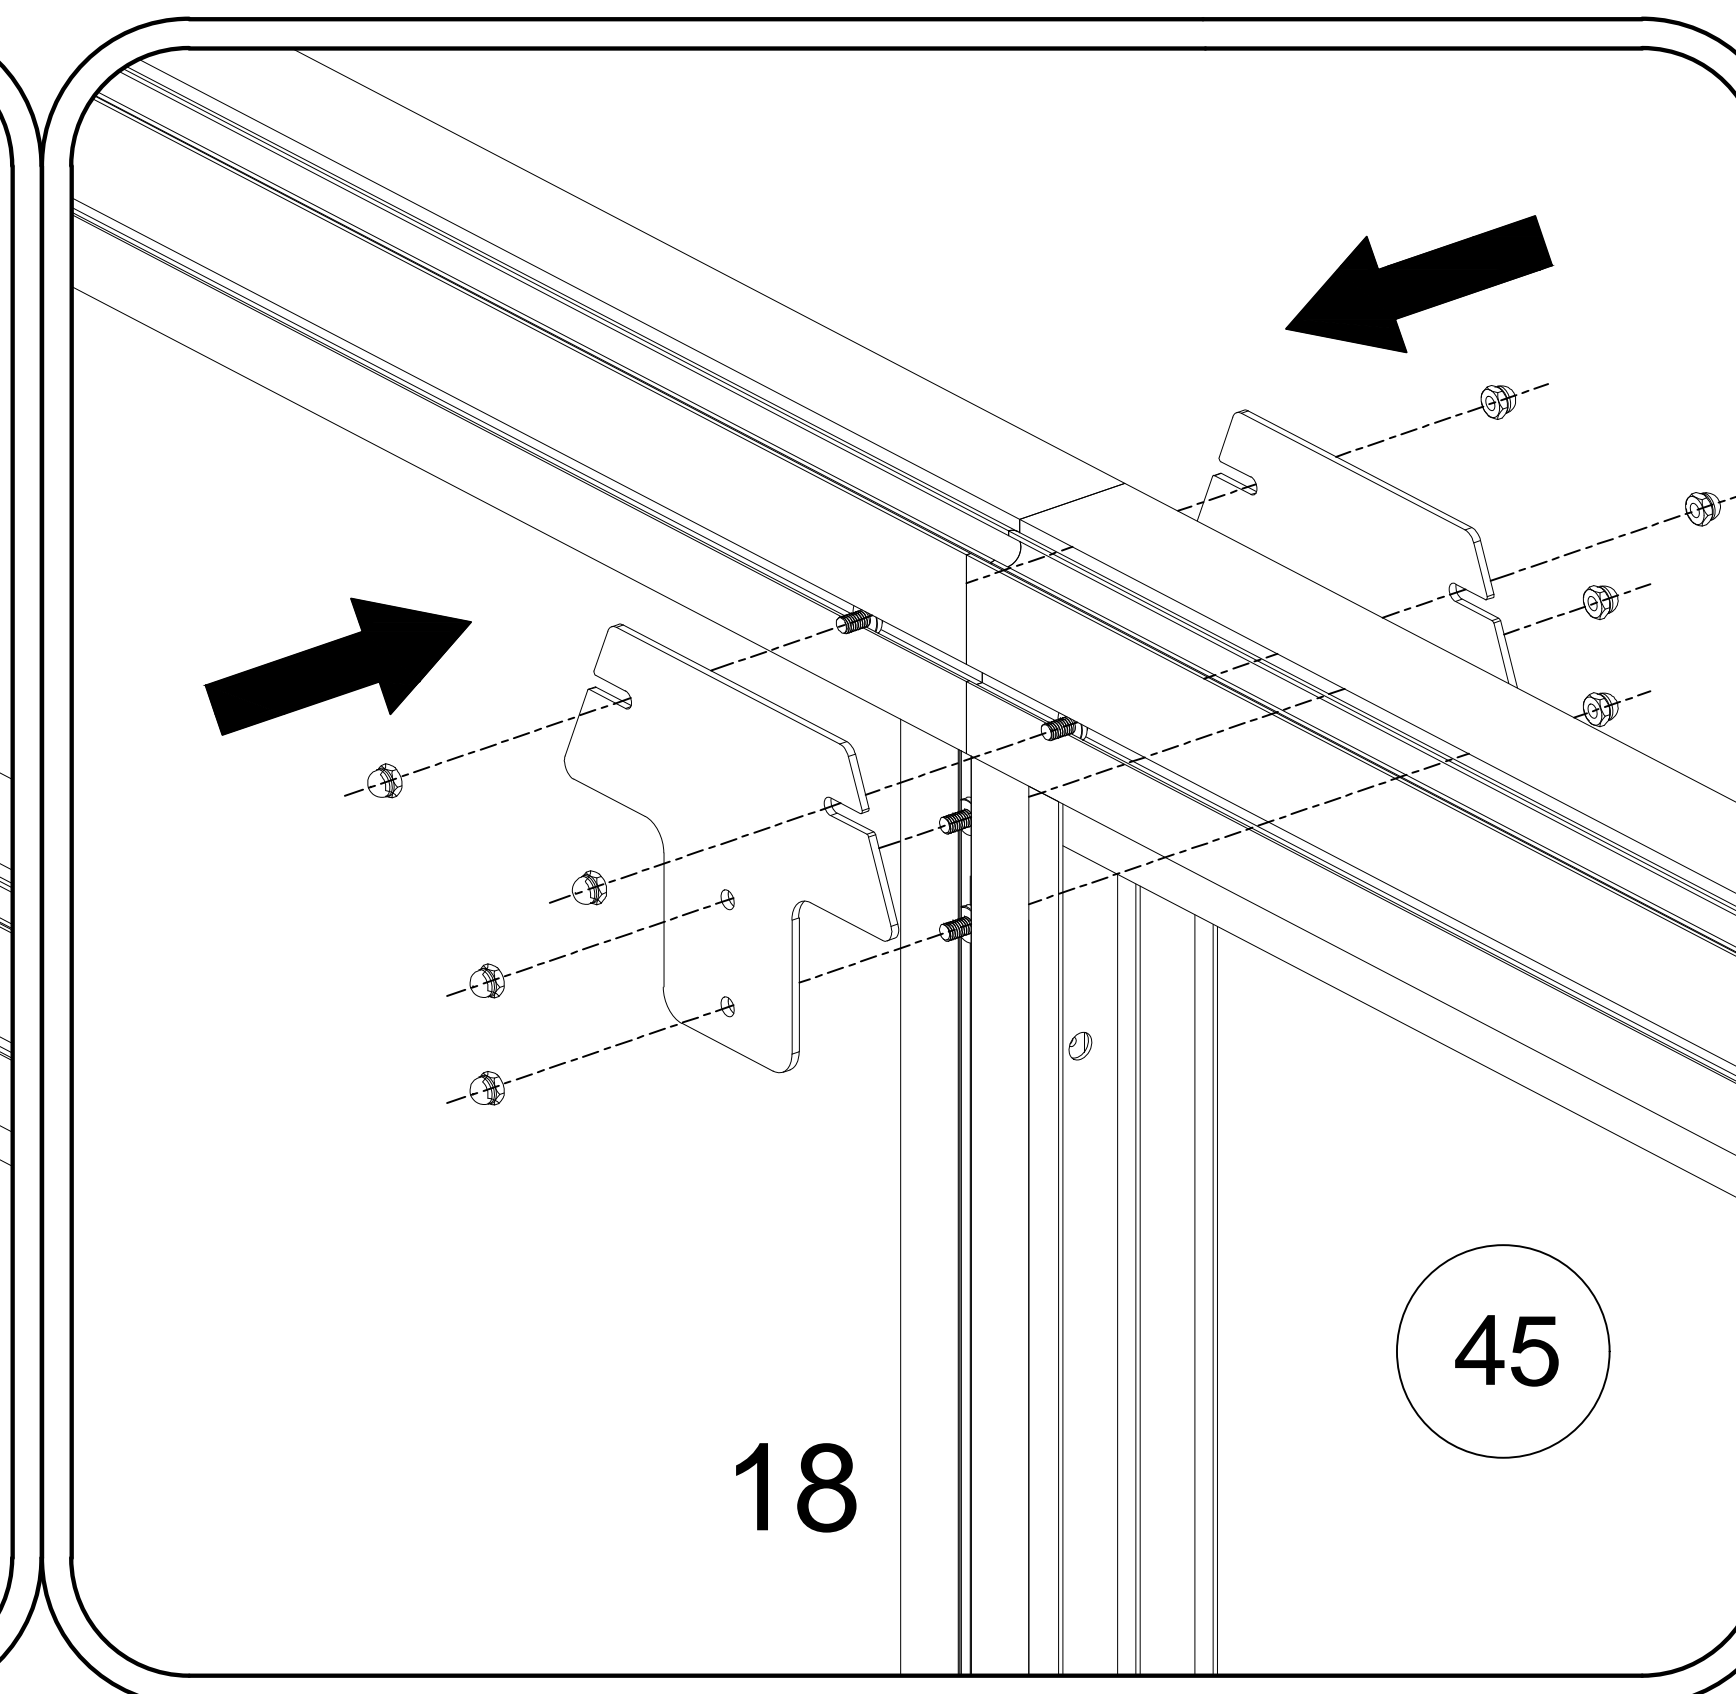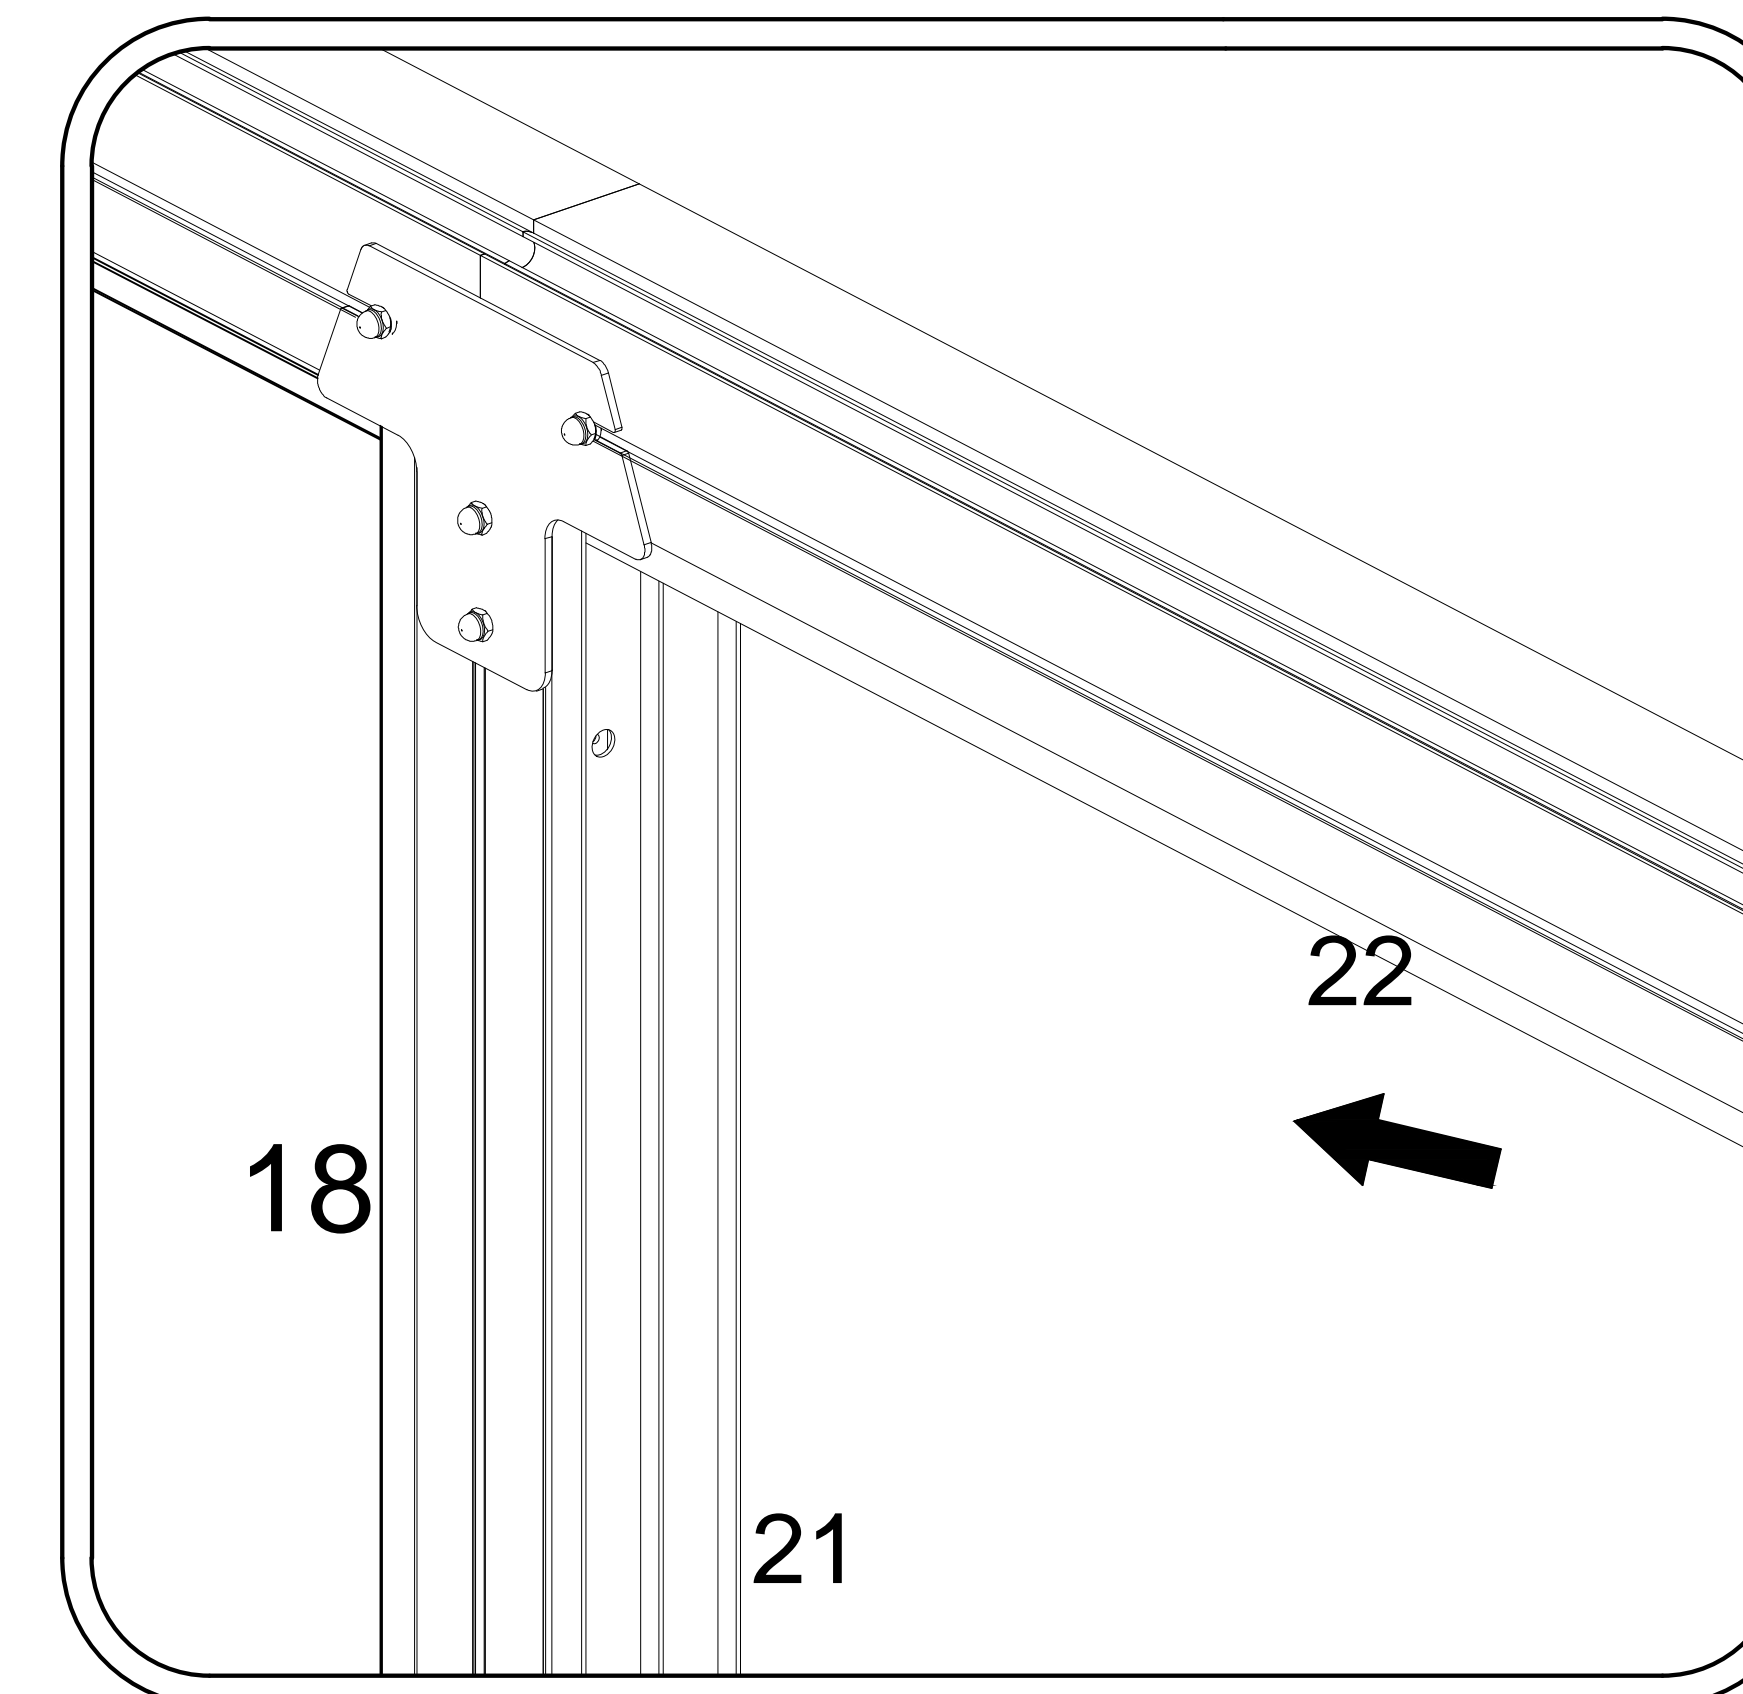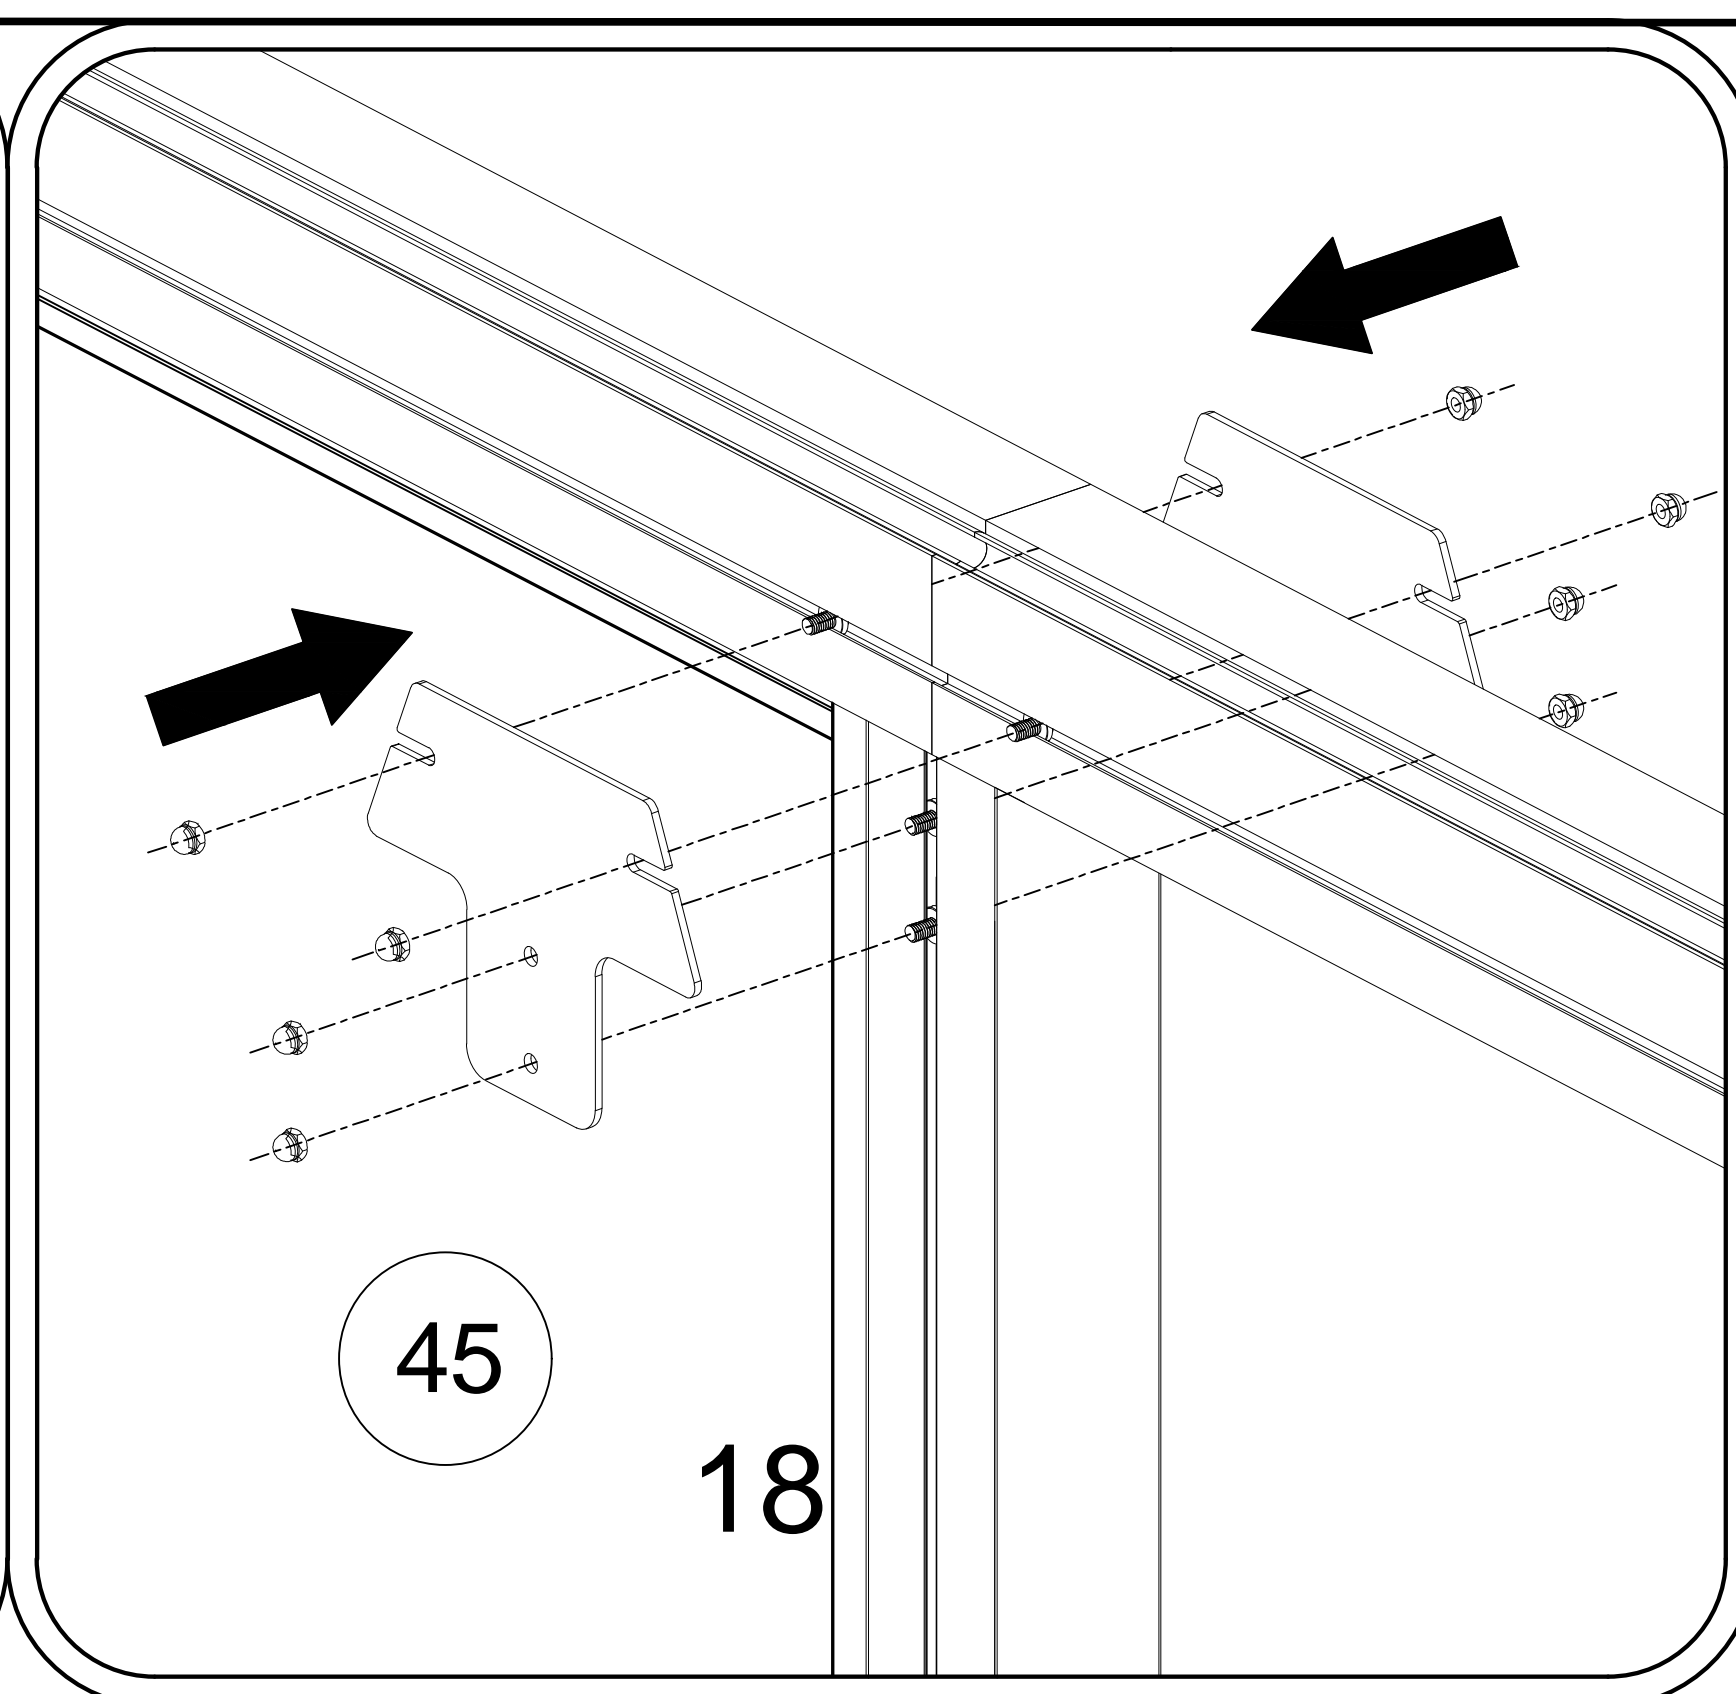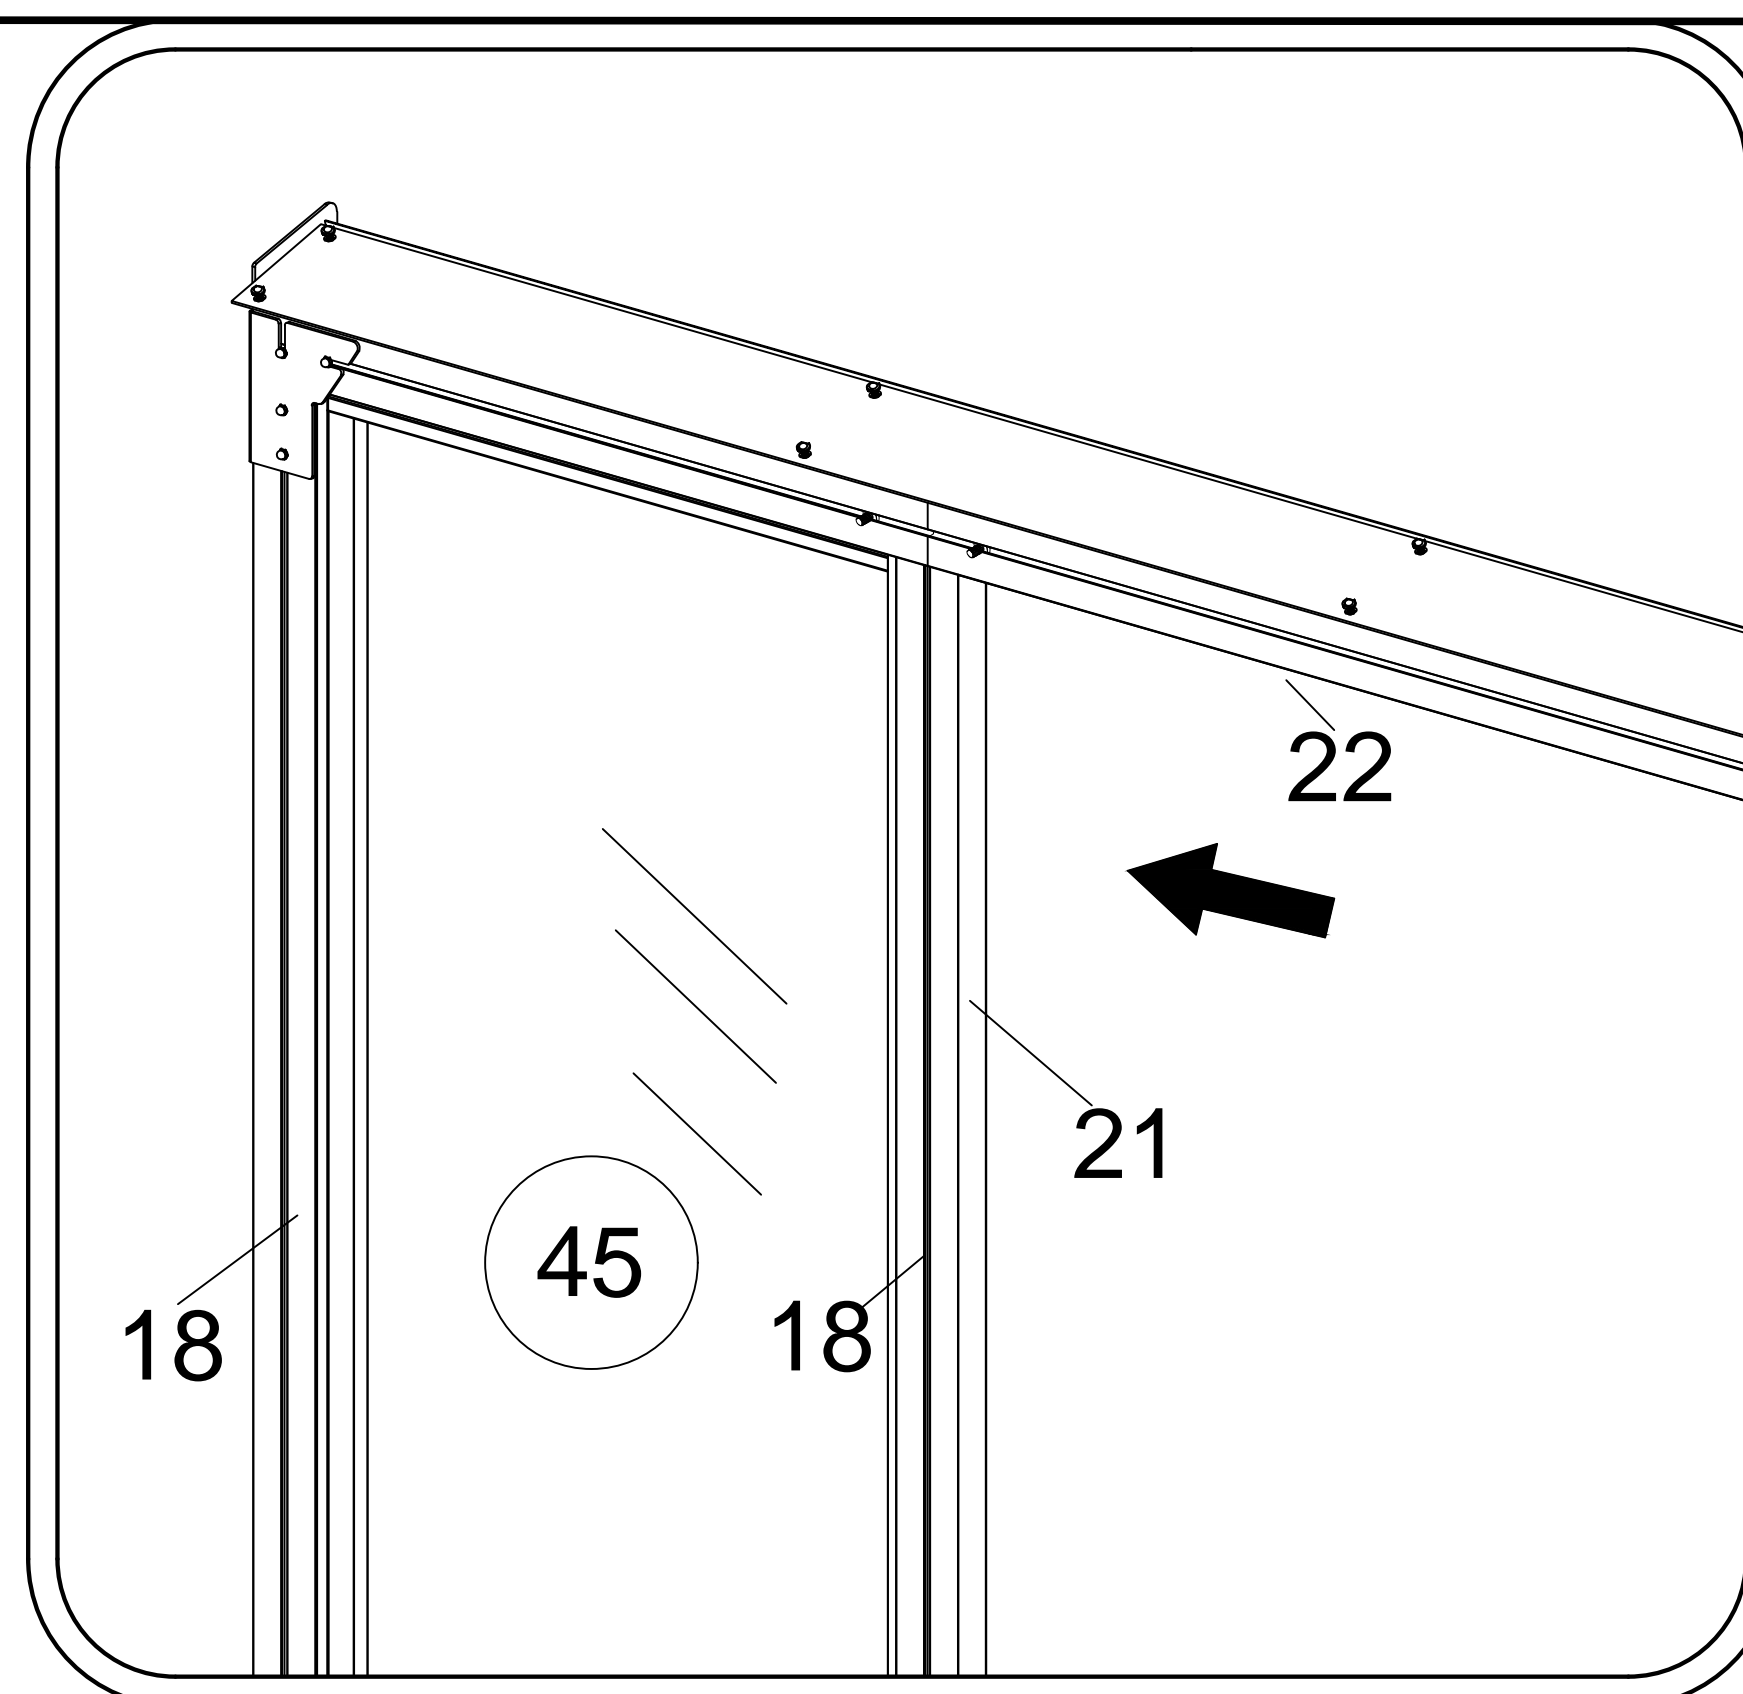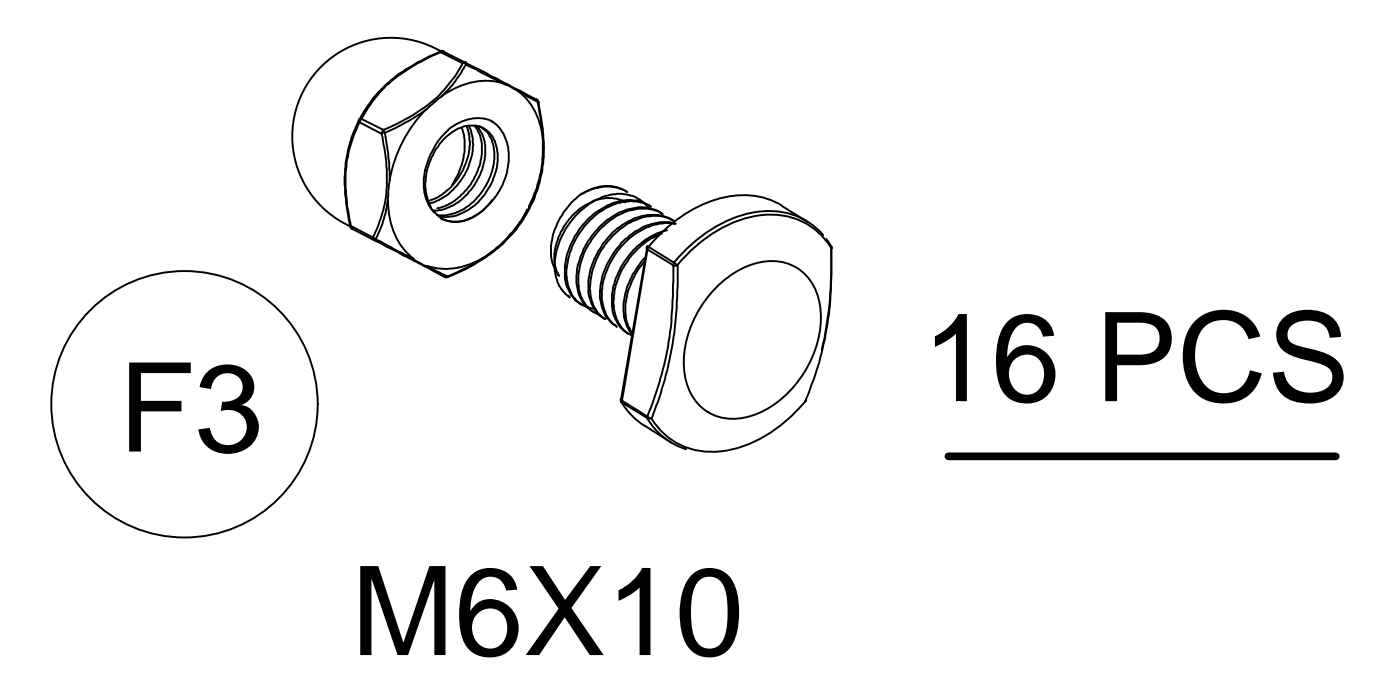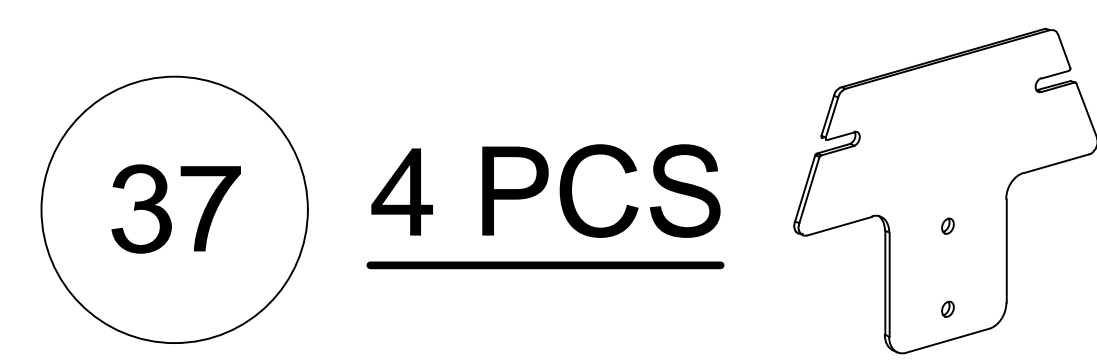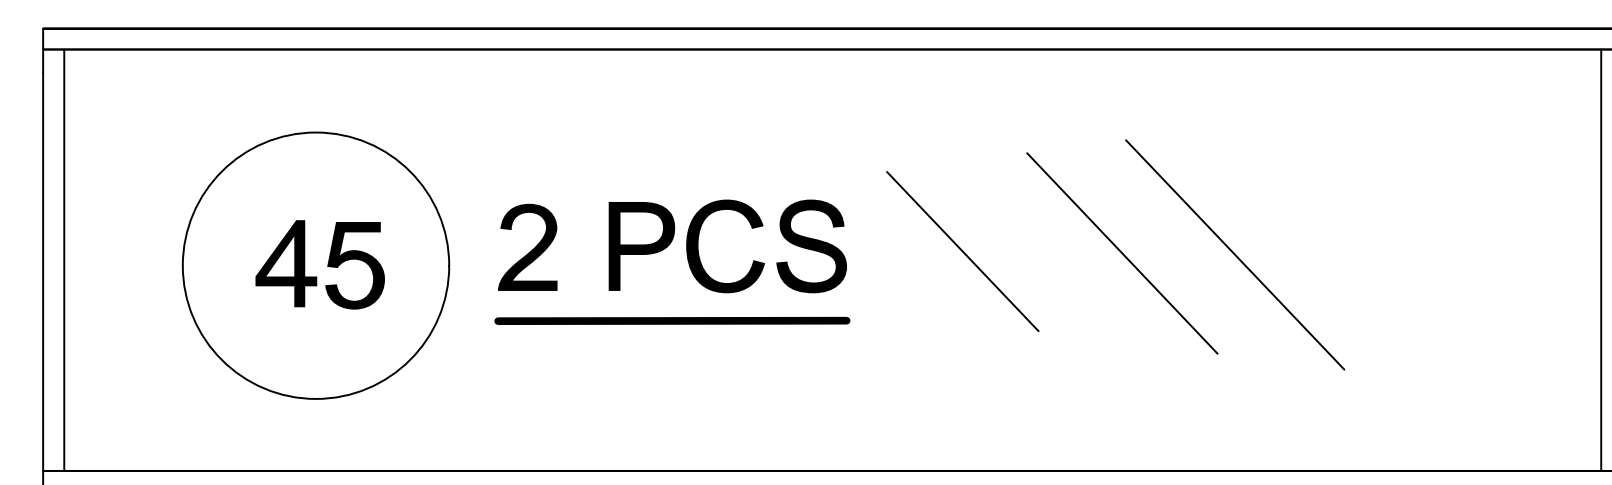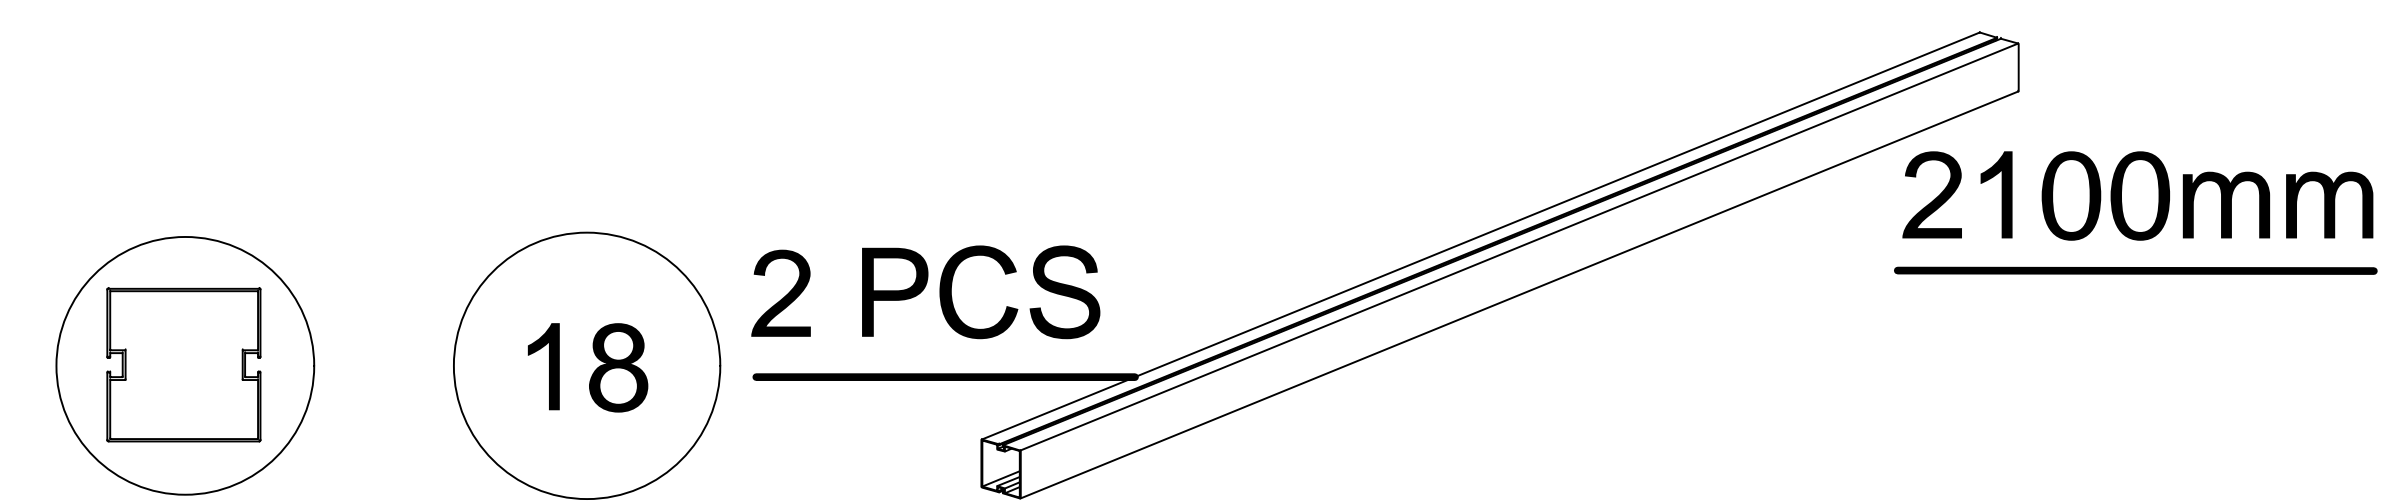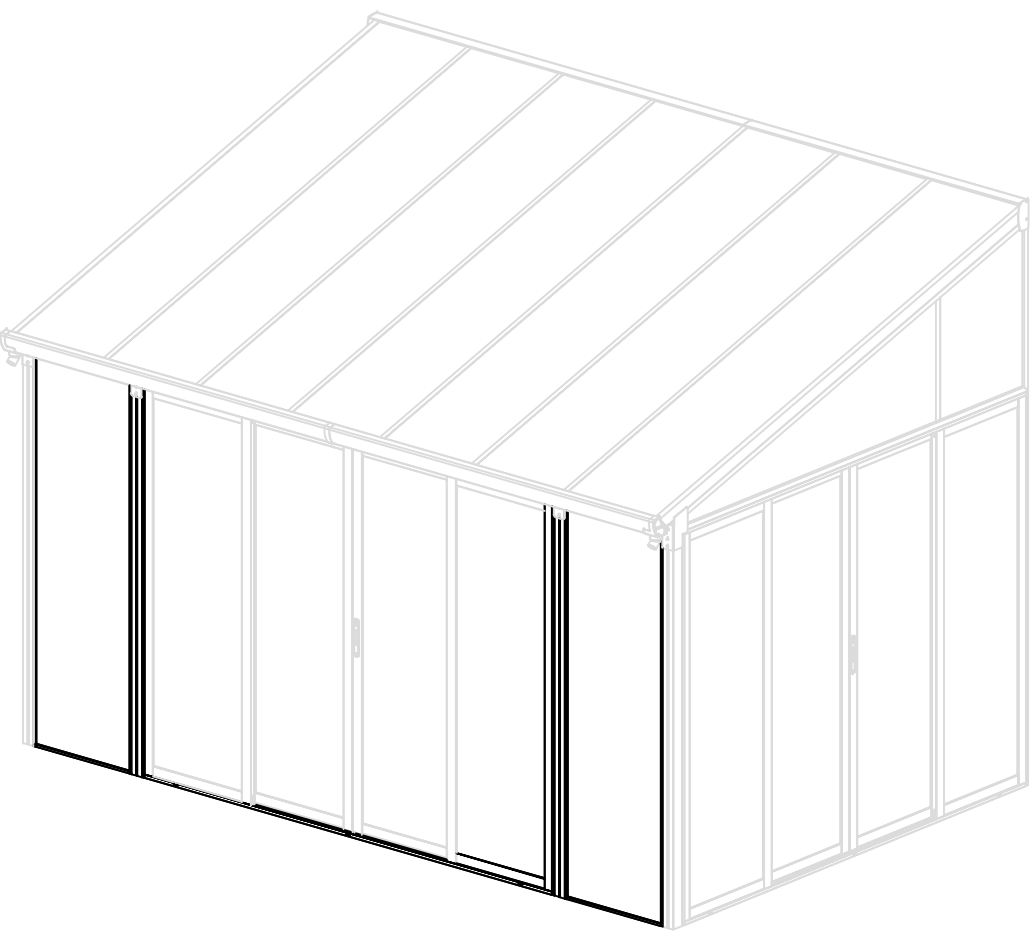






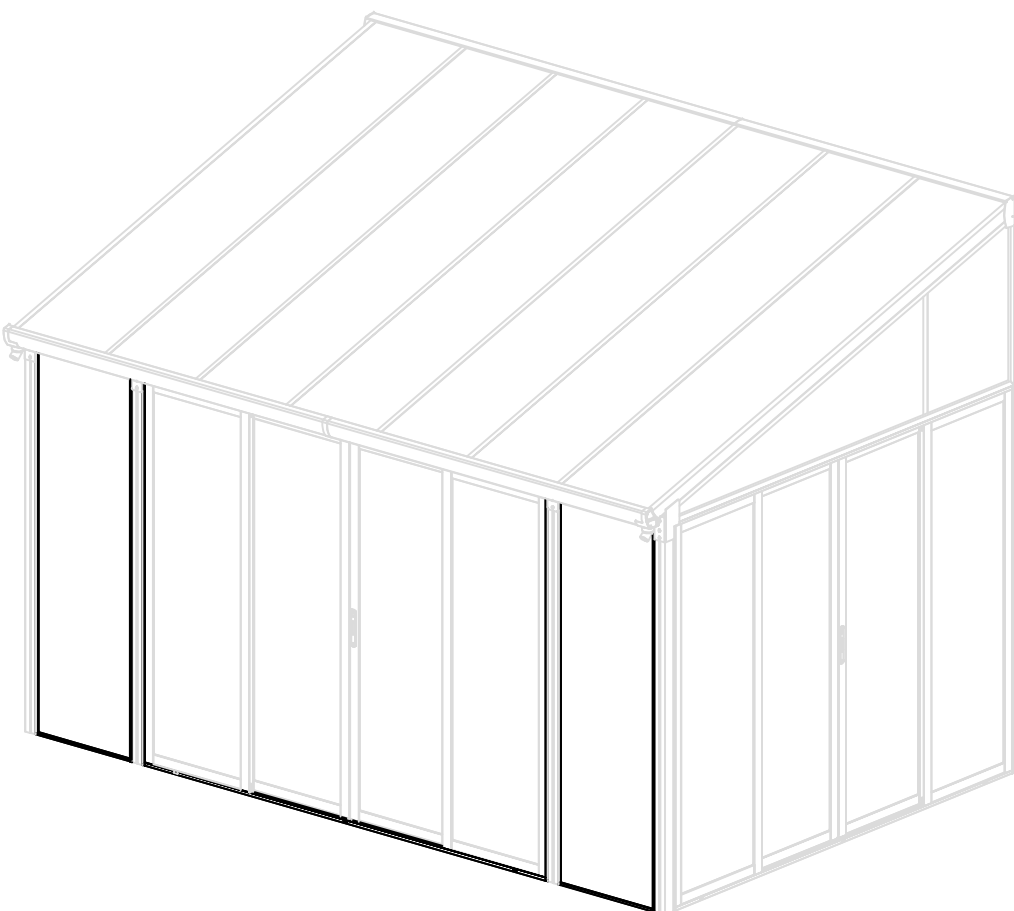





**F6**  
ST6.3X60  
9 PCS

**F4**  
ST4.2X20  
27 PCS

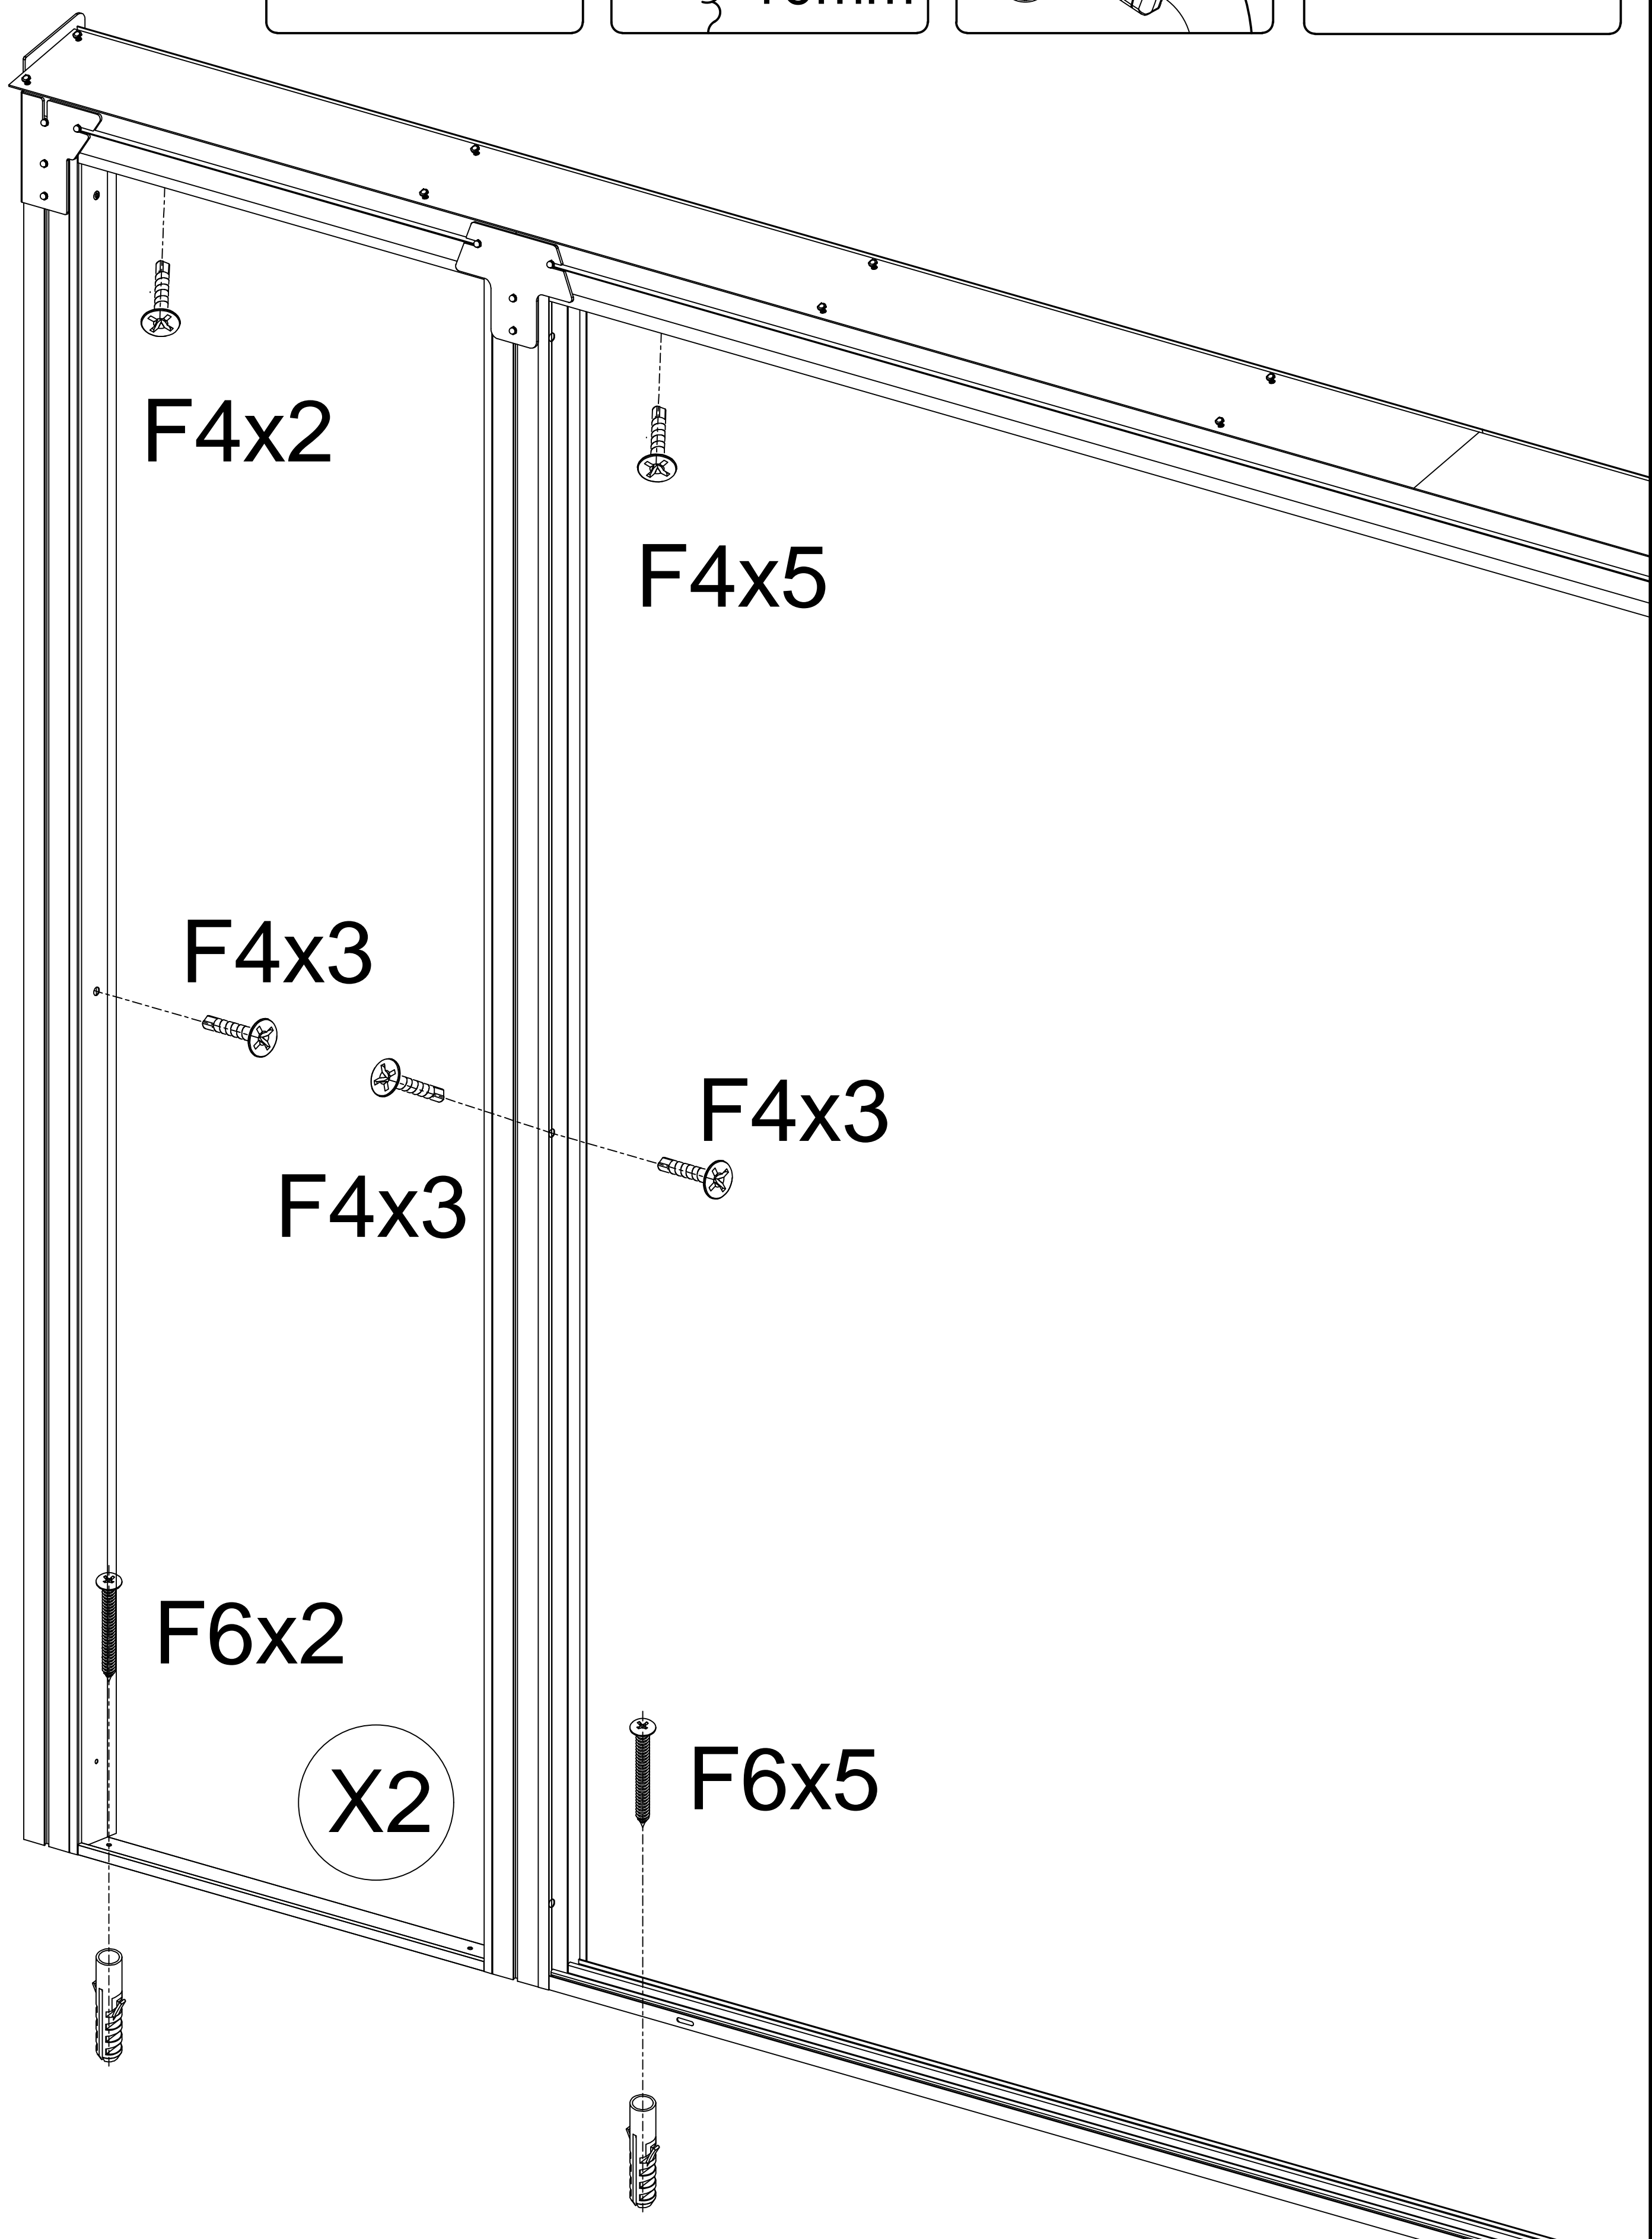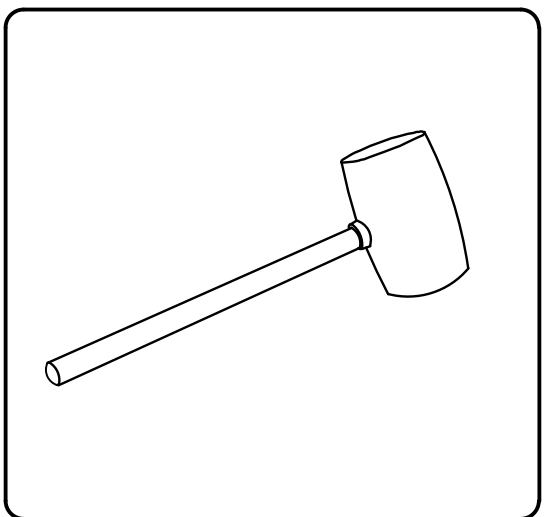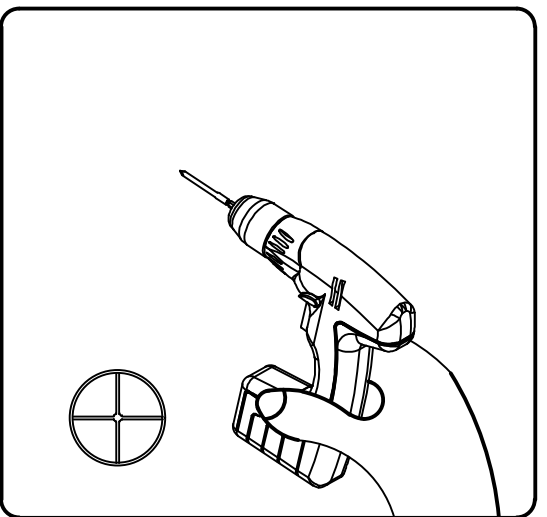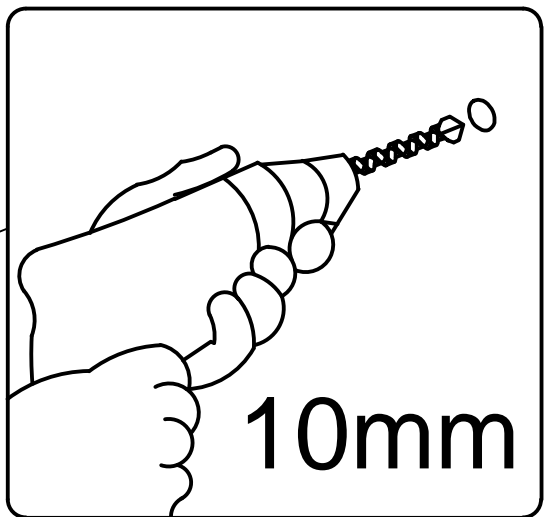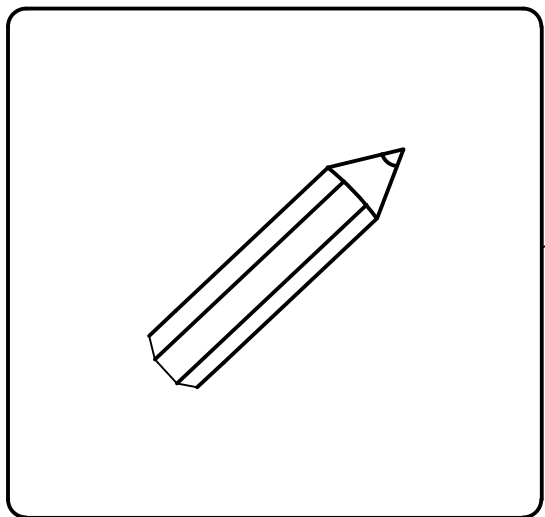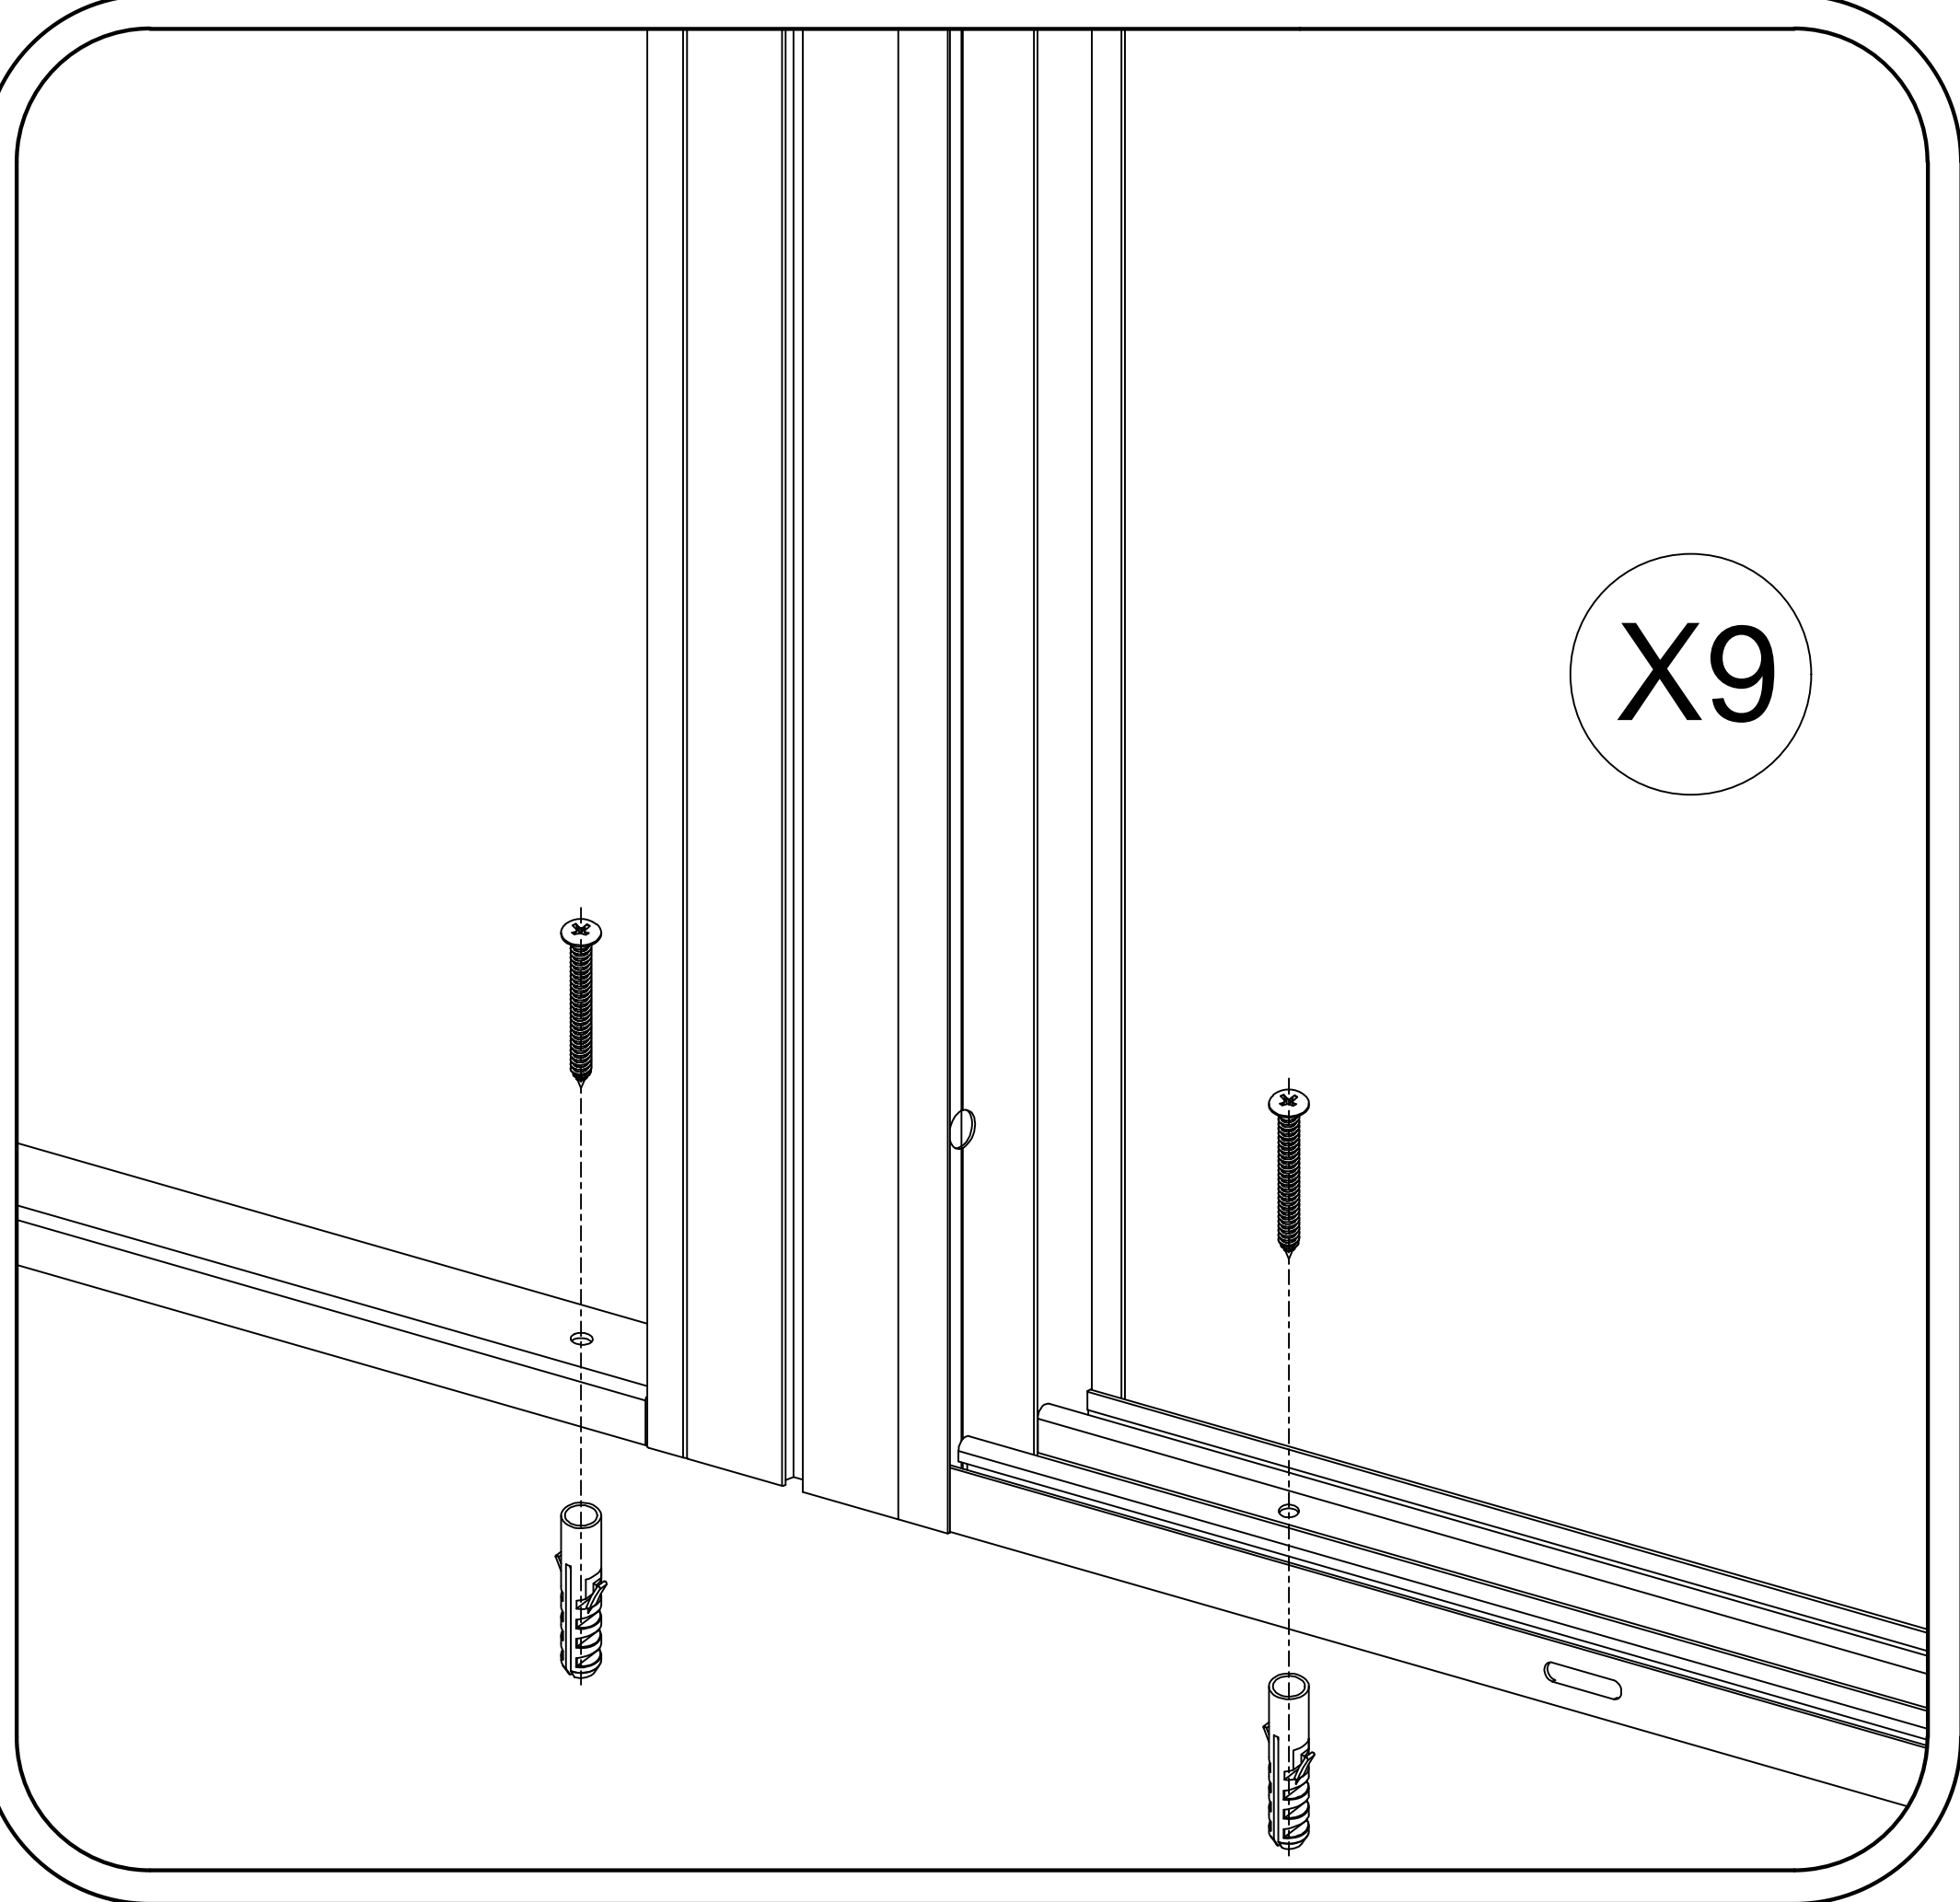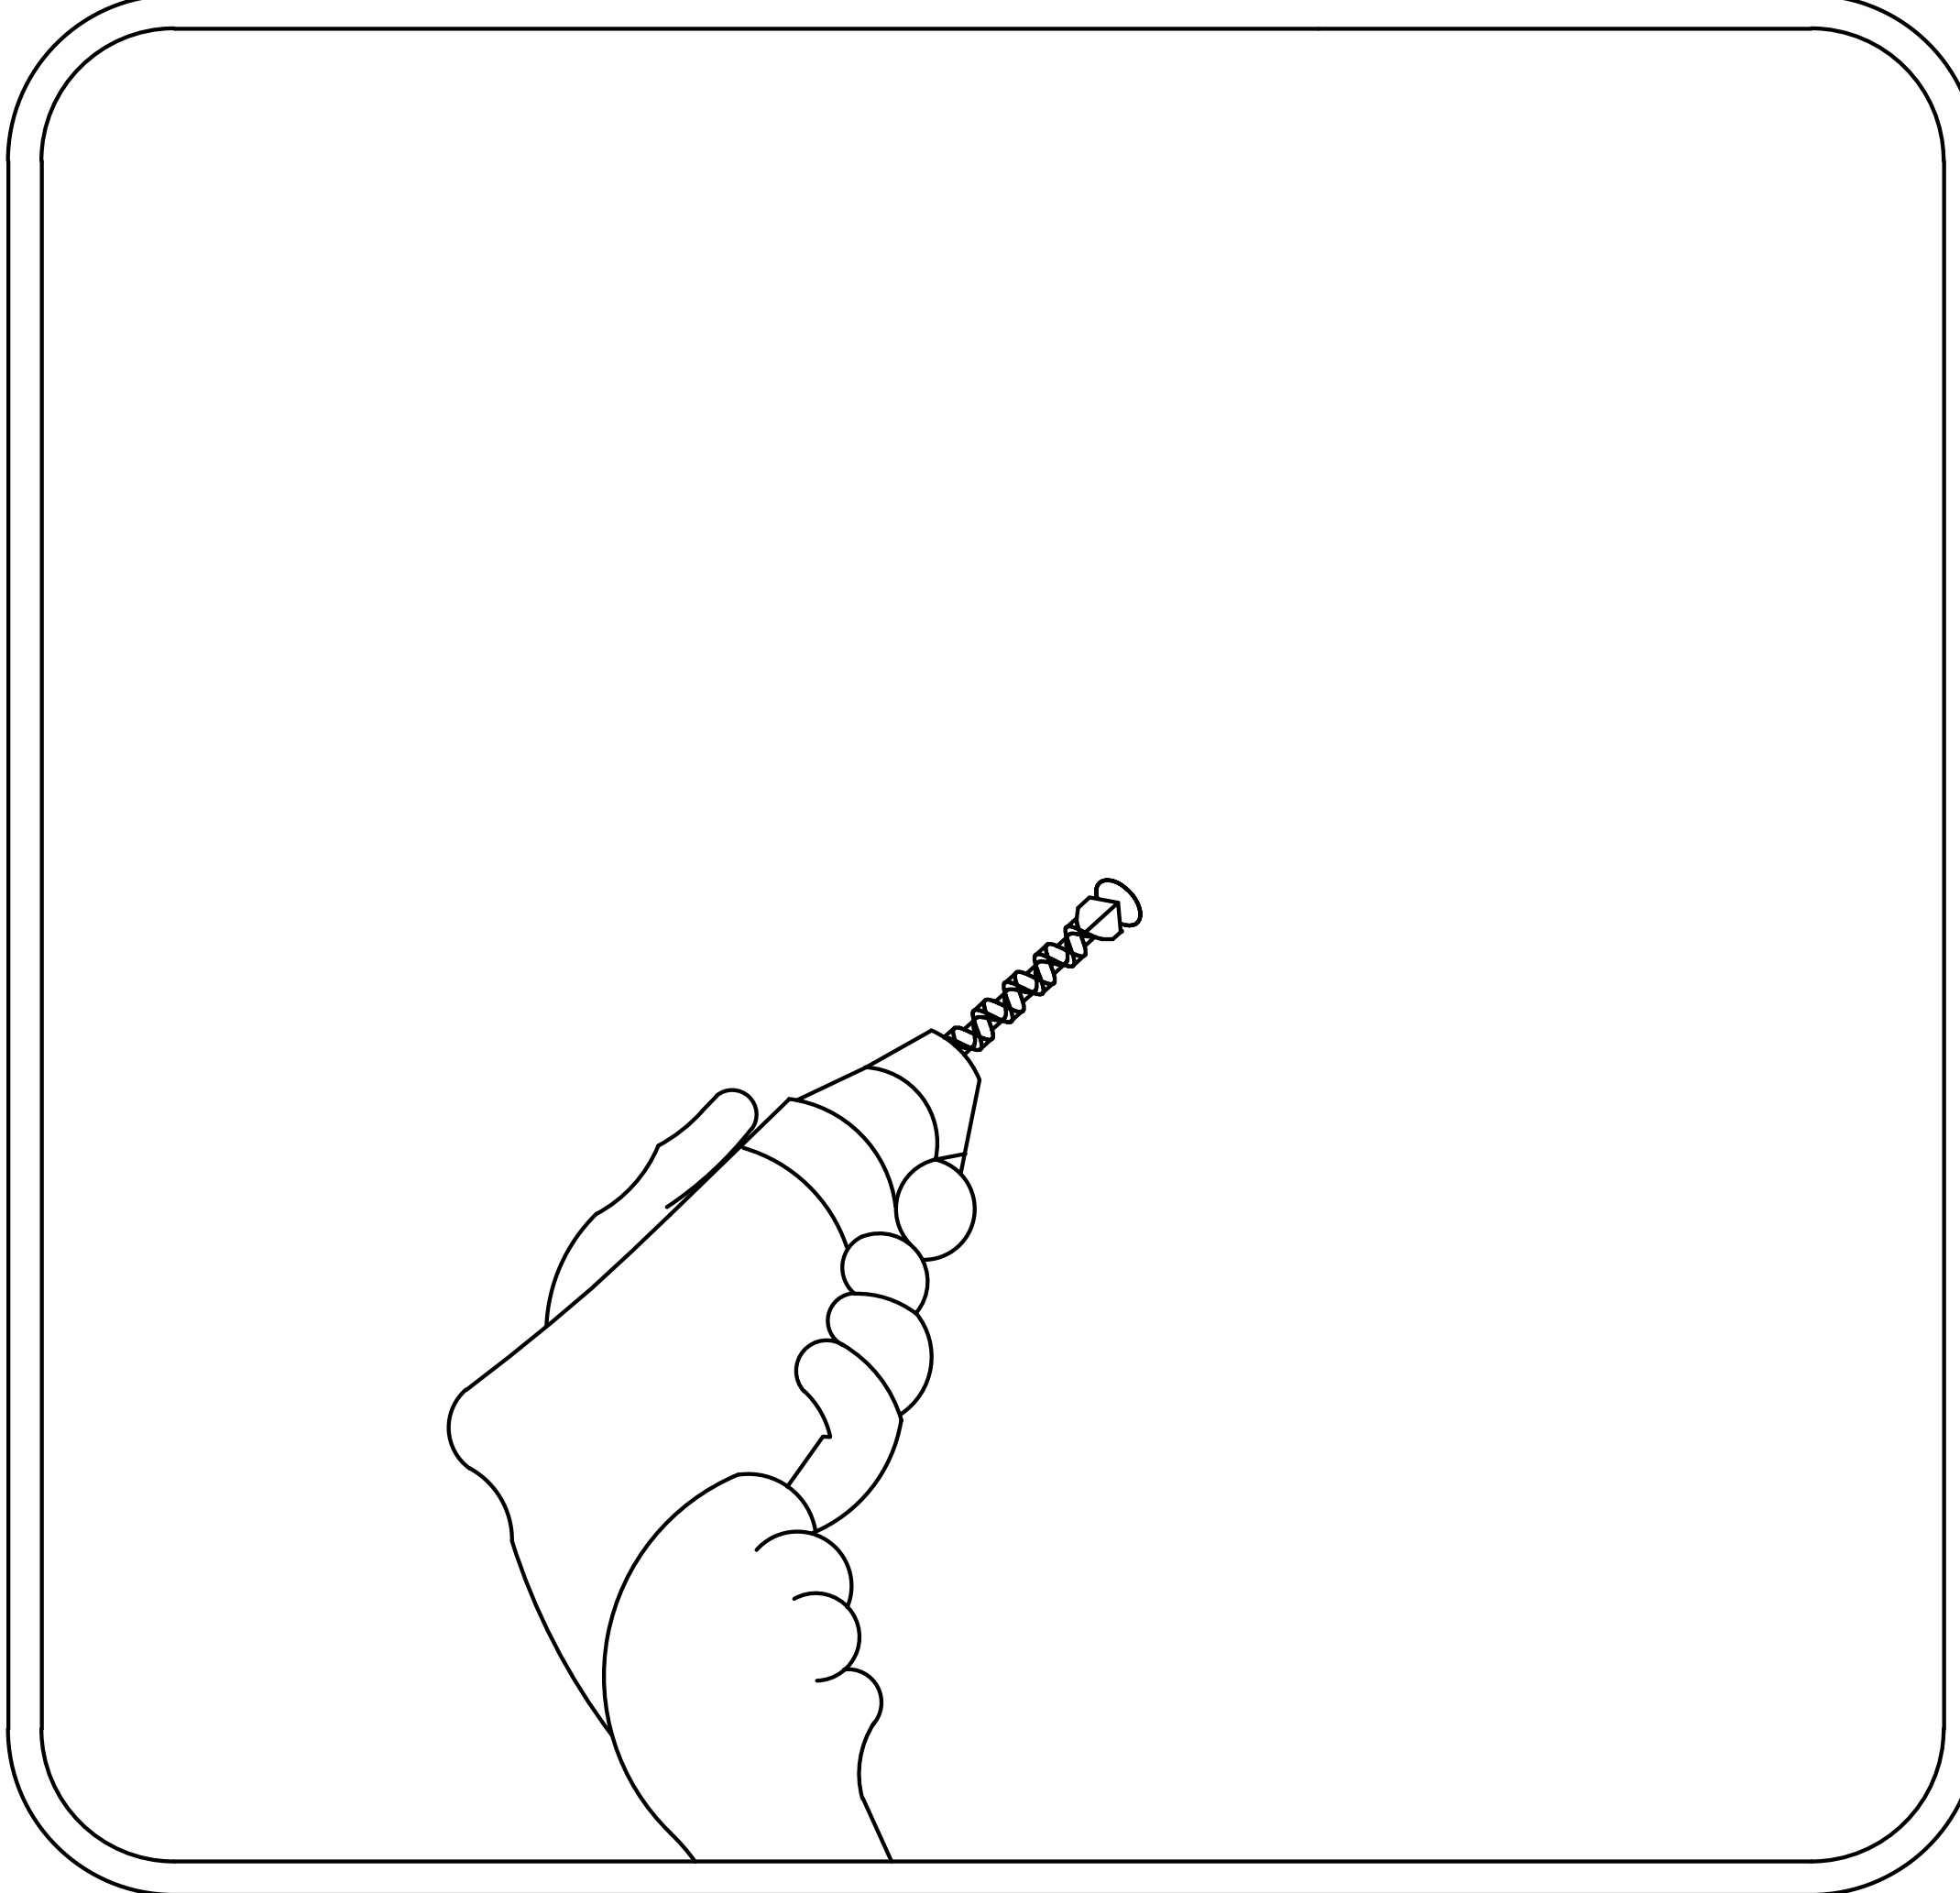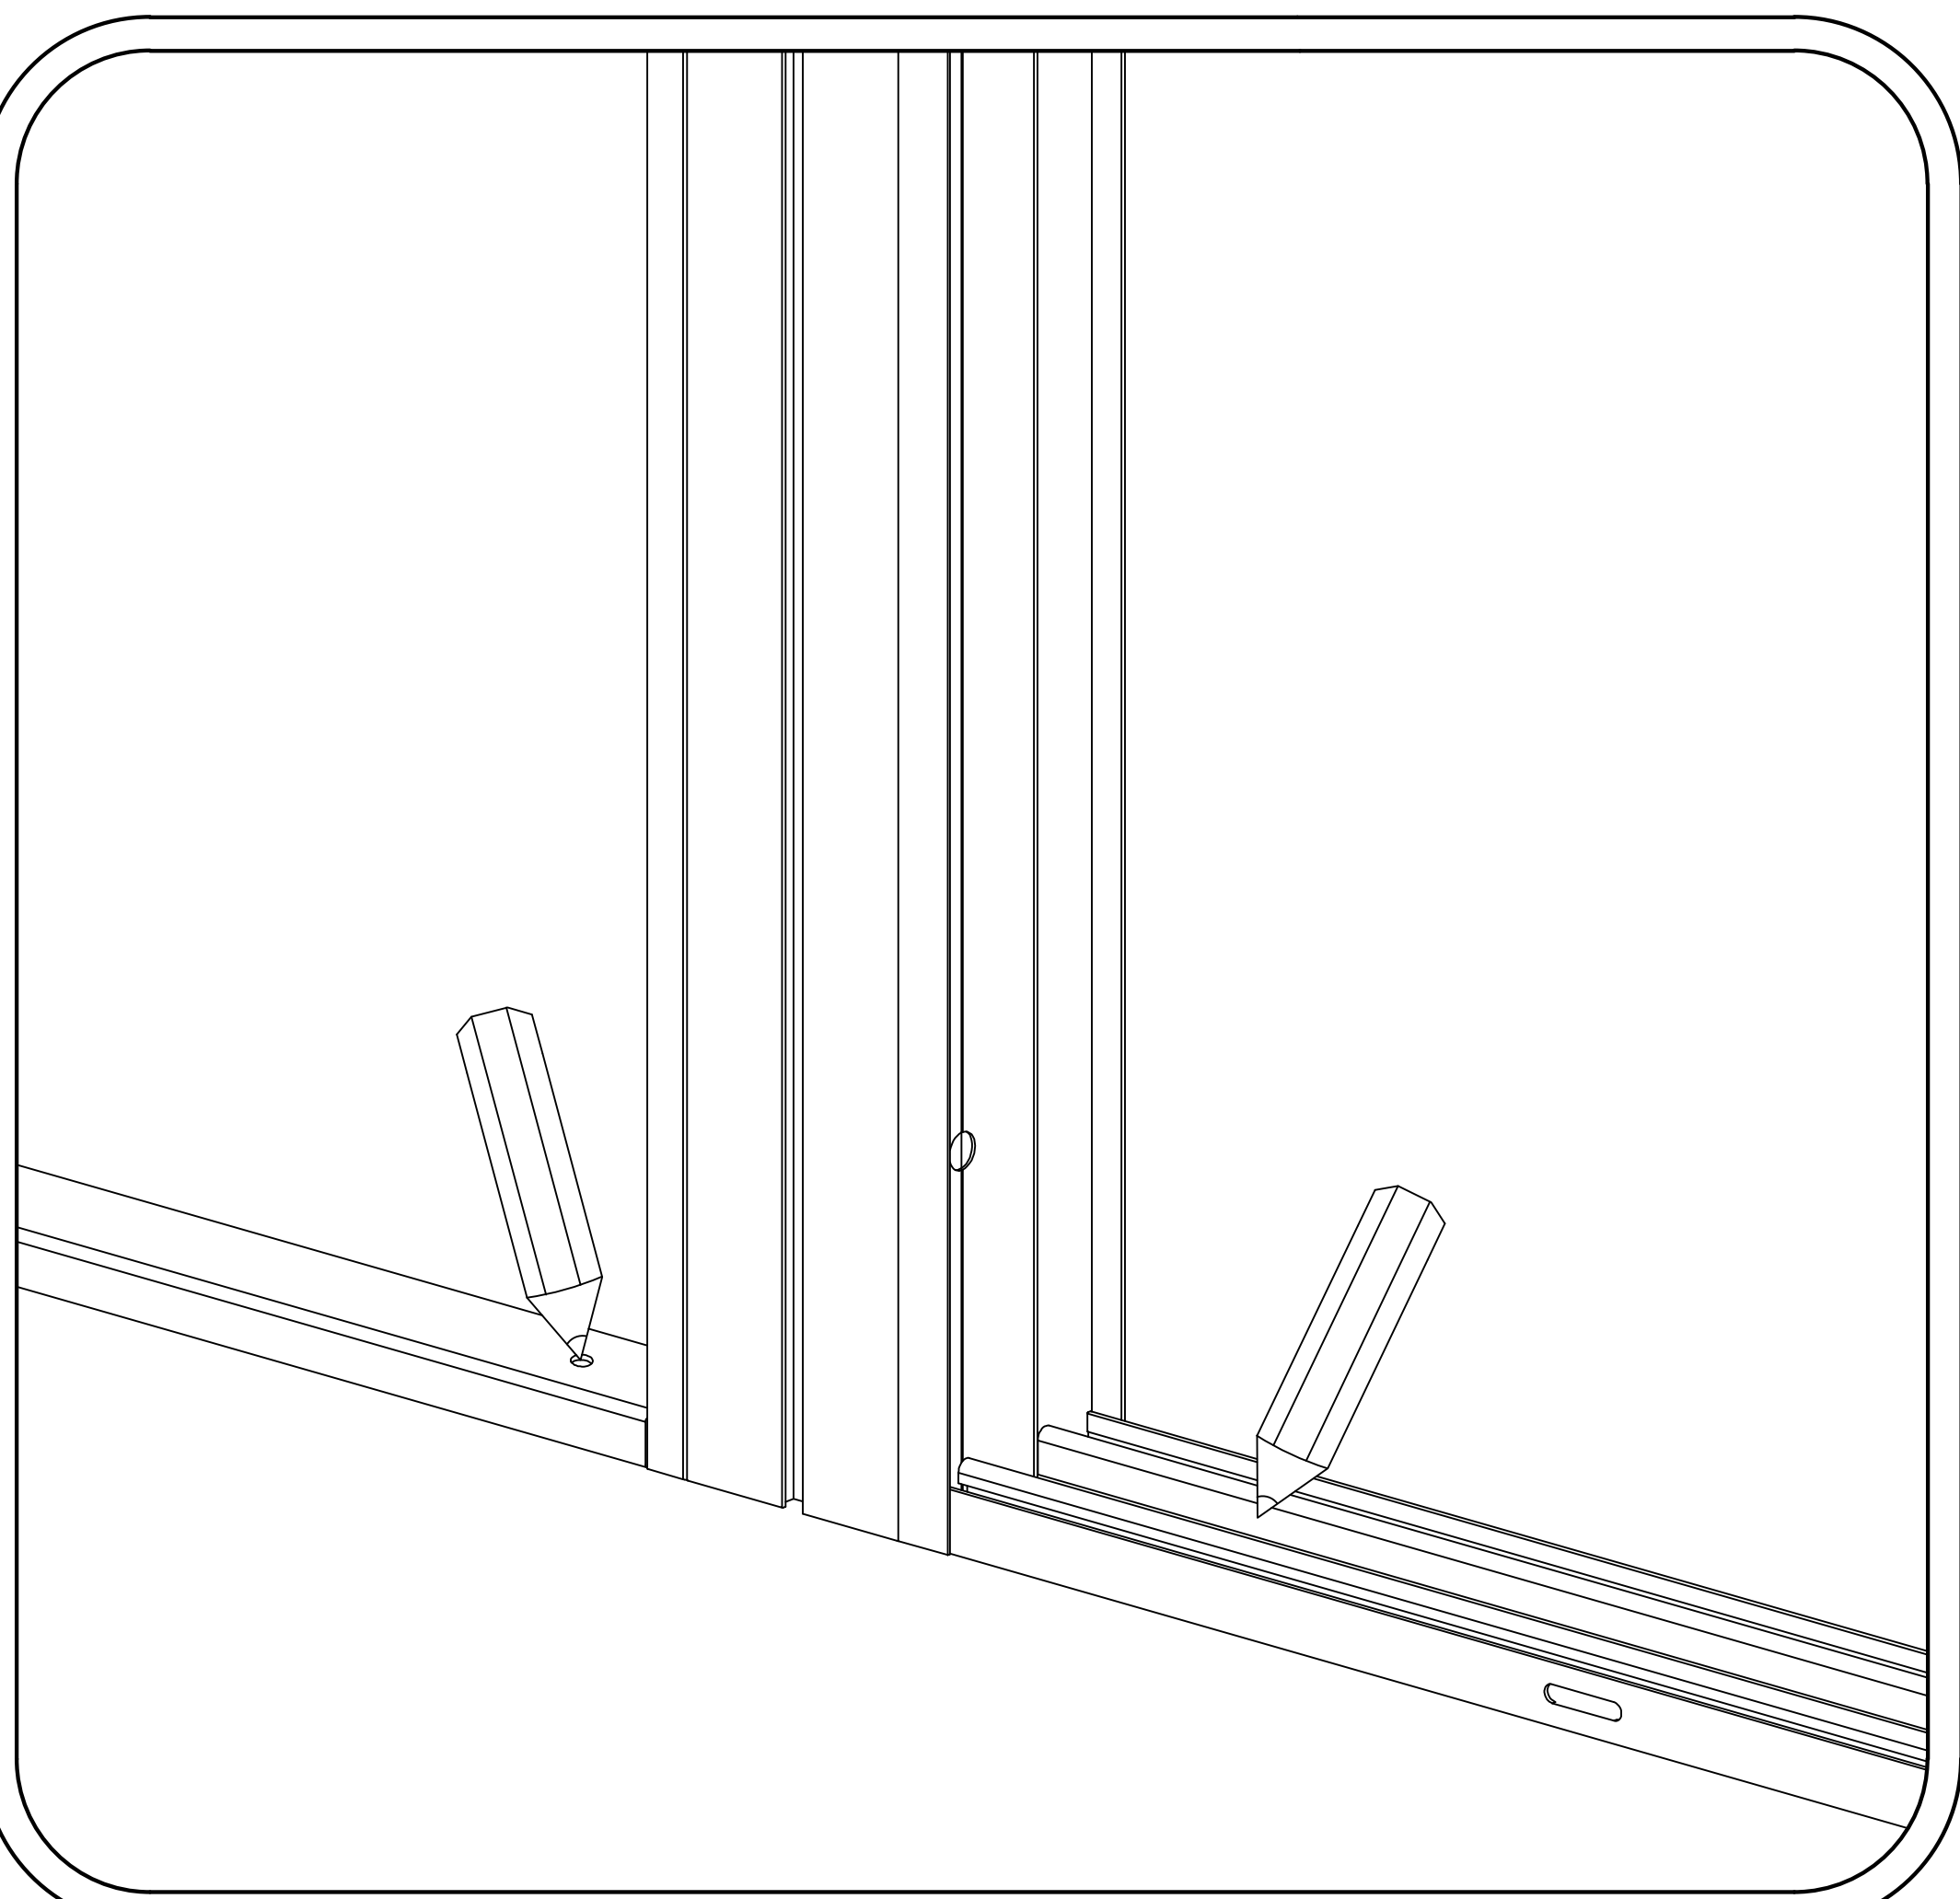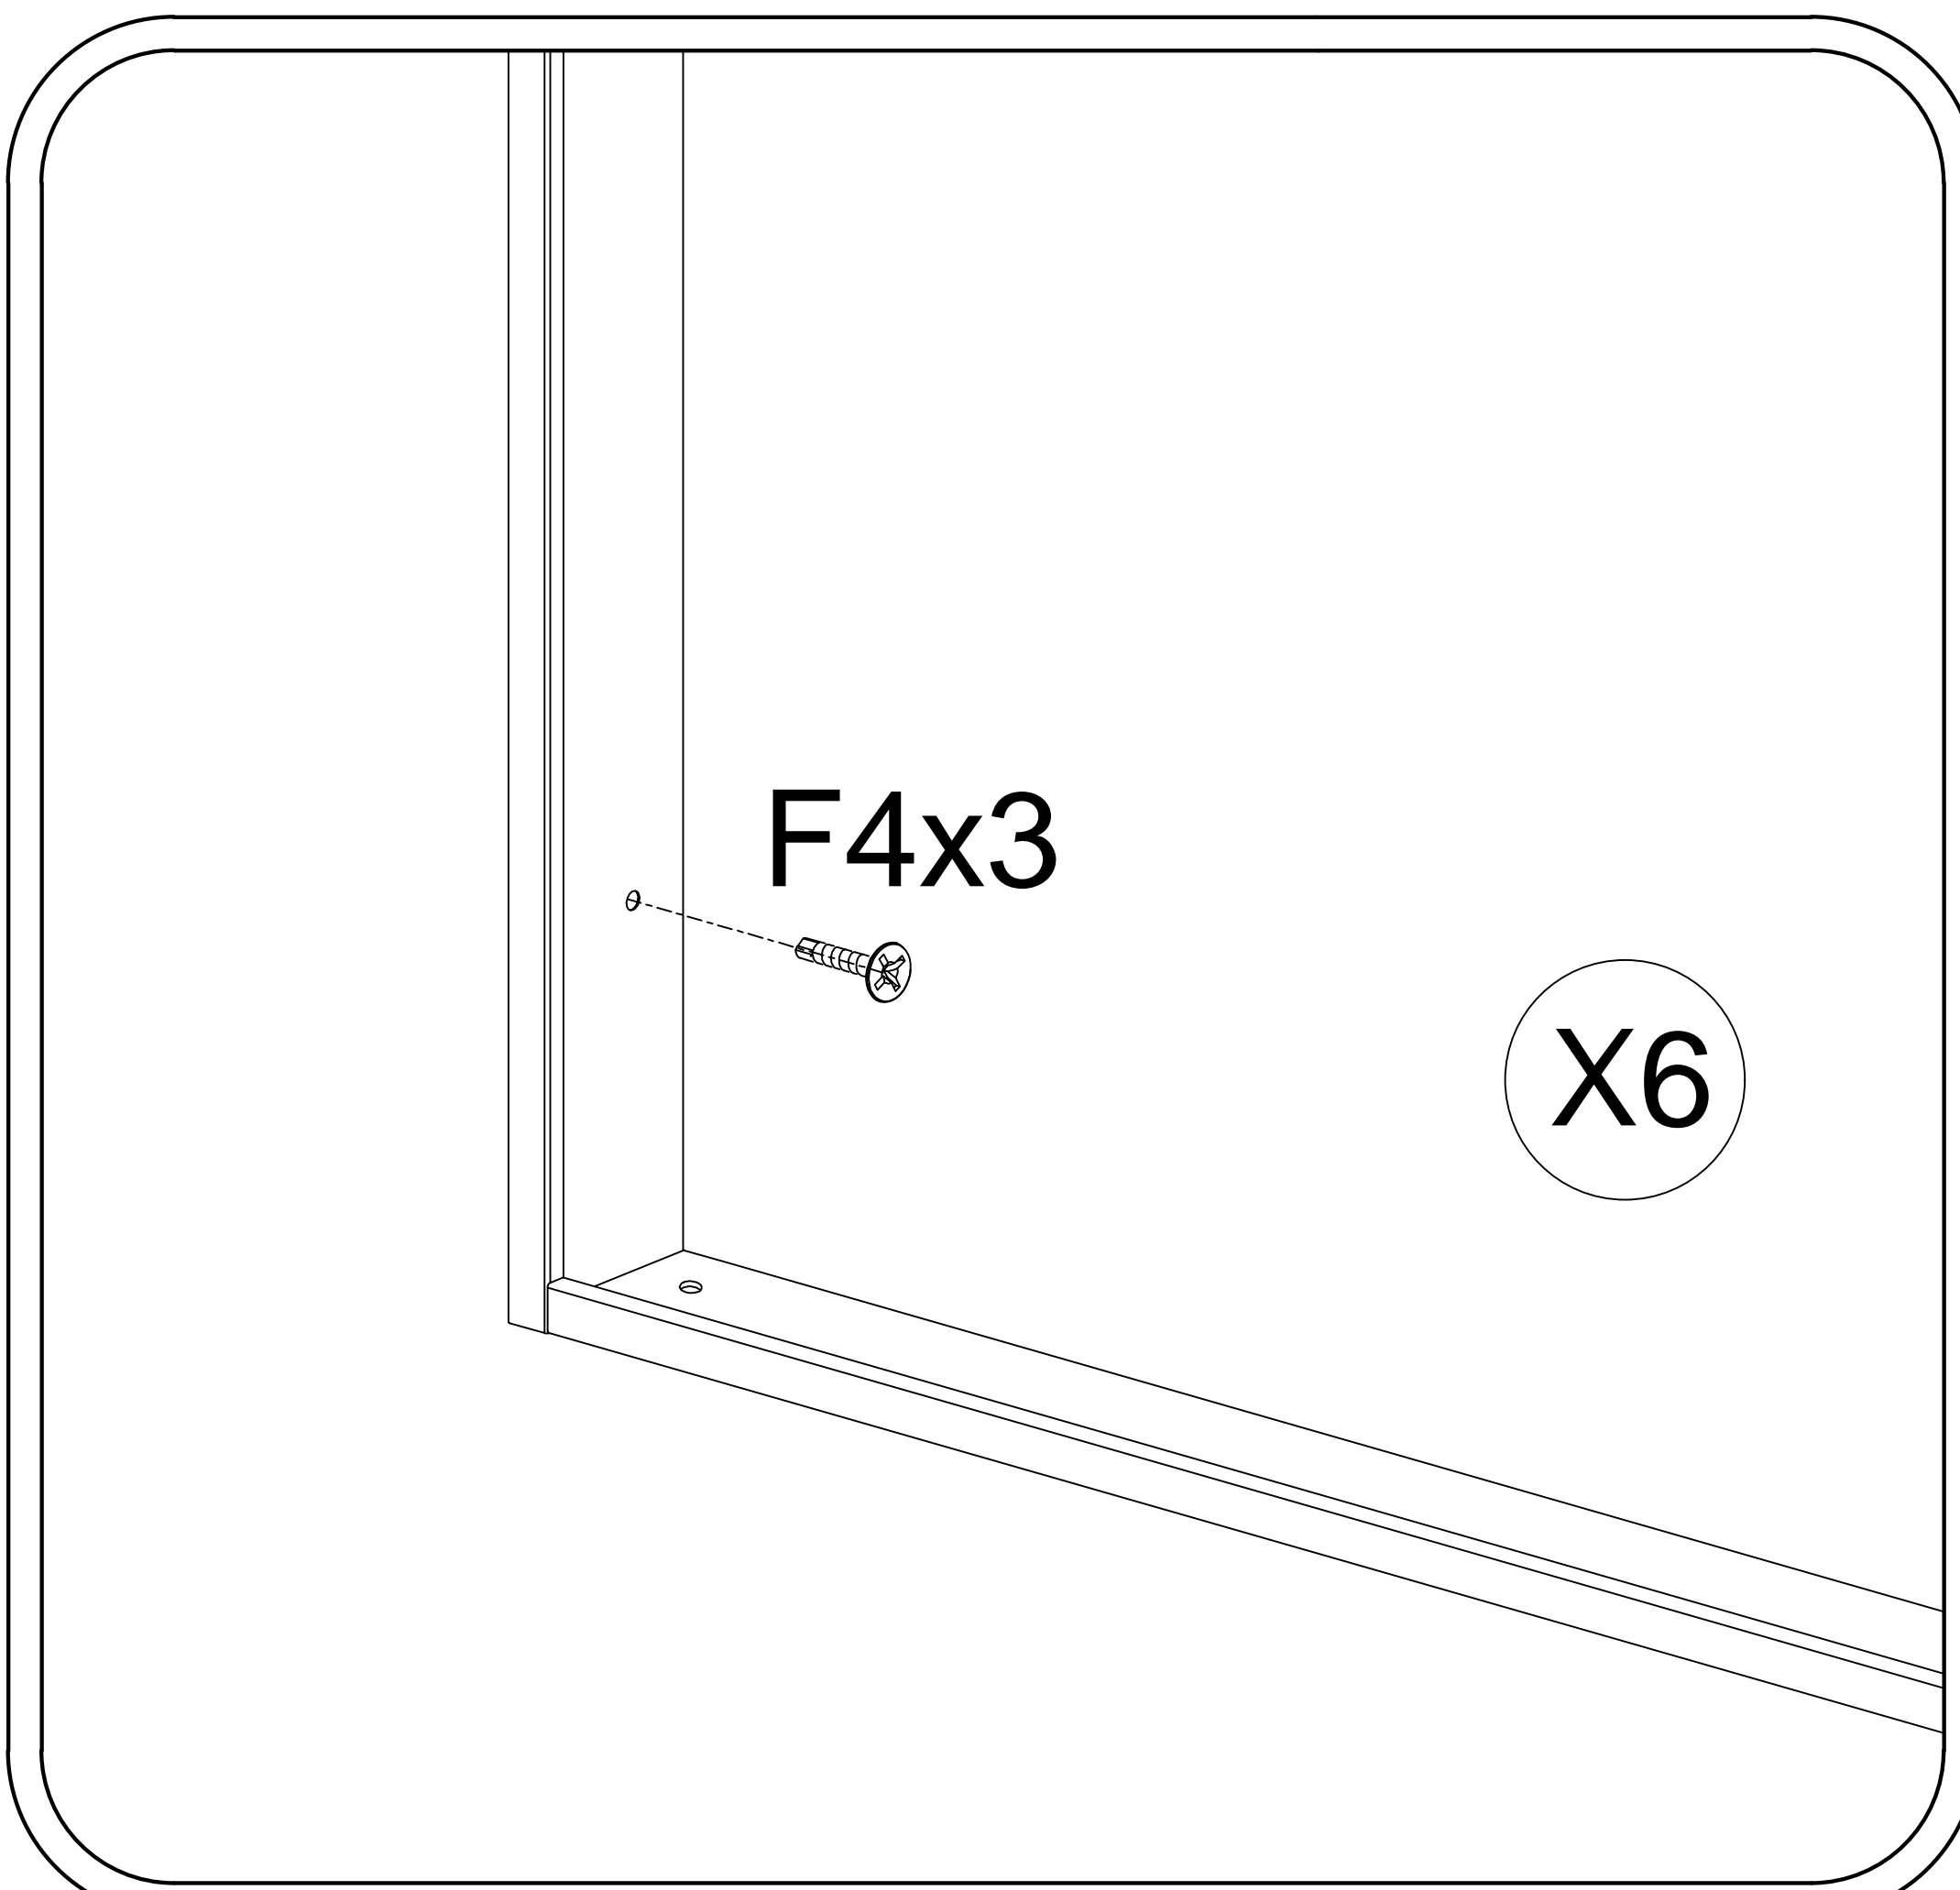





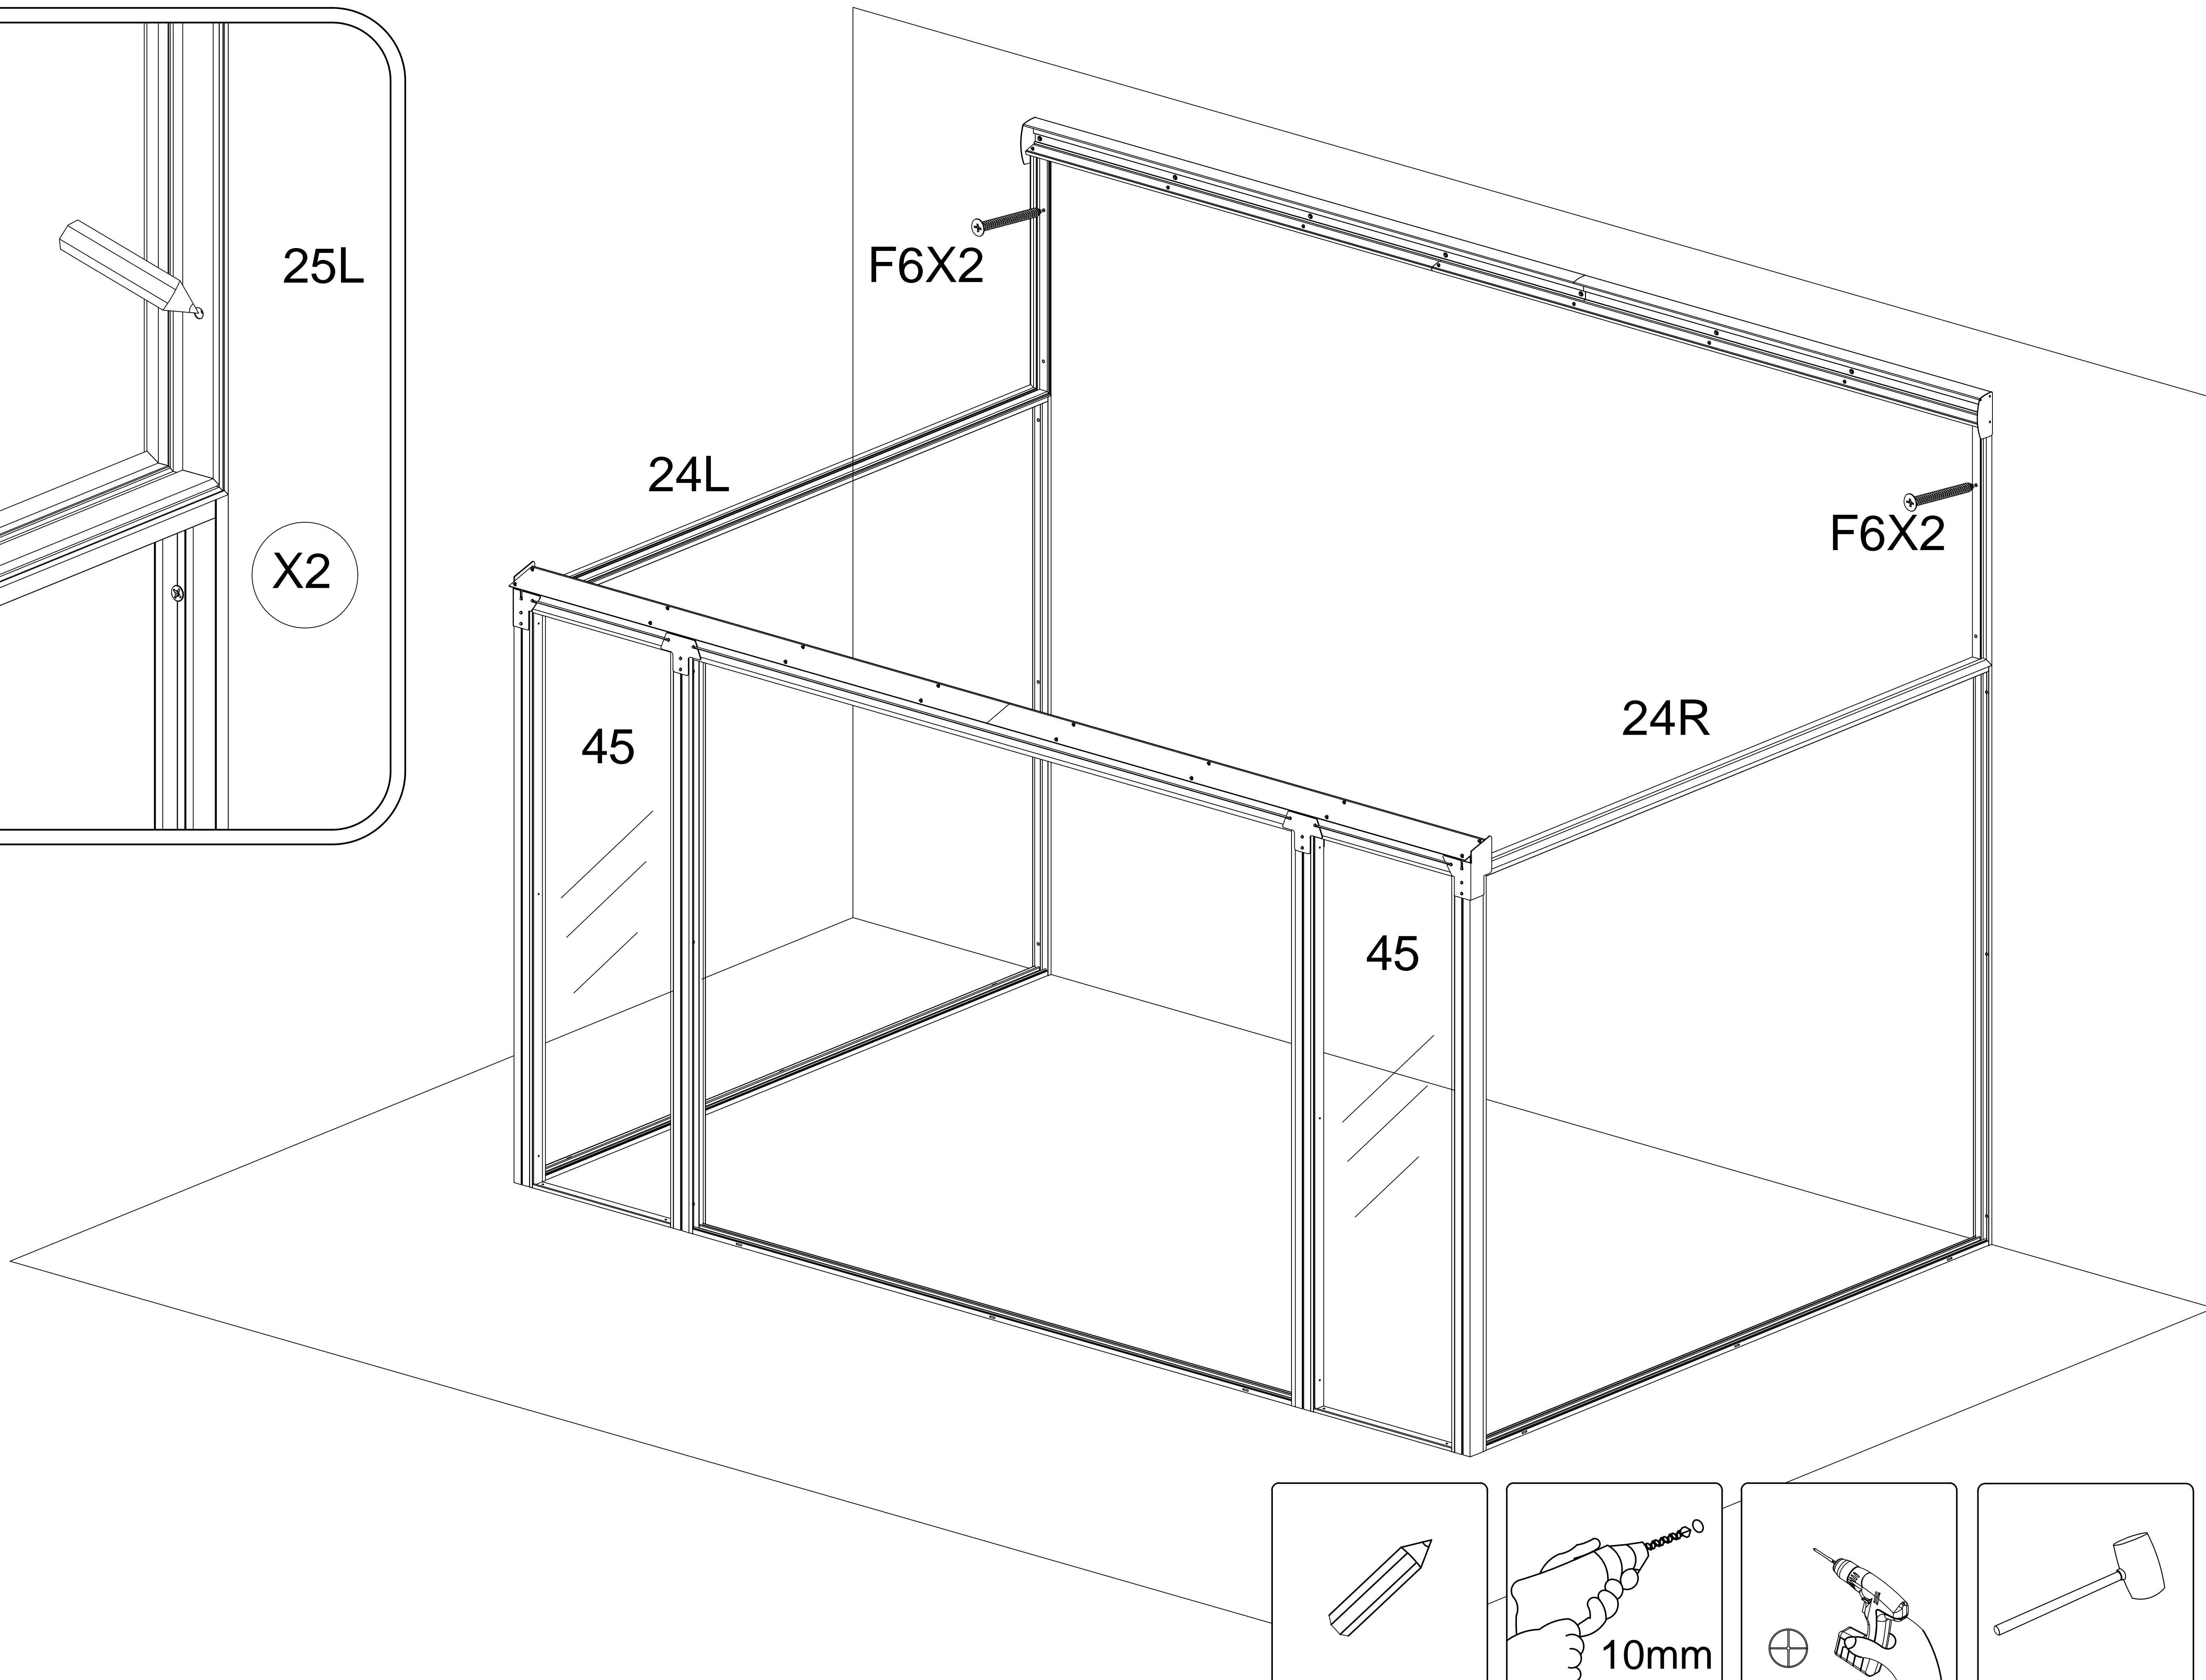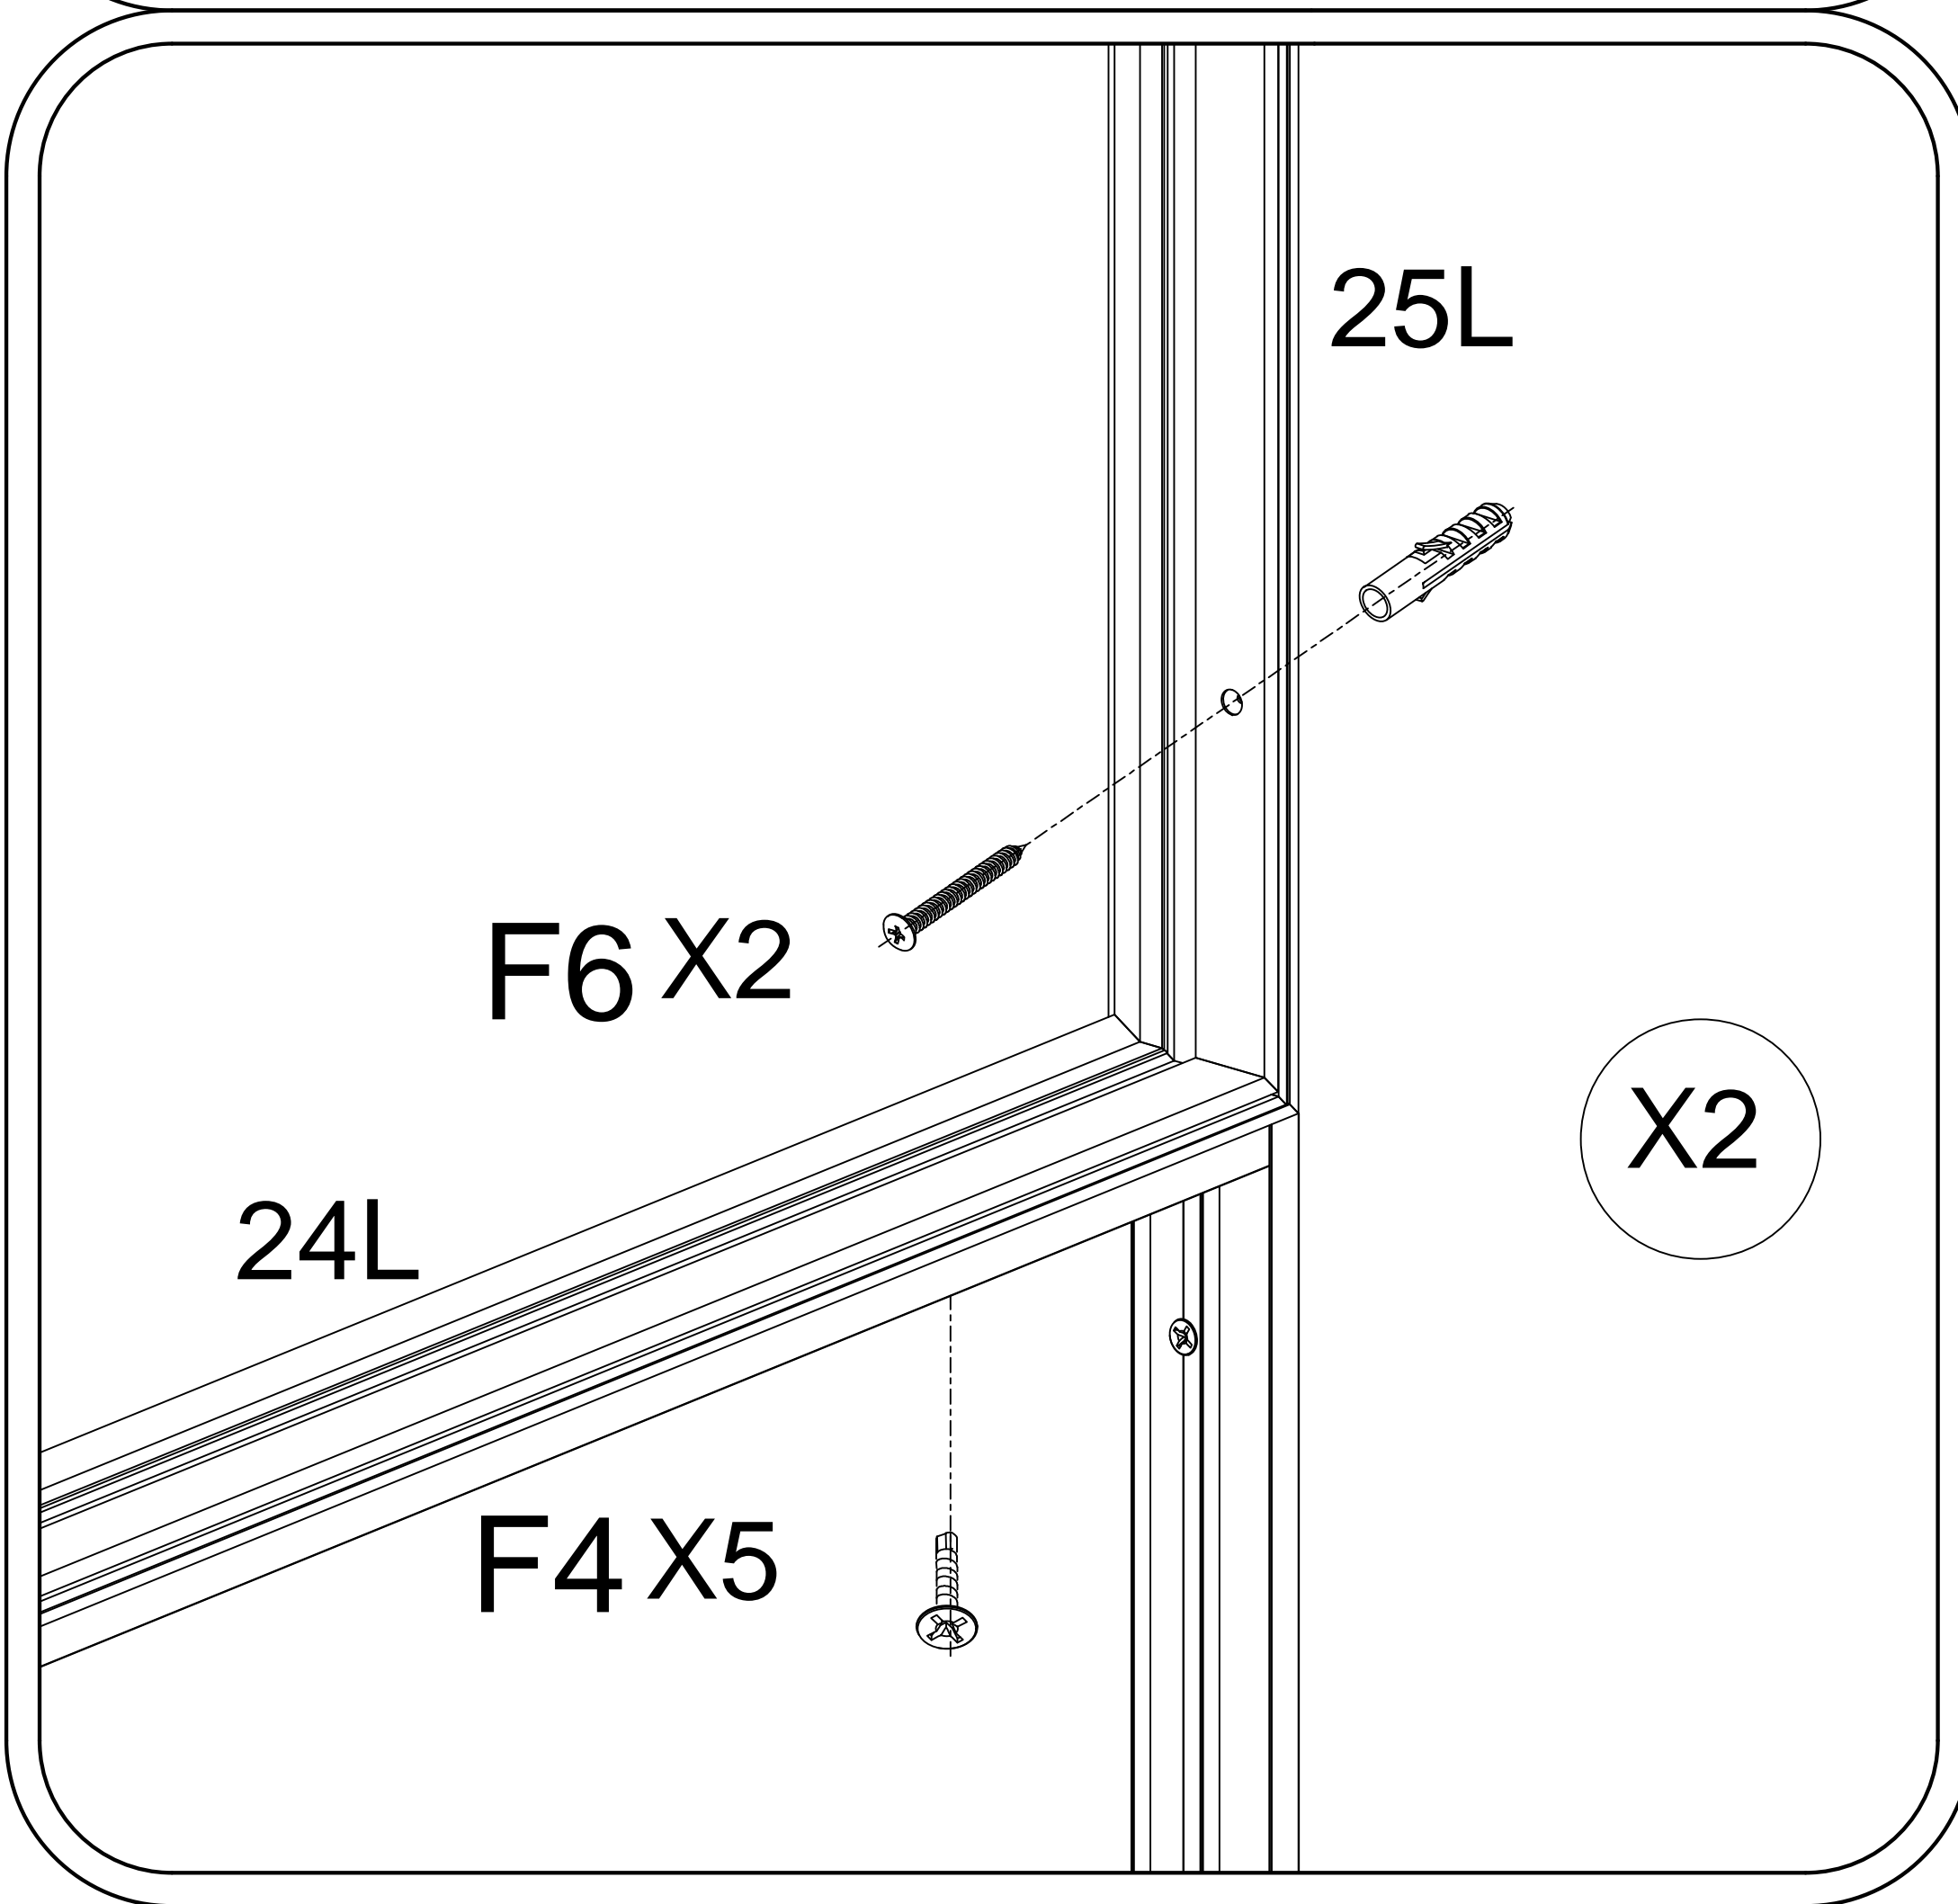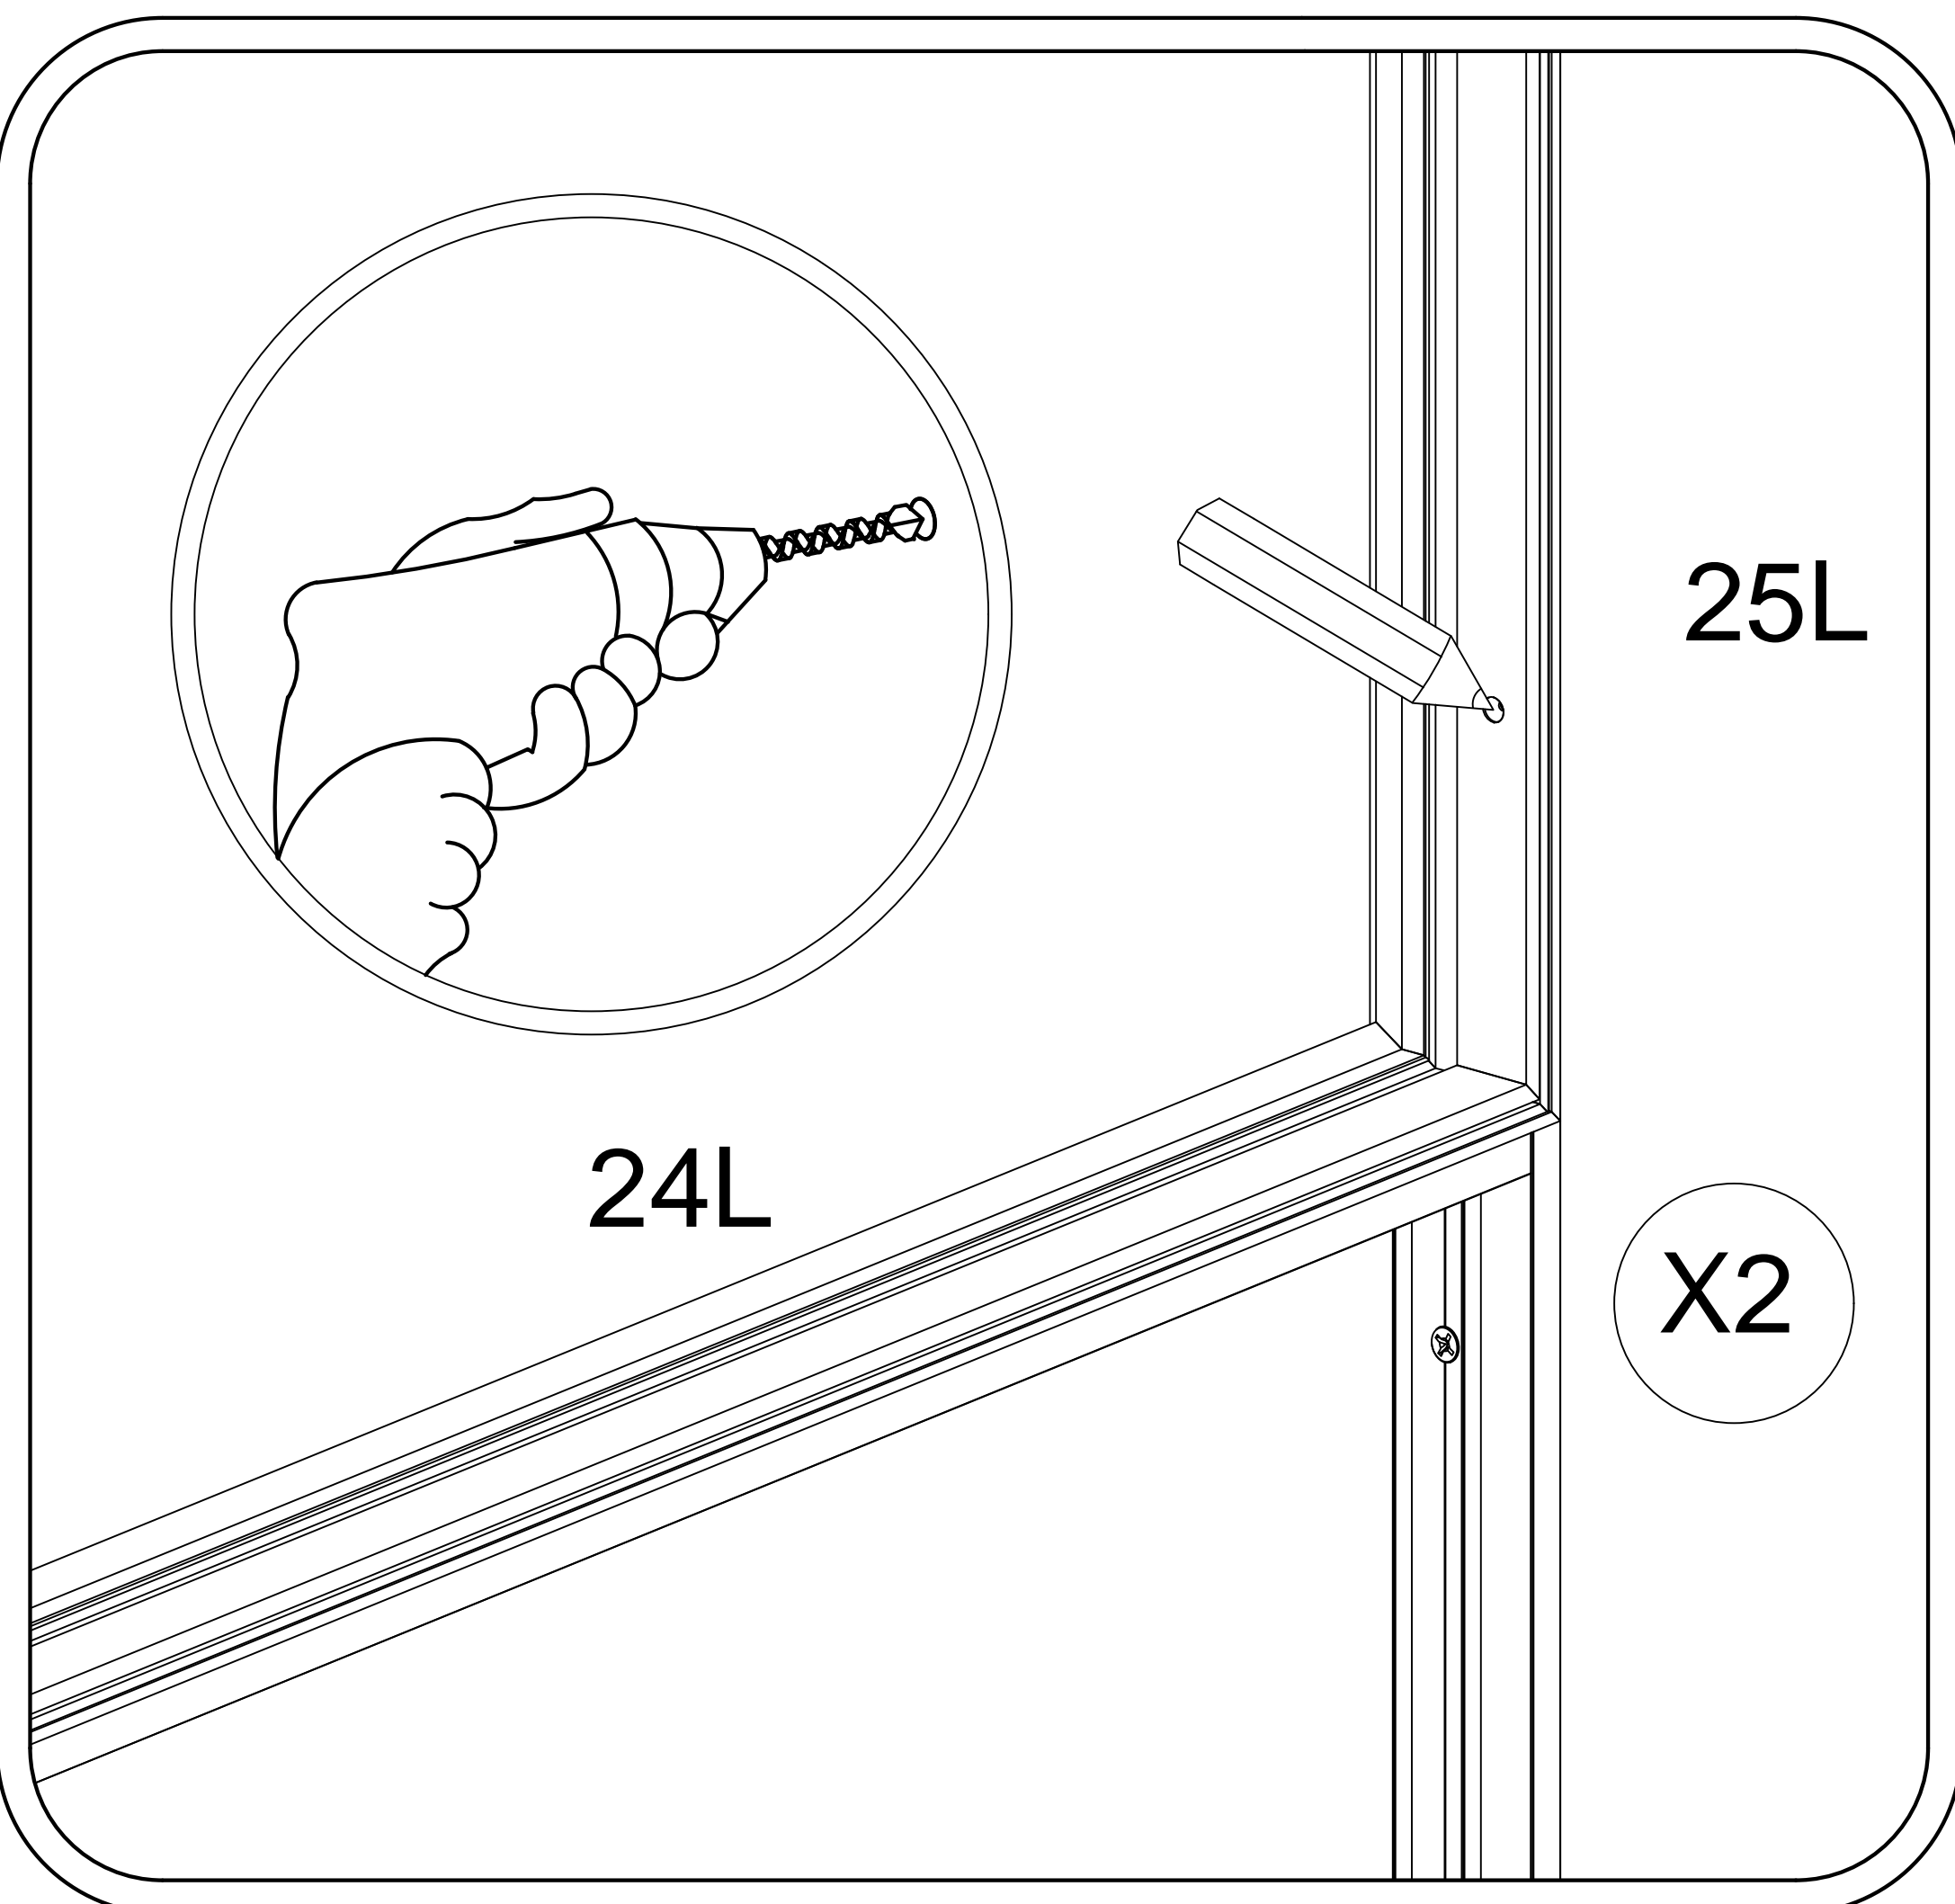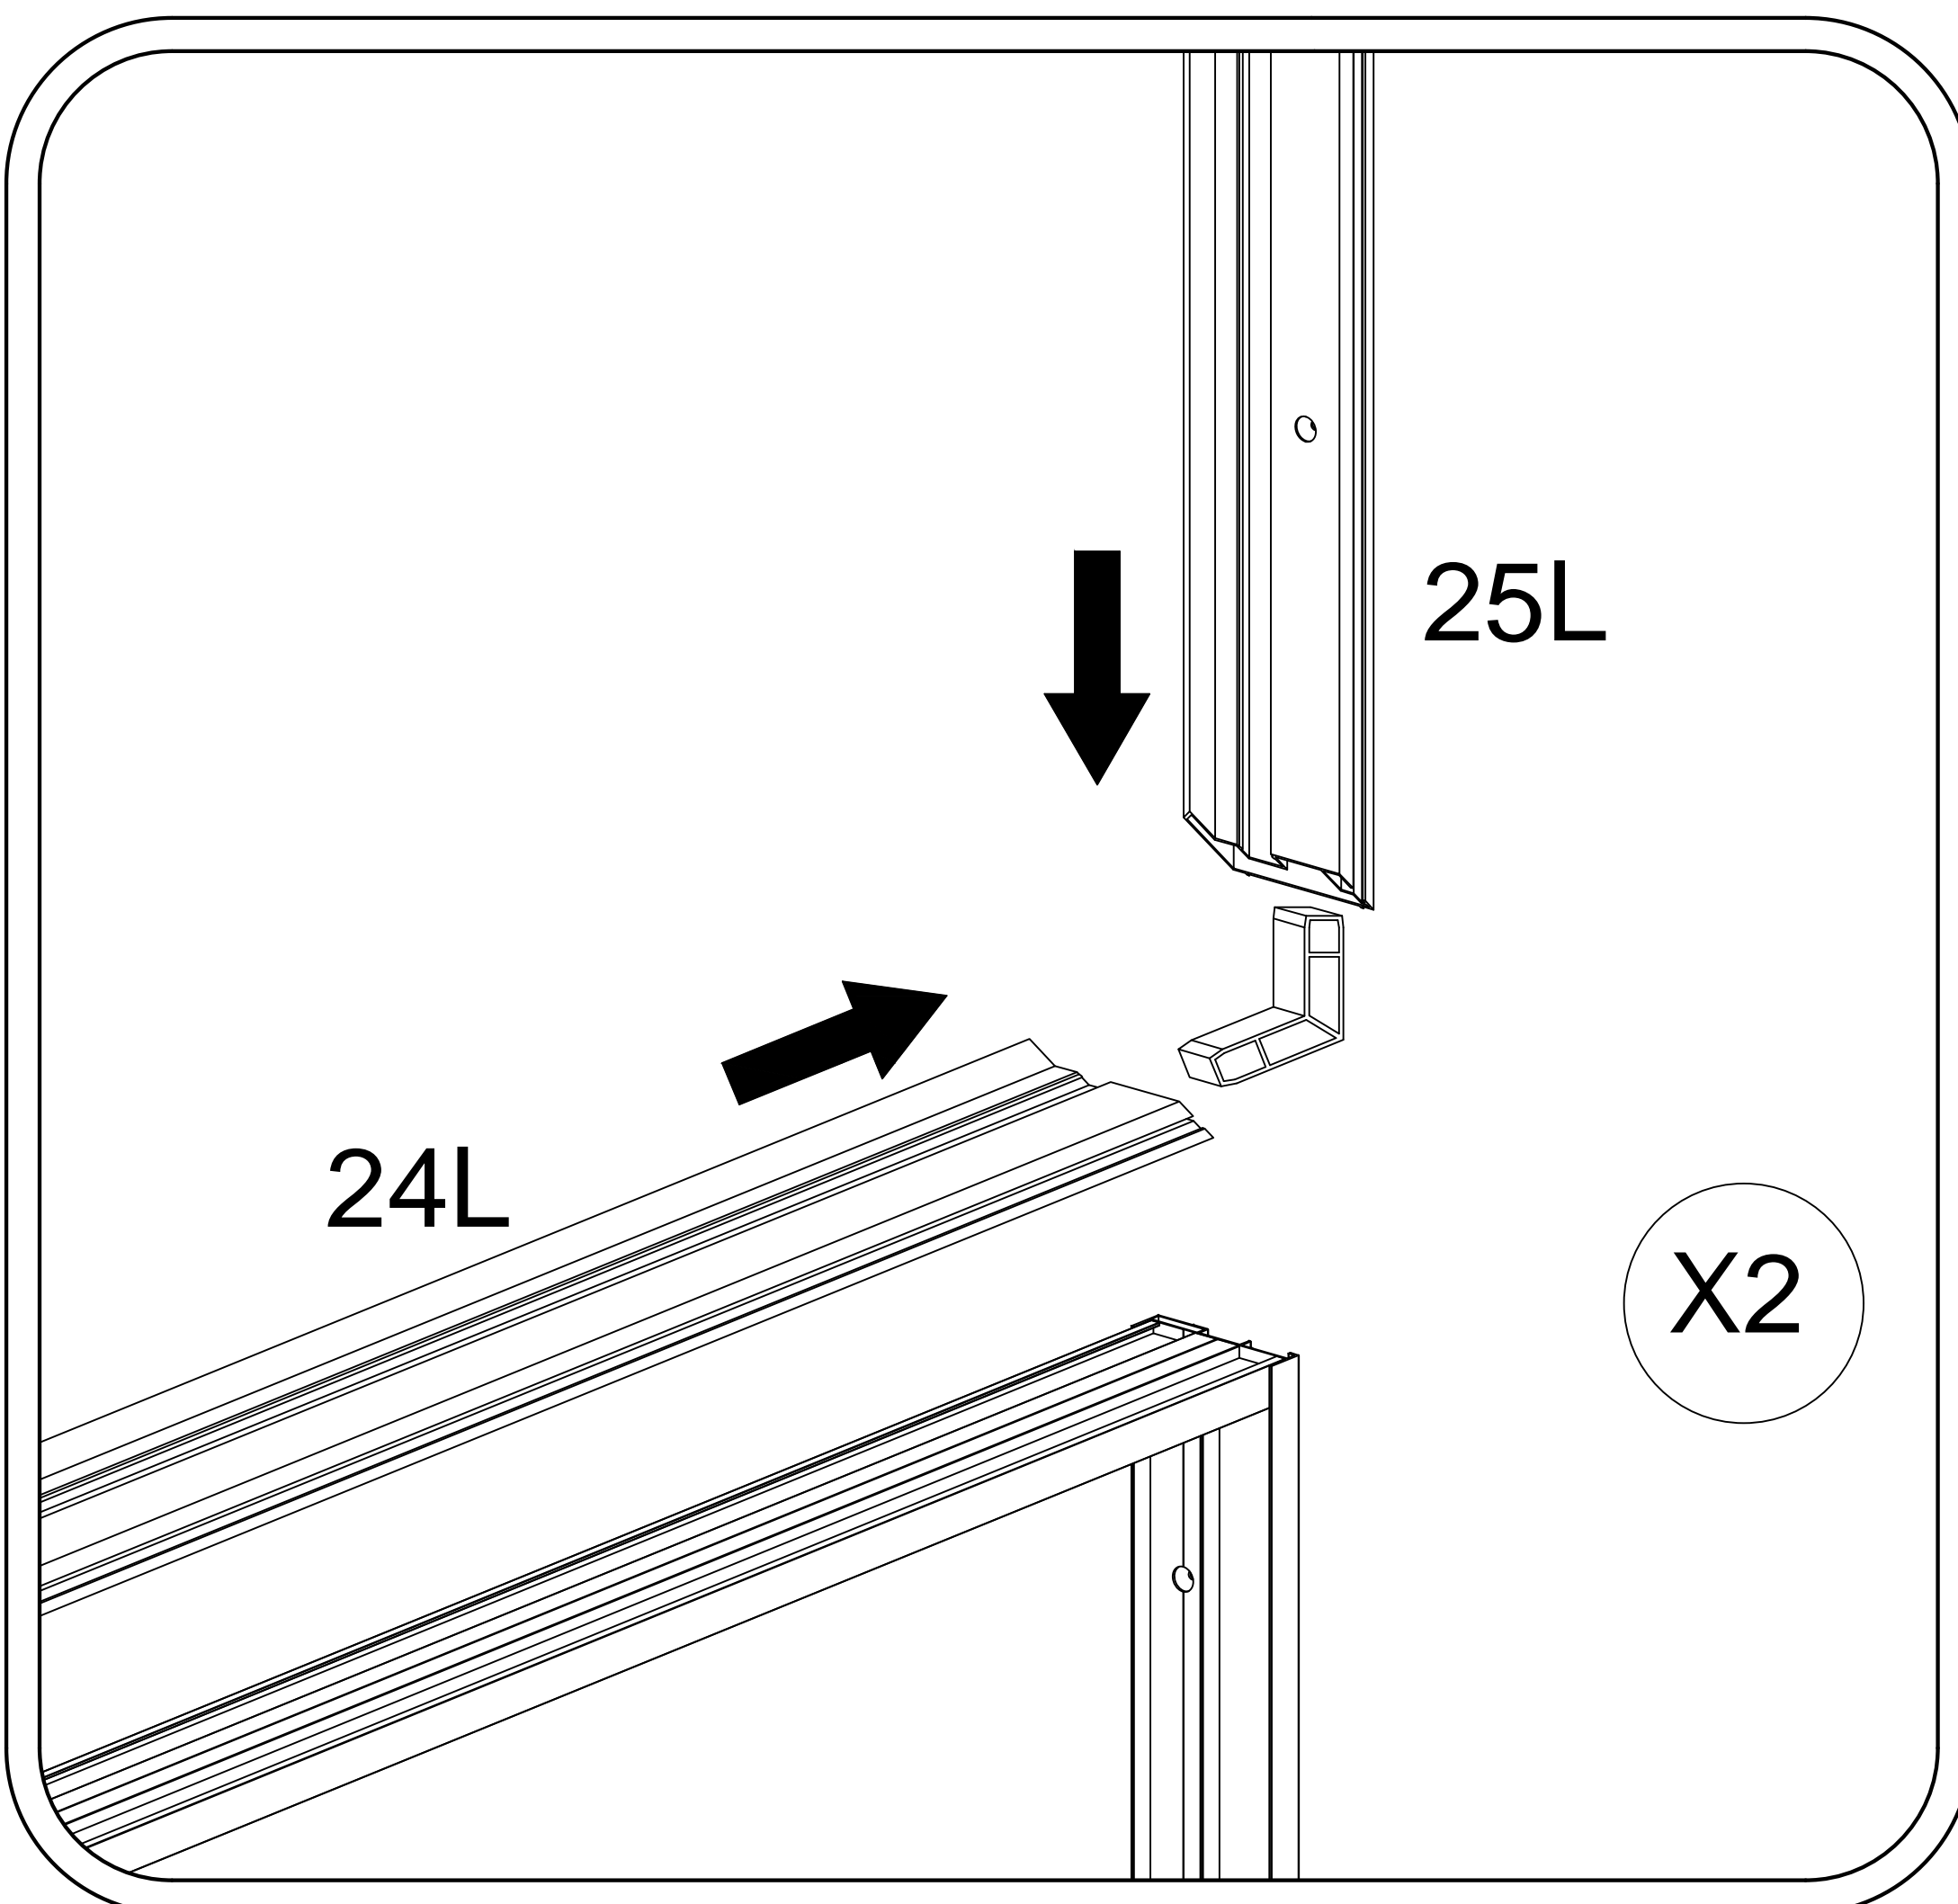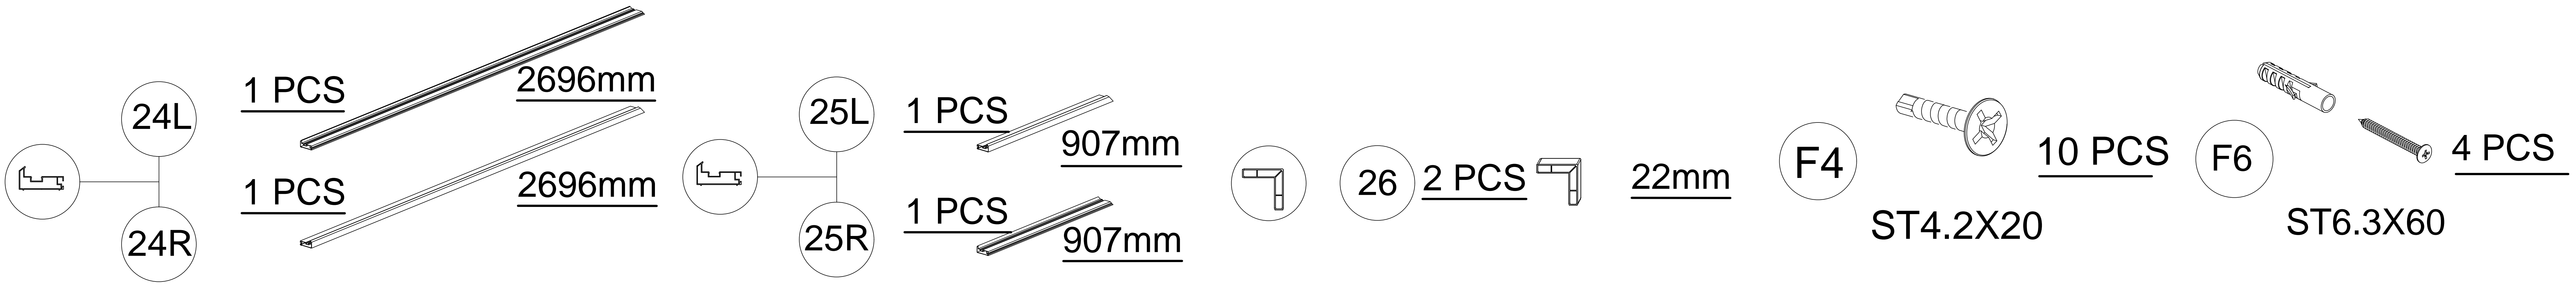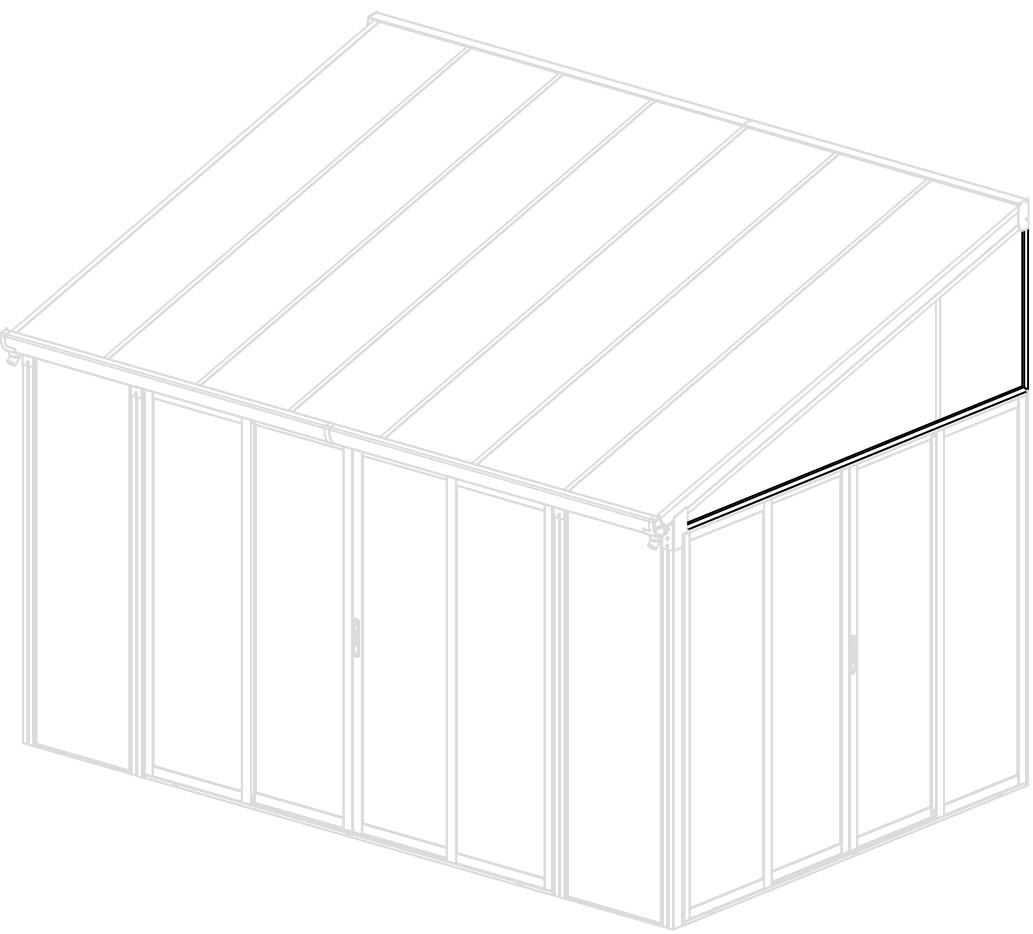

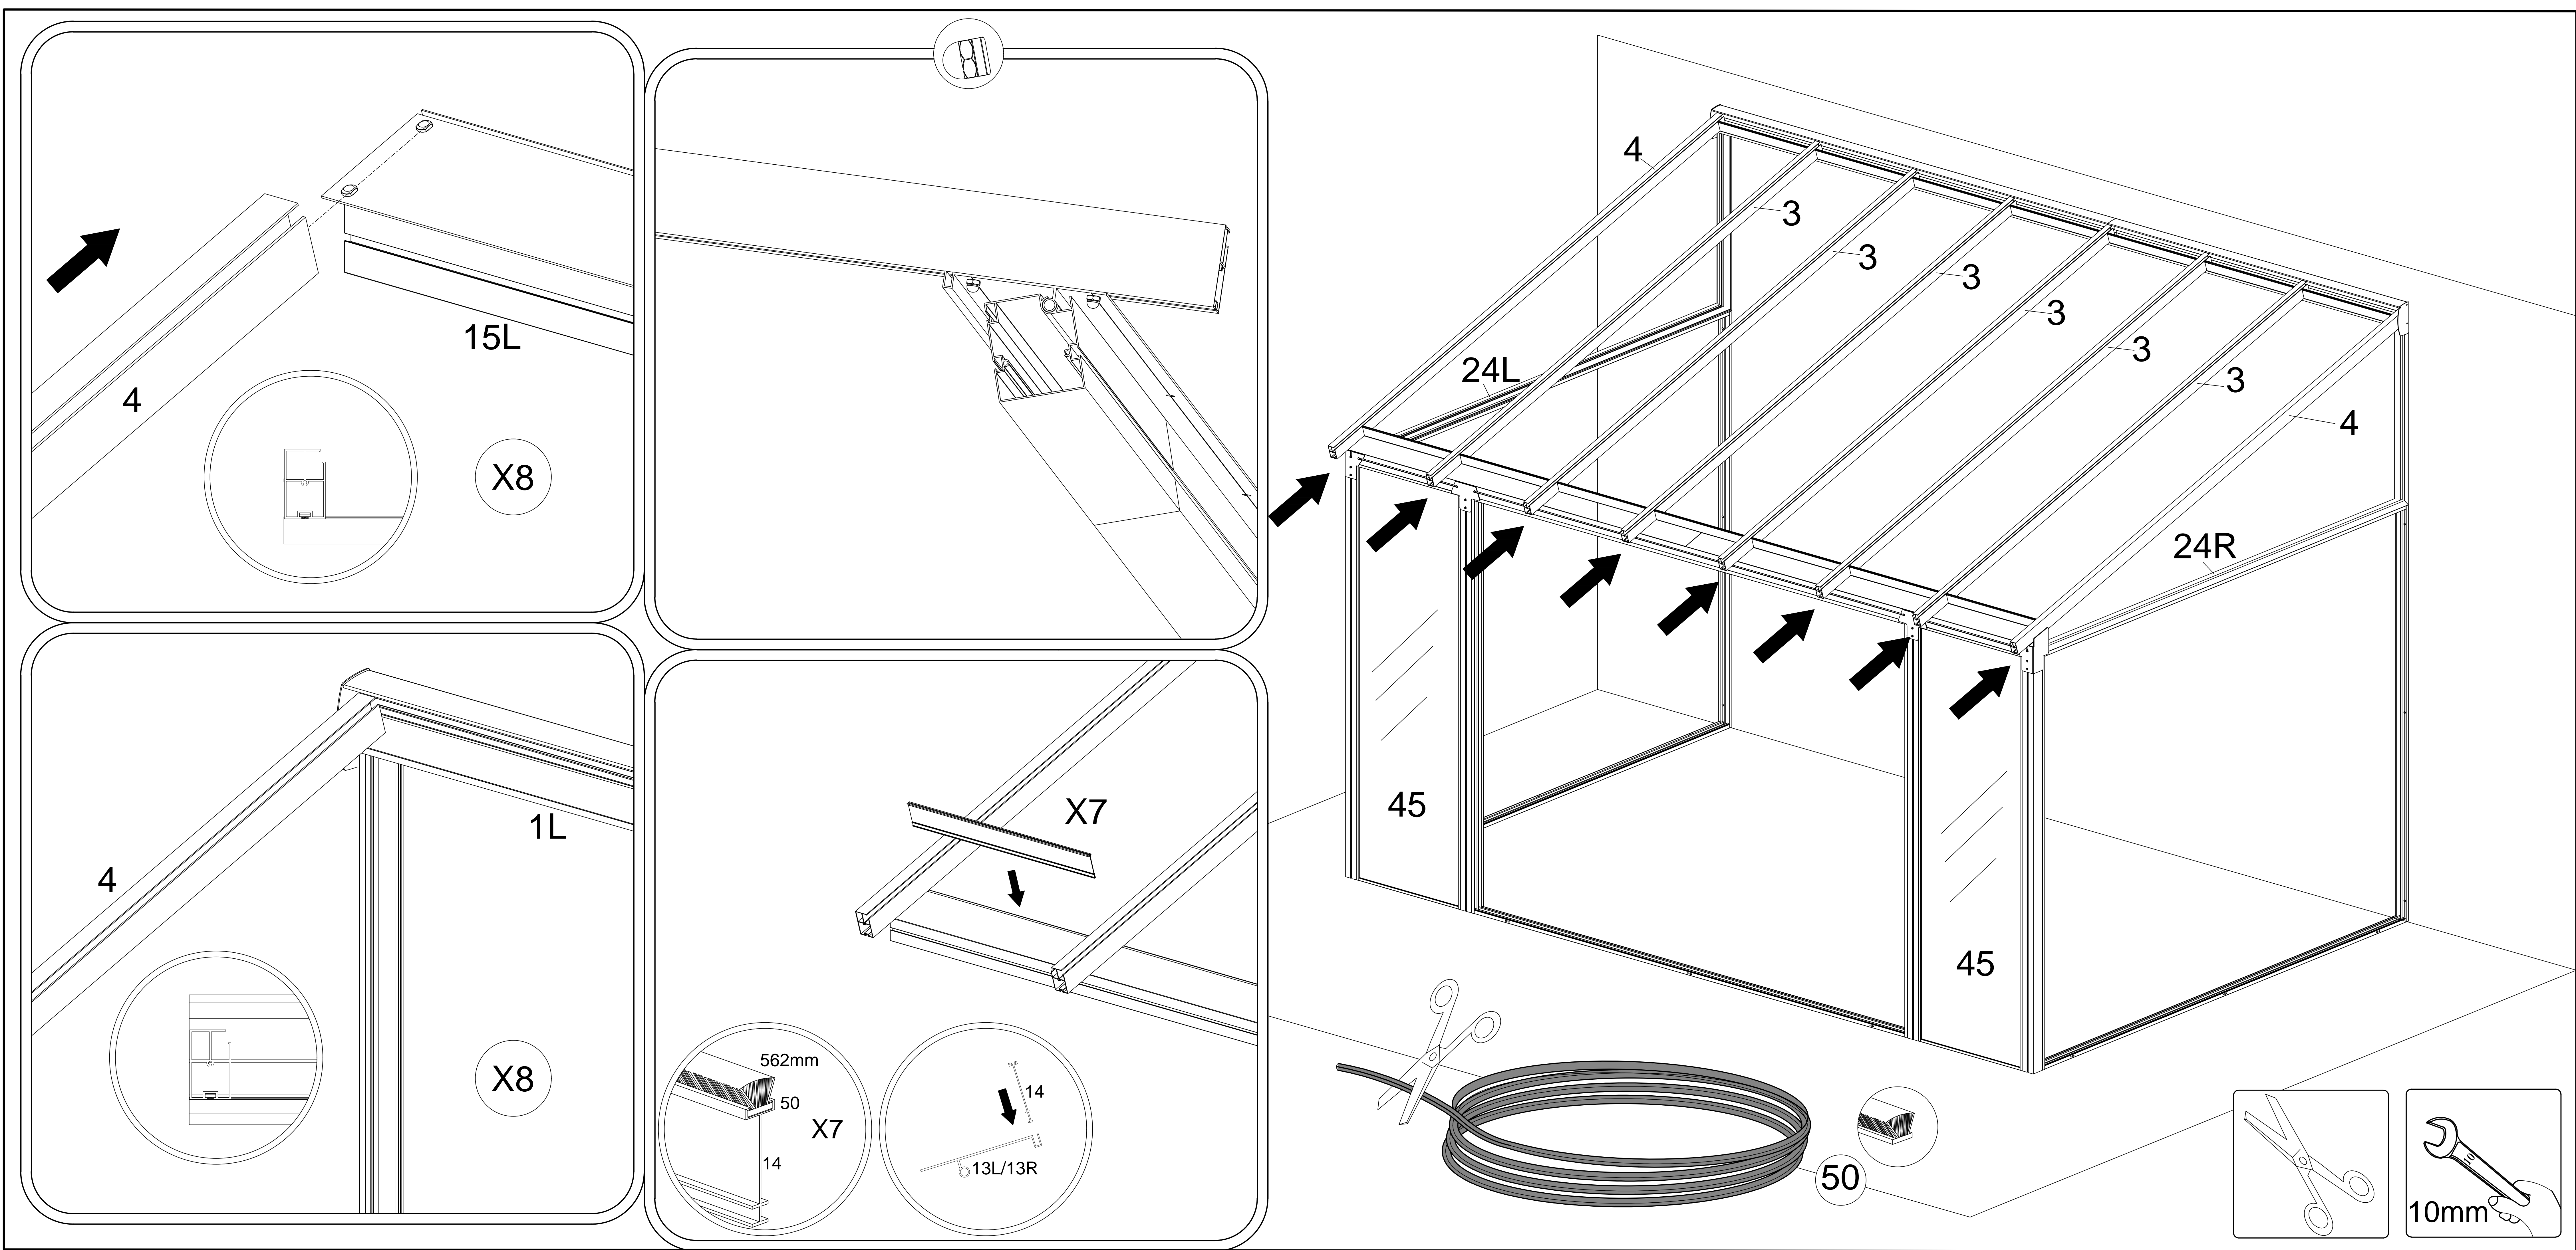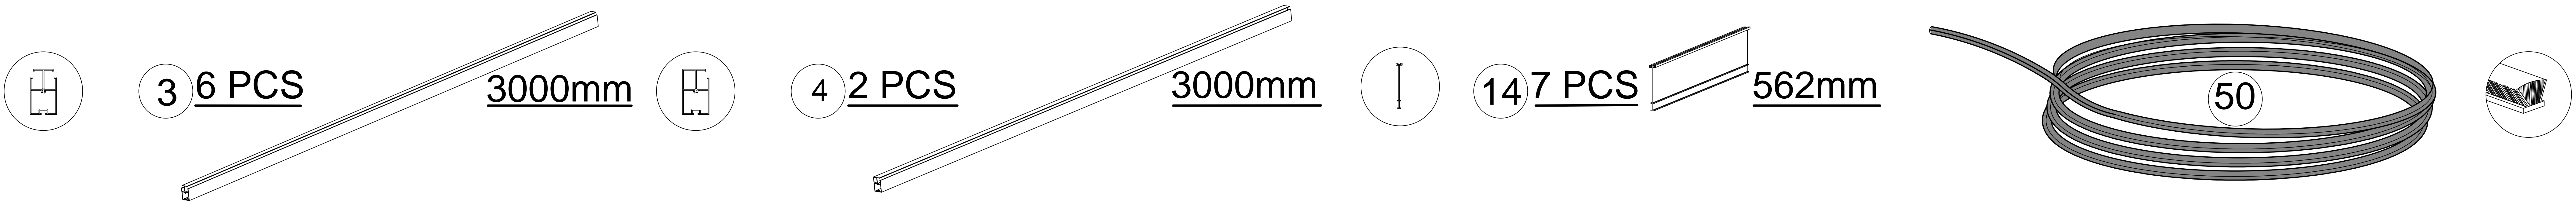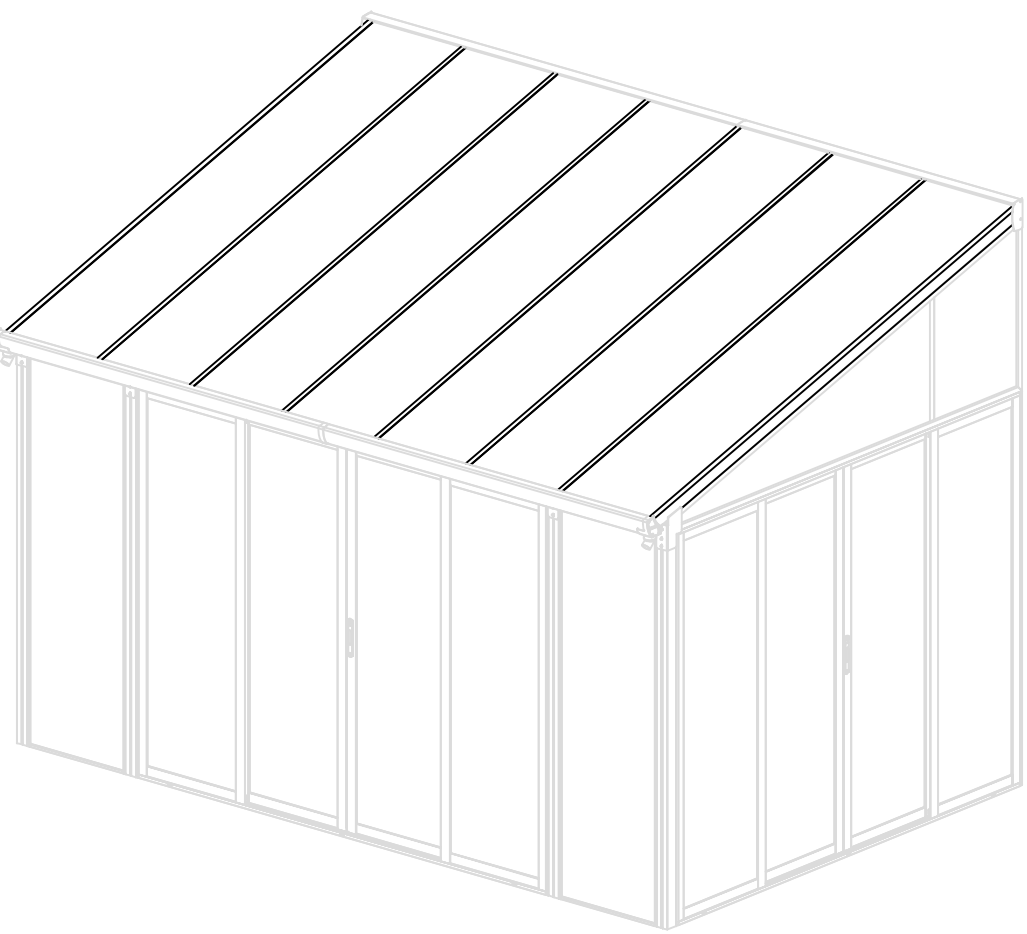




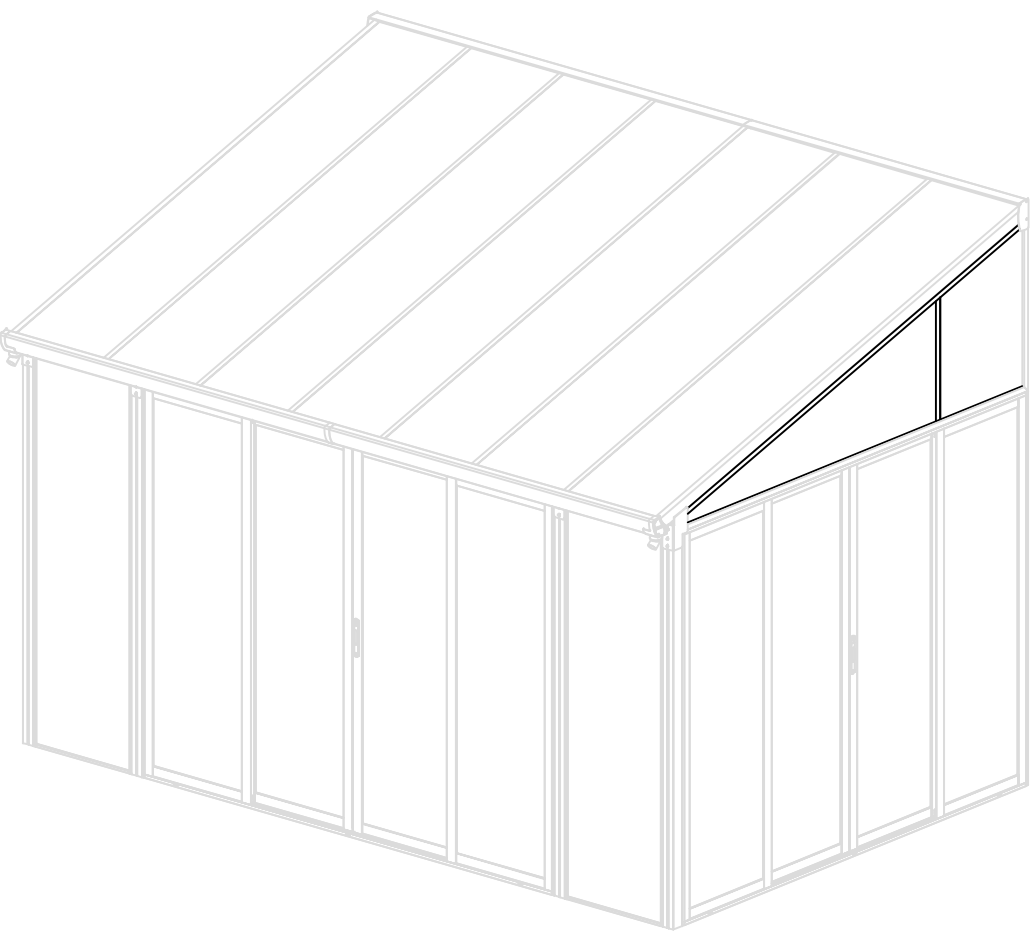


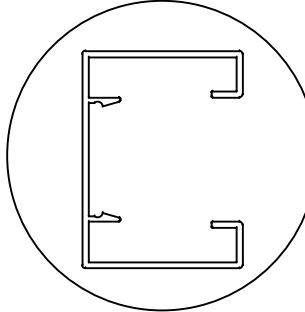


27L 1 PCS 682mm

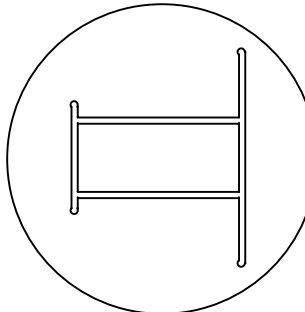


28L 1 PCS 682mm

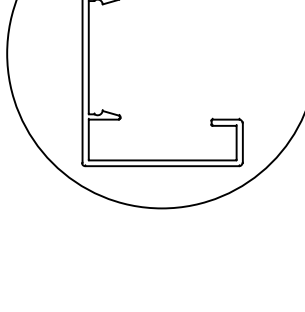


27R 1 PCS 682mm

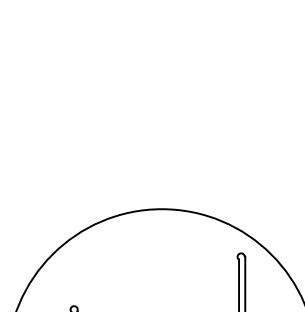


28R 1 PCS 682mm

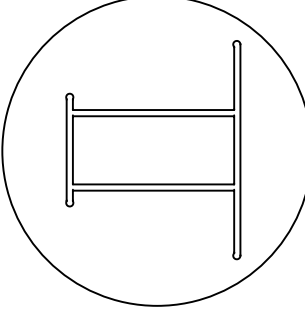


31 4 PCS 652mm

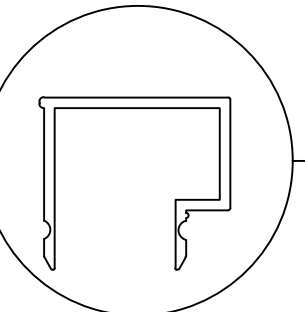


33 2 PCS 858mm

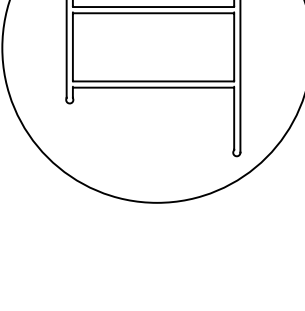


29 2 PCS 2736mm

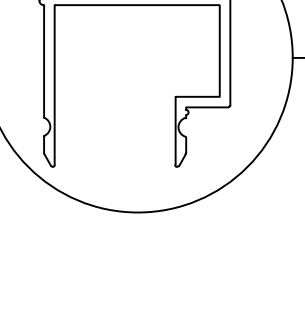


30 2 PCS 2038mm

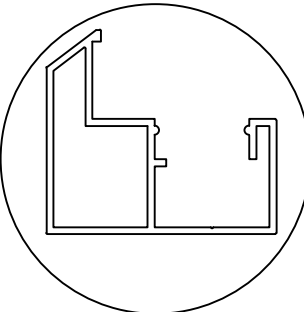


32 2 PCS 1987mm

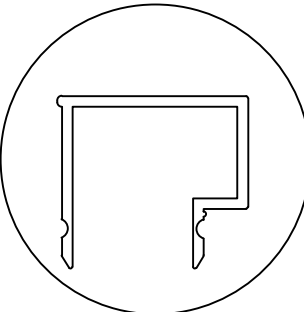


30 2 PCS 2038mm

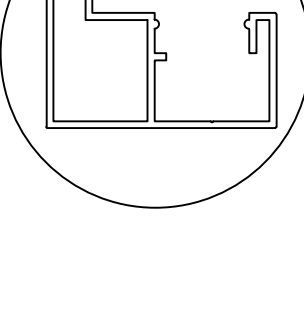


29 2 PCS 2736mm

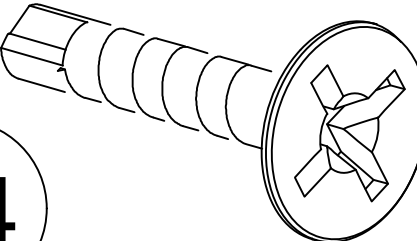


F4 10 PCS ST4.2X20

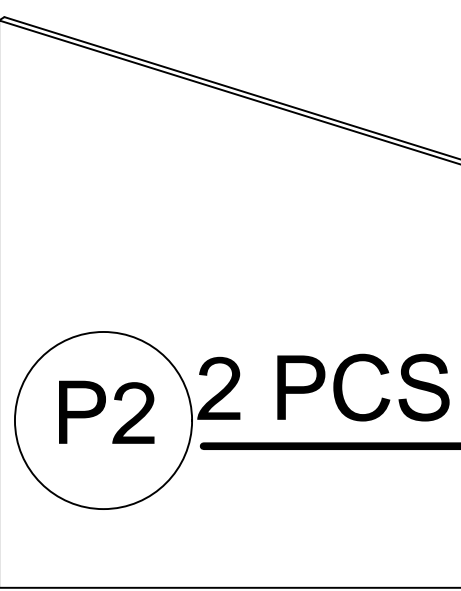

P2 2 PCS

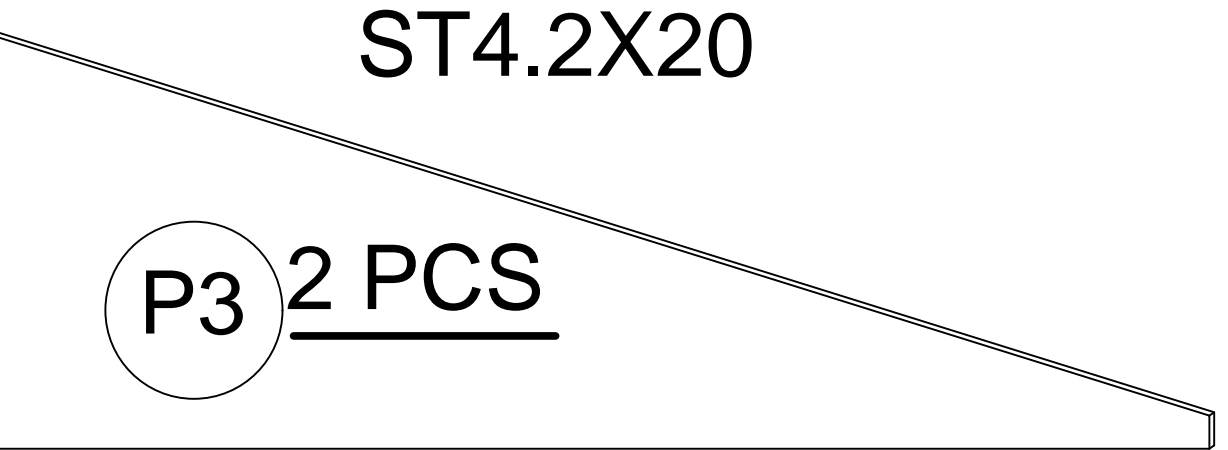

P3 2 PCS

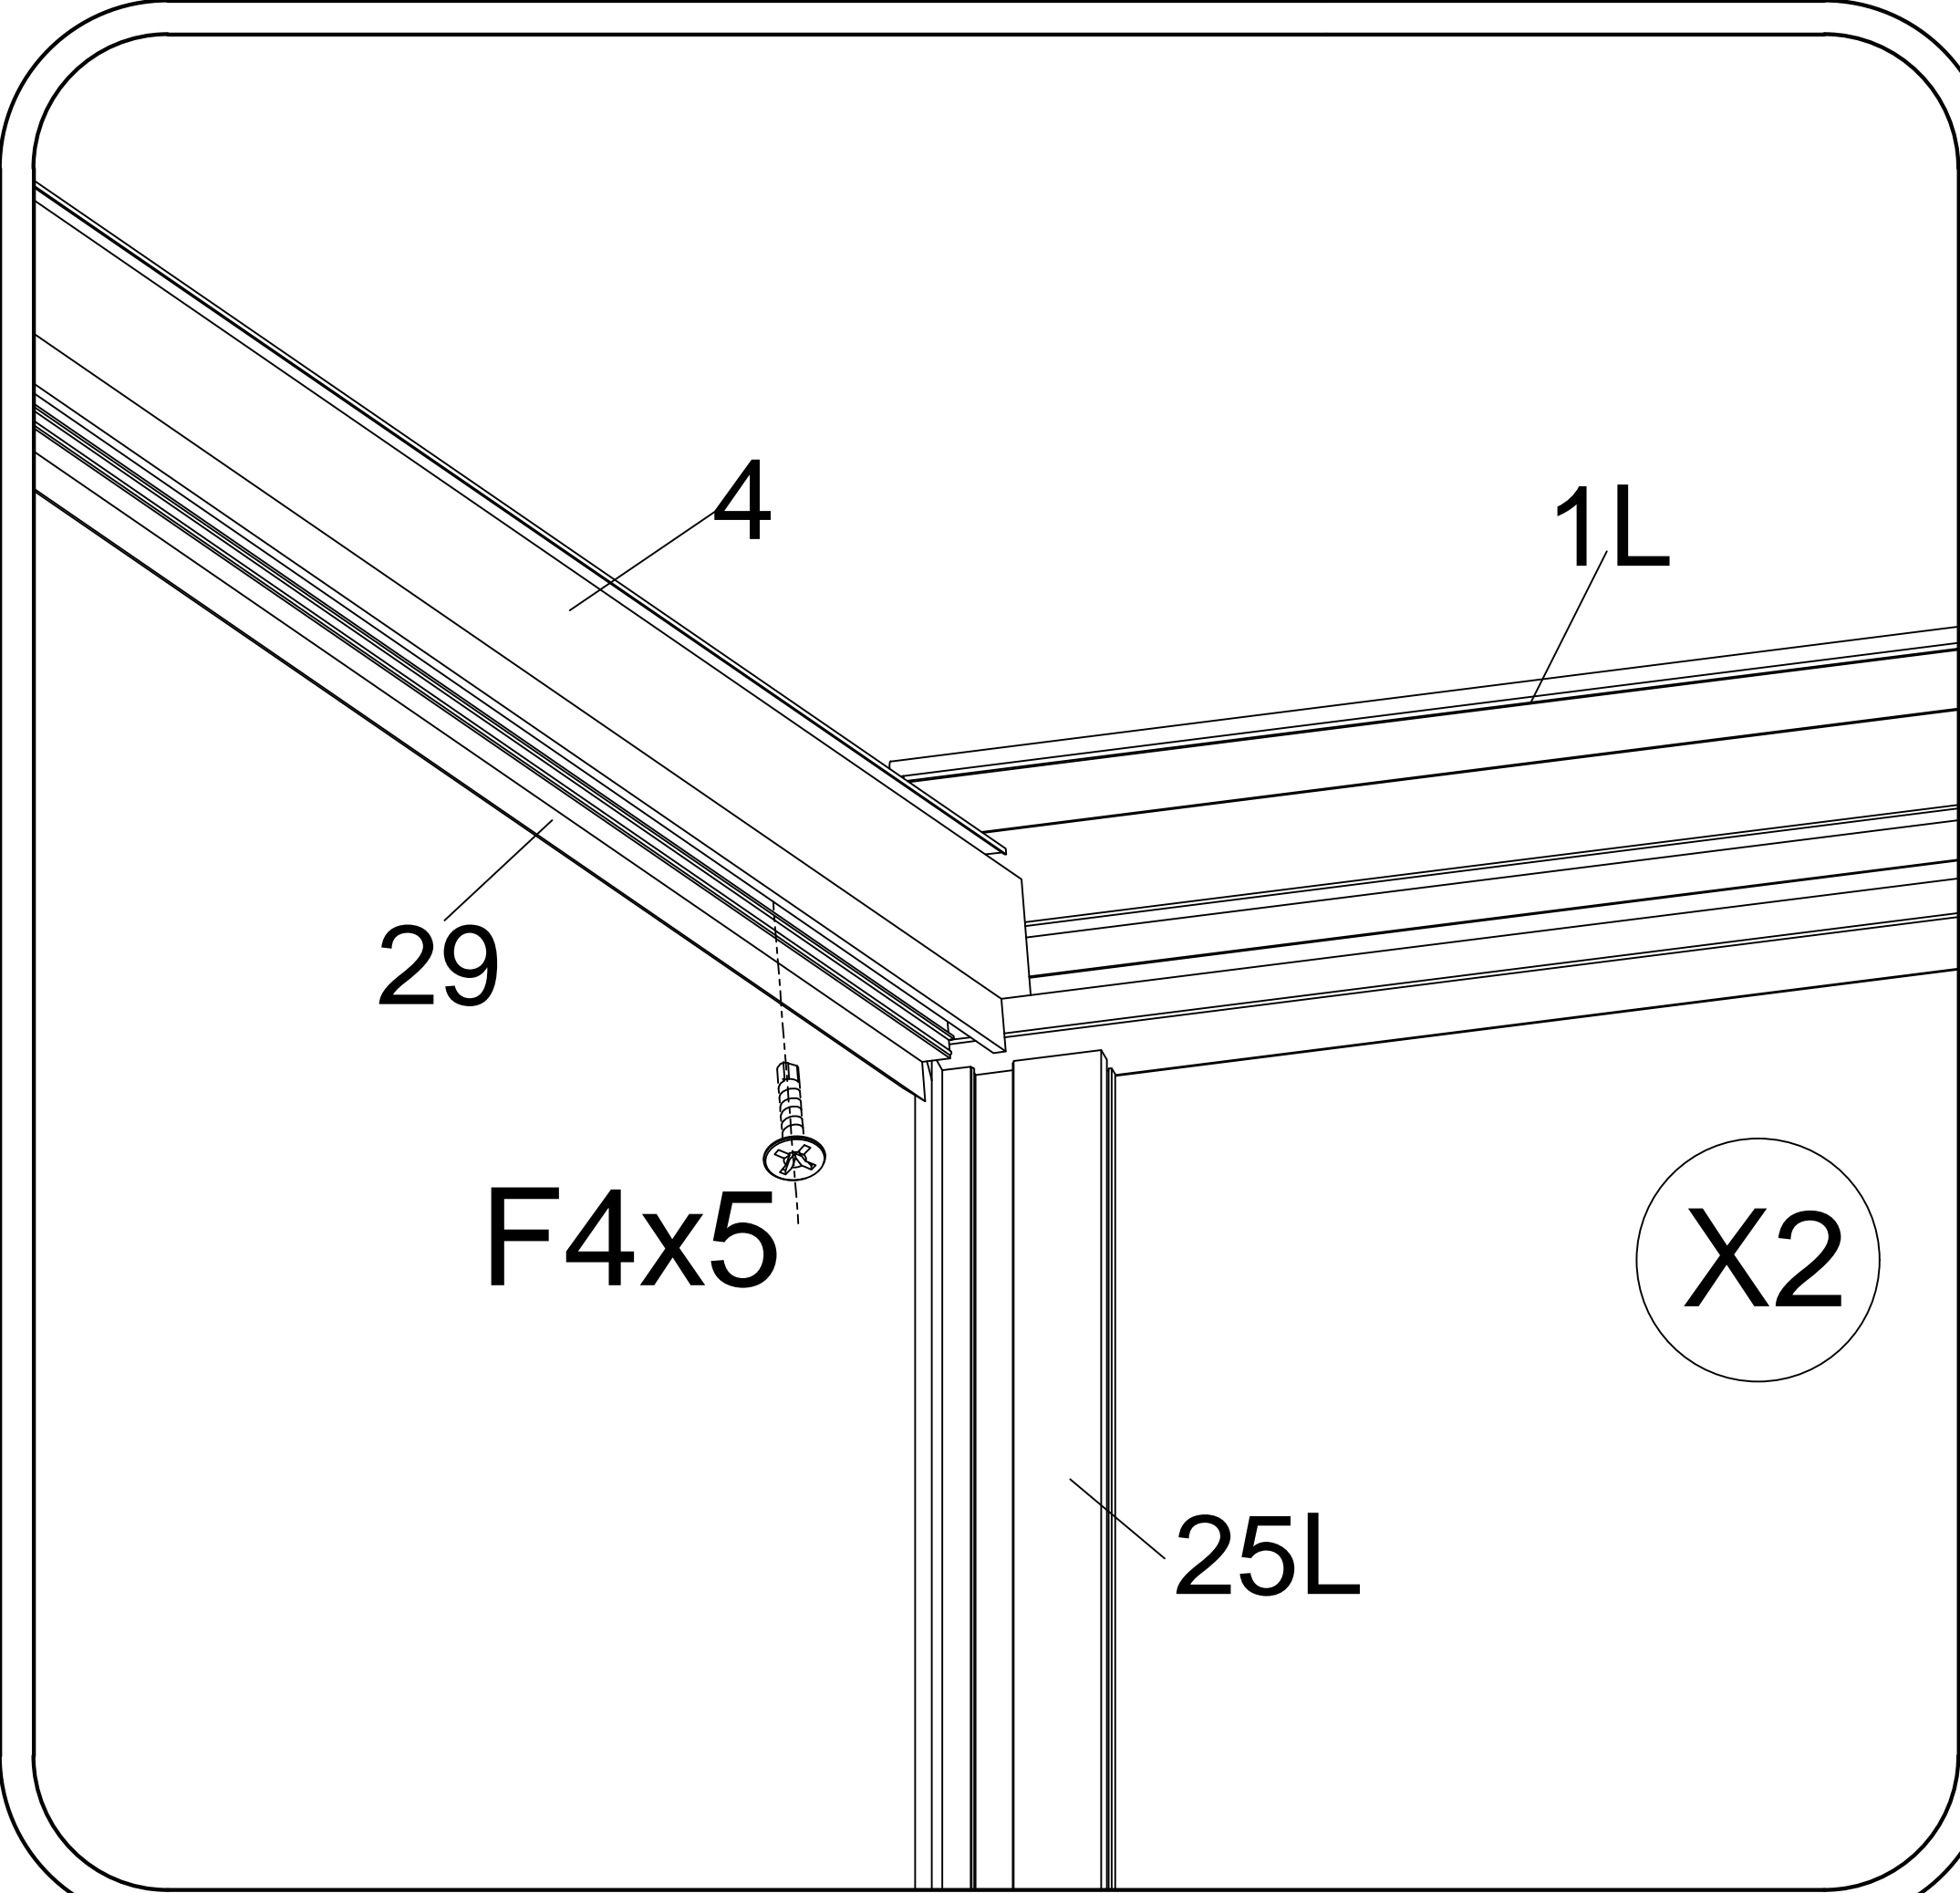

29


4

1L

F4x5

25L

X2

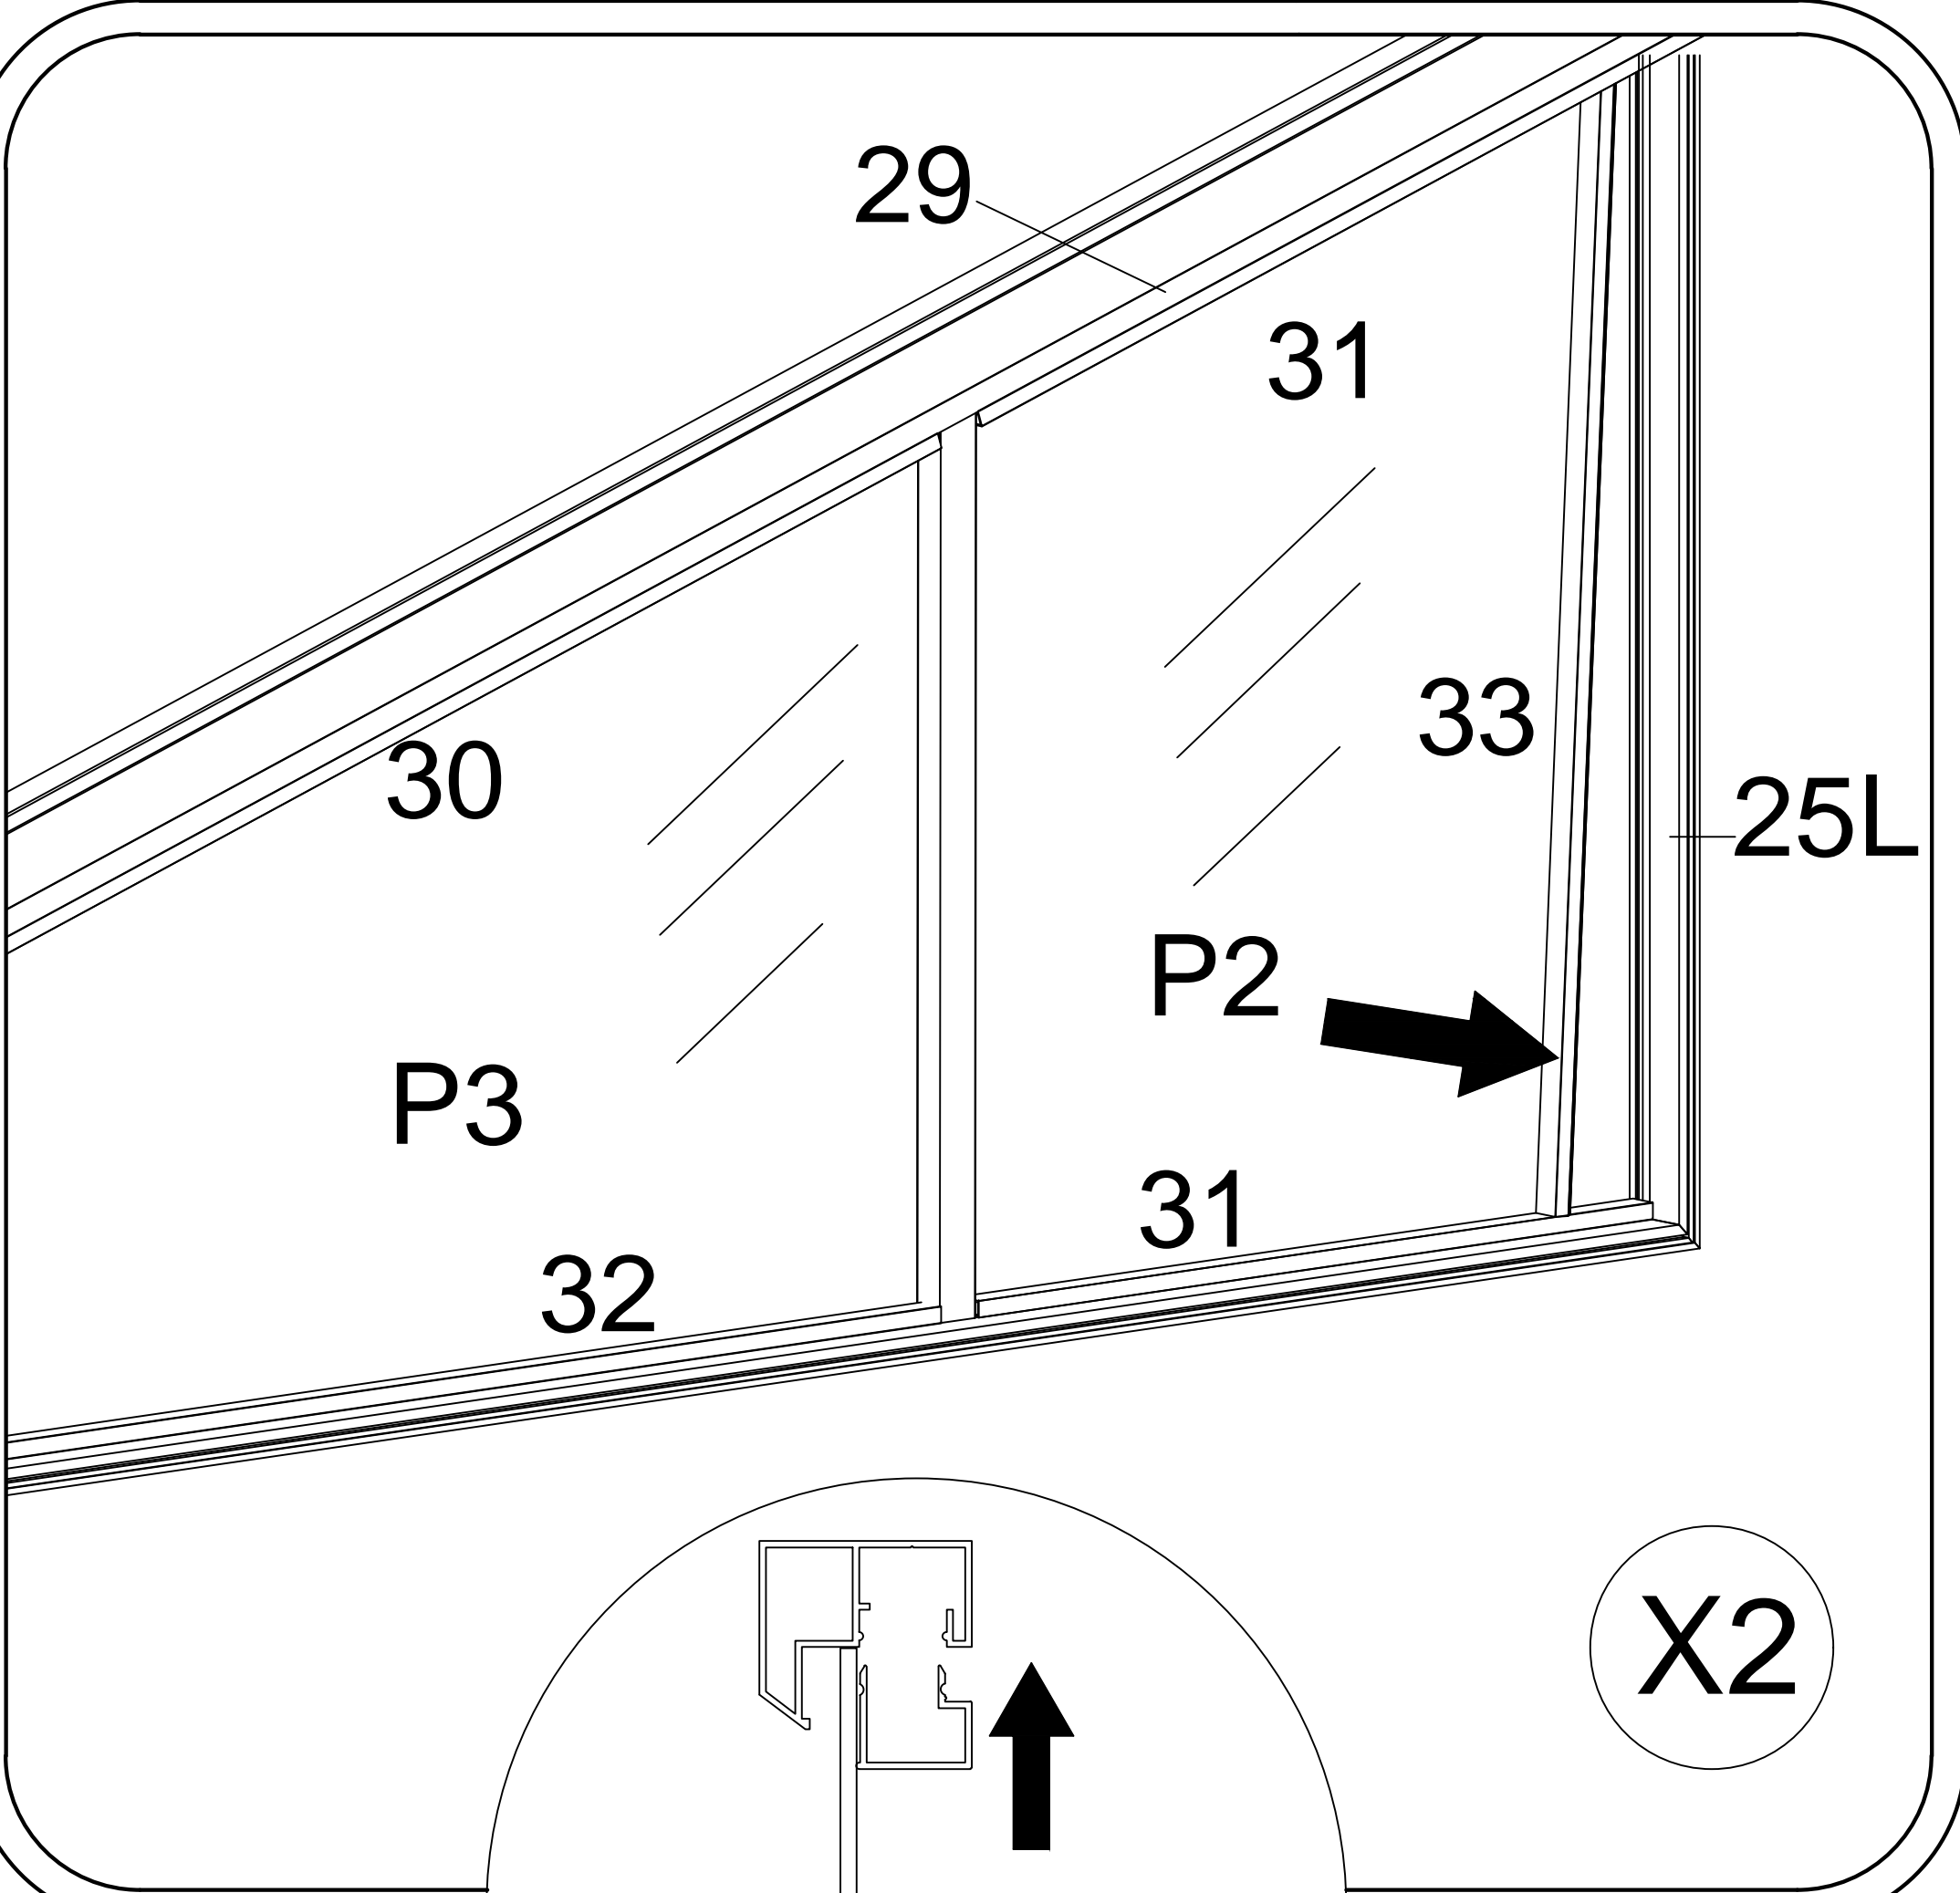

29

31

30

33

25L


P2

31

32

P3

X2

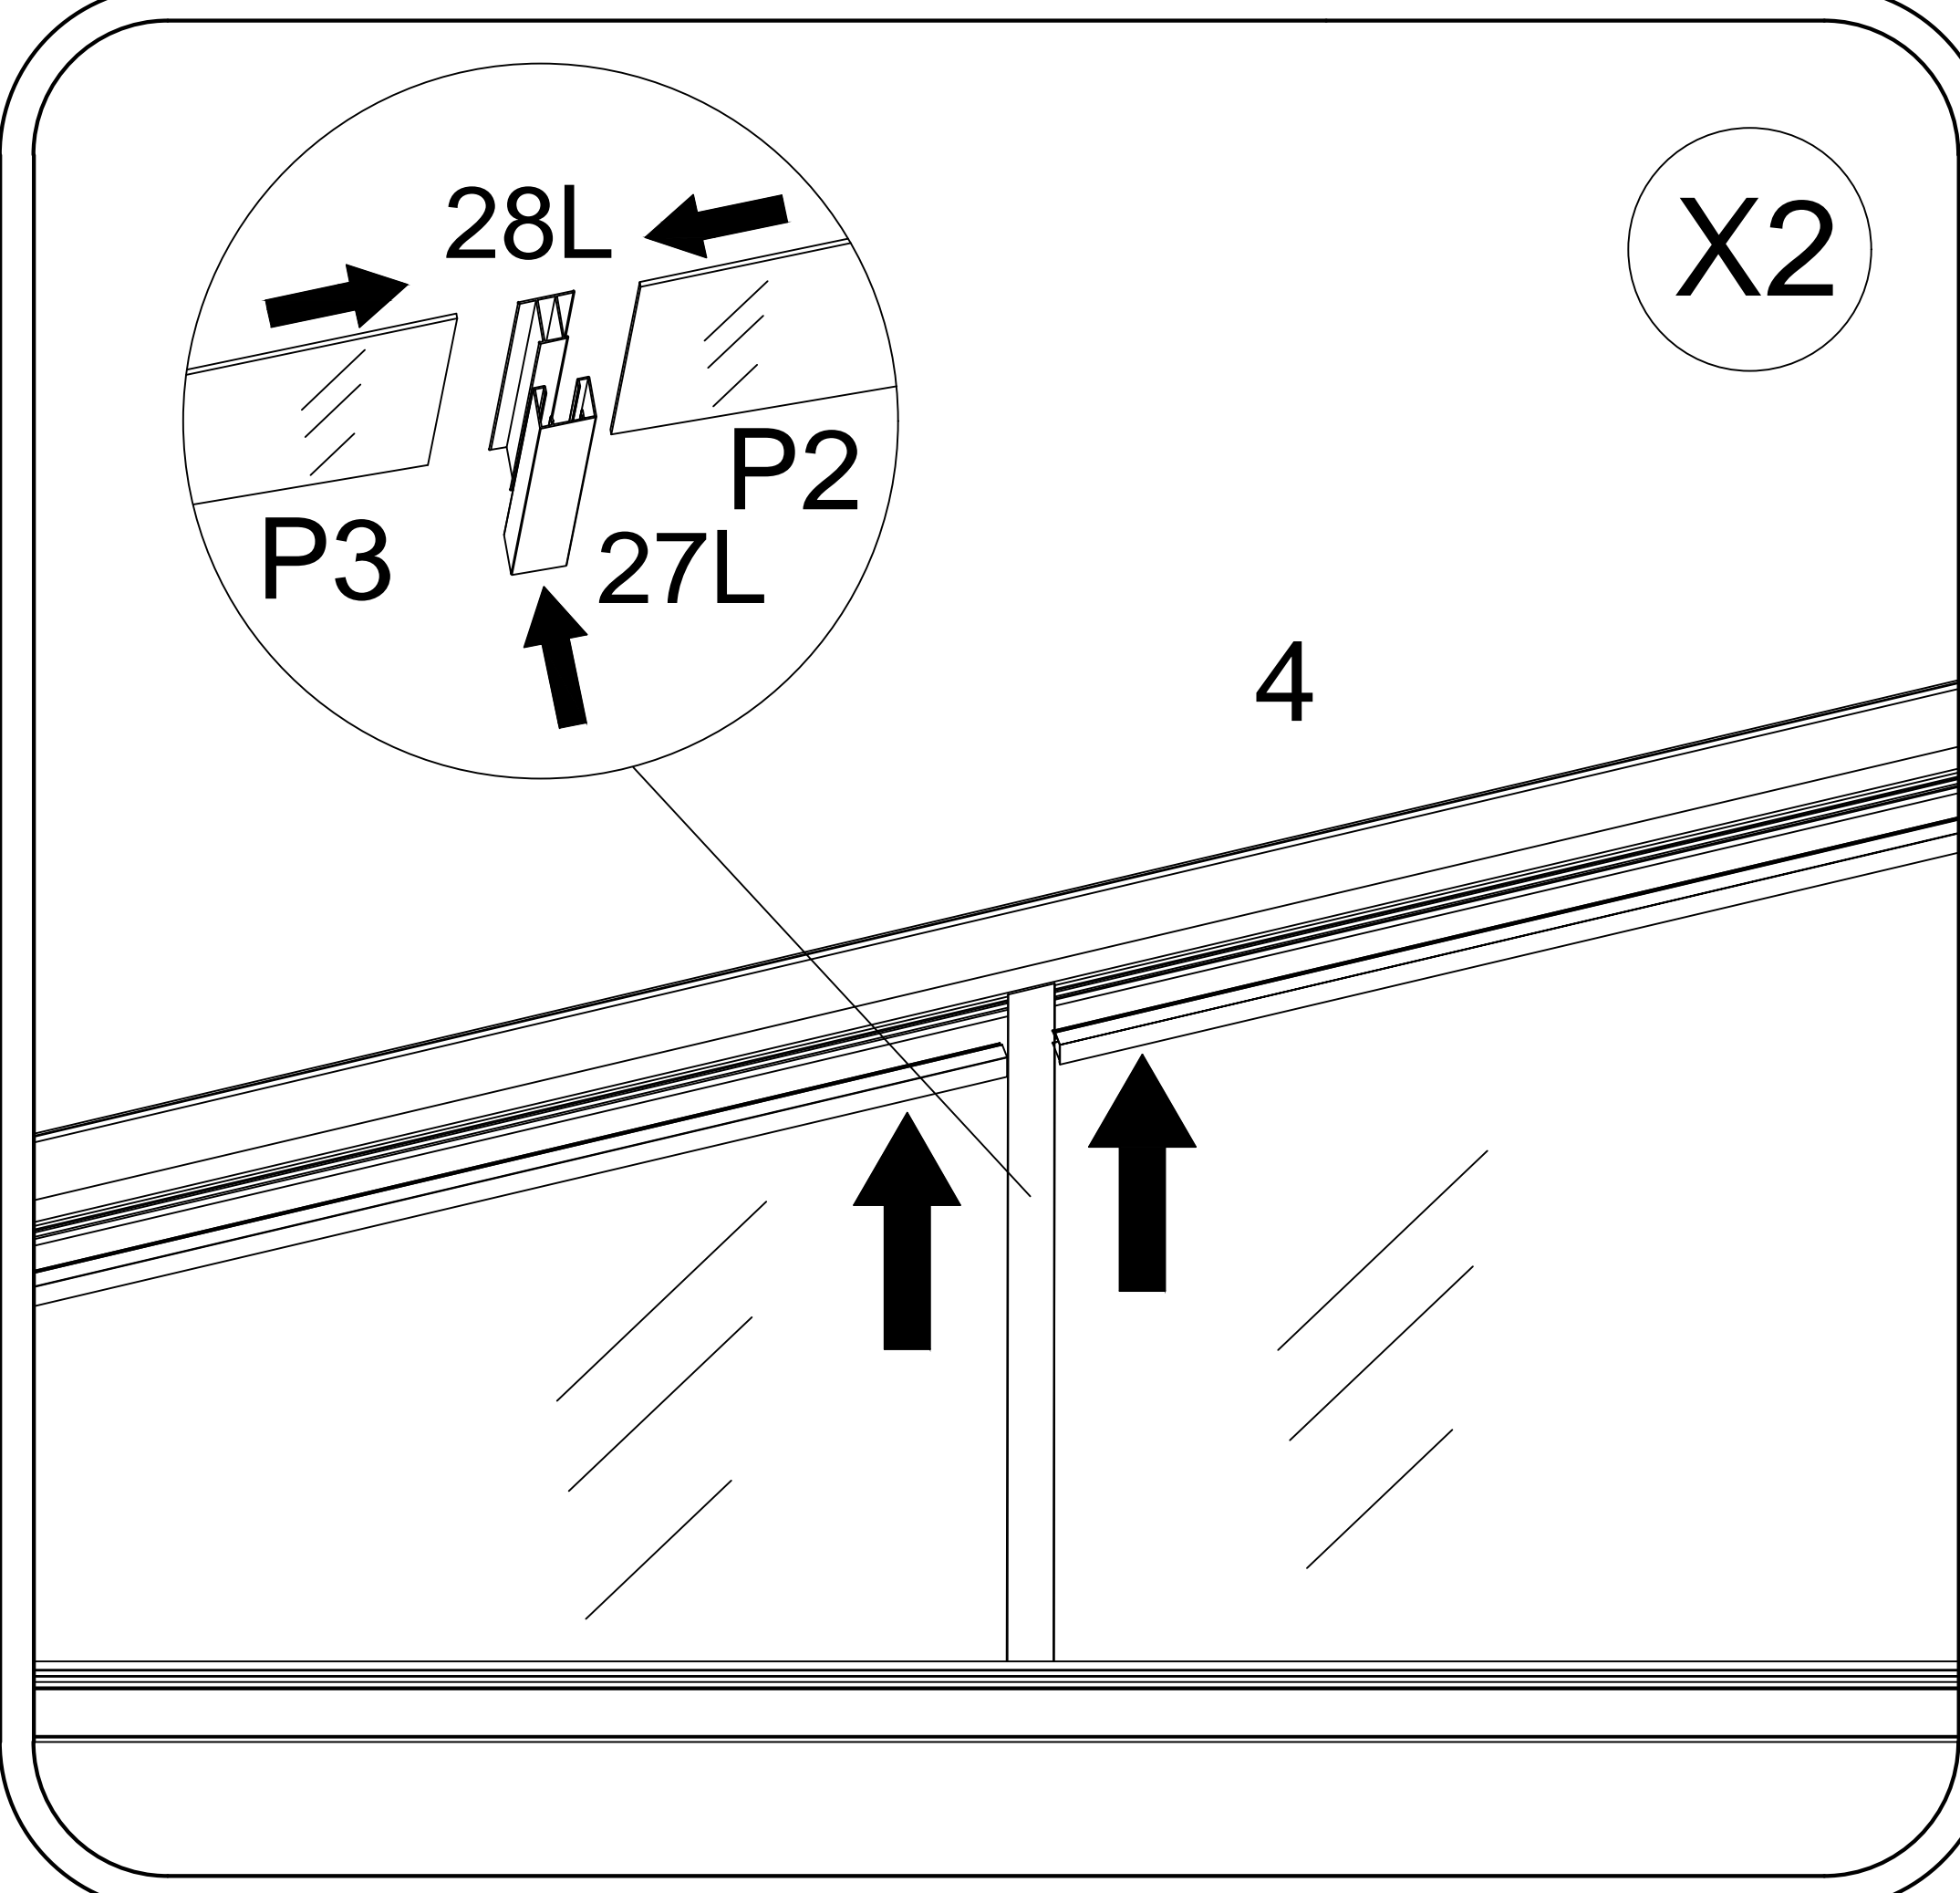

28L


27L

P2

P3

4

X2

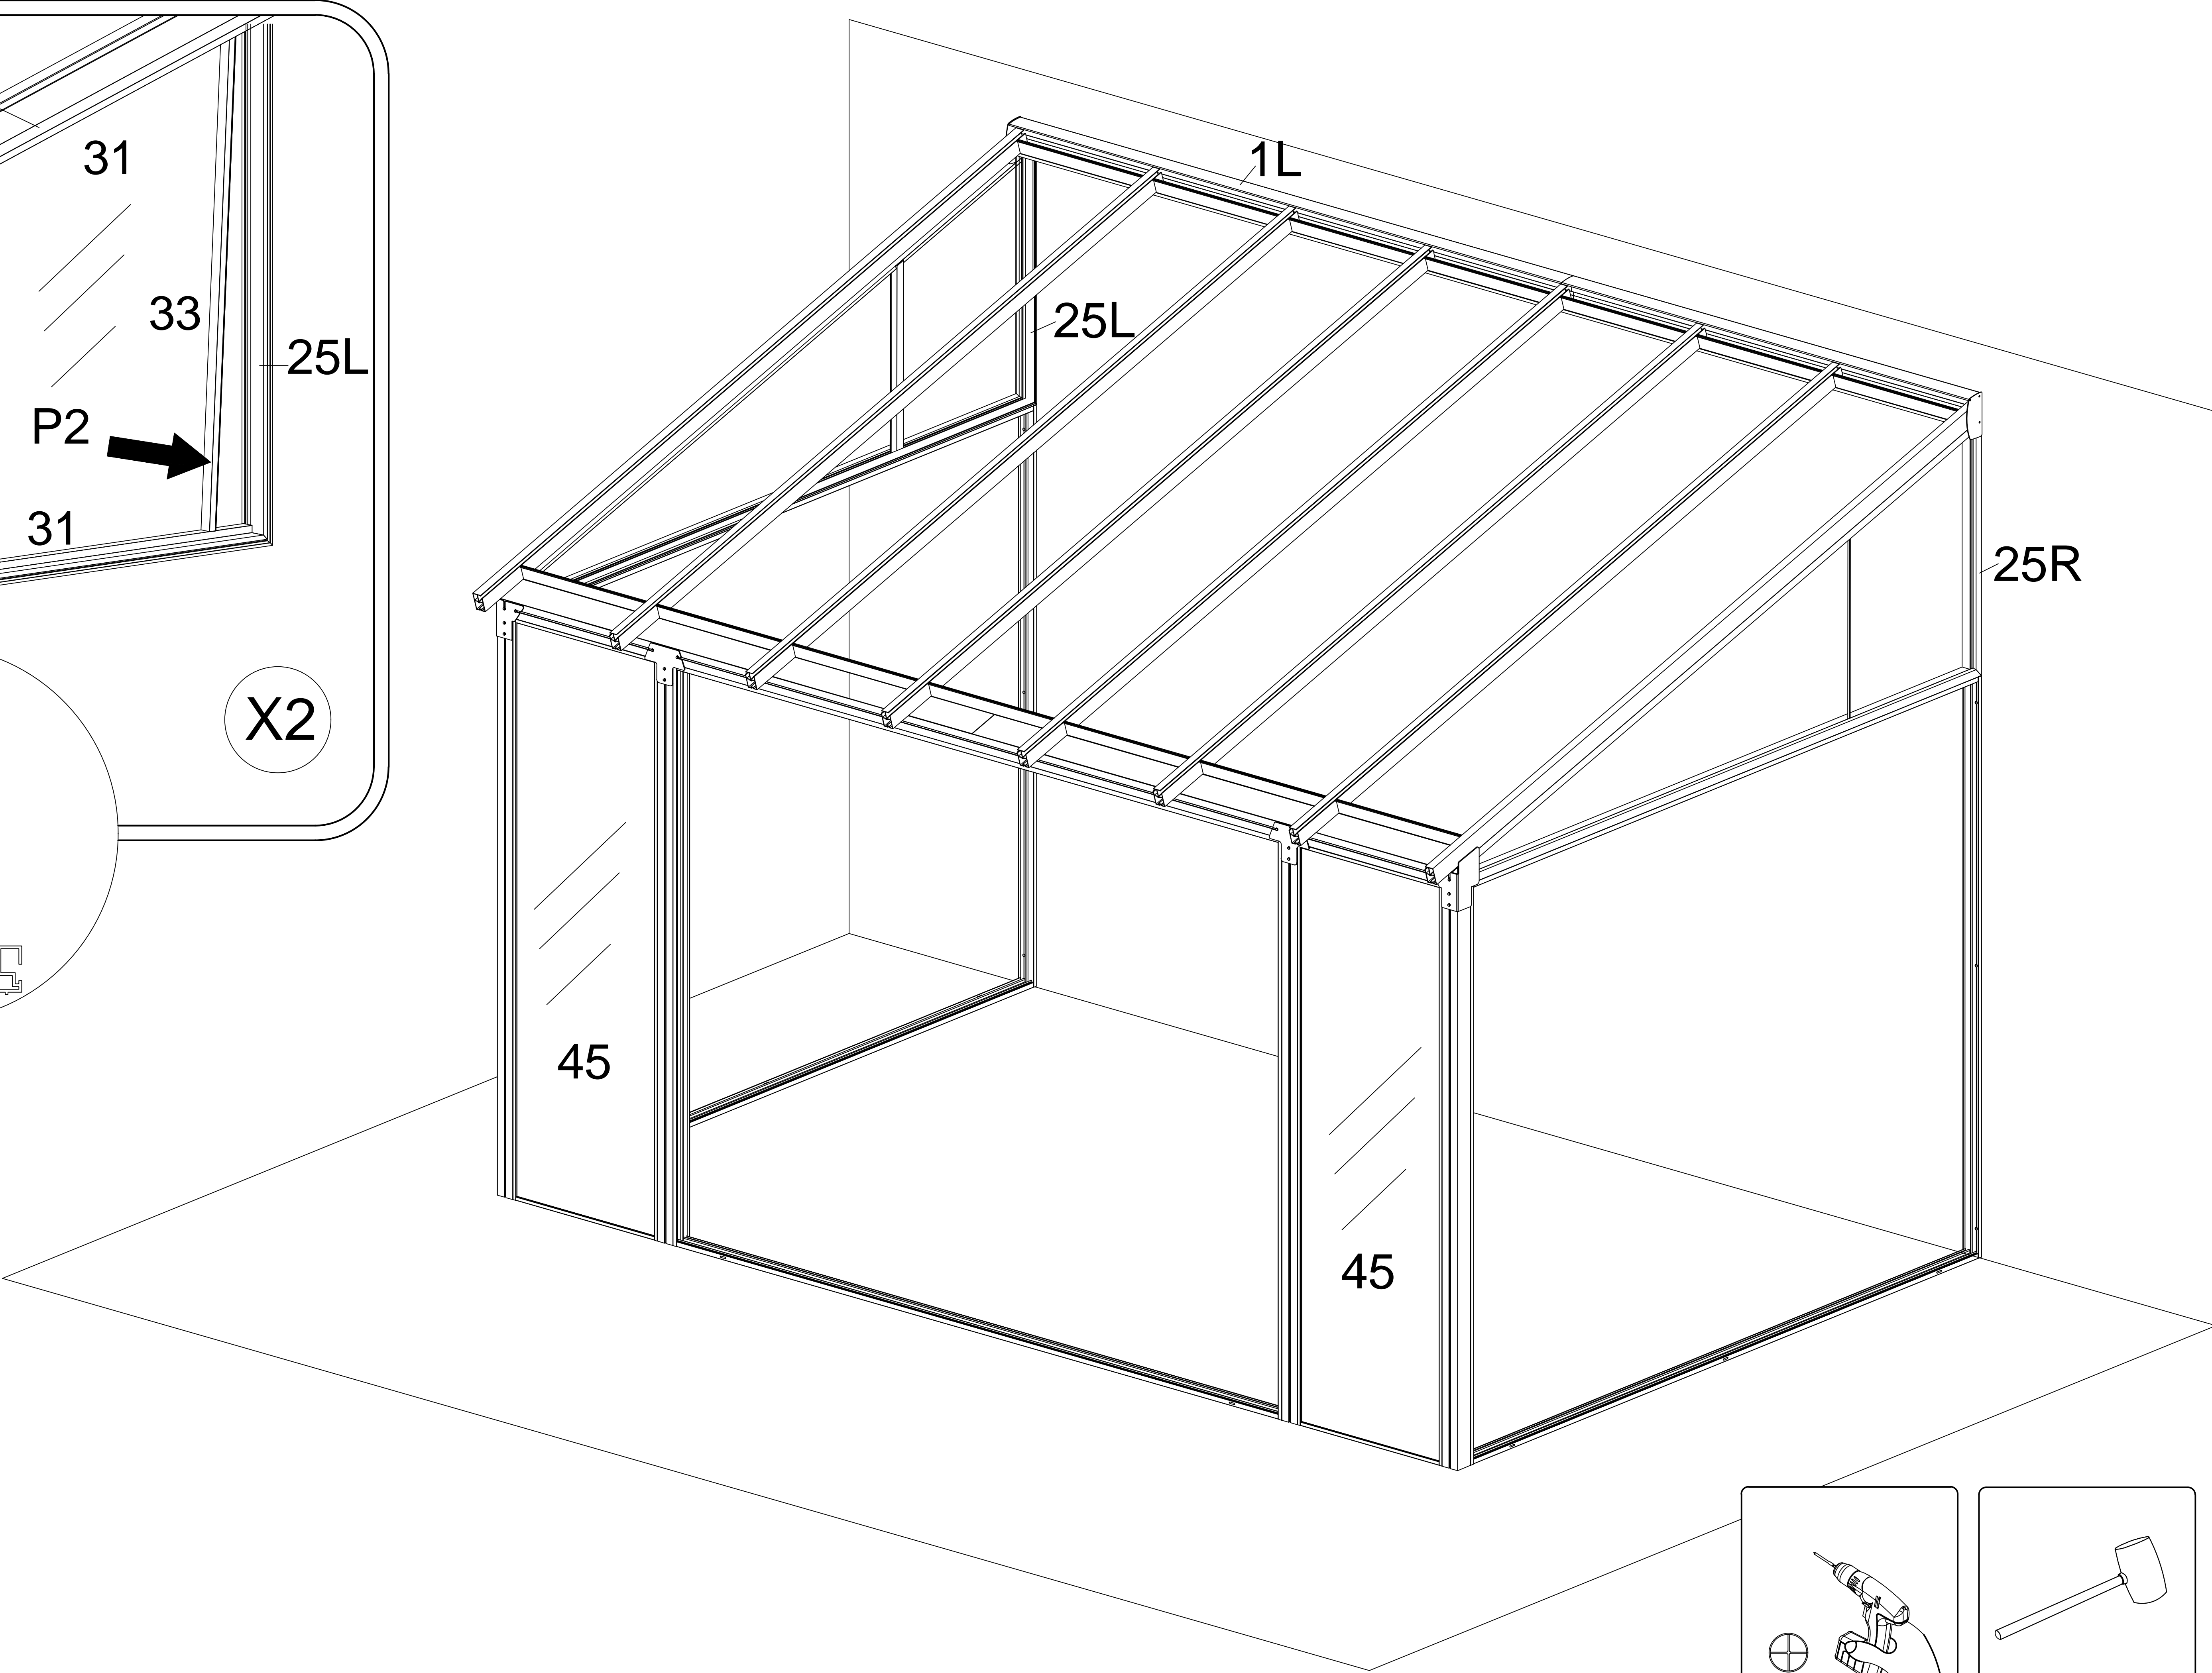


1L


25L










25R

45



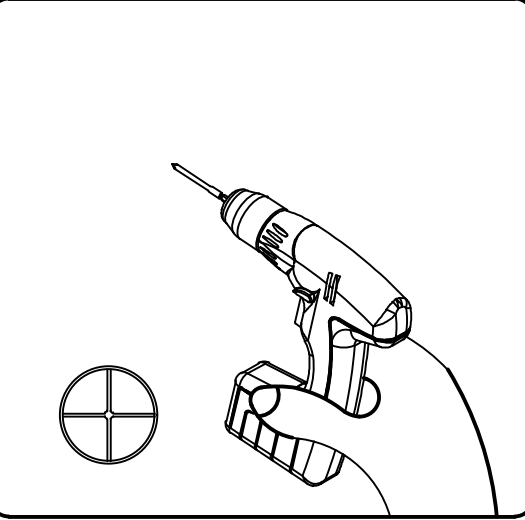



+

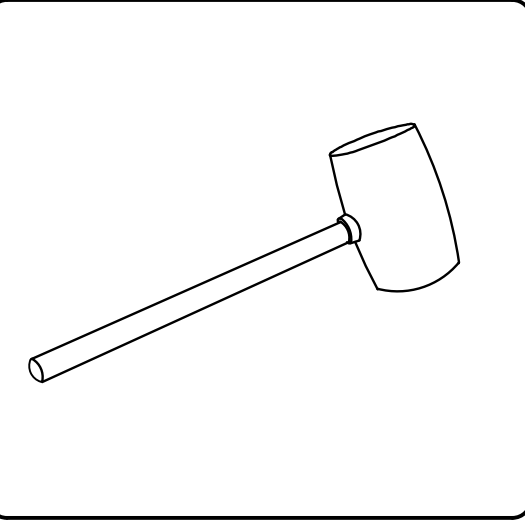

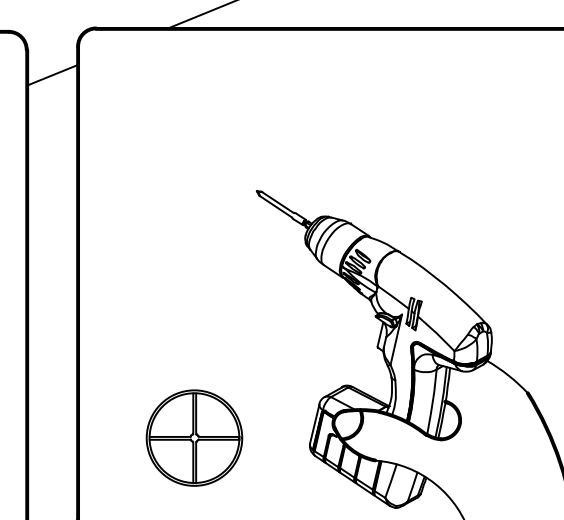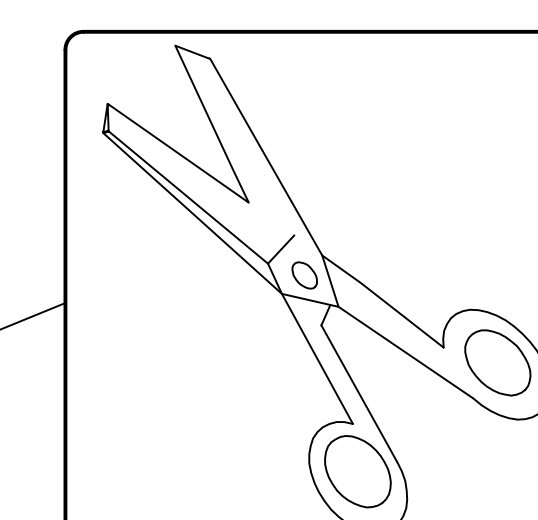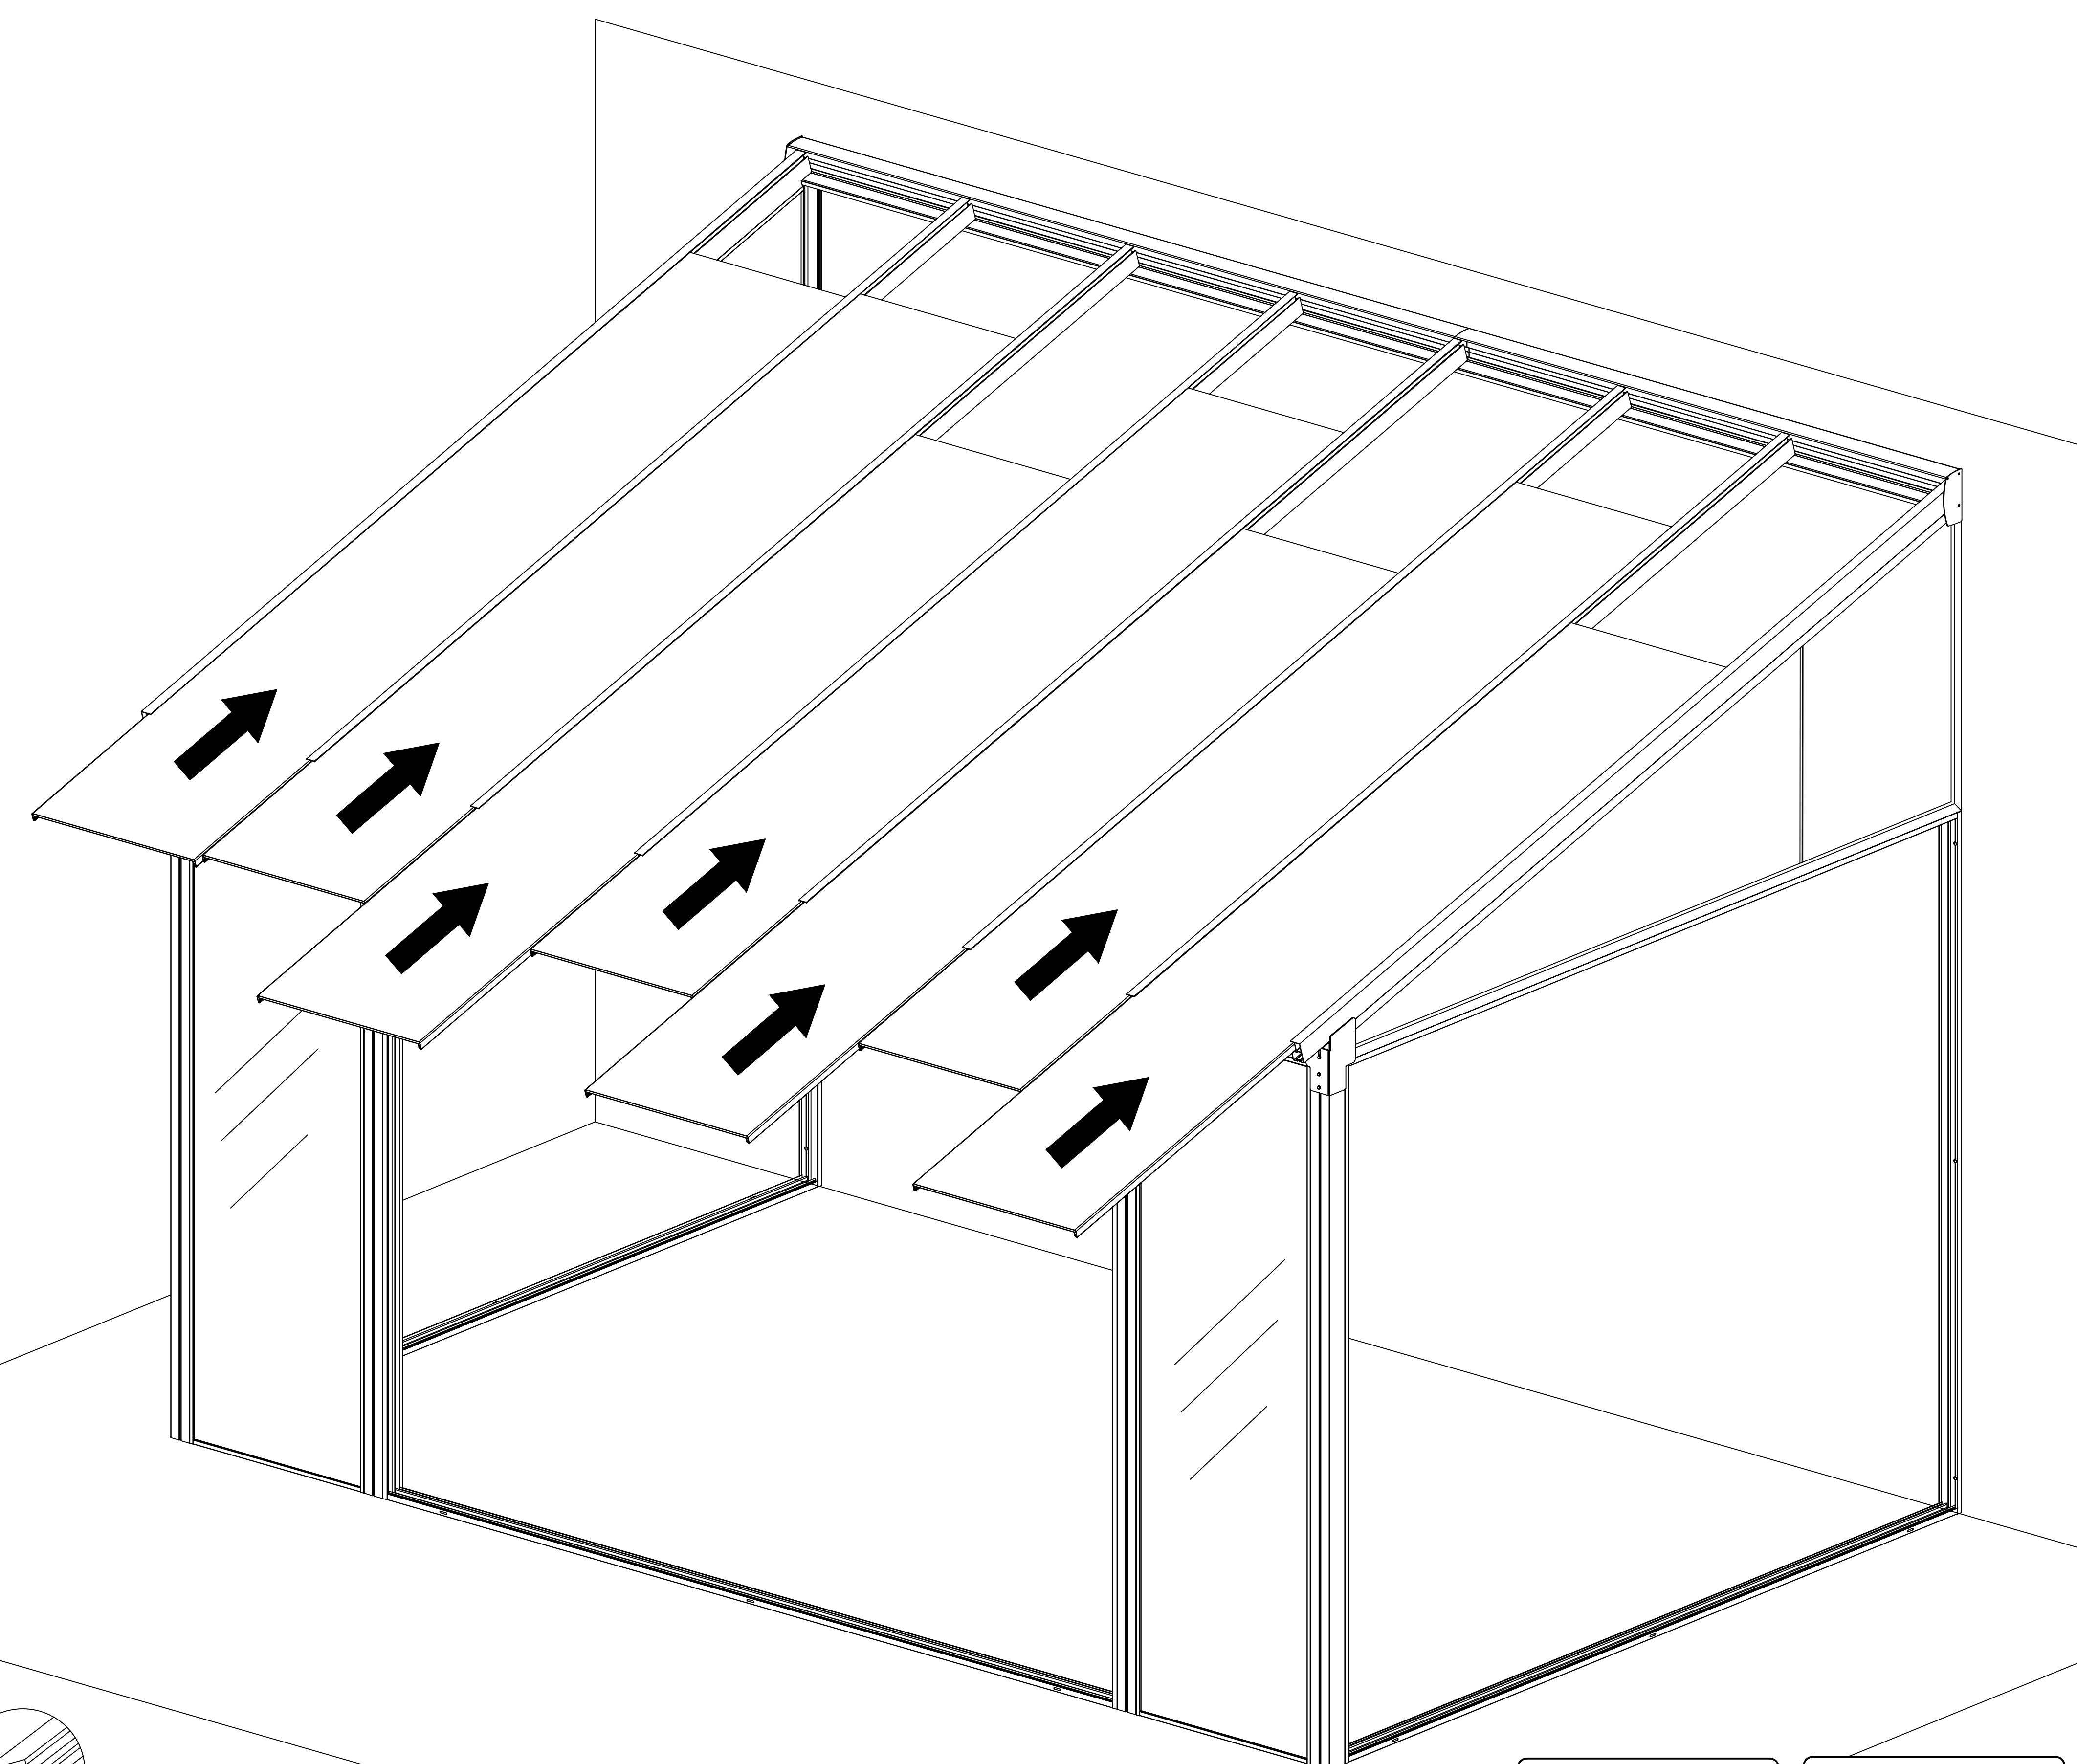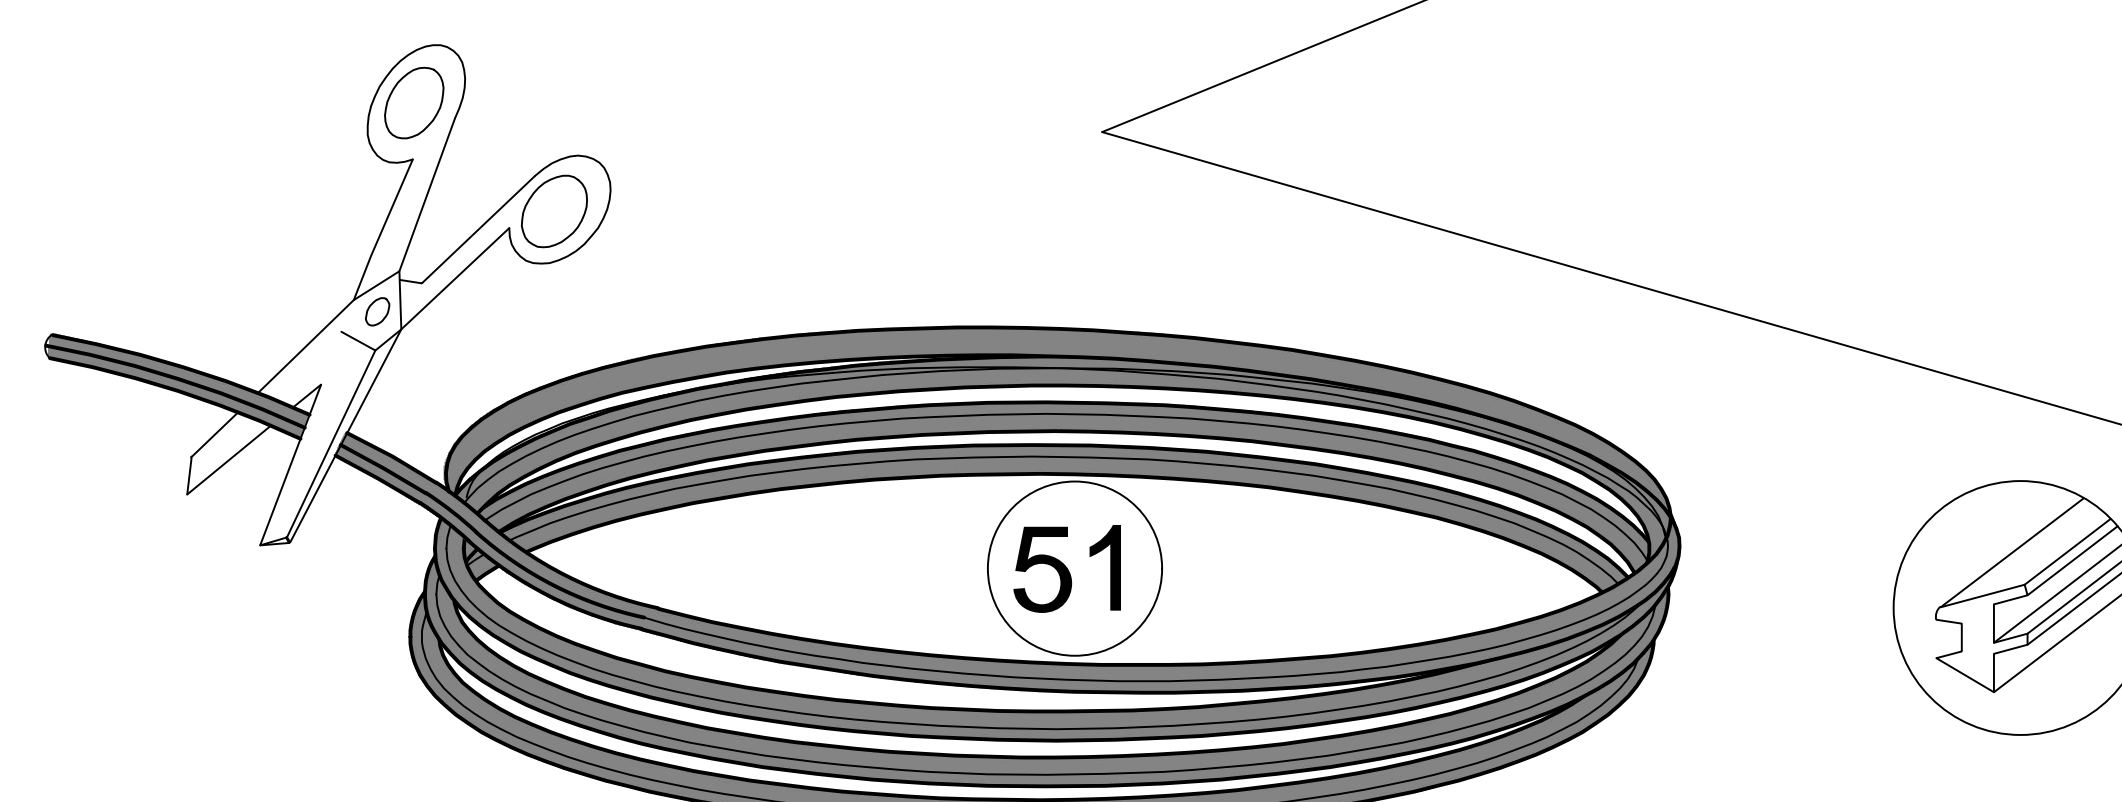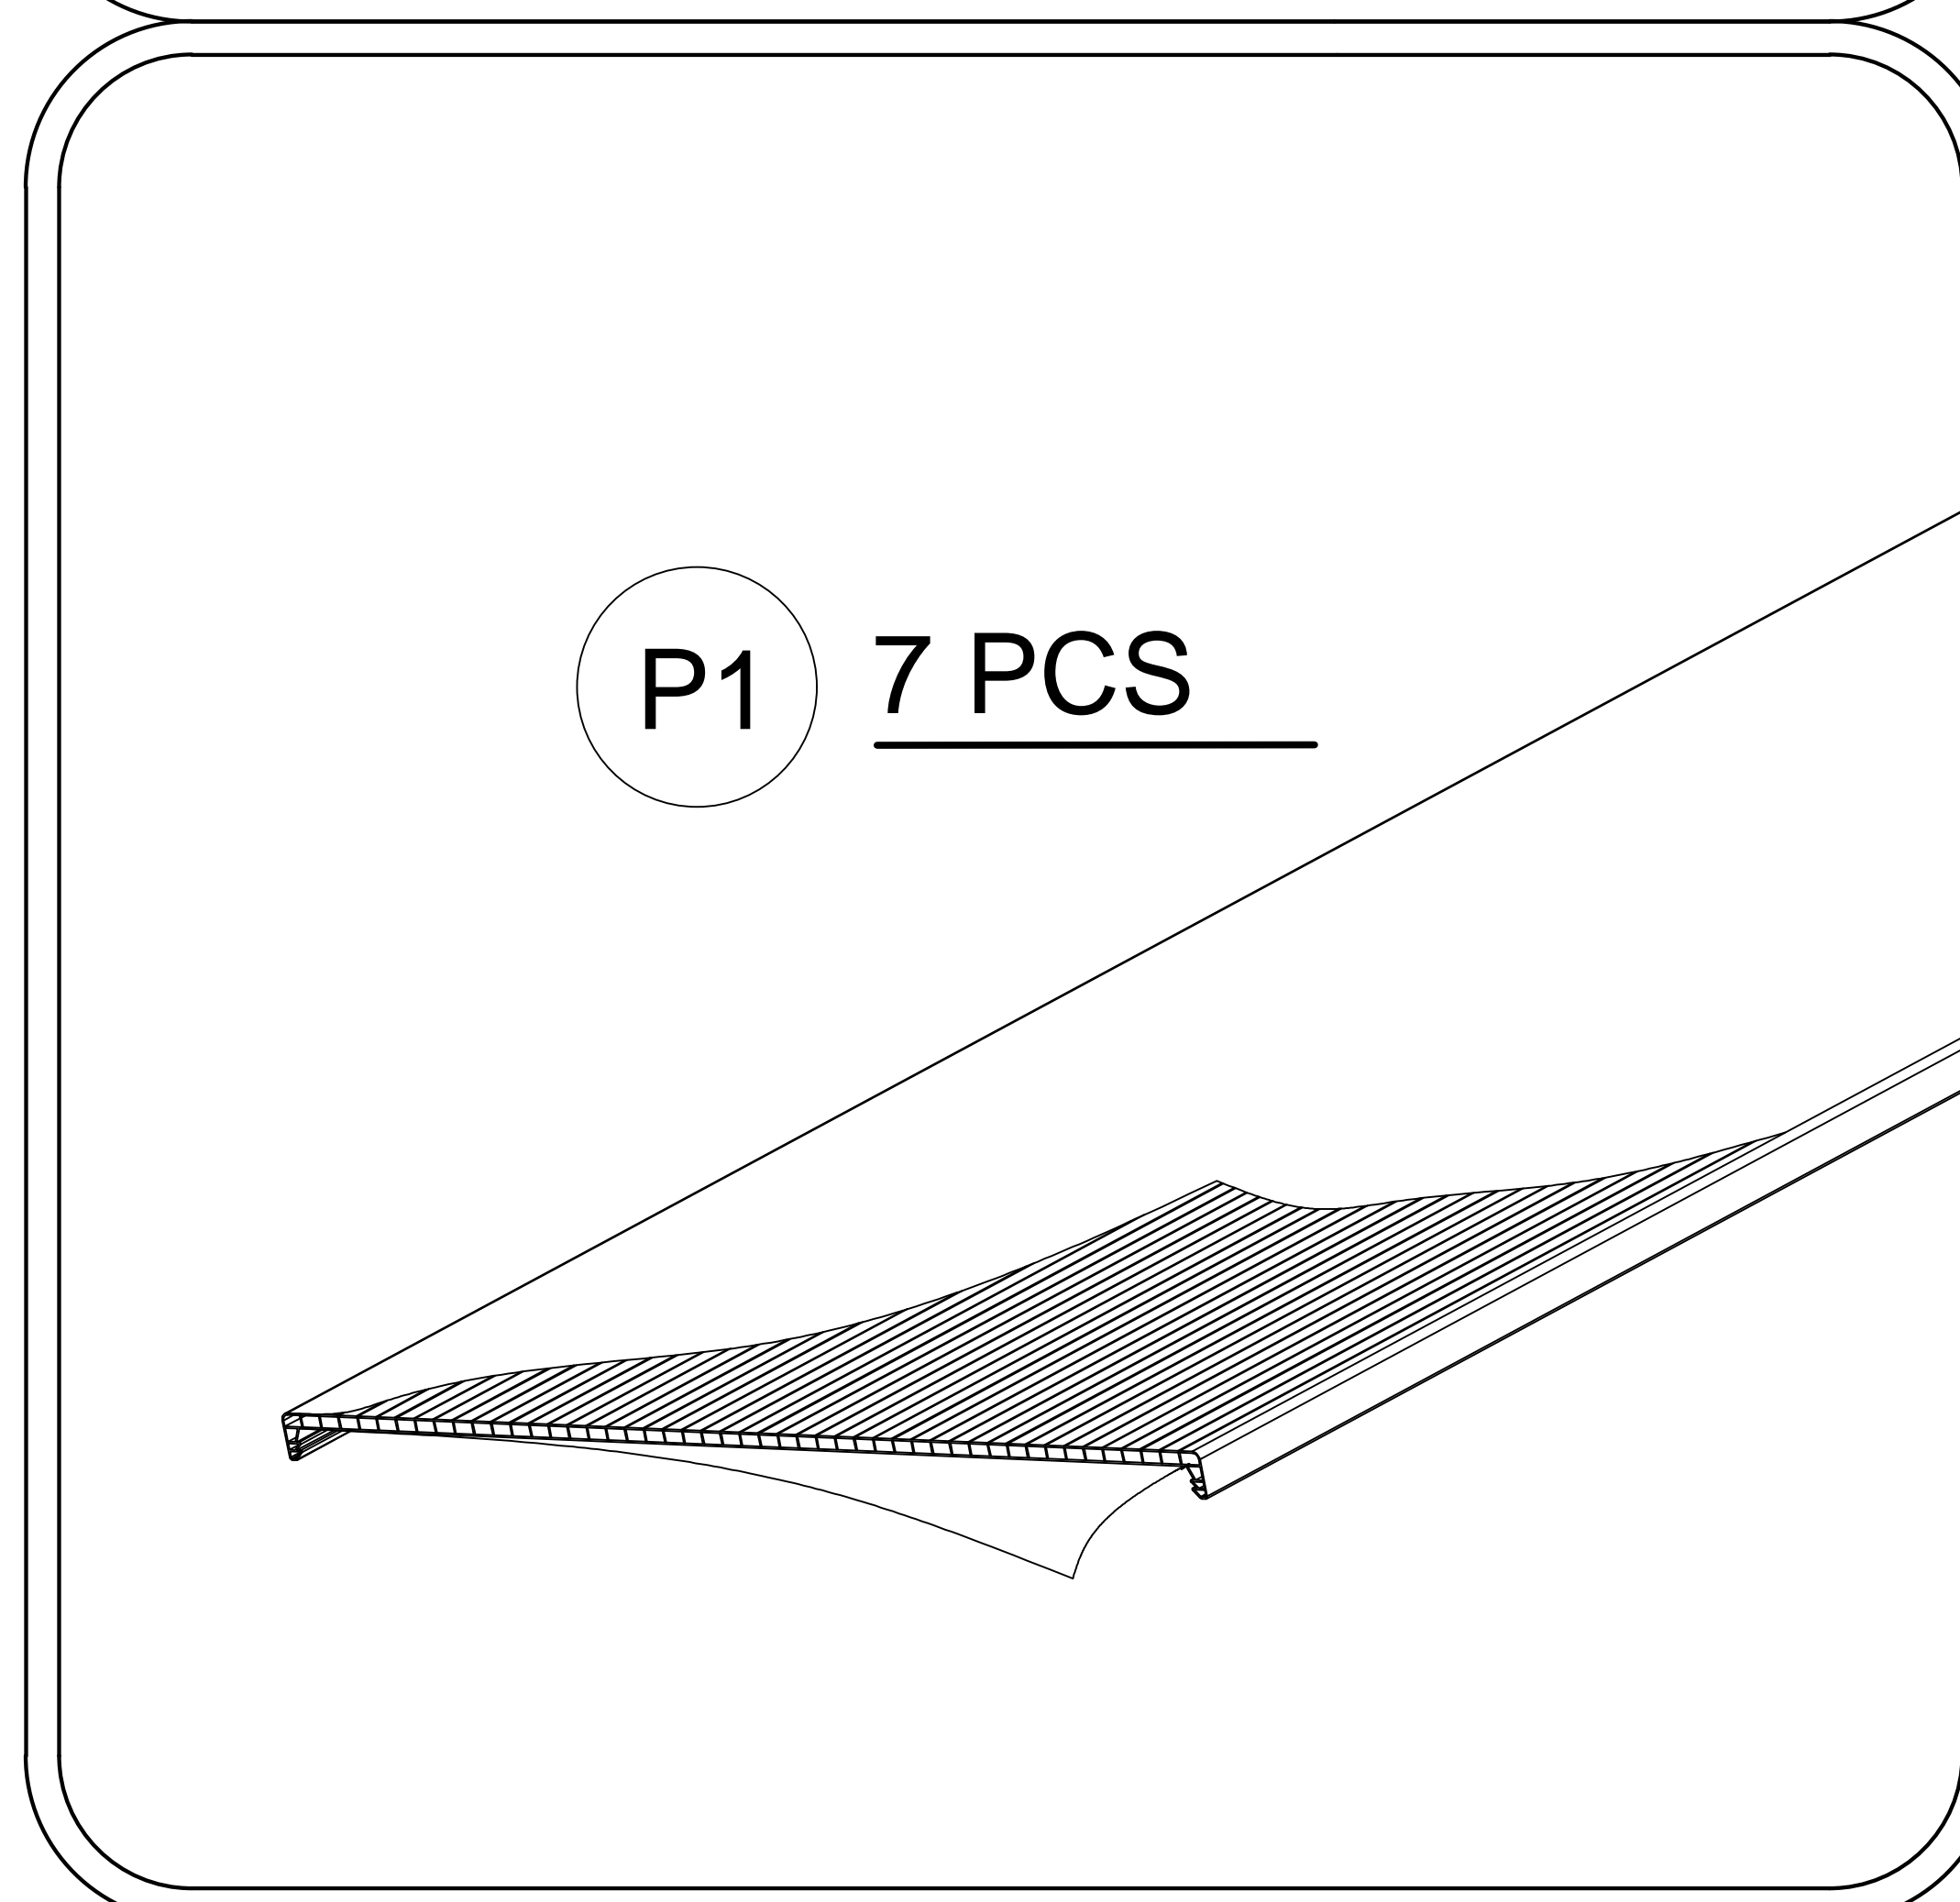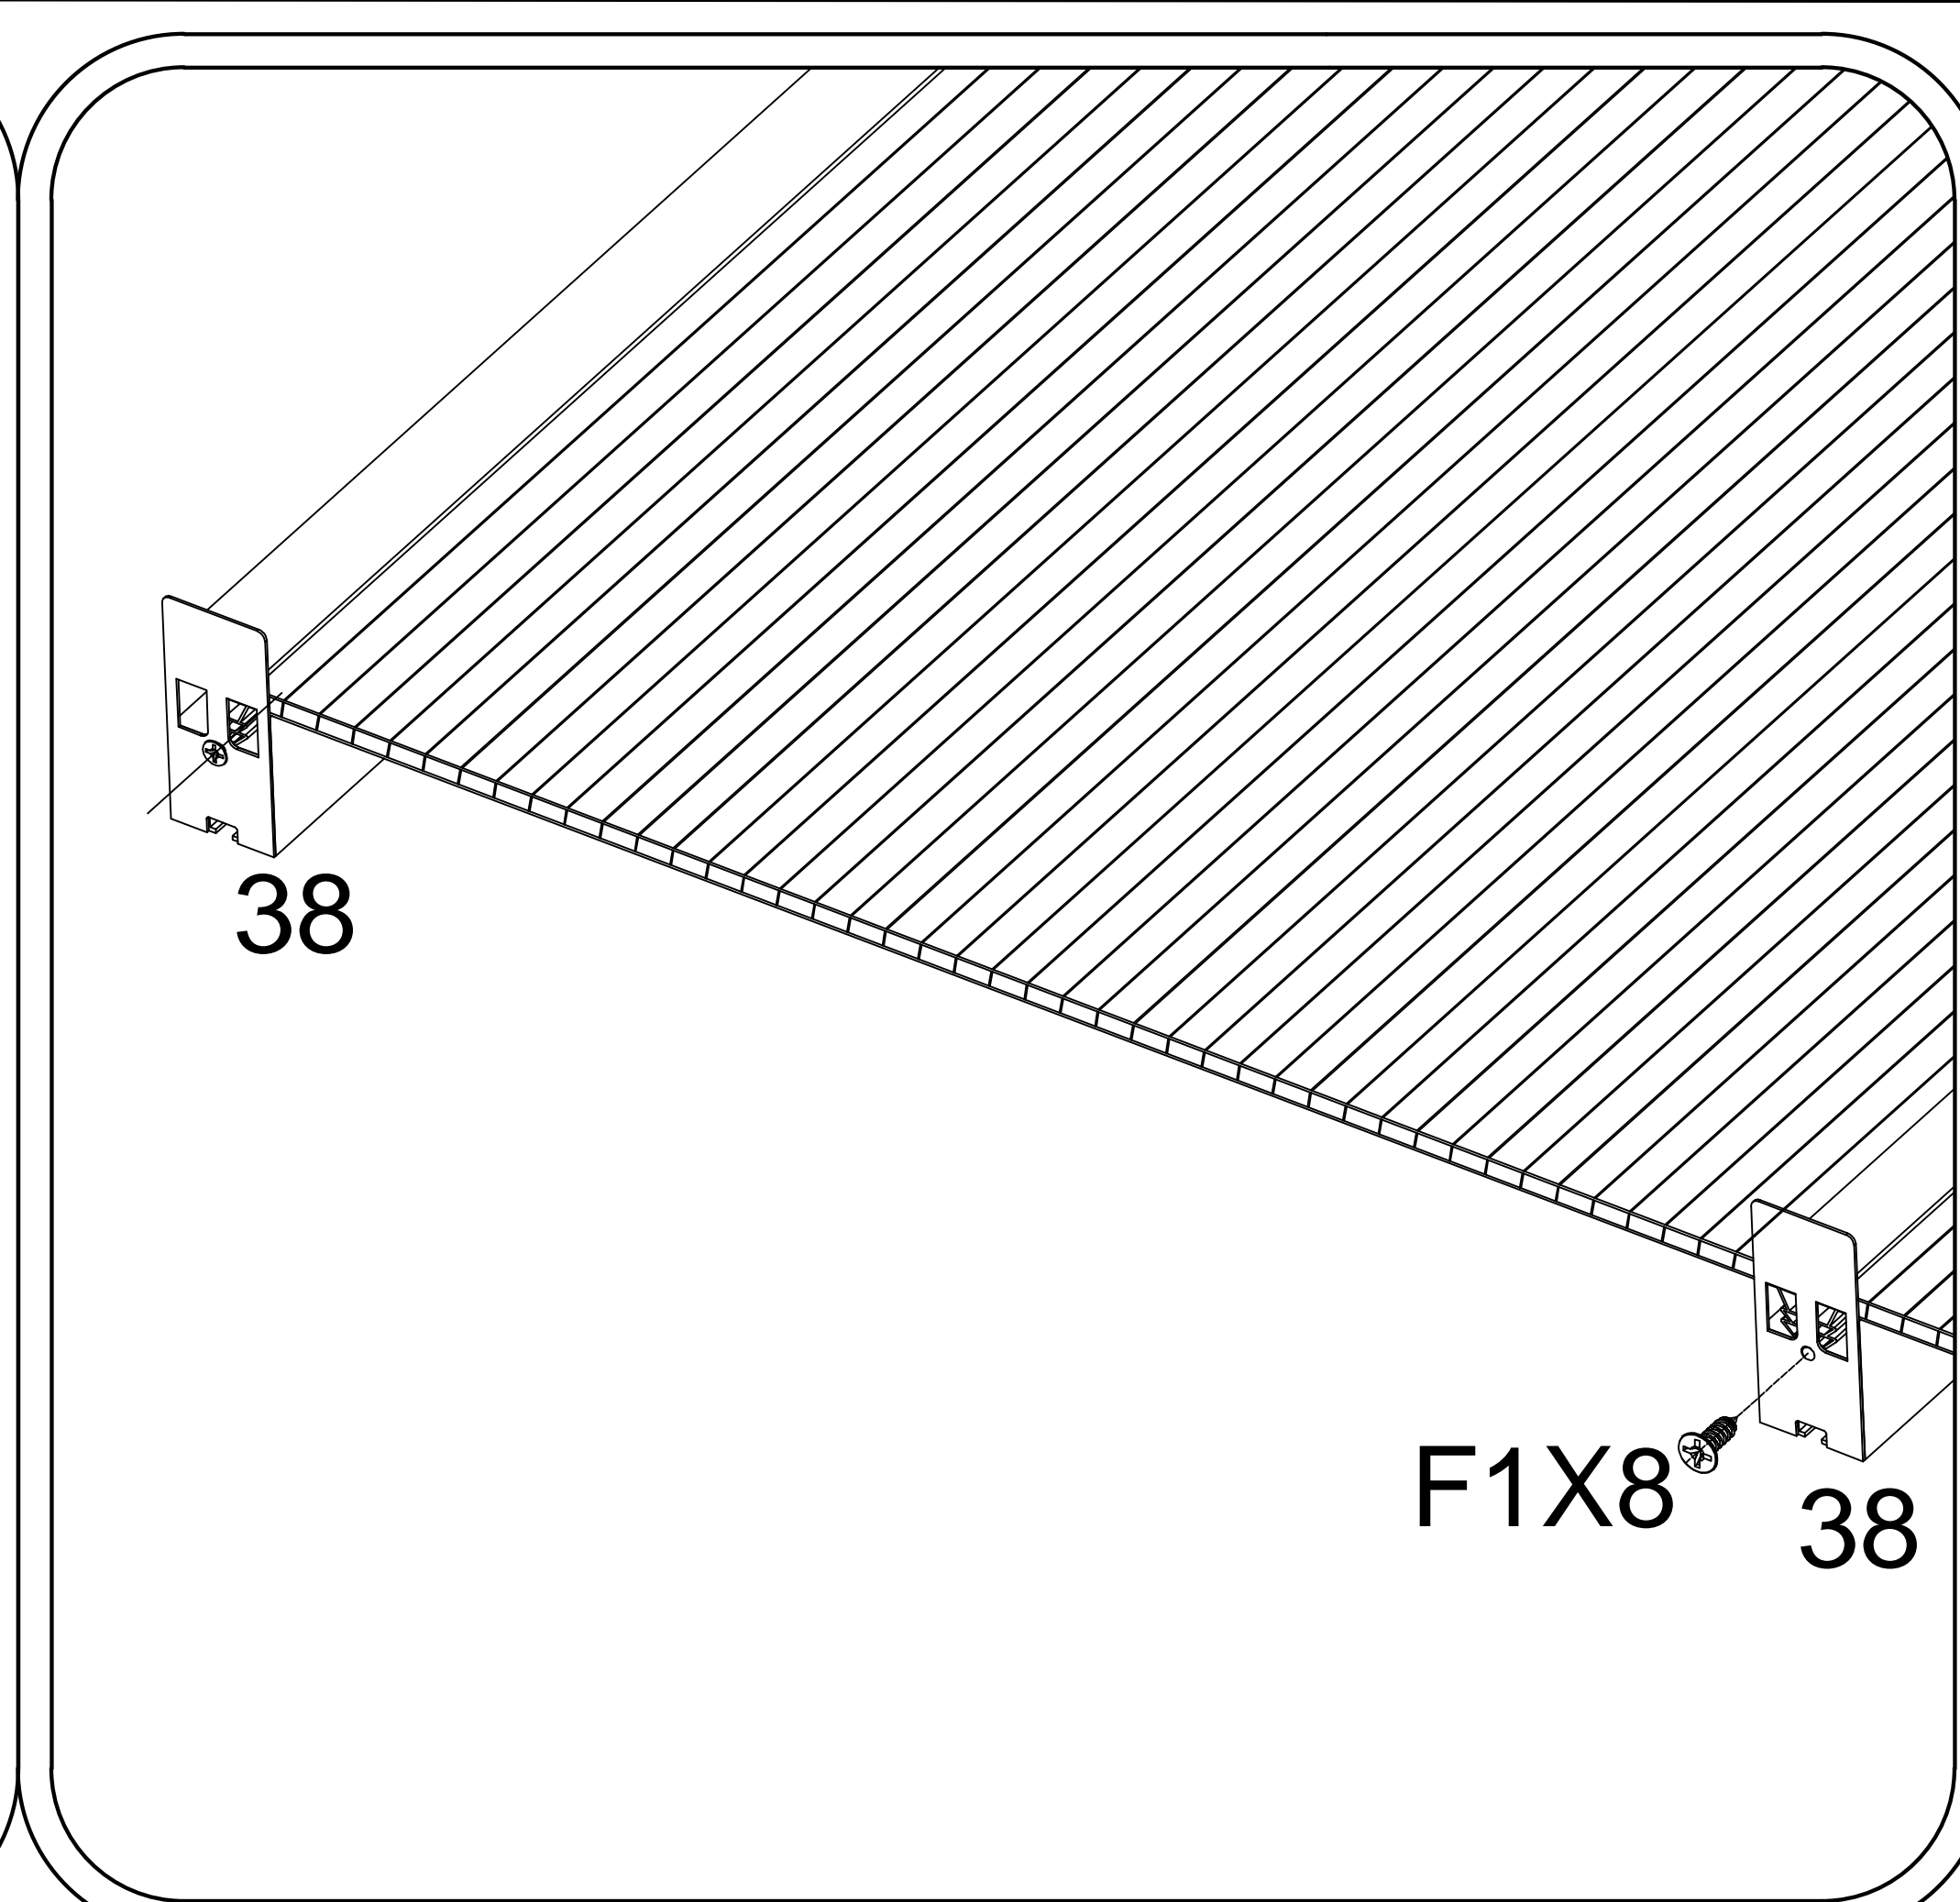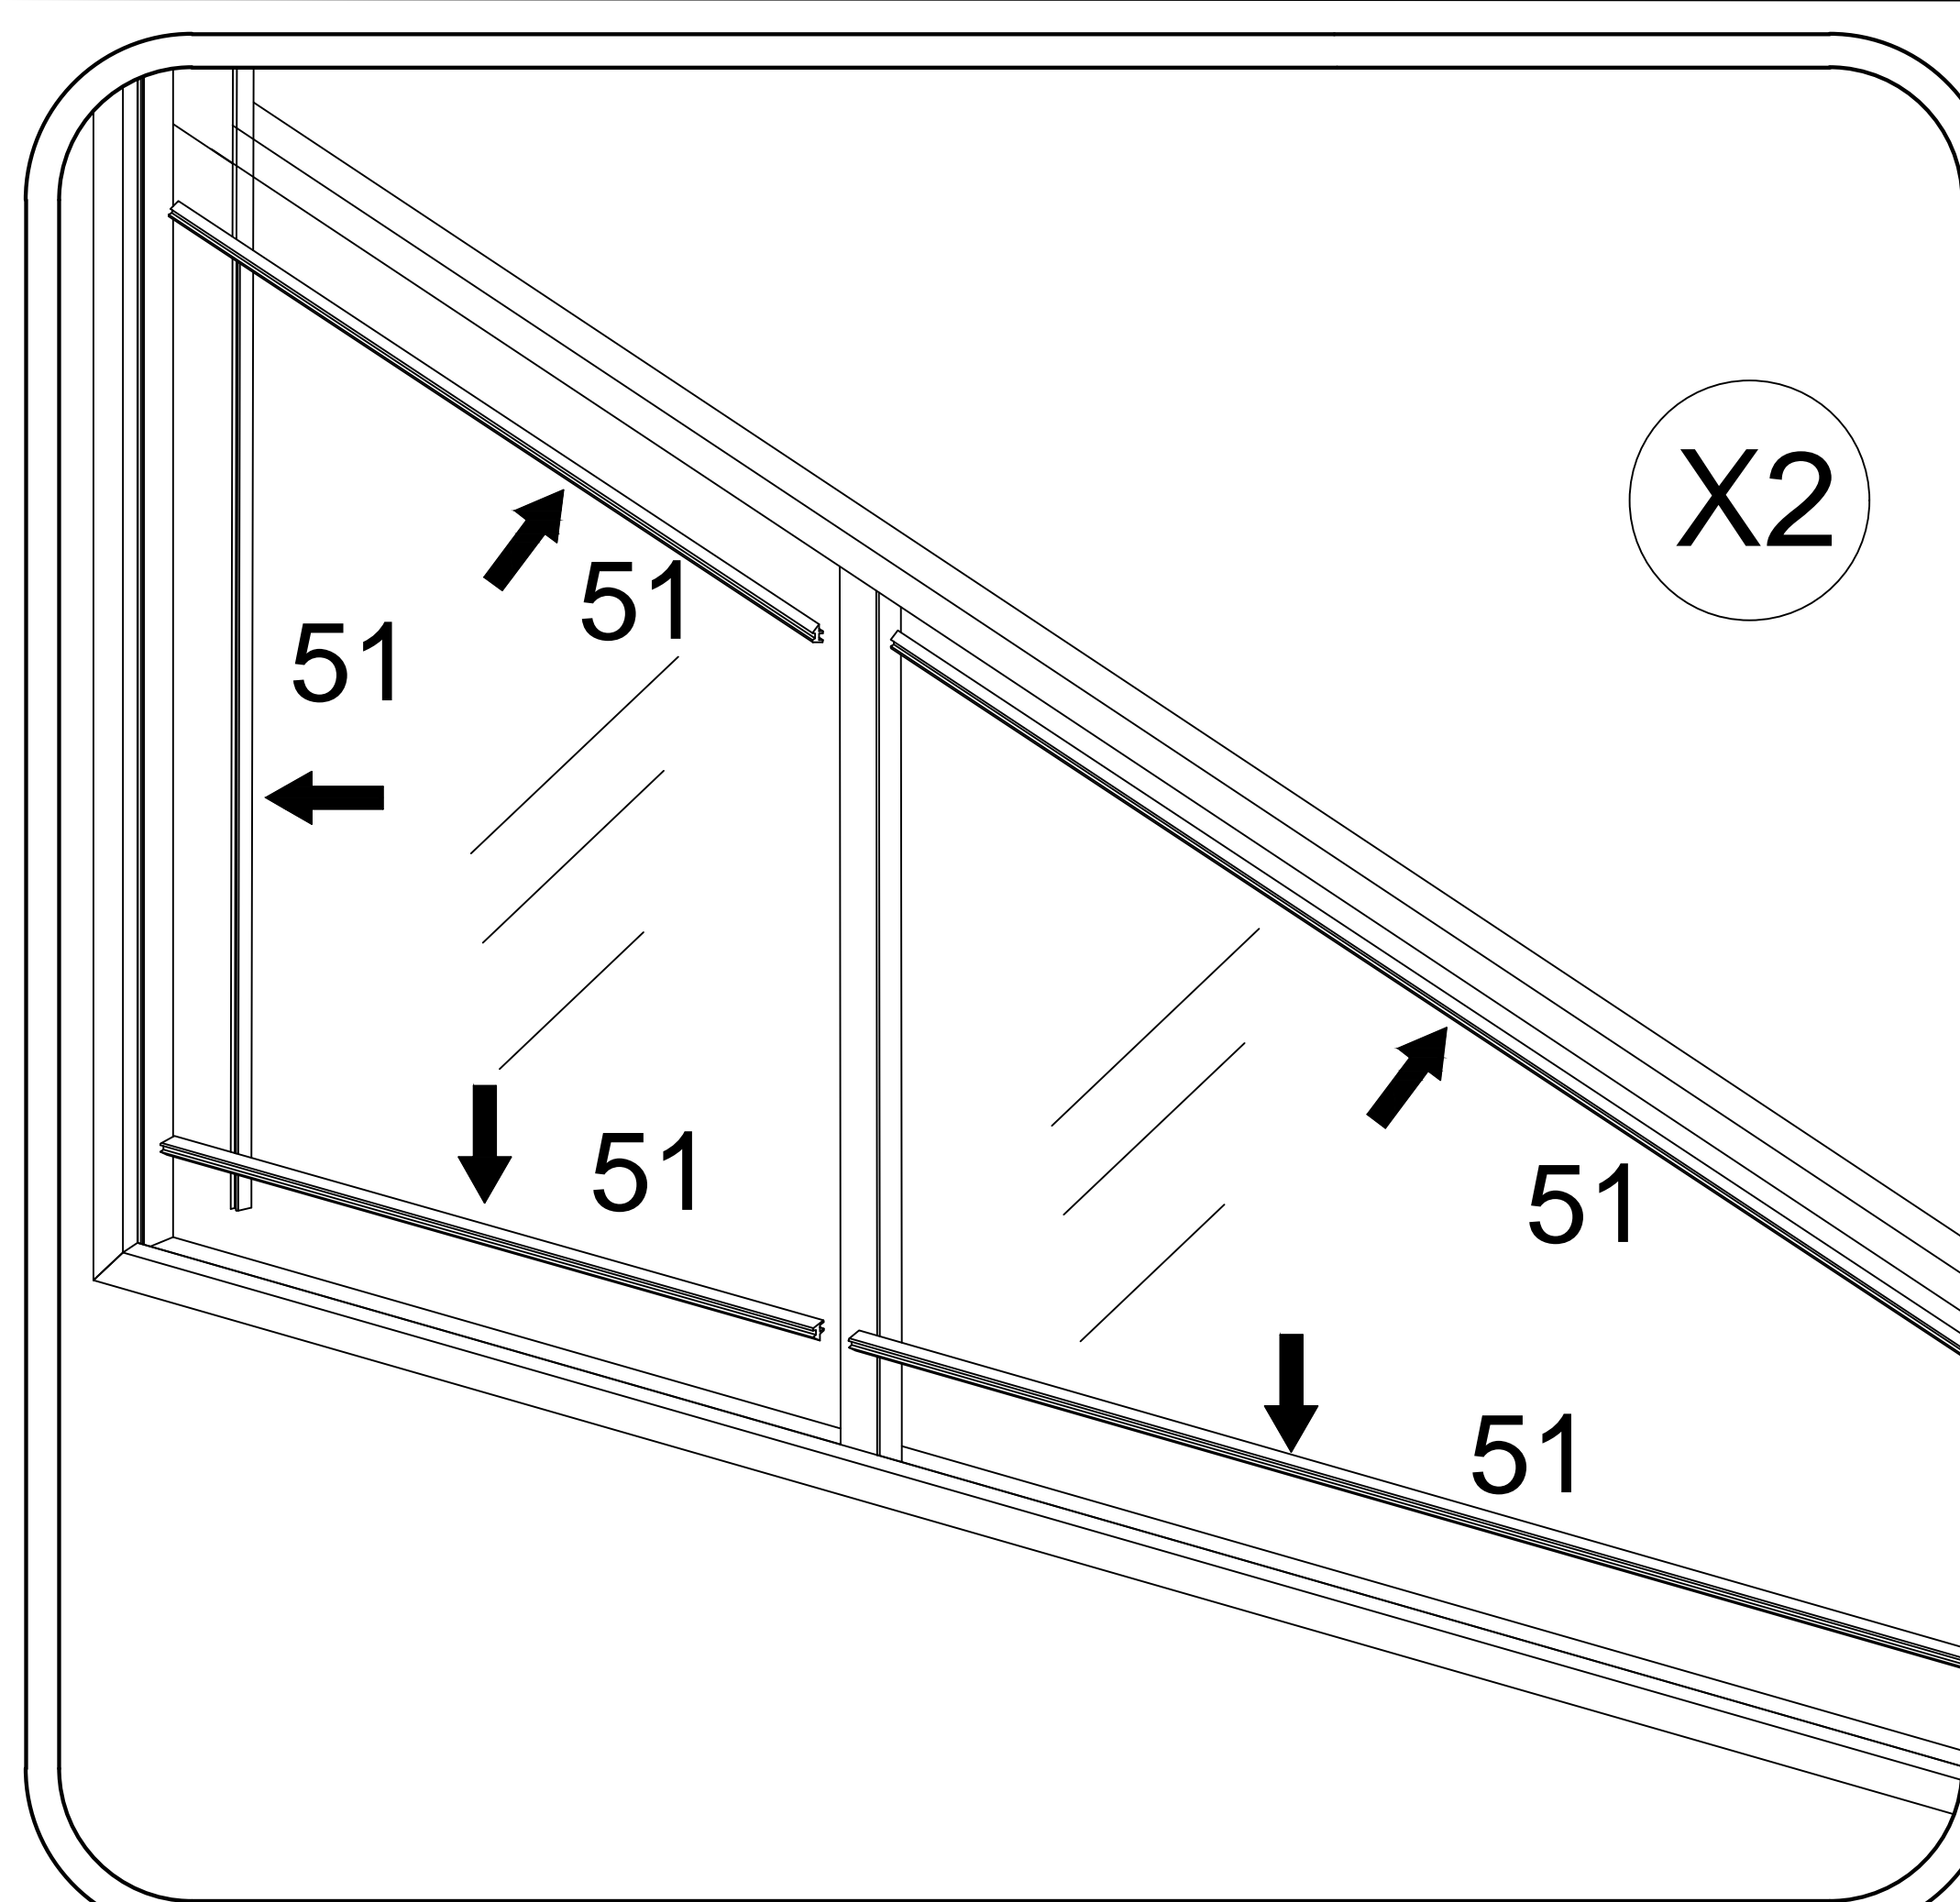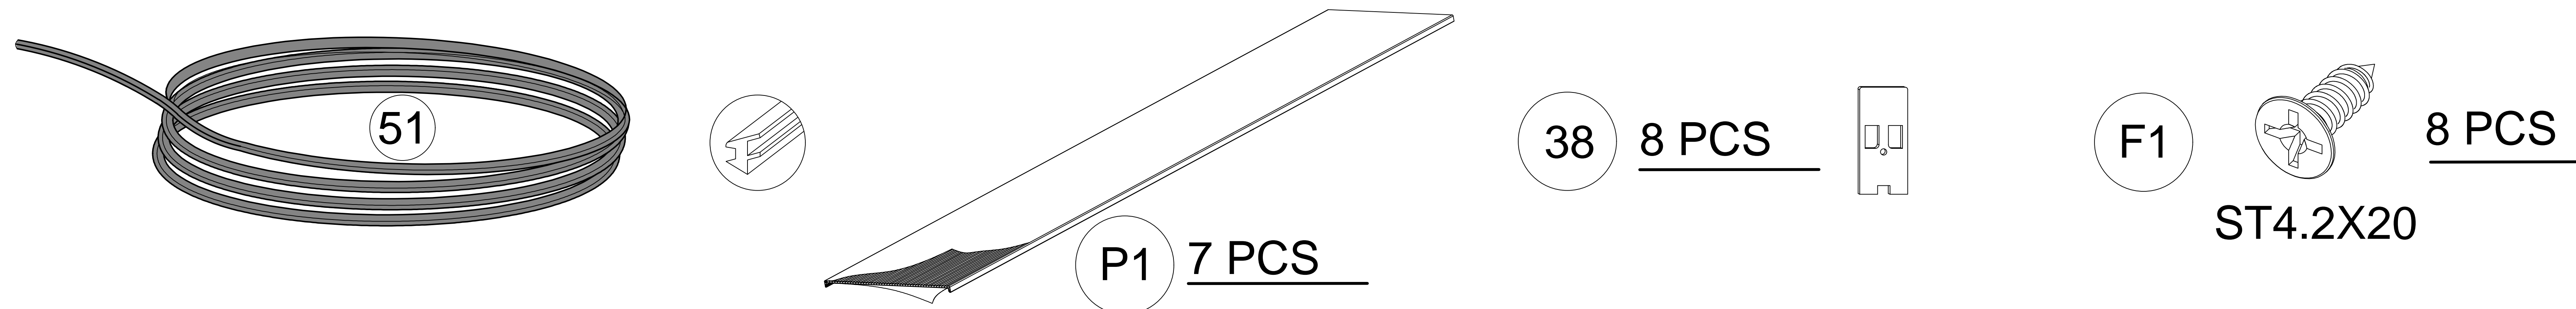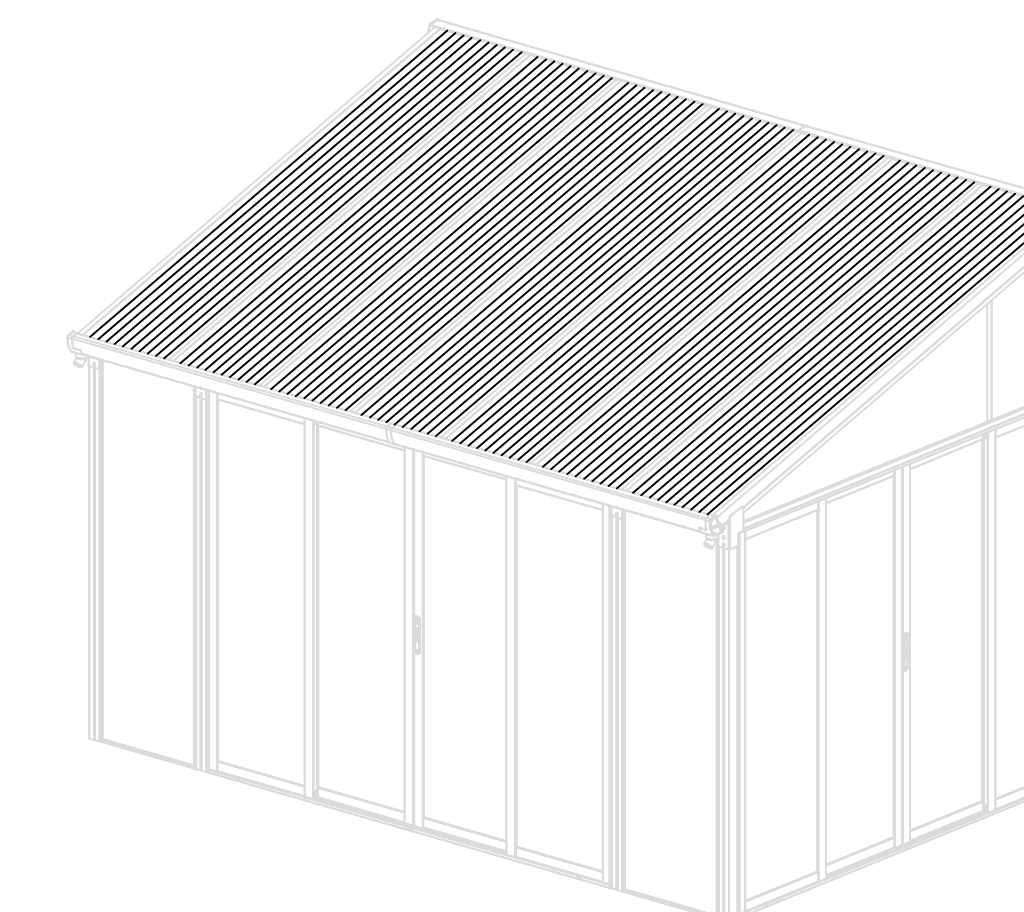




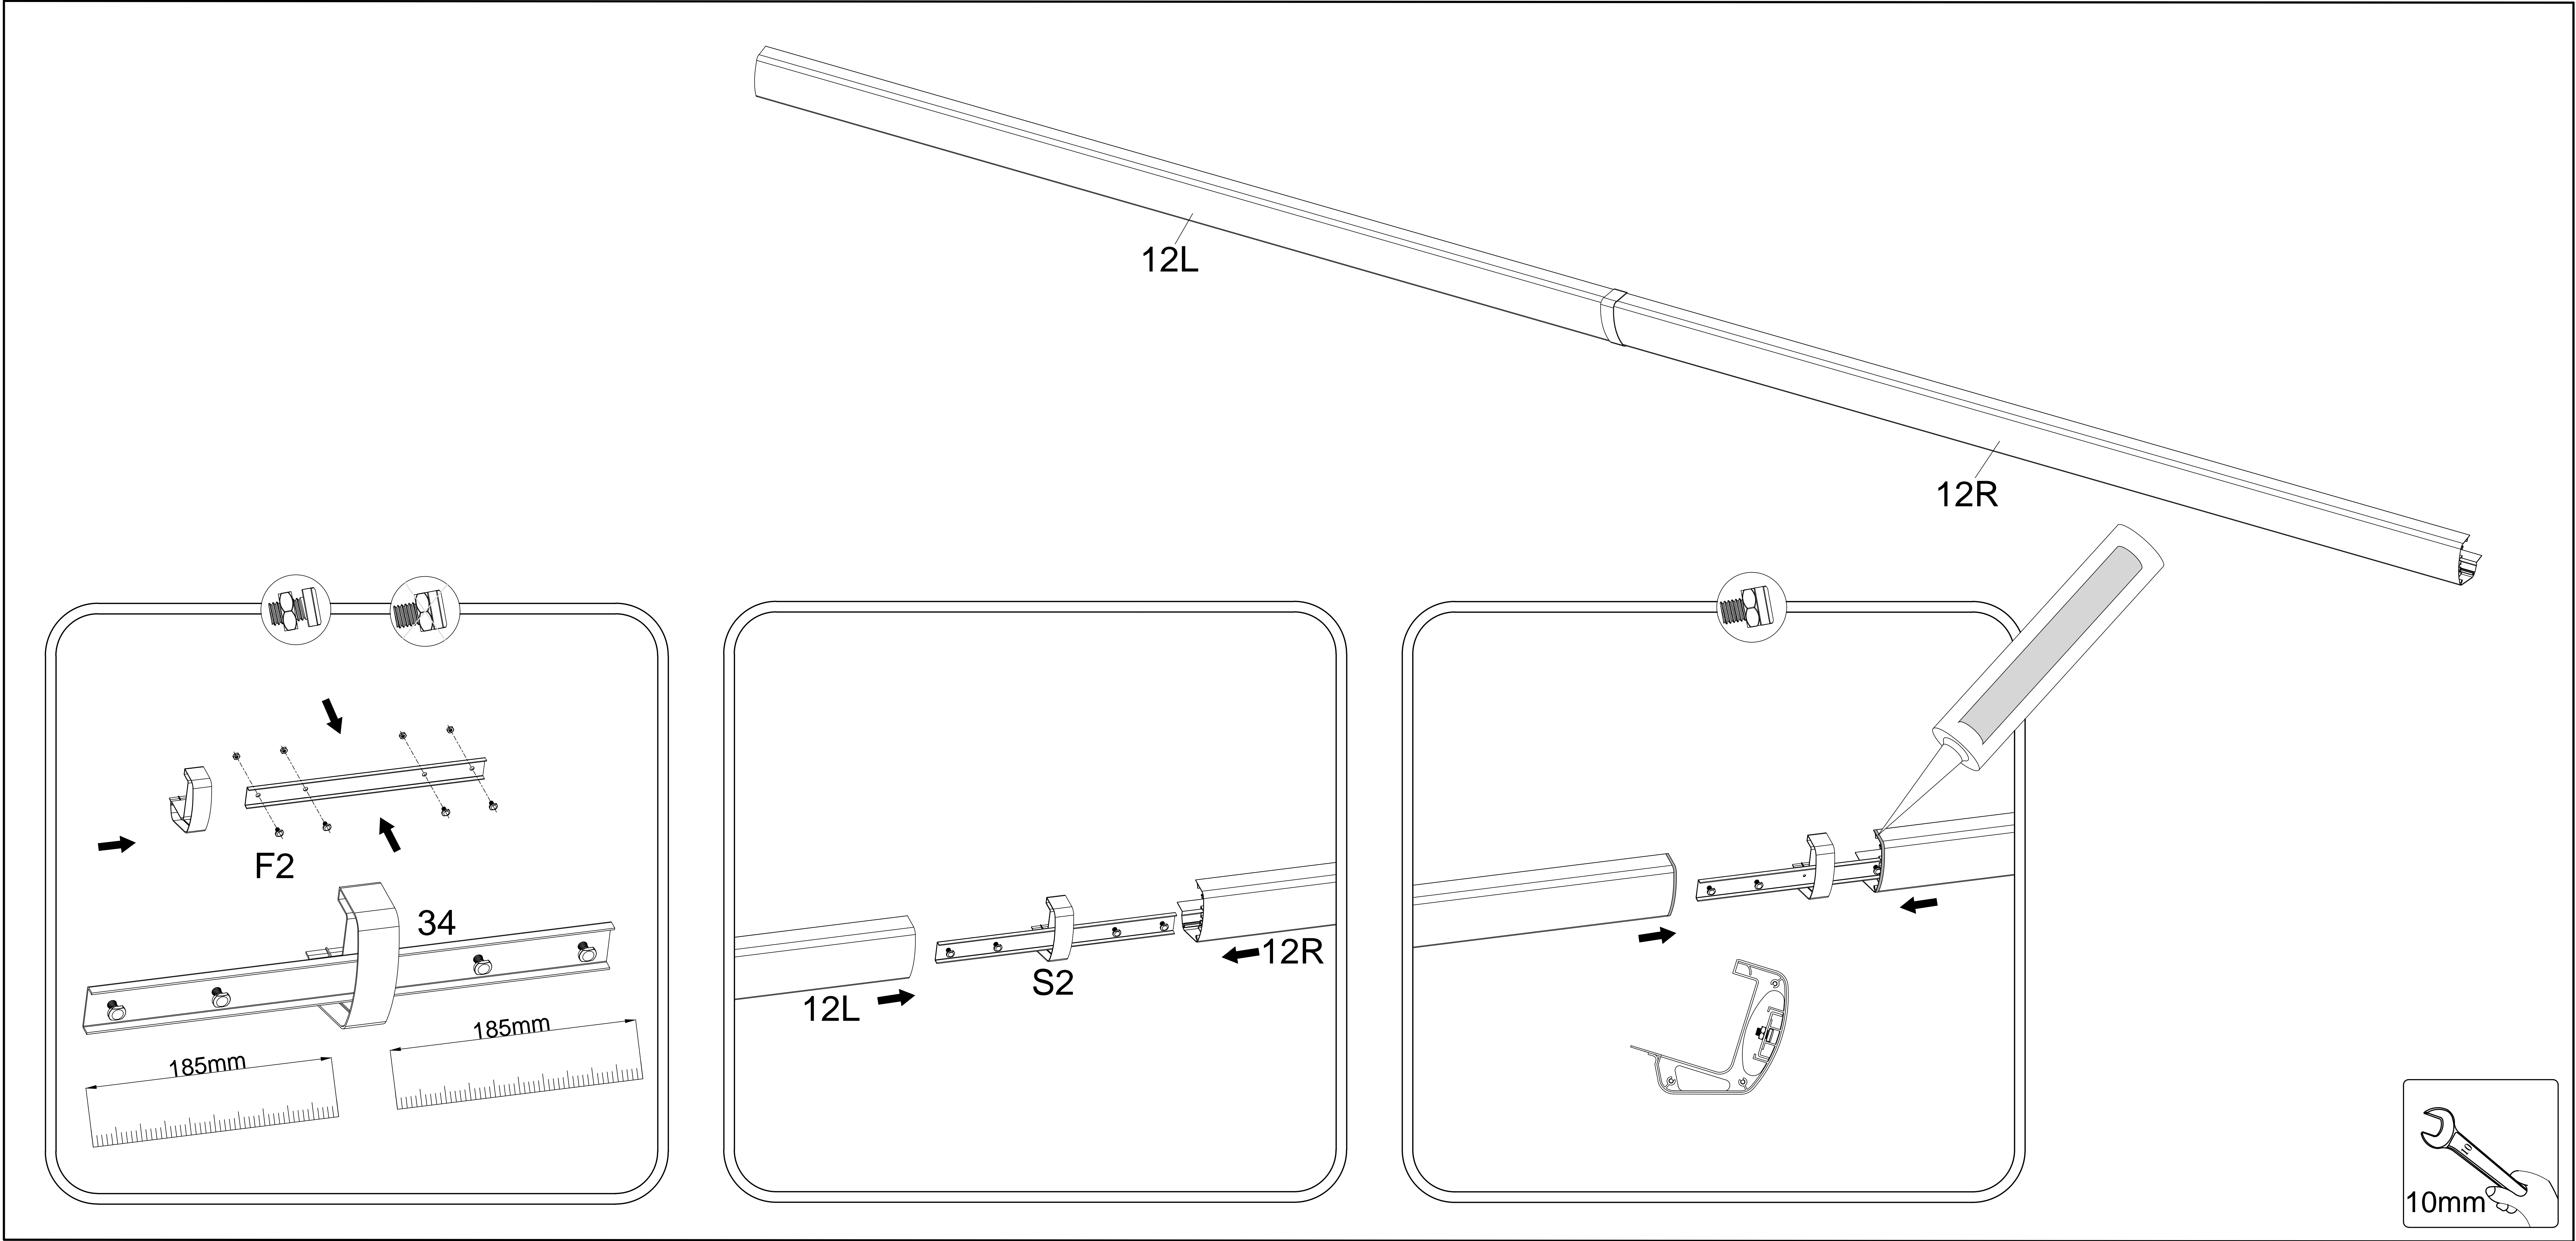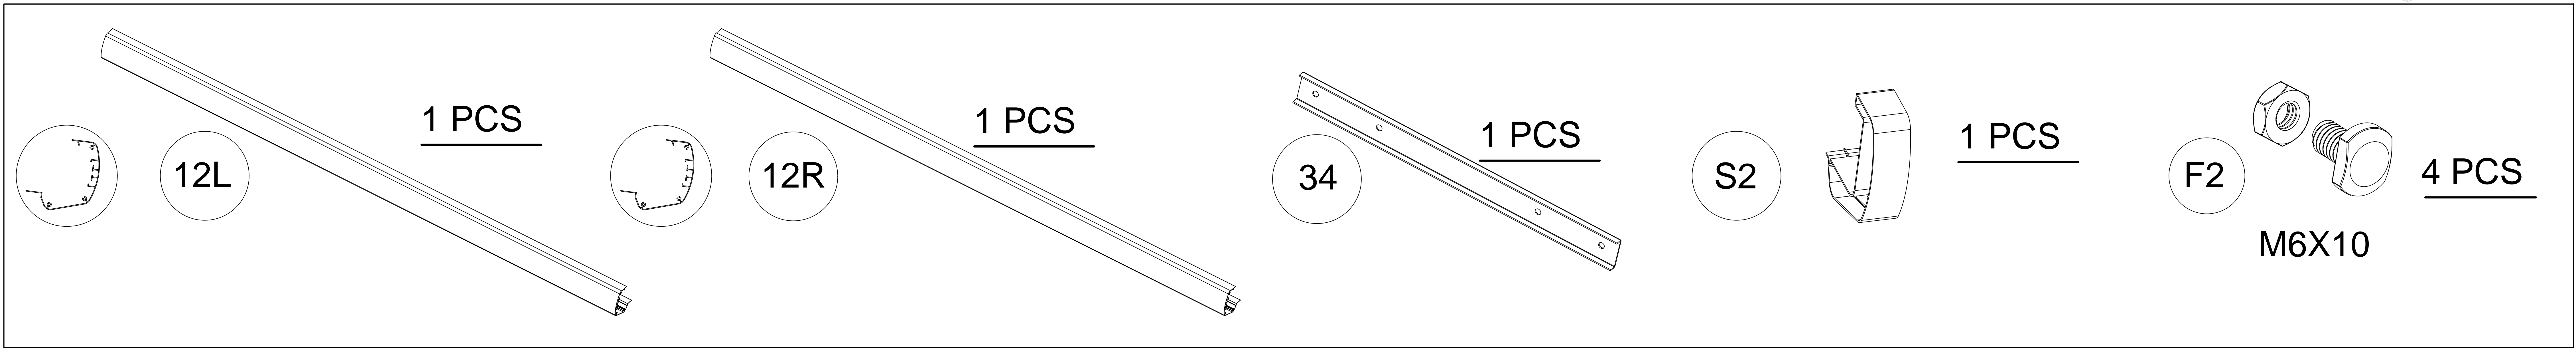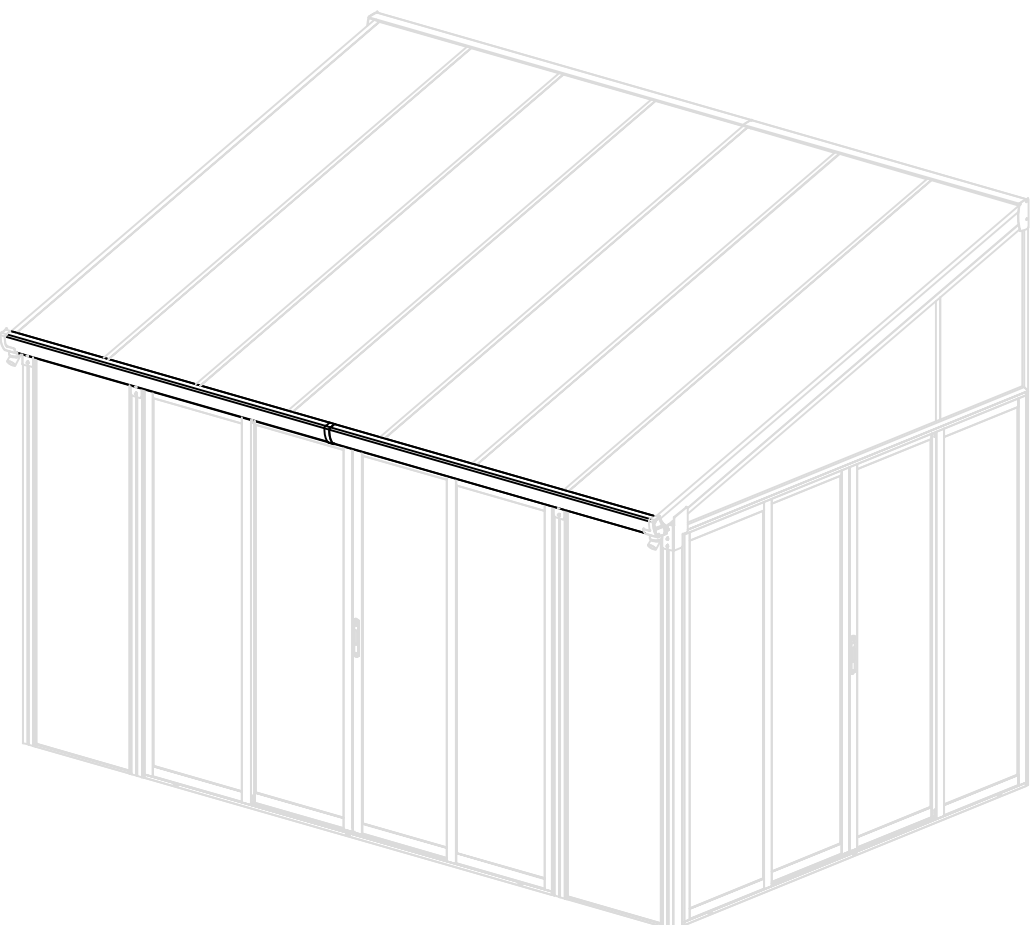


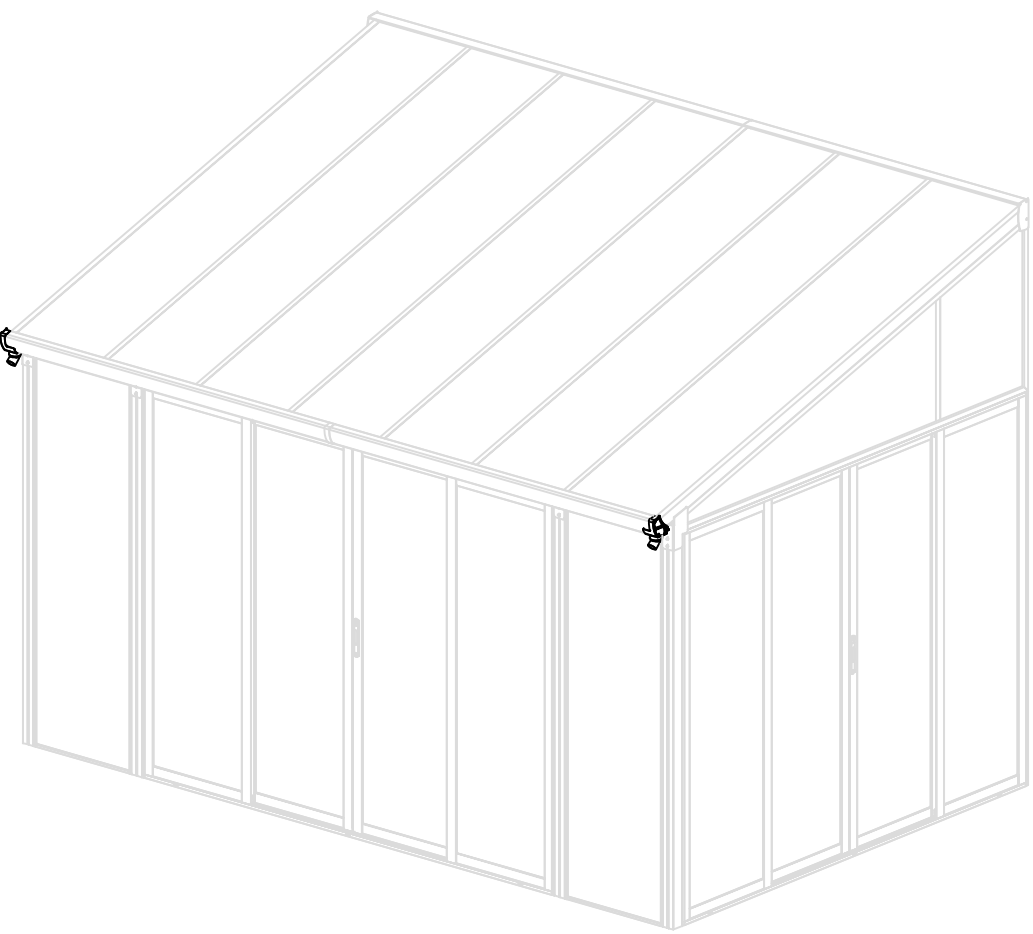


S1L 1 PCS

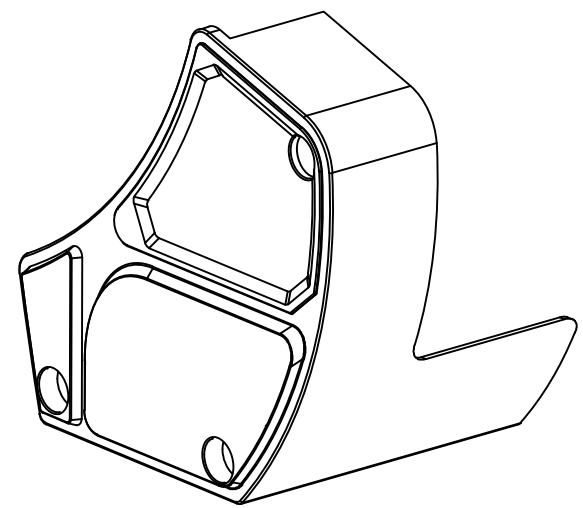


S1R 1 PCS

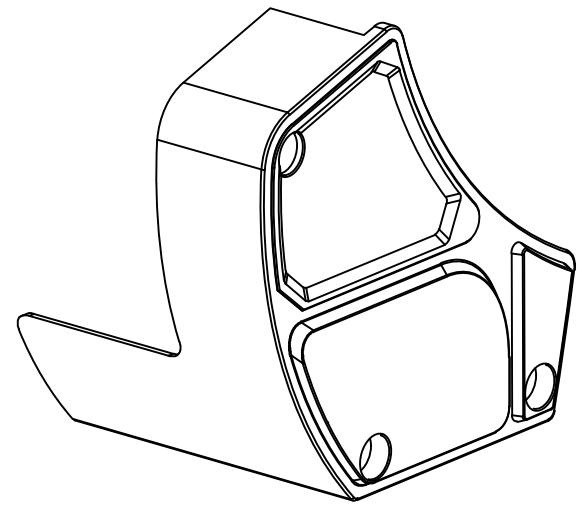

S3 2 PCS

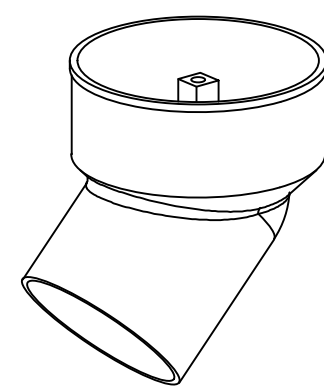


F3

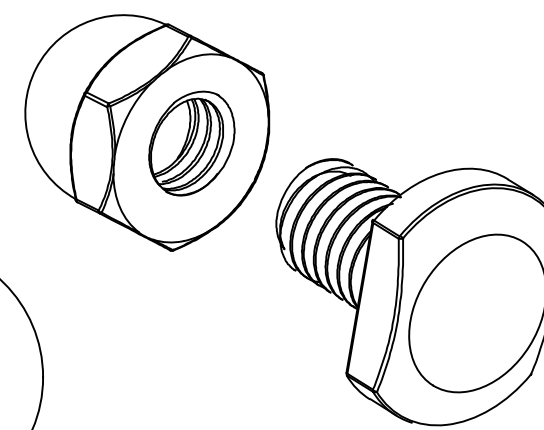

M6X10









8 PCS

F1


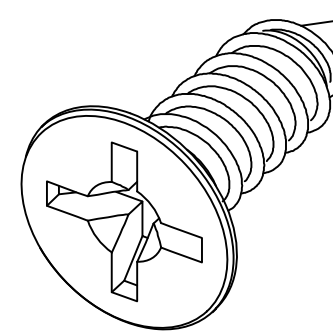


8 PCS


ST4.2X20

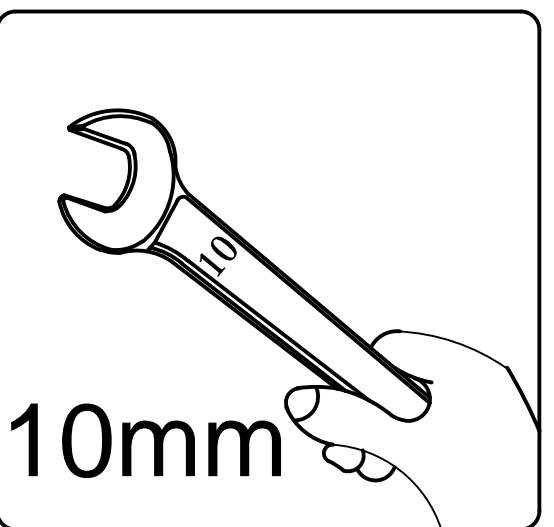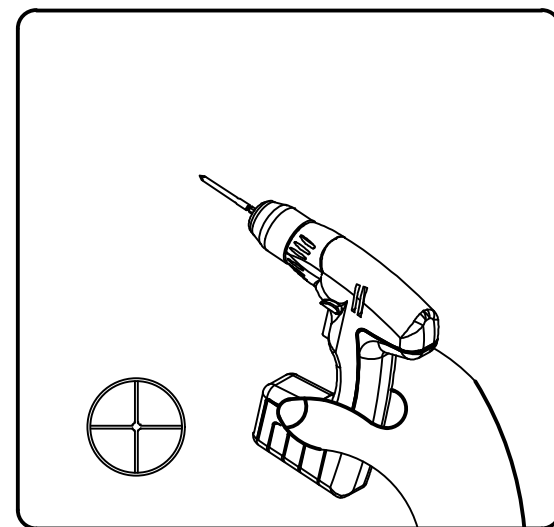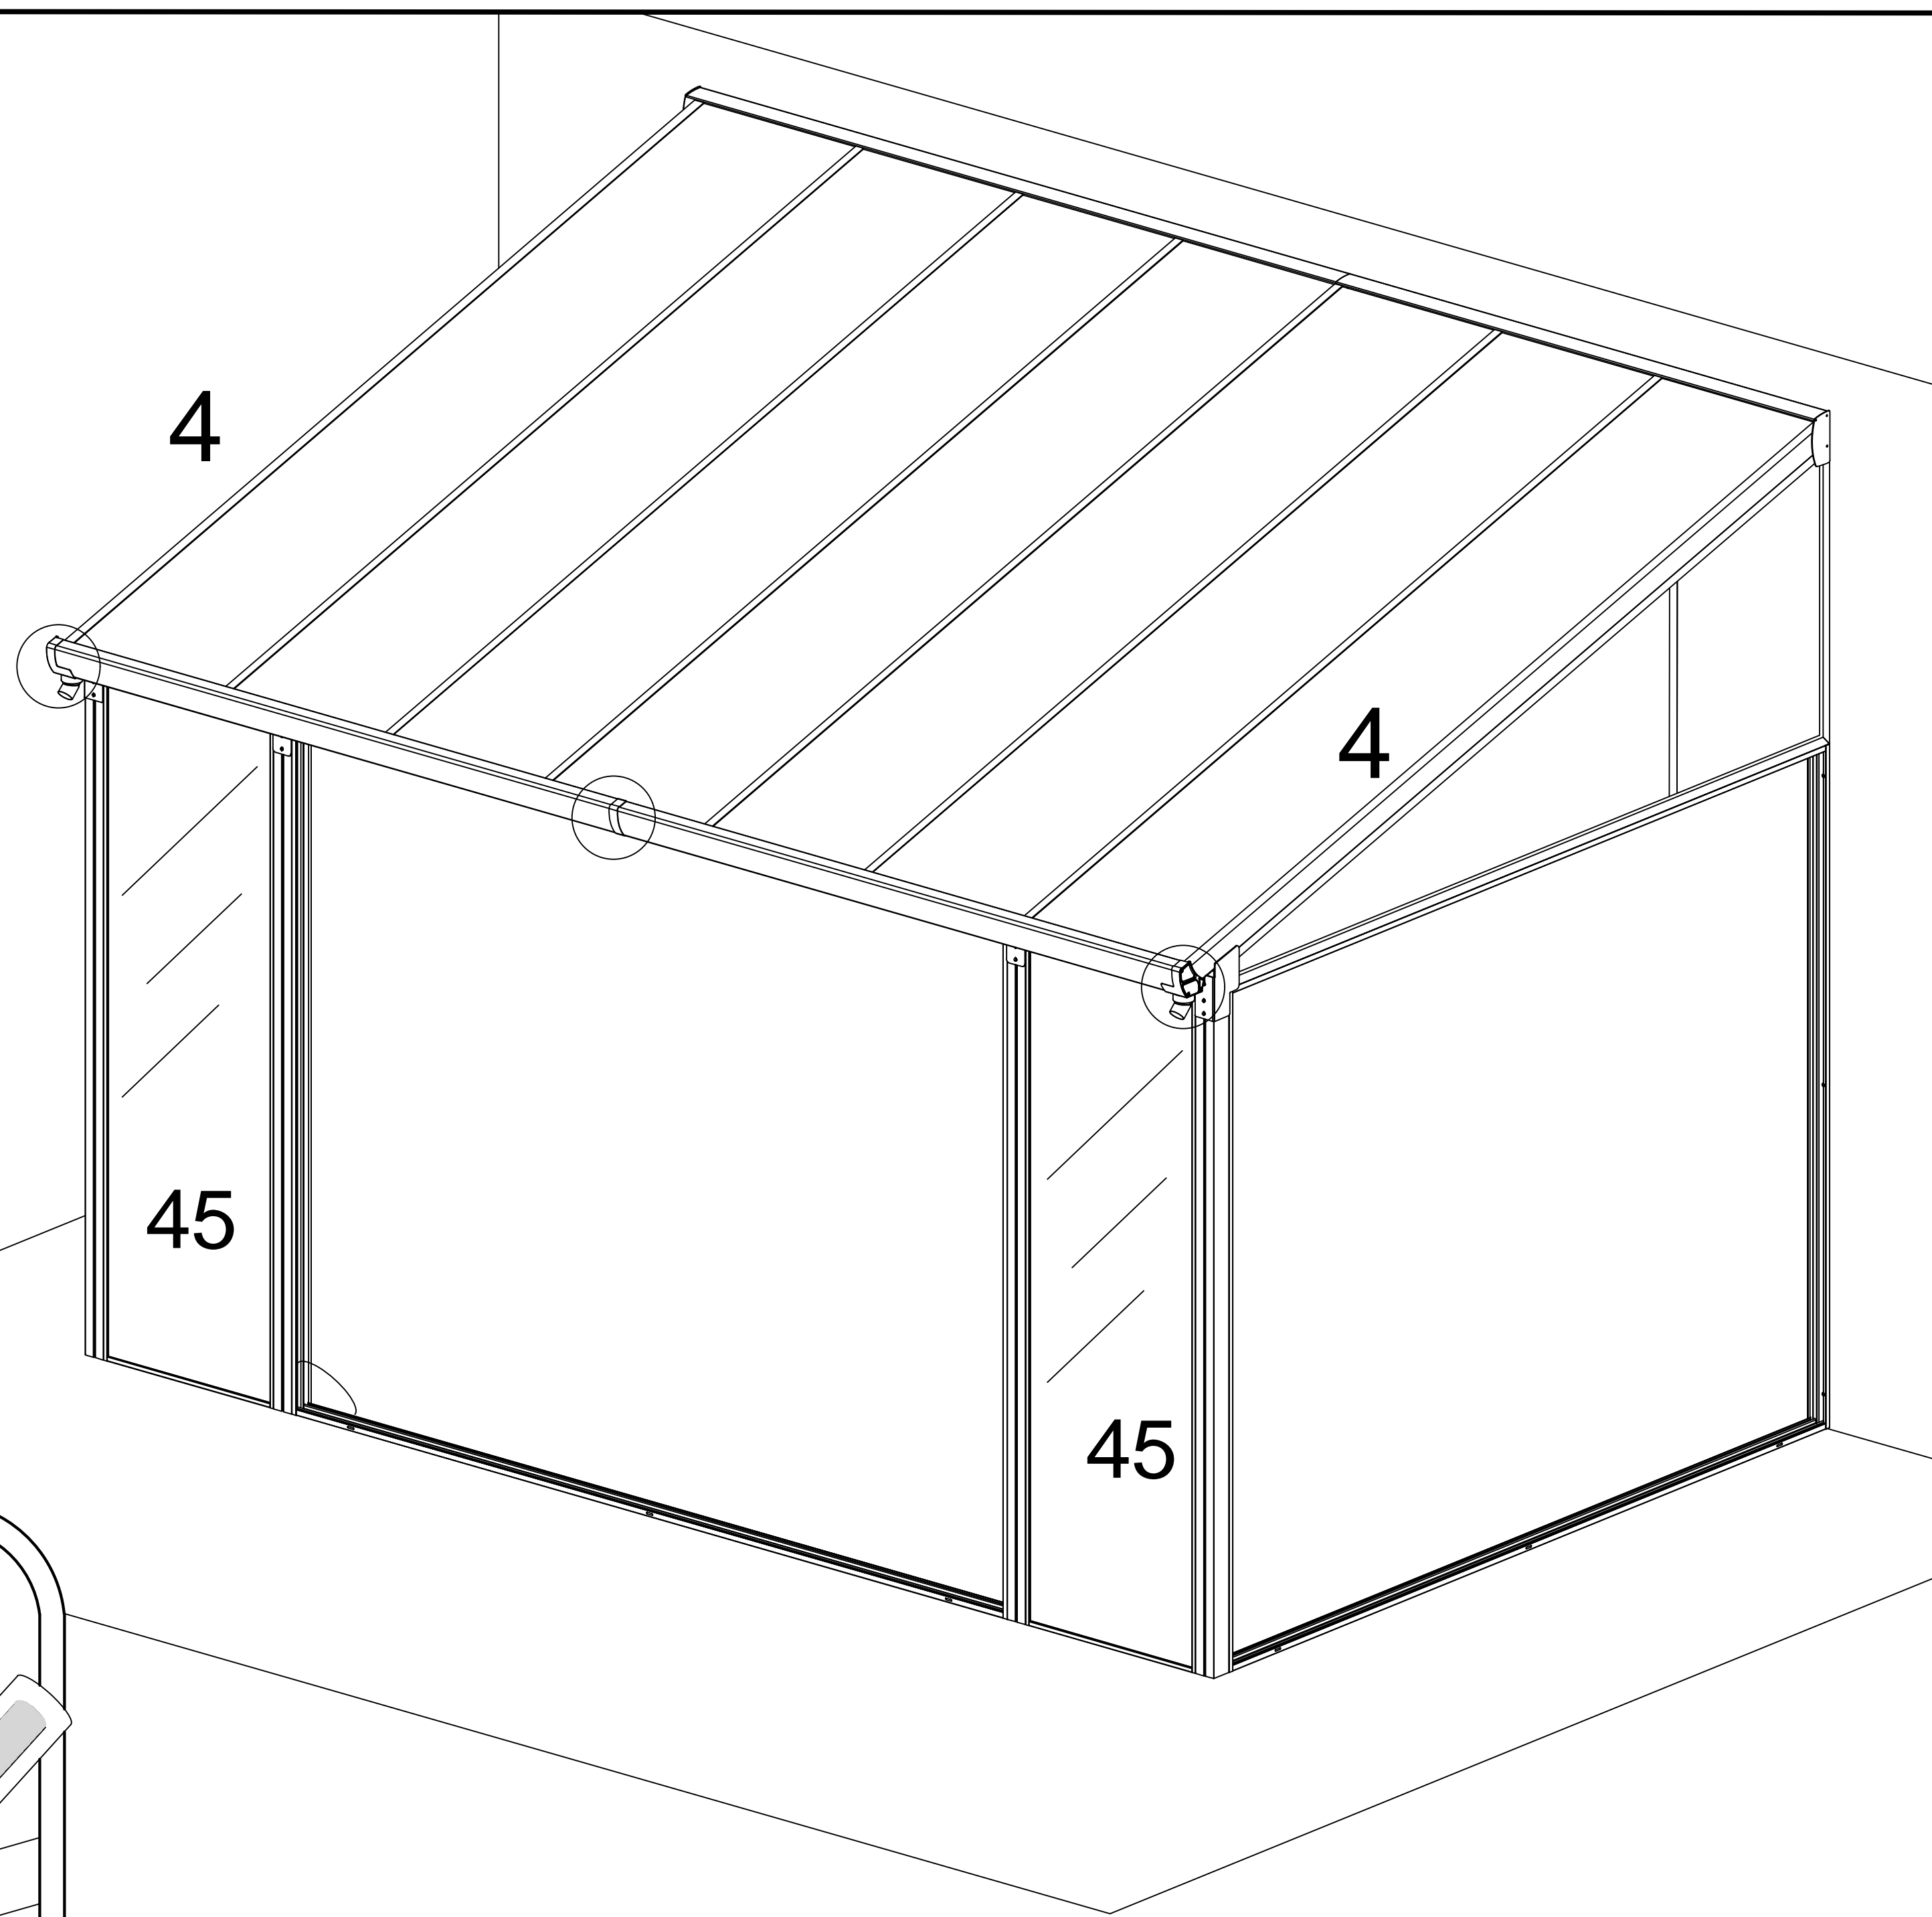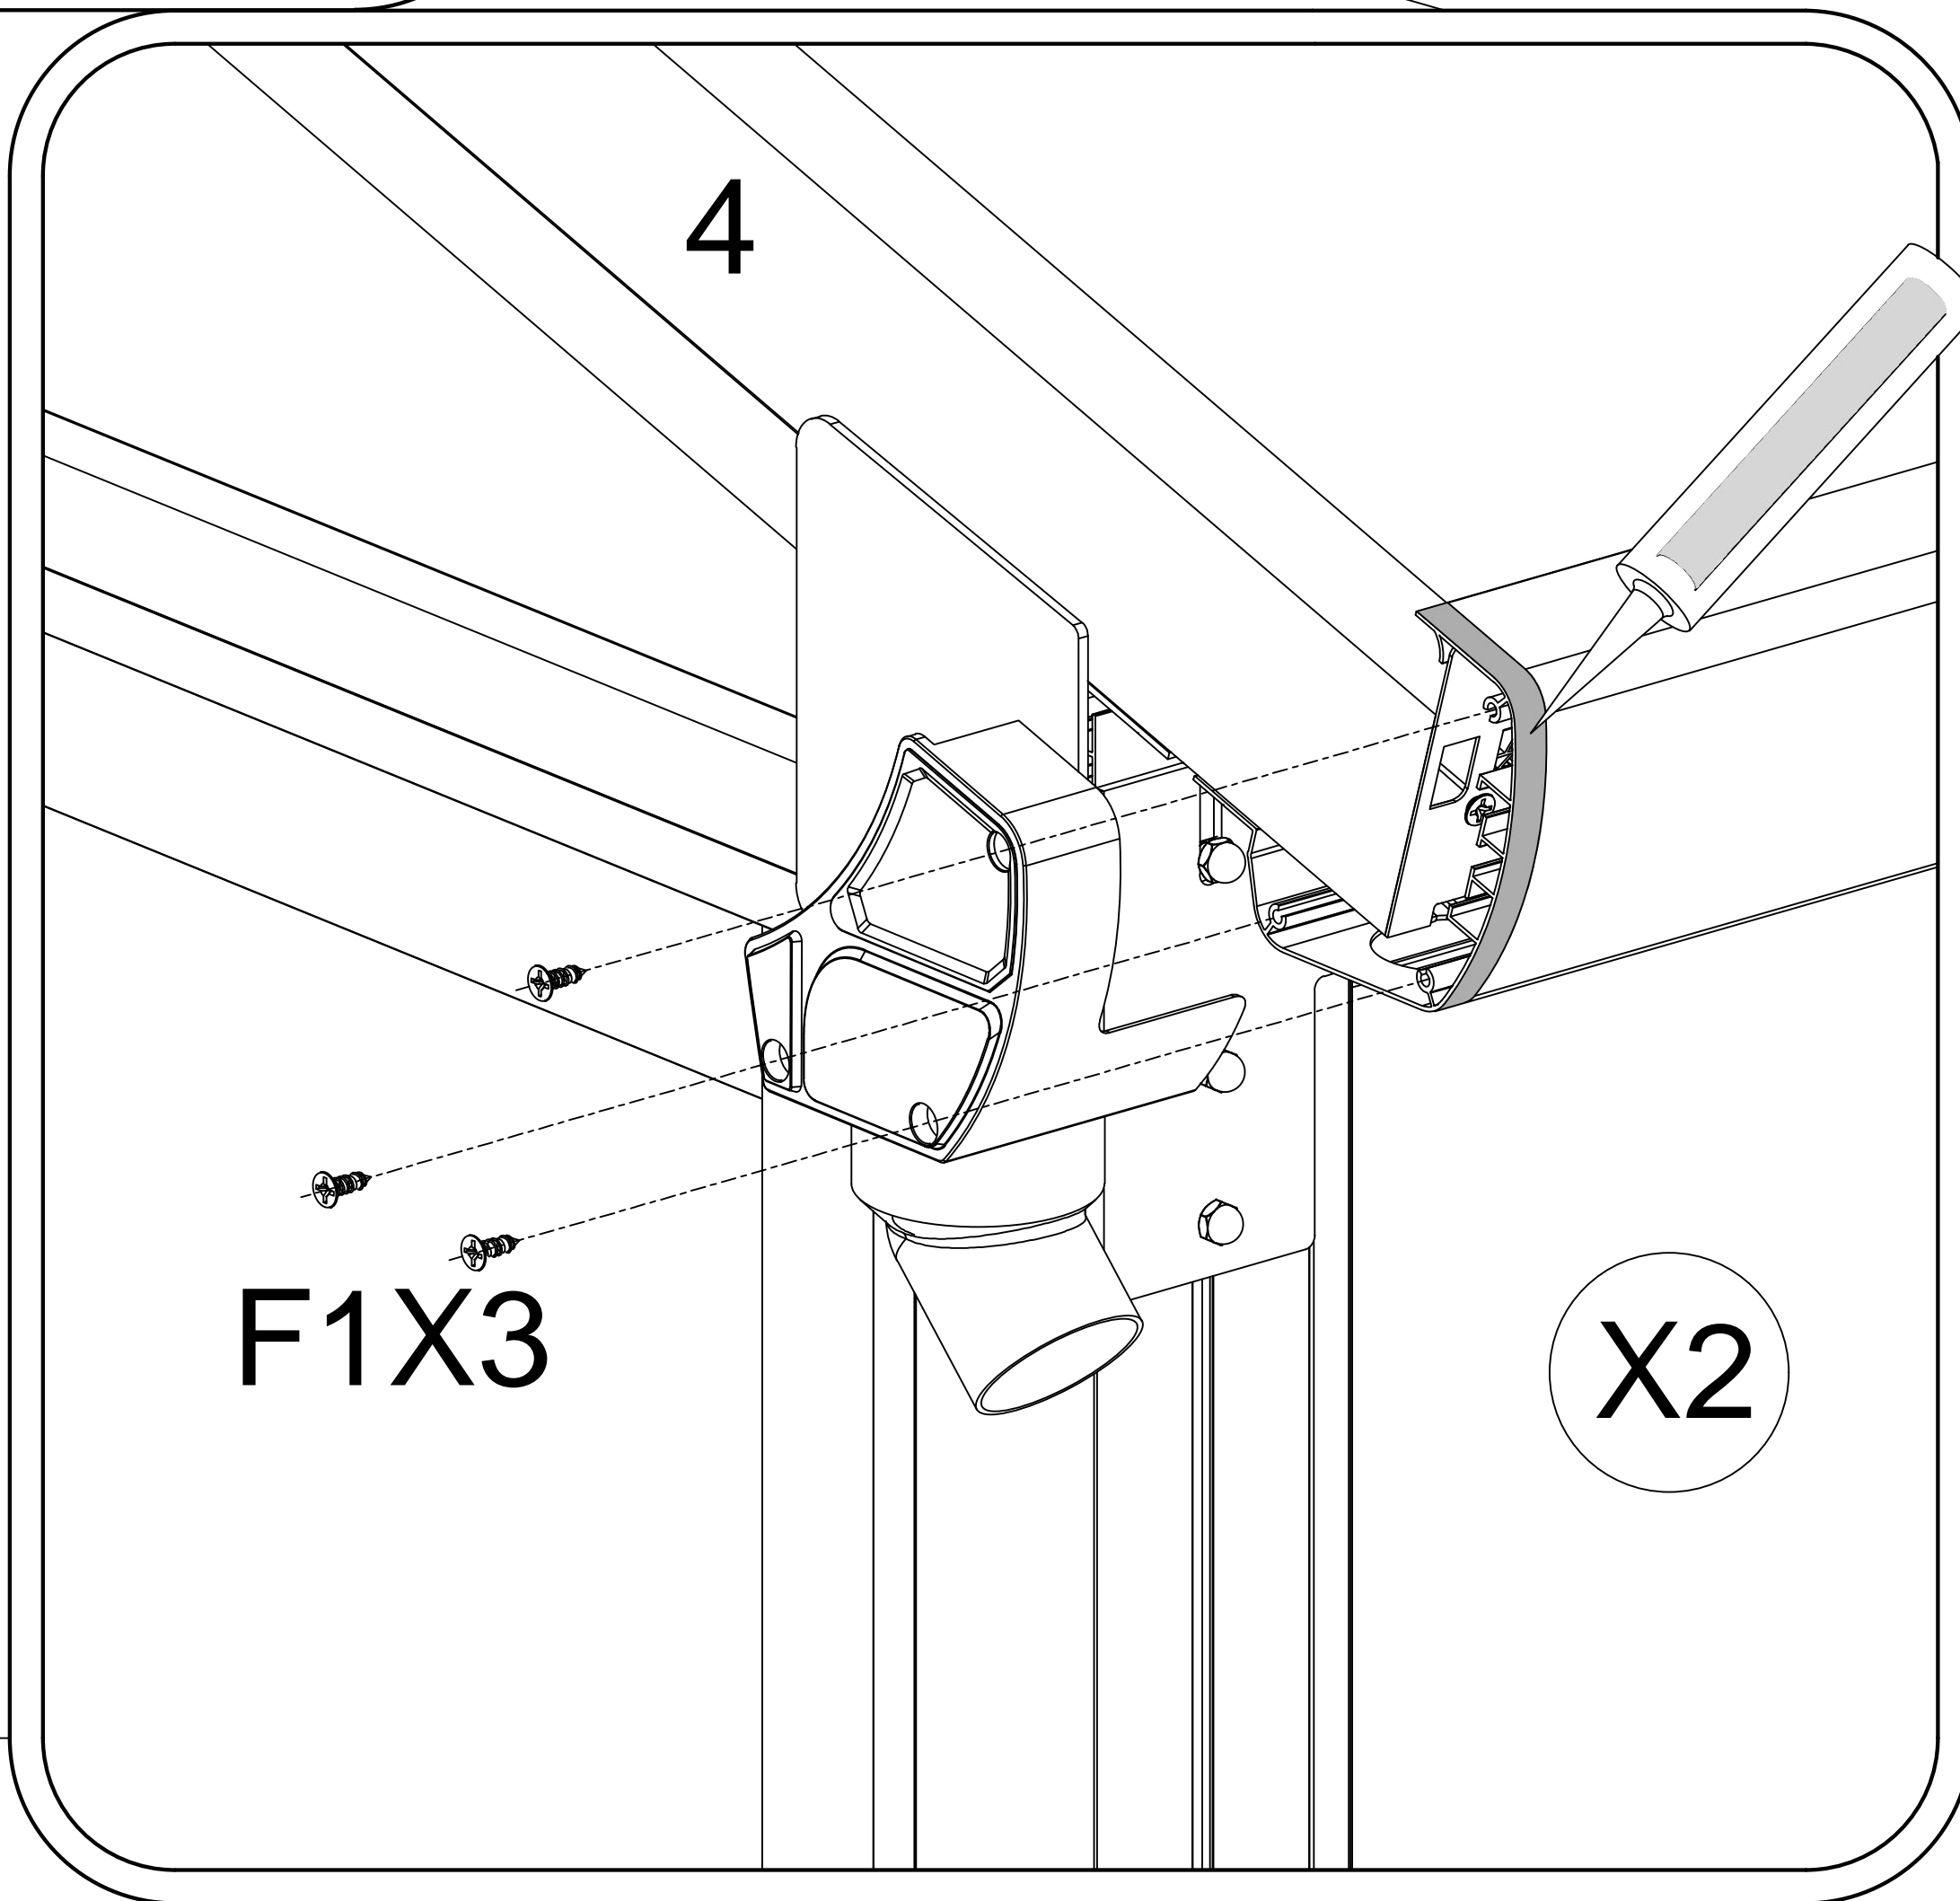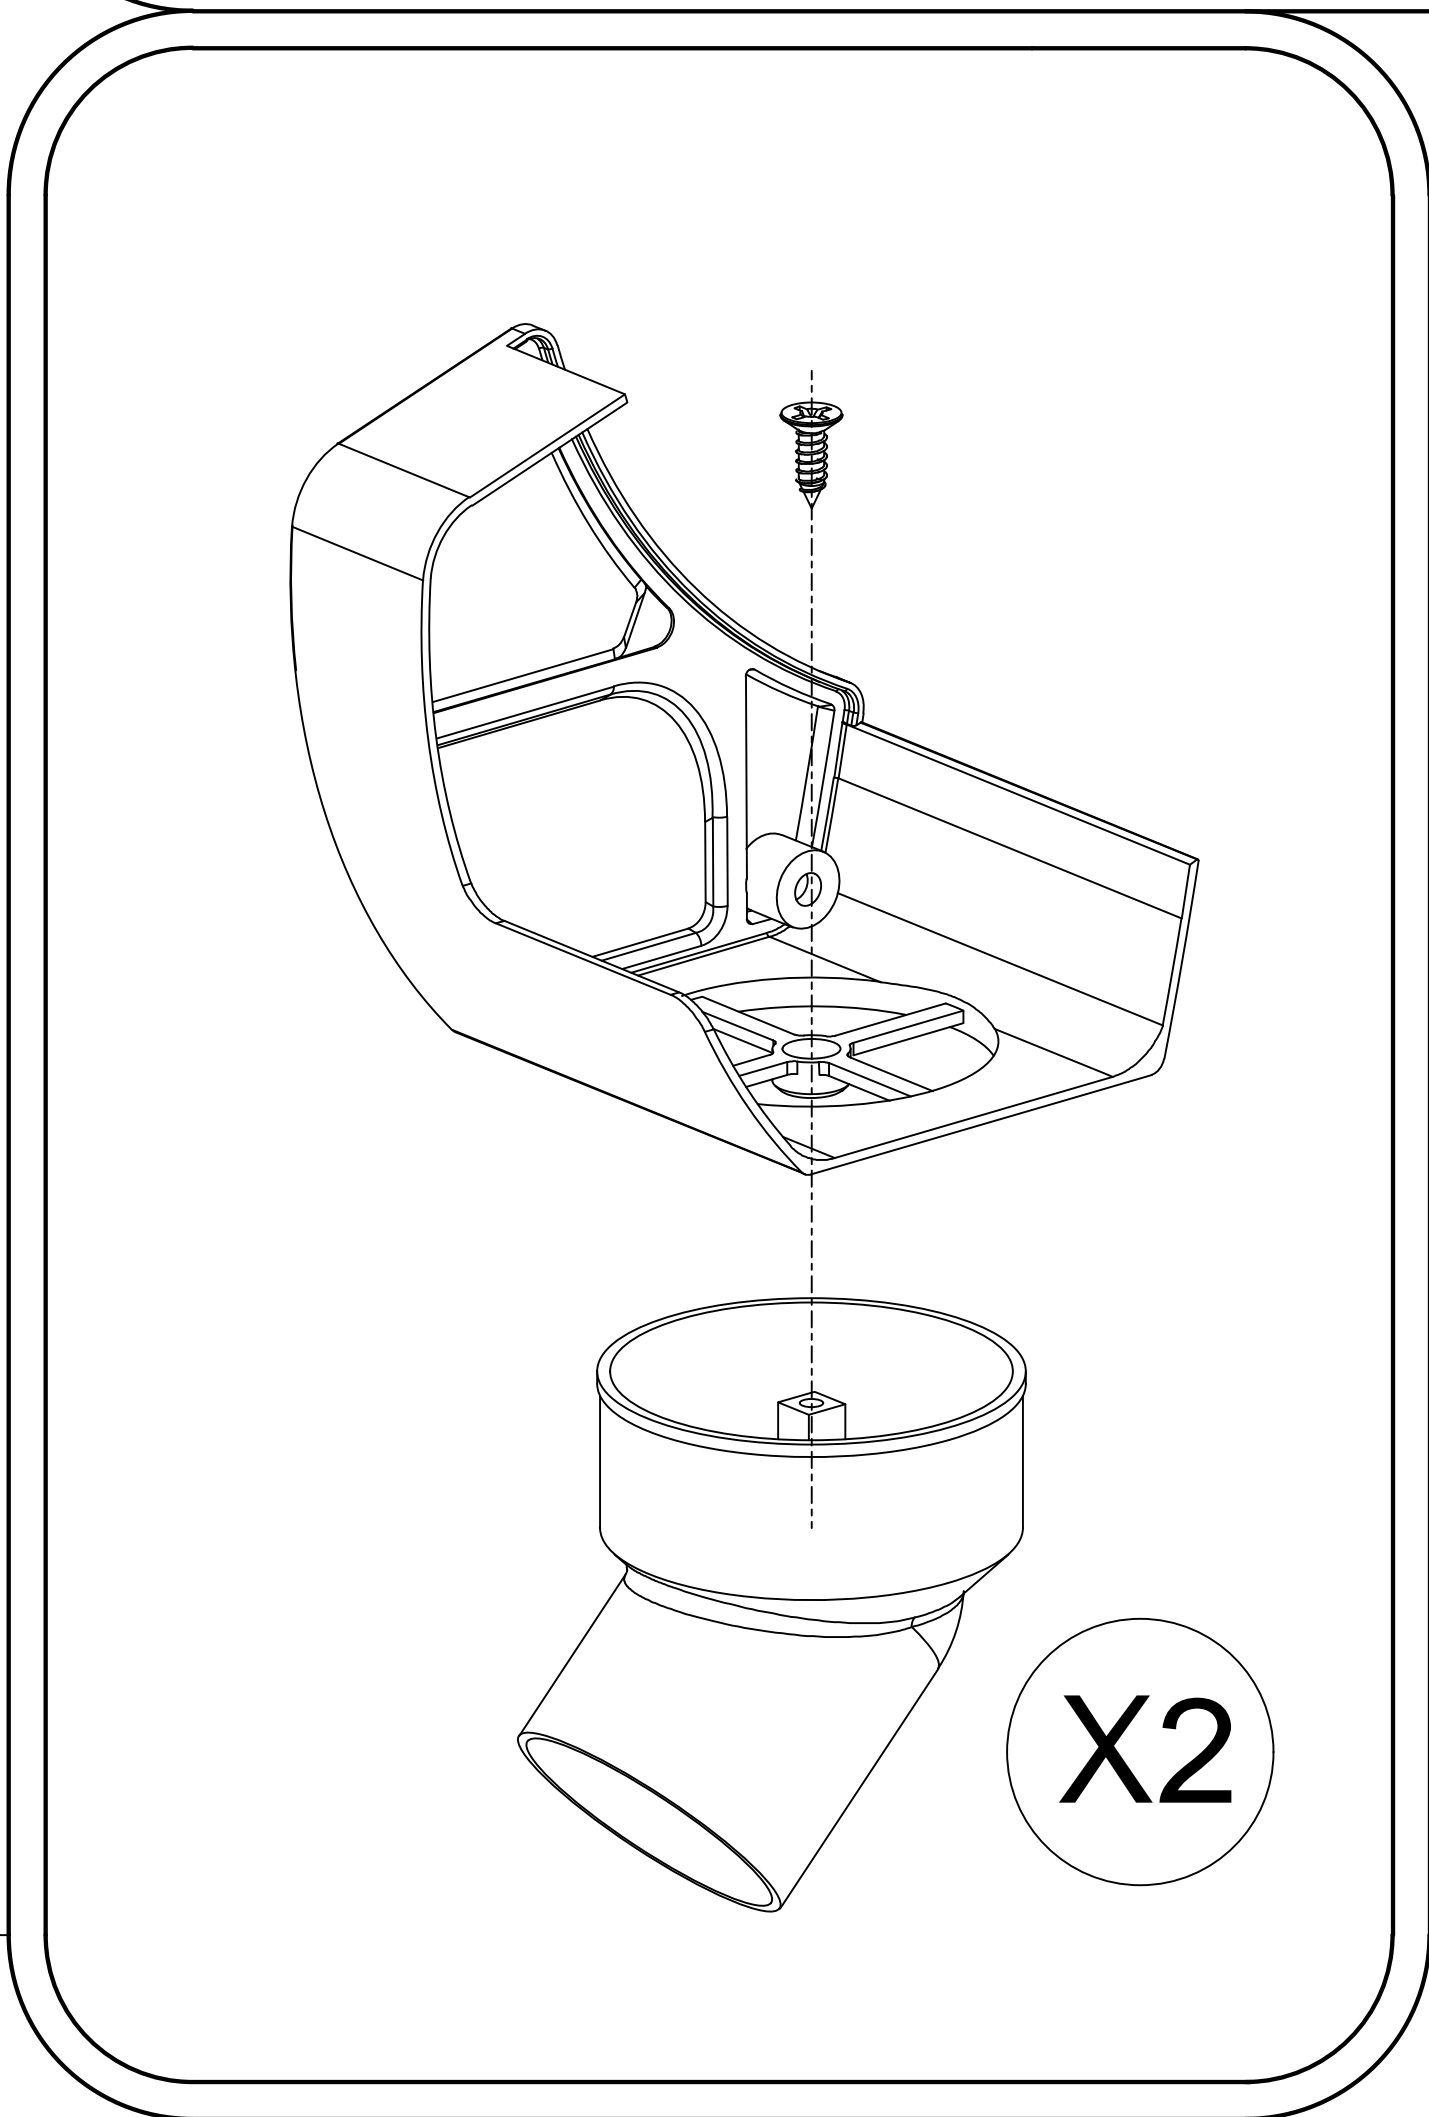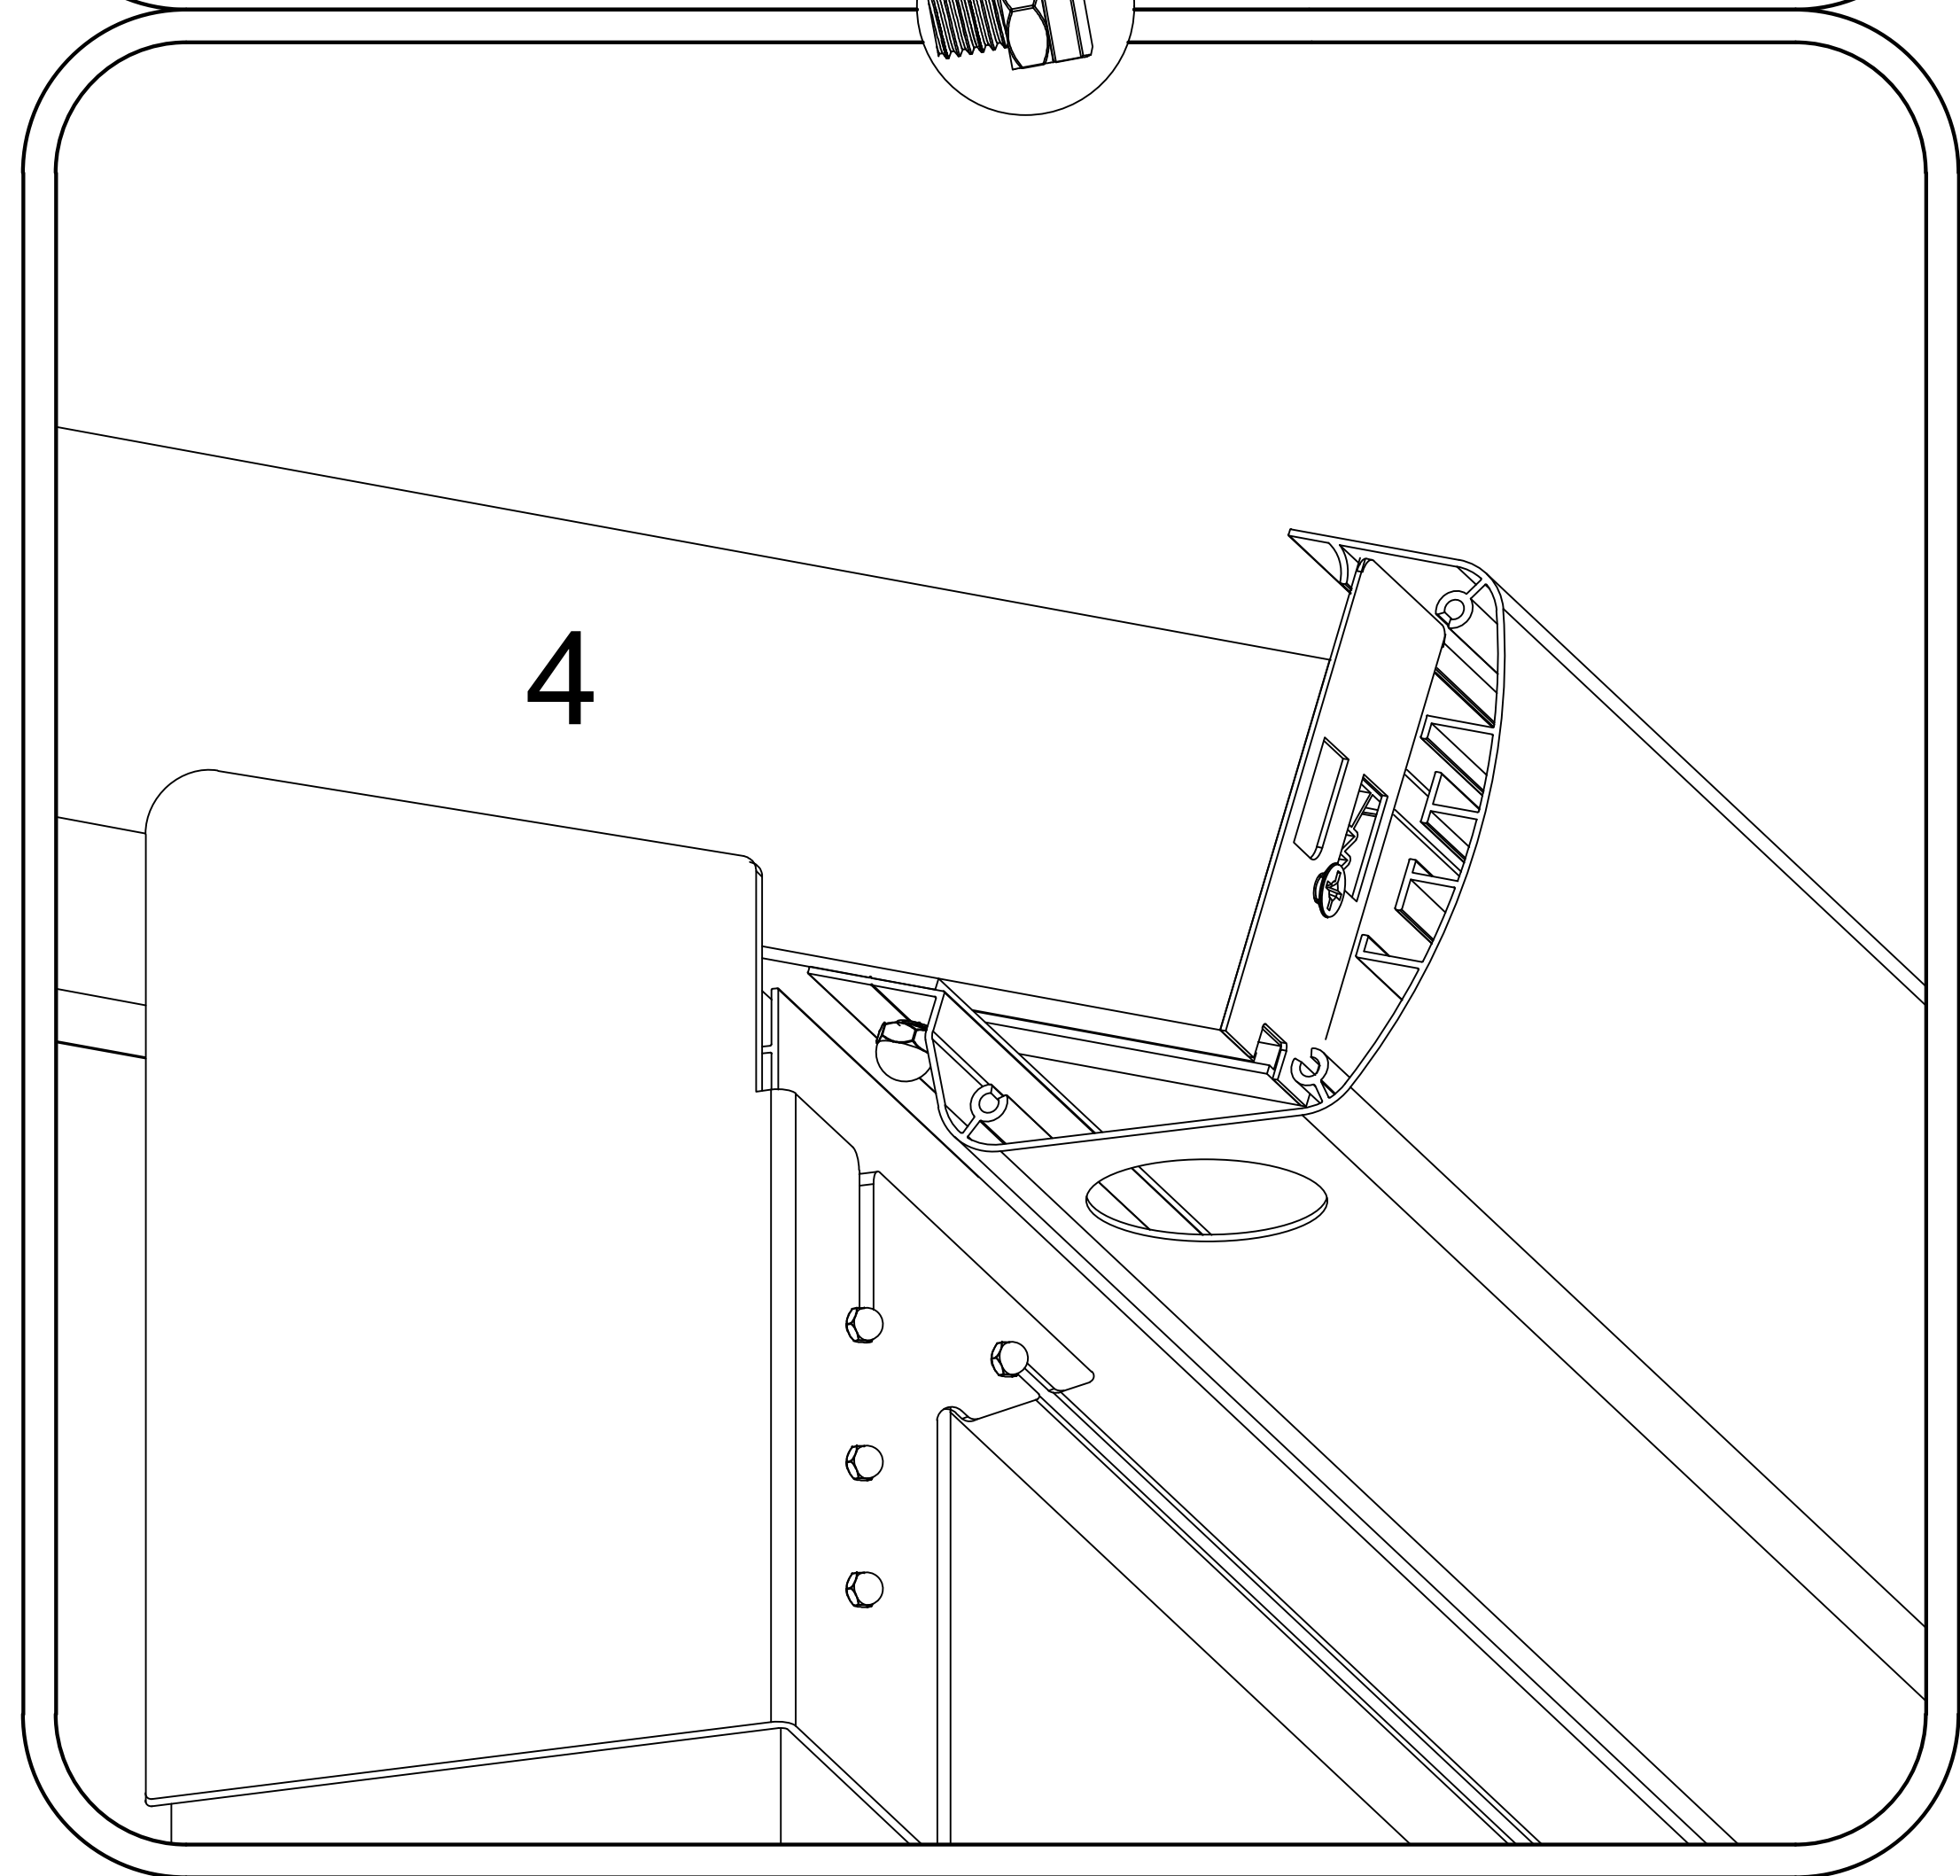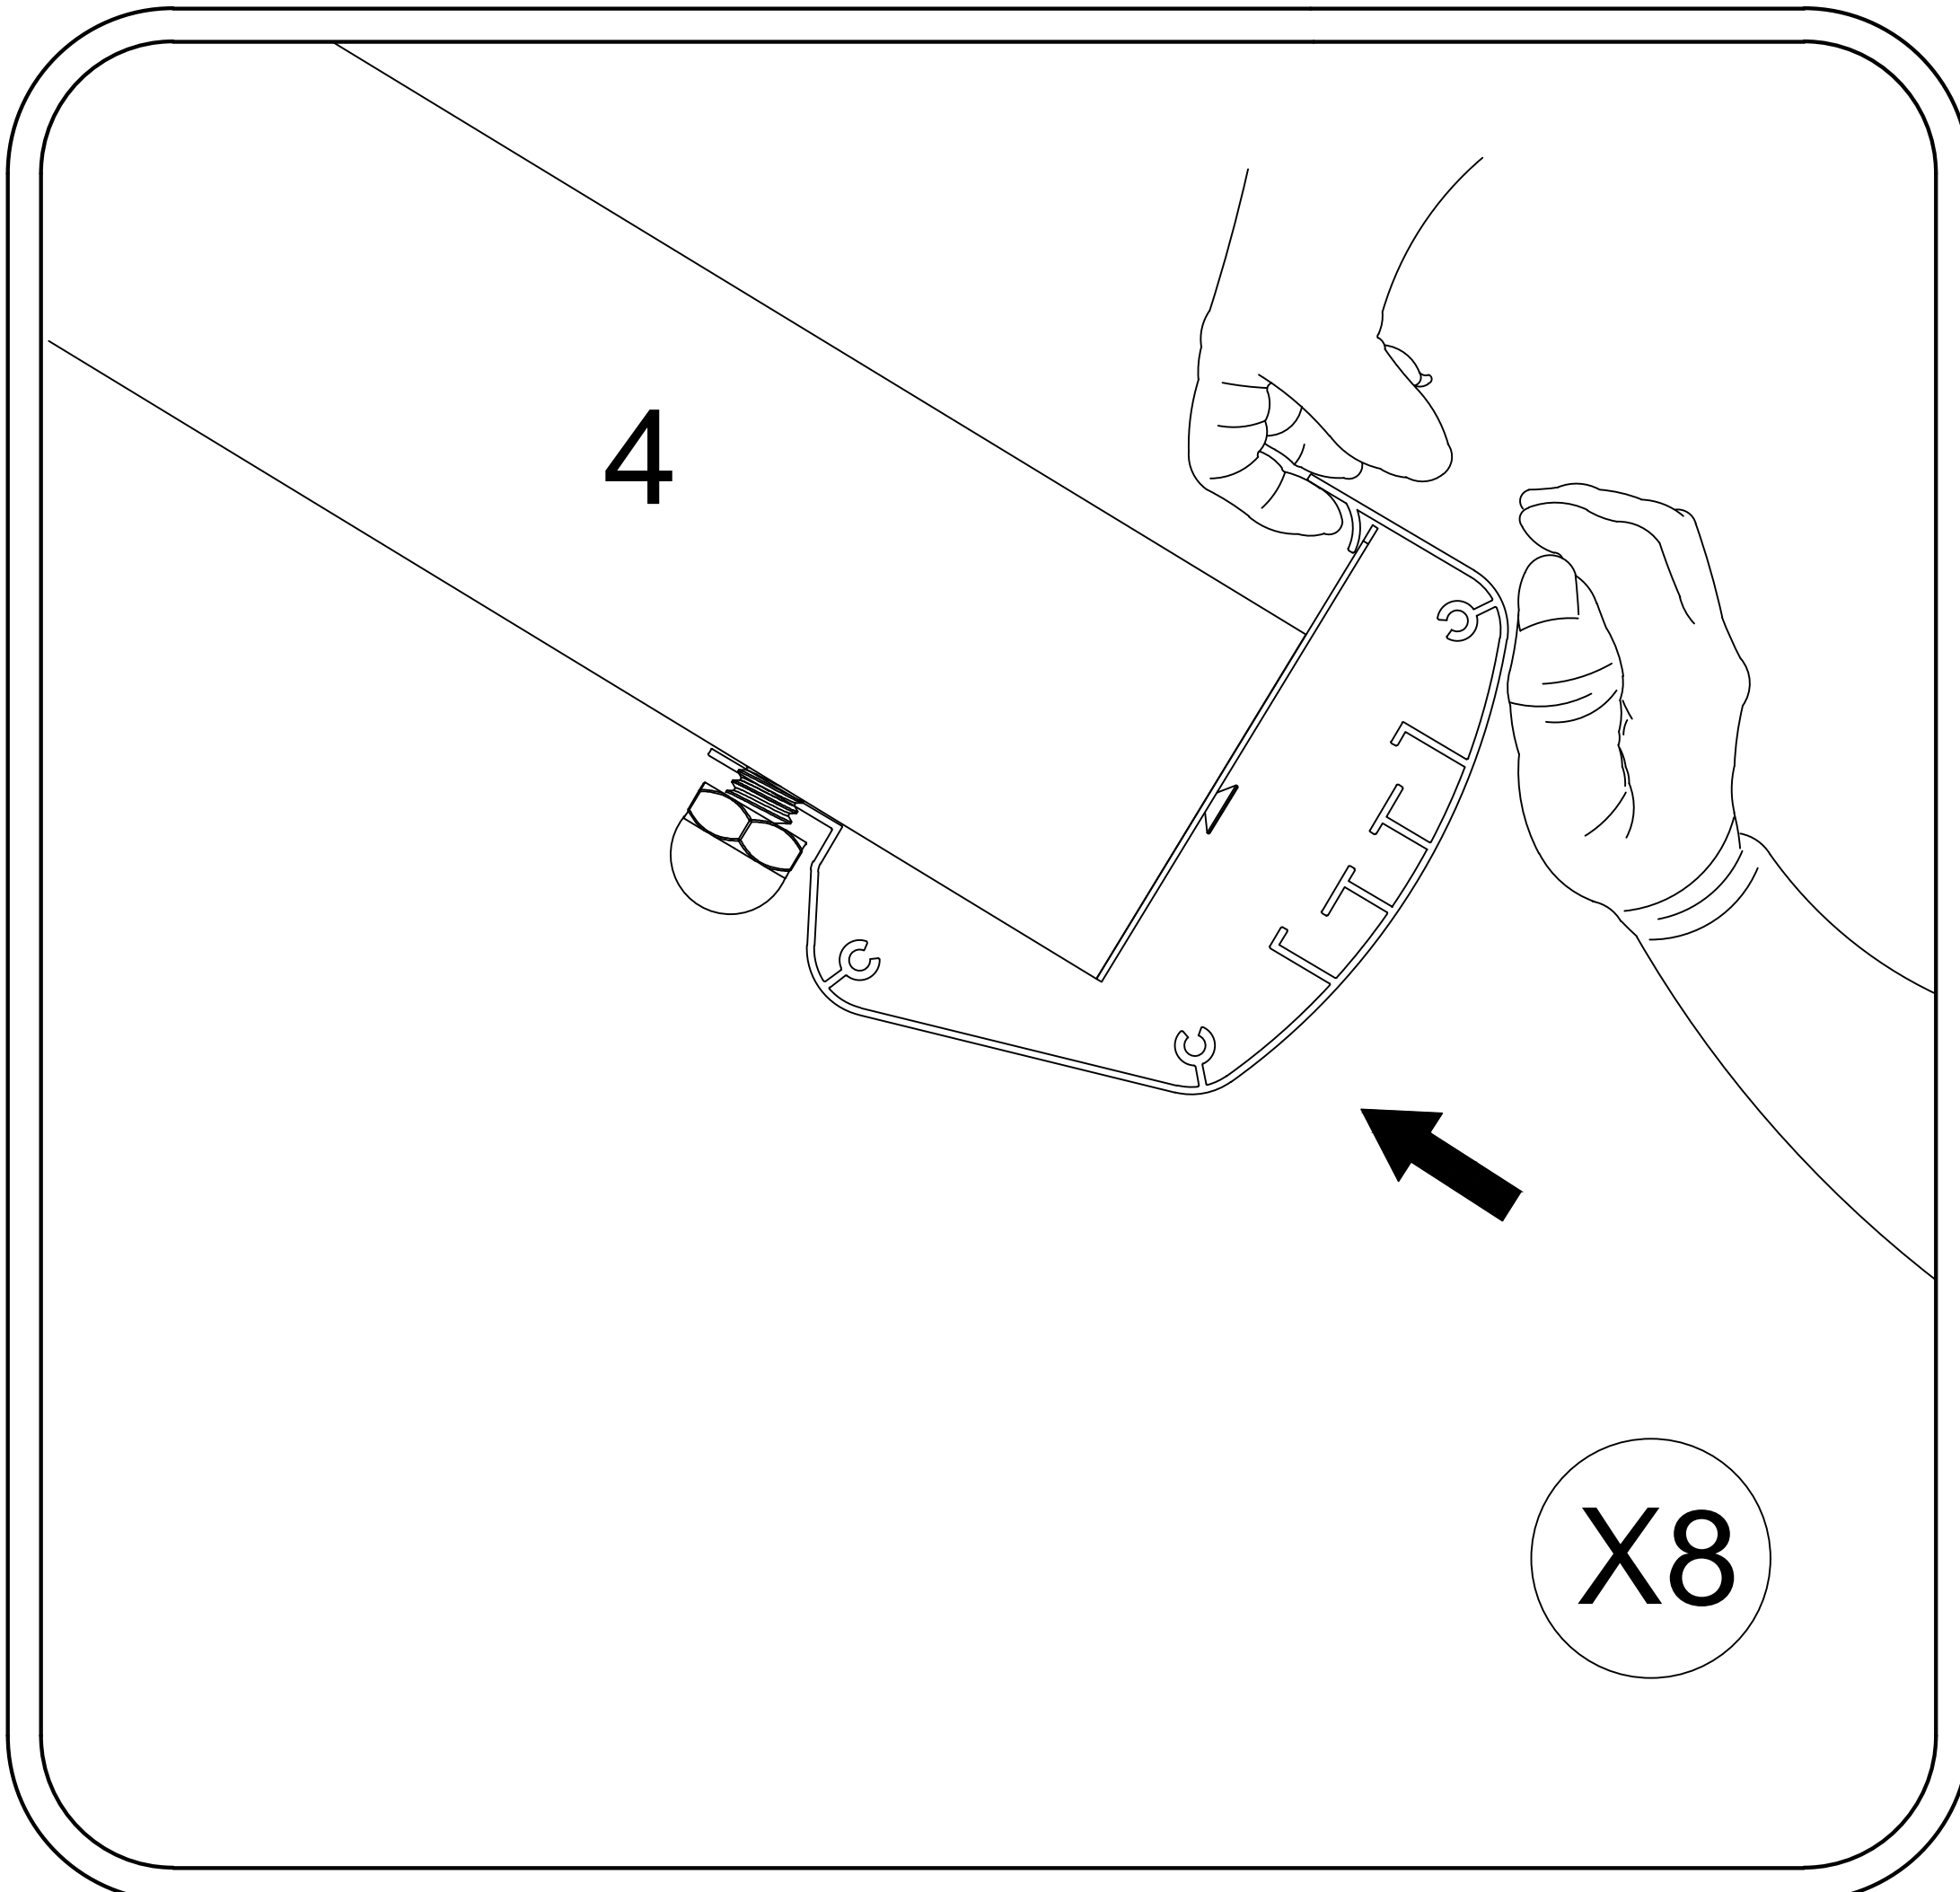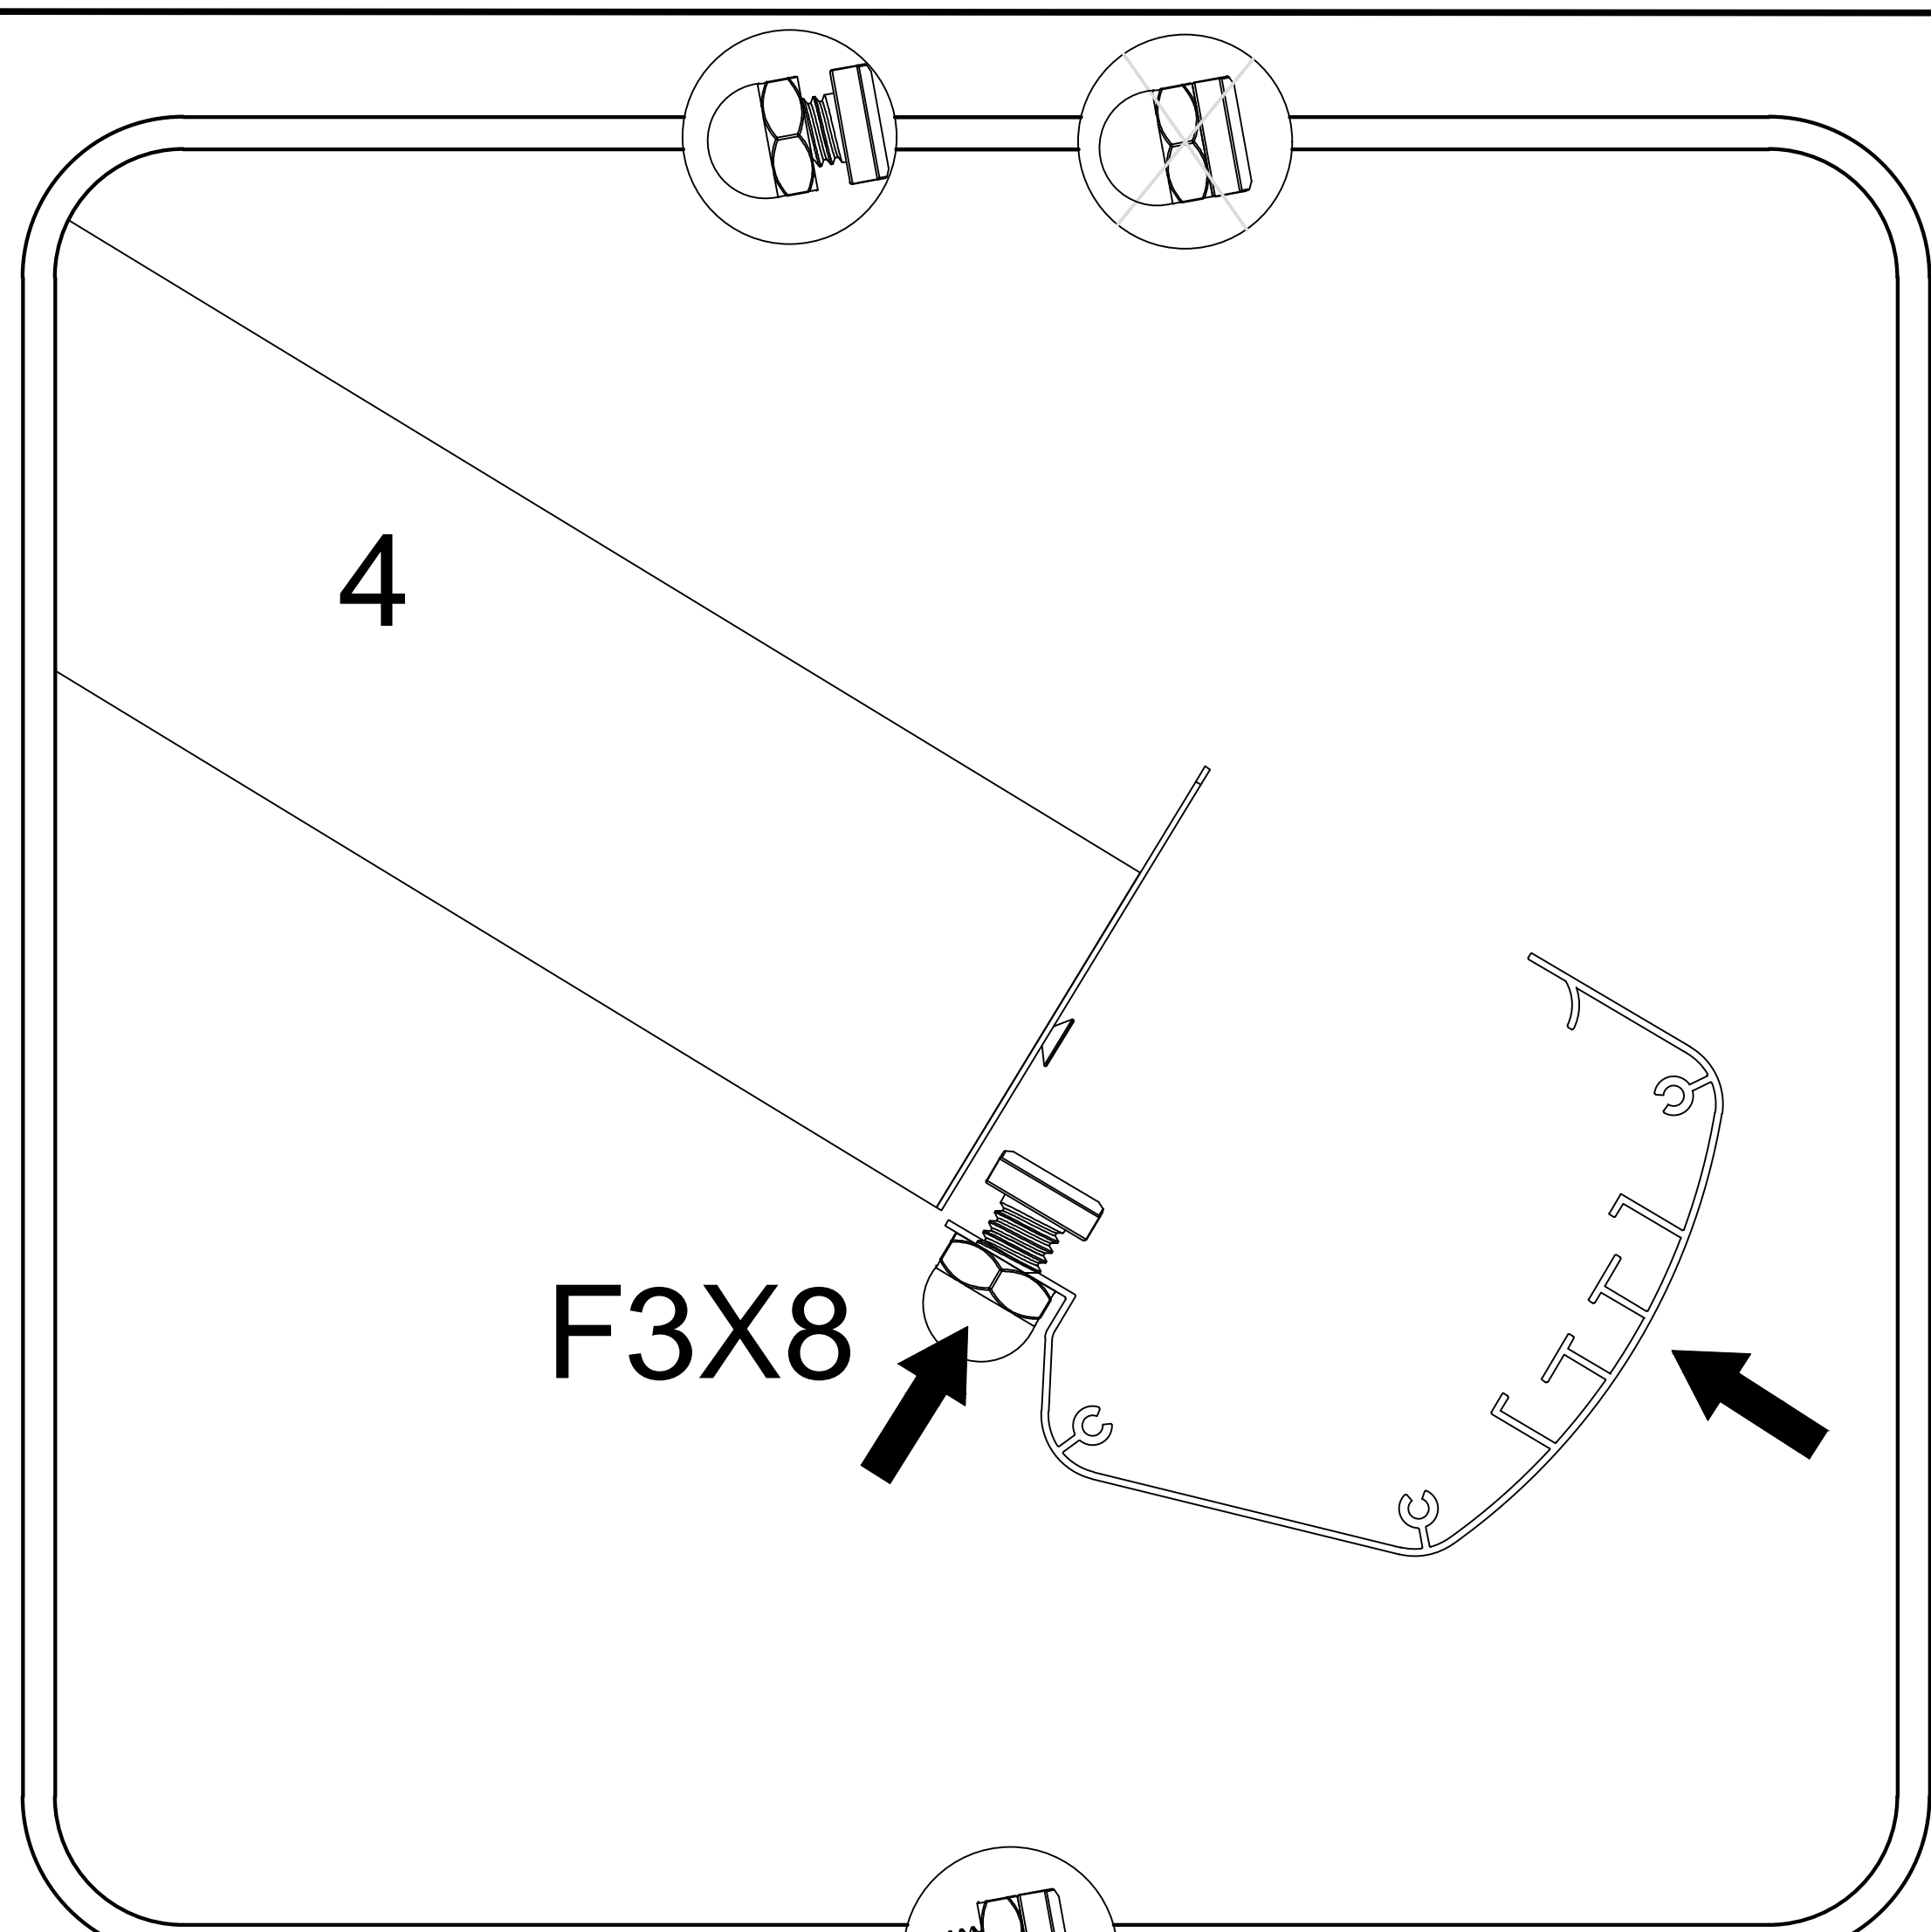










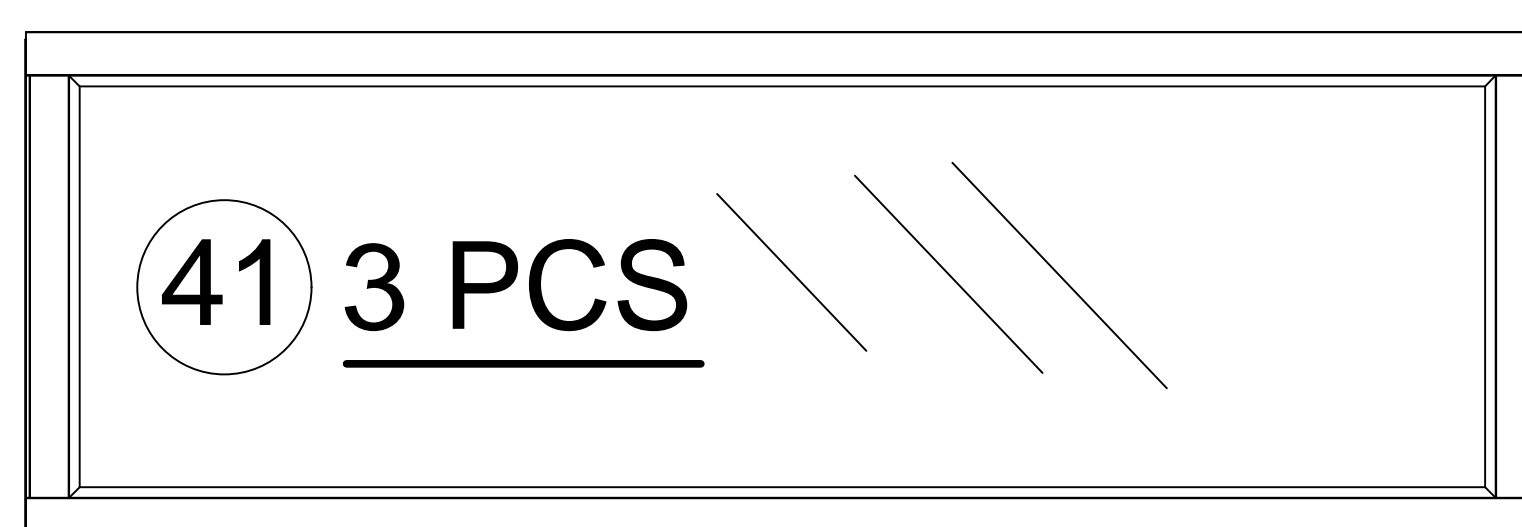
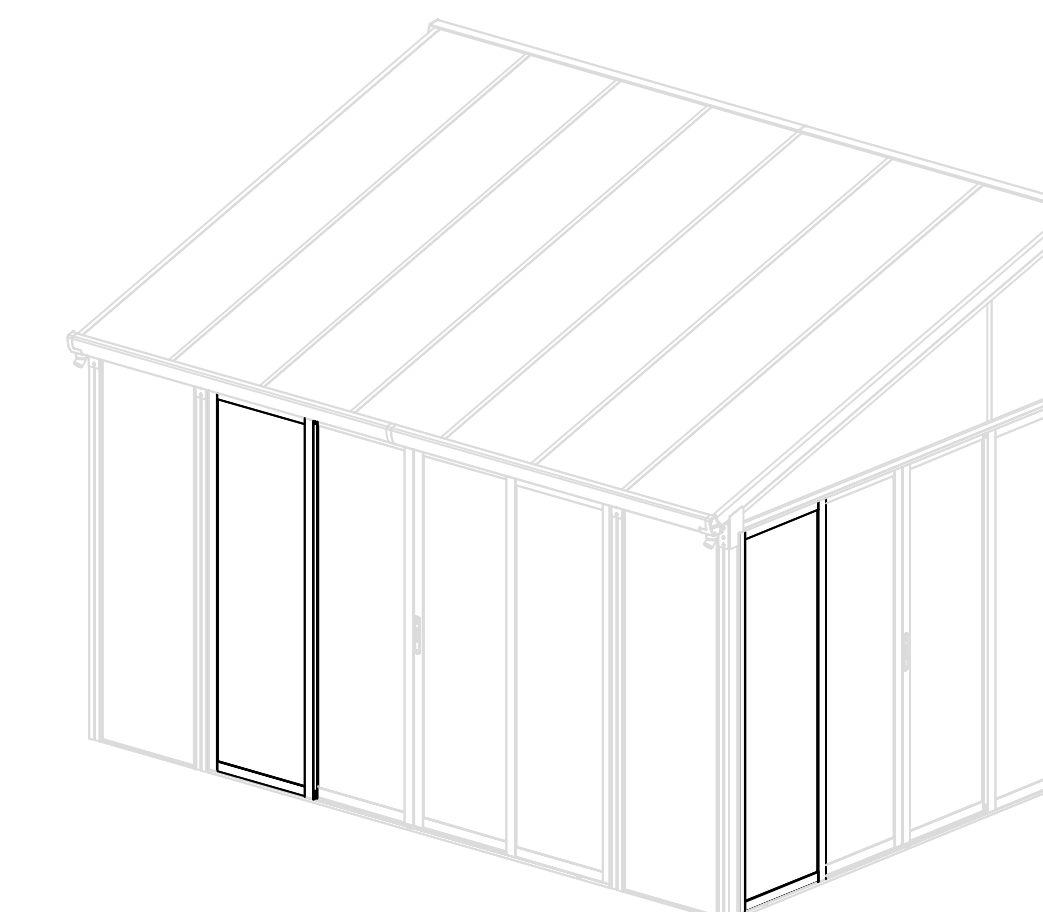


39 6 PCS

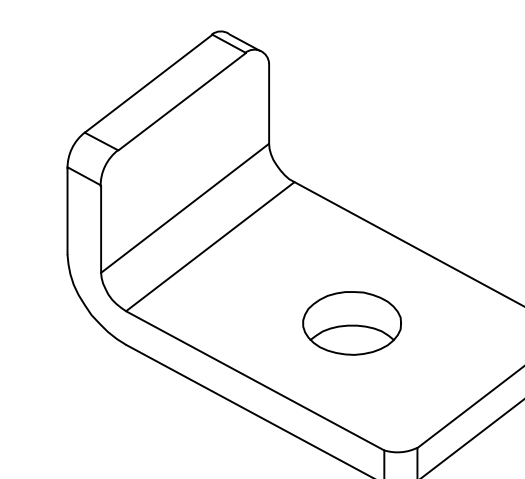


F4 6 PCS  
ST4.2X20

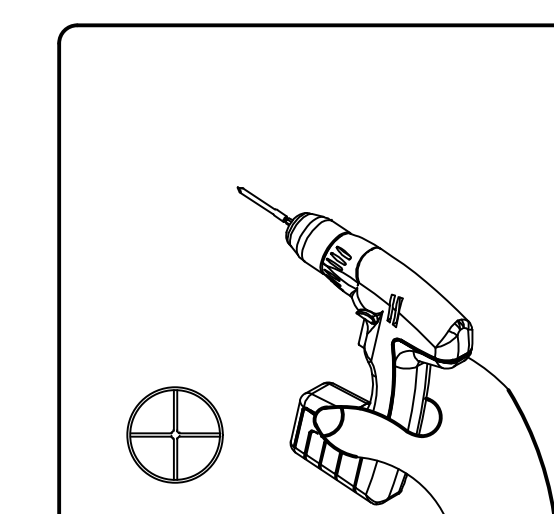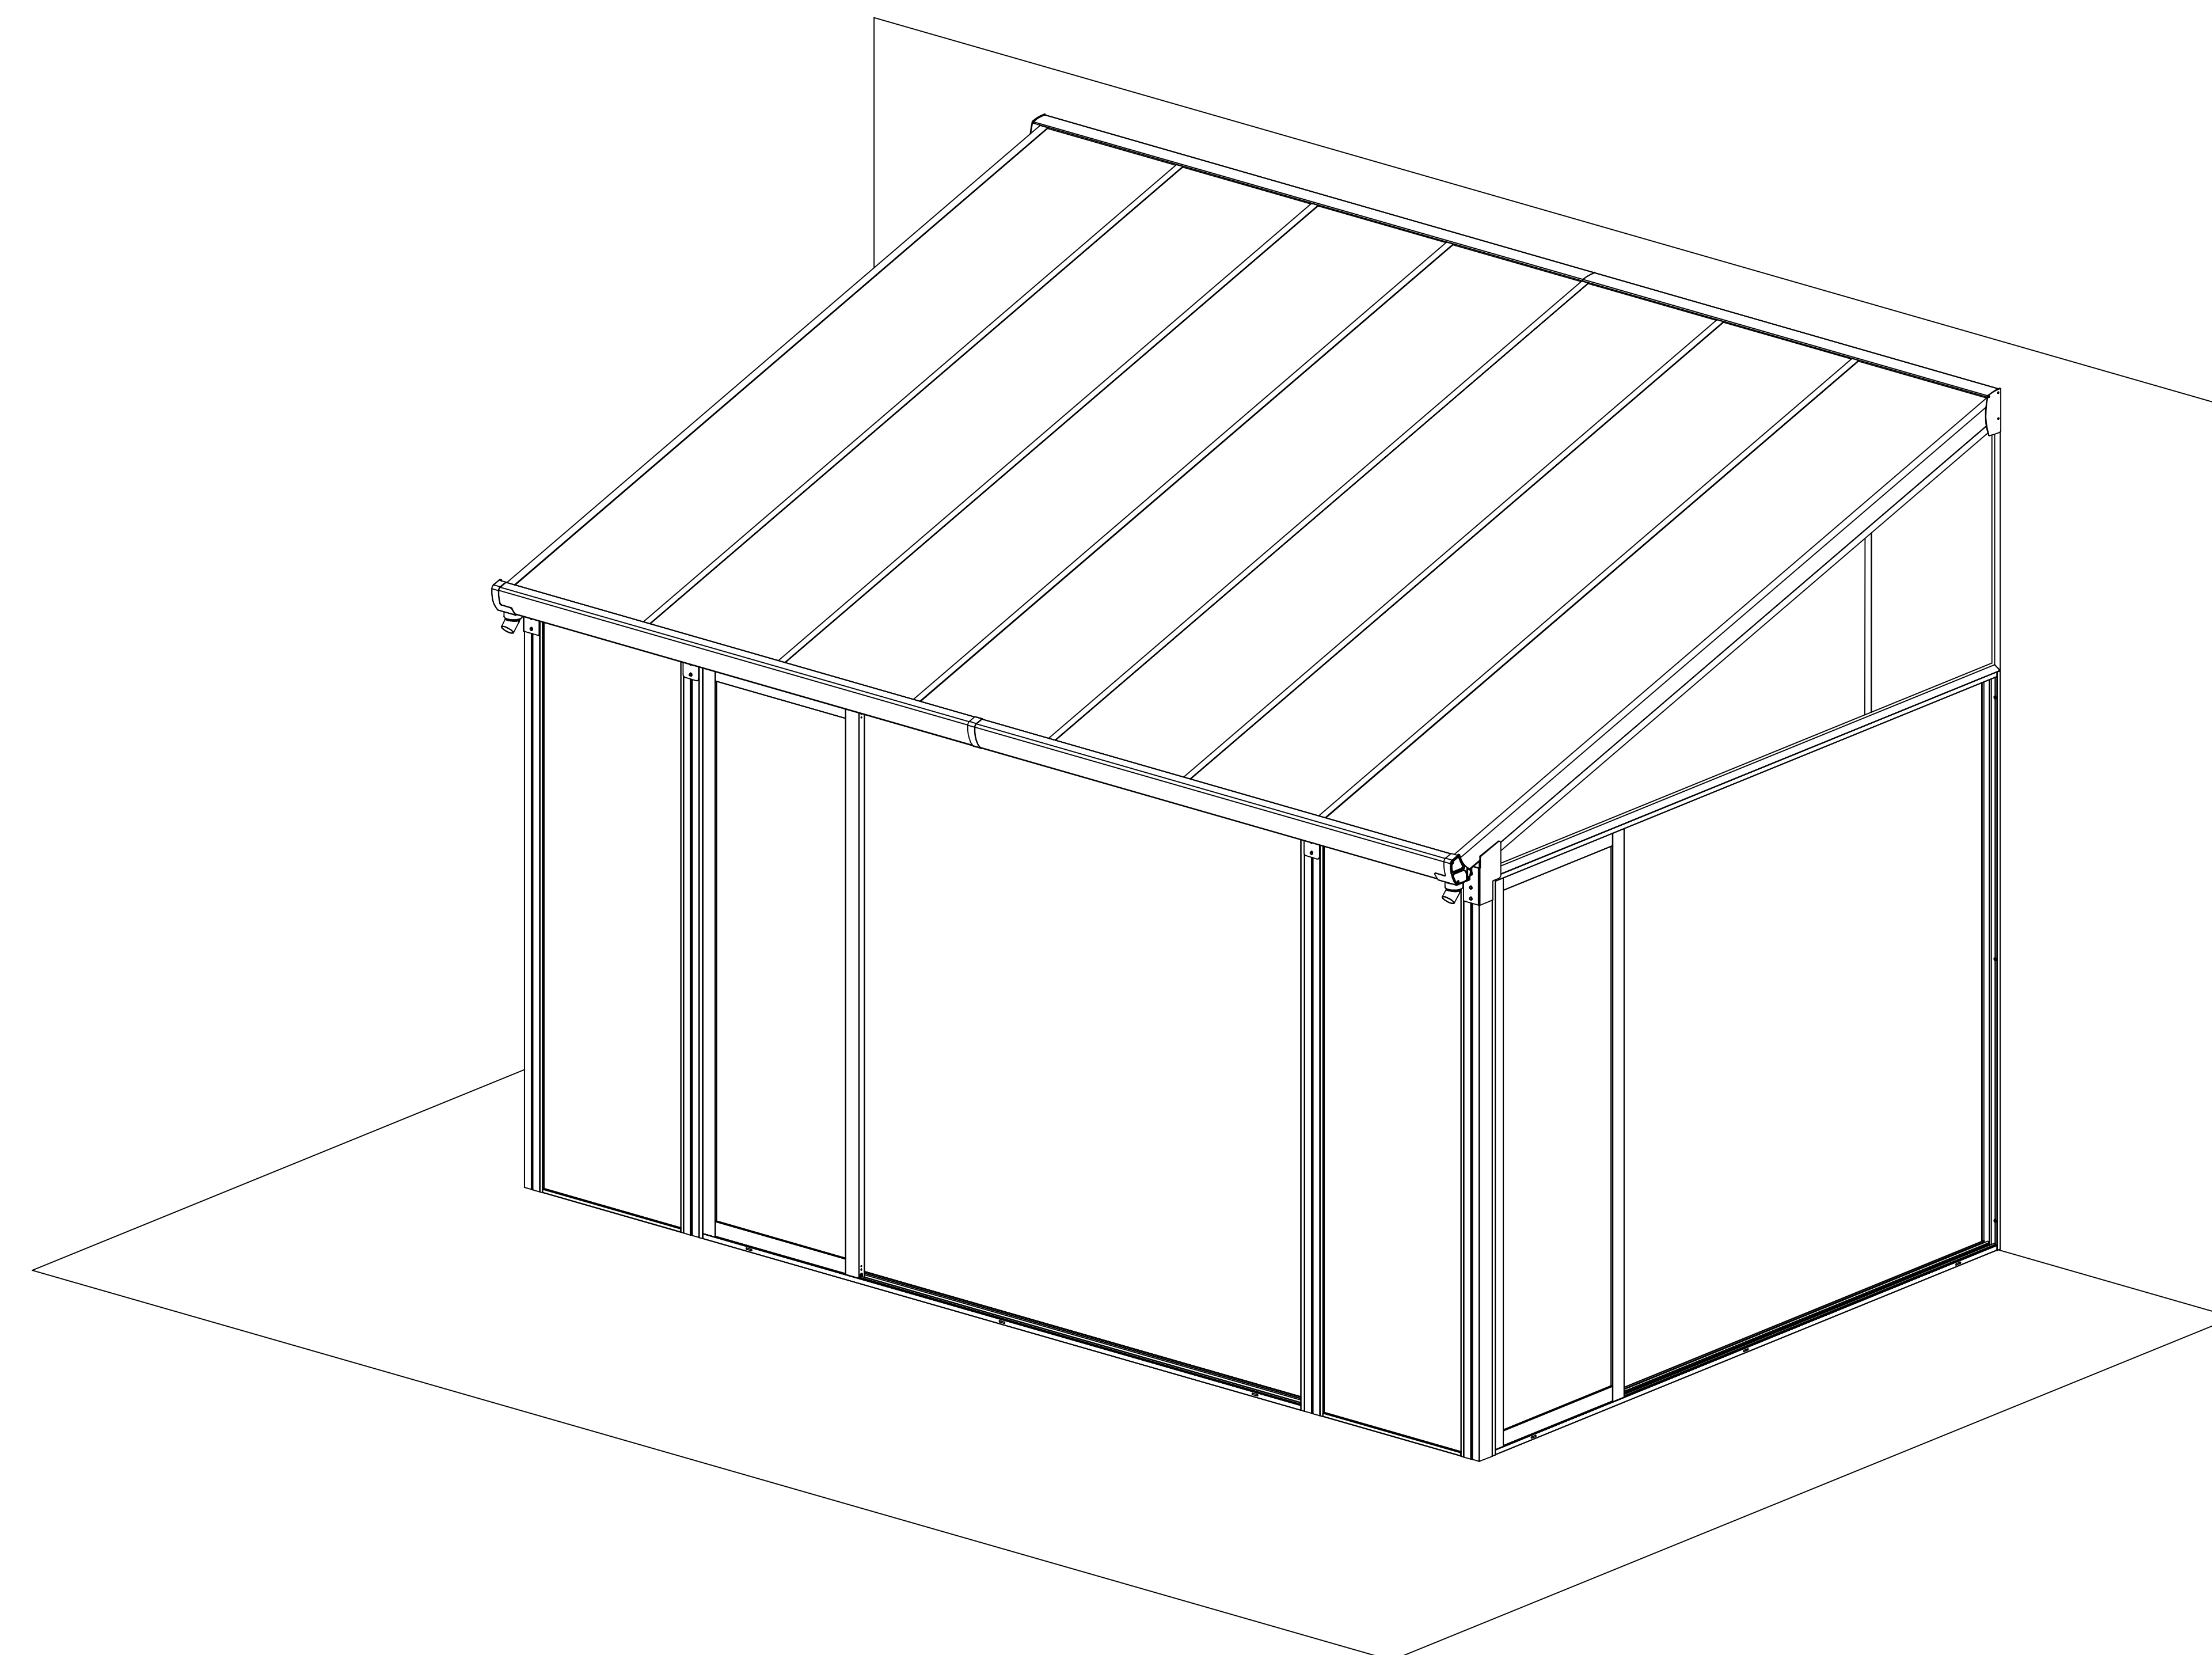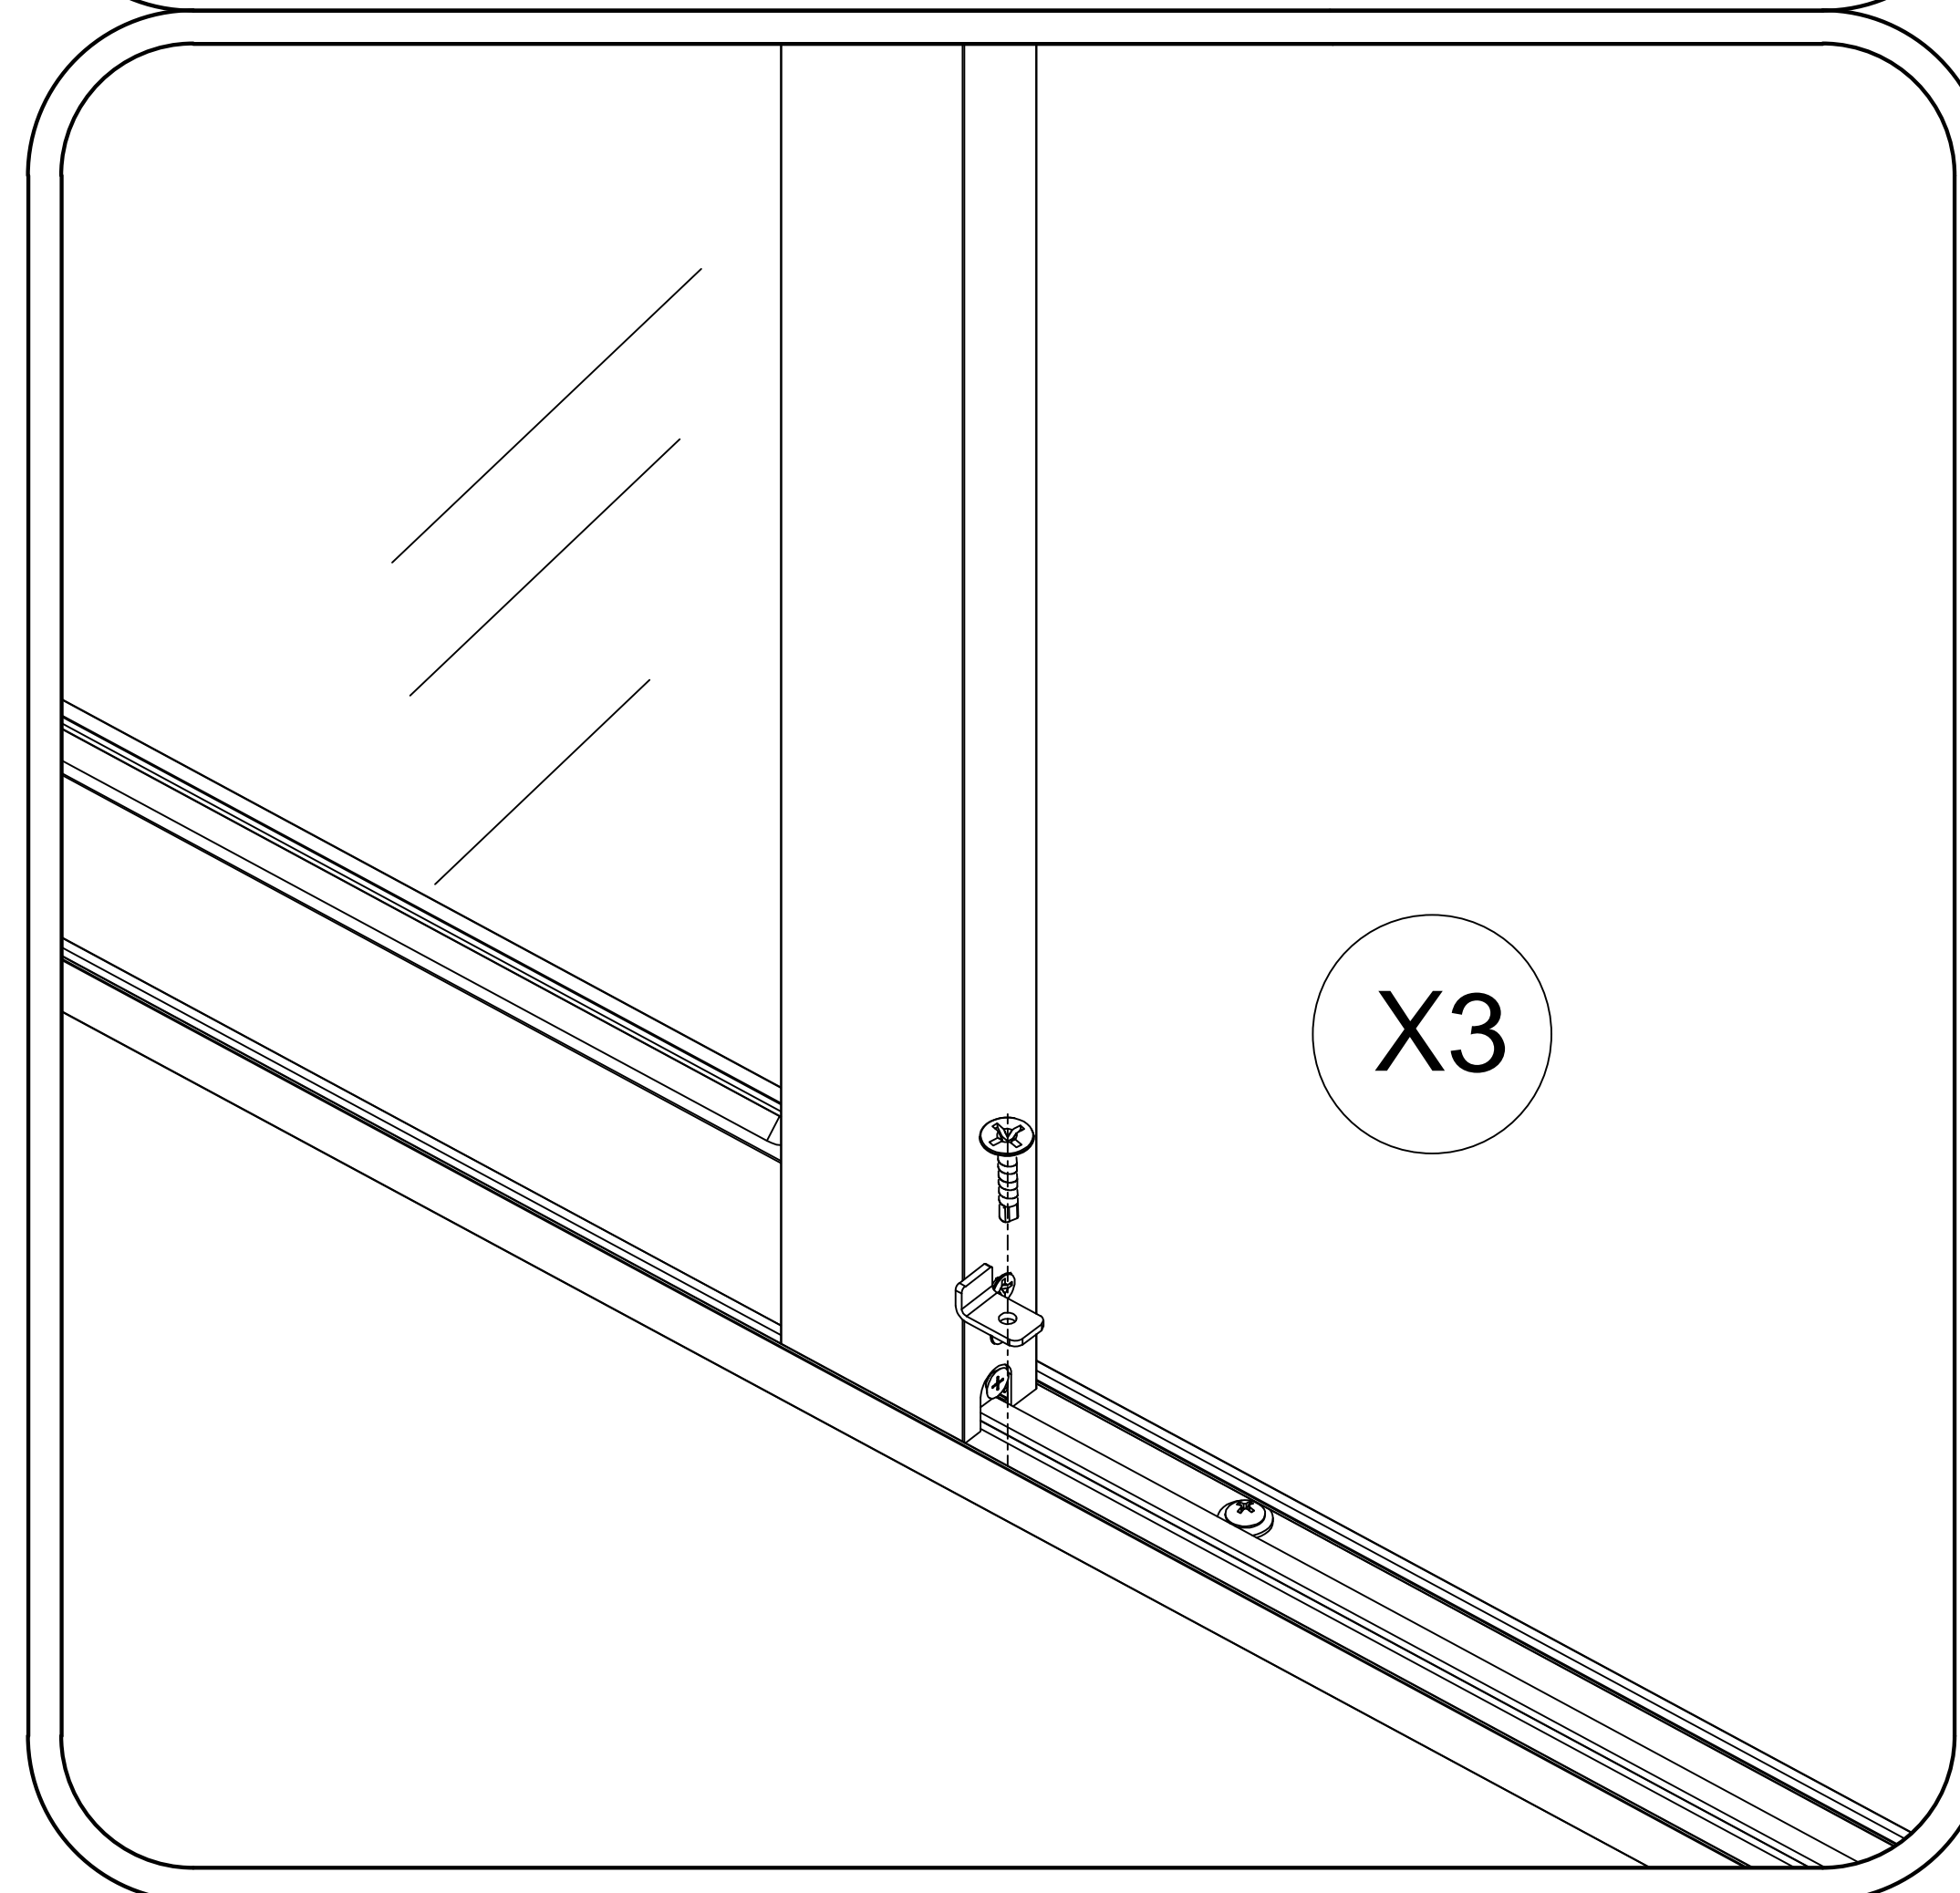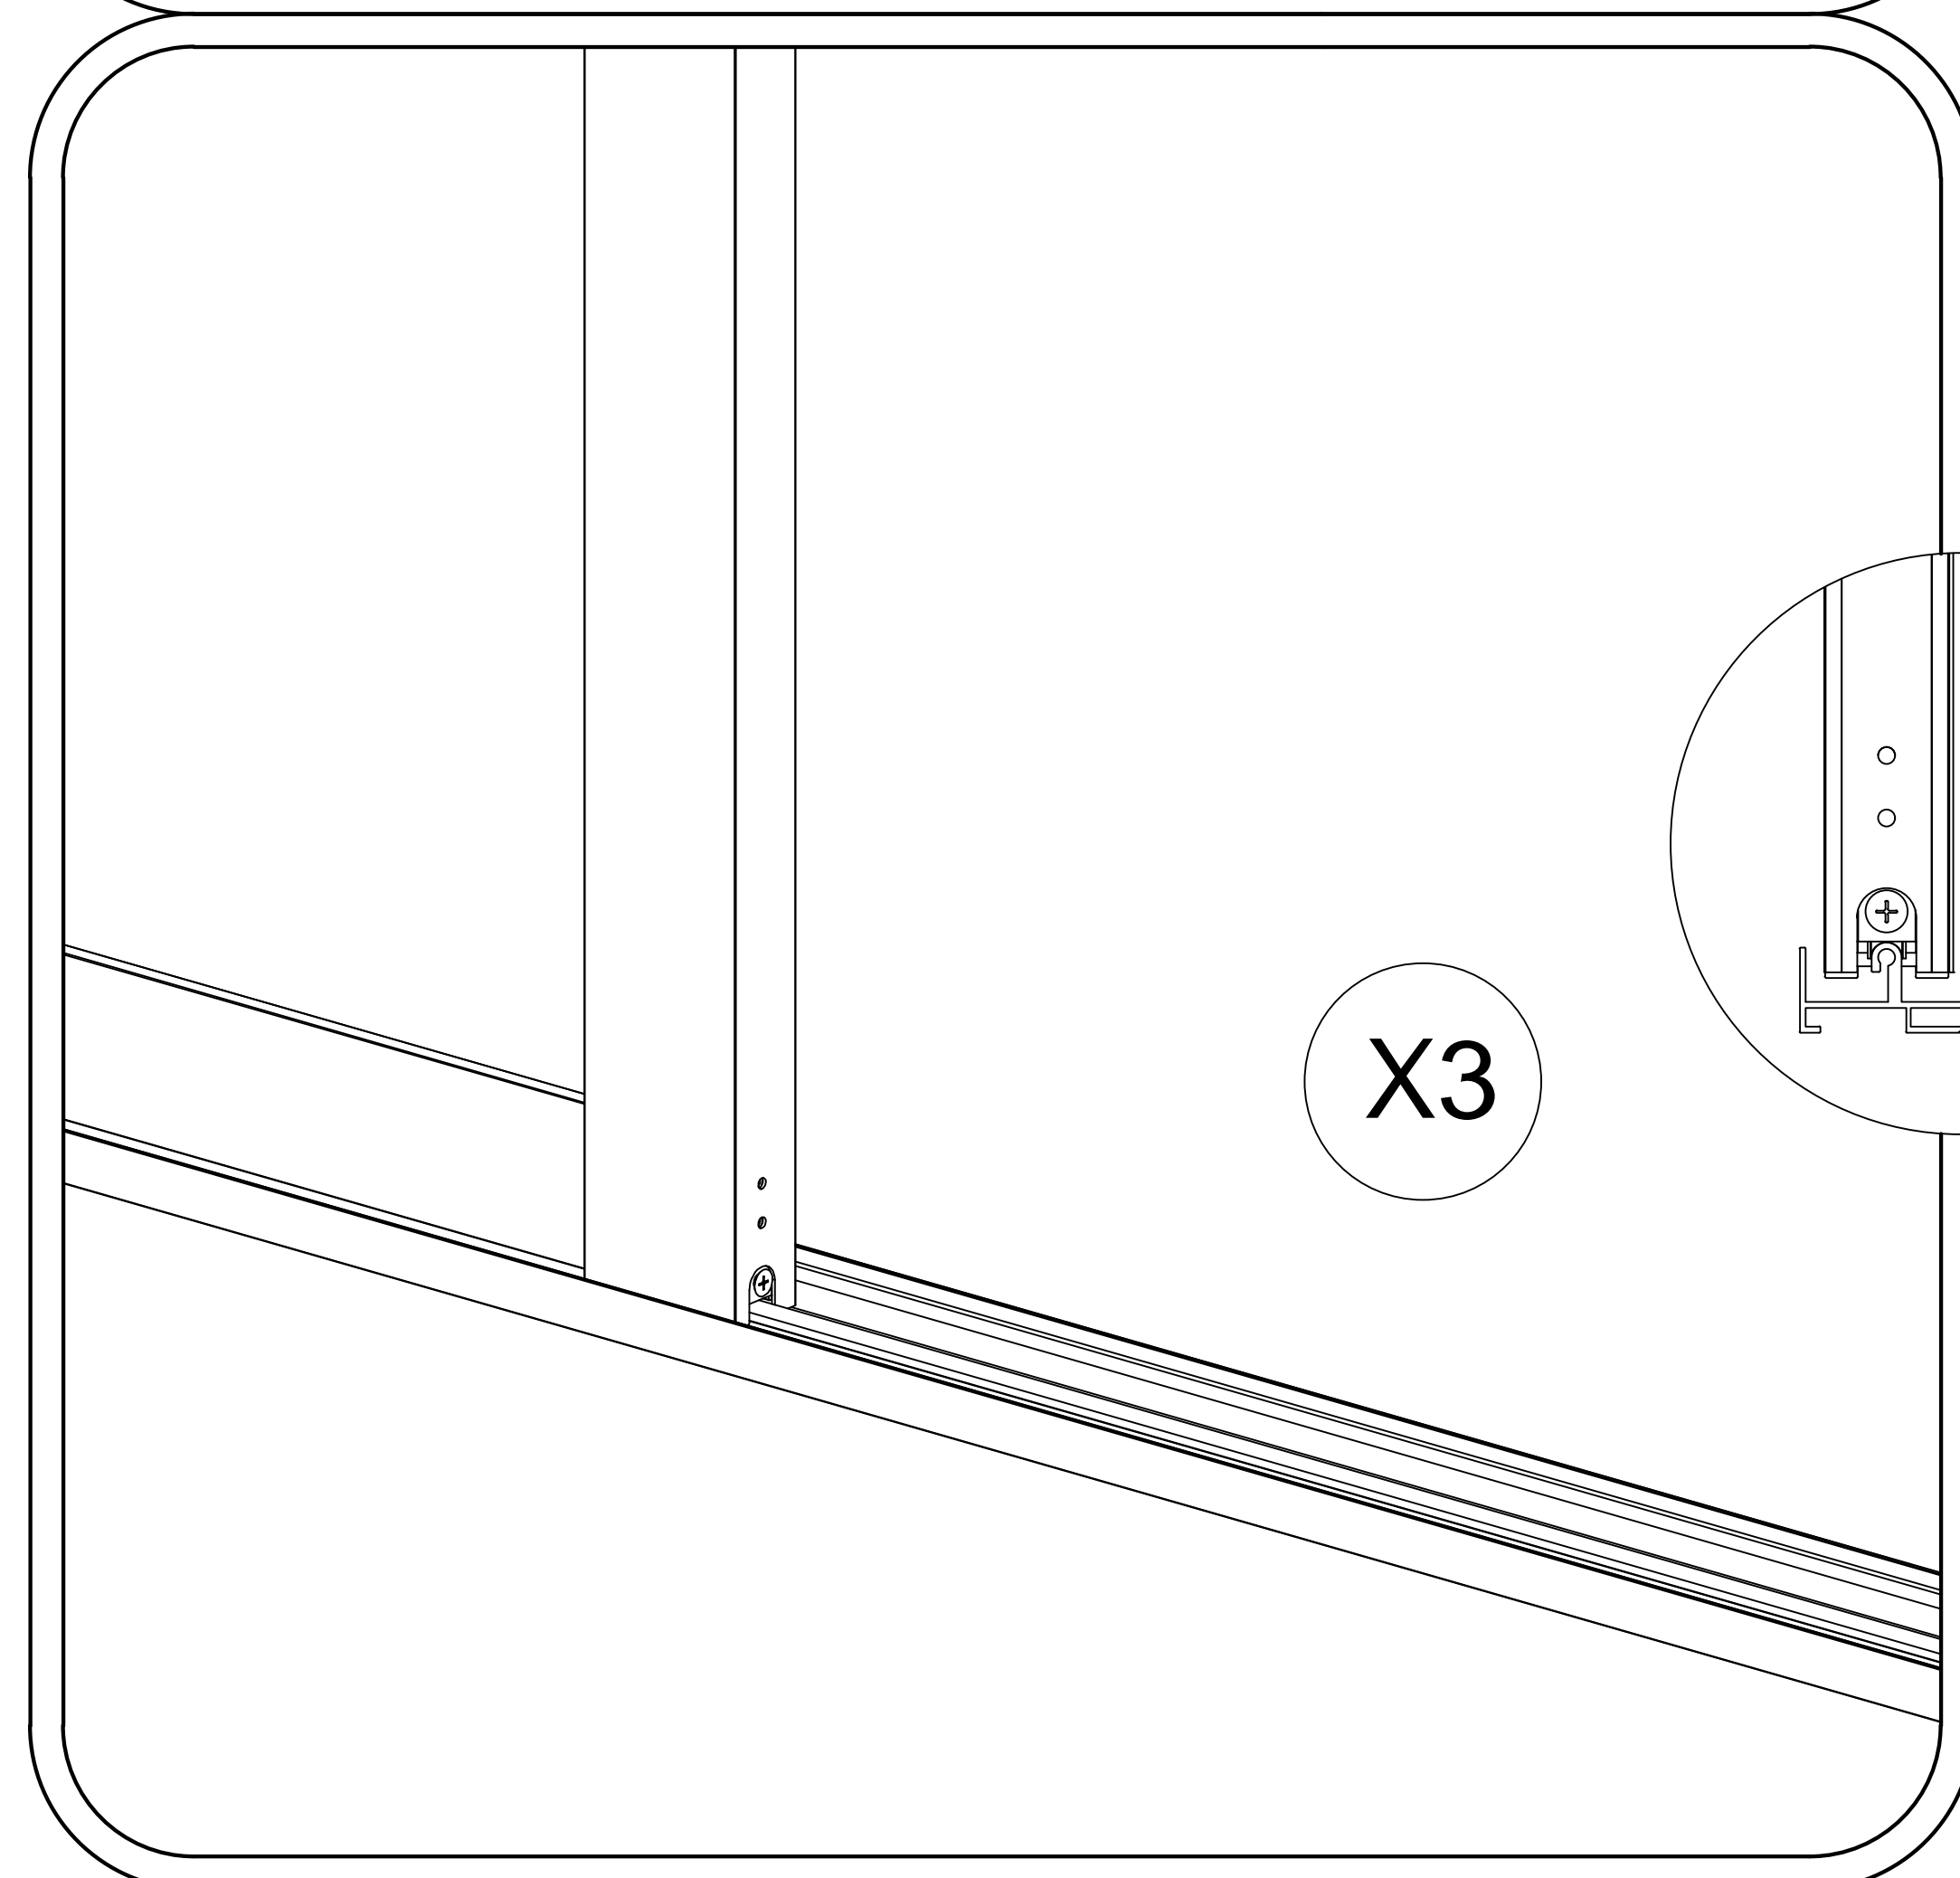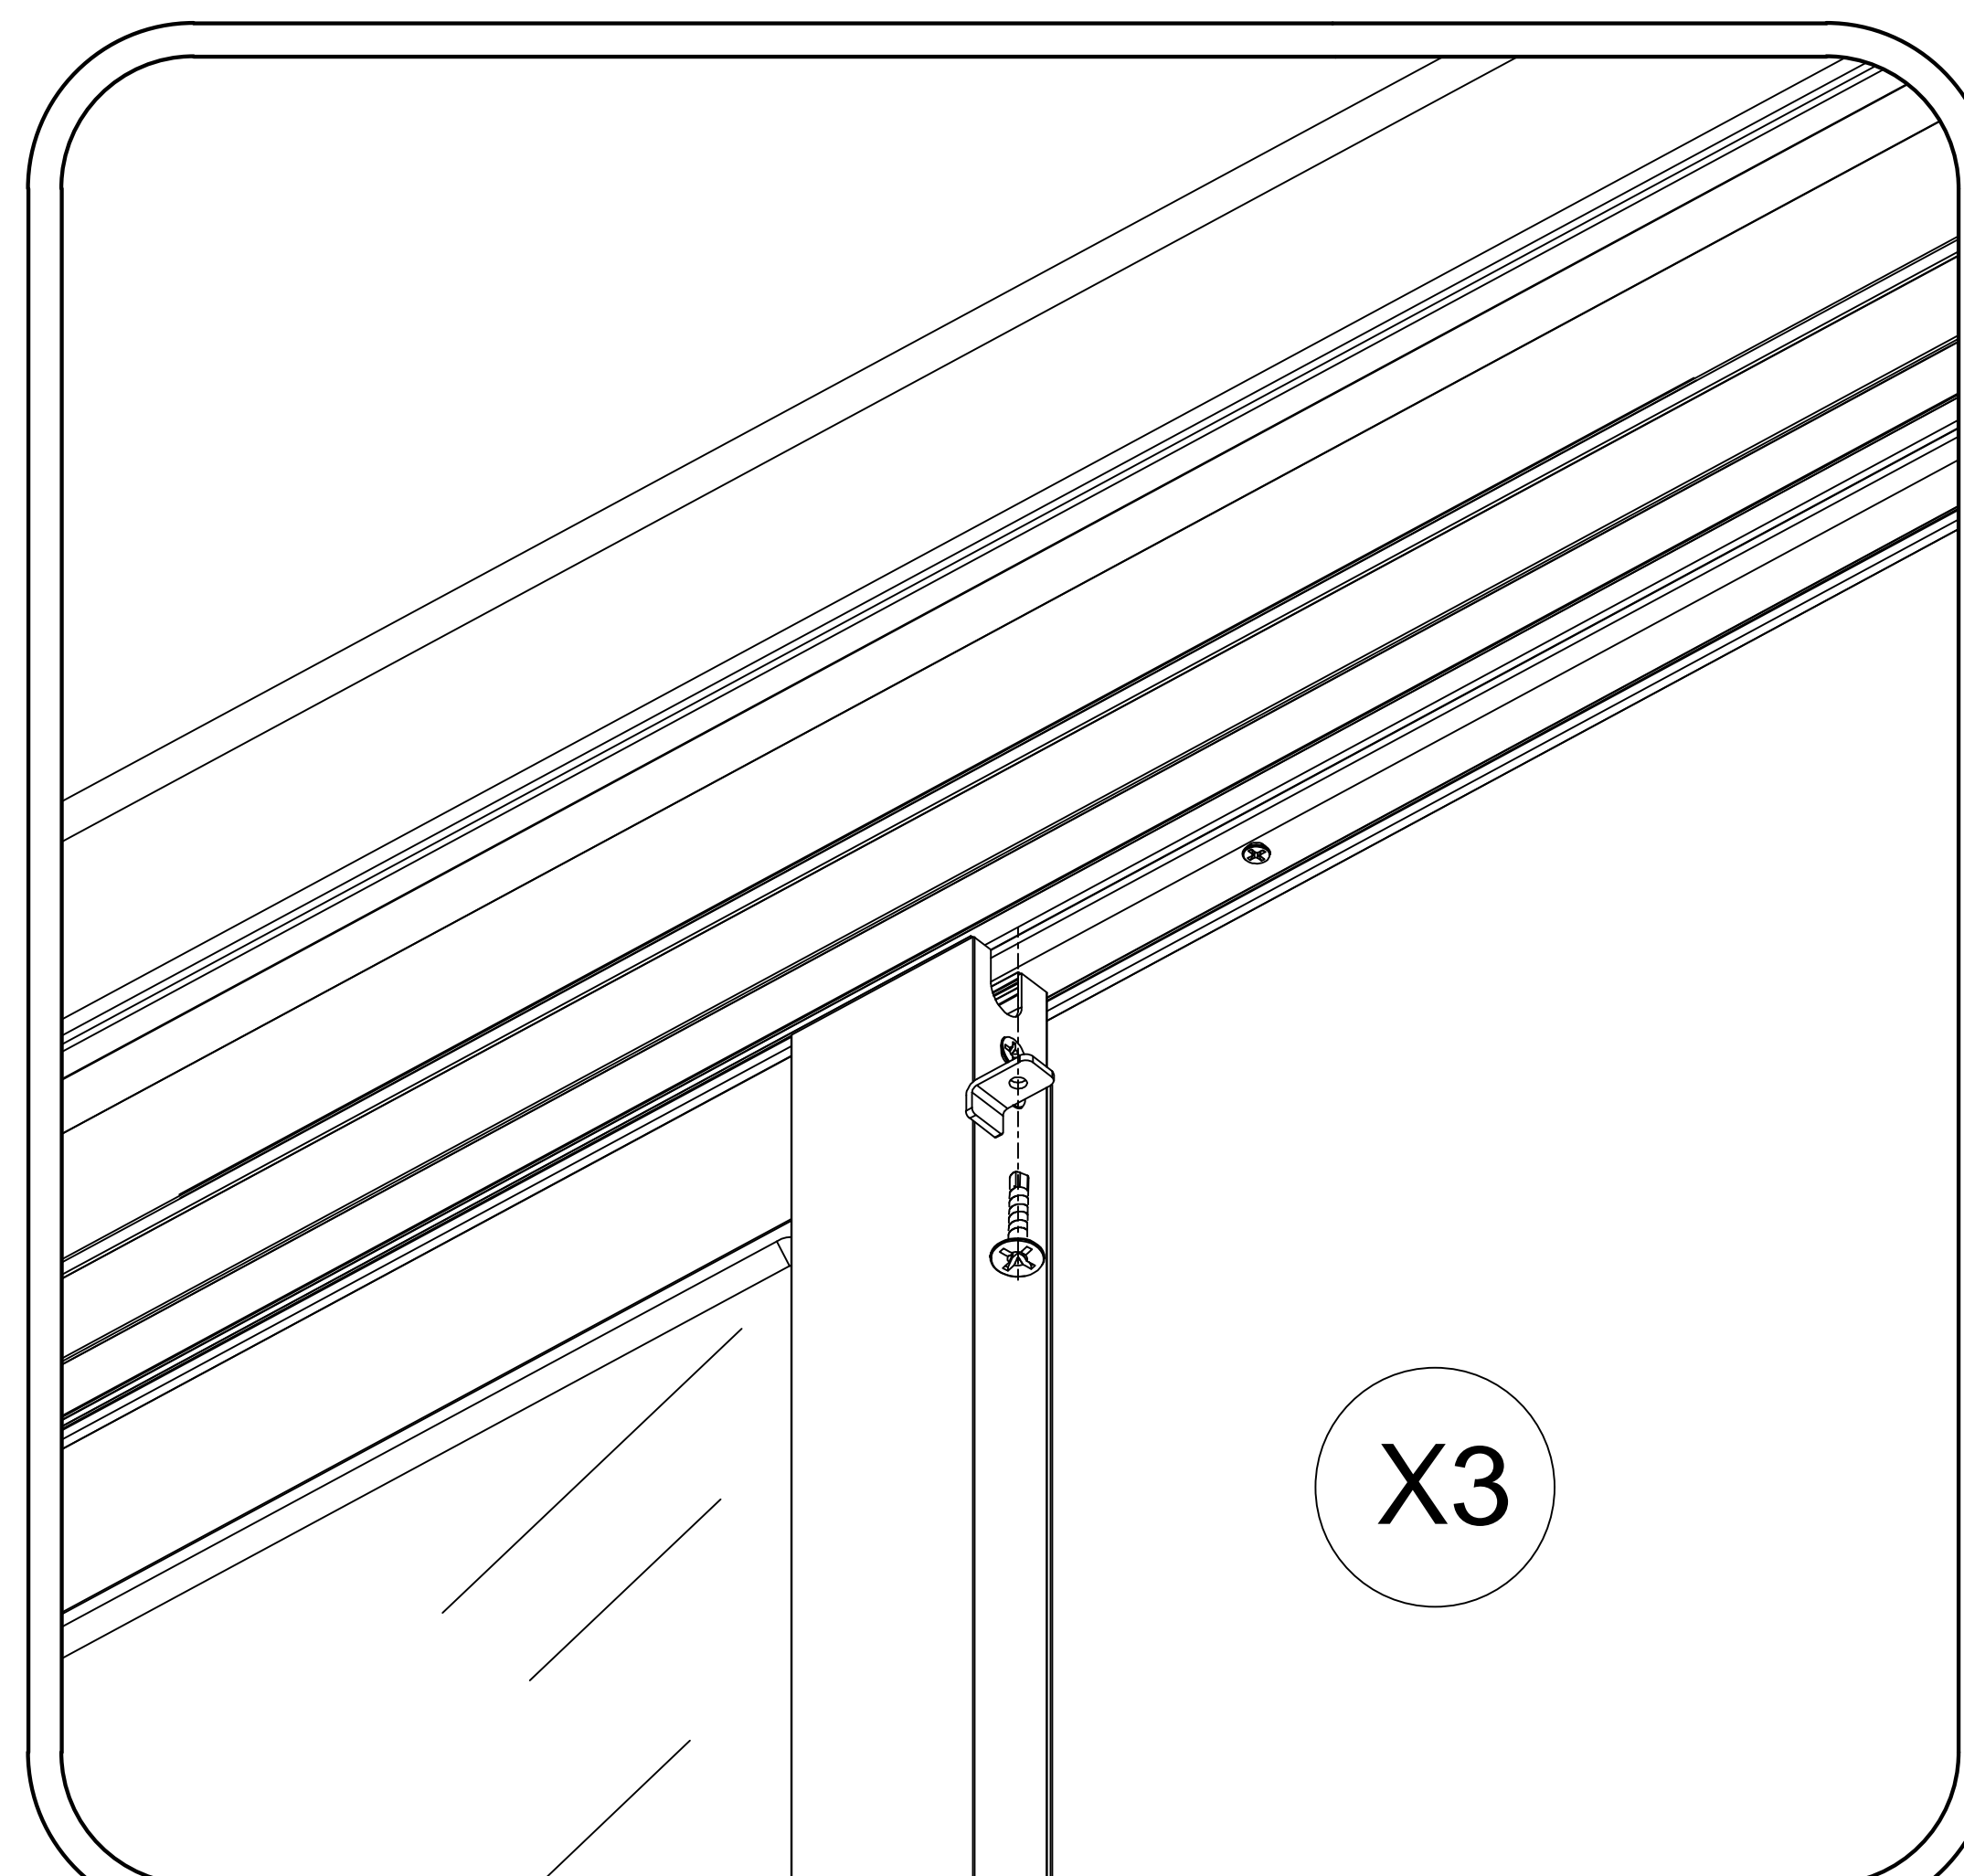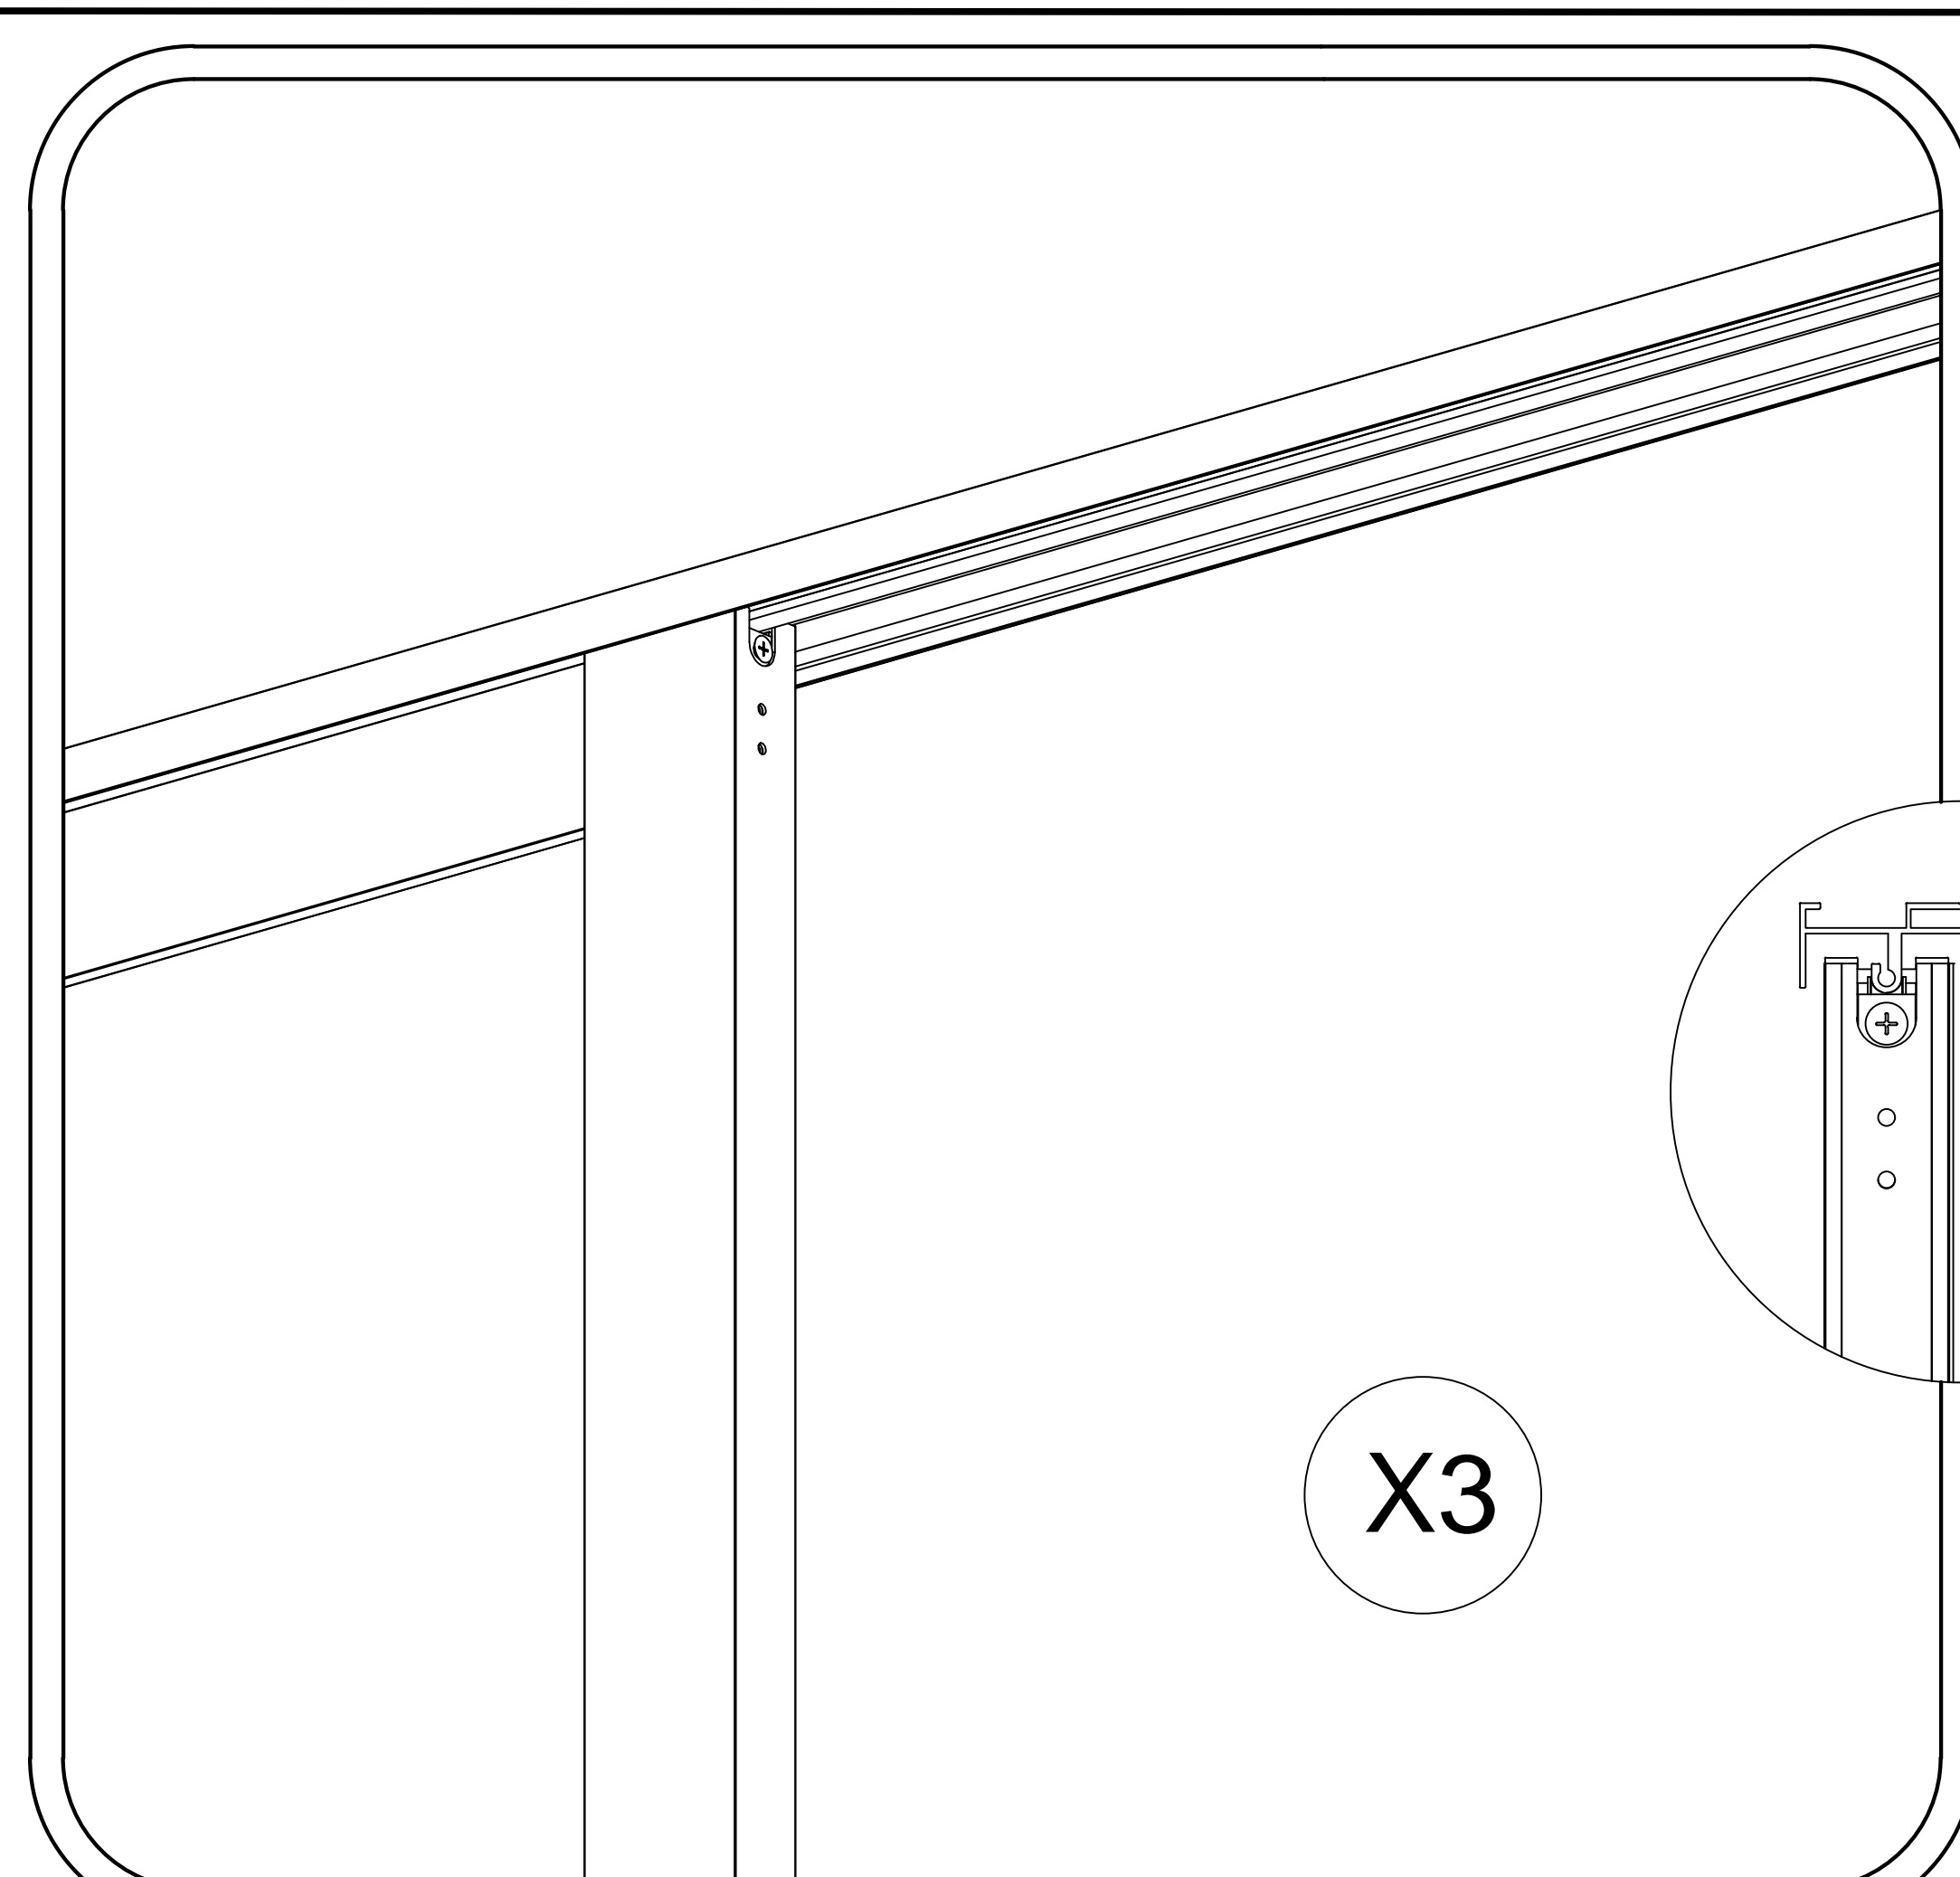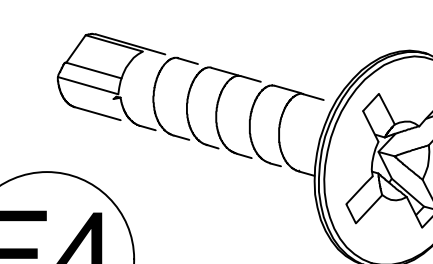



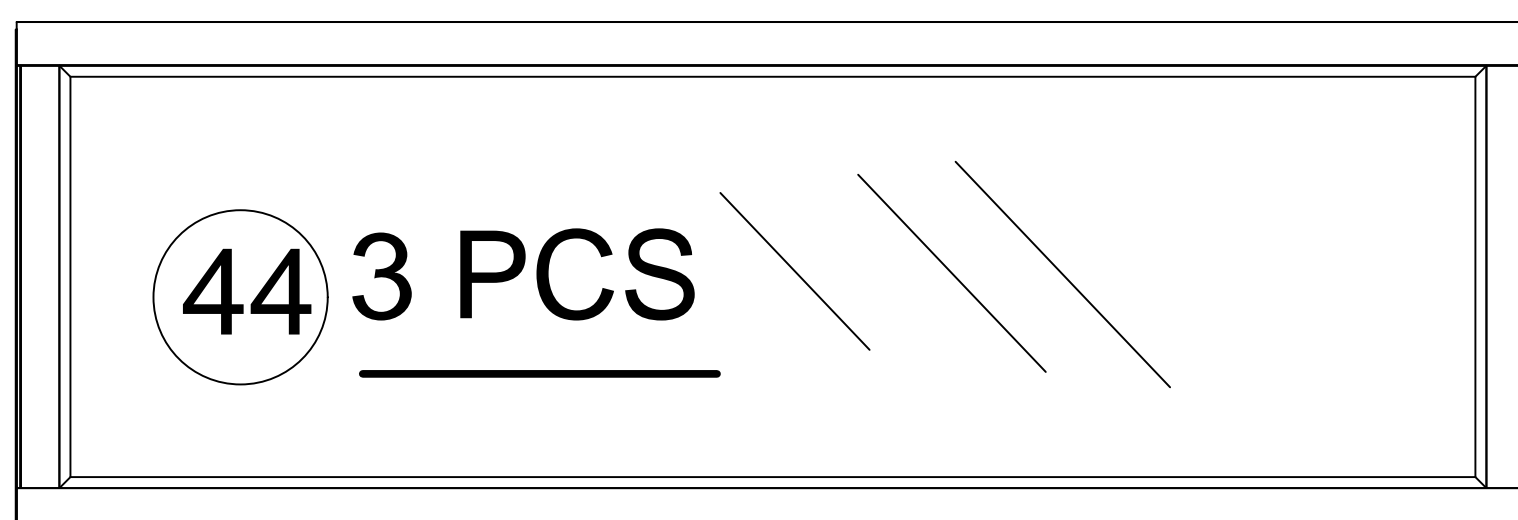
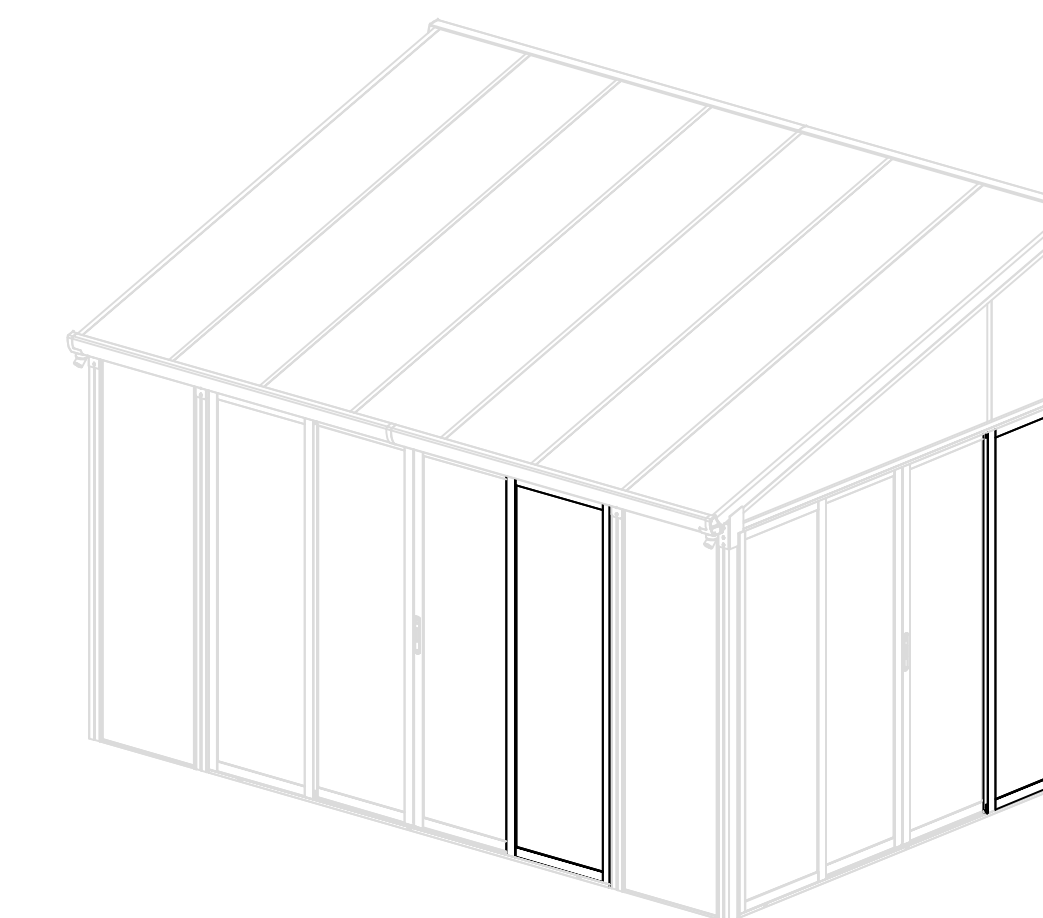


44 3 PCS


39 6 PCS

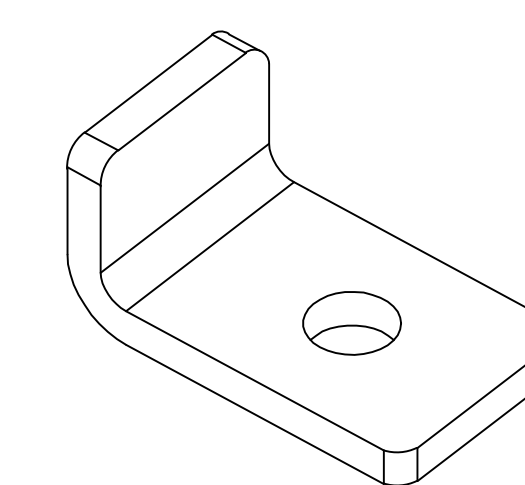

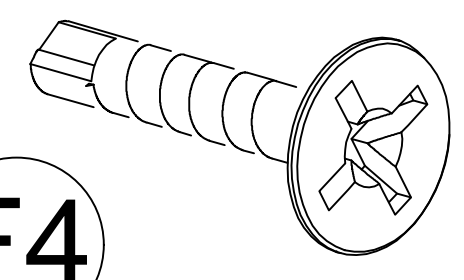
F4  6 PCS  
ST4.2X20

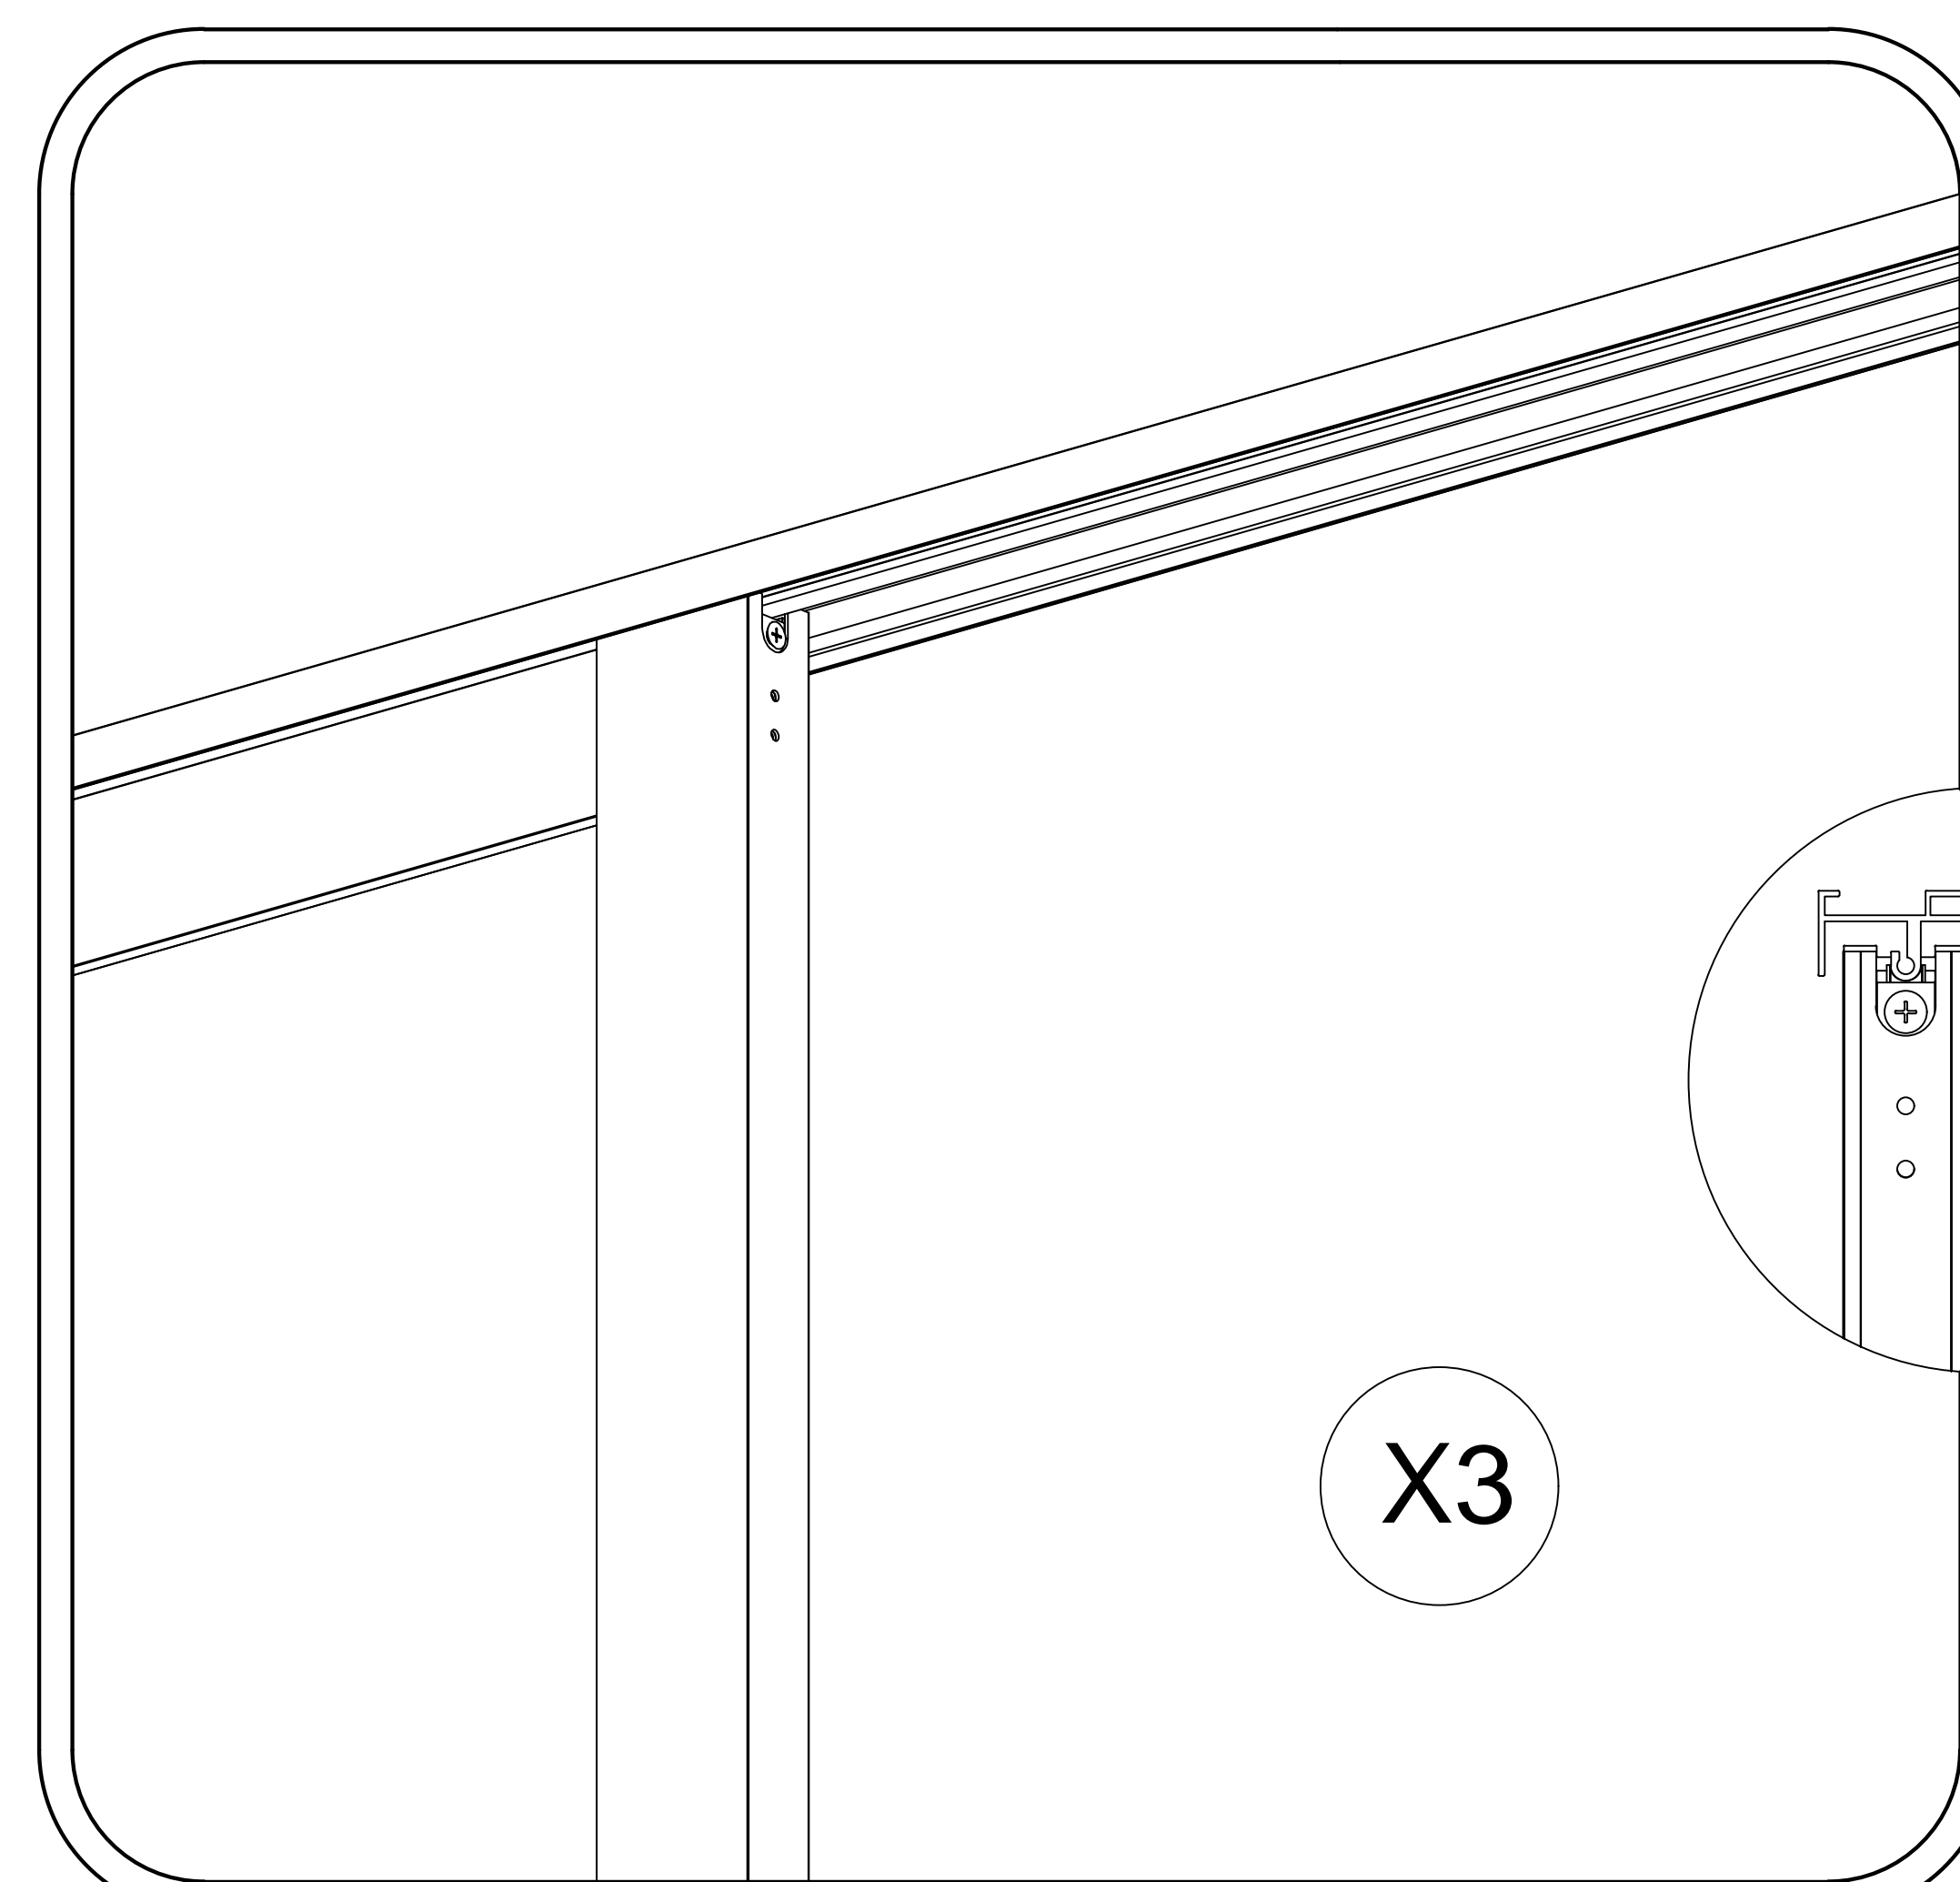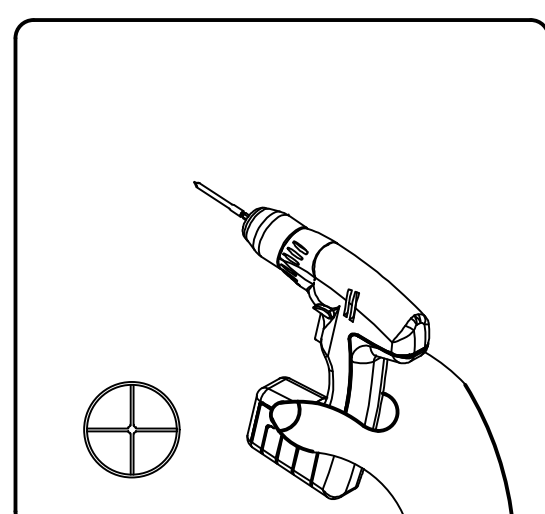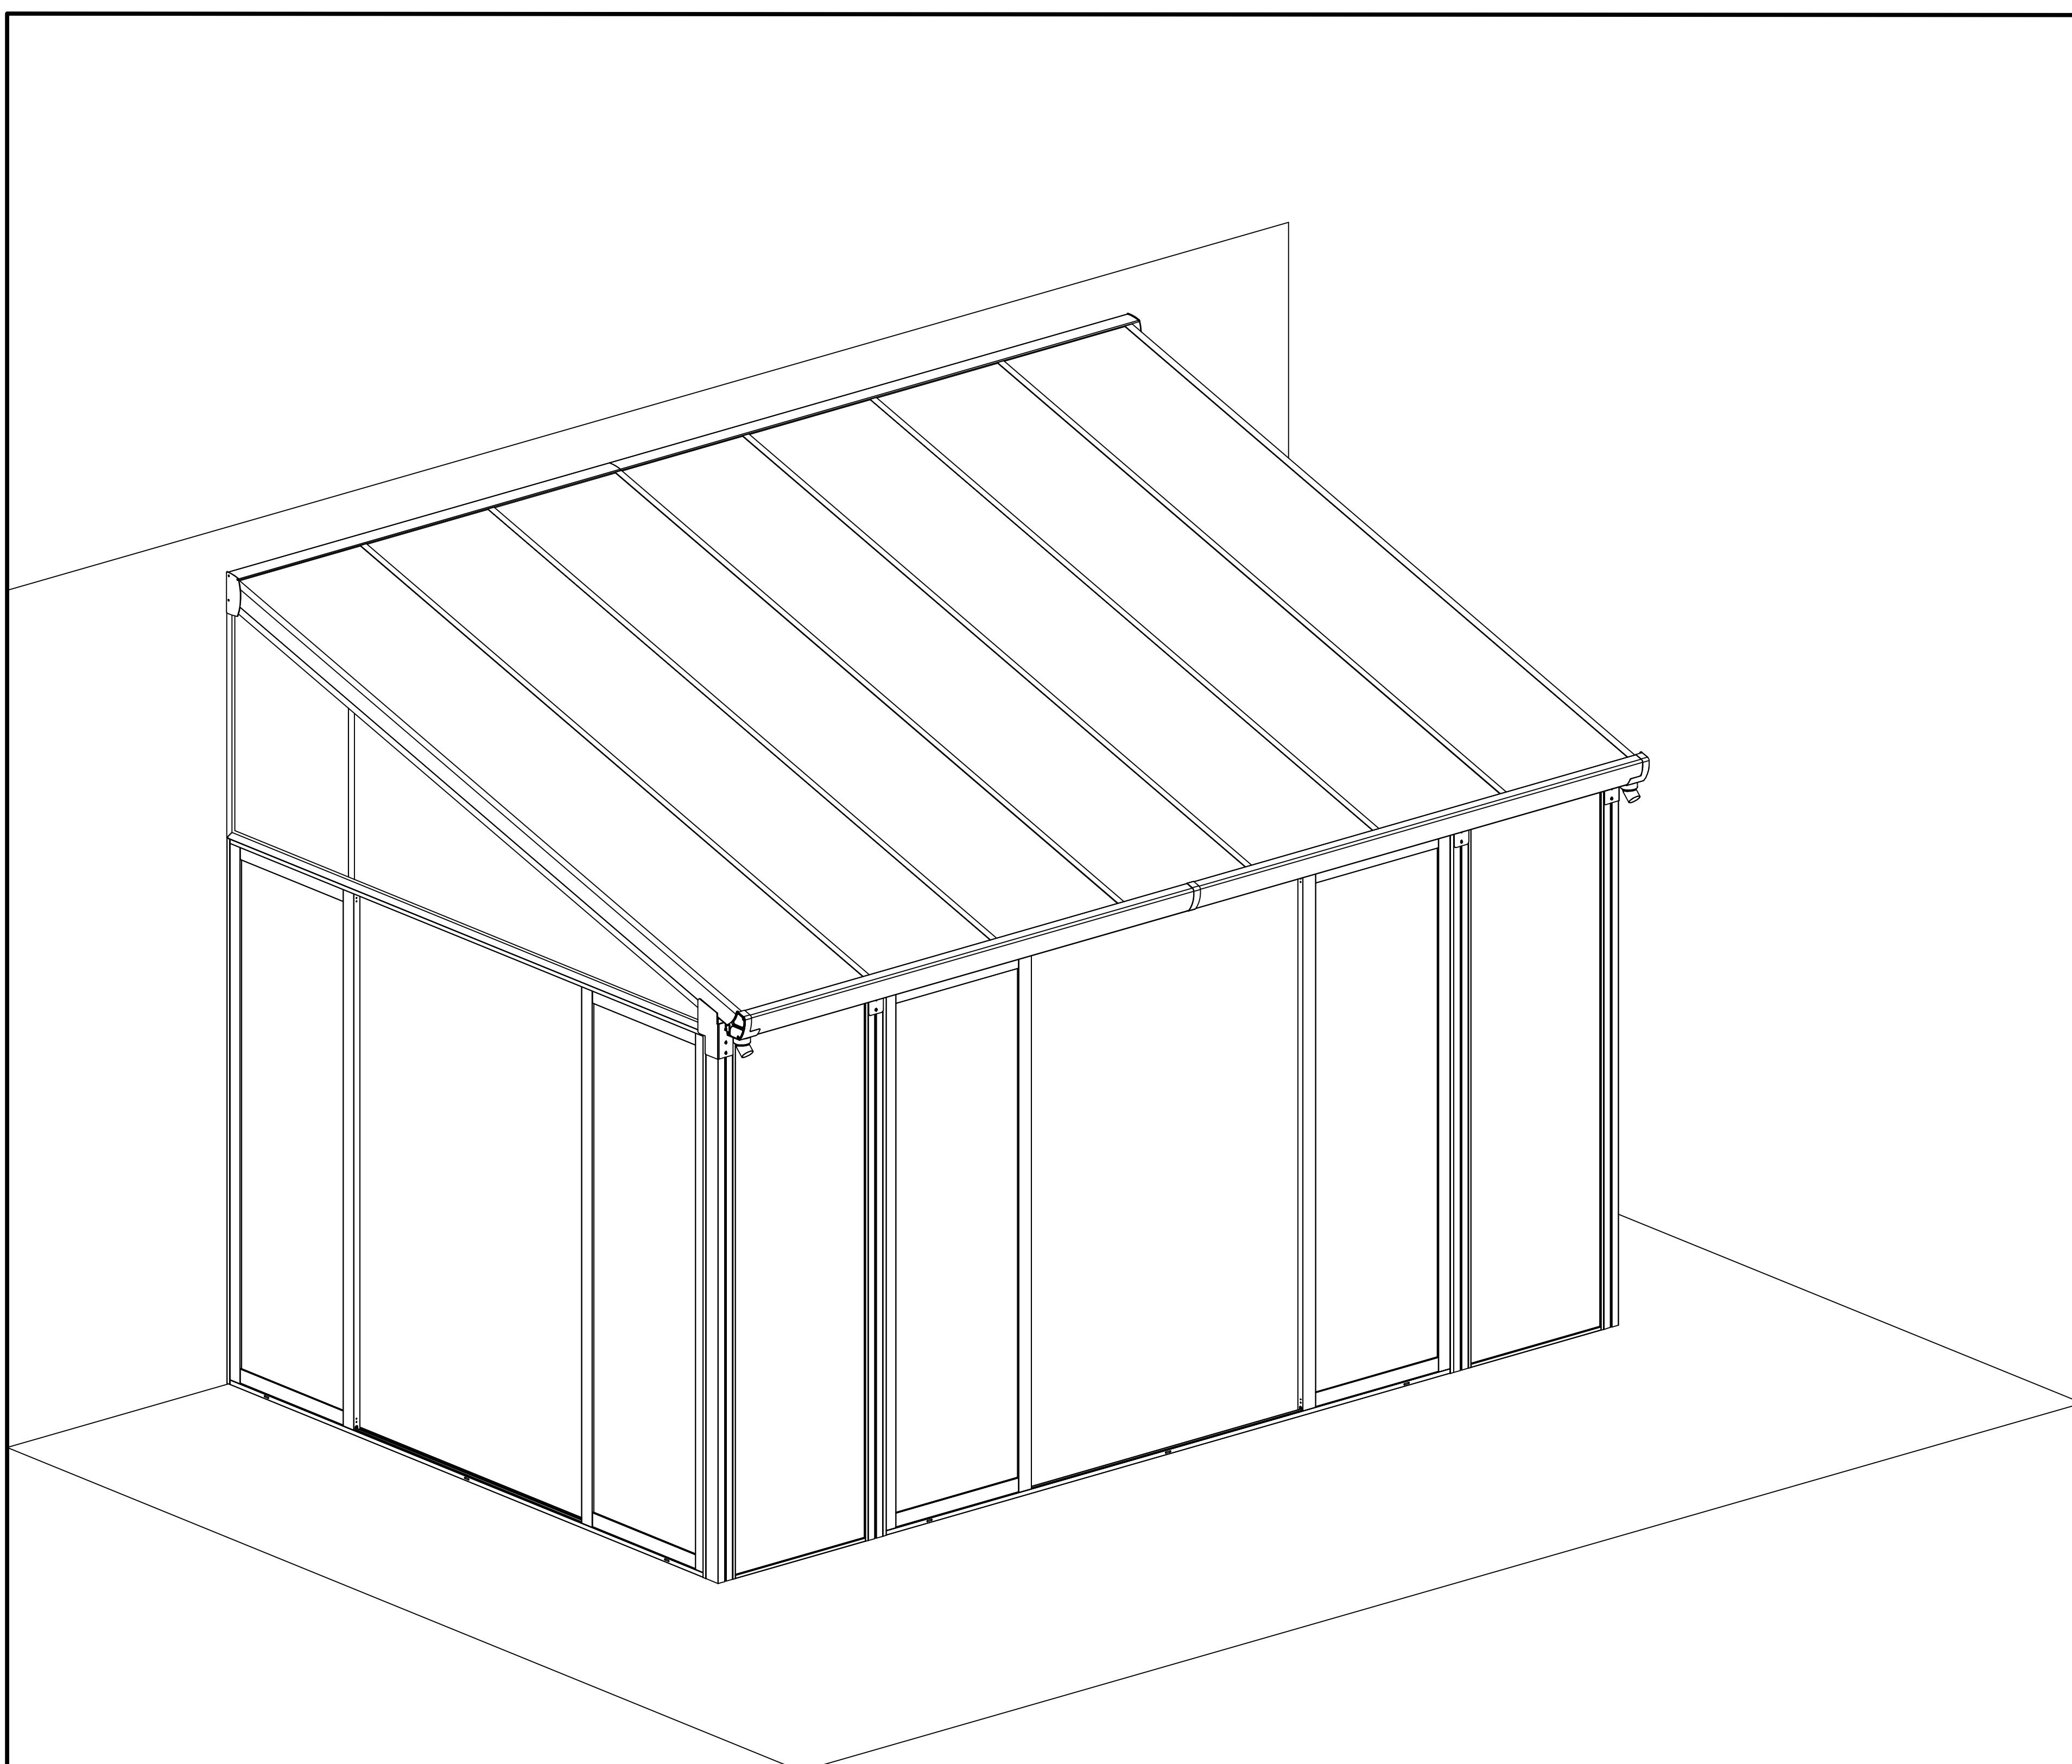


X3

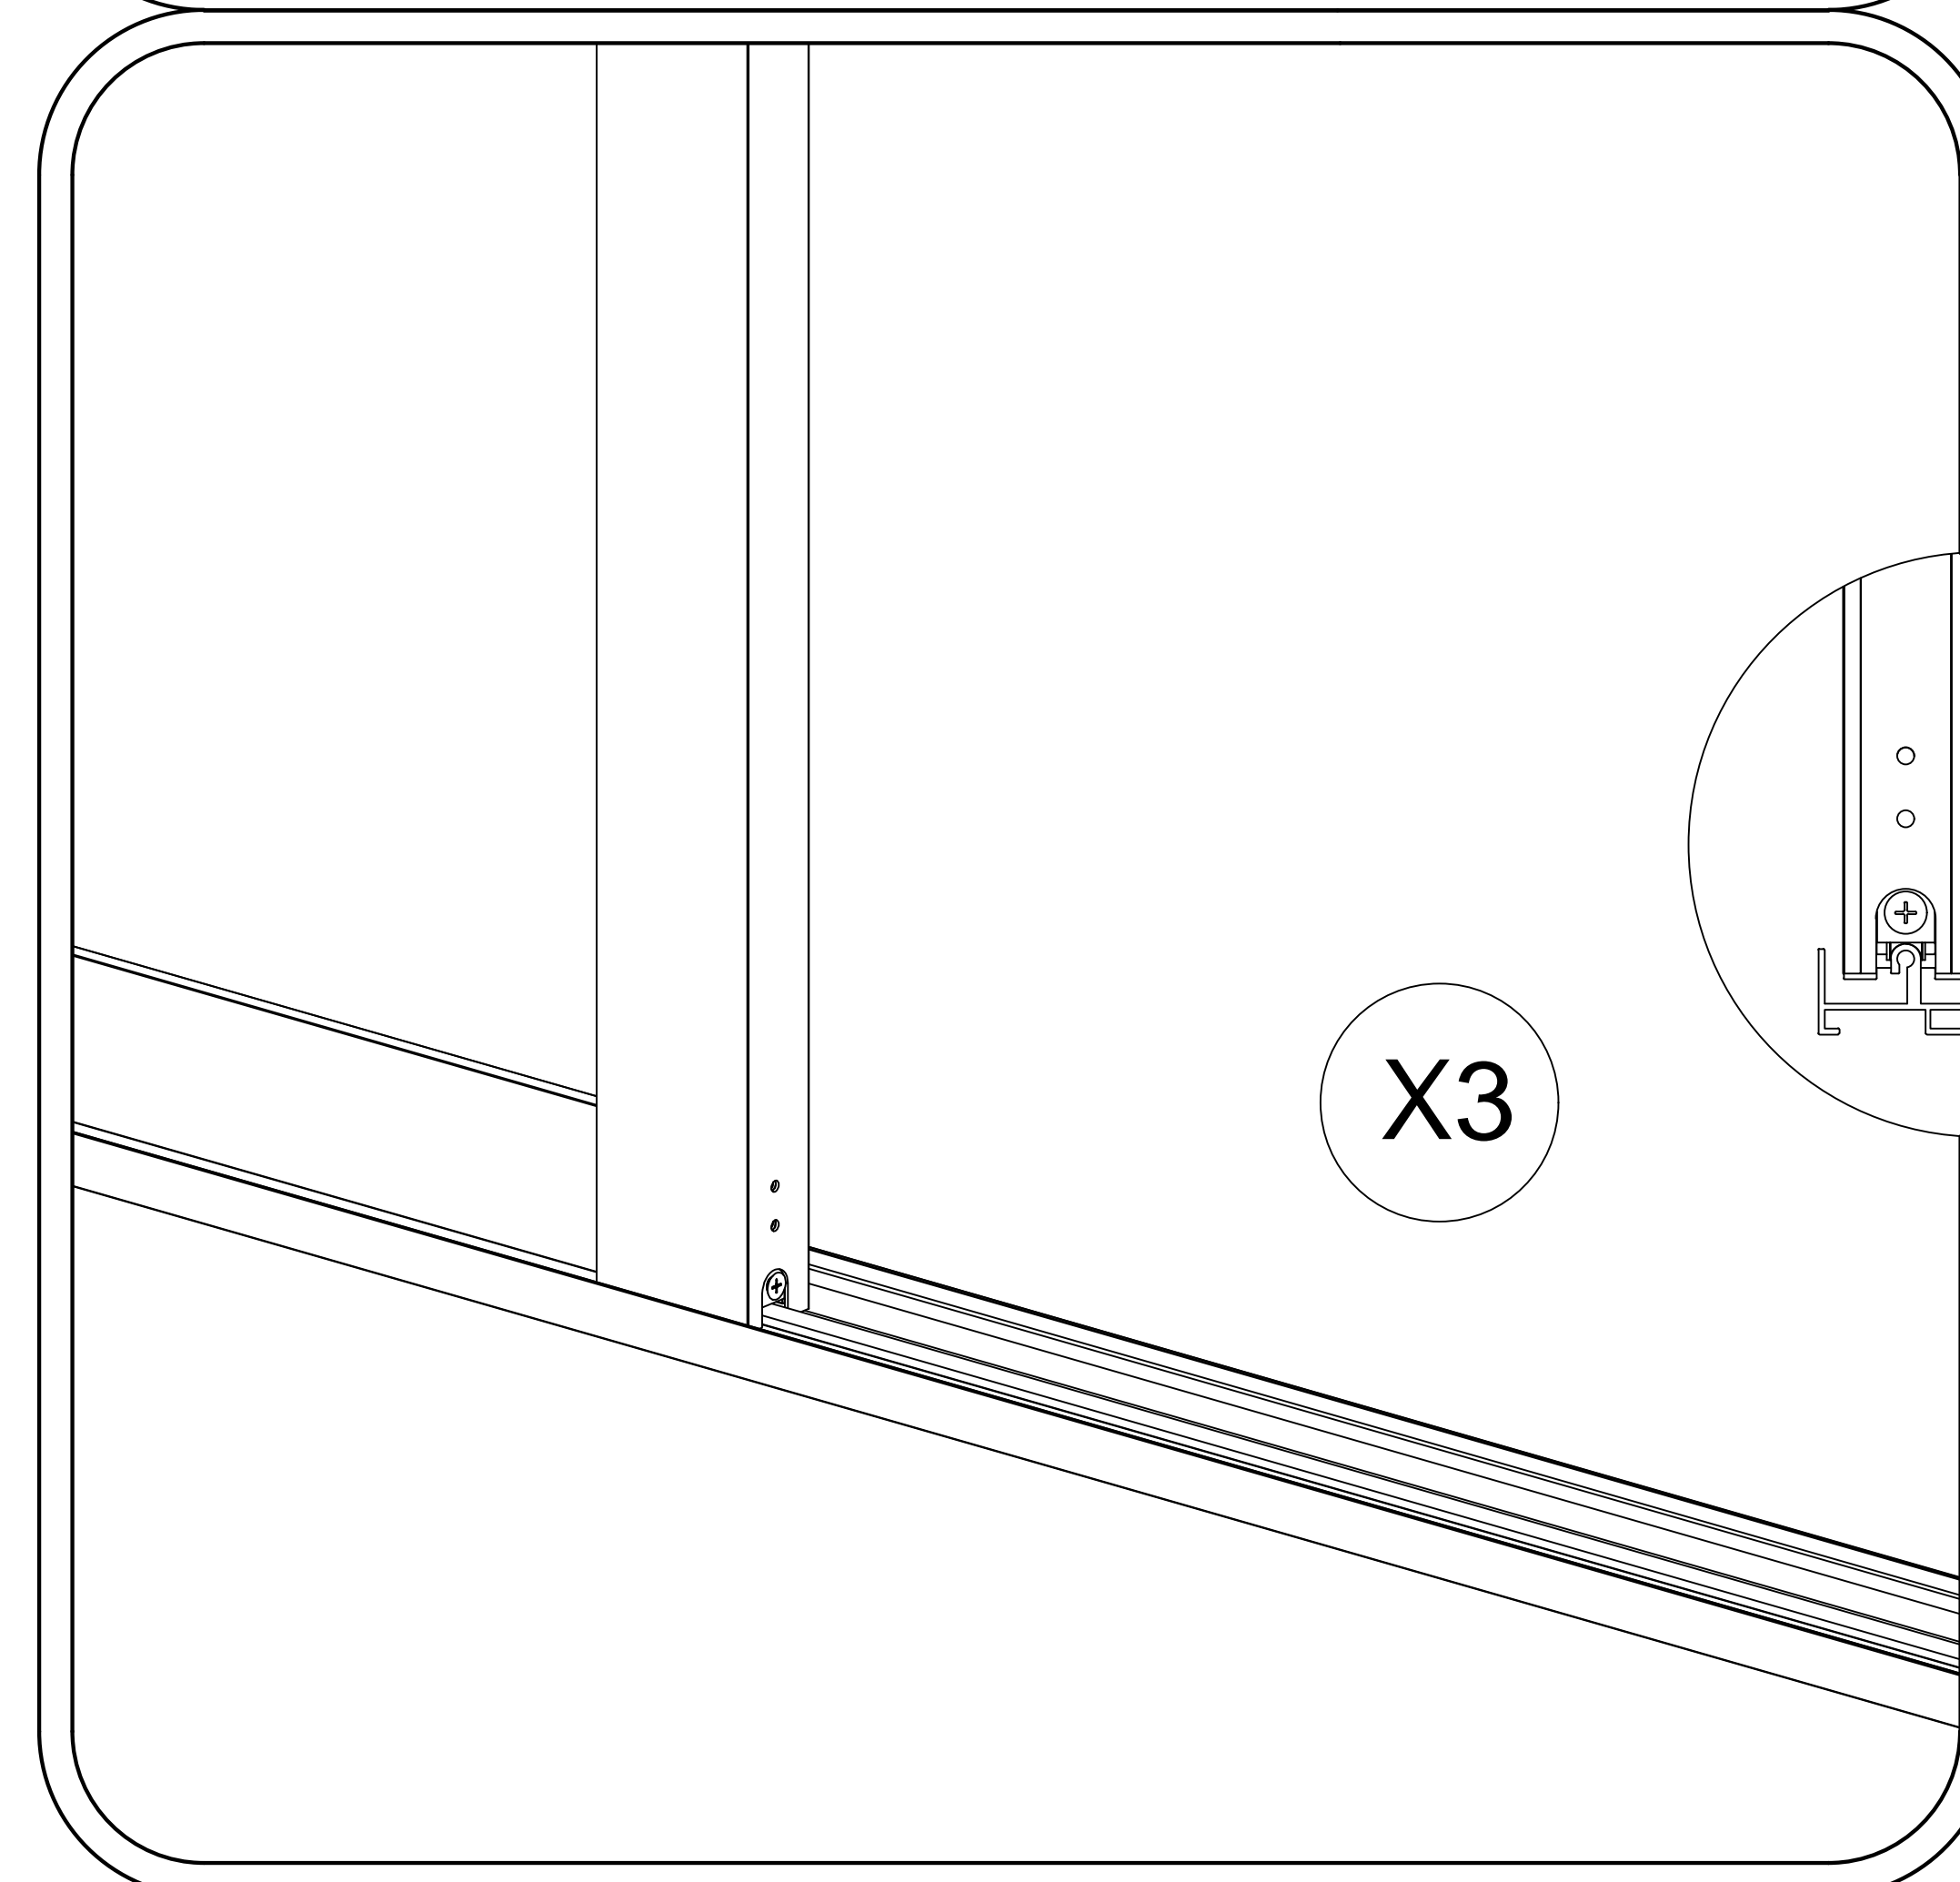

X3






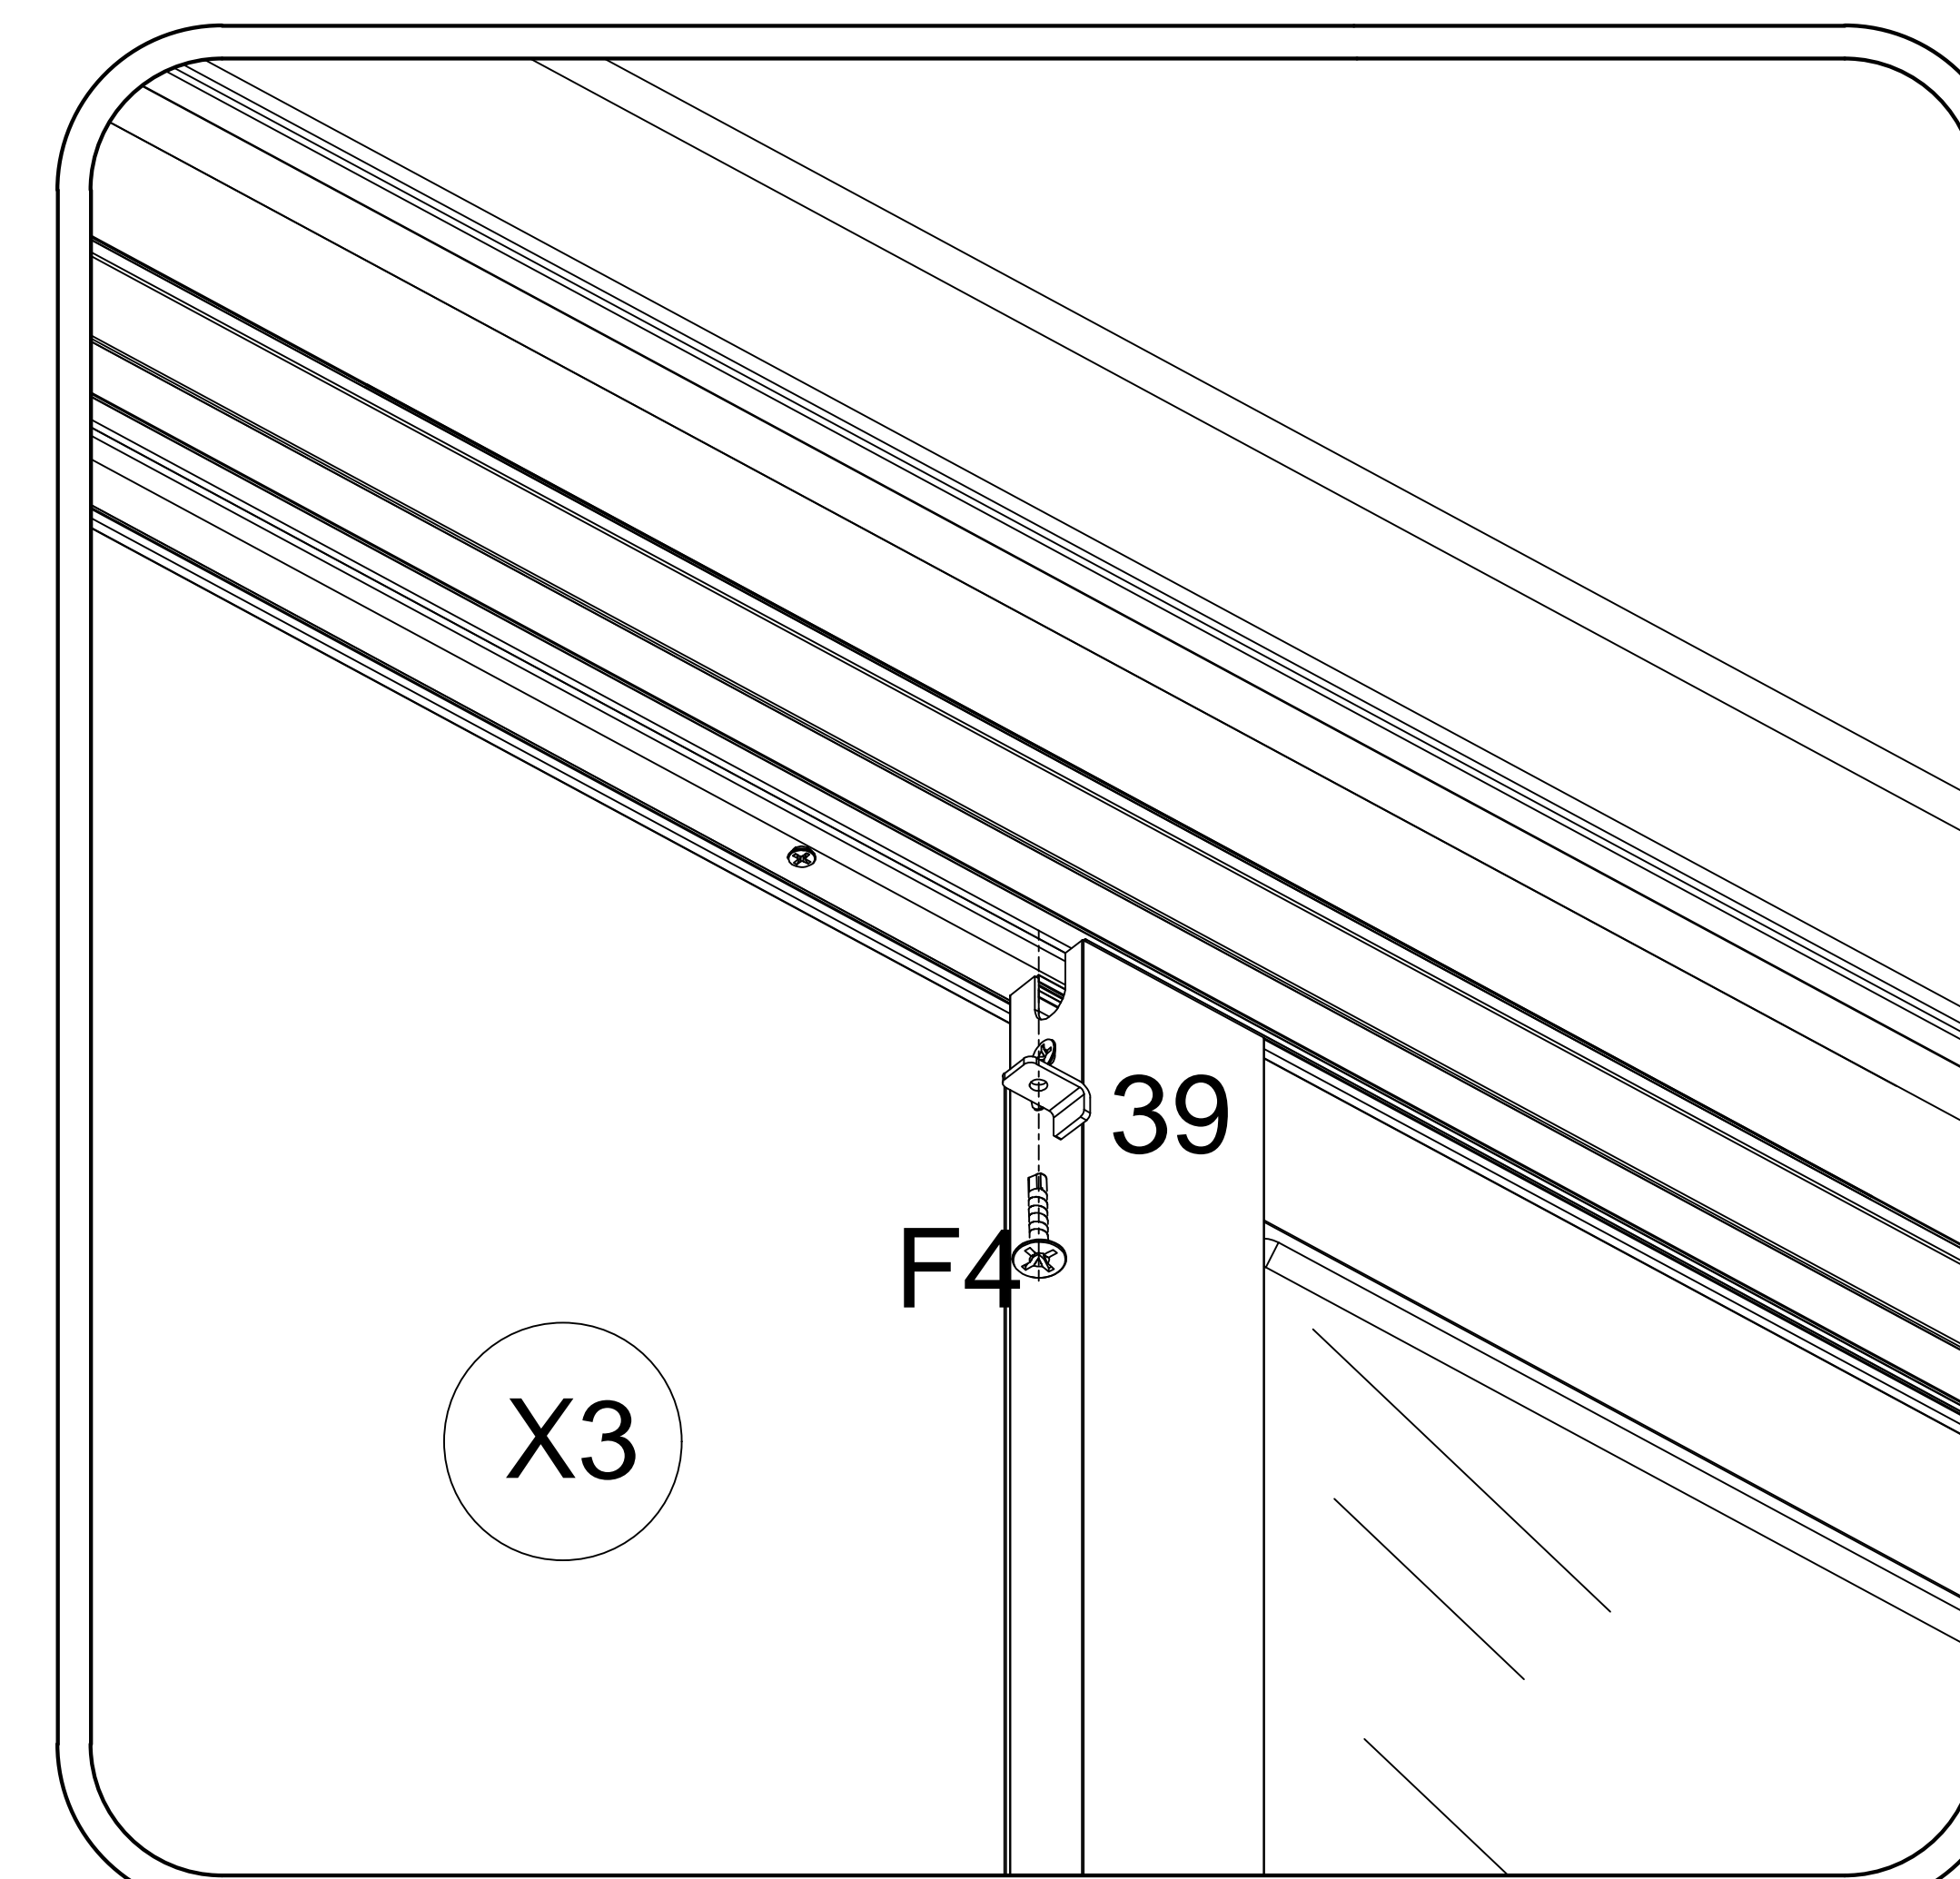


X3

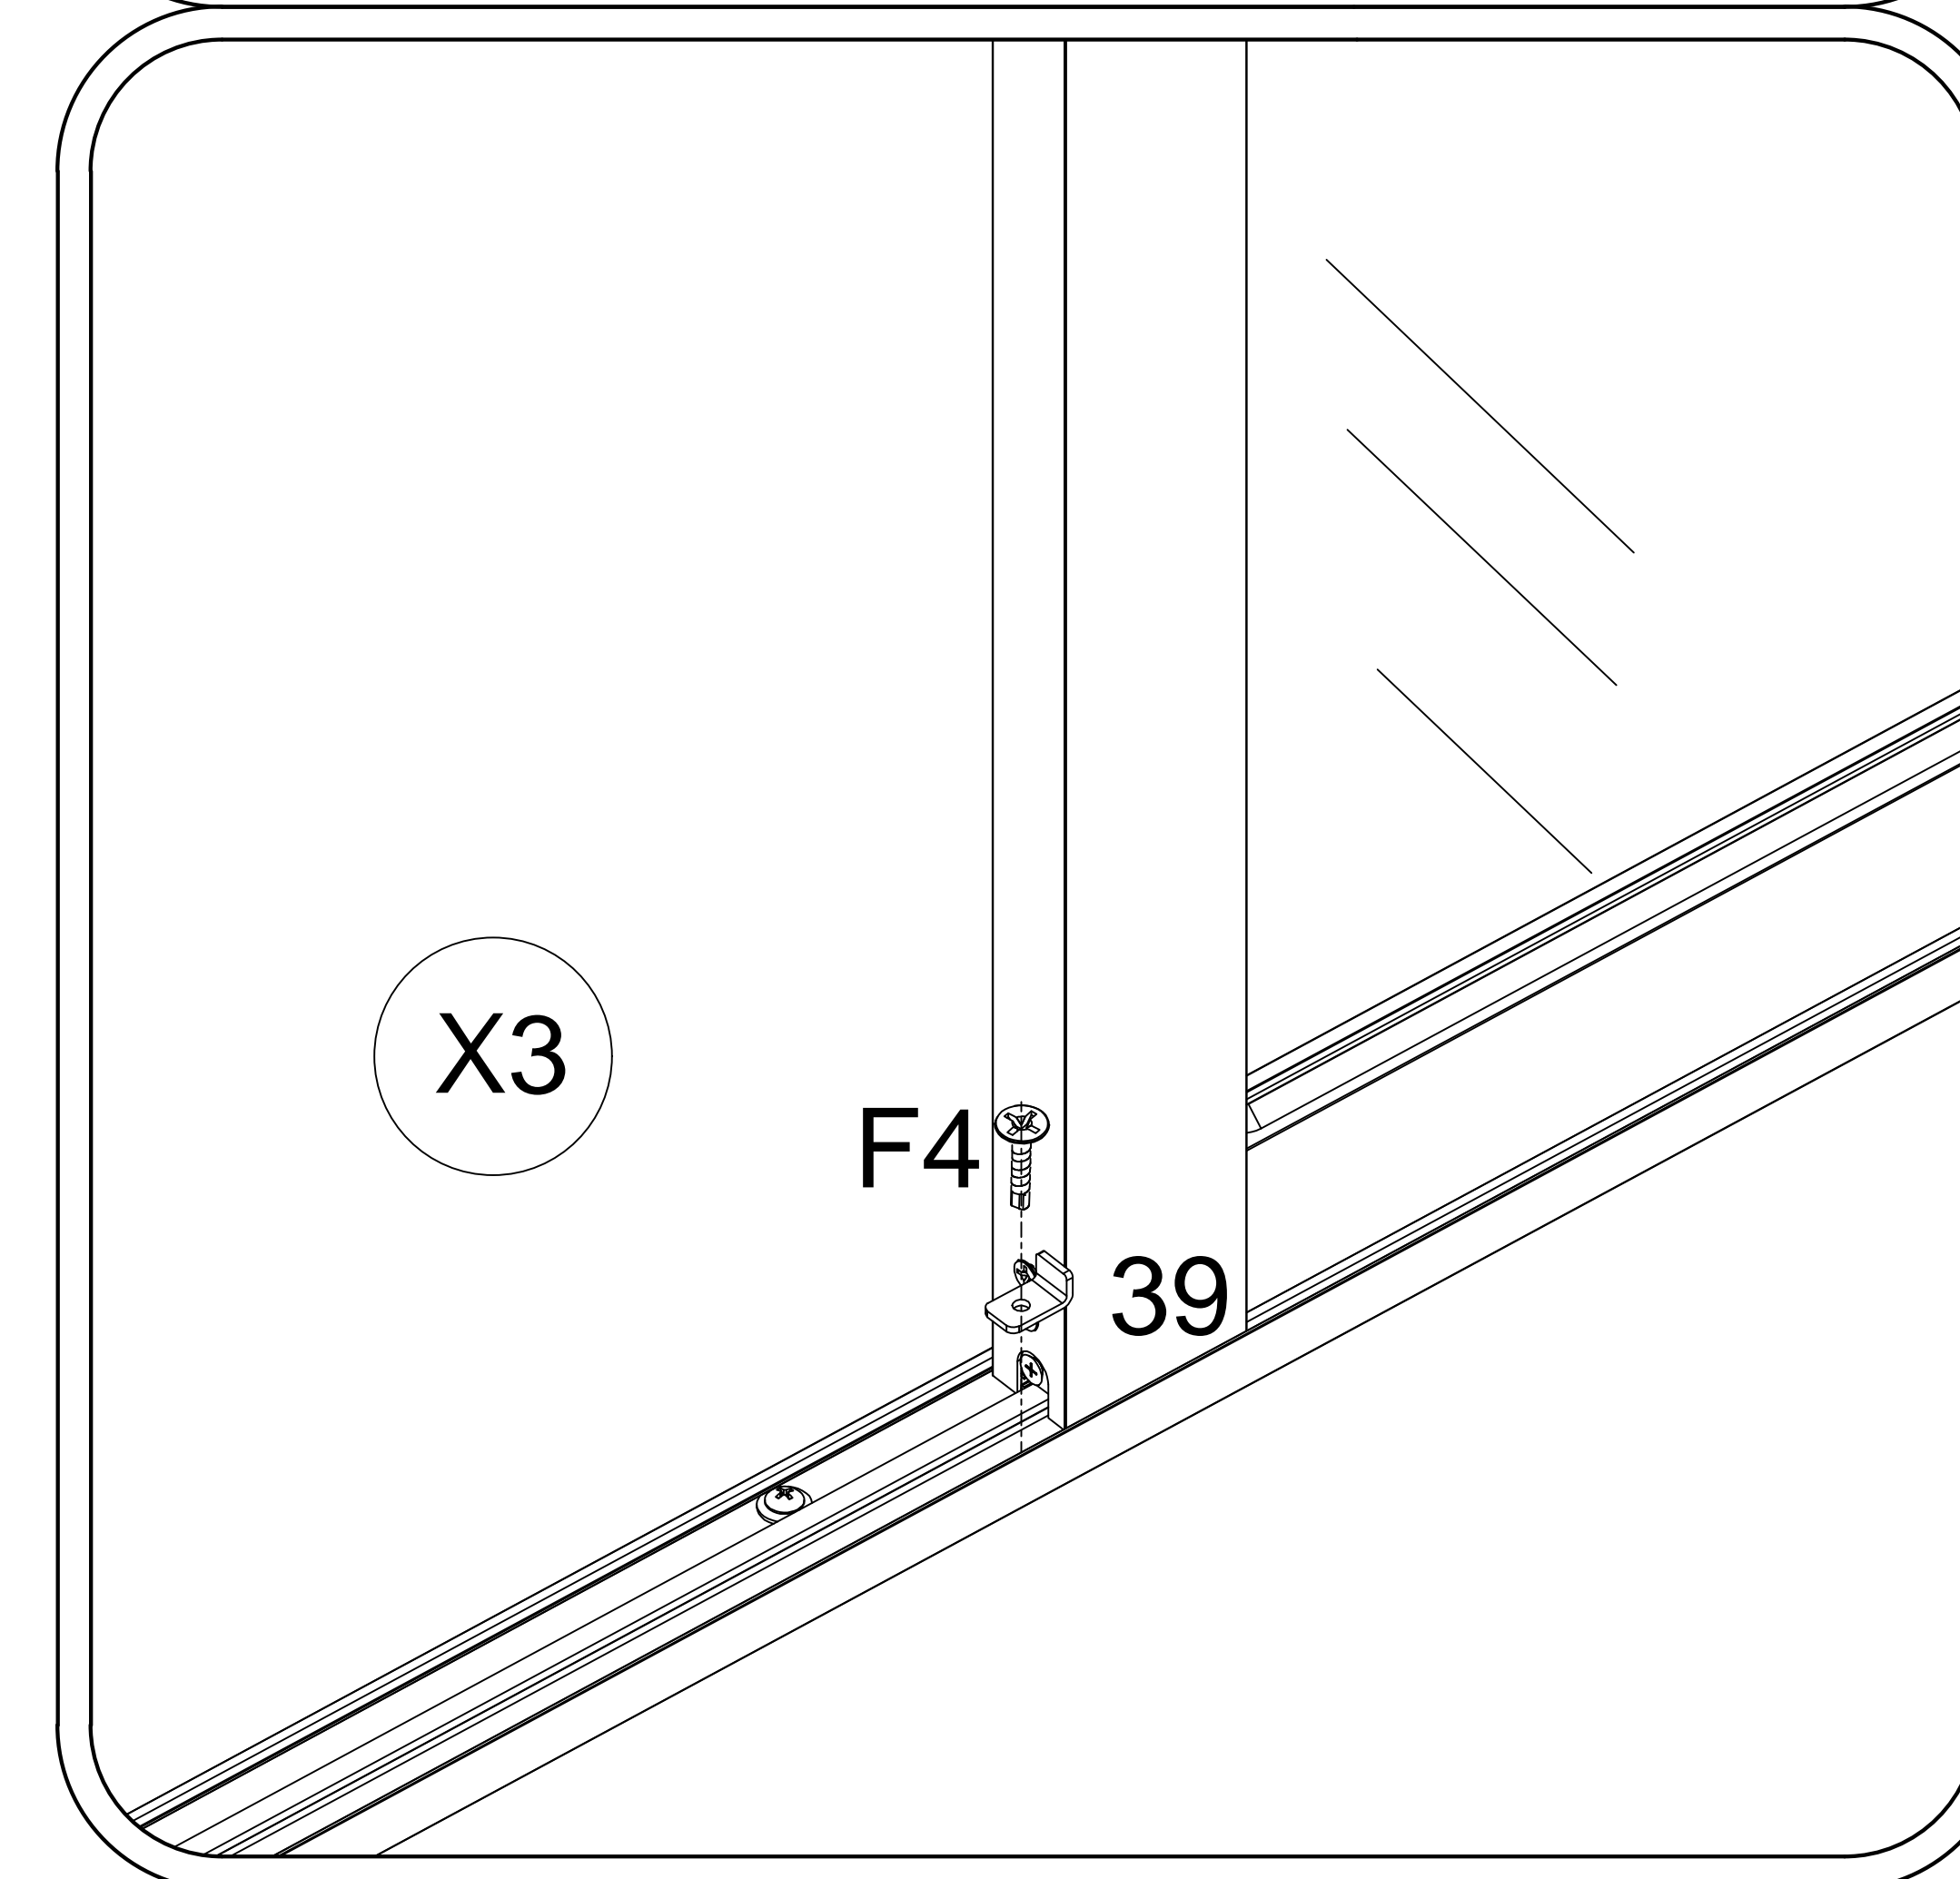


X3




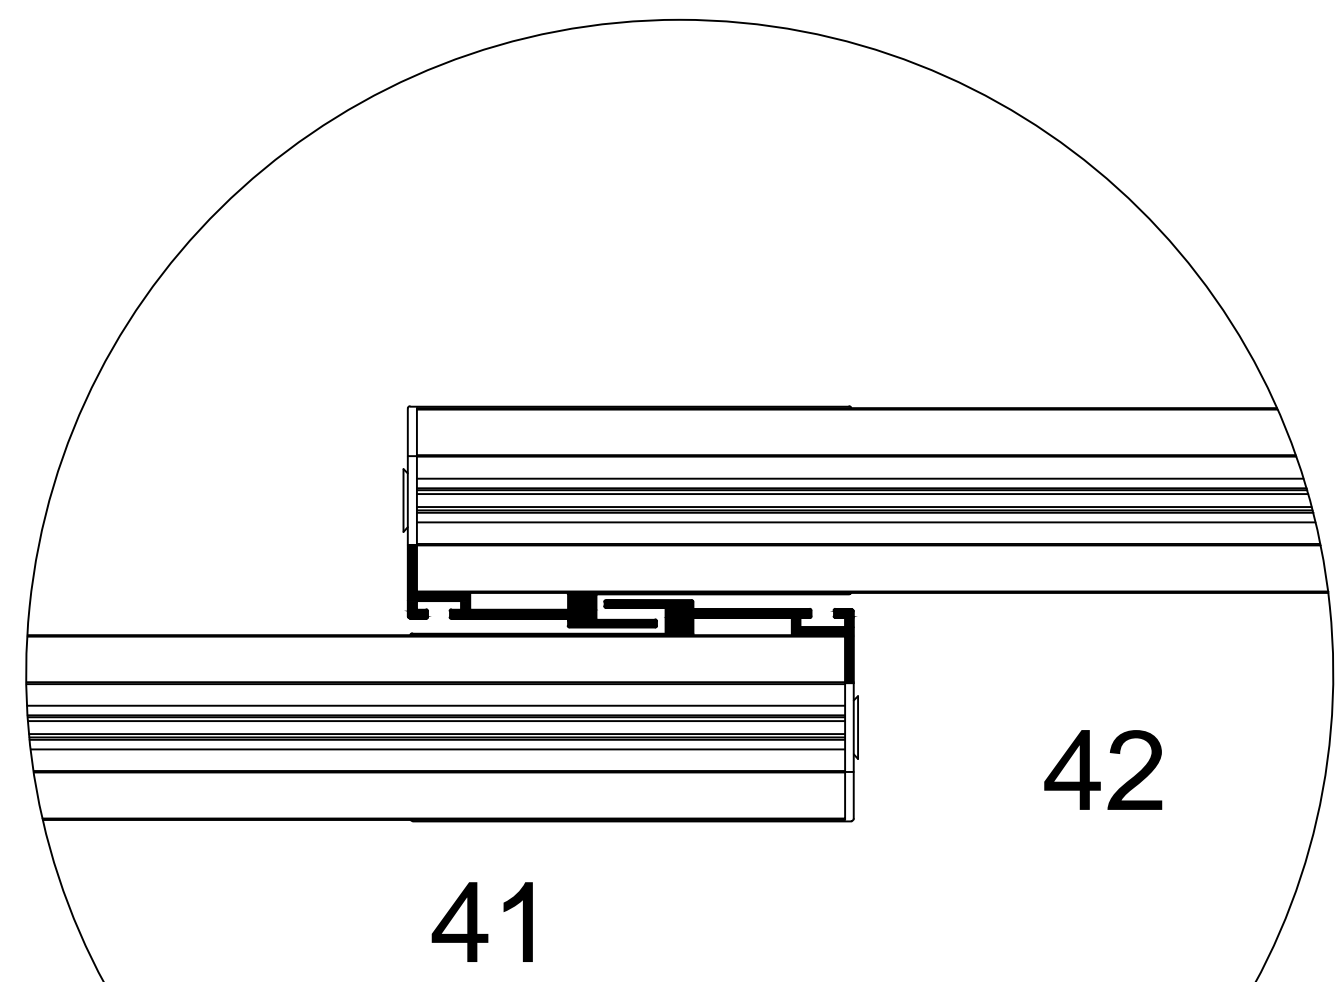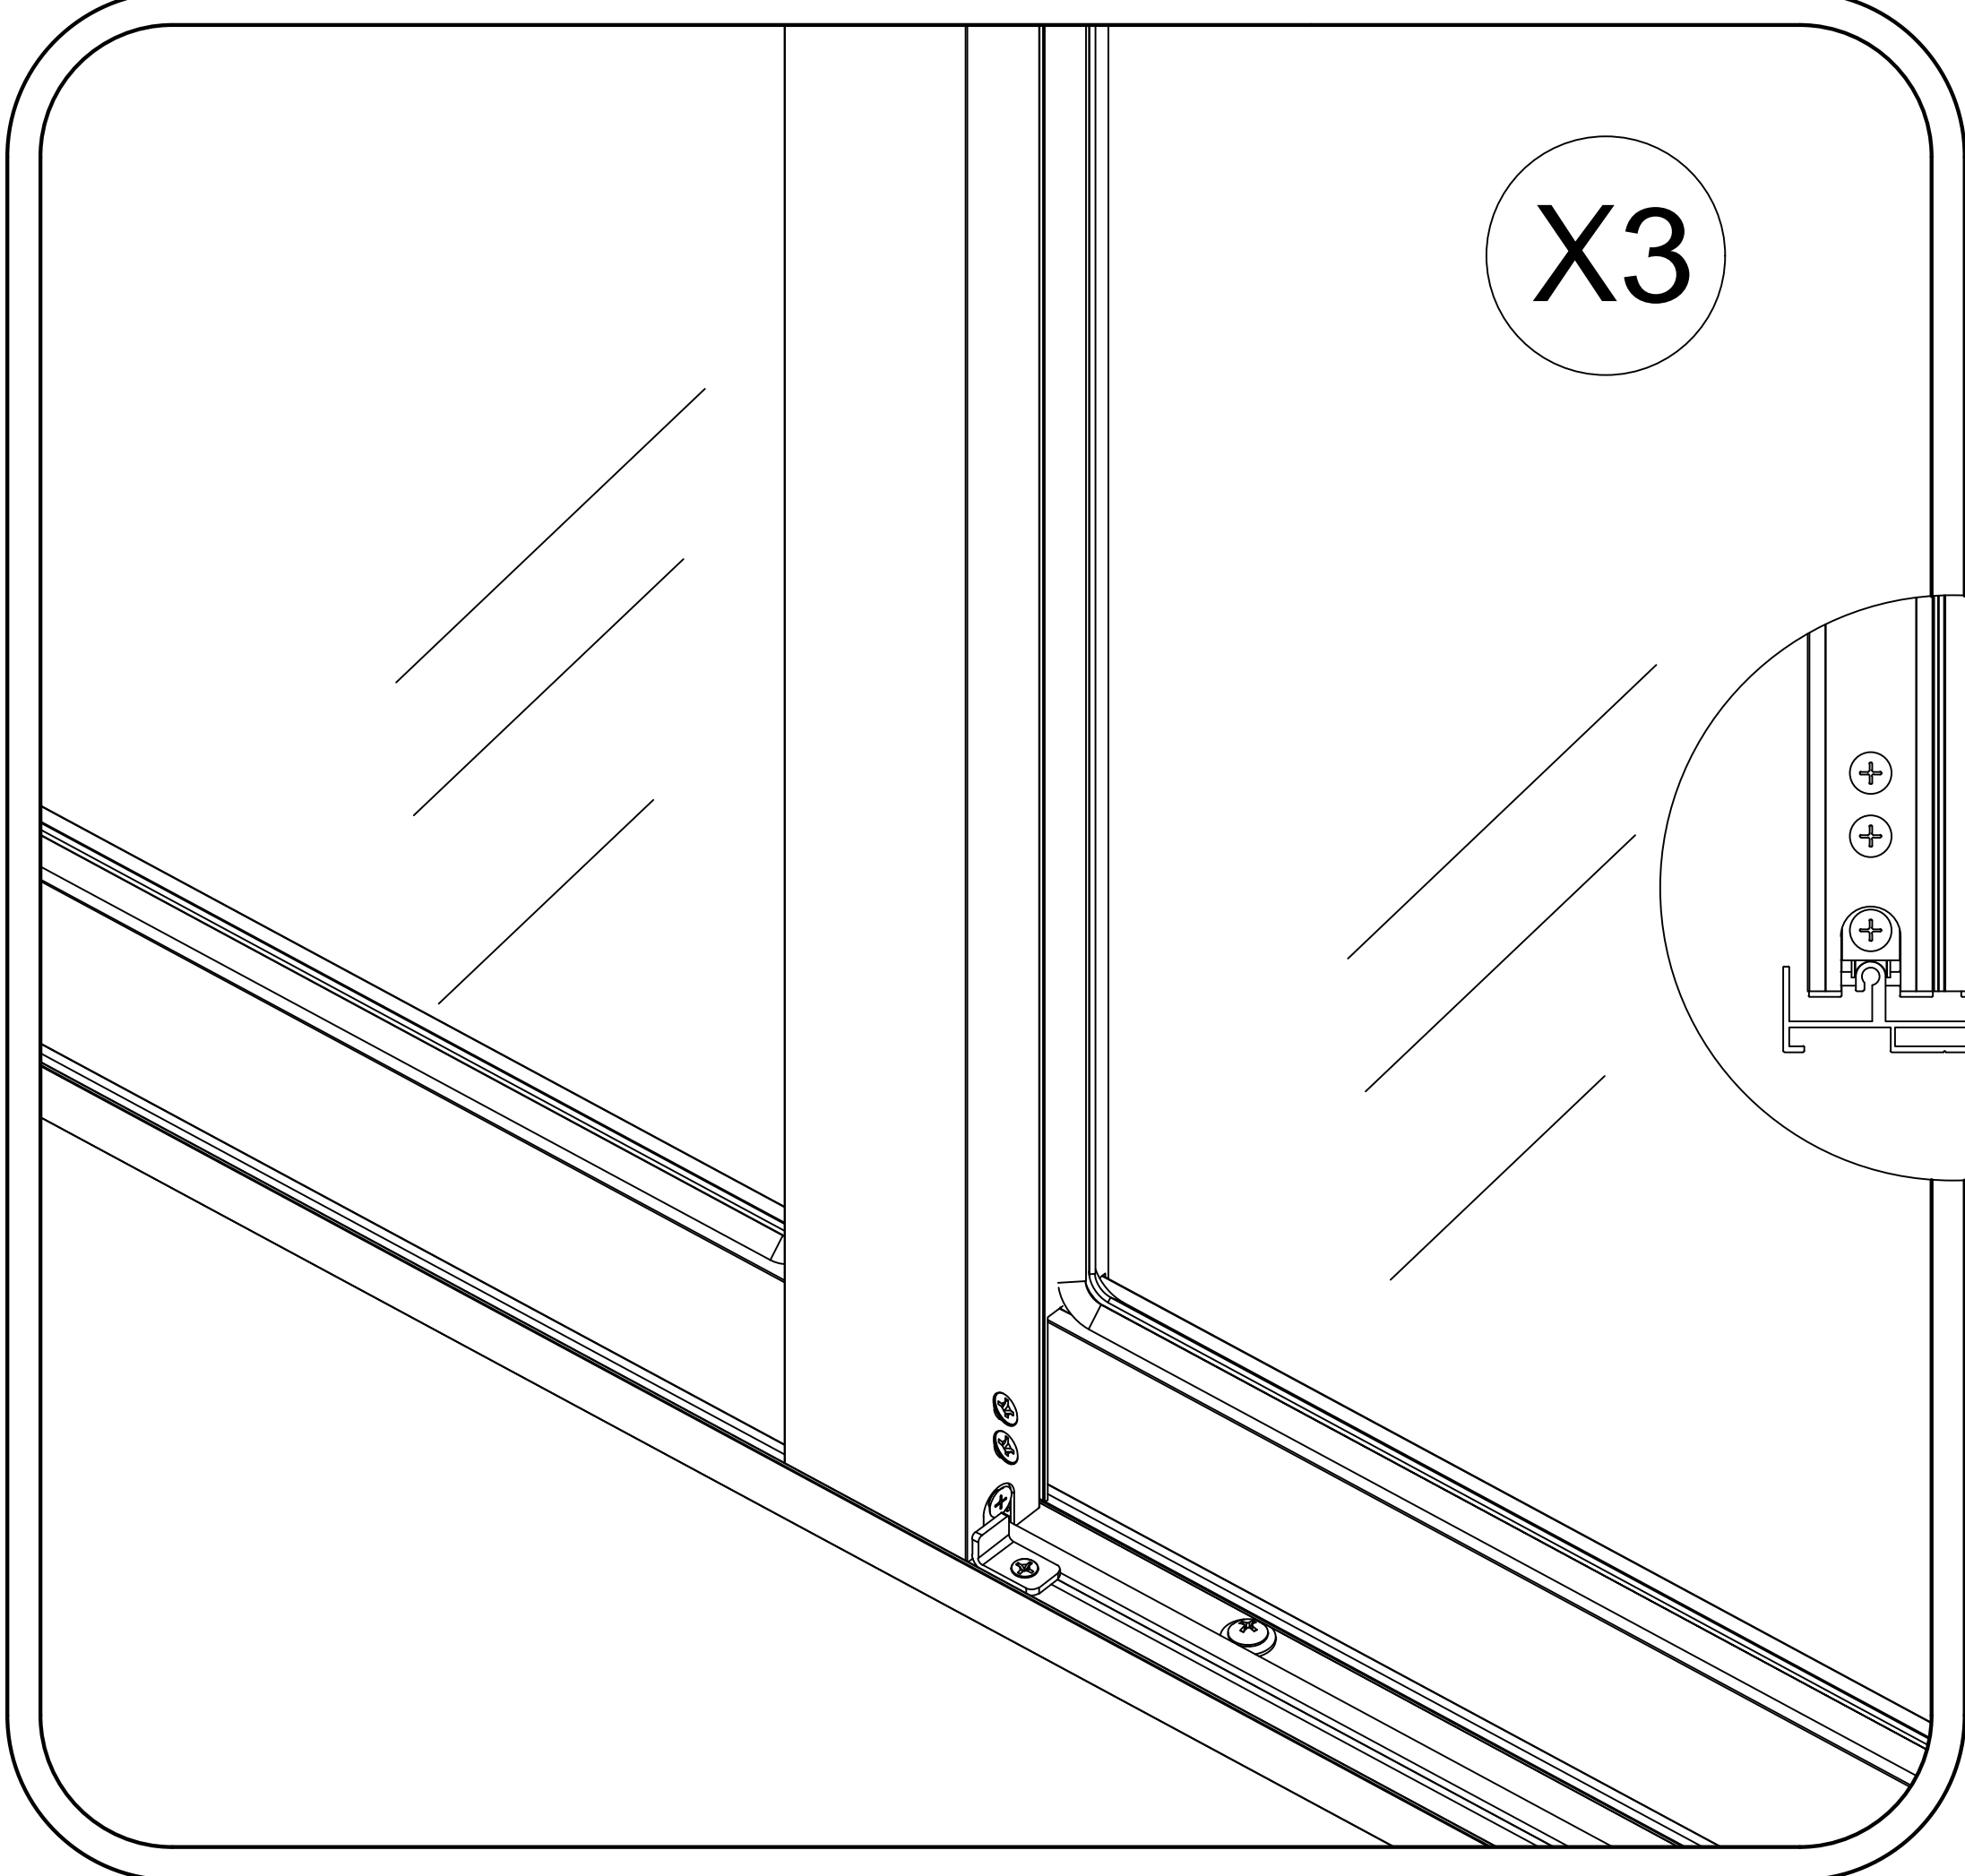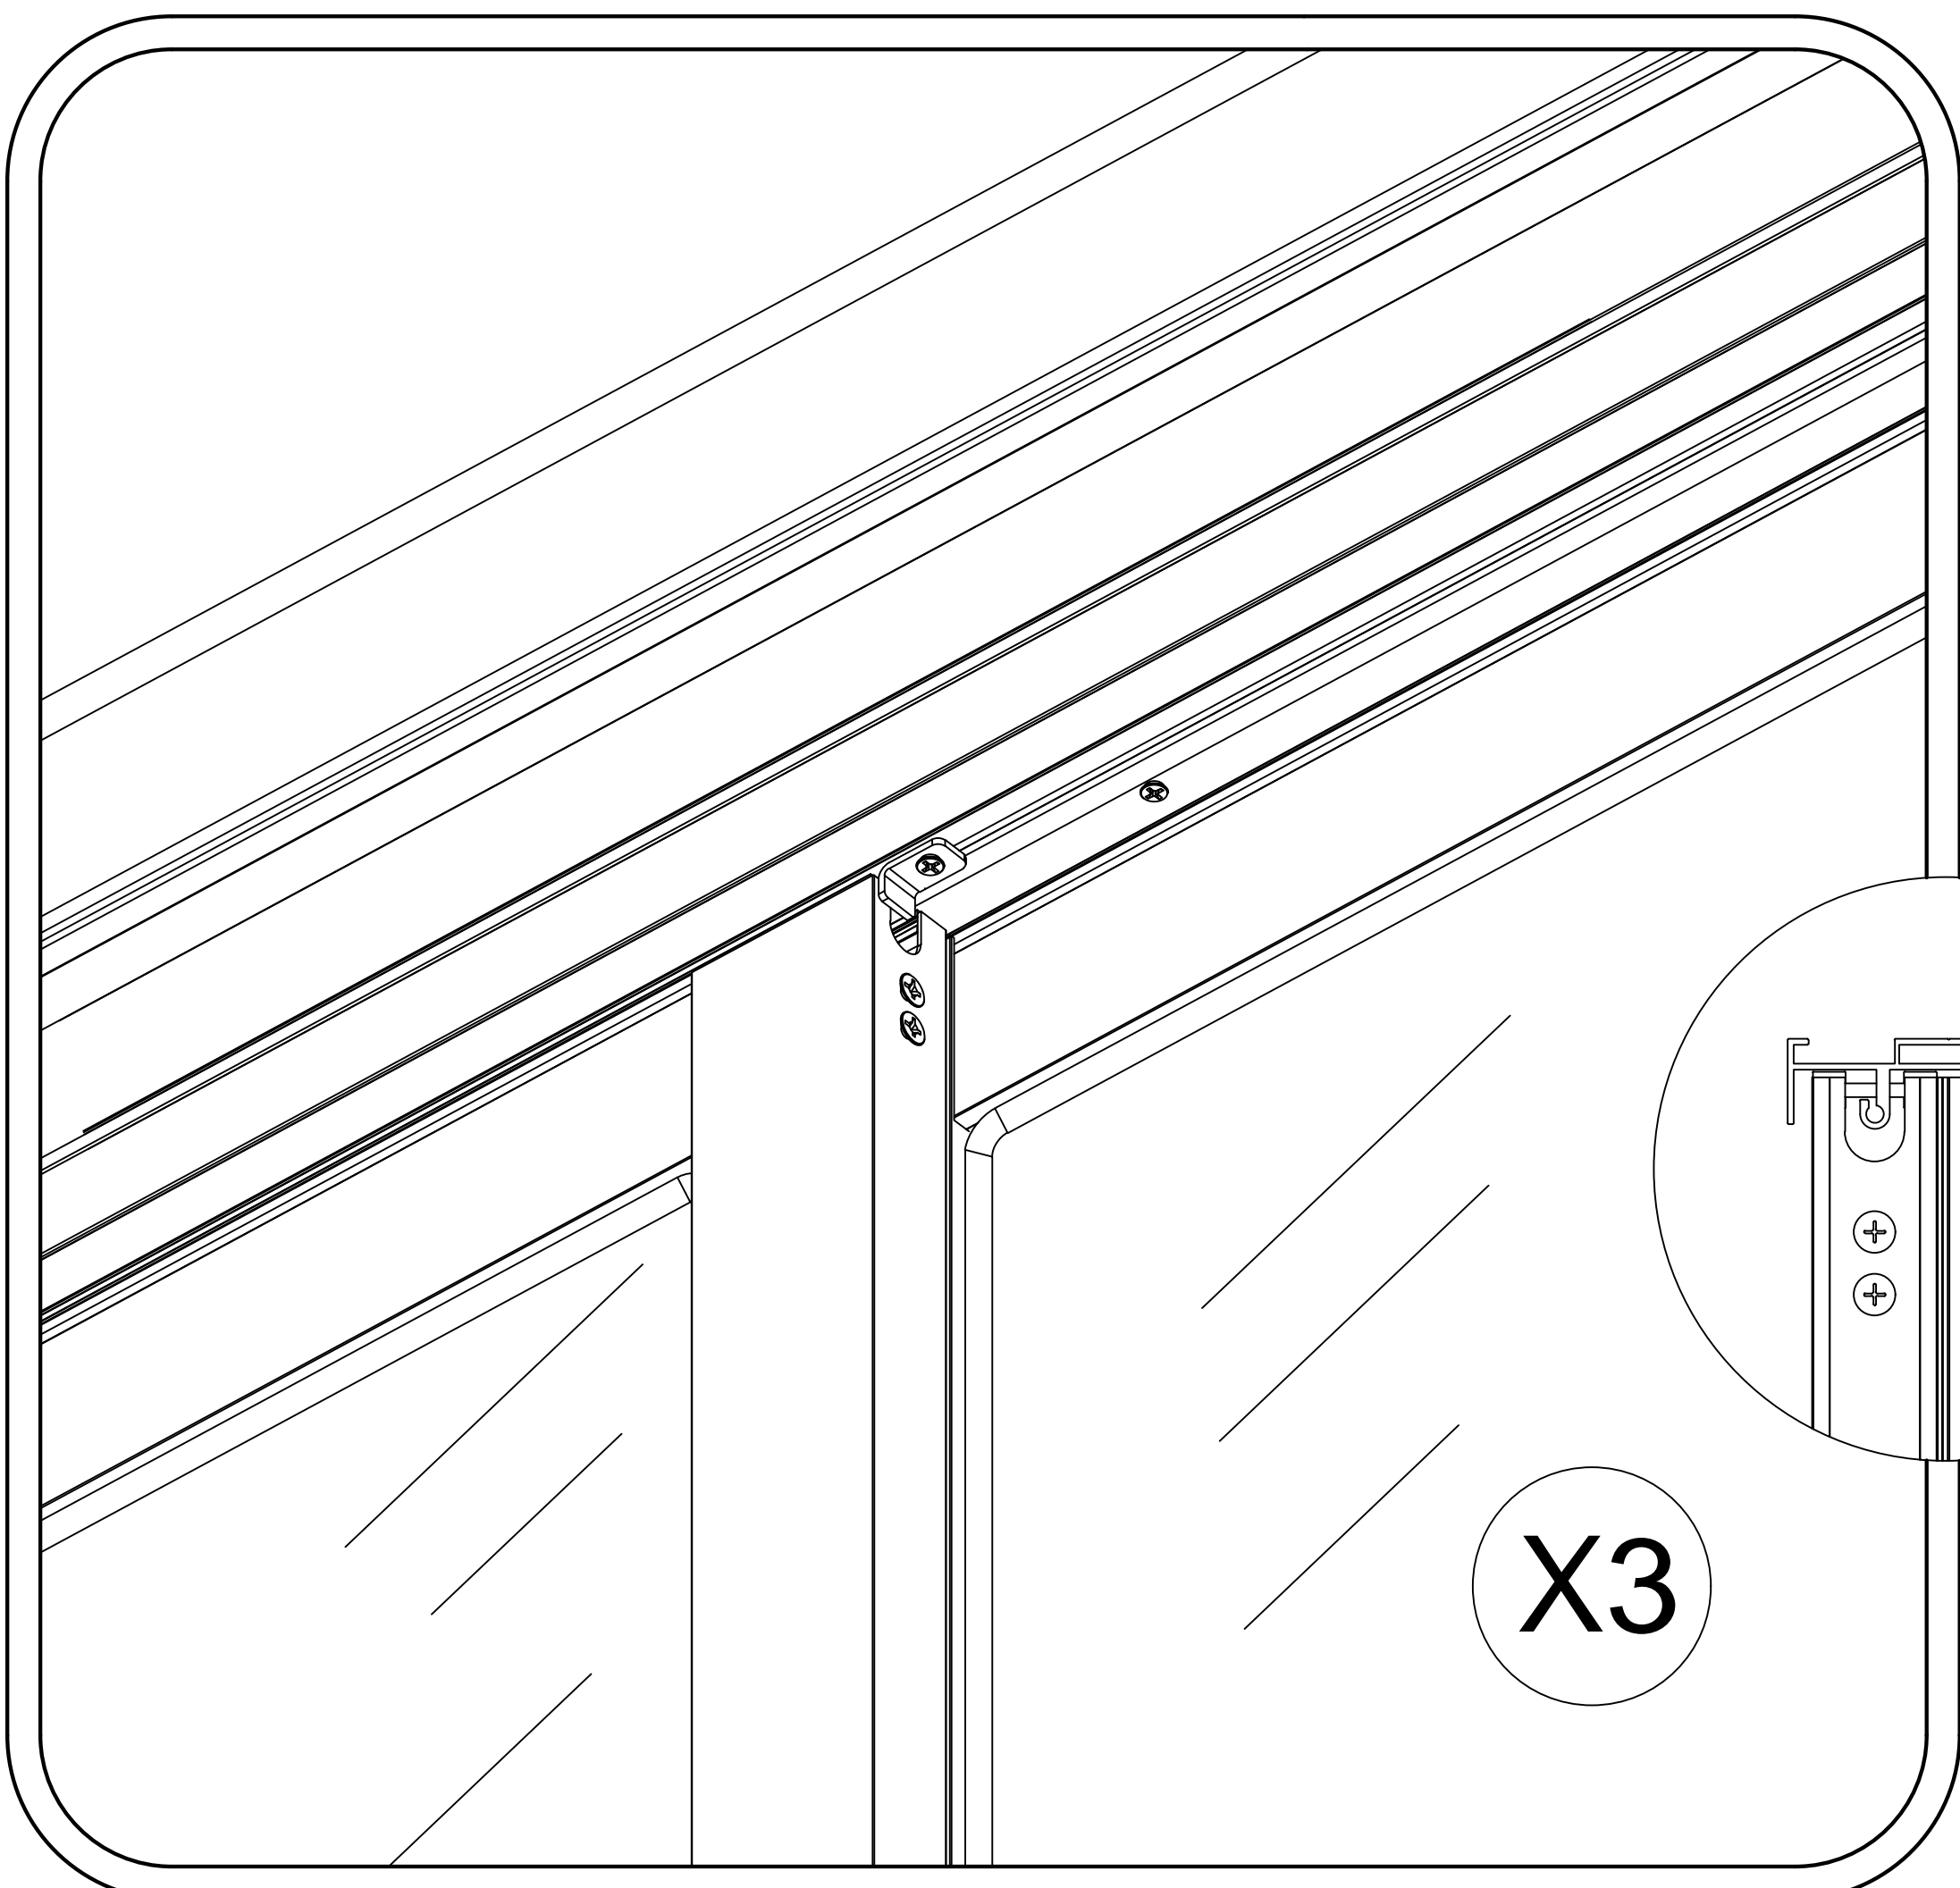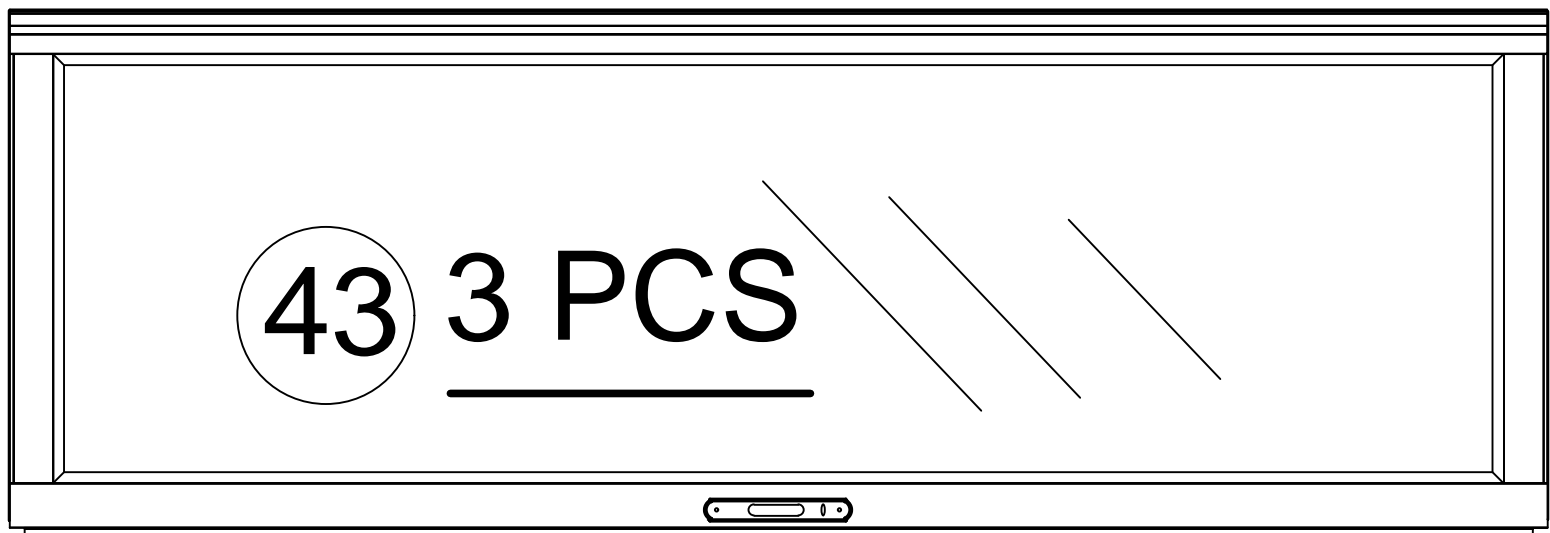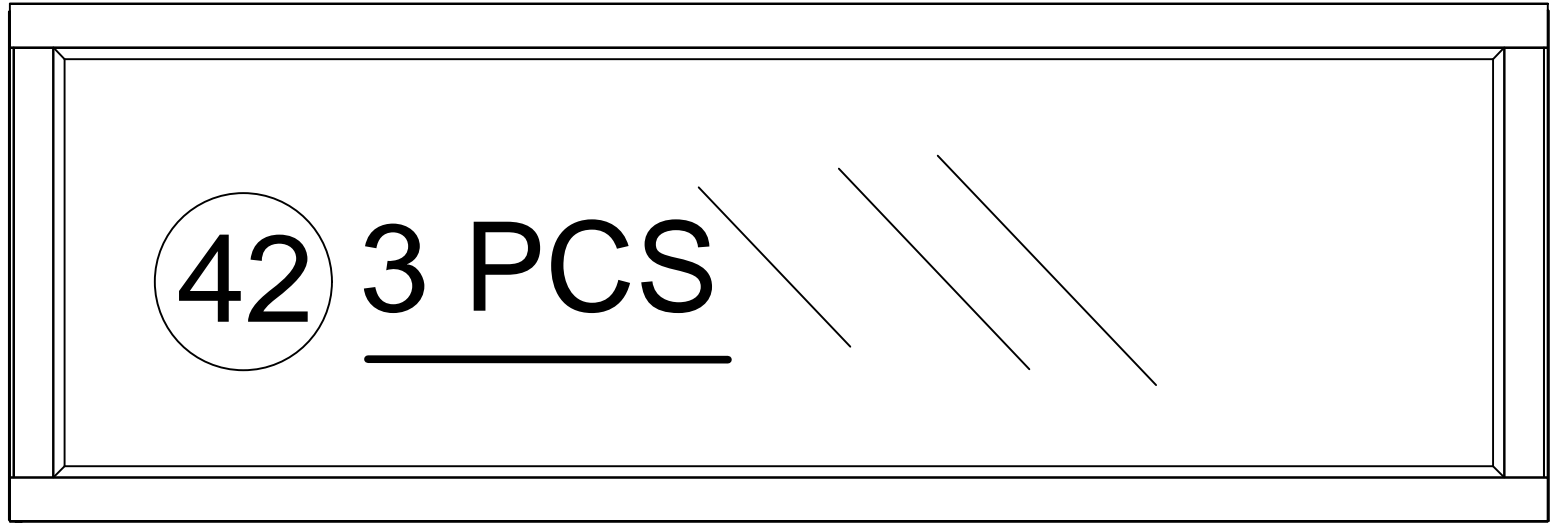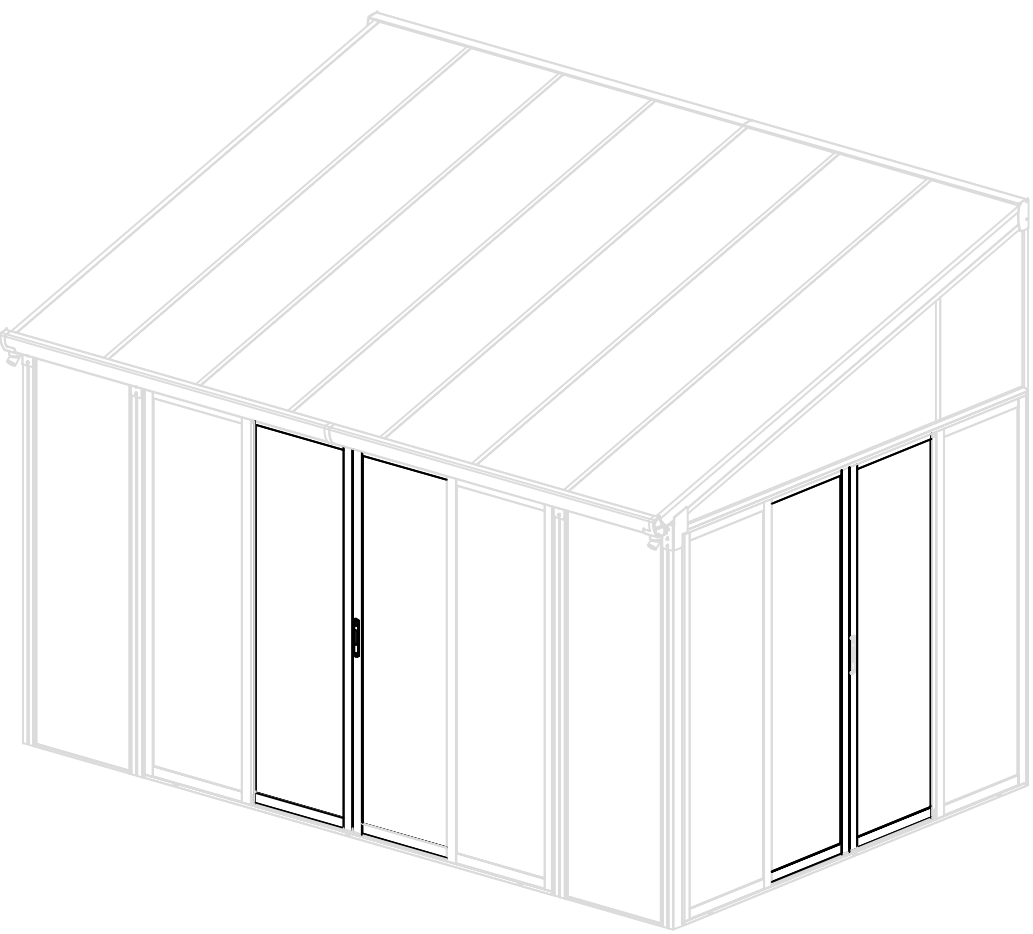

X3

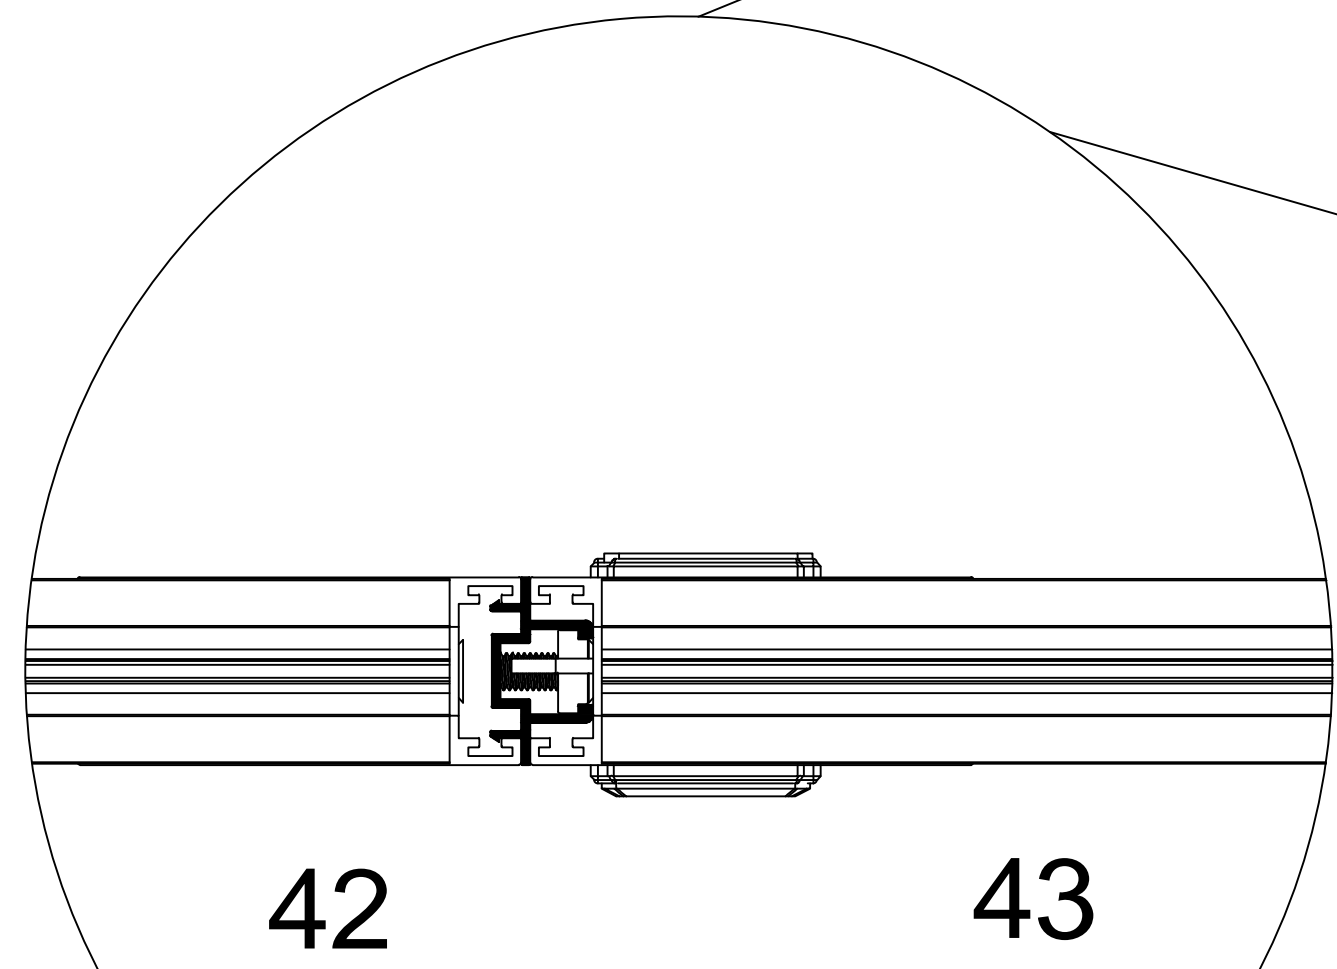

X3

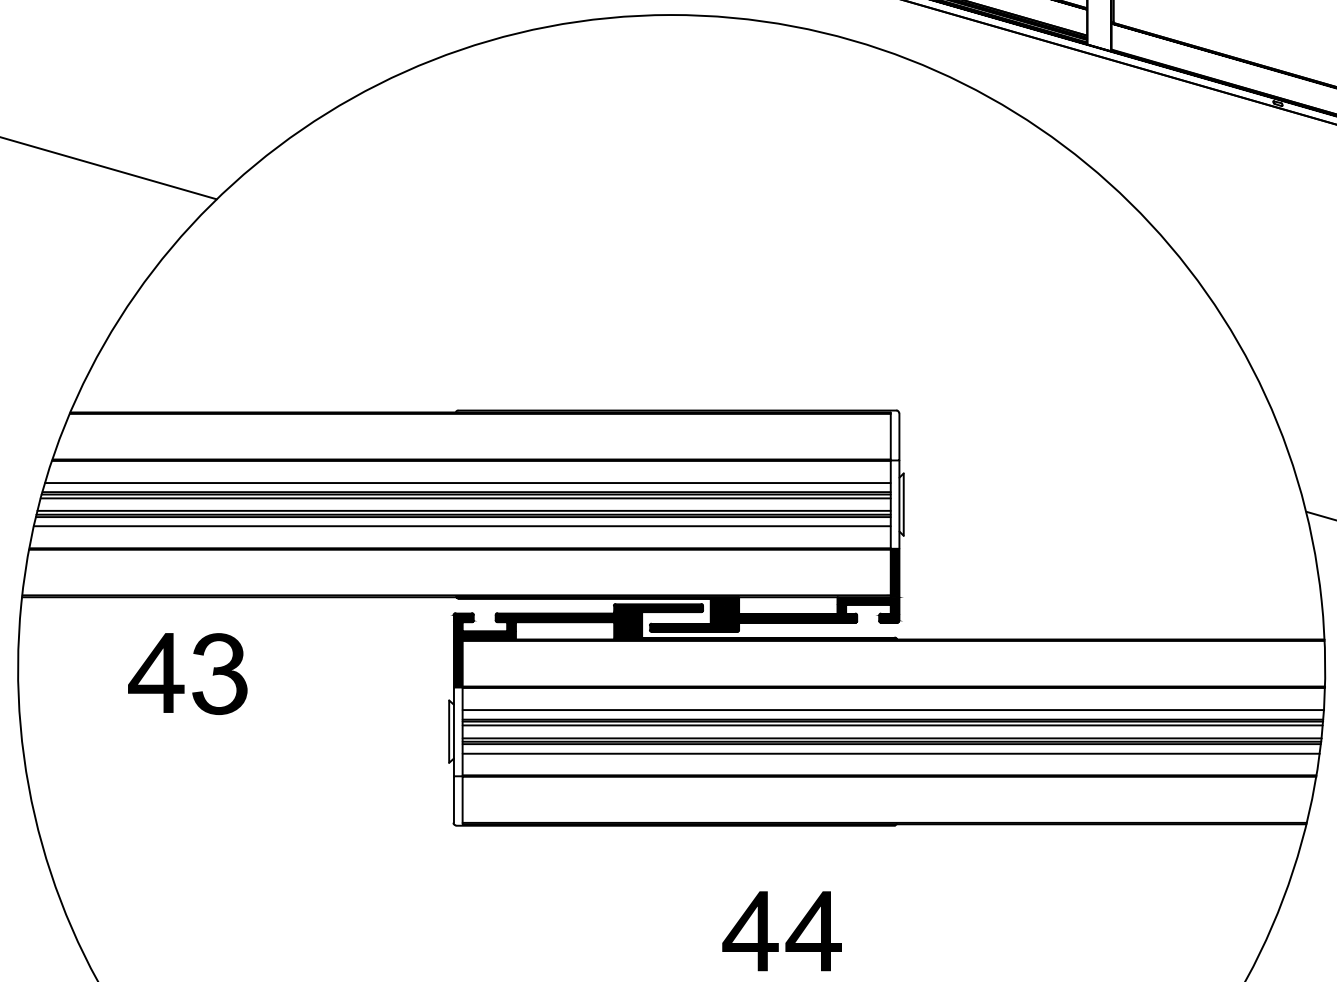

X3

