
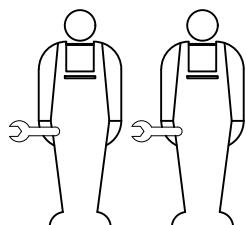


# BED FRAME

SIZE:FULL

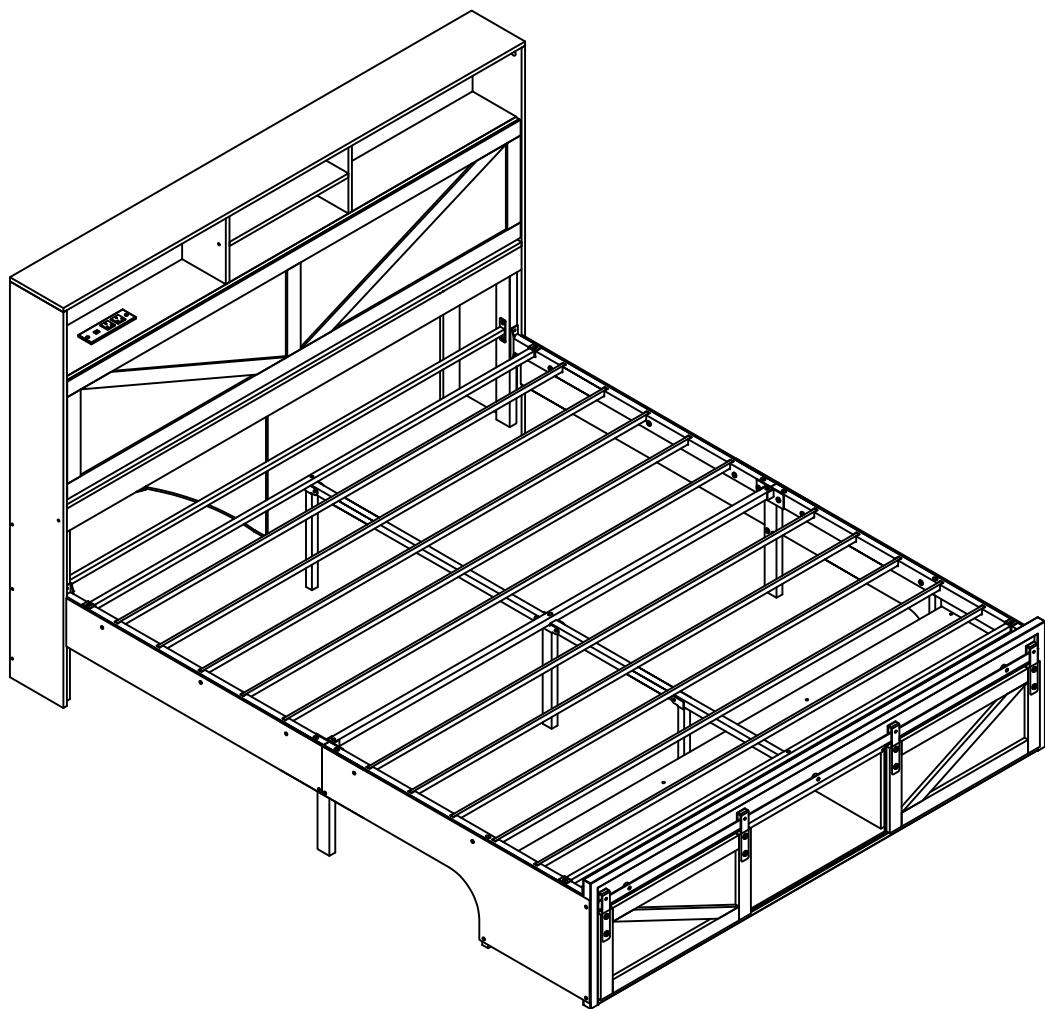

Suggestion:

For a simpler and quicker assembly process,  
we recommend that two people work together.

Due to the product's structure, the estimated assembly time is 120 minutes.

## IMPORTANT:

1. Please read the instructions carefully before assembling the product.
2. Before starting the assembly process, check the package carefully to make sure all necessary boards and parts are included.
3. If there are any defective or missing parts after unpacking, please stop assembly and immediately contact us.
4. Before assembly, put all parts and boards in an open area. Ensure that you have the correct parts before screwing them in place.

## ⚠ Warning:

1. During assembly, keep all small objects out of the reach of children, as they may be fatal if swallowed or inhaled.
2. Never allow children to climb or play around the product to protect children from injury caused by the tilting of the product.
3. To avoid the potential dangers of suffocation, please keep all parts and packaging away from children.

## Self equipped tools












Slotted Screwdriver  
(Not included)



Electric Drill  
(Not included)











# Parts Identification 1/4

Not actual size

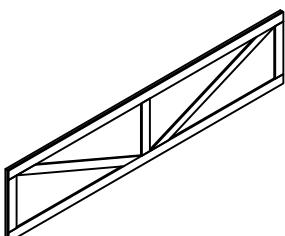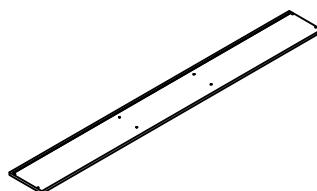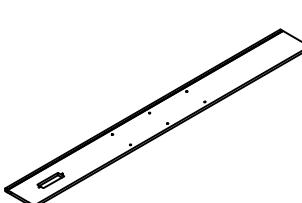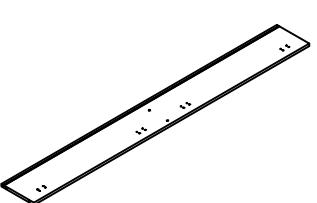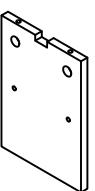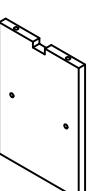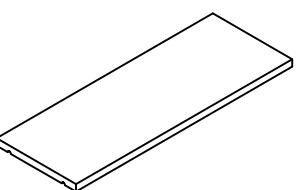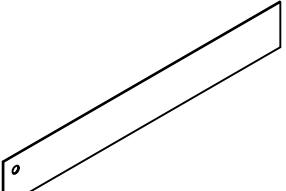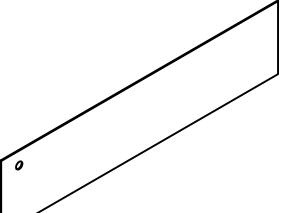 Q'ty: 1	 Q'ty: 1	 Q'ty: 1
 Q'ty: 1	 Q'ty: 1	 Q'ty: 1
 Q'ty: 1	 Q'ty: 1	 Q'ty: 1
 Q'ty: 1	 Q'ty: 1	 Q'ty: 1













# Parts Identification 2/4

Not actual size

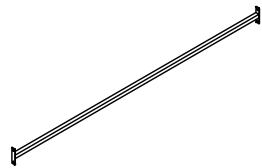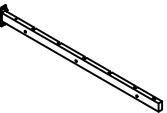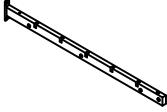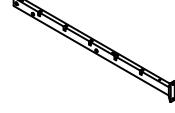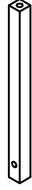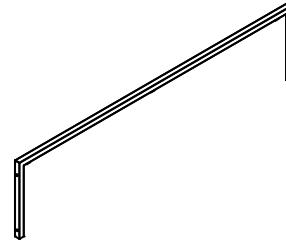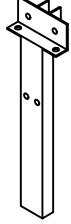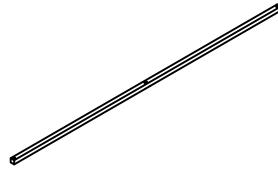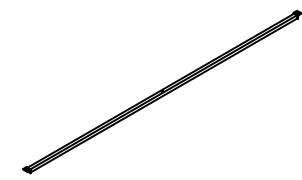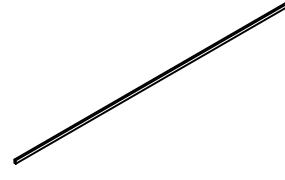 Q'ty: 1	 Q'ty: 1	 Q'ty: 1
 Q'ty: 1	 Q'ty: 1	 Q'ty: 1
 Q'ty: 2	 Q'ty: 1	 Q'ty: 2
 Q'ty: 1	 Q'ty: 2	 Q'ty: 10

# Parts Identification 3/4

Not actual size

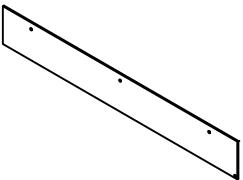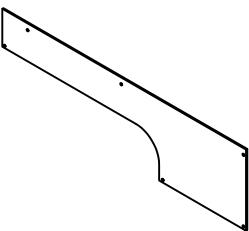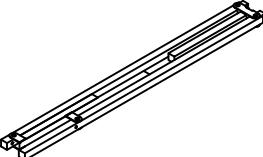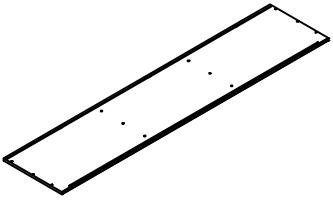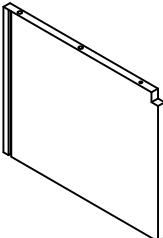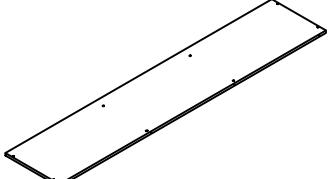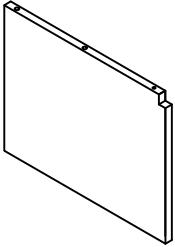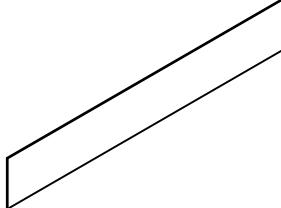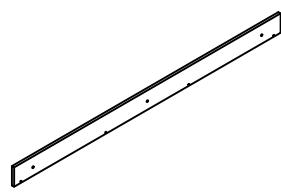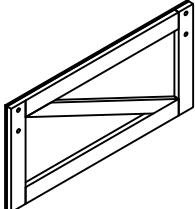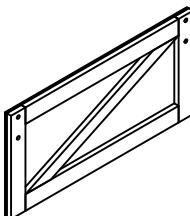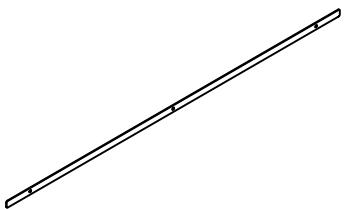
 Q'ty: 2	 Q'ty: 2	 Q'ty: 1
 Q'ty: 1	 Q'ty: 2	 Q'ty: 1
 Q'ty: 2	 Q'ty: 1	 Q'ty: 1
 Q'ty: 1	 Q'ty: 1	 Q'ty: 1

---

# Parts Identification 4/4


Not actual size

37

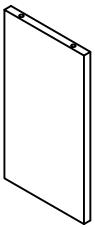


Q'ty: 1

38

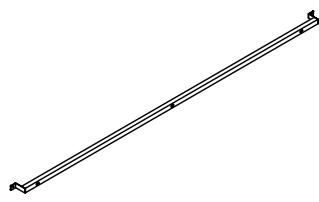

Q'ty: 1

39

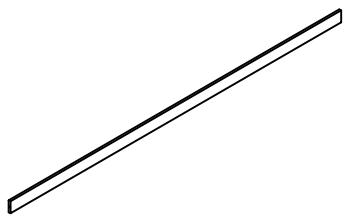

Q'ty: 1

40




Q'ty: 1

41



Q'ty: 1

# Hardware List

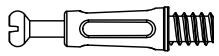

**A** x 22+2




**B** x 22+2




Ø5 x 38mm

**C** x 36+3

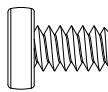


Ø1/4" x 11mm

**D** x 25+2

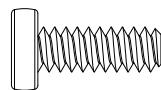


Ø1/4" x 16mm

**E** x 12+1

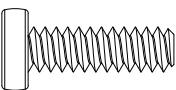


Ø1/4" x 25mm

**F** x 21+1

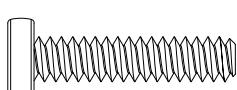


Ø1/4" x 28mm

**G** x 3+1

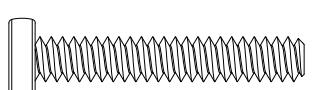


Ø1/4" x 60mm

**H** x 5+1

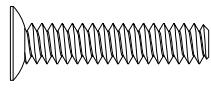

Ø1/4" x 28mm

**I** x 3+1

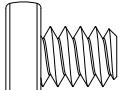


M8 x 28mm

**J** x 2+1




M8 x 50mm

**K** x 4+1

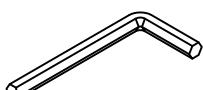

M4

**L** x 1

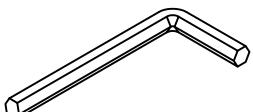


M5

**M** x 1




M3

**N** x 1

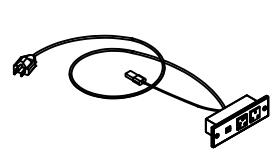


**O** x 1

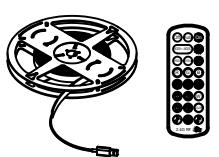

**P** x 1



**Q** x 2

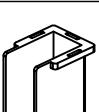

**R** x 20+6













**S** x 4



**T** x 2

# Hardware List

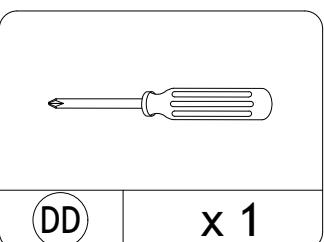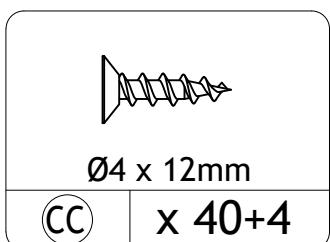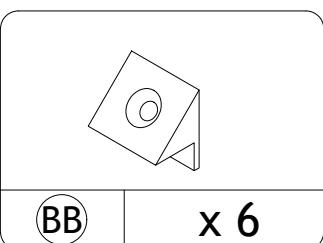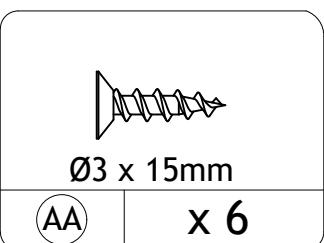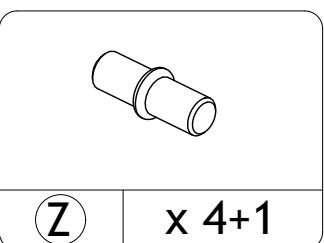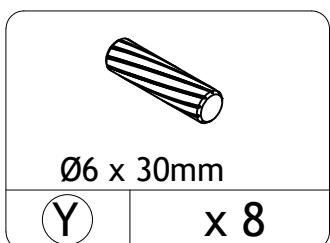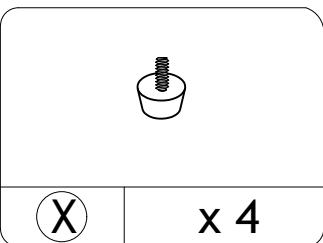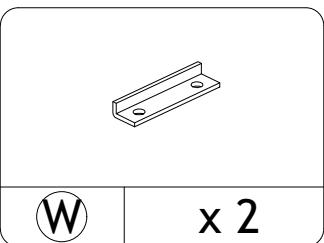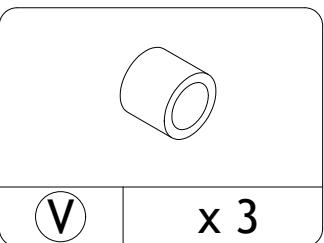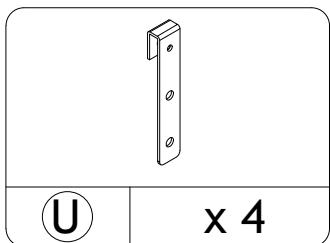


★ In many cases, we include additional hardware. So after following the assembly instructions, don't worry if there are still extra pieces left over—they're included as a "just in case" for your convenience.

★ NOTE: When assembling, please do not tighten the screws one by one completely first, until making sure that all the corresponding screws are placed in the right positions.

# Parts Identification

Not actual size

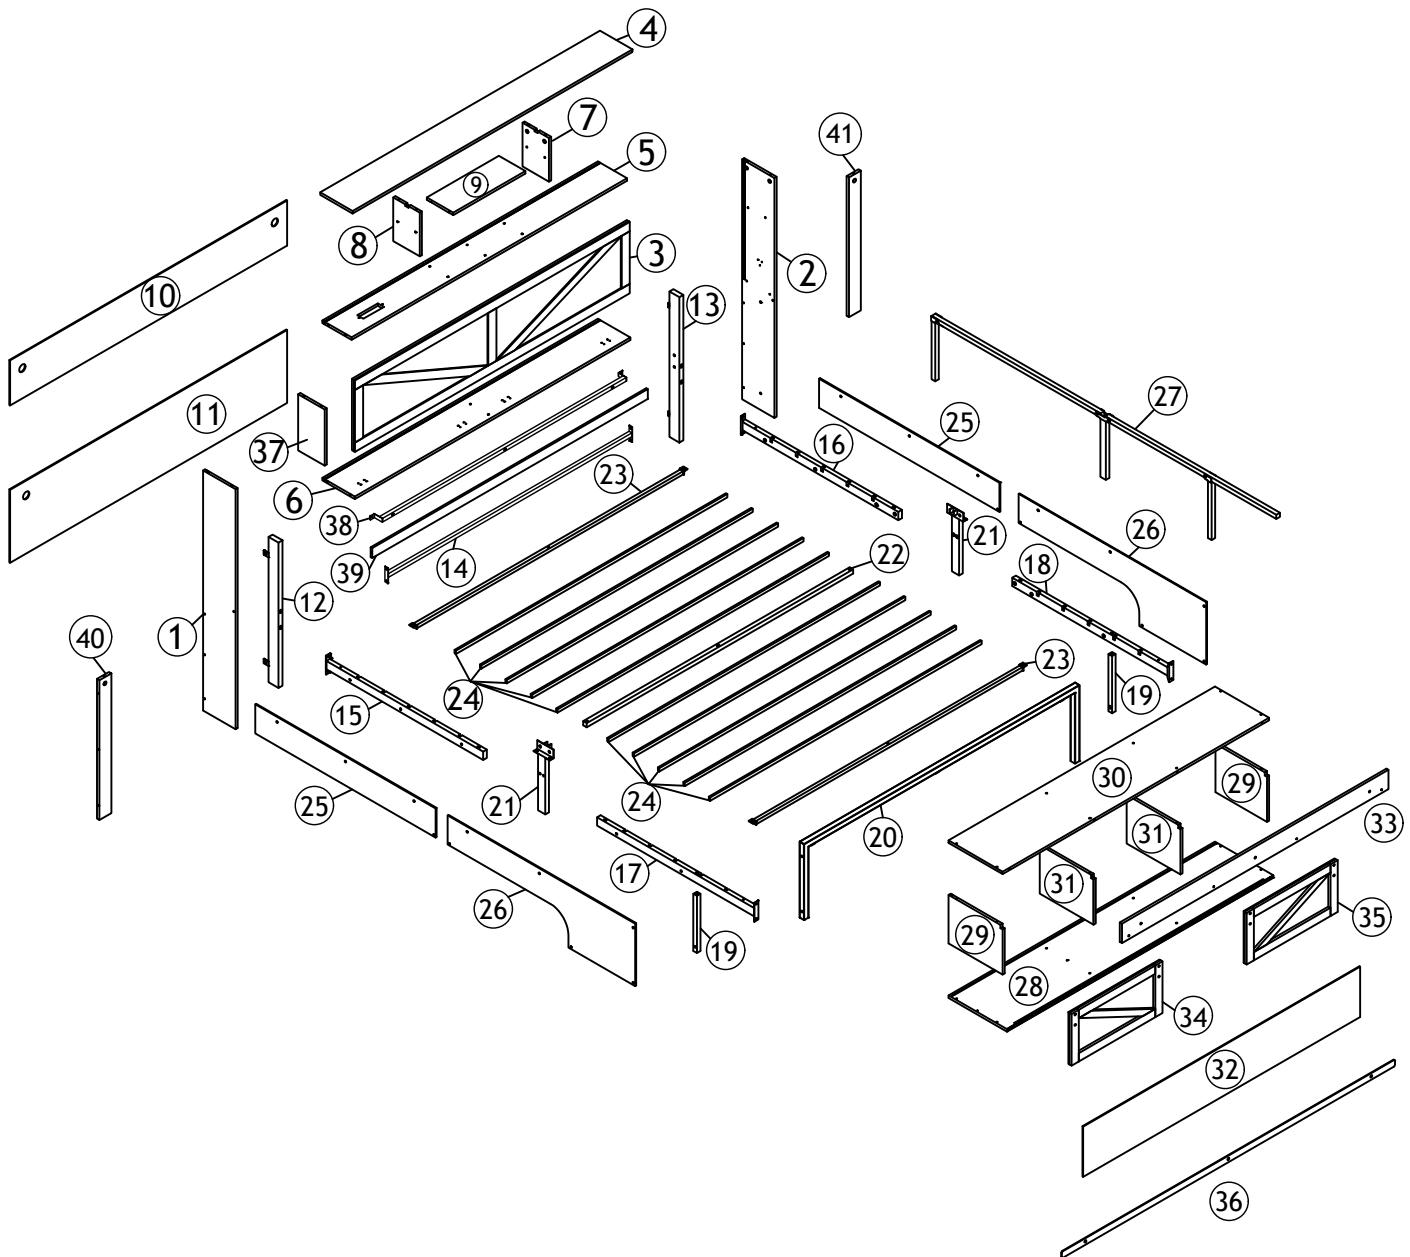

## ATTENTION

When you begin each step, please check carefully whether you have taken the correct parts, so as not to use the wrong parts and cause the wrong assembly.




We recommend that you do not rush to tighten the screws. It is best to tighten the screws to two-thirds first, after all the steps are finished and the position is well adjusted, then tighten.

# Screw Fitting 1:1 Diagram

(C)		$\varnothing 5 \times 38\text{mm}$
(D)		$\varnothing 1/4" \times 11\text{mm}$
(E)		$\varnothing 1/4" \times 16\text{mm}$
(F)		$\varnothing 1/4" \times 25\text{mm}$
(G)		$\varnothing 1/4" \times 28\text{mm}$
(H)		$\varnothing 1/4" \times 60\text{mm}$
(I)		$\varnothing 1/4" \times 28\text{mm}$
(J)		$M8 \times 28\text{mm}$
(K)		$M8 \times 50\text{mm}$
(AA)		$\varphi 3 \times 15\text{mm}$
(CC)		$\varphi 4 \times 12\text{mm}$




## STEP 1

**!** Please screws in this step  
need to be tightened

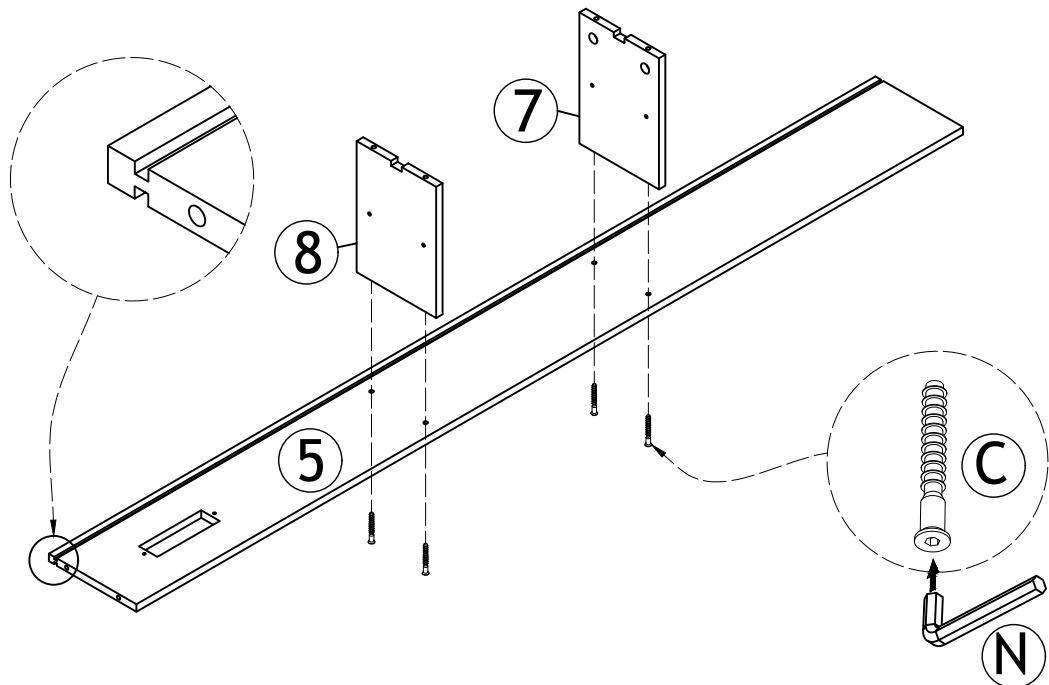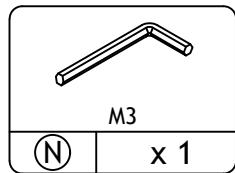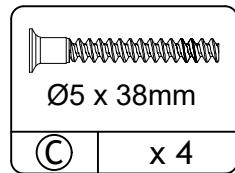


## STEP 2

**!** Please screws in this step  
need to be tightened

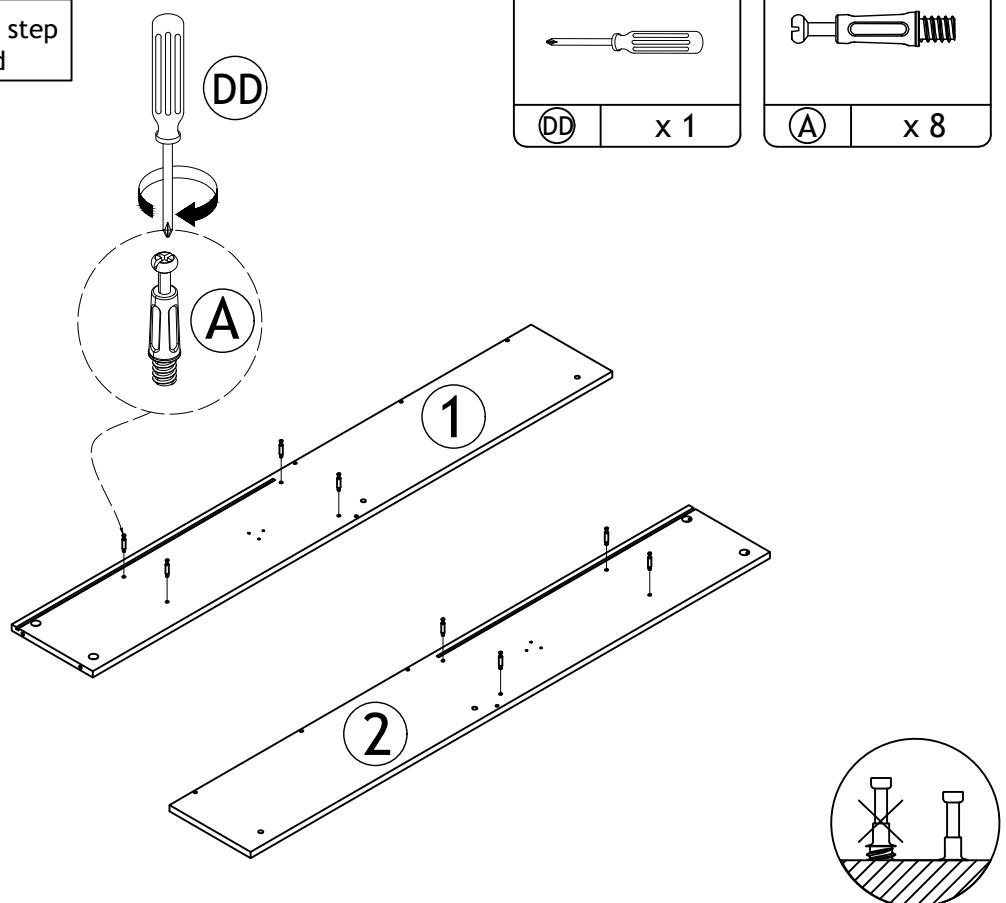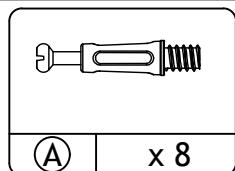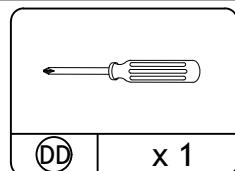


## STEP 3


**!** Please screws in this step  
need to be tightened

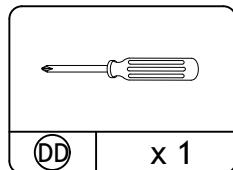


DD x 1

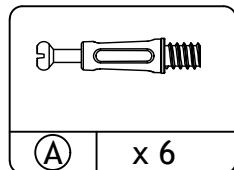


A x 6

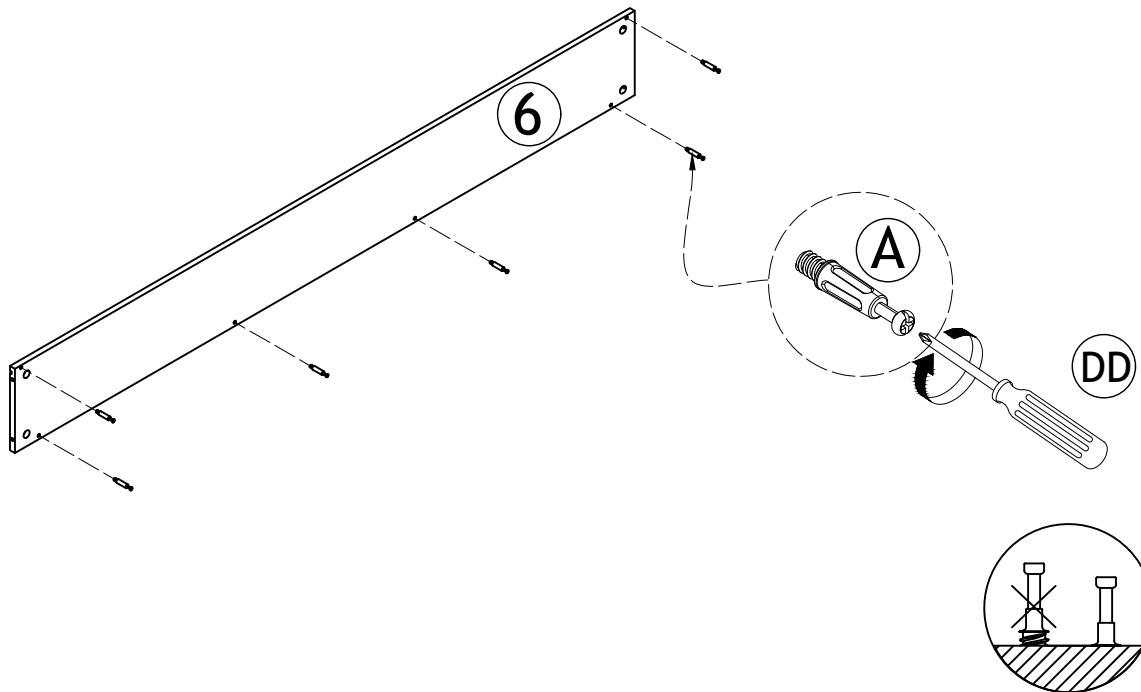


## STEP 4

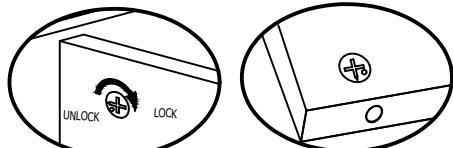

Proper orientation of CAM LOCK

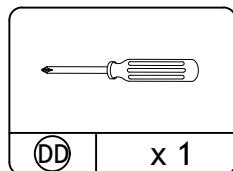


DD x 1

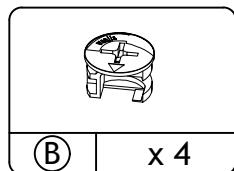




B x 4

**!** Please screws in this step  
need to be tightened

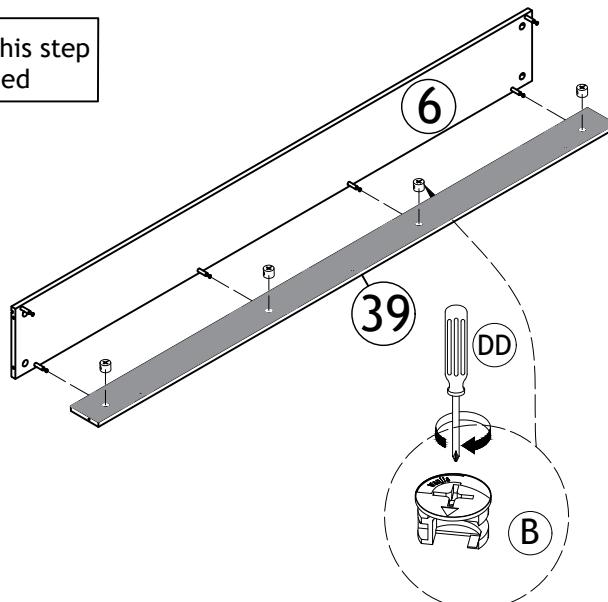


## STEP 5



**!** Please screws in this step  
need to be tightened

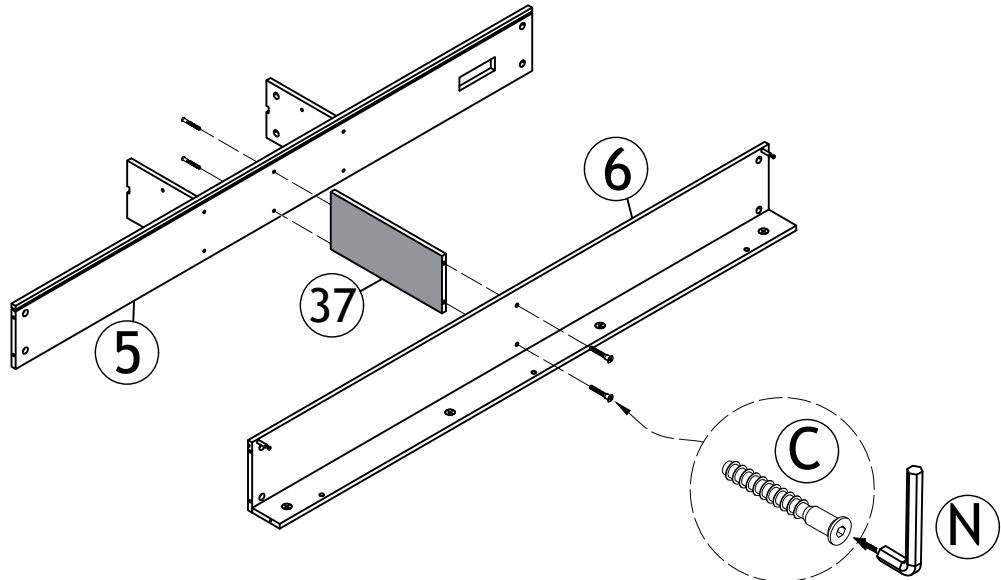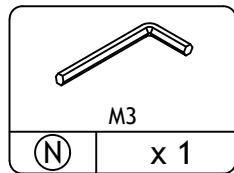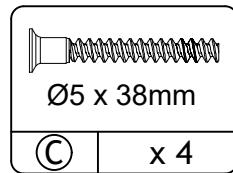


## STEP 6

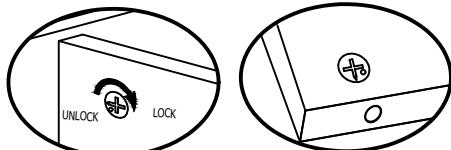

Proper orientation of CAM LOCK

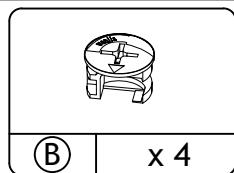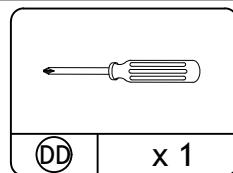


**!** Please screws in this step  
need to be tightened

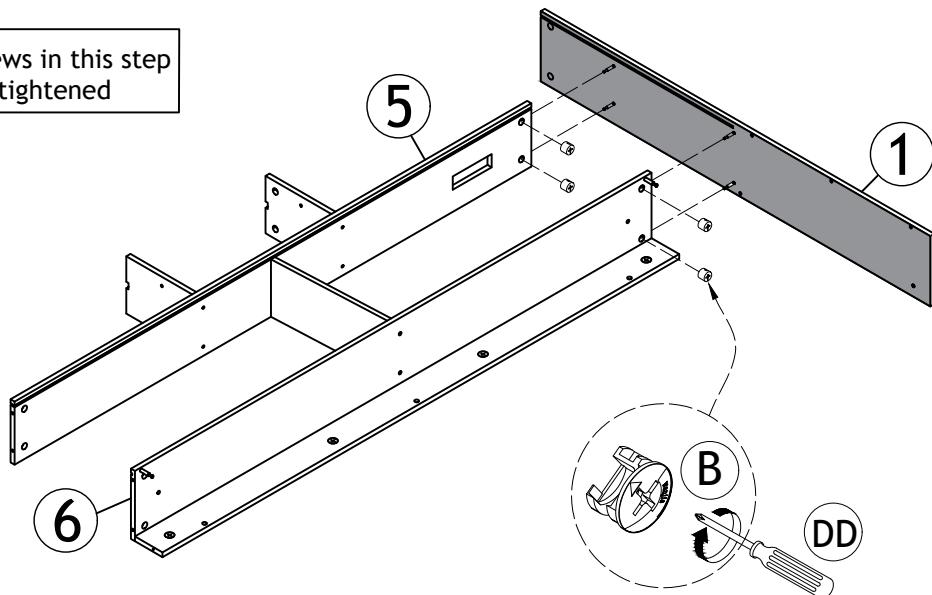


## STEP 7

---


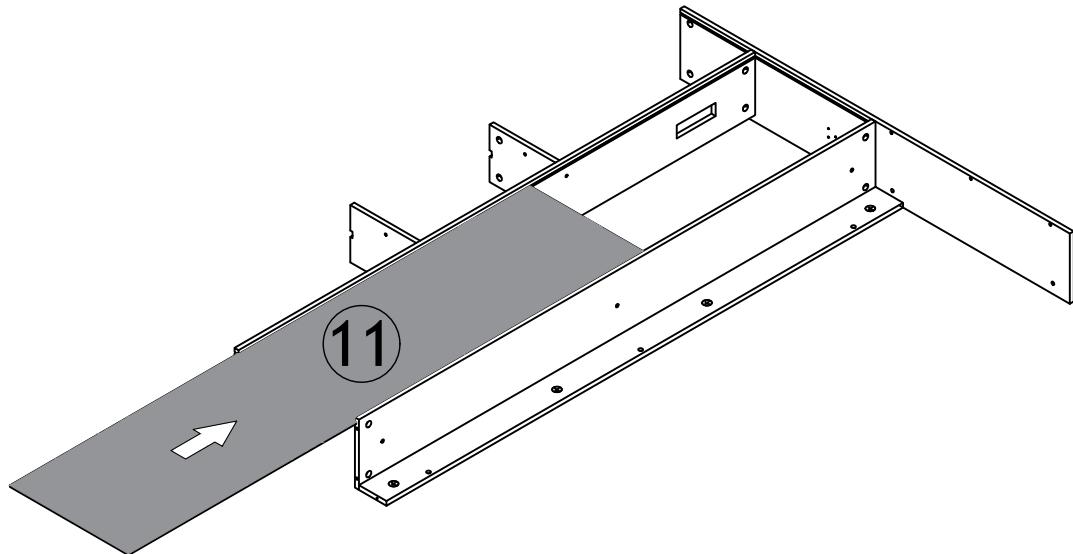


## STEP 8


---

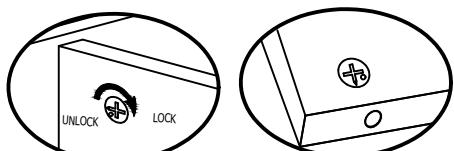


Proper orientation of CAM LOCK

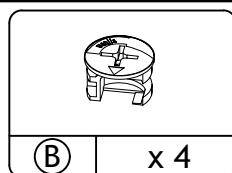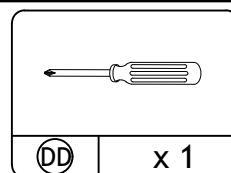



**!** Please screws in this step  
need to be tightened

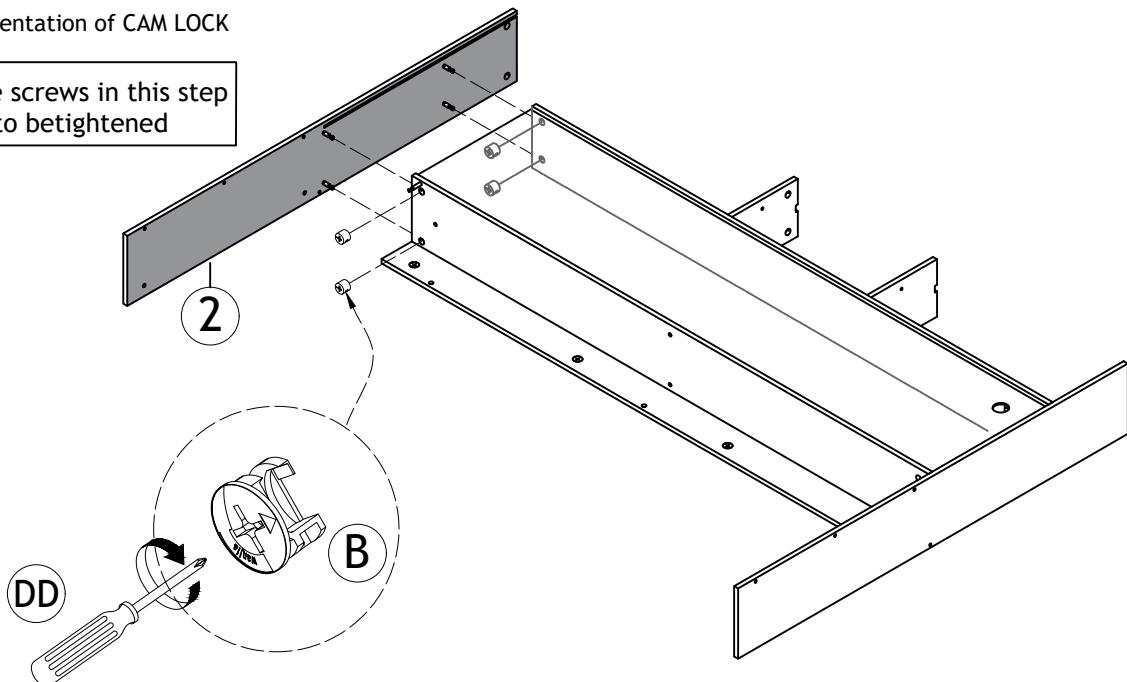


## STEP 9

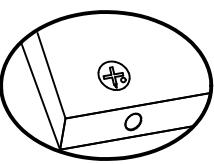

Proper orientation of CAM LOCK


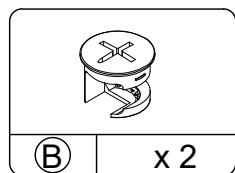
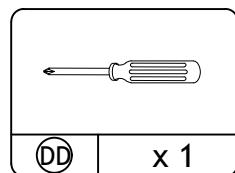


**⚠ Please screws in this step  
need to be tightened**

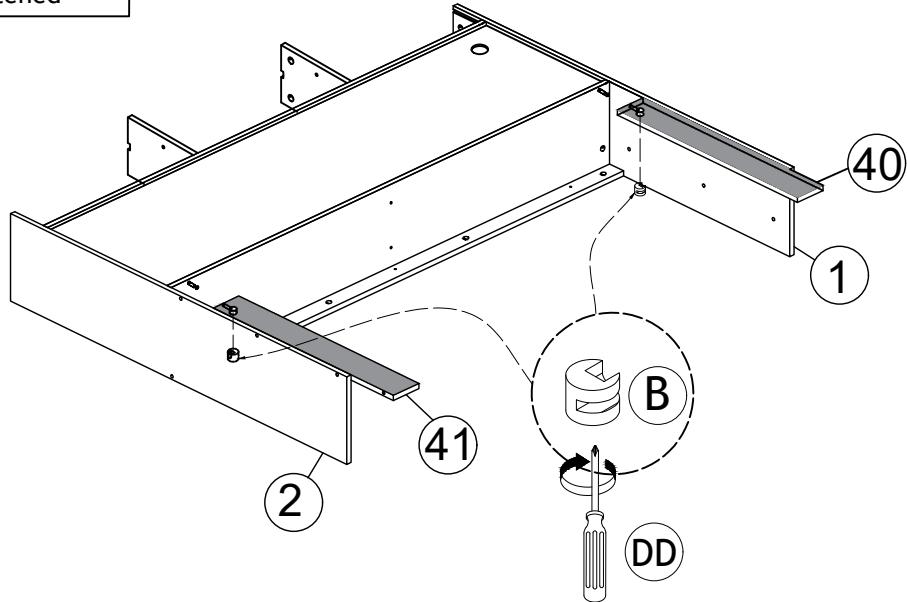

## STEP 10


**⚠ Please screws in this step  
need to be tightened**

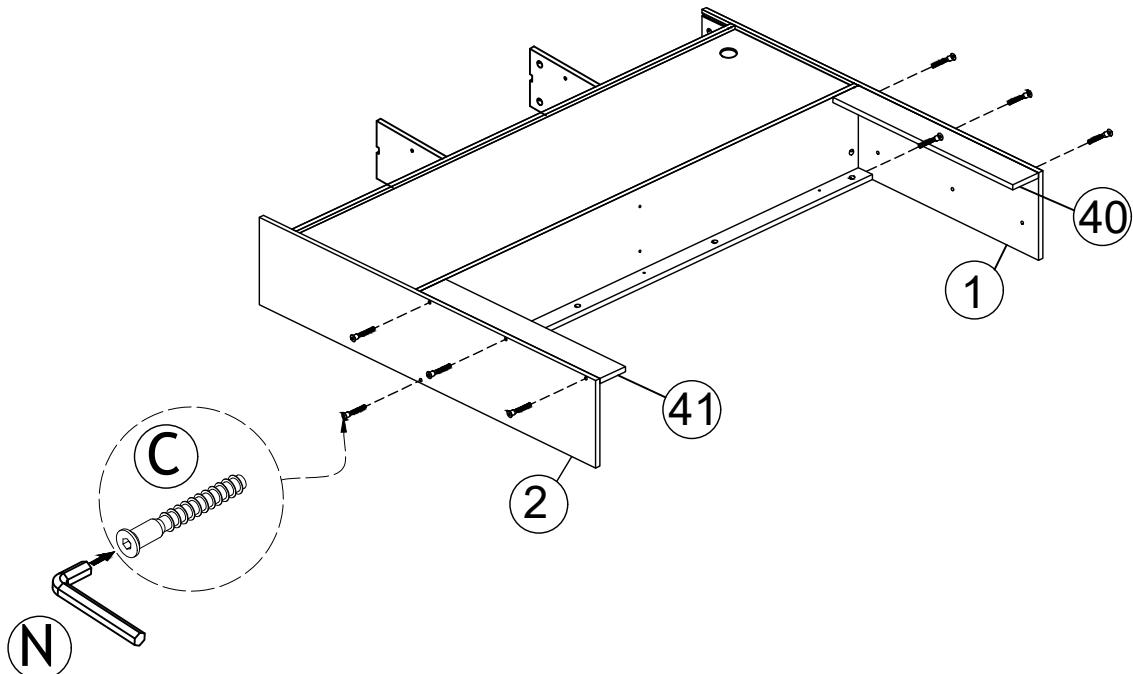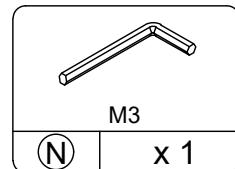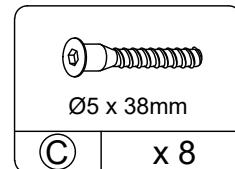

## STEP 11


---

 Please screws in this step  
need to be tightened

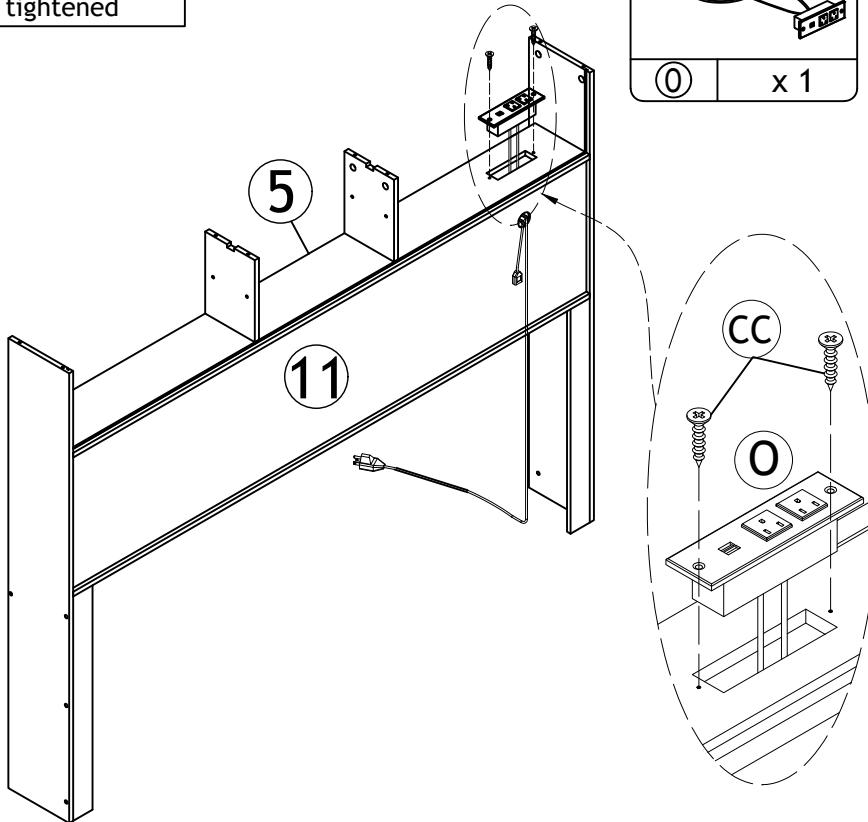




## STEP 12

---

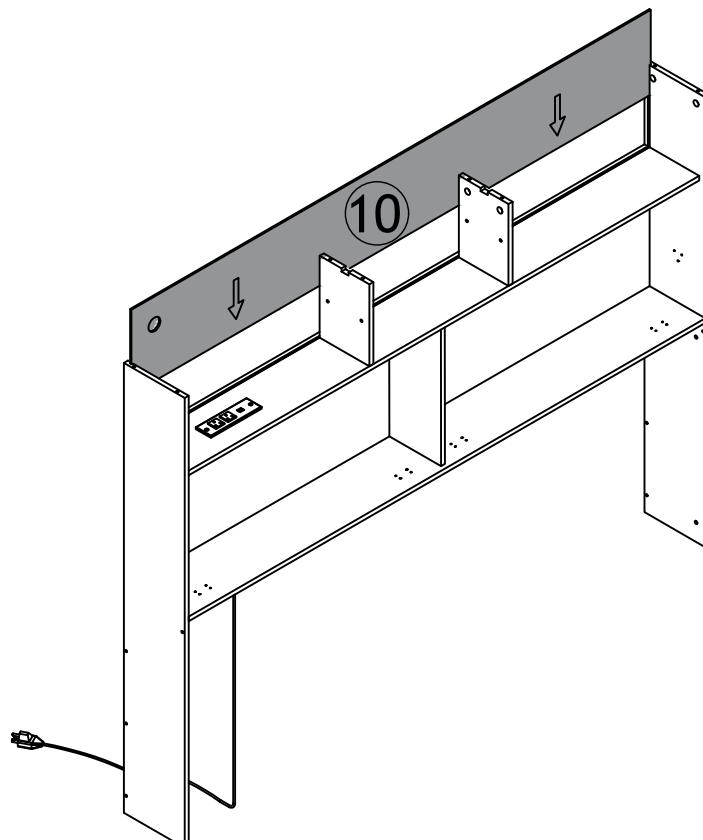


## STEP 13

**!** Please screws in this step  
need to be tightened

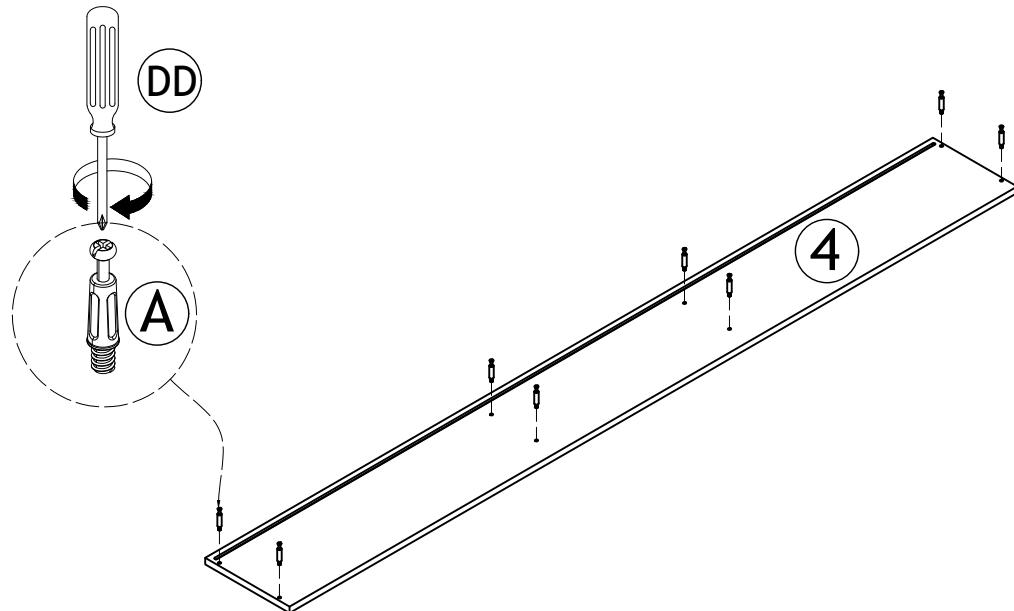
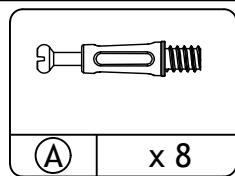
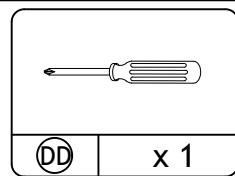


## STEP 14




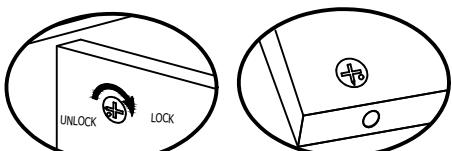


Proper orientation of CAM LOCK






**!** Please screws in this step  
need to be tightened

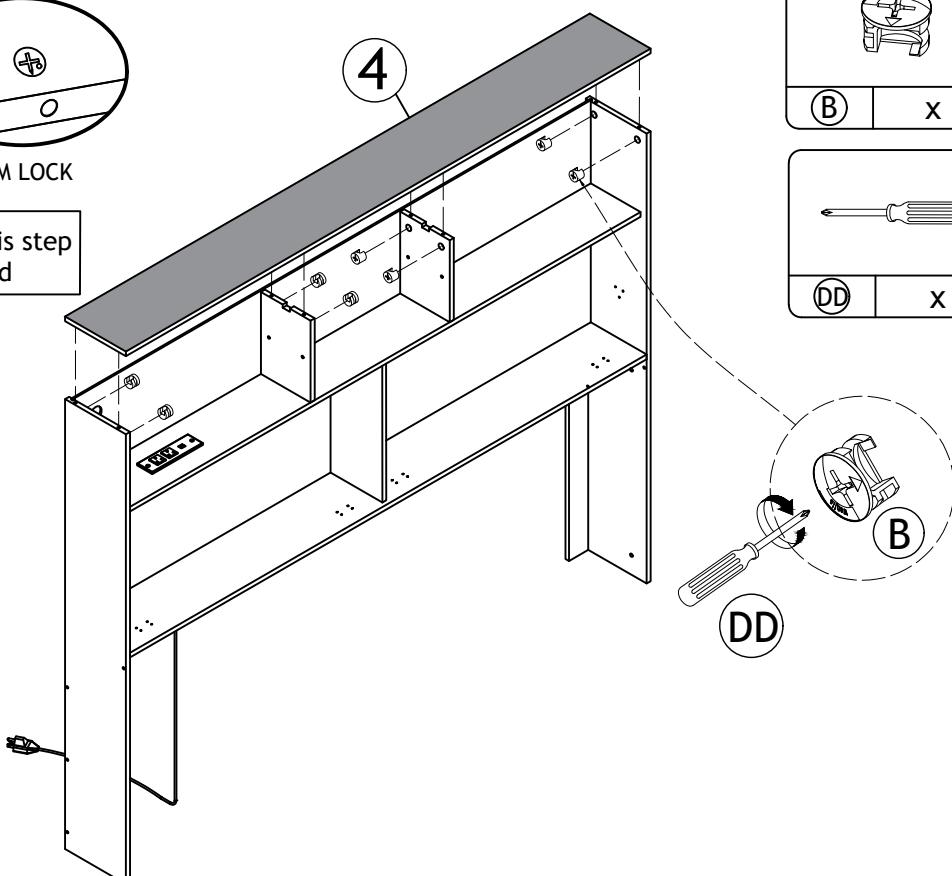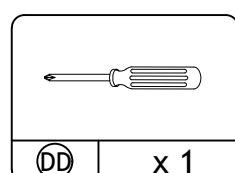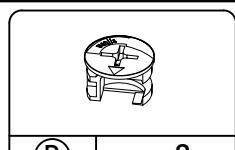

## STEP 15

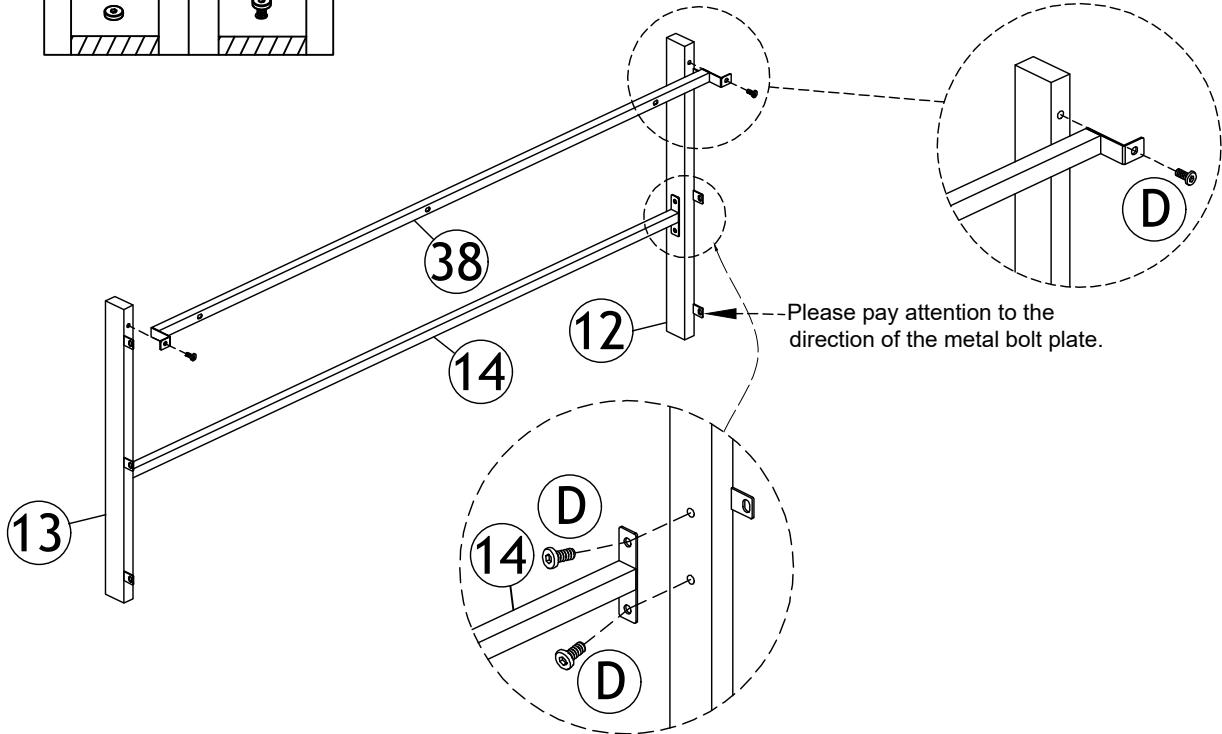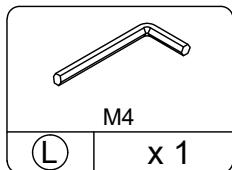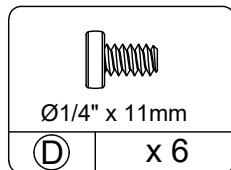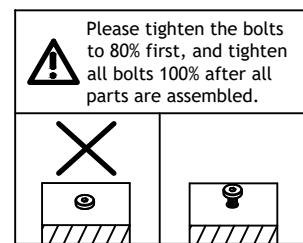





## STEP 16

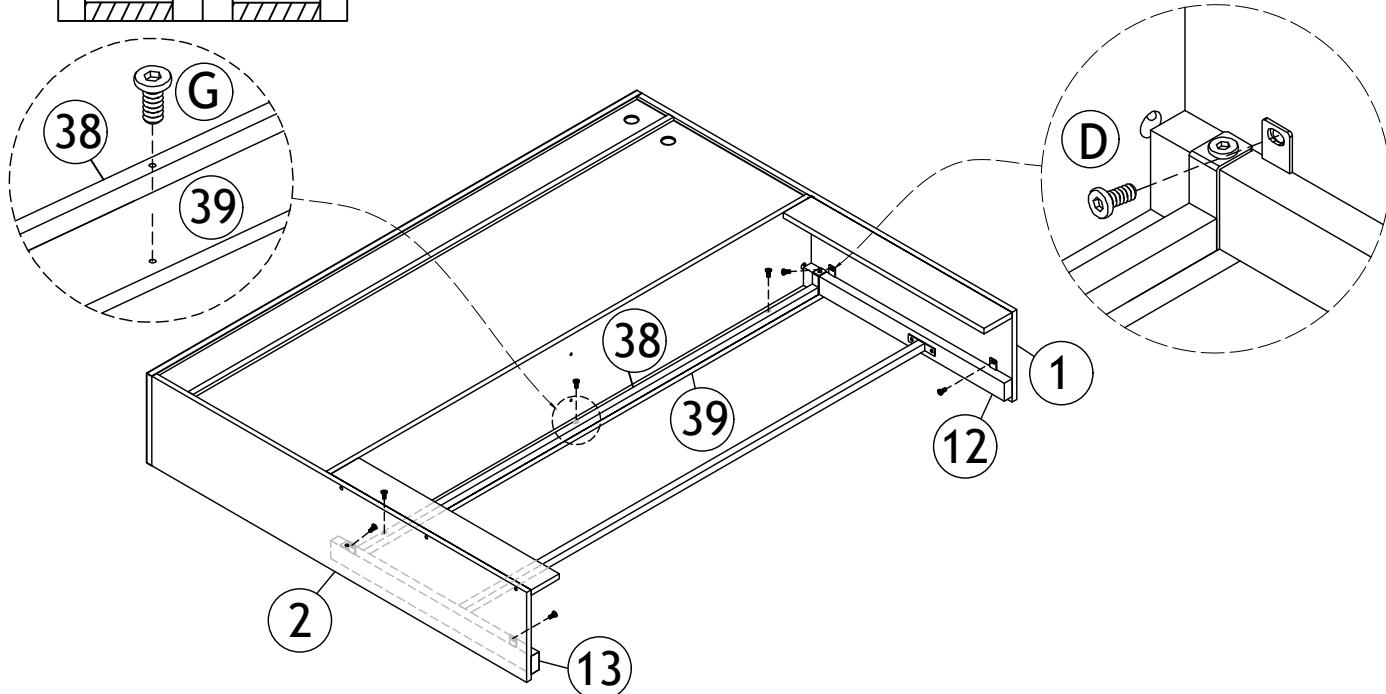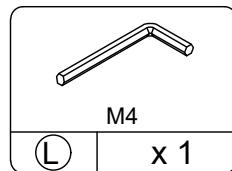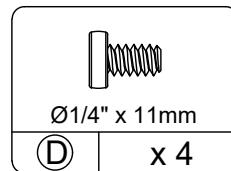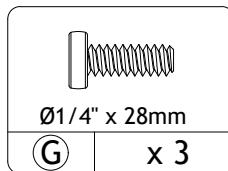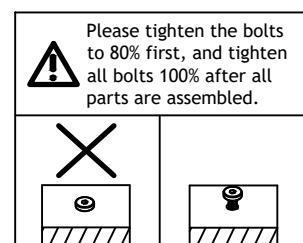

## STEP 17







Please screws in this step  
need to be tightened

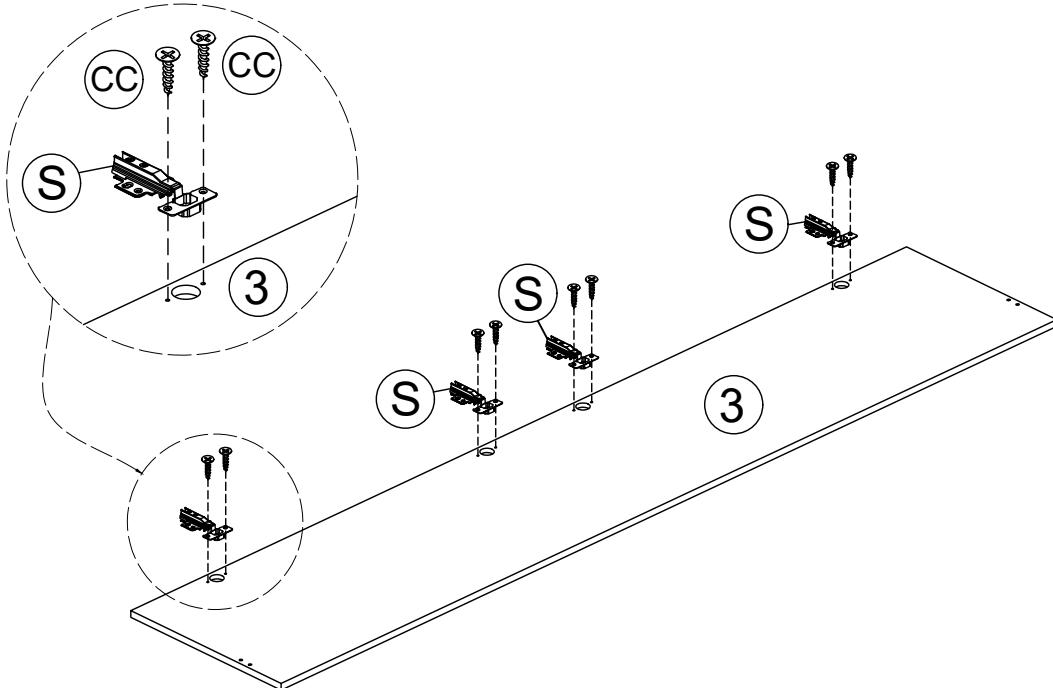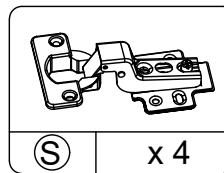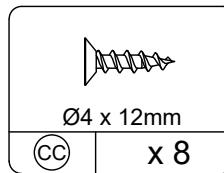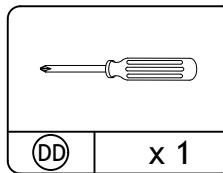

## STEP 18





Please screws in this step  
need to be tightened

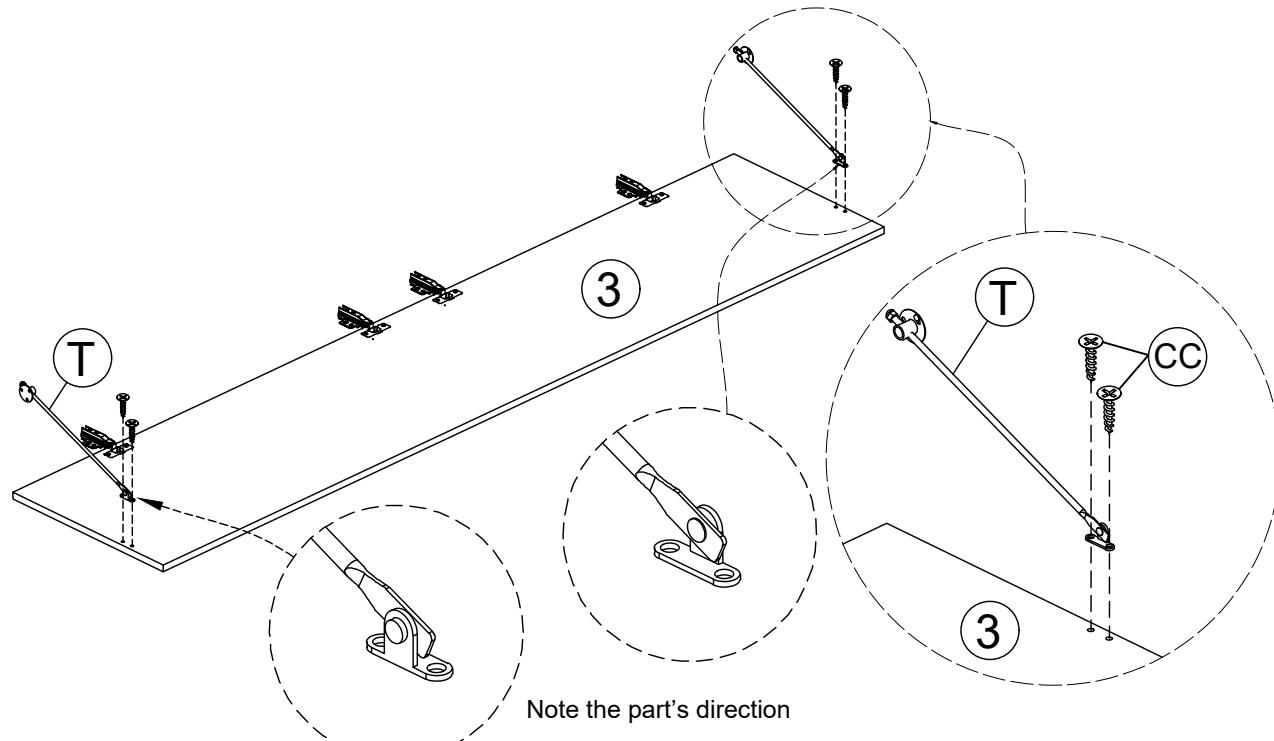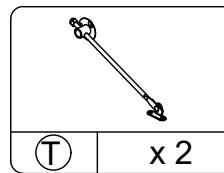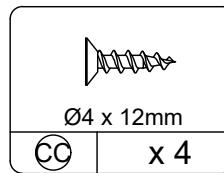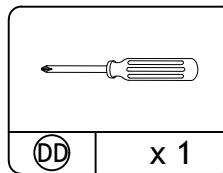


## STEP 19

---

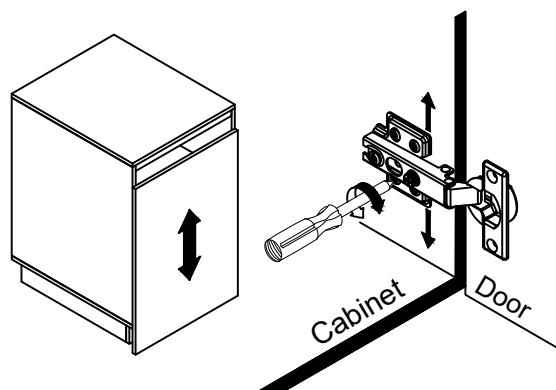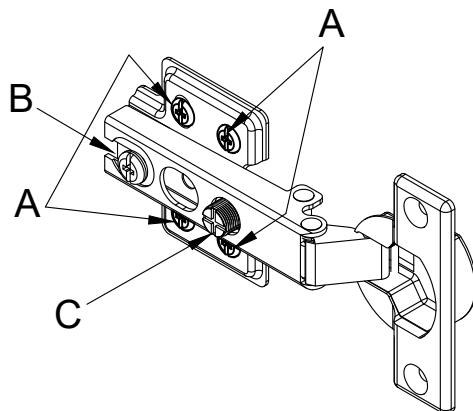


### To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

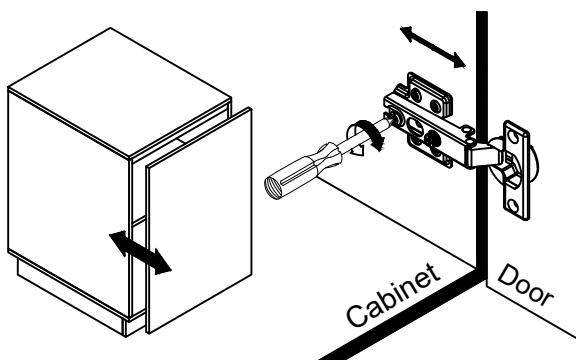

### To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

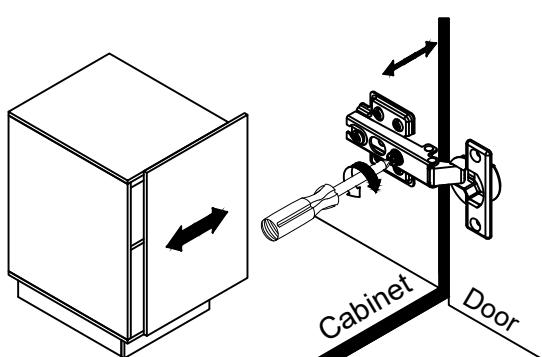




### To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

## STEP 20







Please screws in this step  
need to be tightened

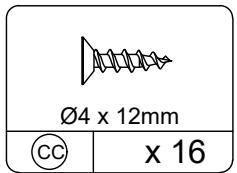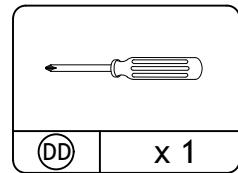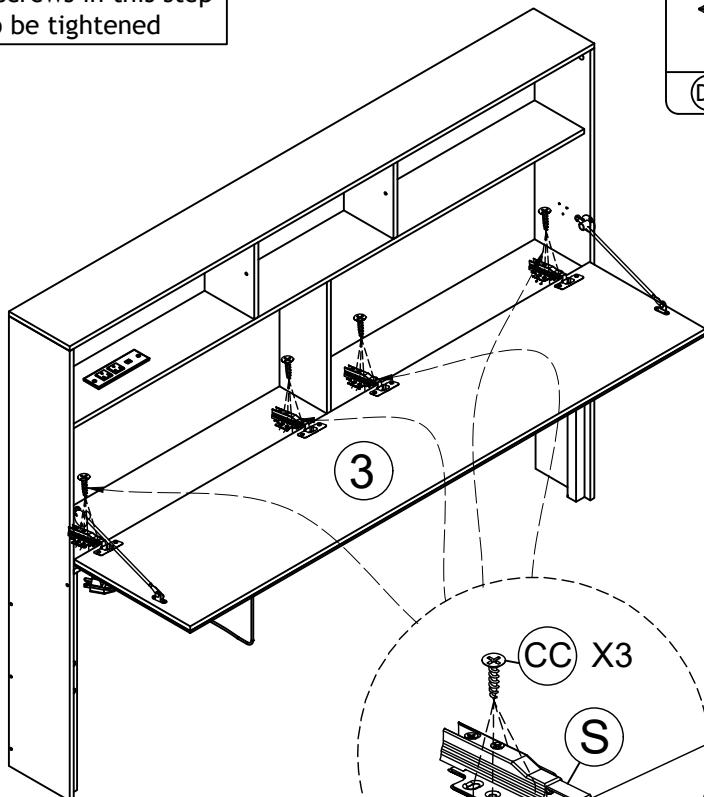

## STEP 21







Please screws in this step  
need to be tightened

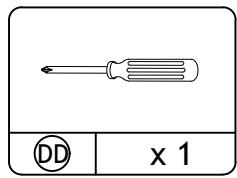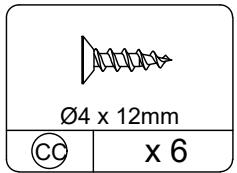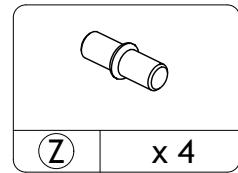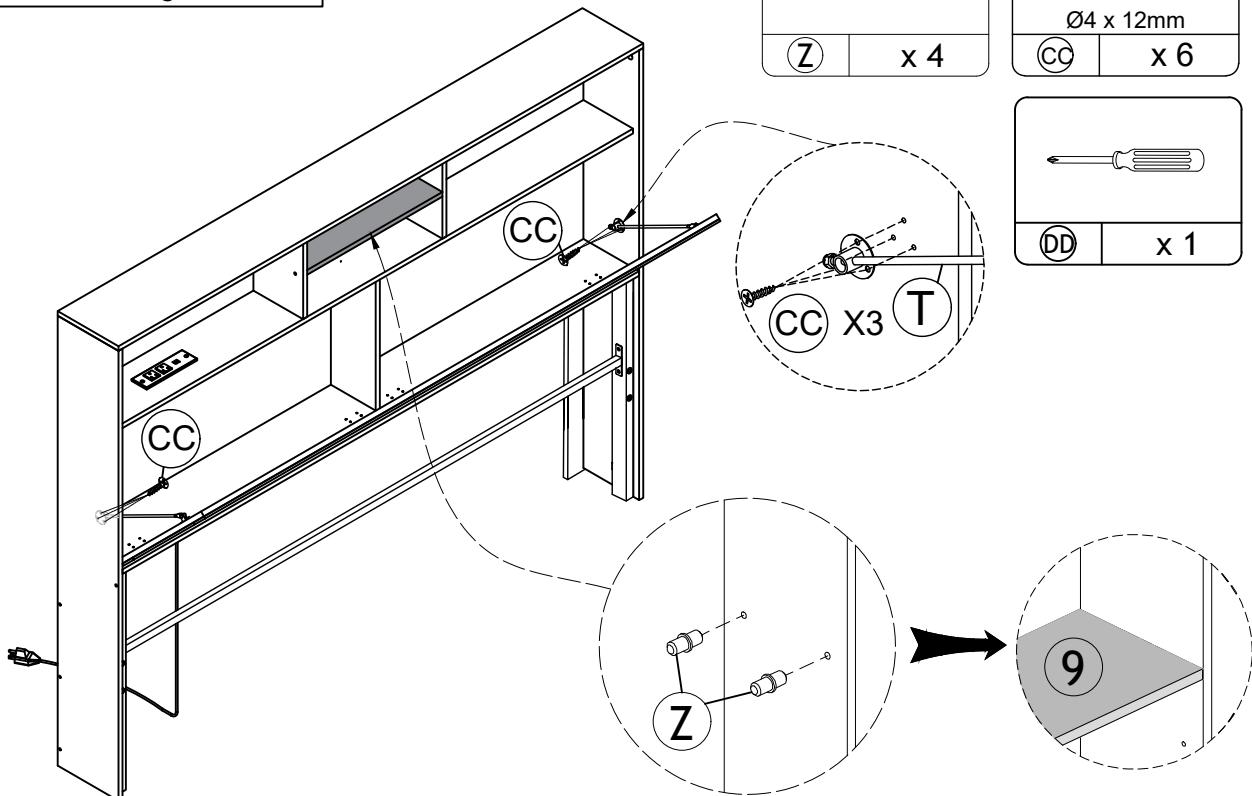

## STEP 22







Please screws in this step  
need to be tightened

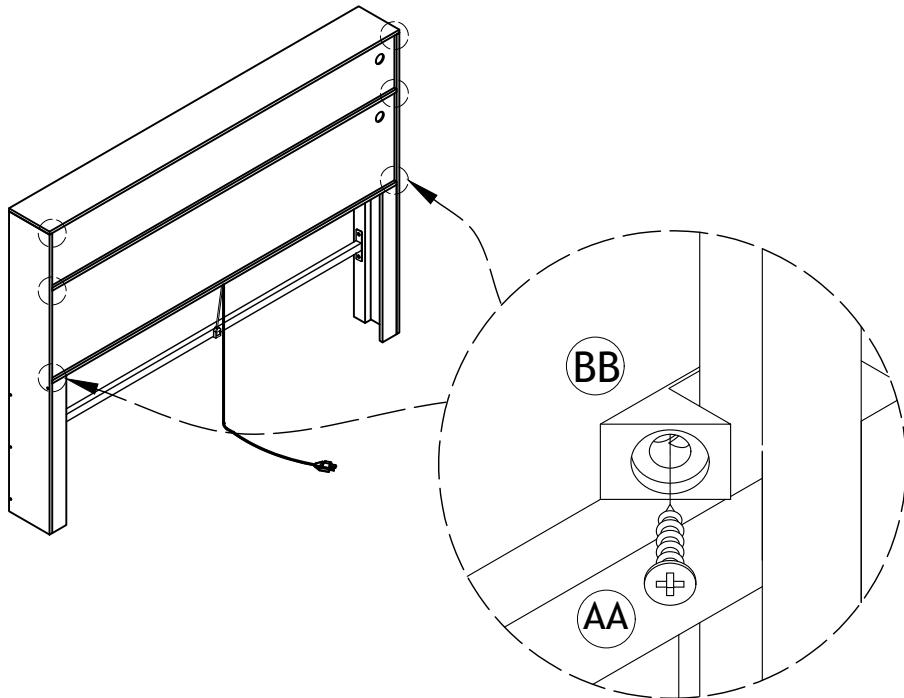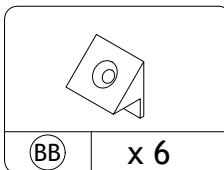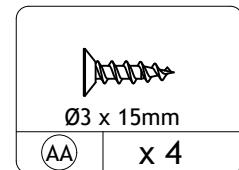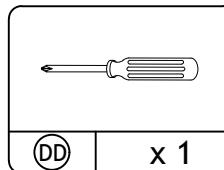





## STEP 23








Please tighten the bolts  
to 80% first, and tighten  
all bolts 100% after all  
parts are assembled.

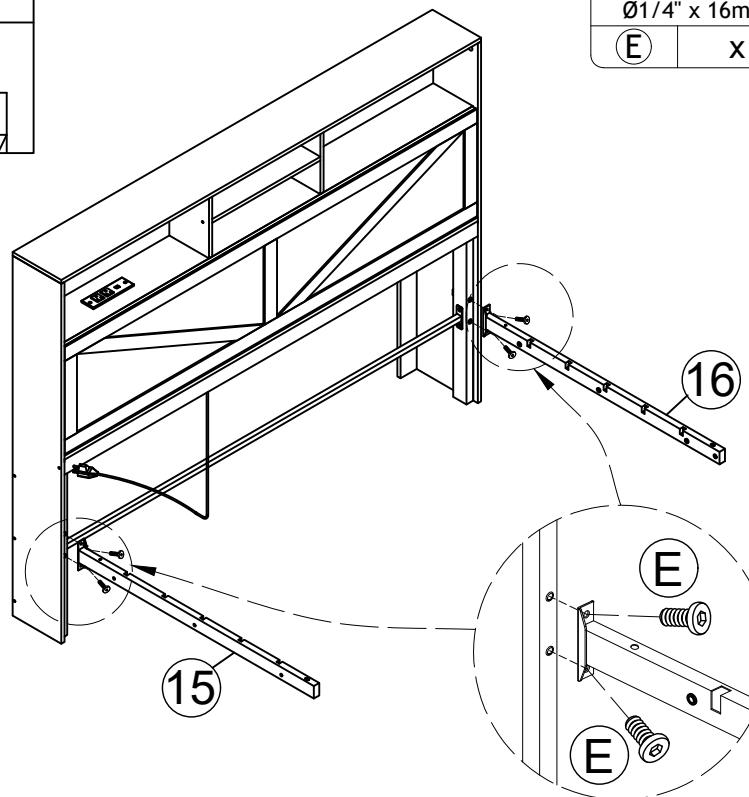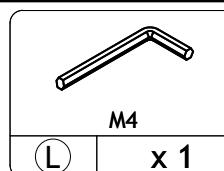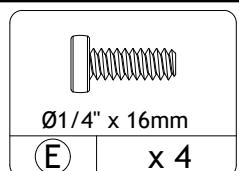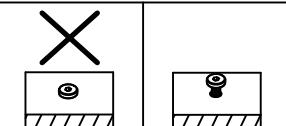





## STEP 24

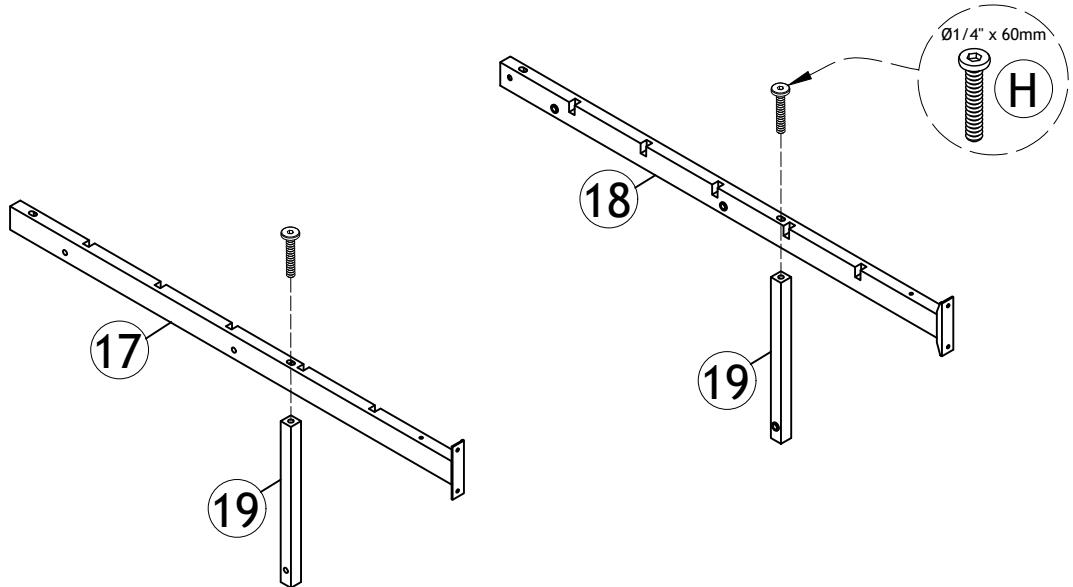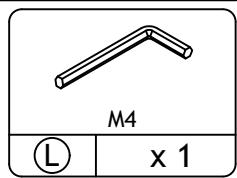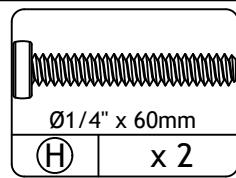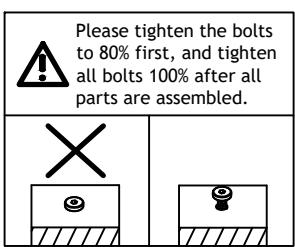


## STEP 25

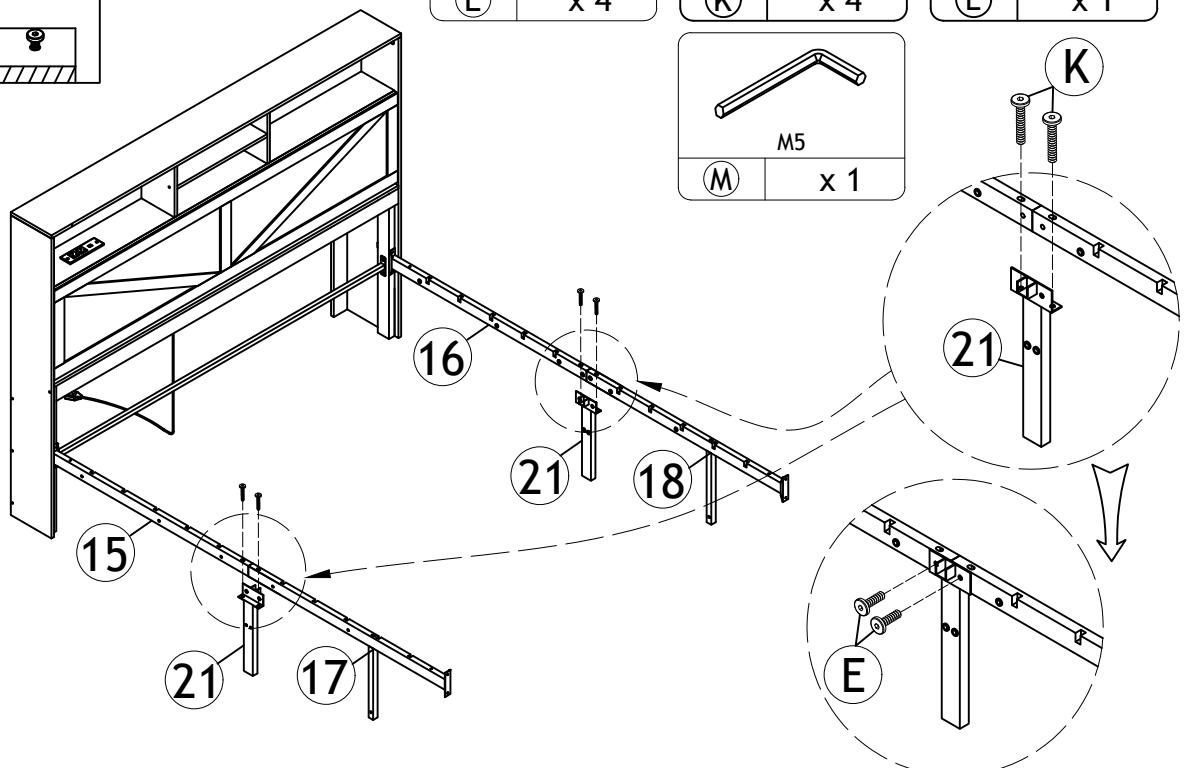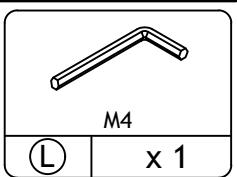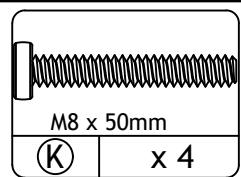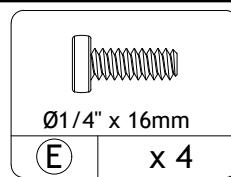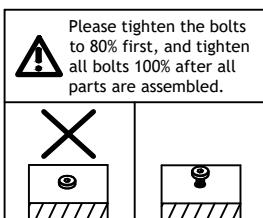

## STEP 26


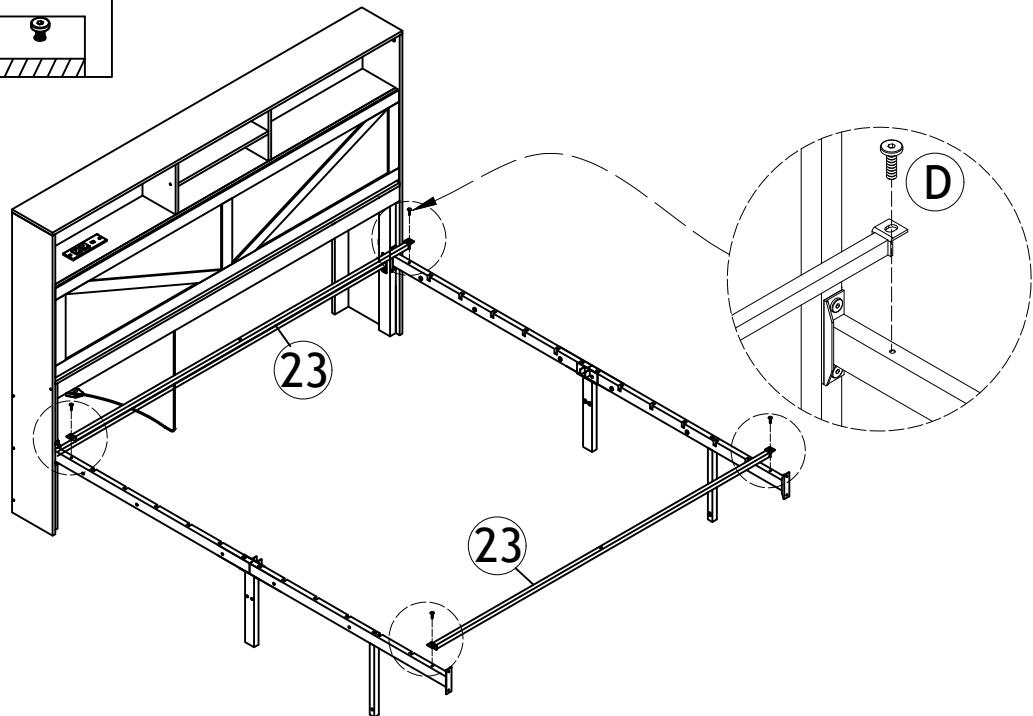
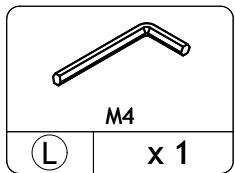
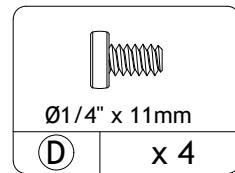
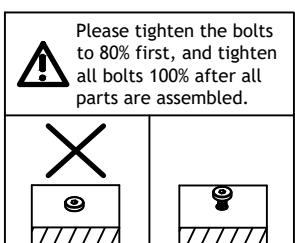


## STEP 27






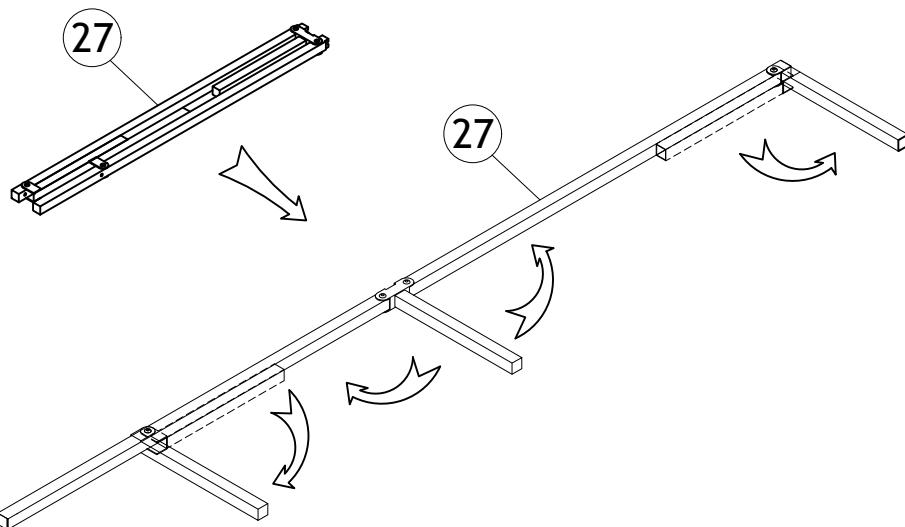


Expand the folded portion

## STEP 28

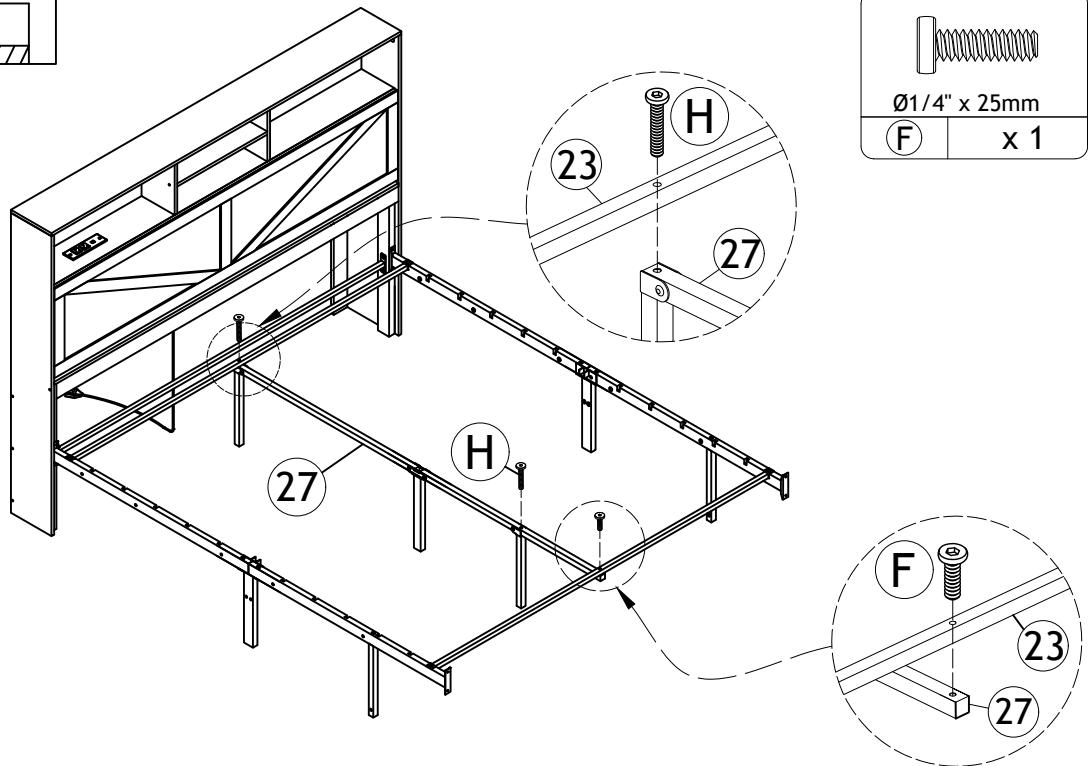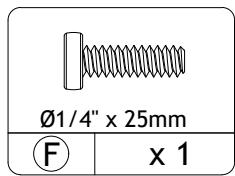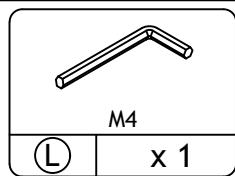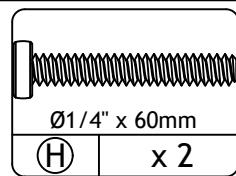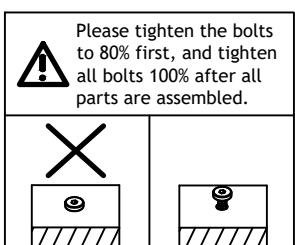


## STEP 29

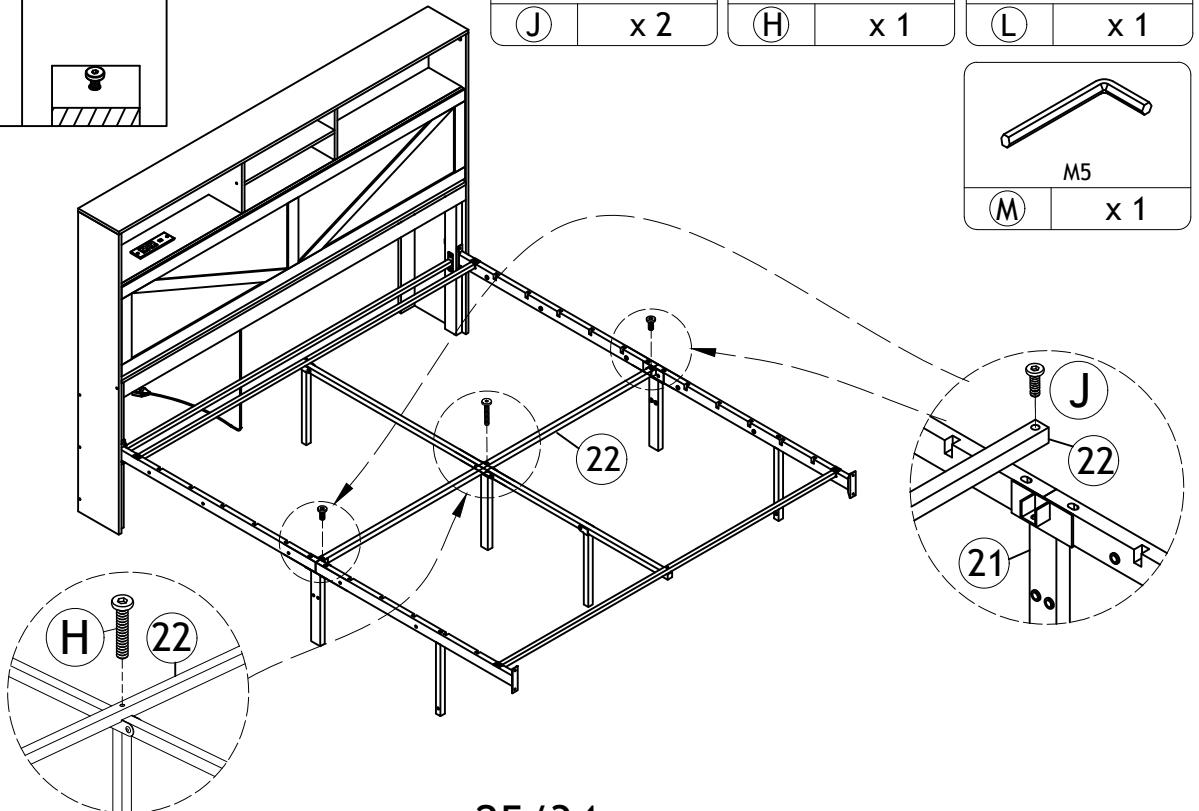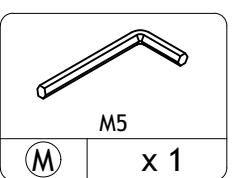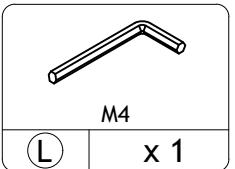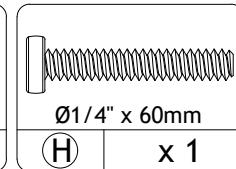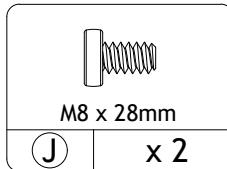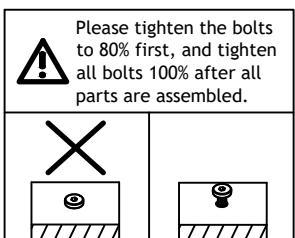


## STEP 30


---

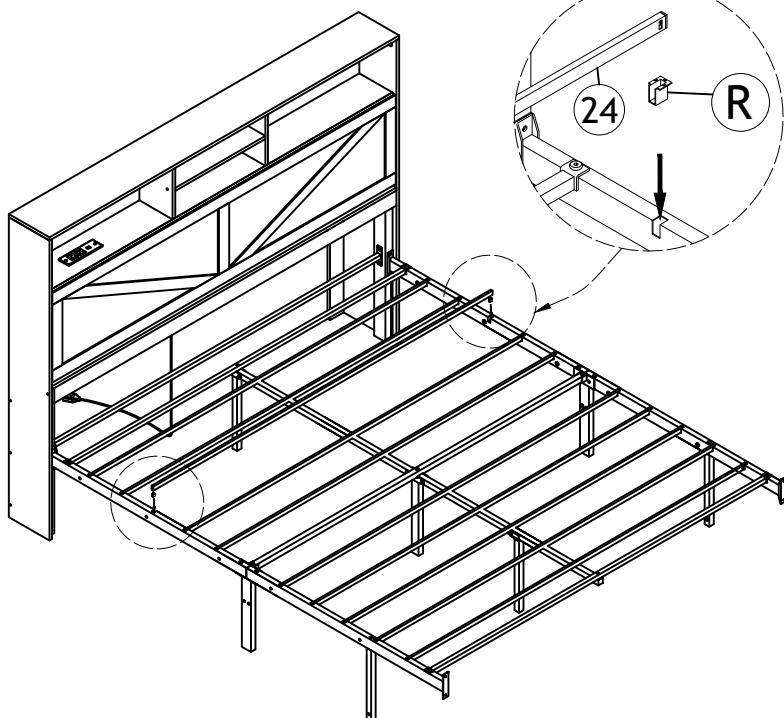


### Assemble the slats

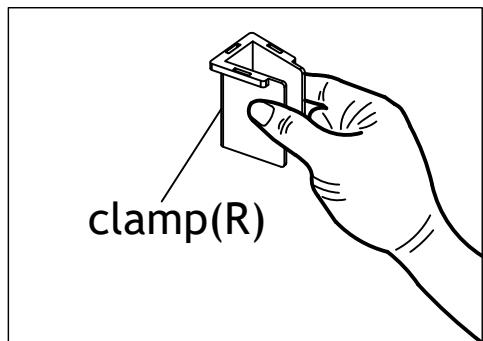


1. Squeeze the clamp (R) tightly.

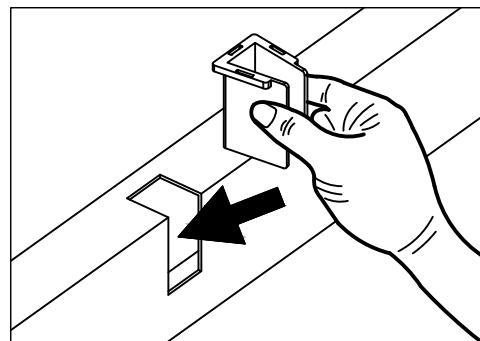

2. Put the clamp into the gaps.

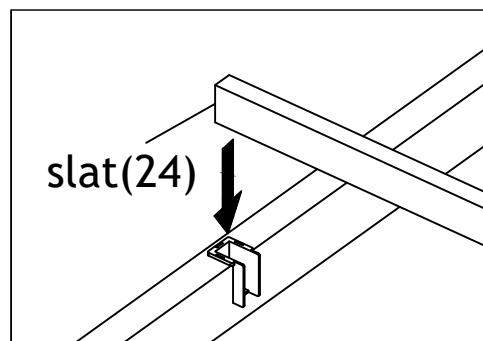


3. Put the slat (24) into the clamp.

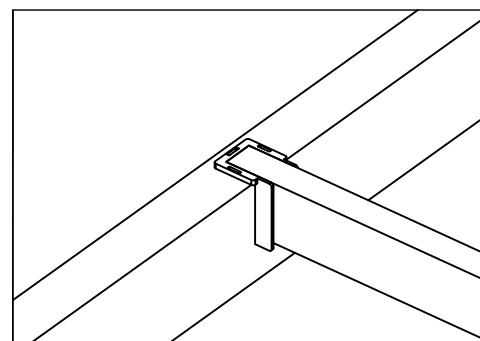

4. Finished.

## STEP 31





---

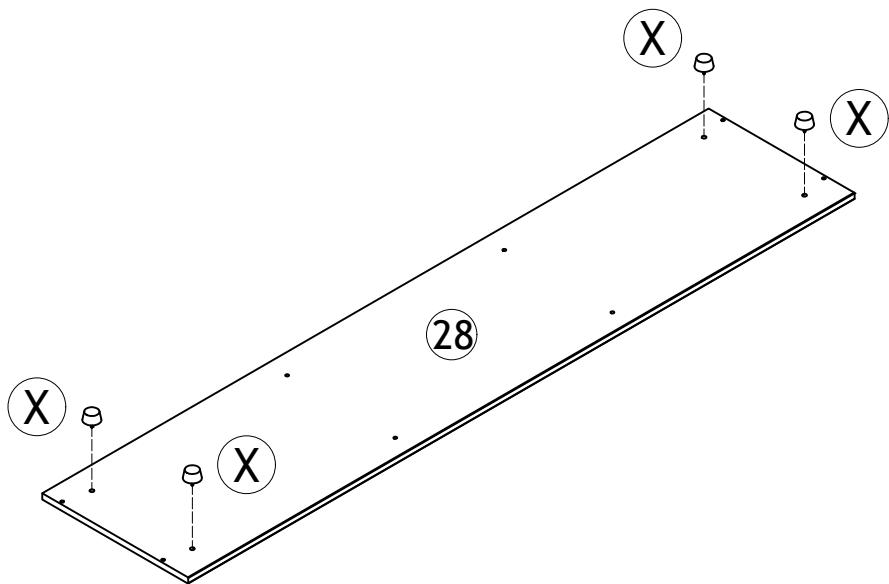

## STEP 32


---

**!** Please screws in this step  
need to be tightened

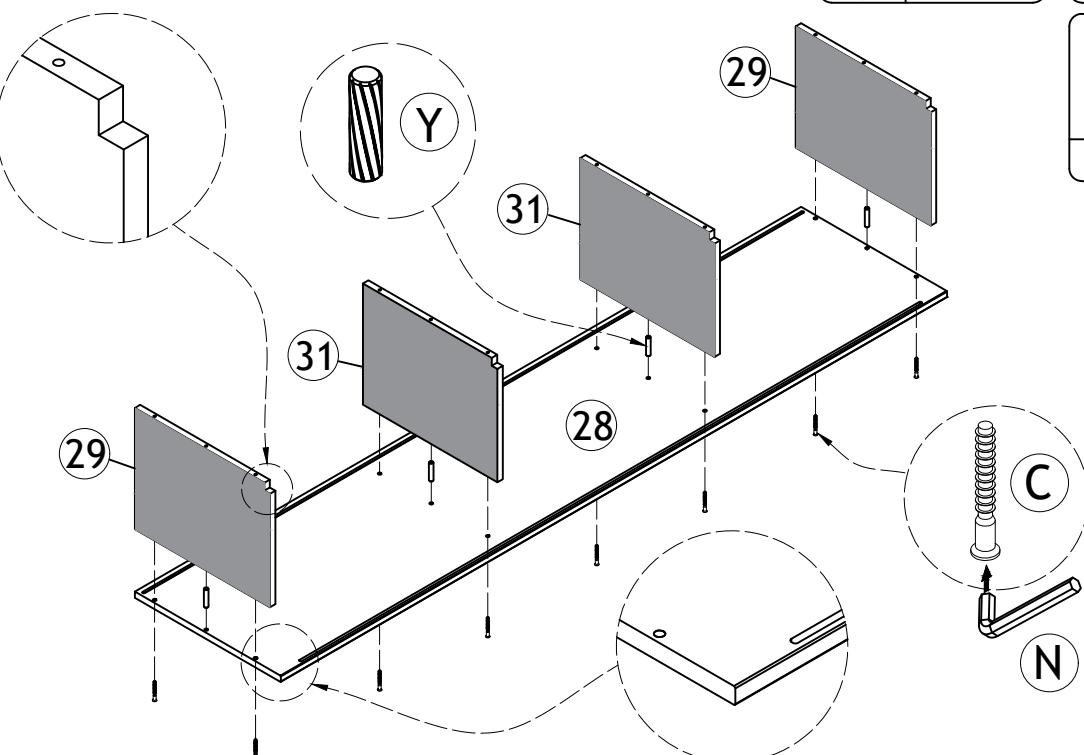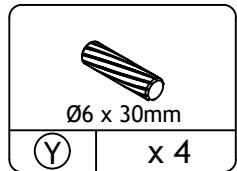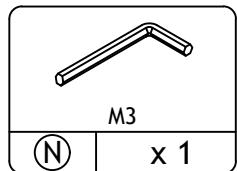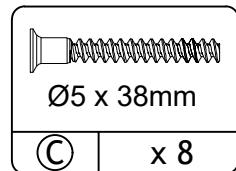

## STEP 33




---

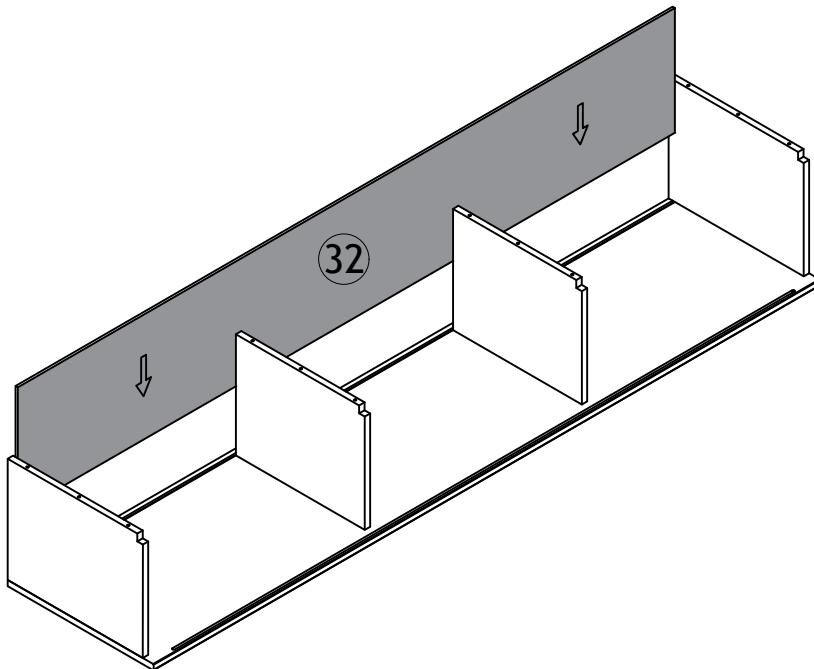

## STEP 34

---





 Please screws in this step  
need to be tightened

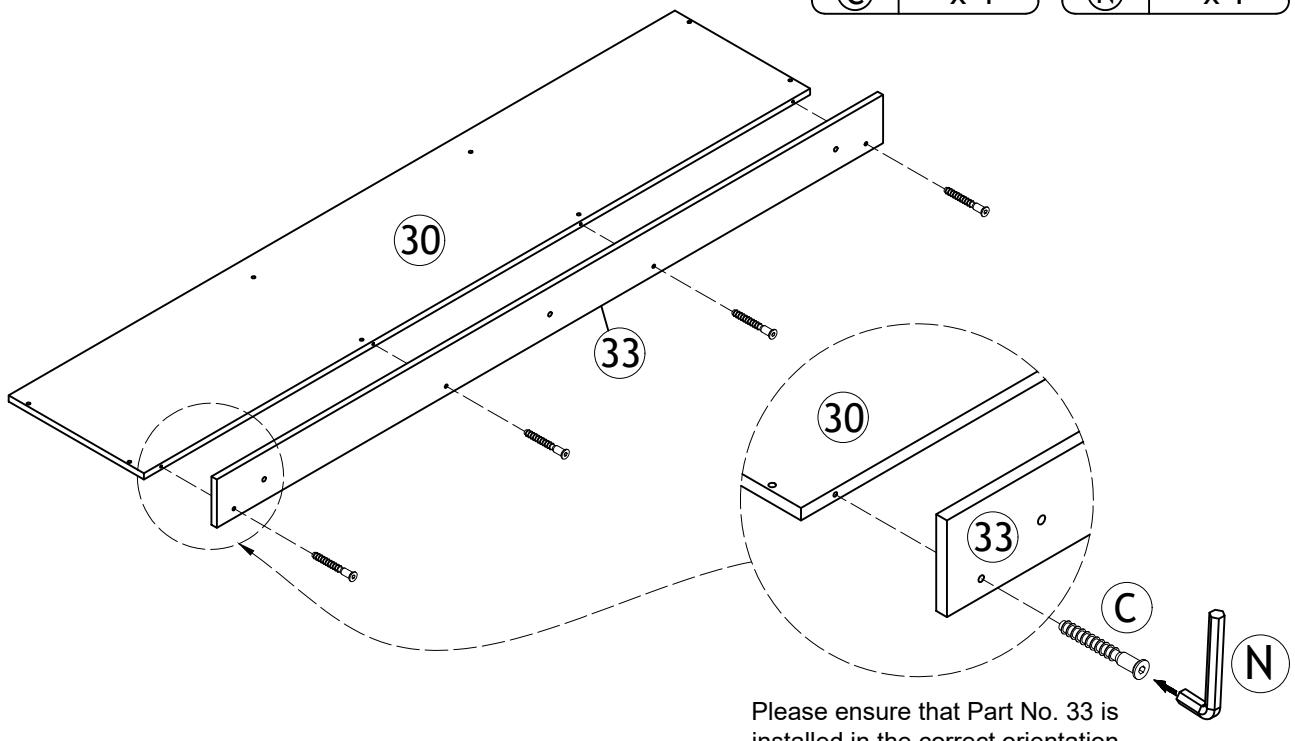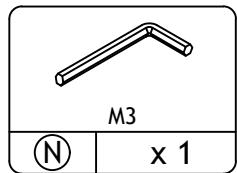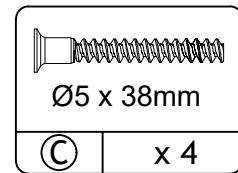




Please ensure that Part No. 33 is  
installed in the correct orientation

## STEP 35

**⚠** Please screws in this step  
need to be tightened

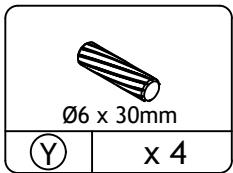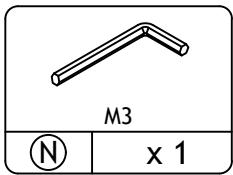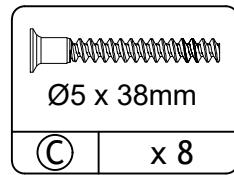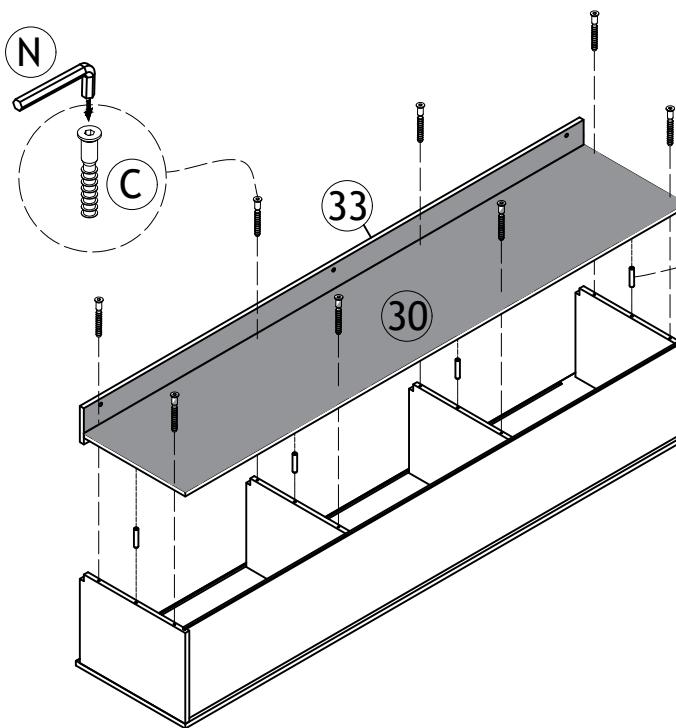





## STEP 36

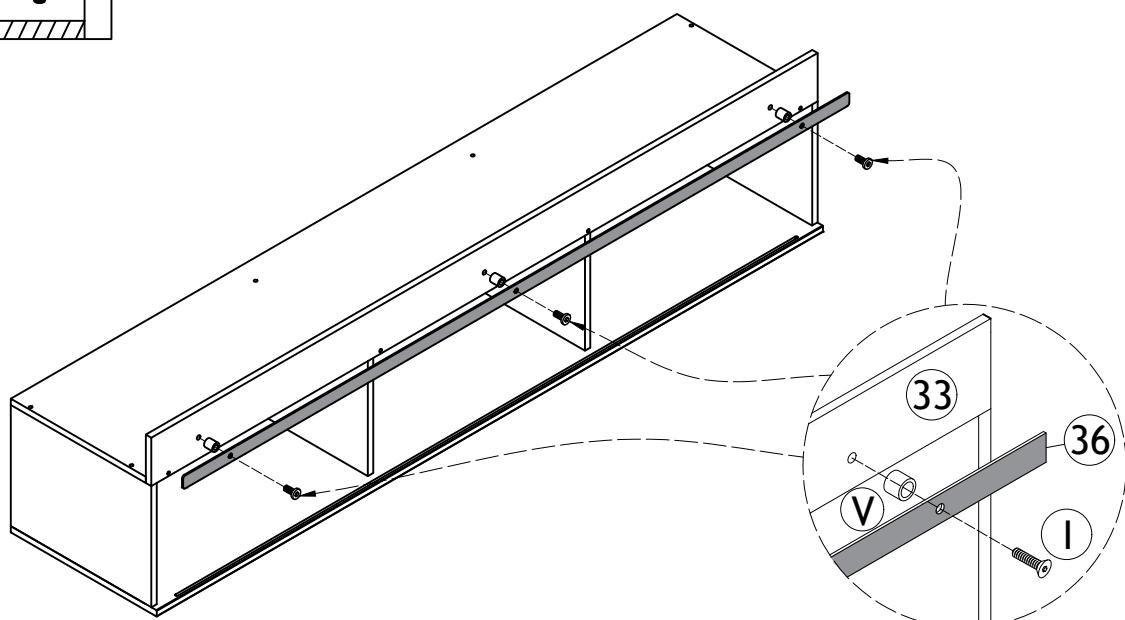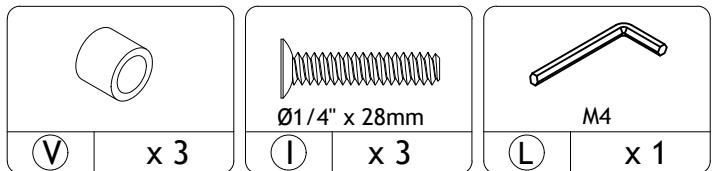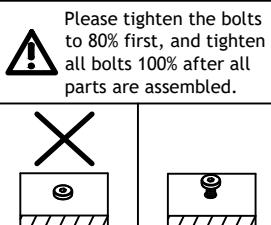



## STEP 37



Please screws in this step  
need to be tightened

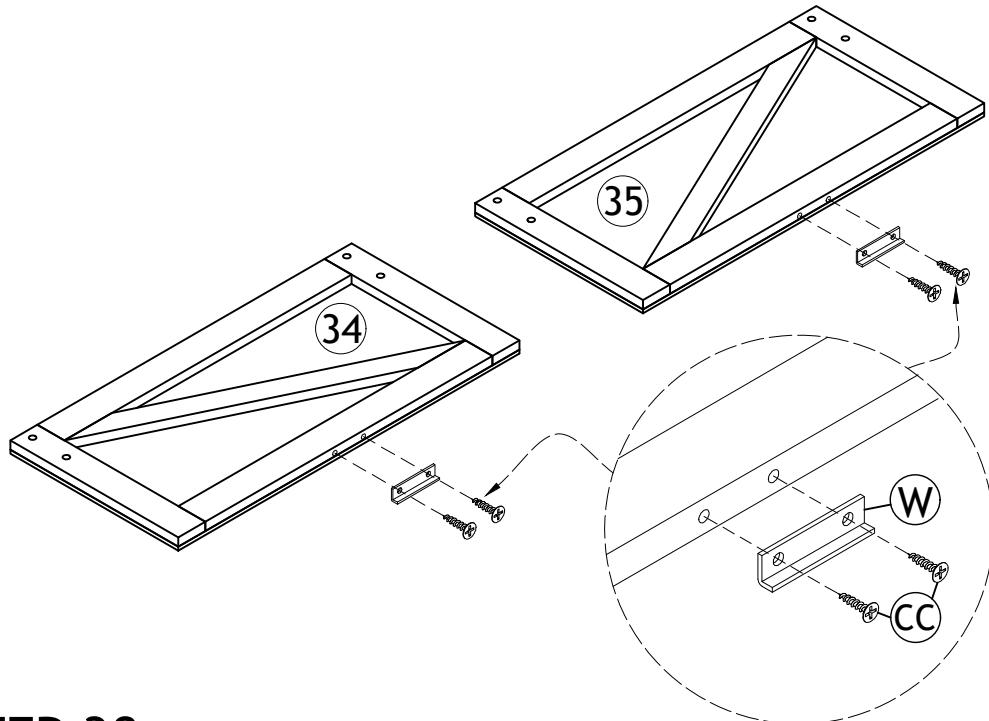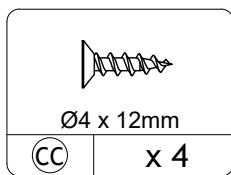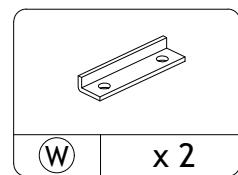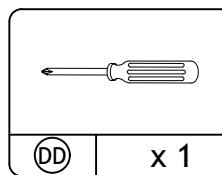





## STEP 38

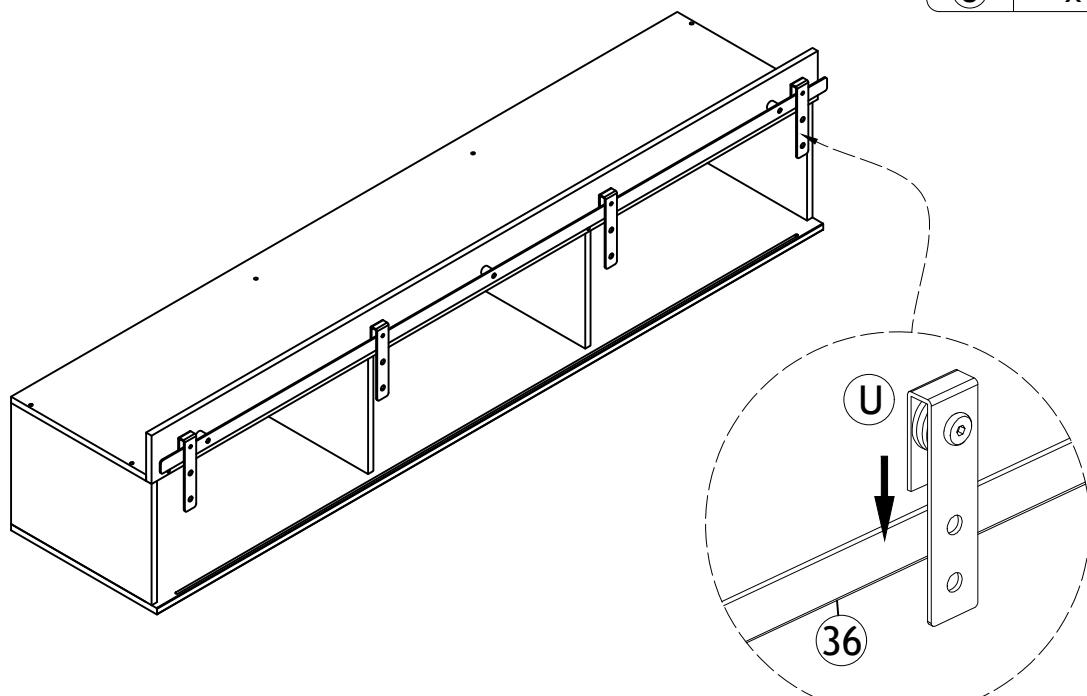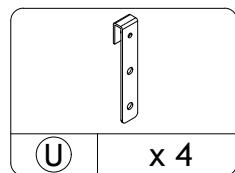


## STEP 39



Please screws in this step  
need to be tightened

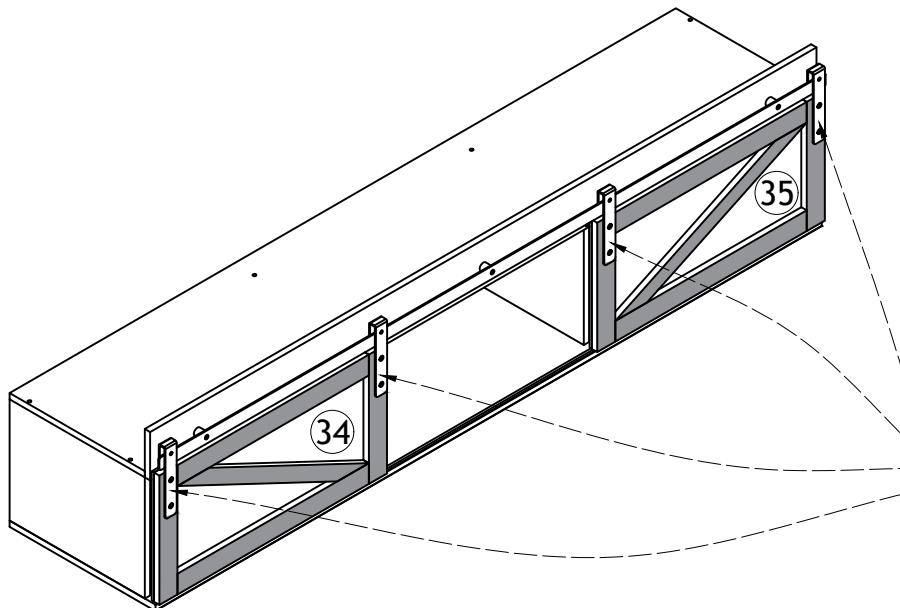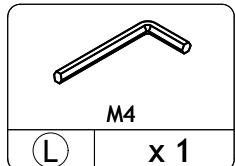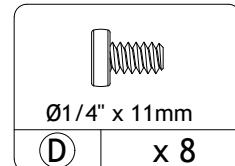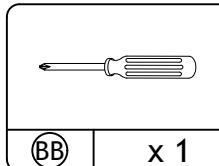

Insert metal plates (W) under door (34/35) into the groove on panel (28).



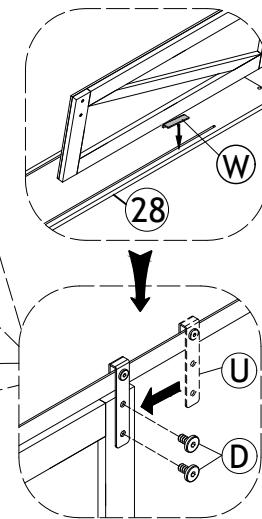


Connect door (34/35)  
metal pulley (U) with bolt(D)

## STEP 40






Please screws in this step  
need to be tightened

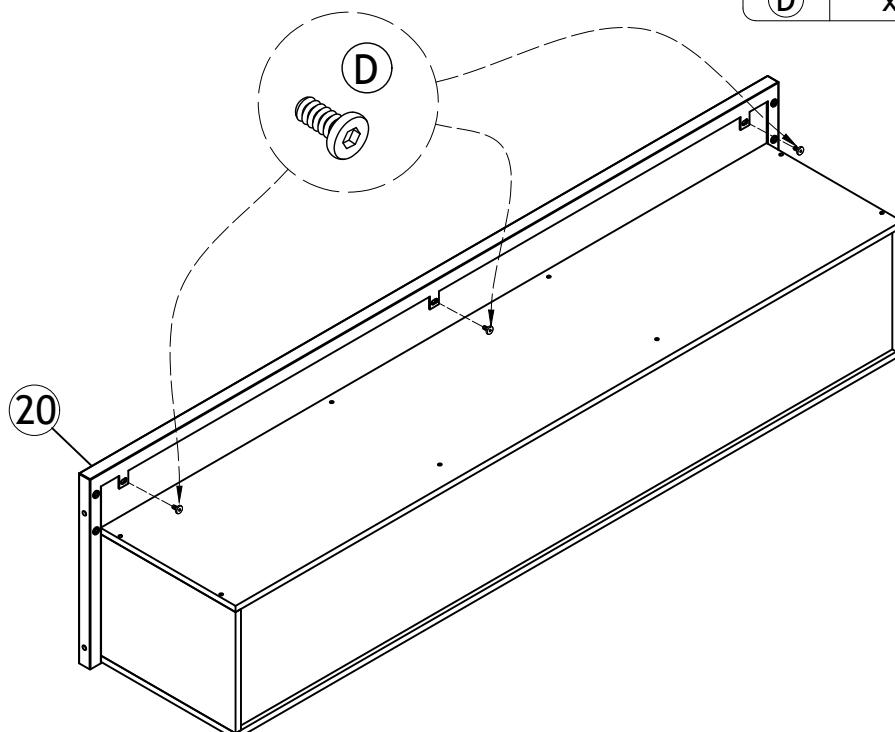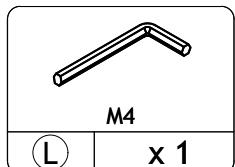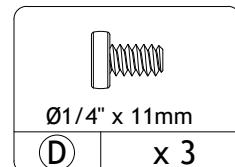





## STEP 41





Please screws in this step  
need to be tightened

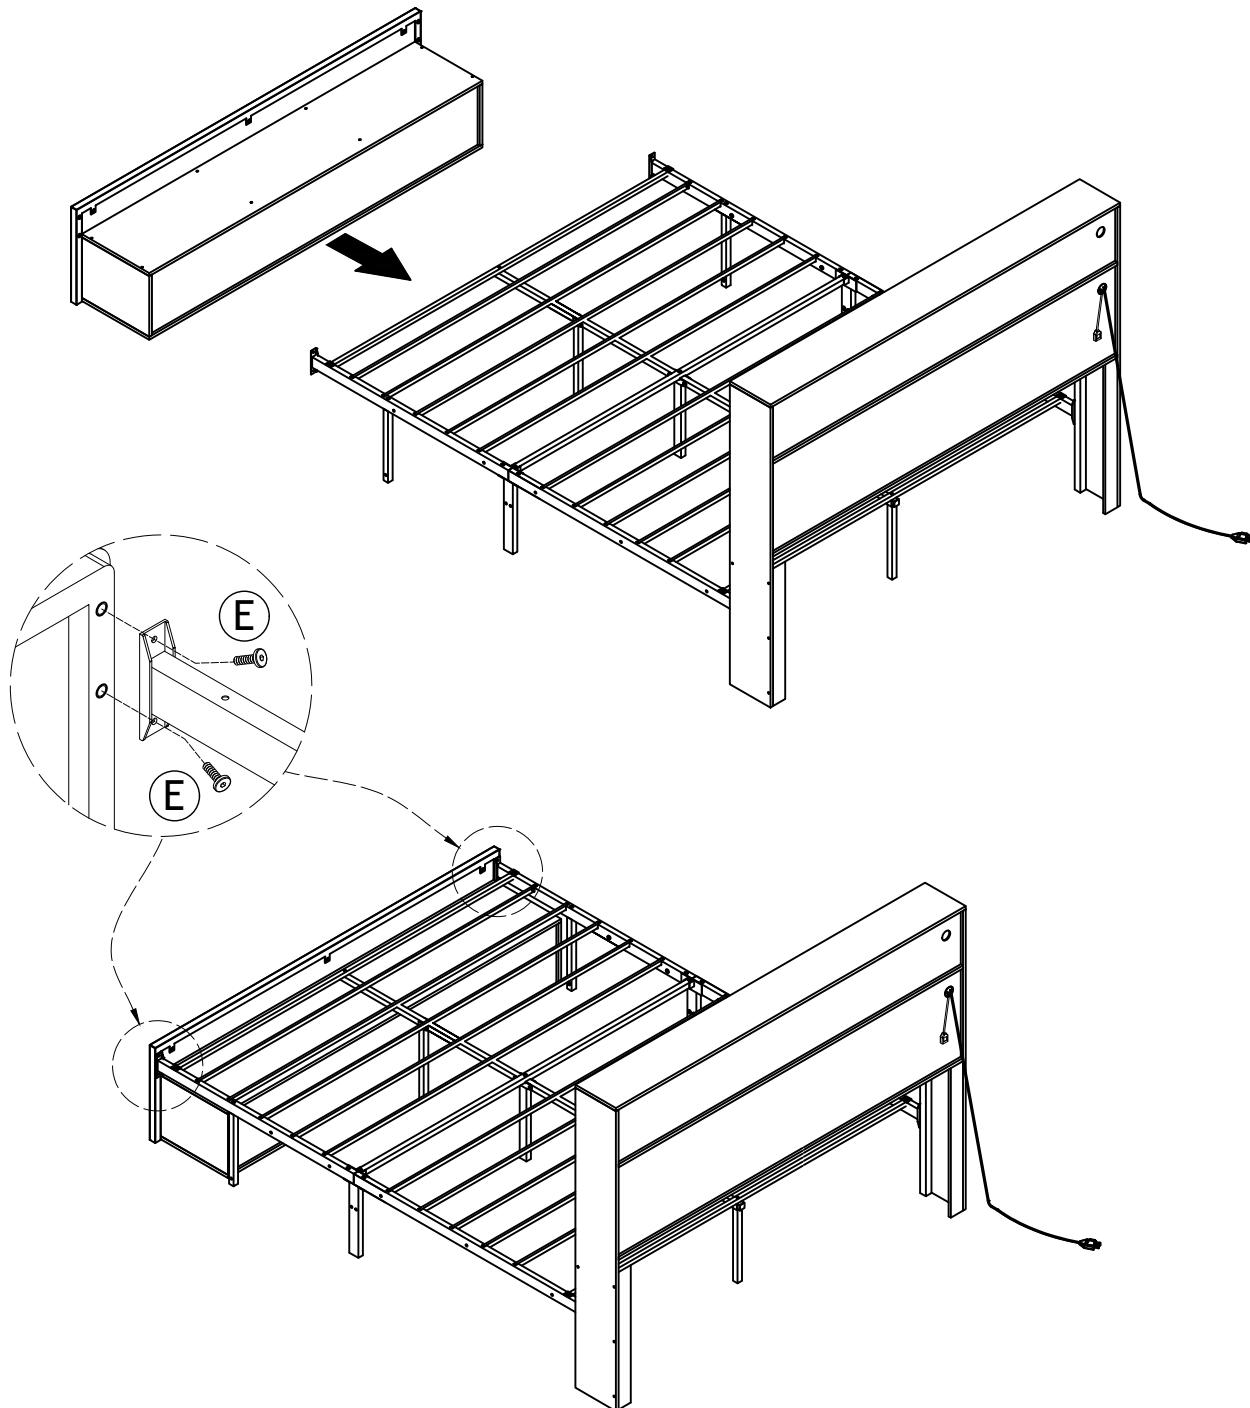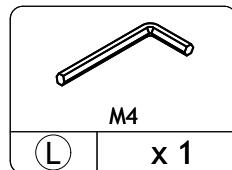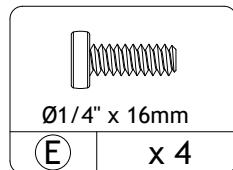



## STEP 42

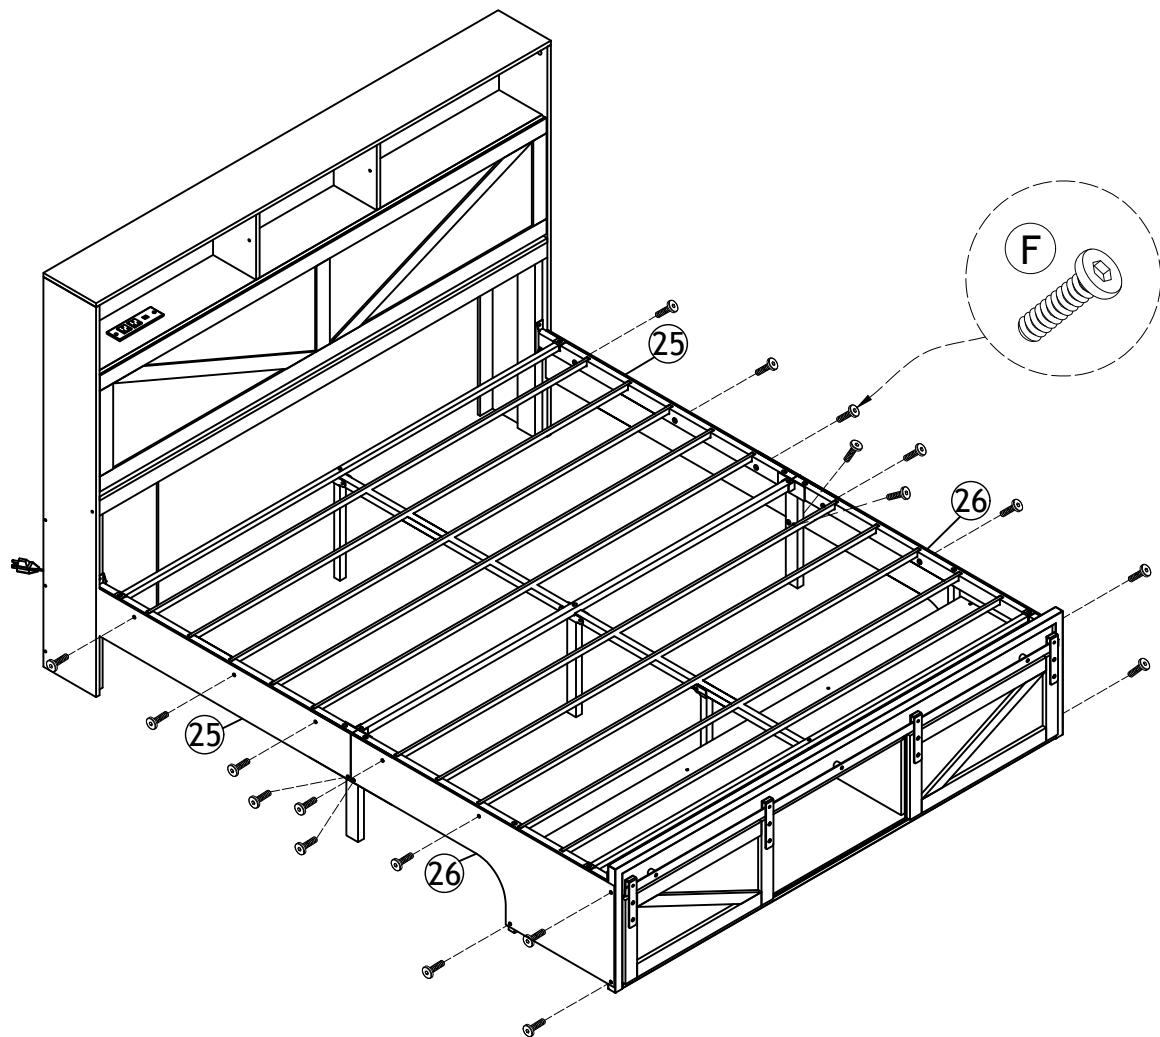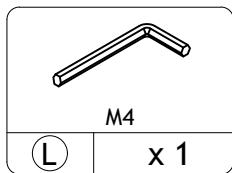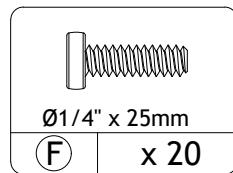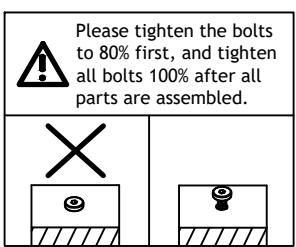


## STEP 43

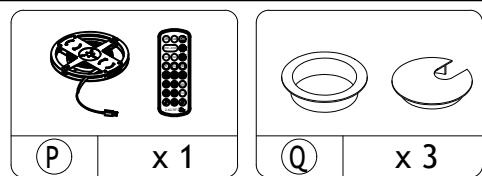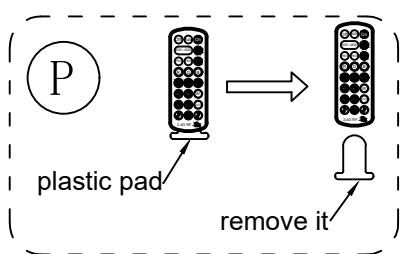

Please pull the plastic block out of the remote control.

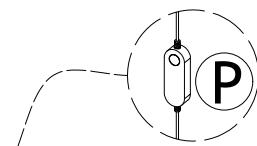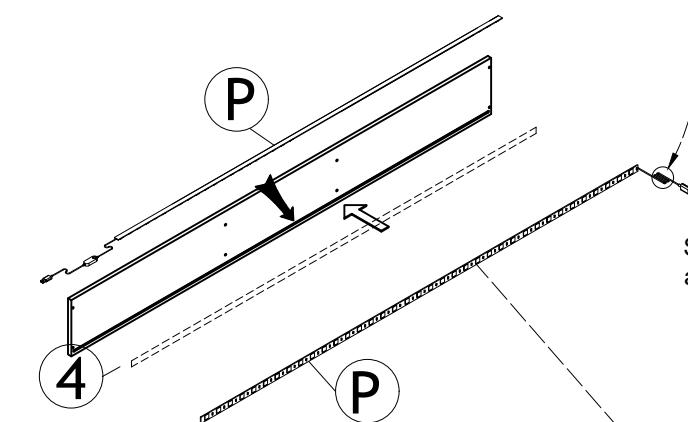

Stick LED strip(P) underneath board(4), attach the LED strip to the edges.

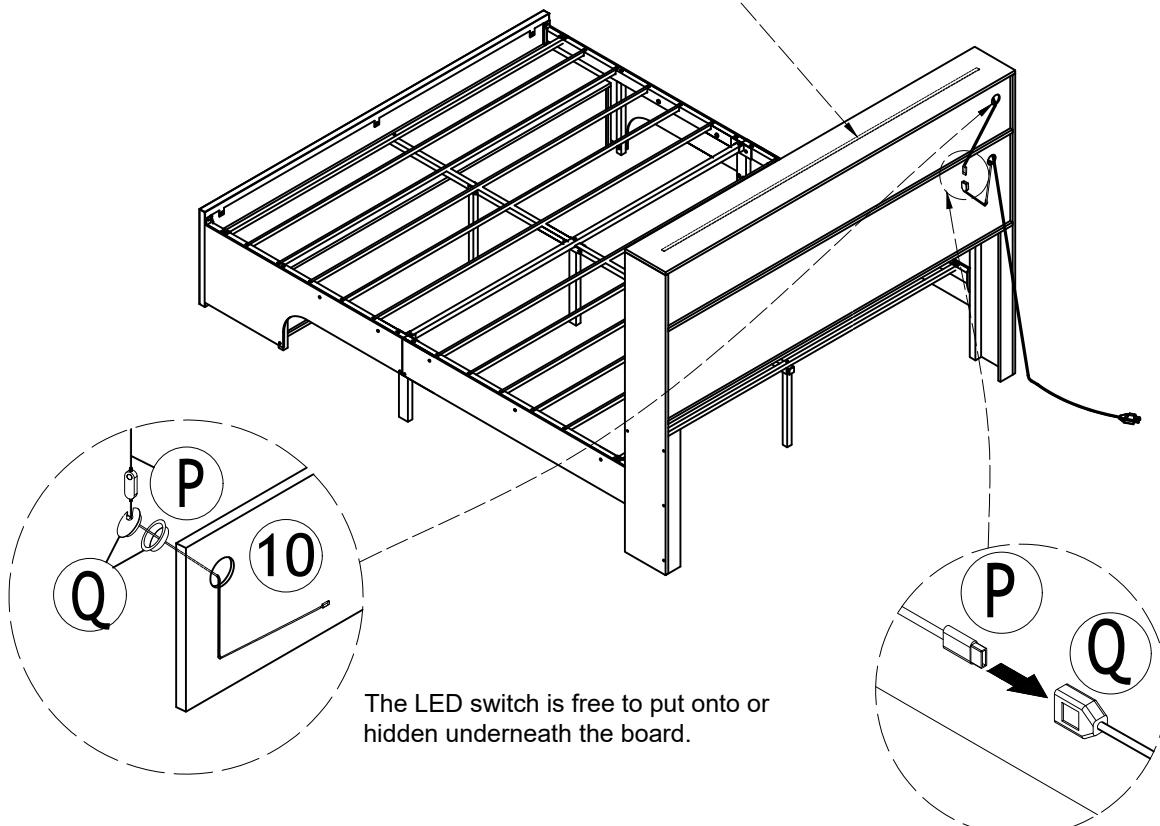

The LED switch is free to put onto or hidden underneath the board.

---

## **Congratulation:**

Congratulations to you on completing the assembly of the product through your own efforts, you have done a great job.

The assembly of this product may have been difficult, but you still had the patience and perseverance to get it done.

## **Notes:**

1. The product is designed for indoor use only and must be assembled and used according to the provided manual. Modifying or altering the product from its original design may result in personal injury or damage to the product.

## **Product Maintenance:**

1. Please place this item on the level solid ground.
2. Avoid long-term exposure to humid environments to prevent mildew.
3. Keep the product away from high temperature environments or fire sources.
4. If accidentally spill water or another liquid on the surface, immediately wipe with a dry towel.
5. Regularly inspect the tightness of screws while using the product. If necessary, re-tighten to ensure structural stability.