

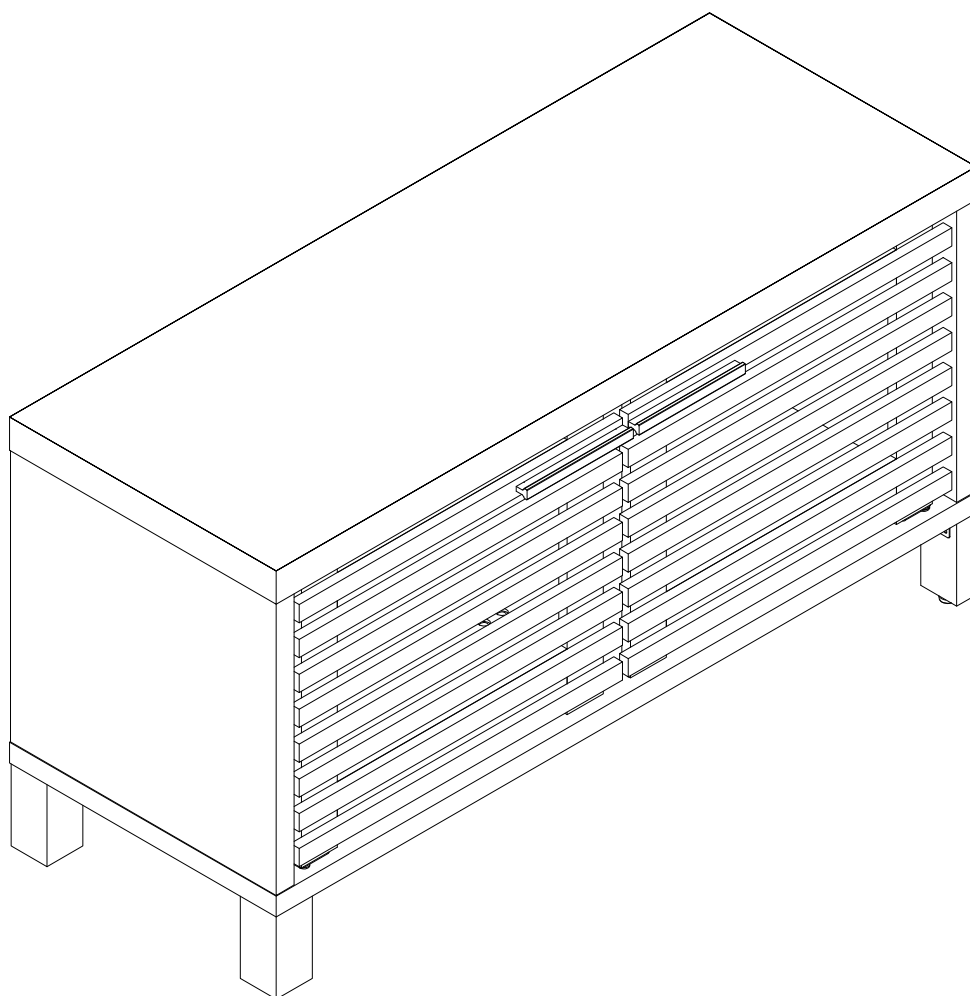
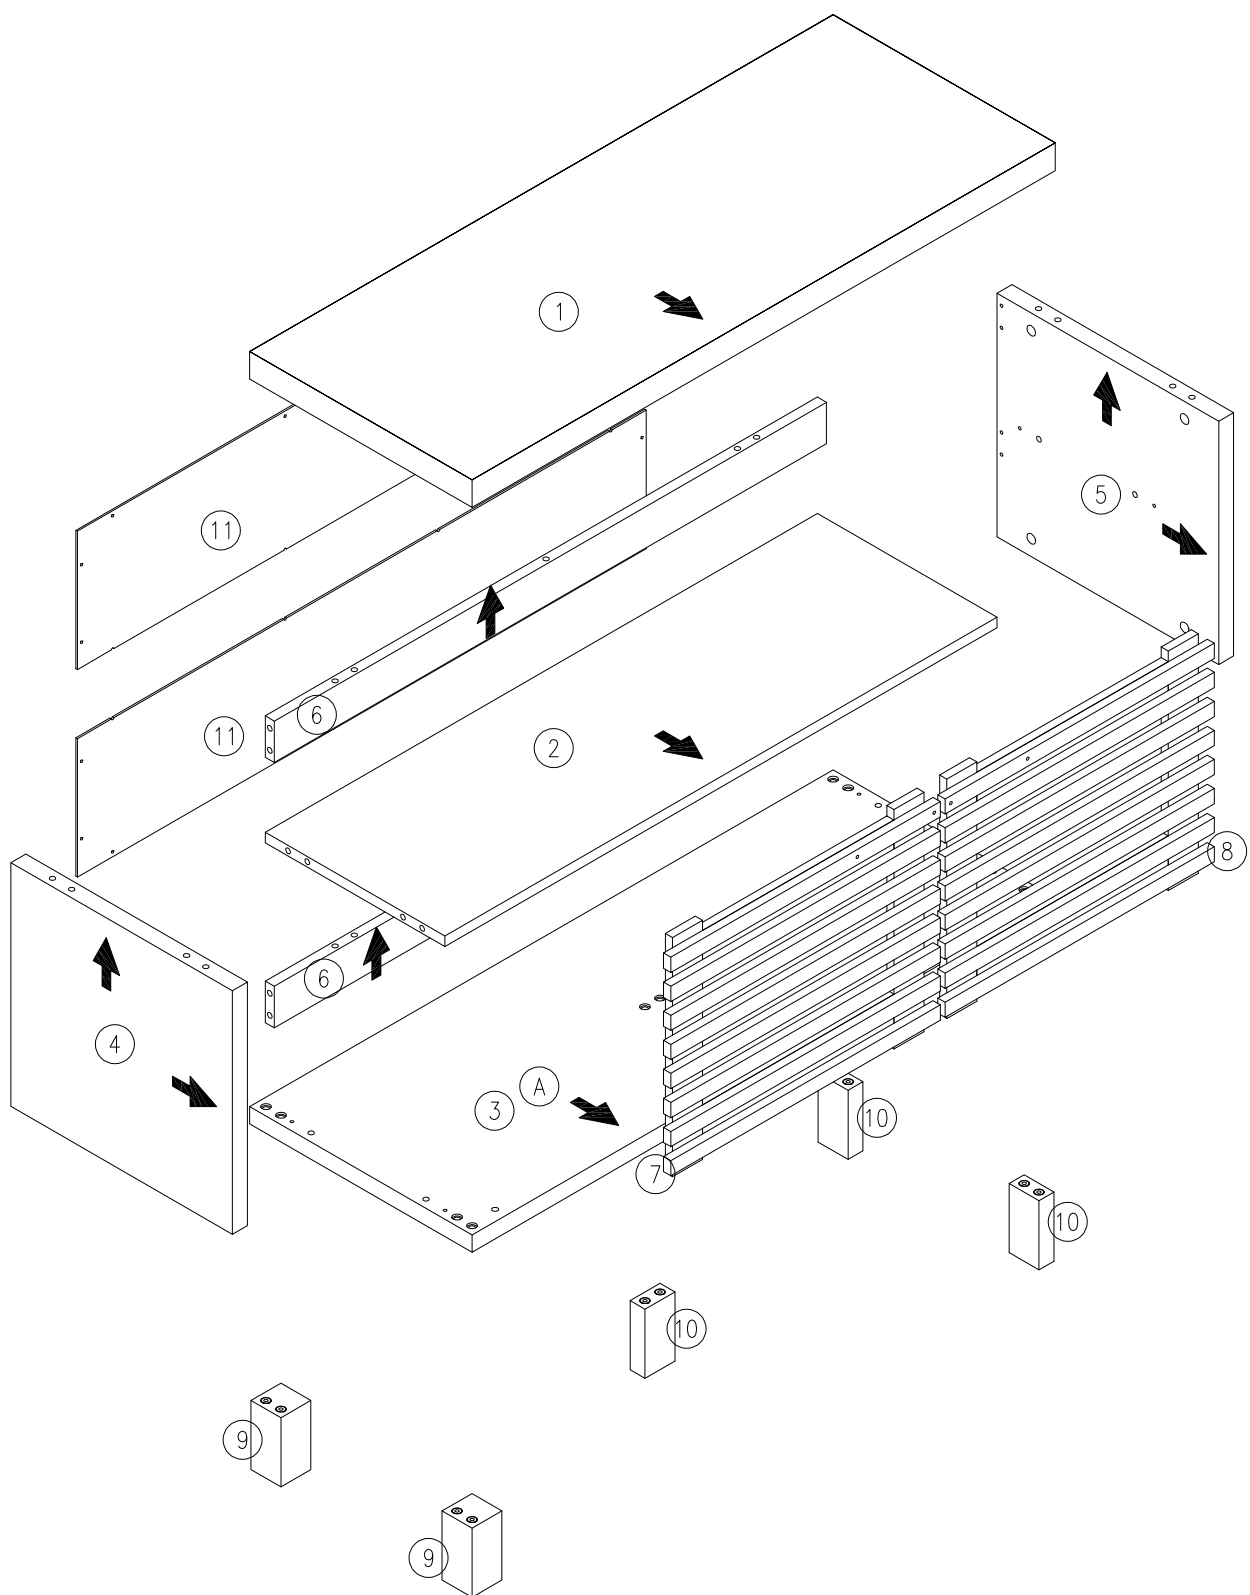

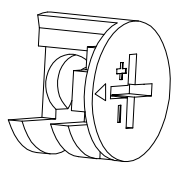


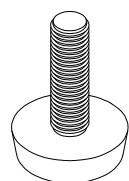



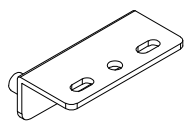
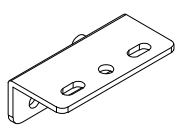

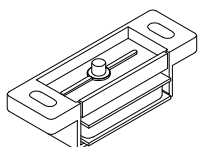


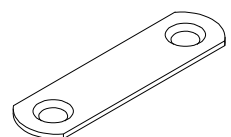

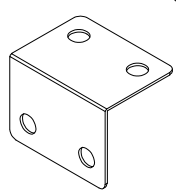


CODR	DESCRIPTION	QTY
1	Top Panel	1
2	Fixed Shelf	1
3	Bottom Panel	1
4	Left Side Panel	1
5	Right Side Panel	1
6	Back Stretcher	2
7	Left Door Panel	1
8	Right Door Panel	1
9	Cabinet Leg (Large)	2
10	Cabinet Leg (Small)	3
11	Back Panel	2

PACKAGE CONTENT

(A)  26X+2X	(B) Ø15  26X+2X	(C) Ø8x30mm  16X+2X	(D) Ø5/32"x16mm  2X
(E) Ø5/32"x30mm  2X	(F)  5X	(G) Ø2.9x12mm  24X +2X	(H) Ø2.9x12mm  12X +1X
(I) □1/4"x35mm  10X	(J) Ø3.5x16mm  20X+2X	(K)  2X	(L)  2X
(M)  2X	(N)  2X	(O)  2X	(P)  2X
(Q)  5X	(R)  26X+2X	(S)  10X	


Step 1

A		3
C		2

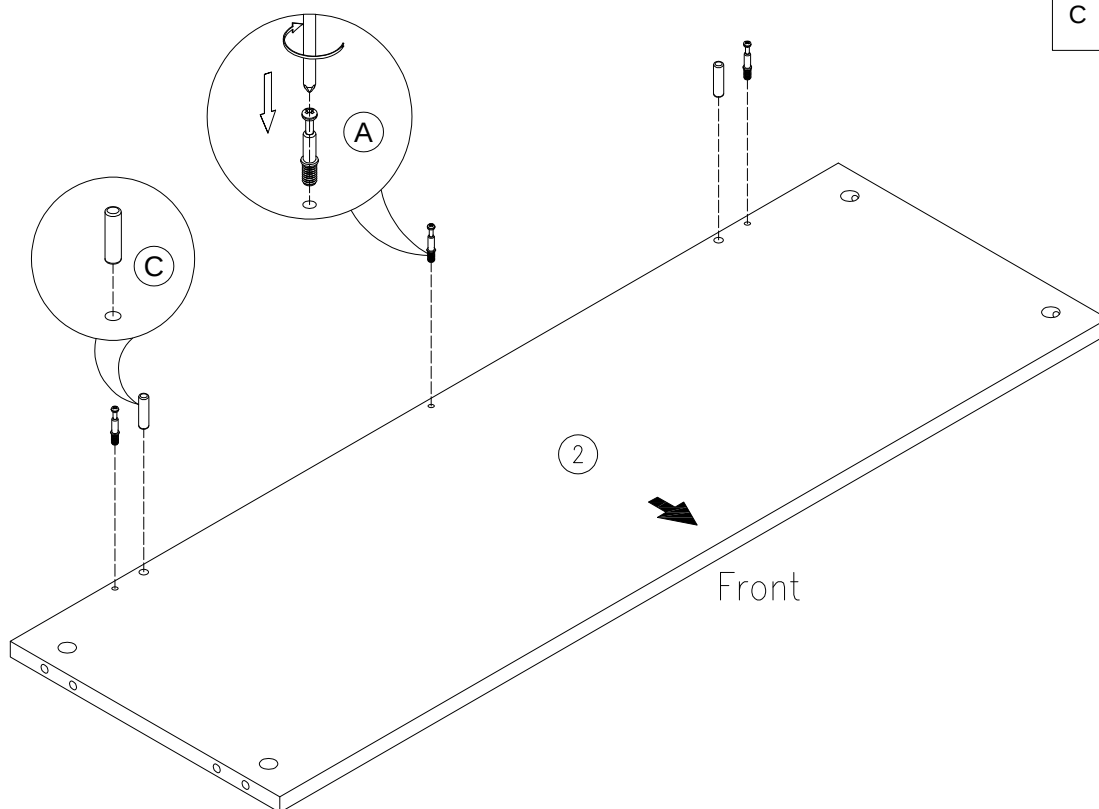


Step 2

B		3
---	---	---

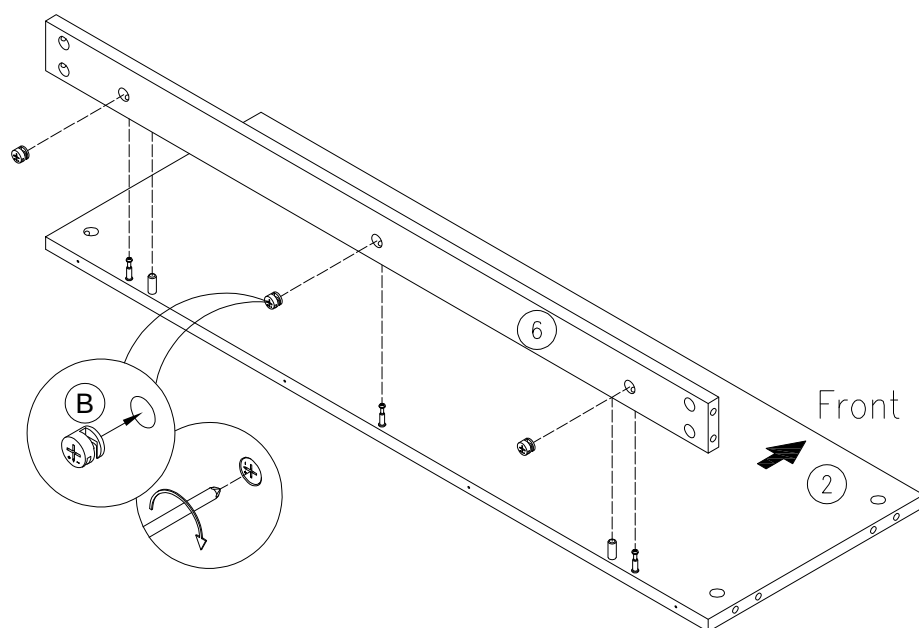


Step 3

A		12
C		4

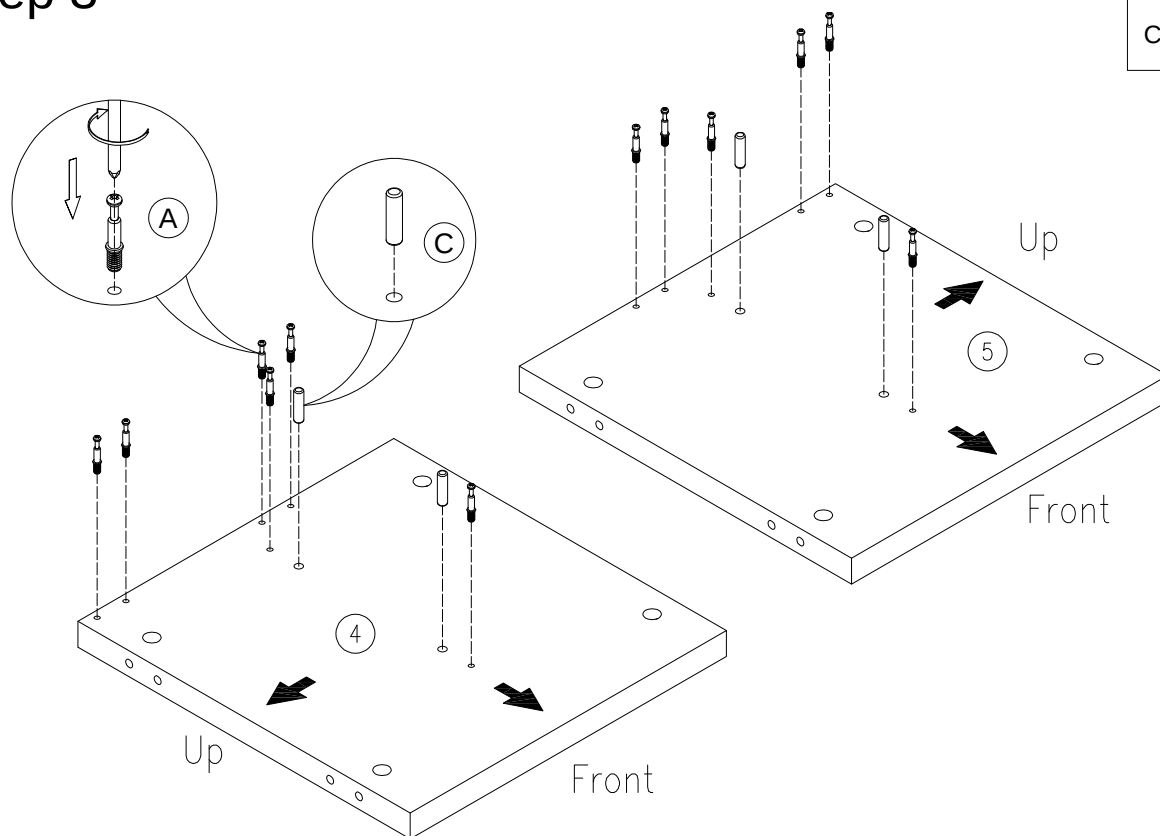

Step 4

B		4
---	---	---

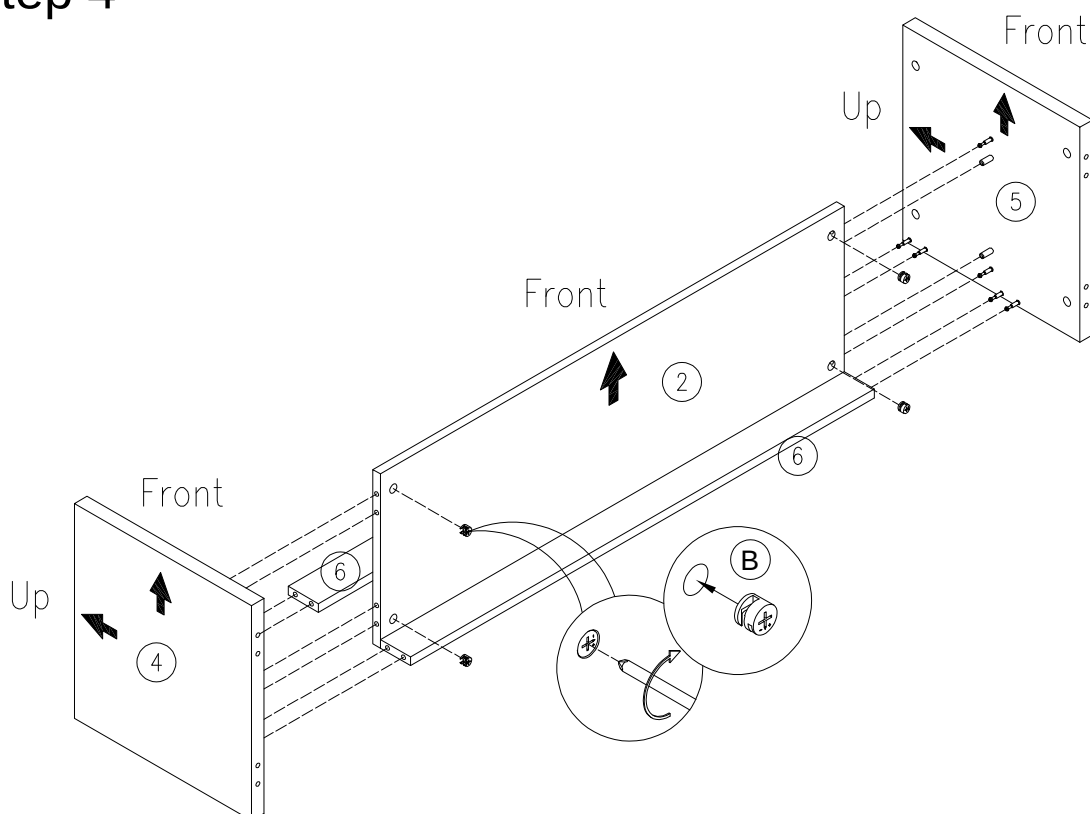


Step 5

B



8

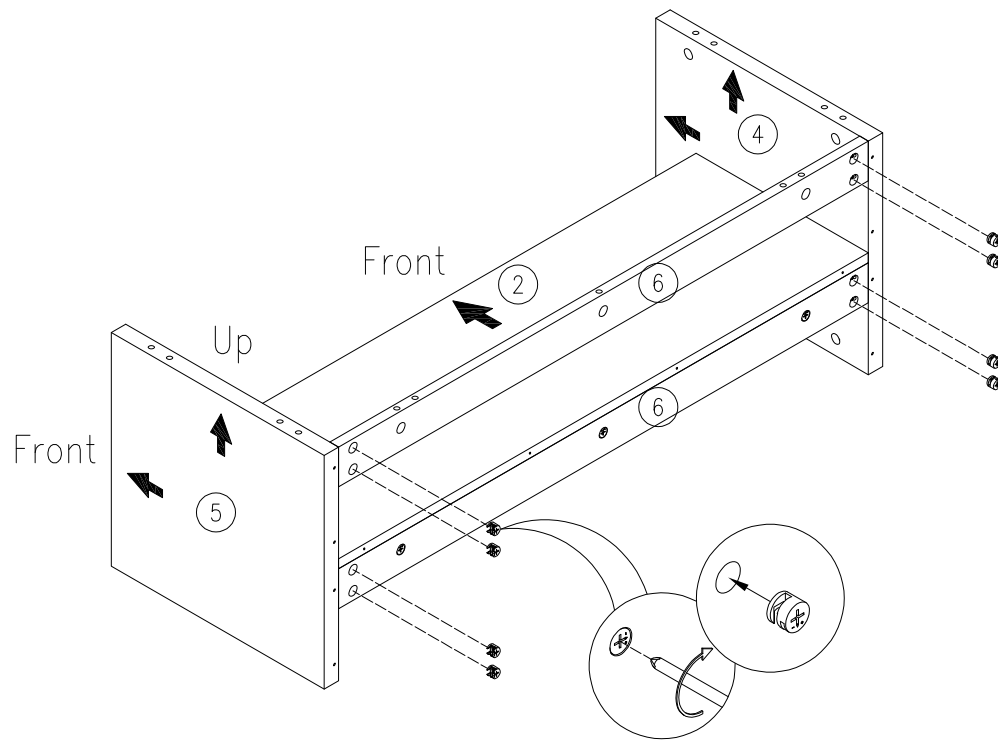


Step 6

I




10

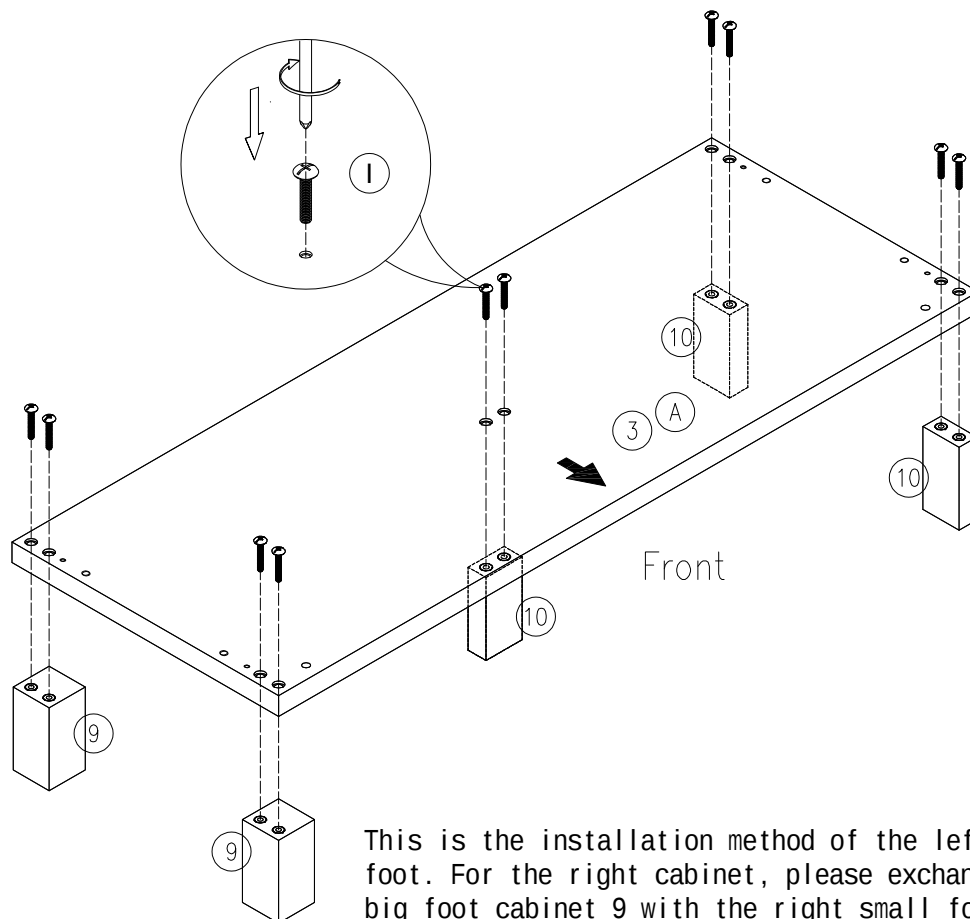


This is the installation method of the left cabinet foot. For the right cabinet, please exchange the left big foot cabinet 9 with the right small foot cabinet 10.

Step 7

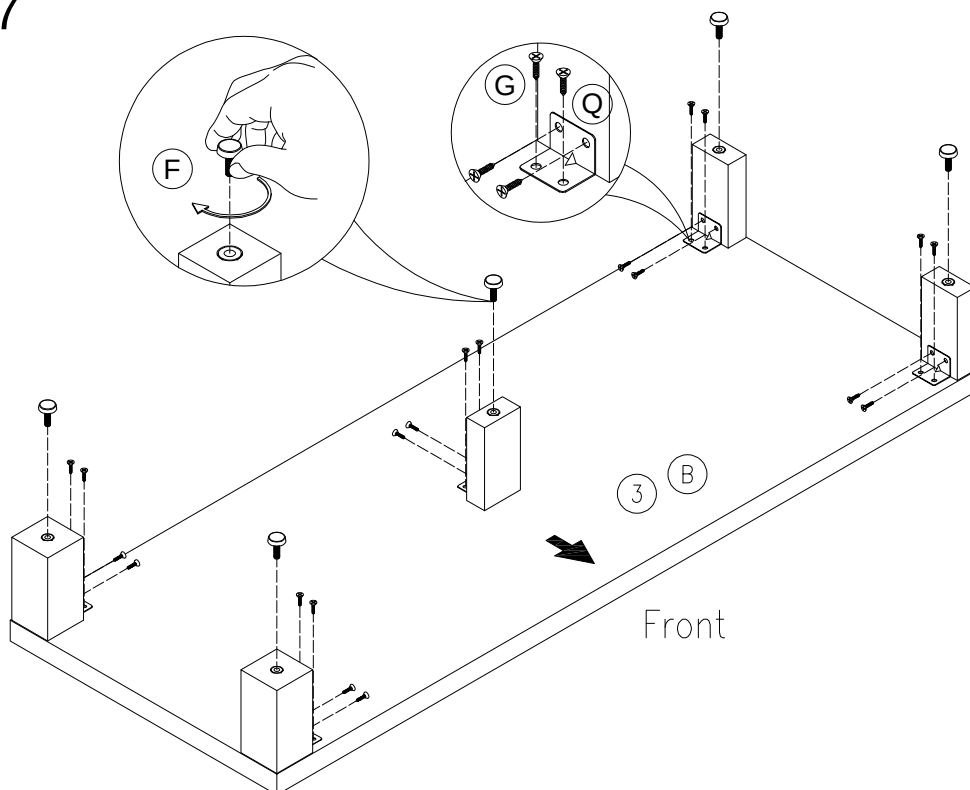

F		5
G		20
Q		5


Step 8

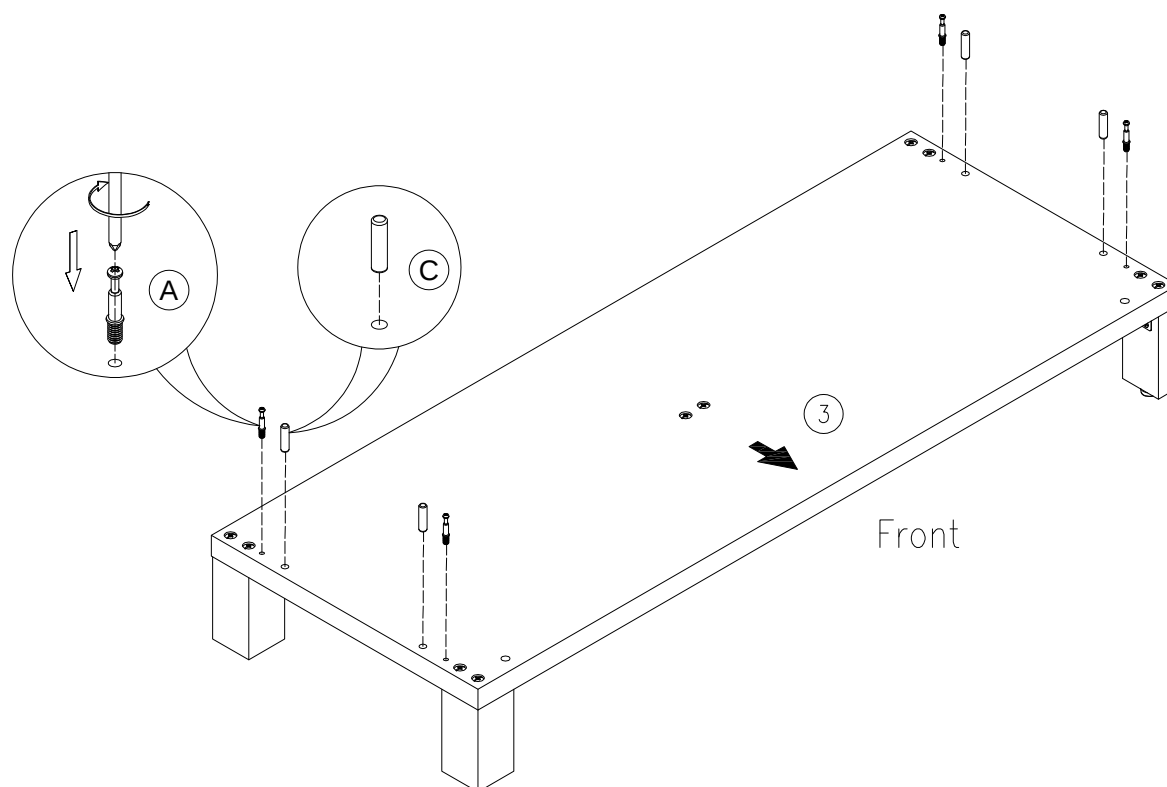

A		4
C		4


Step 9

B		4
---	---	---

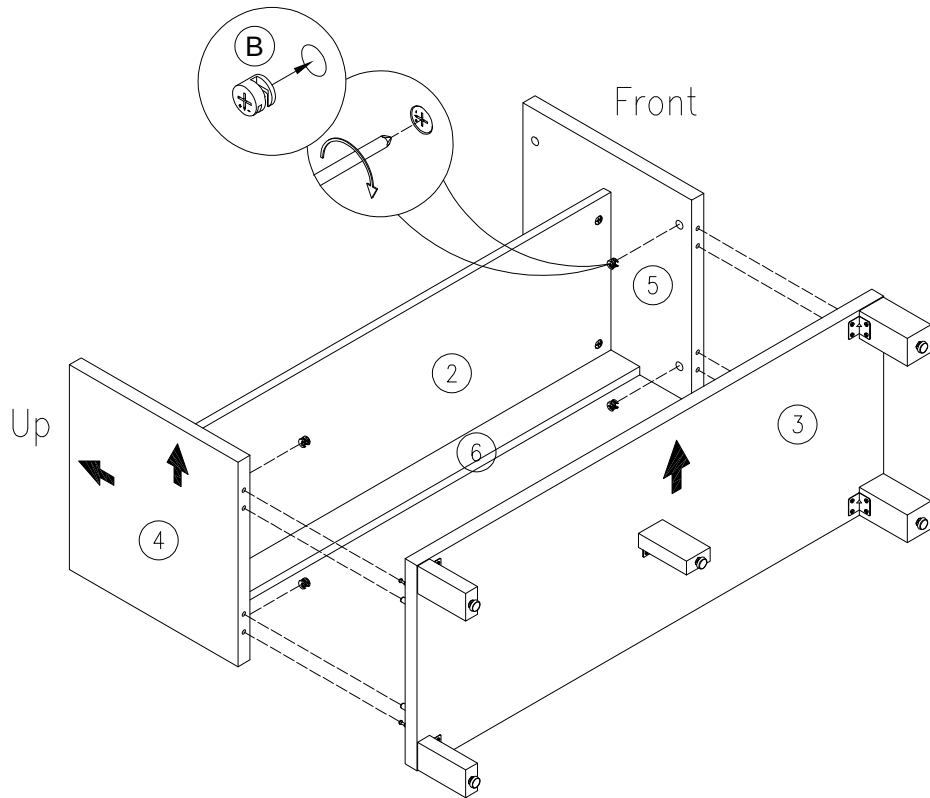

Step 10

A		7
C		6
H		4
N		2

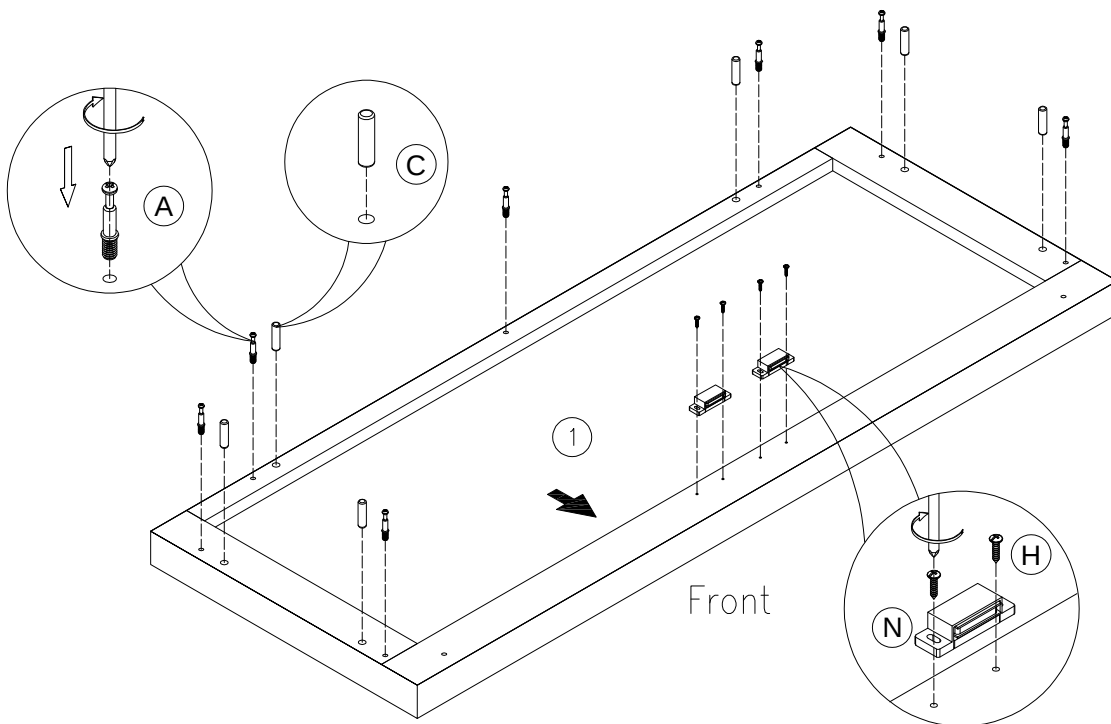


Step 11

B



4

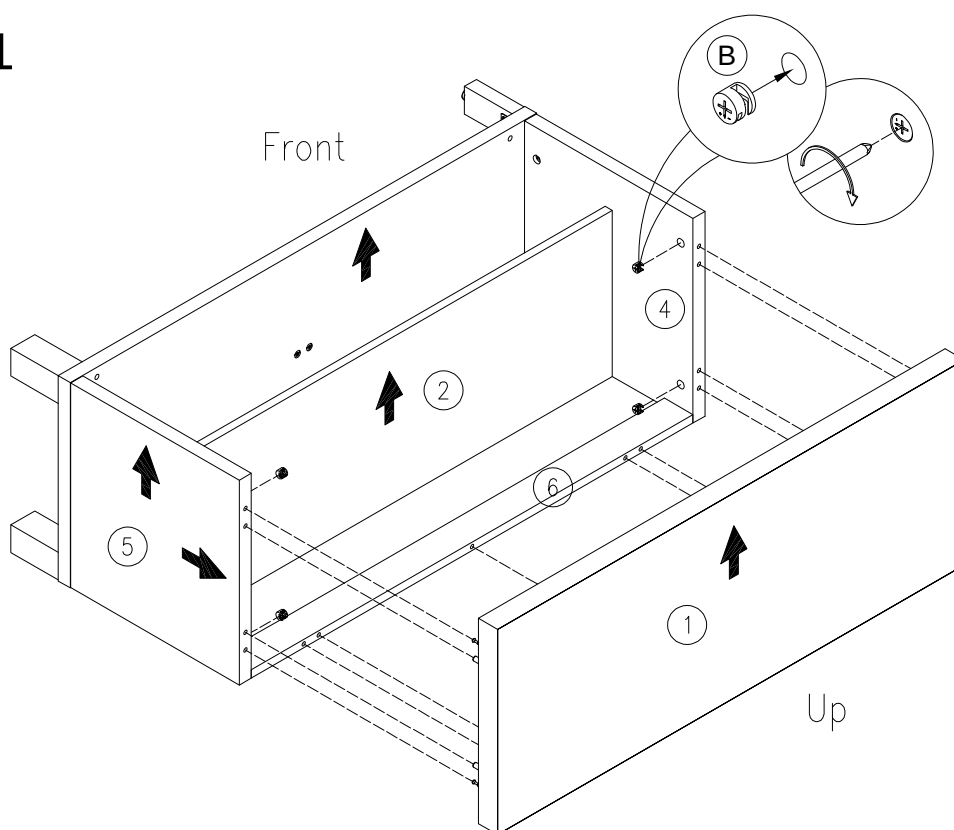


Step 12


B



3

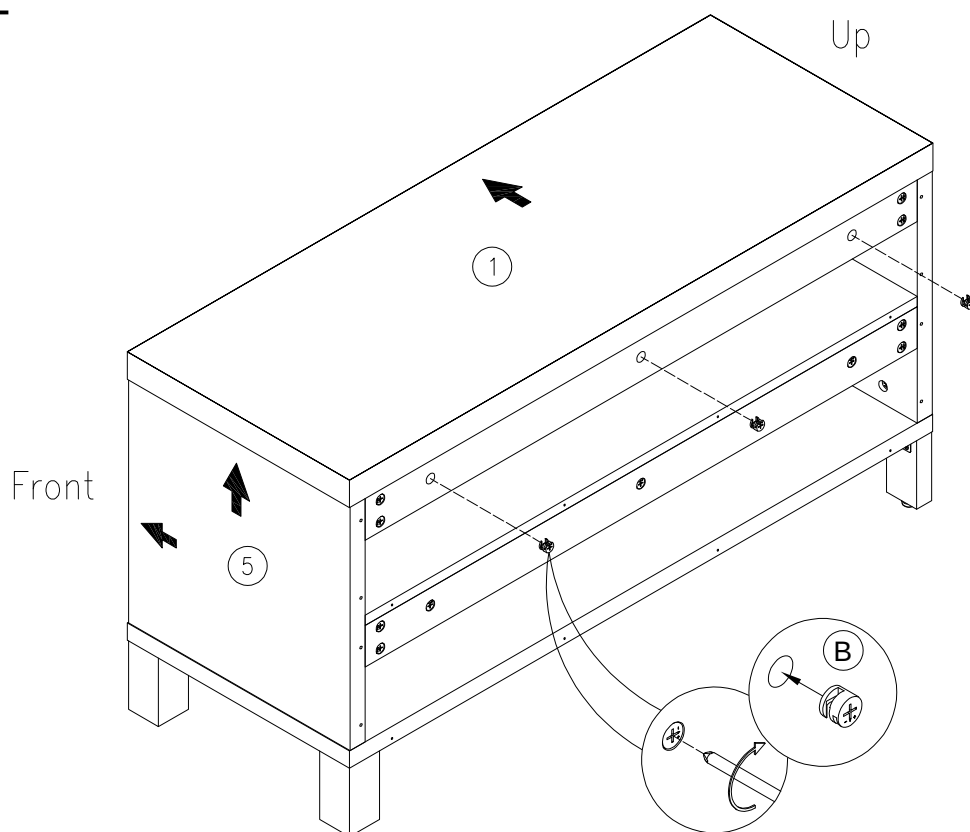


Step 13

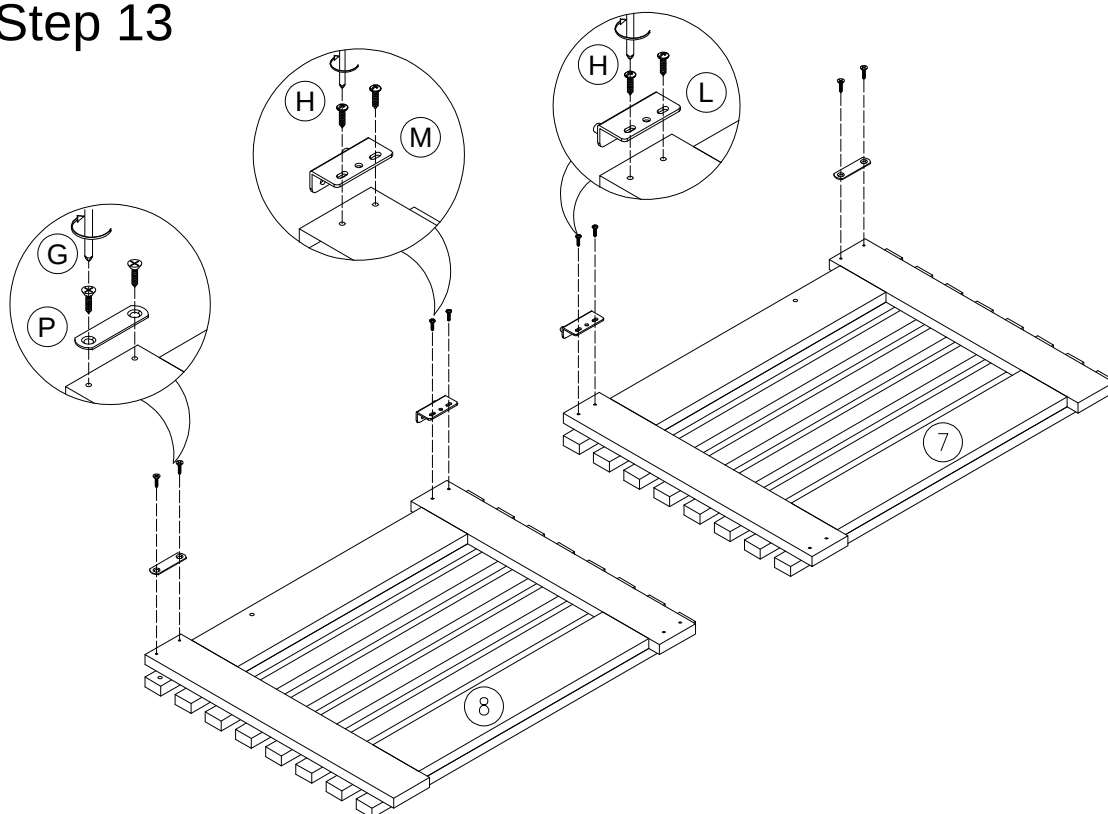


G		4
H		4
L		1
M		1
P		2

Step 14

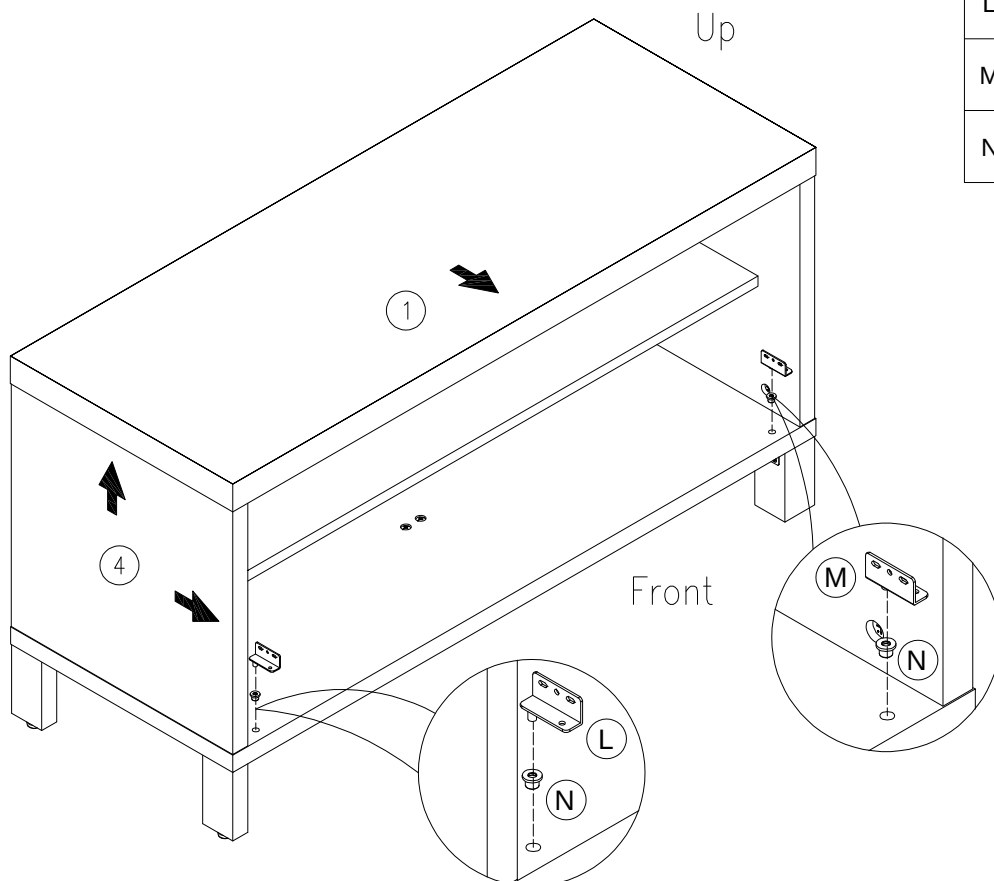


L		1
M		1
N		2

Step 15

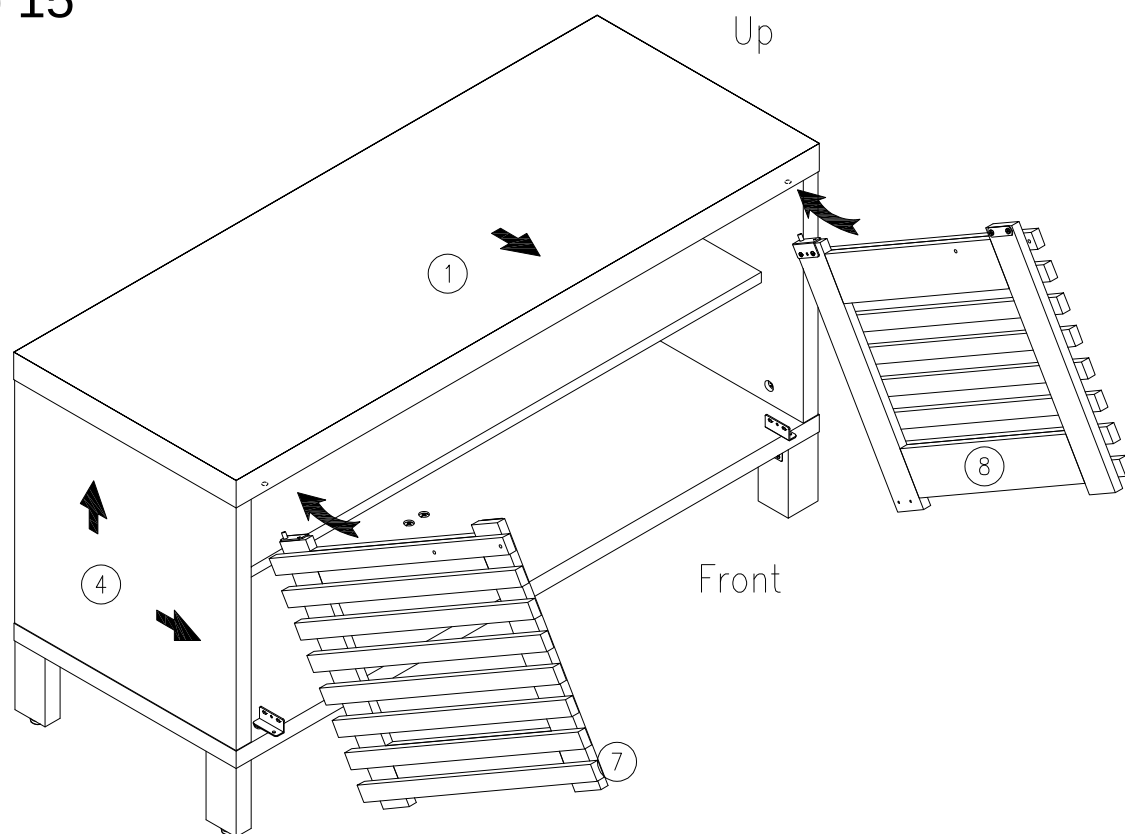

Step 16

H		4
---	--	---

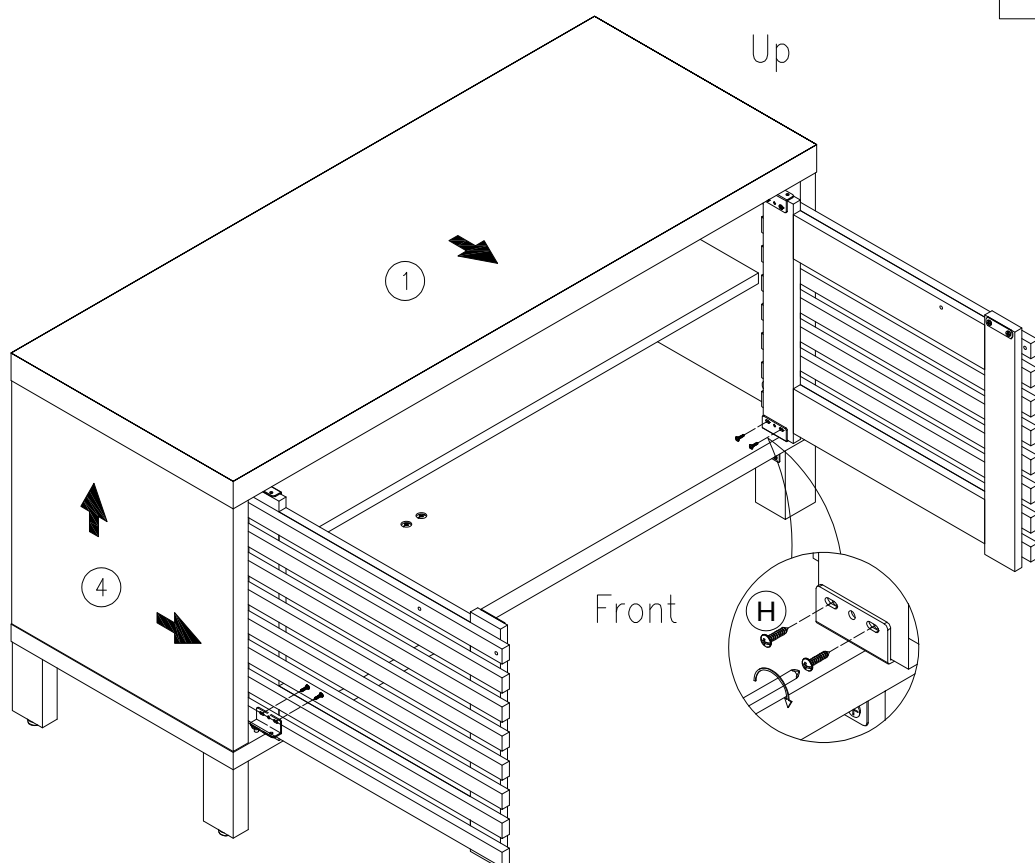


Step 17

J





20

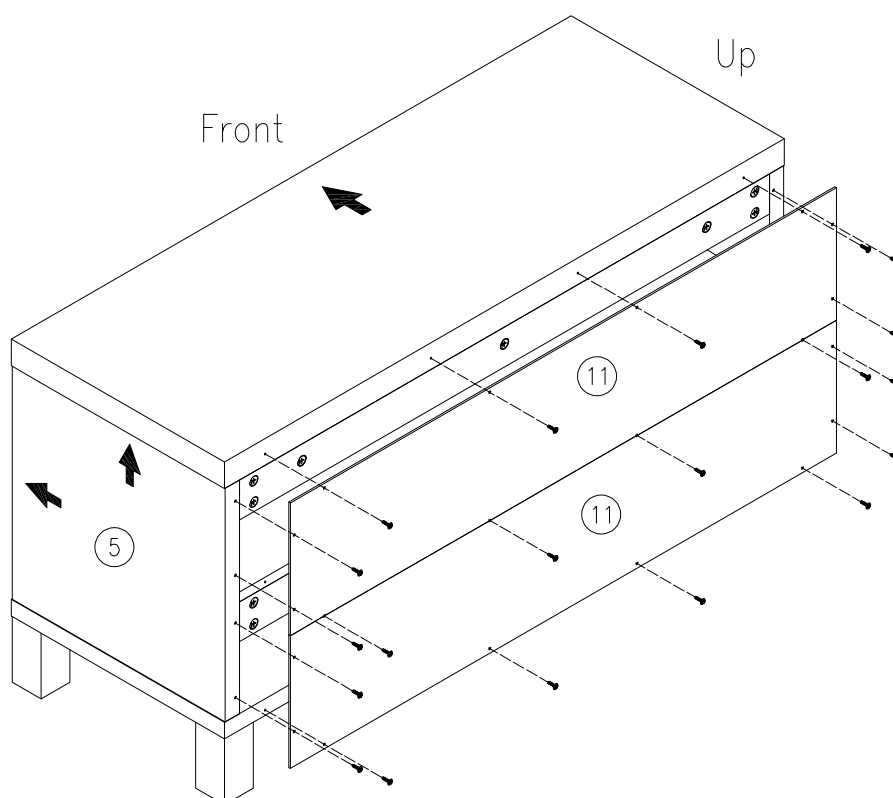

Step 18

The disc hole of the side plate is covered with S-ring adhesive, and the other disc holes are covered with R combiner.

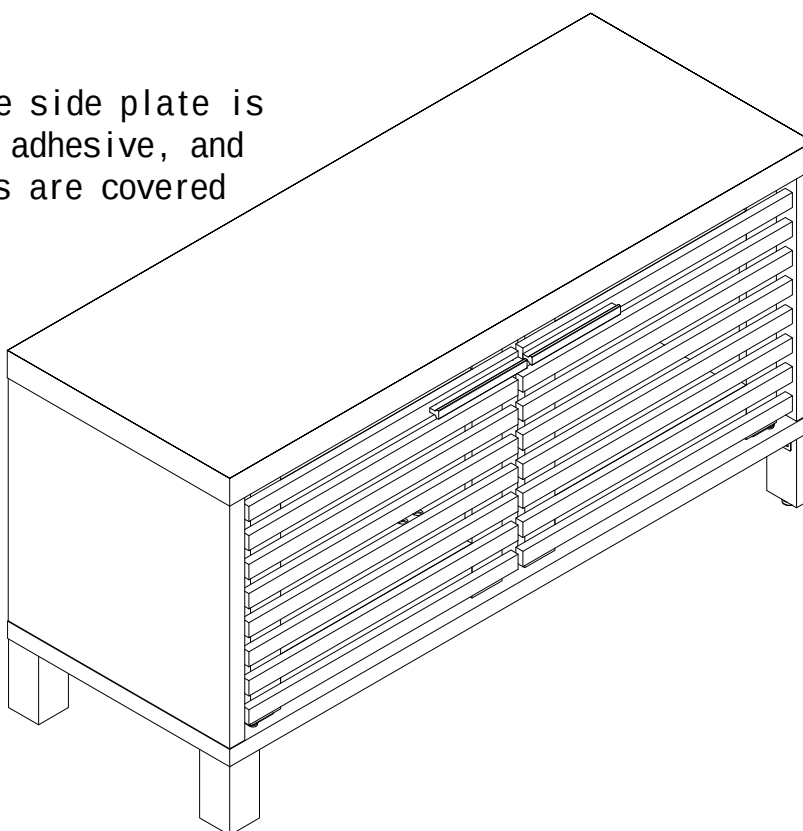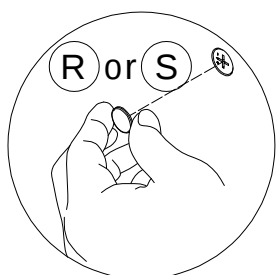

Complete the installation