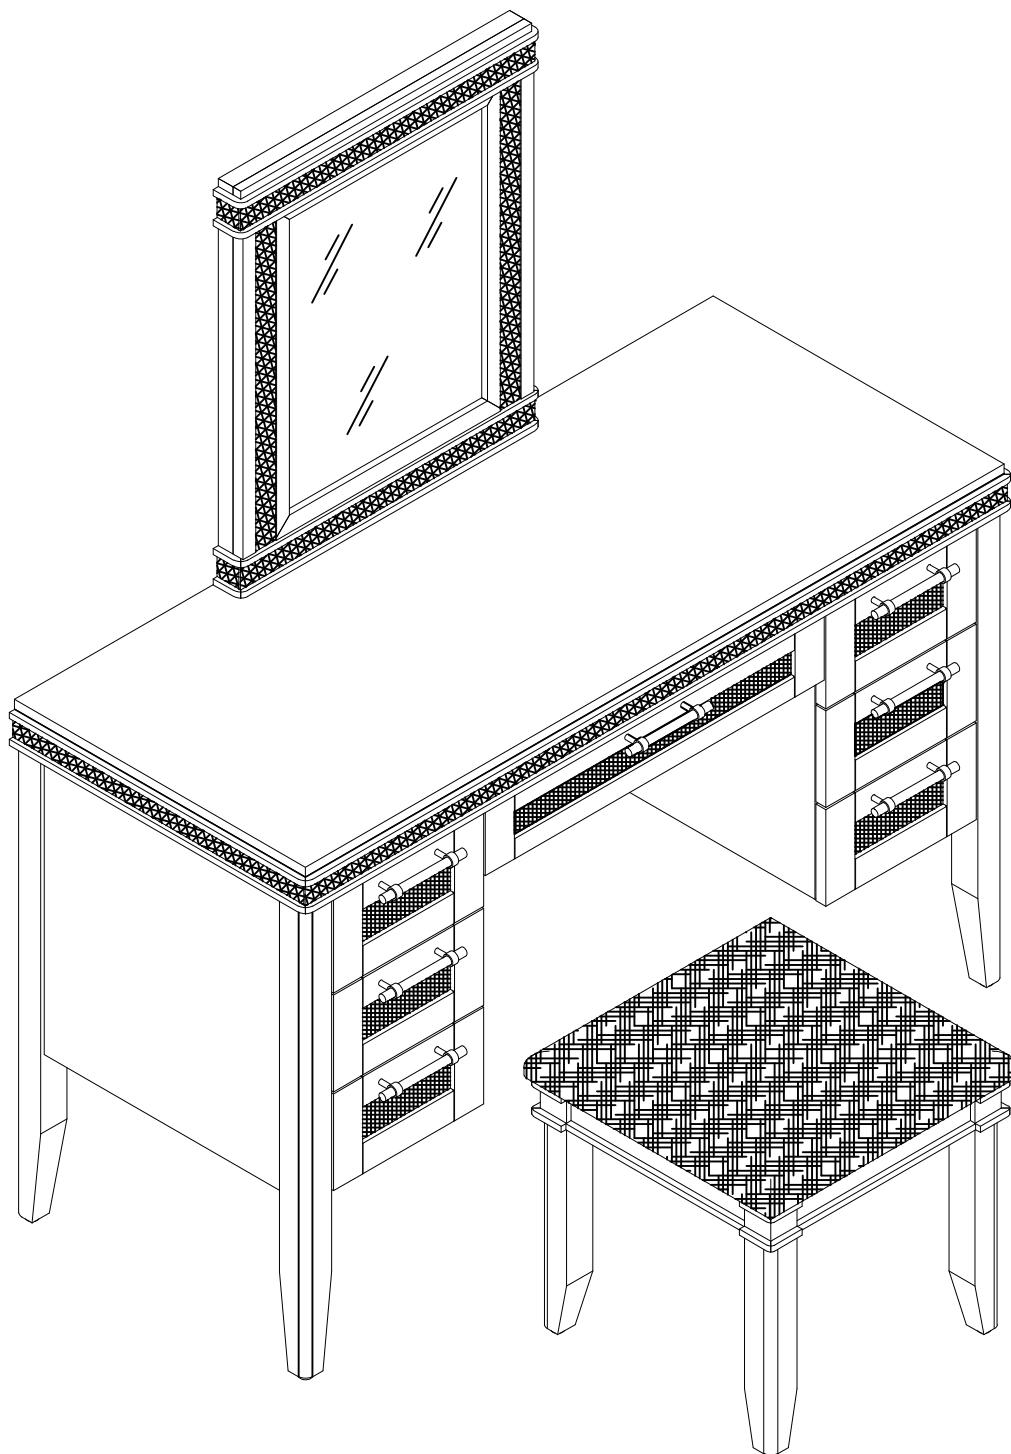


Vanity Set

Assembly Instructions - Please keep for future reference

N704P337484



Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING In order to help prevent overturning – please follow these instructions


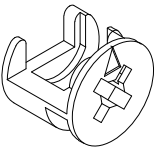


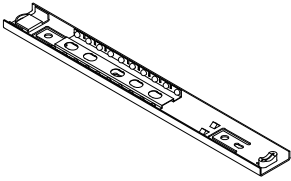
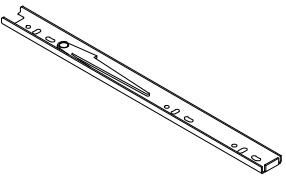

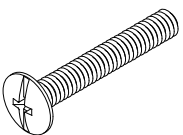



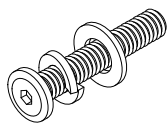



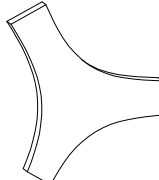
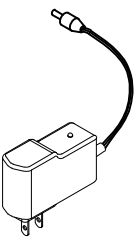
To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

A QTY: 54  CAM BOLT	B QTY: 54  CAM LOCK	C QTY: 26  WOOD DOWEL Ø8*30mm	D QTY: 84  FLAT HEAD SCREW Ø6*12mm
E1 QTY: 14  L=300*35mm BALL BEARING GLIDE	E2 QTY: 14  L=300*35mm BALL BEARING GLIDE	F QTY: 7  HANDLE BAR	G QTY: 14  HANDLE BRACKET
H QTY: 14  Ø8*30mm BOLT	I QTY: 20  Ø6*12mm FLAT HEAD SCREW	J QTY: 4  Ø7*15mm FLAT HEAD SCREW	K QTY: 32  Ø8*35mm FLAT HEAD SCREW
L QTY: 10  Ø1/4*30mm BOLT	M QTY: 8  Ø1/4*45mm BOLT	N QTY: 4  HOOK	O QTY: 4  ANCHOR
P QTY: 2  METAL TIES	Q QTY: 1  HEX KEY	R QTY: 1  CAM TOOL	S QTY: 1  POWER ADAPTER

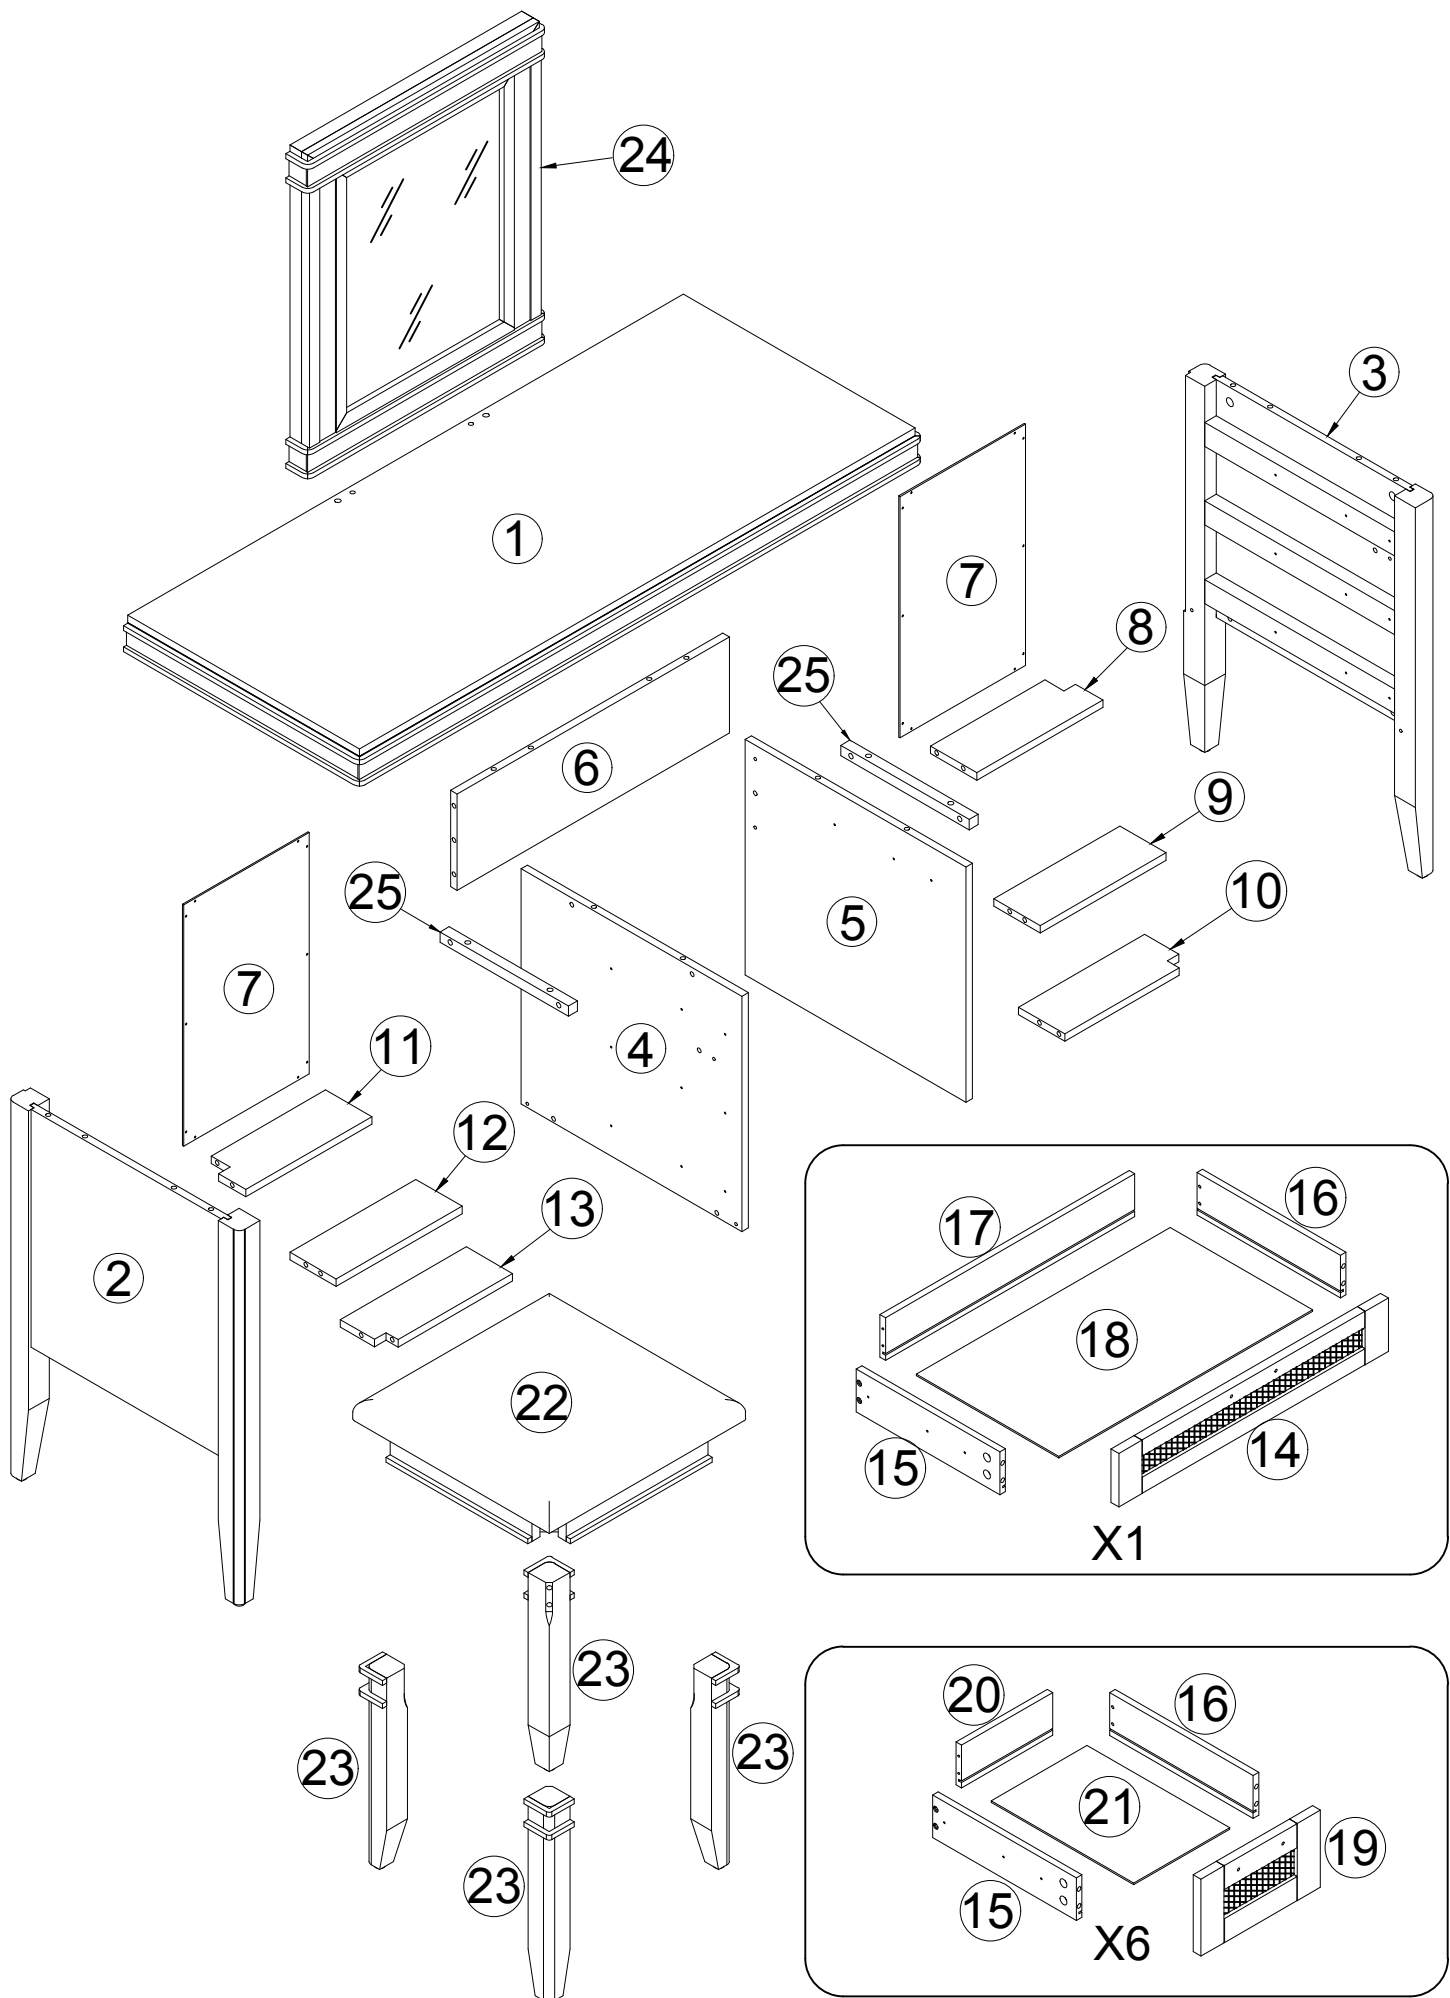COMPONENTS - KEY DIAGRAM




Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1

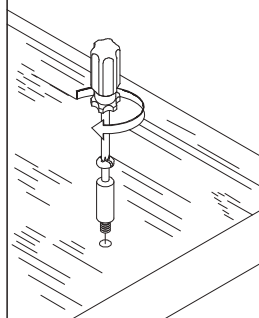
DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.



Step 2

Push the male camlock into the entry hole.

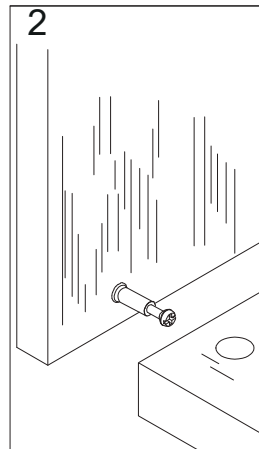2




Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

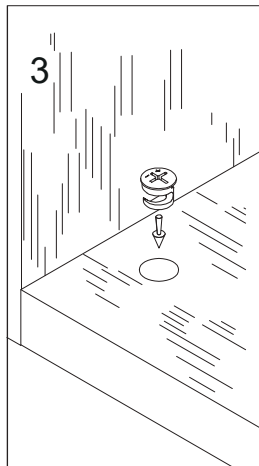3




Step 4

Turn the female camlock clockwise with a screwdriver.
















You should feel a click when the camlock is locked in place.

The joint is now secure.









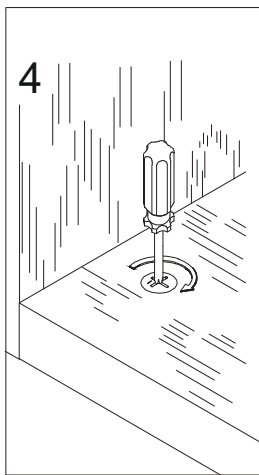
4



COMPONENTS - KEY DIAGRAM

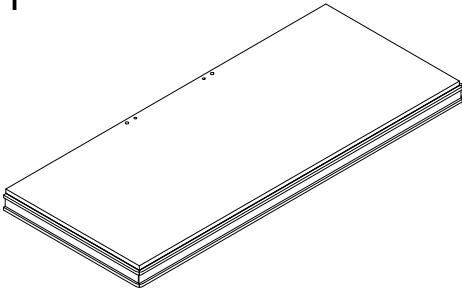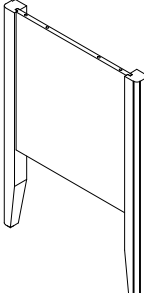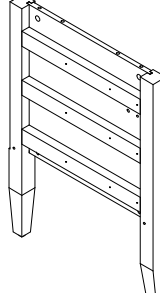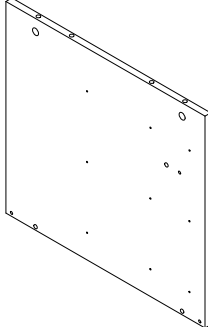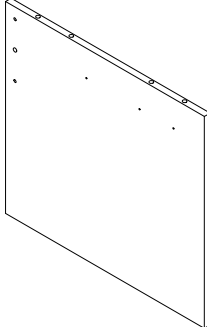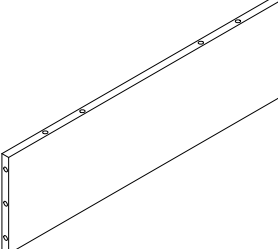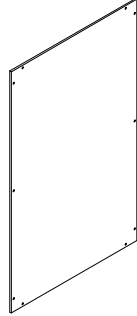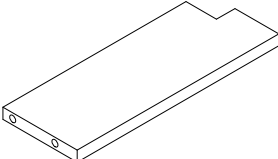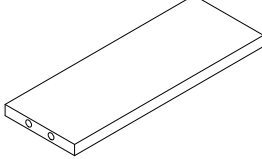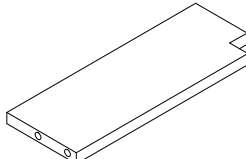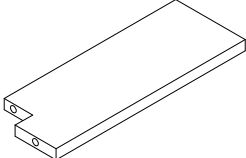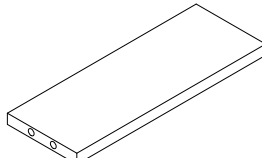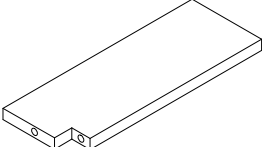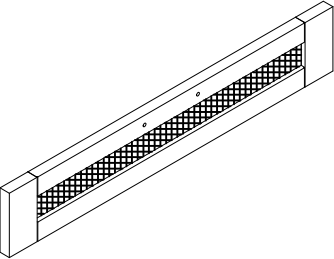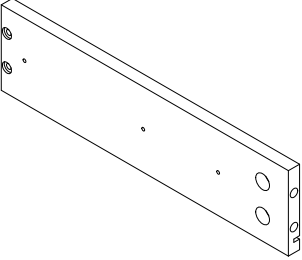1 	2 	3 
TOP PANEL QTY: 1	LEFT FRAME QTY: 1	RIGHT FRAME QTY: 1
4 	5 	6 
LEFT PARTITION QTY: 1	RIGHT PARTITION QTY: 1	BACK RAIL QTY: 1
7 	8 	9 
BACK PANEL QTY: 2	RIGHT BACK RAIL QTY: 1	RIGHT FRONT TOP RAIL QTY: 1
10 	11 	12 
RIGHT FRONT BOTTOM RAIL QTY: 1	LEFT BACK RAIL QTY: 1	LEFT FRONT TOP RAIL QTY: 1
13 	14 	15 
LEFT FRONT BOTTOM RAIL QTY: 1	DRAWER FRONT QTY: 1	DRAWER SIDE - LEFT QTY: 7

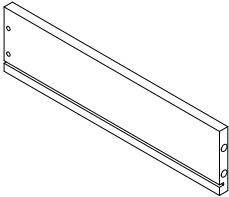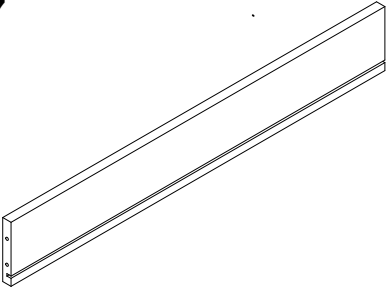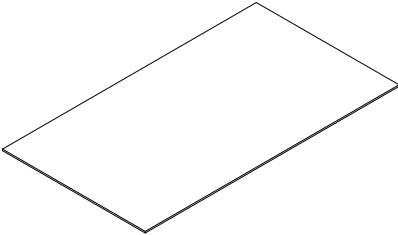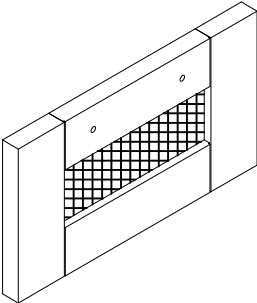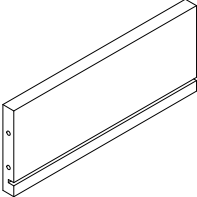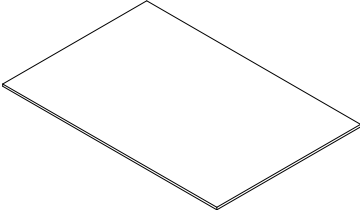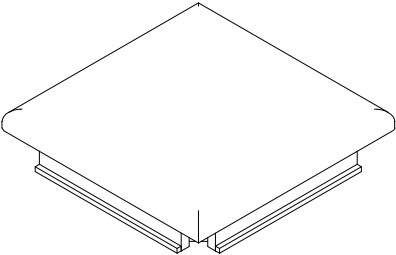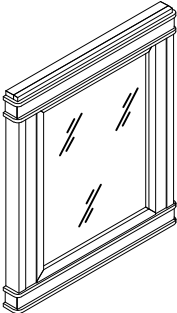
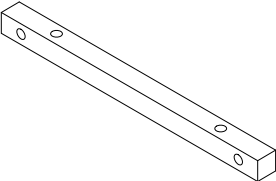
COMPONENTS - KEY DIAGRAM

16		17		18	
DRAWER SIDE - LEFT	QTY: 7	DRAWER BACK	QTY: 1	DRAWER BOTTOM	QTY: 1
19		20		21	
DRAWER FRONT	QTY: 6	DRAWER BACK	QTY: 6	DRAWER BOTTOM	QTY: 6
22		23		24	
SEAT FRAME	QTY: 1	CHAIR LEG	QTY: 4	MIRROR FRAME	QTY: 1
25					
CONNECTING BAR	QTY: 2				

Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Pay attention when connecting !
The sliding module must be at the front end.

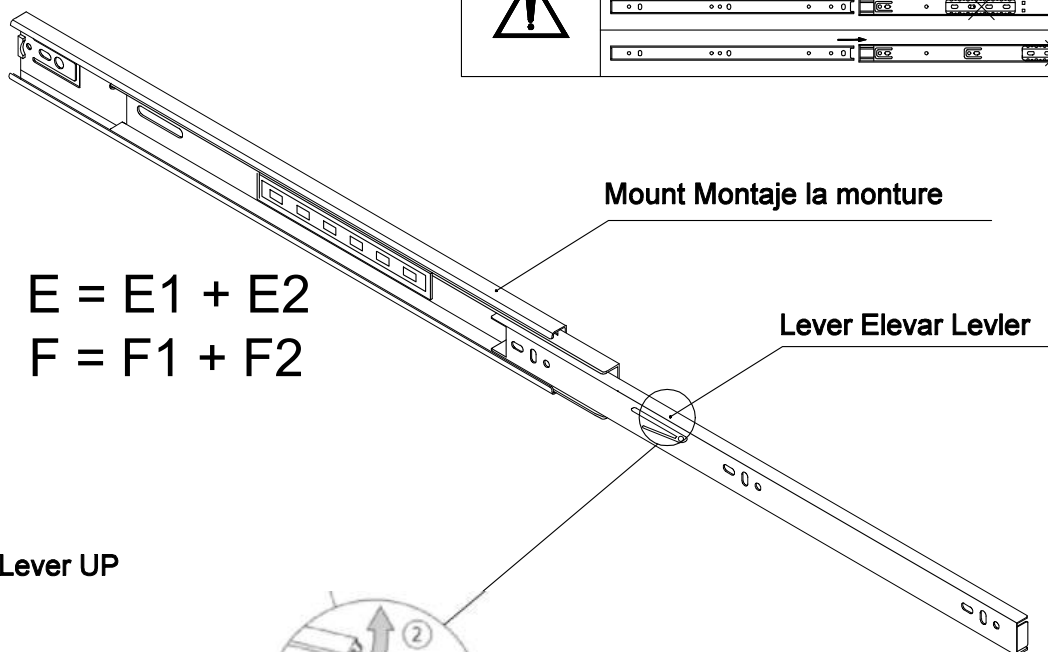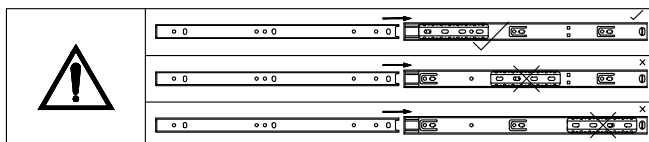
STEP 1 : Extend Slide



STEP 2: Push Lever UP



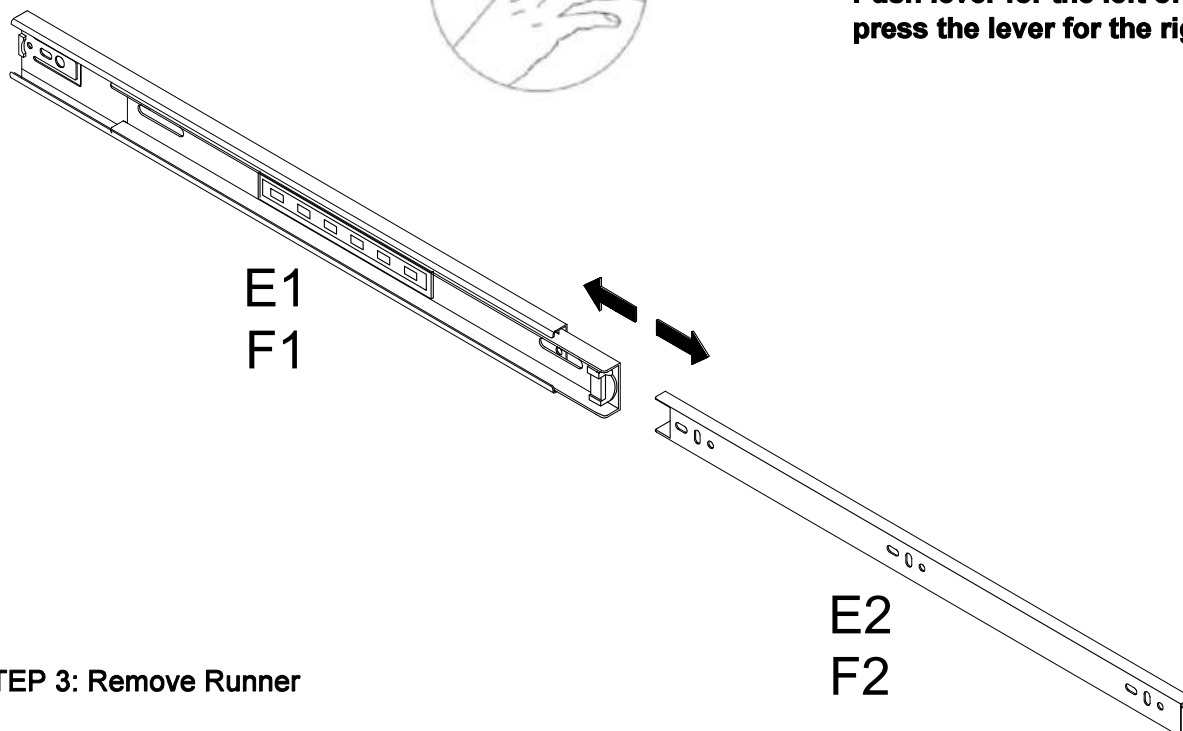
**Push lever for the left of drawer ,
 press the lever for the right of drawer.**




STEP 3: Remove Runner

ASSEMBLY INSTRUCTIONS

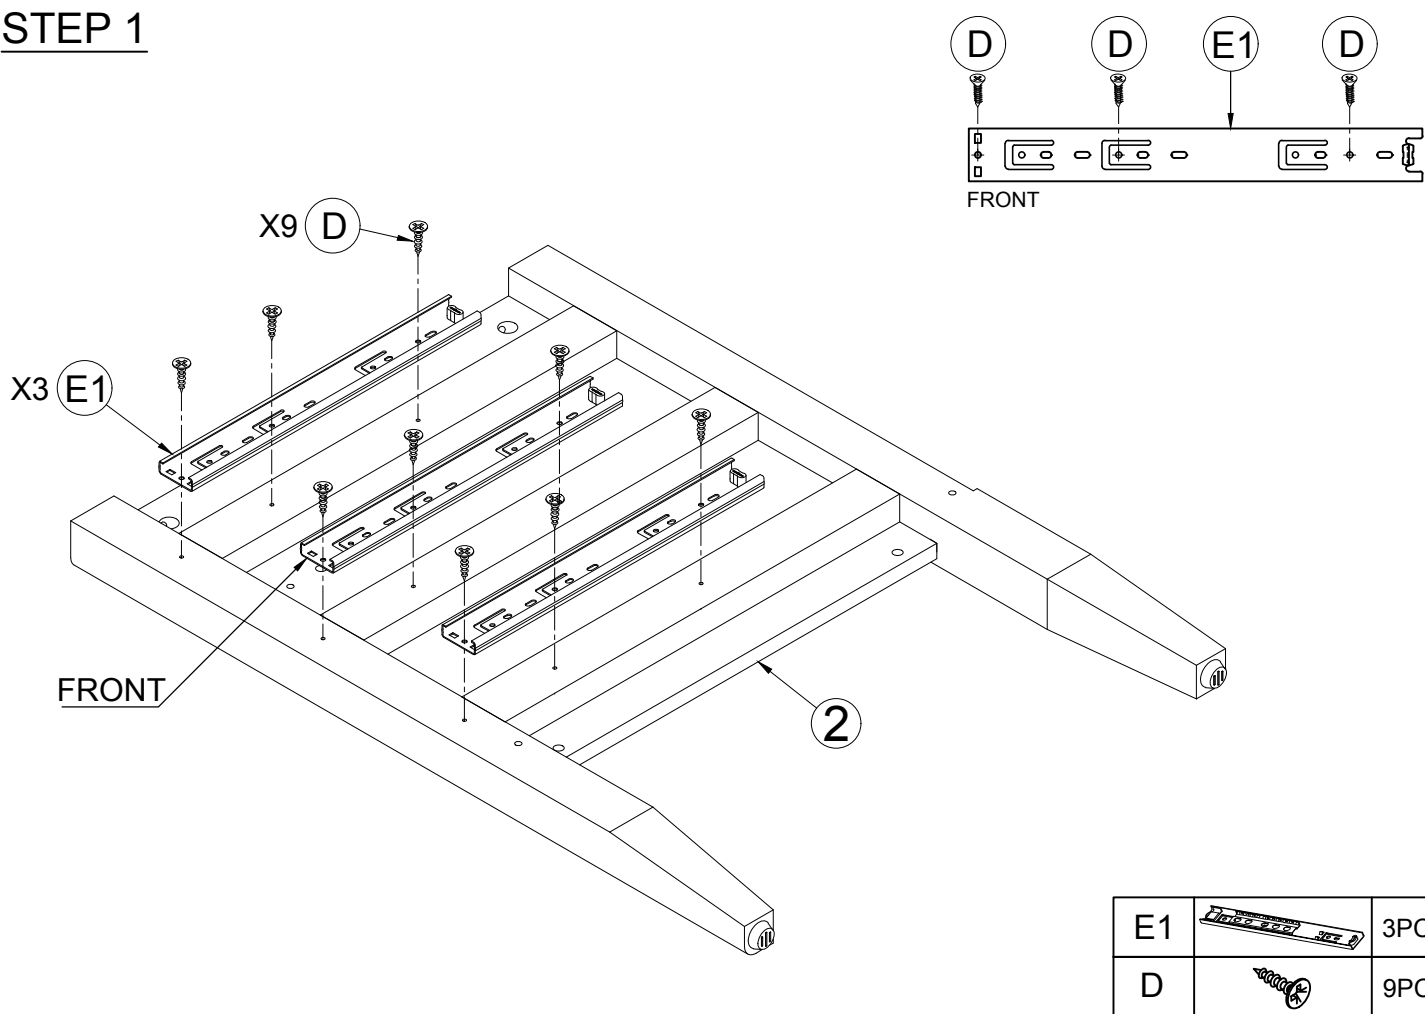STEP 1




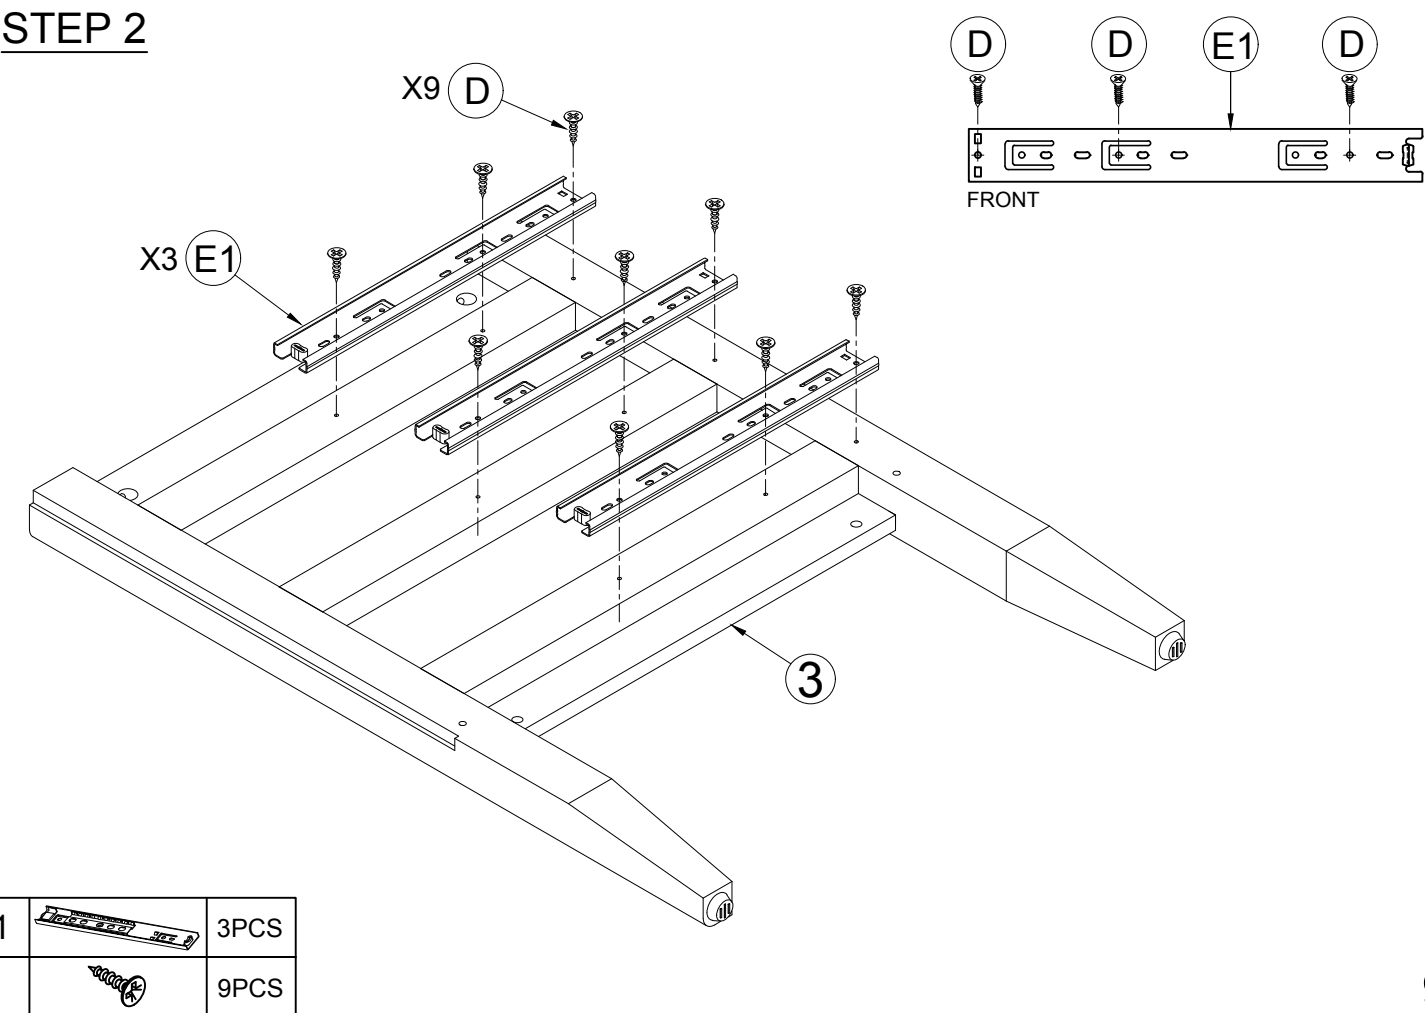STEP 2




ASSEMBLY INSTRUCTIONS

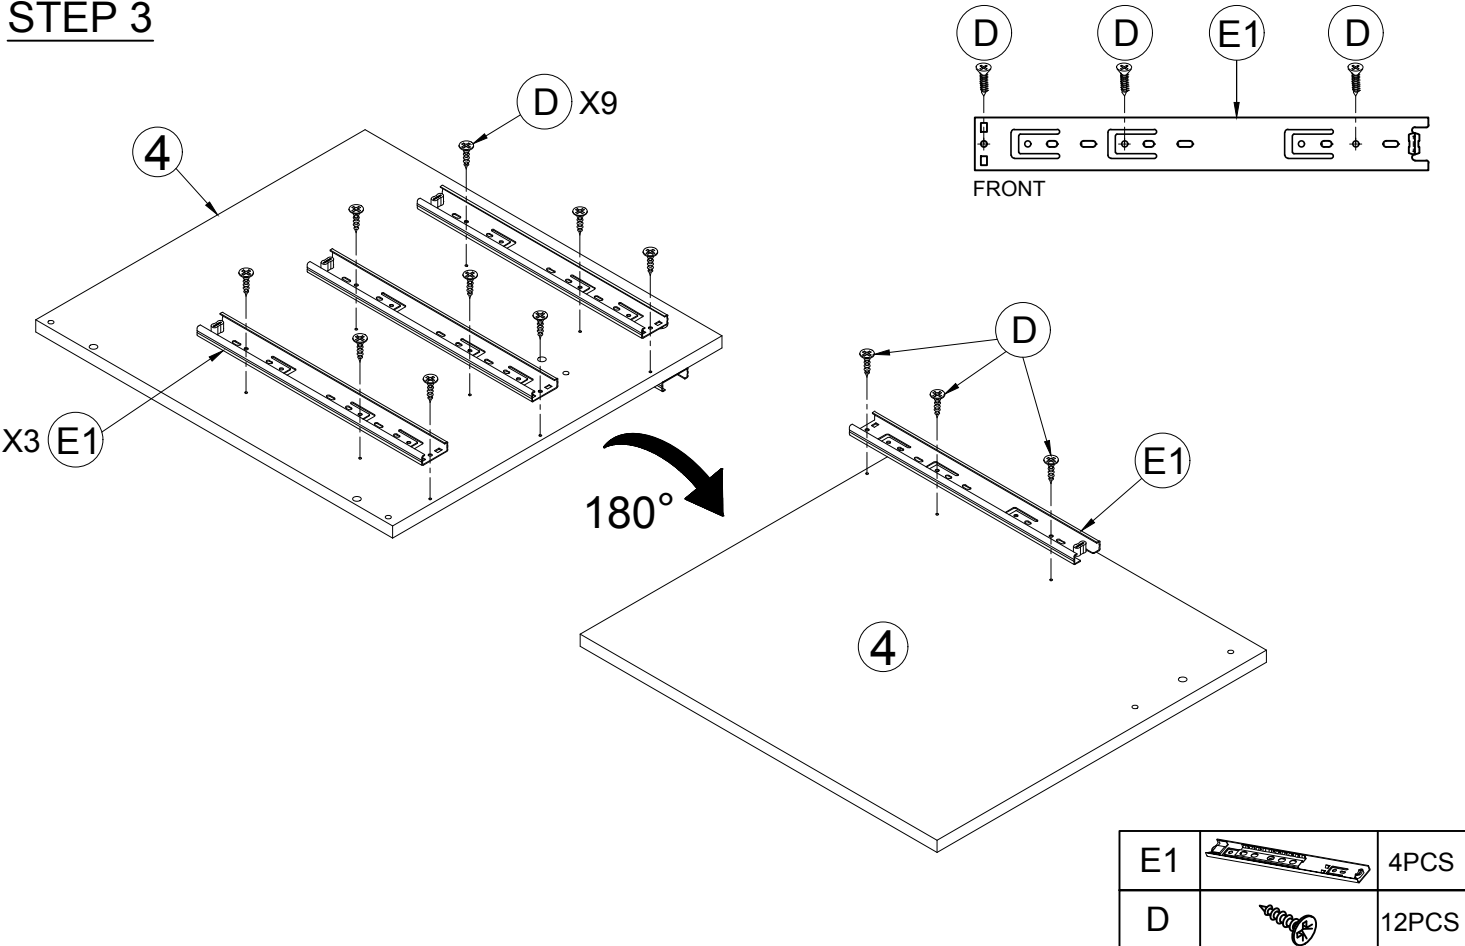STEP 3




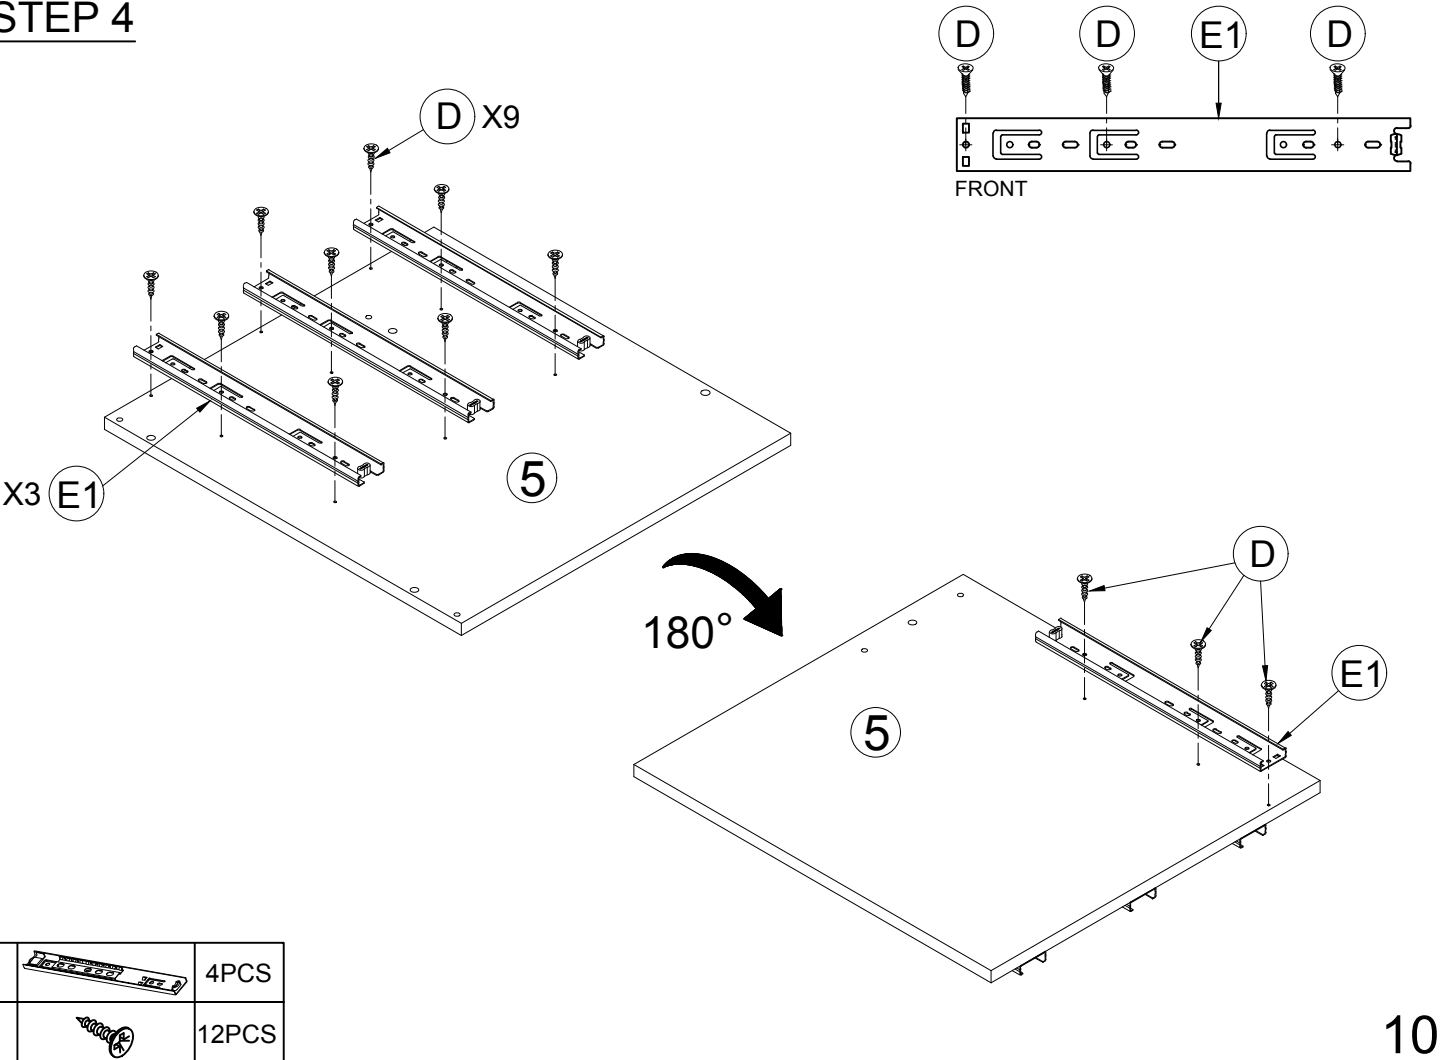
STEP 4




ASSEMBLY INSTRUCTIONS

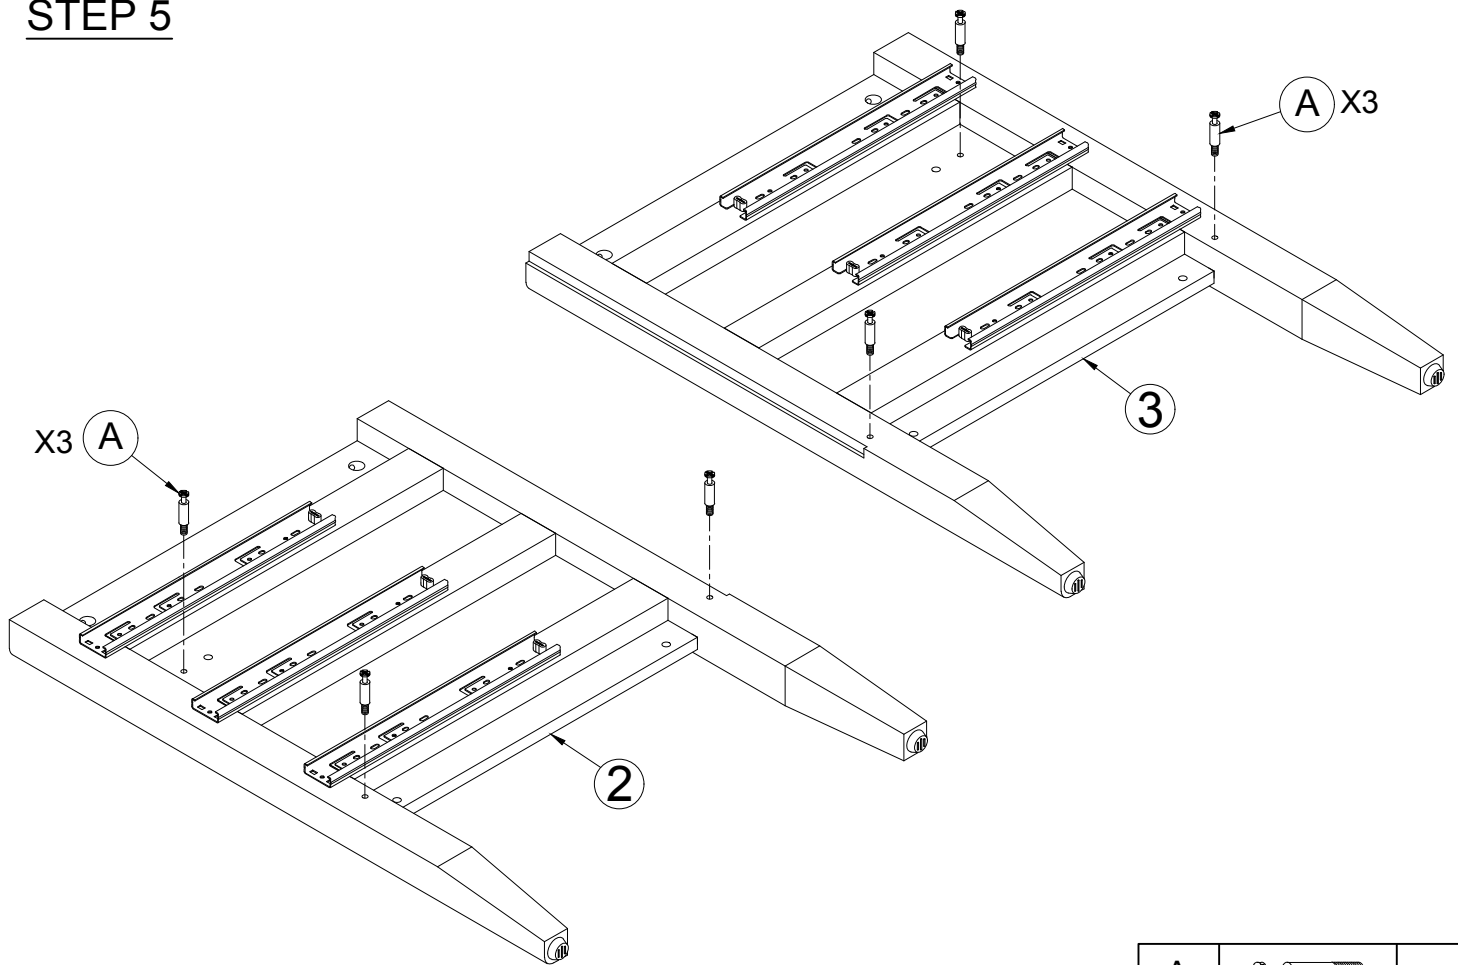STEP 5



A		6PCS
---	---	------

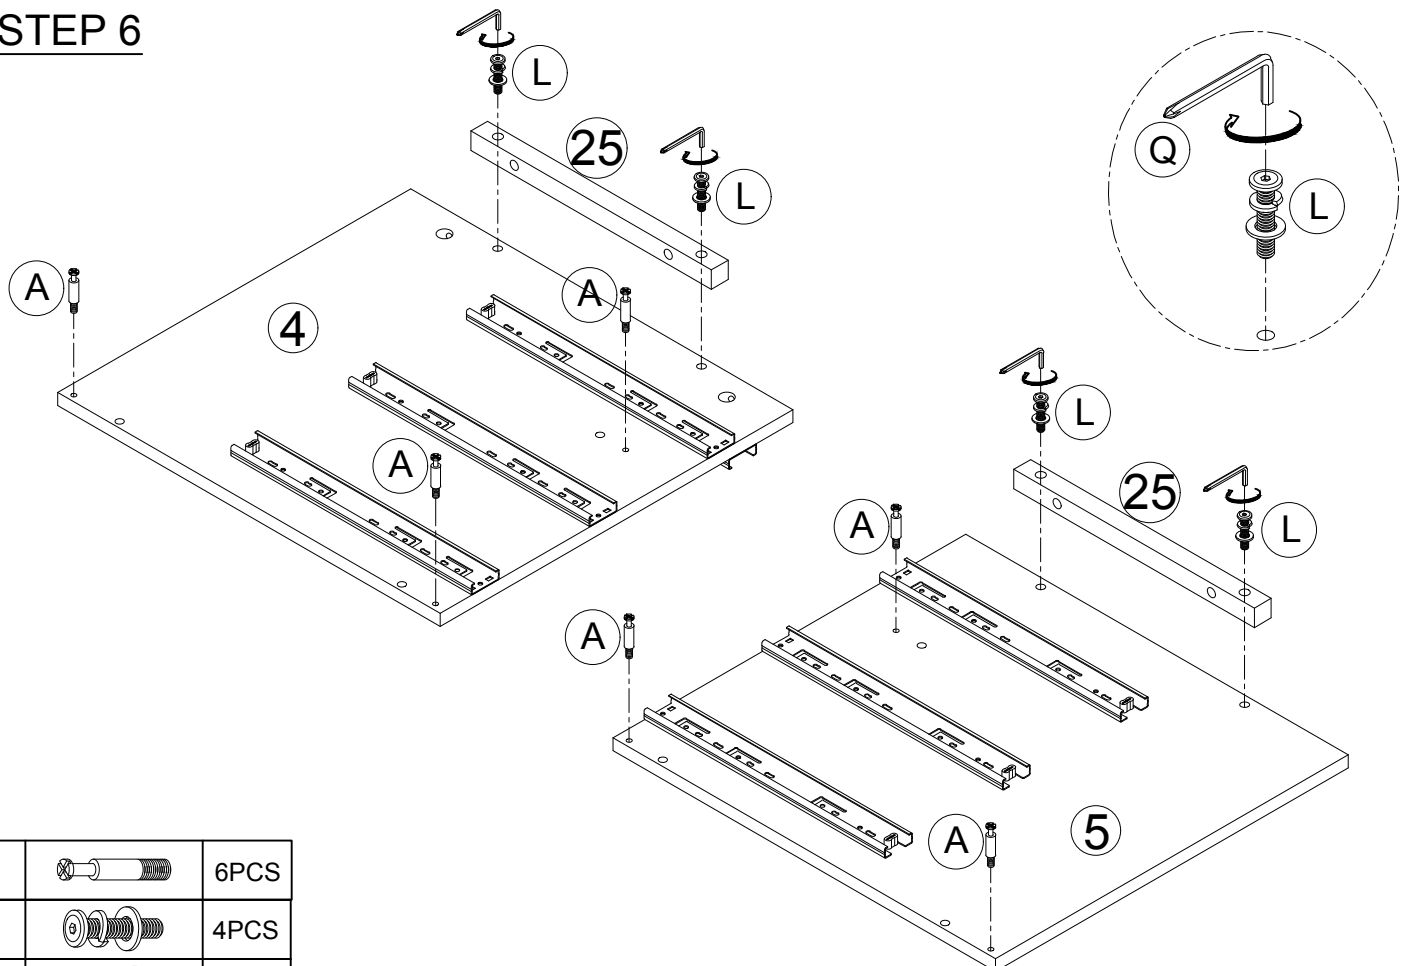
STEP 6



A		6PCS
L		4PCS
Q		1PC


ASSEMBLY INSTRUCTIONS

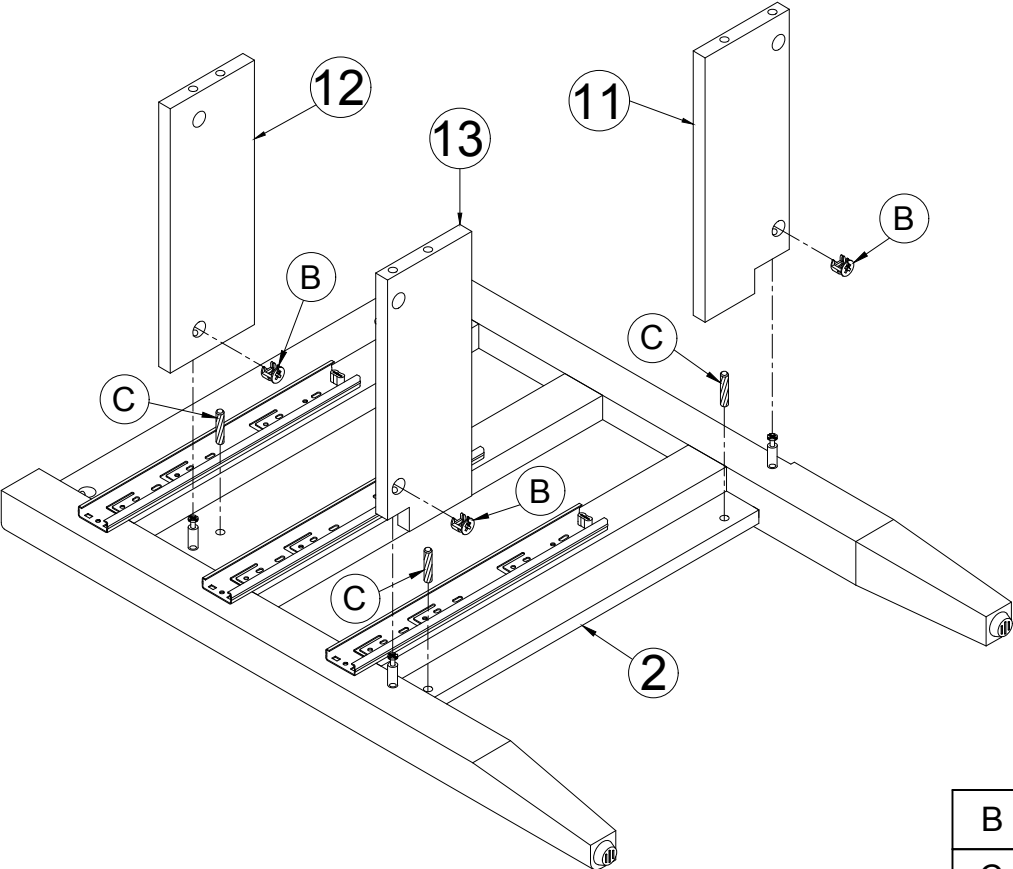STEP 7



B		3PCS
C		3PCS

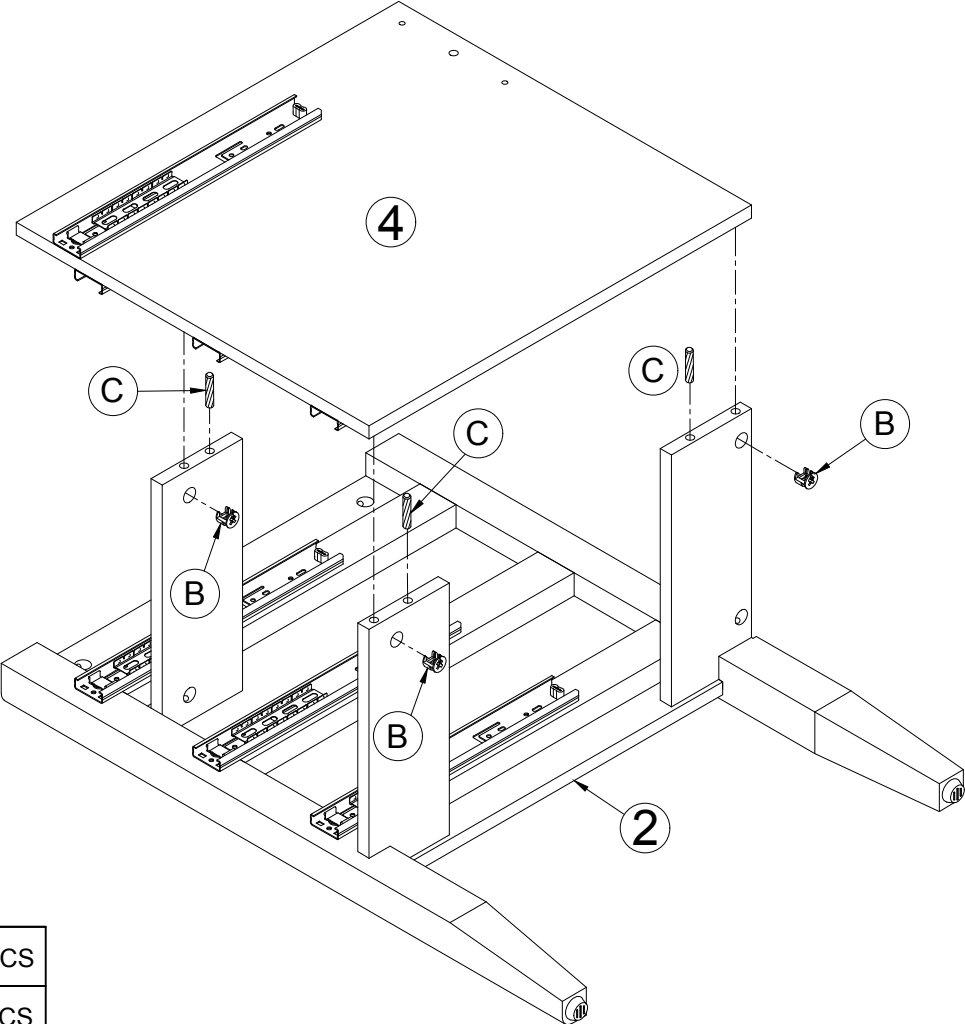
STEP 8



B		3PCS
C		3PCS


ASSEMBLY INSTRUCTIONS

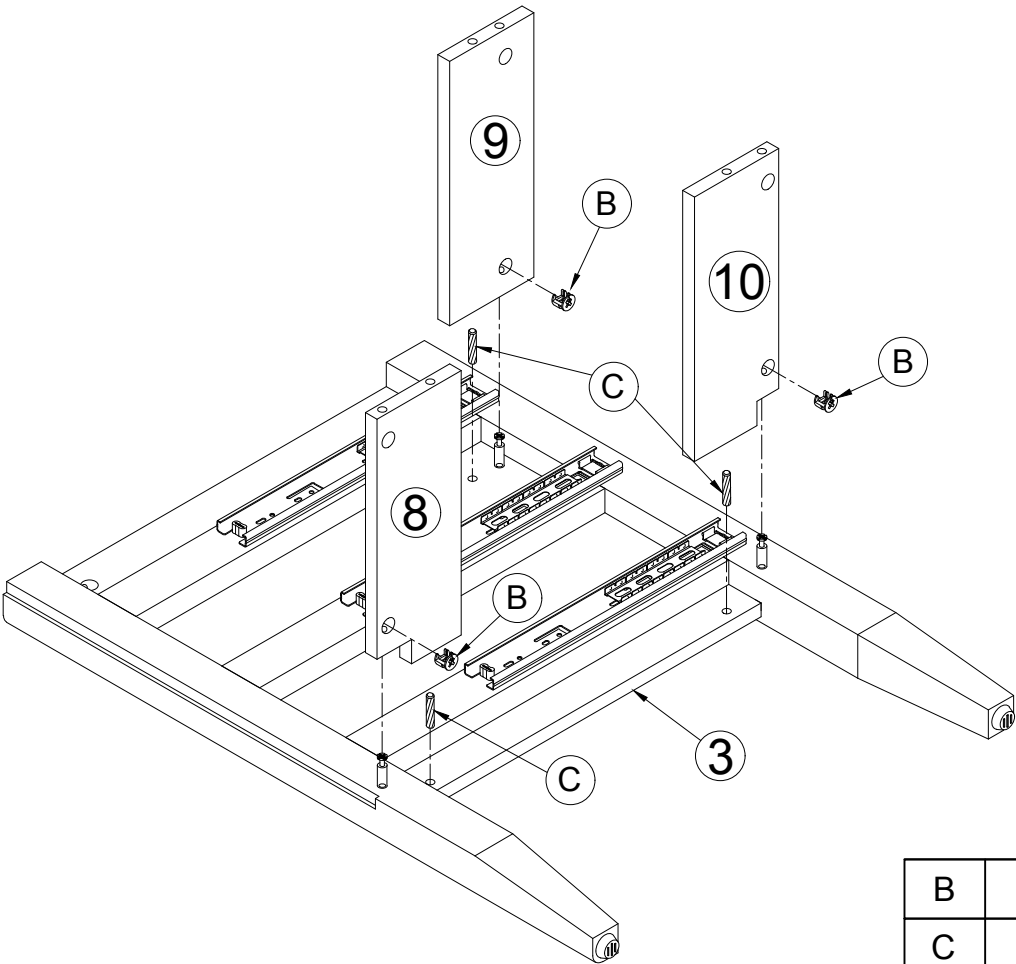STEP 9



B		3PCS
C		3PCS

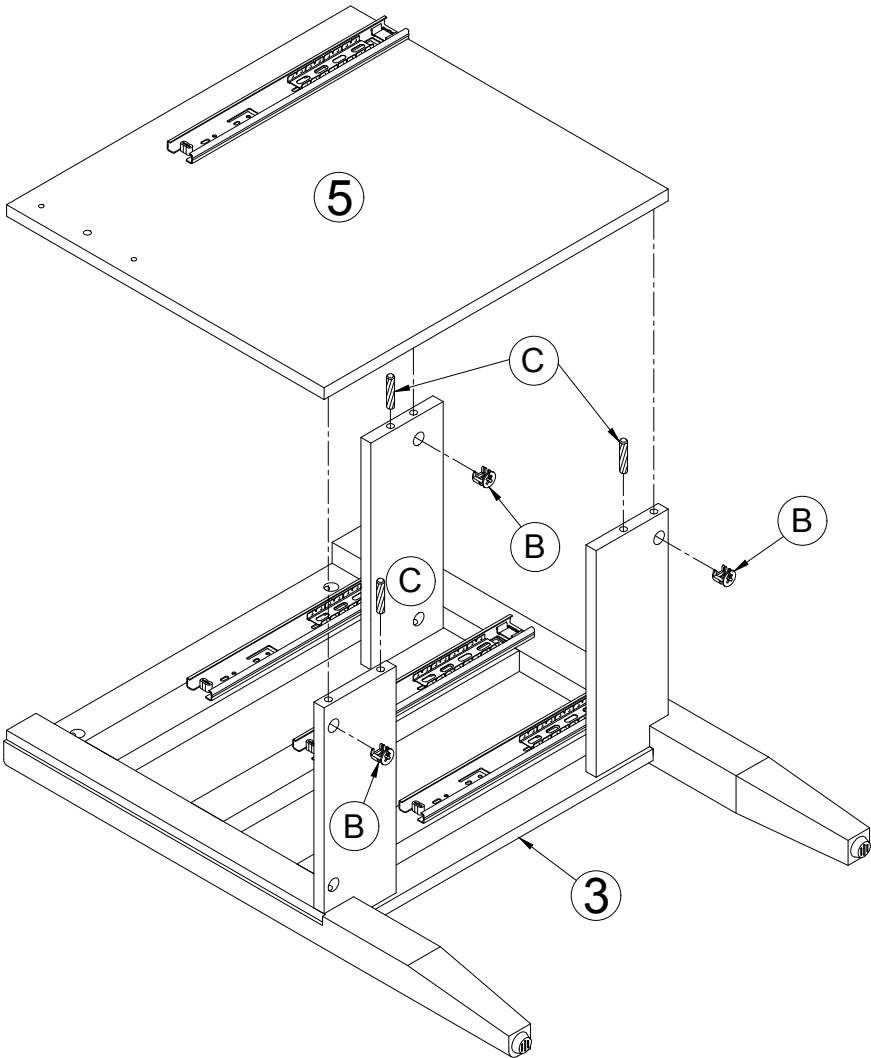
STEP 10




B		3PCS
C		3PCS

ASSEMBLY INSTRUCTIONS

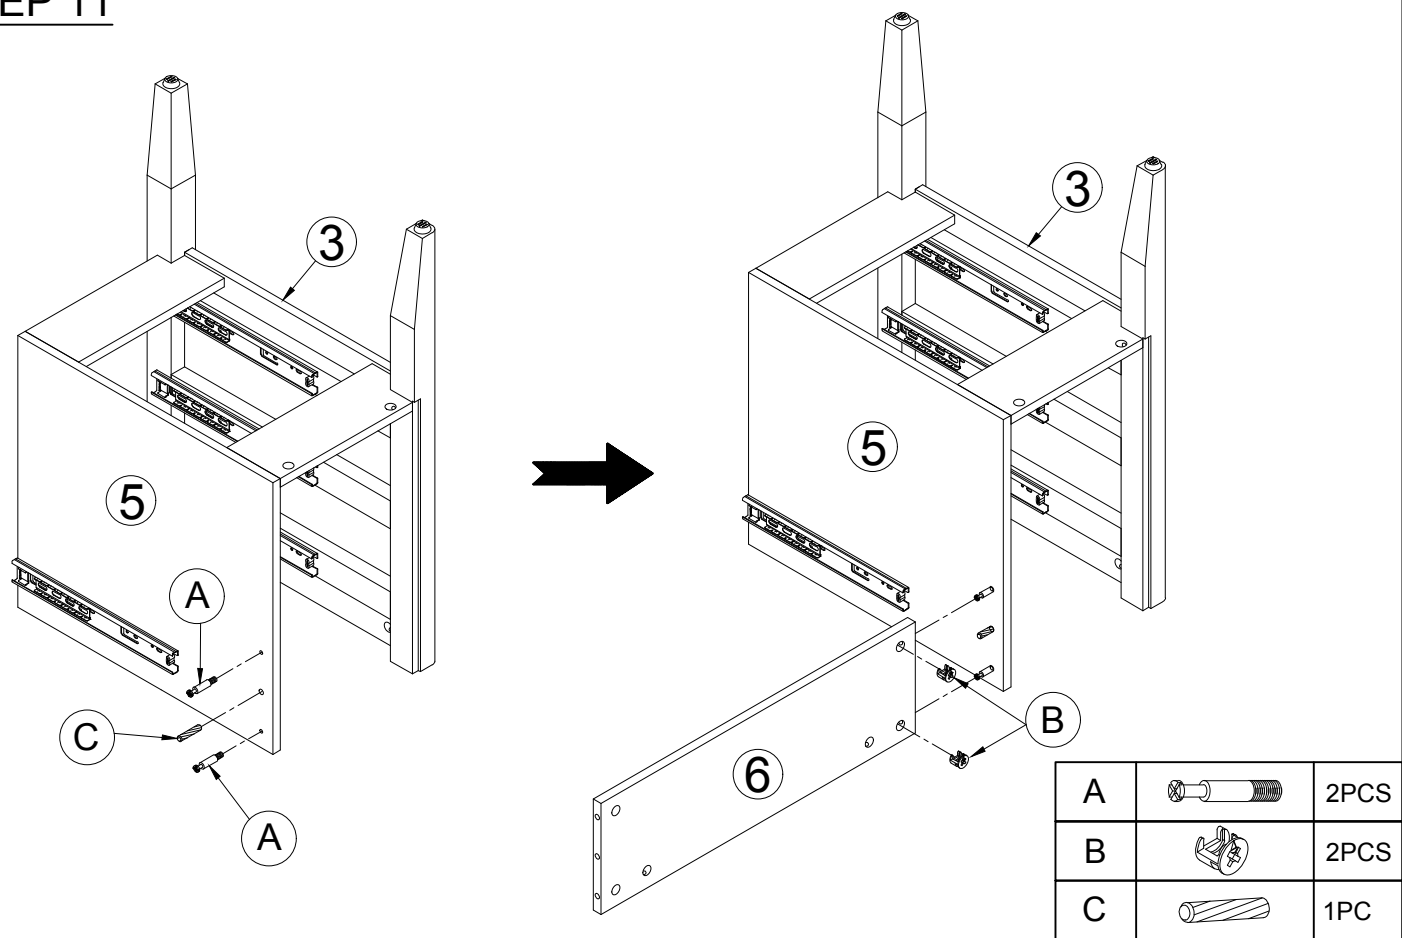STEP 11




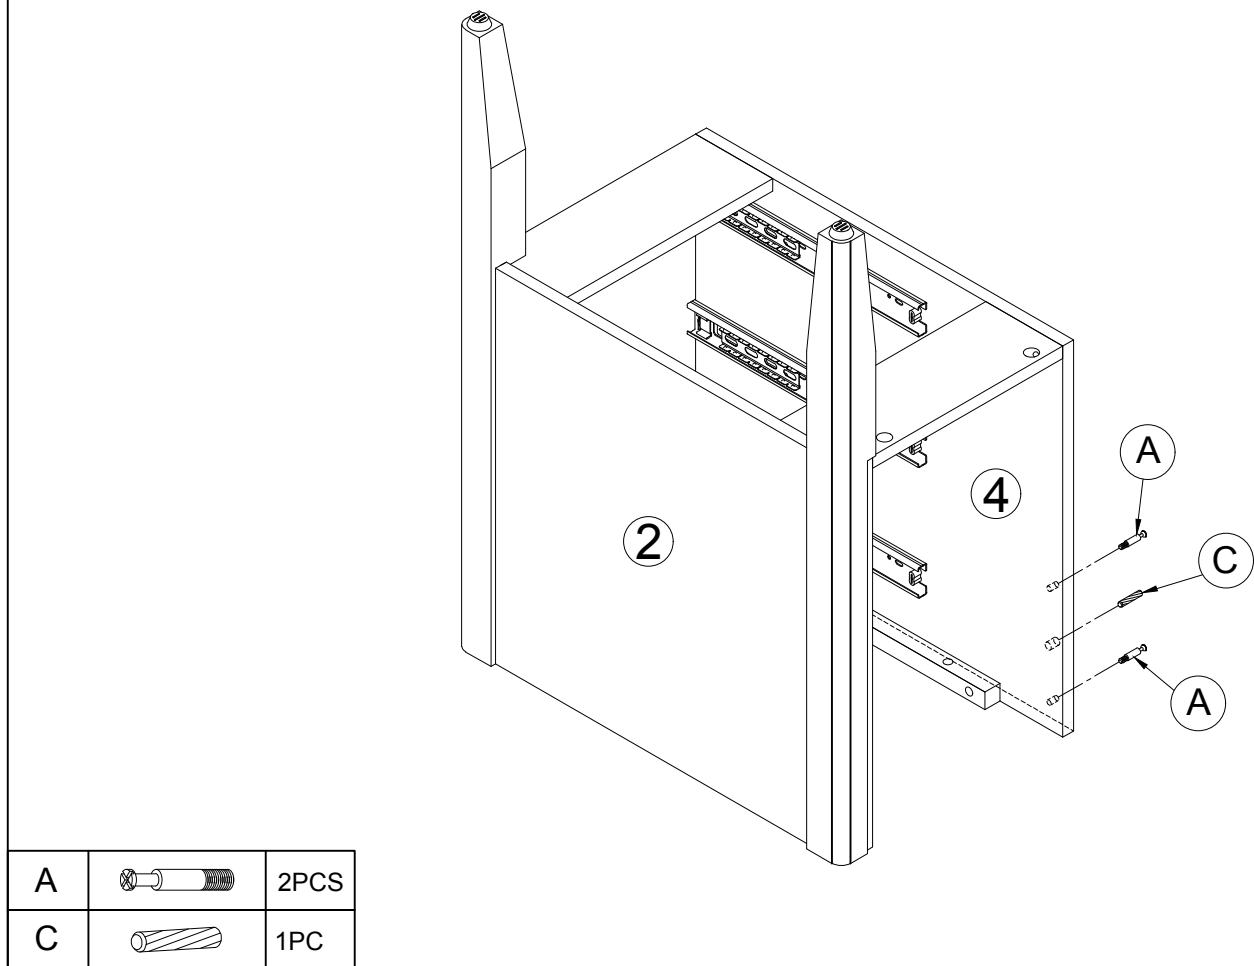STEP 12




ASSEMBLY INSTRUCTIONS

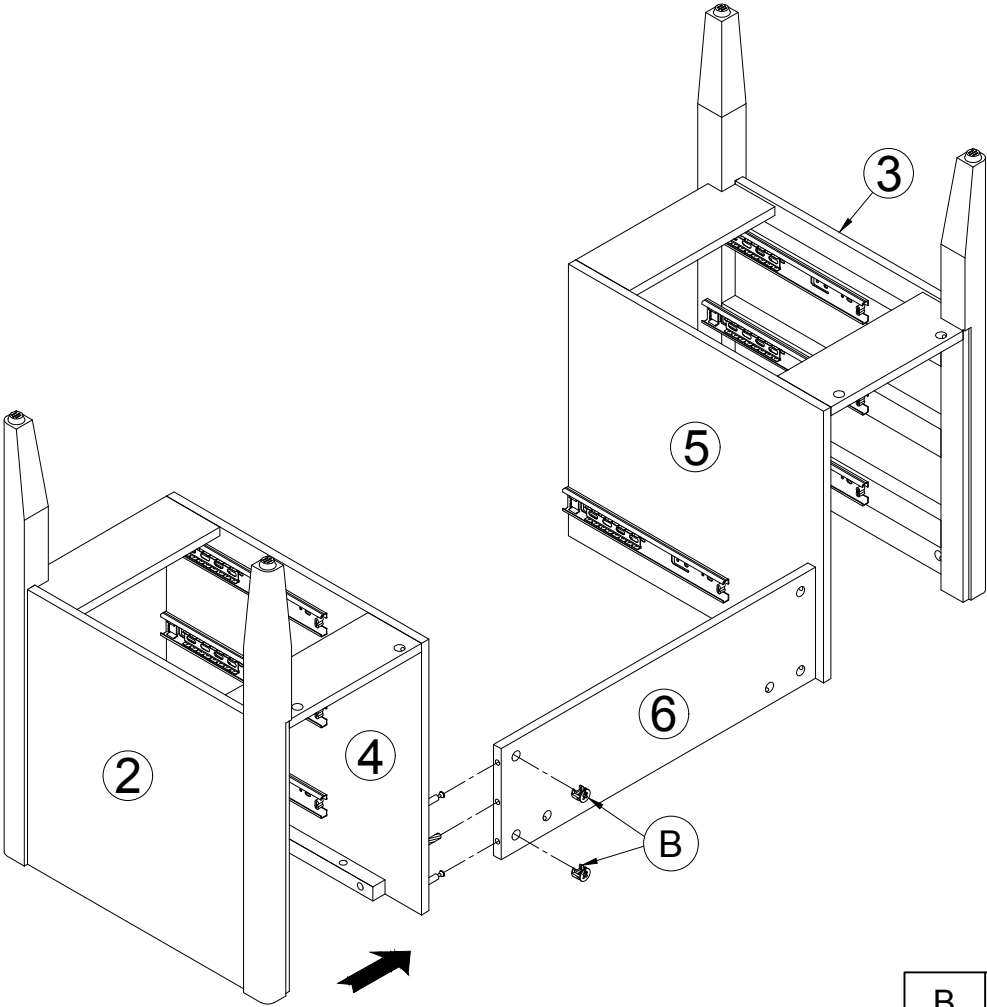
STEP 13



B		2PCS
---	---	------

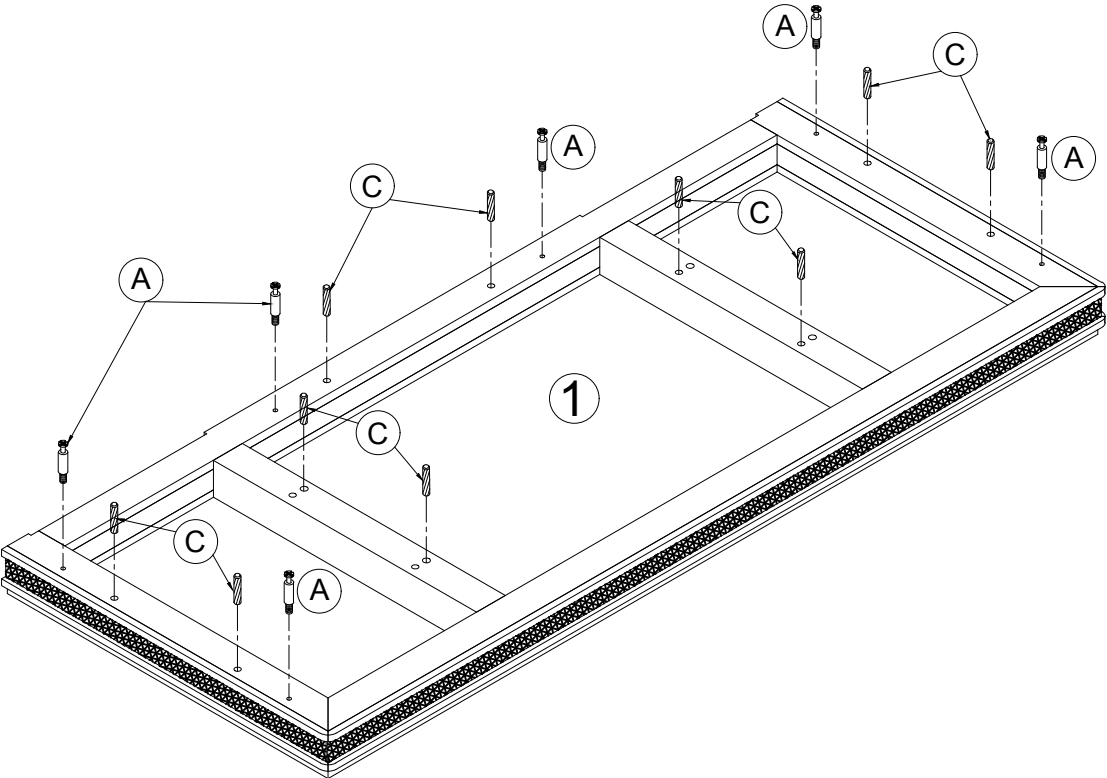
STEP 14



A		6PCS
C		10PCS

ASSEMBLY INSTRUCTIONS

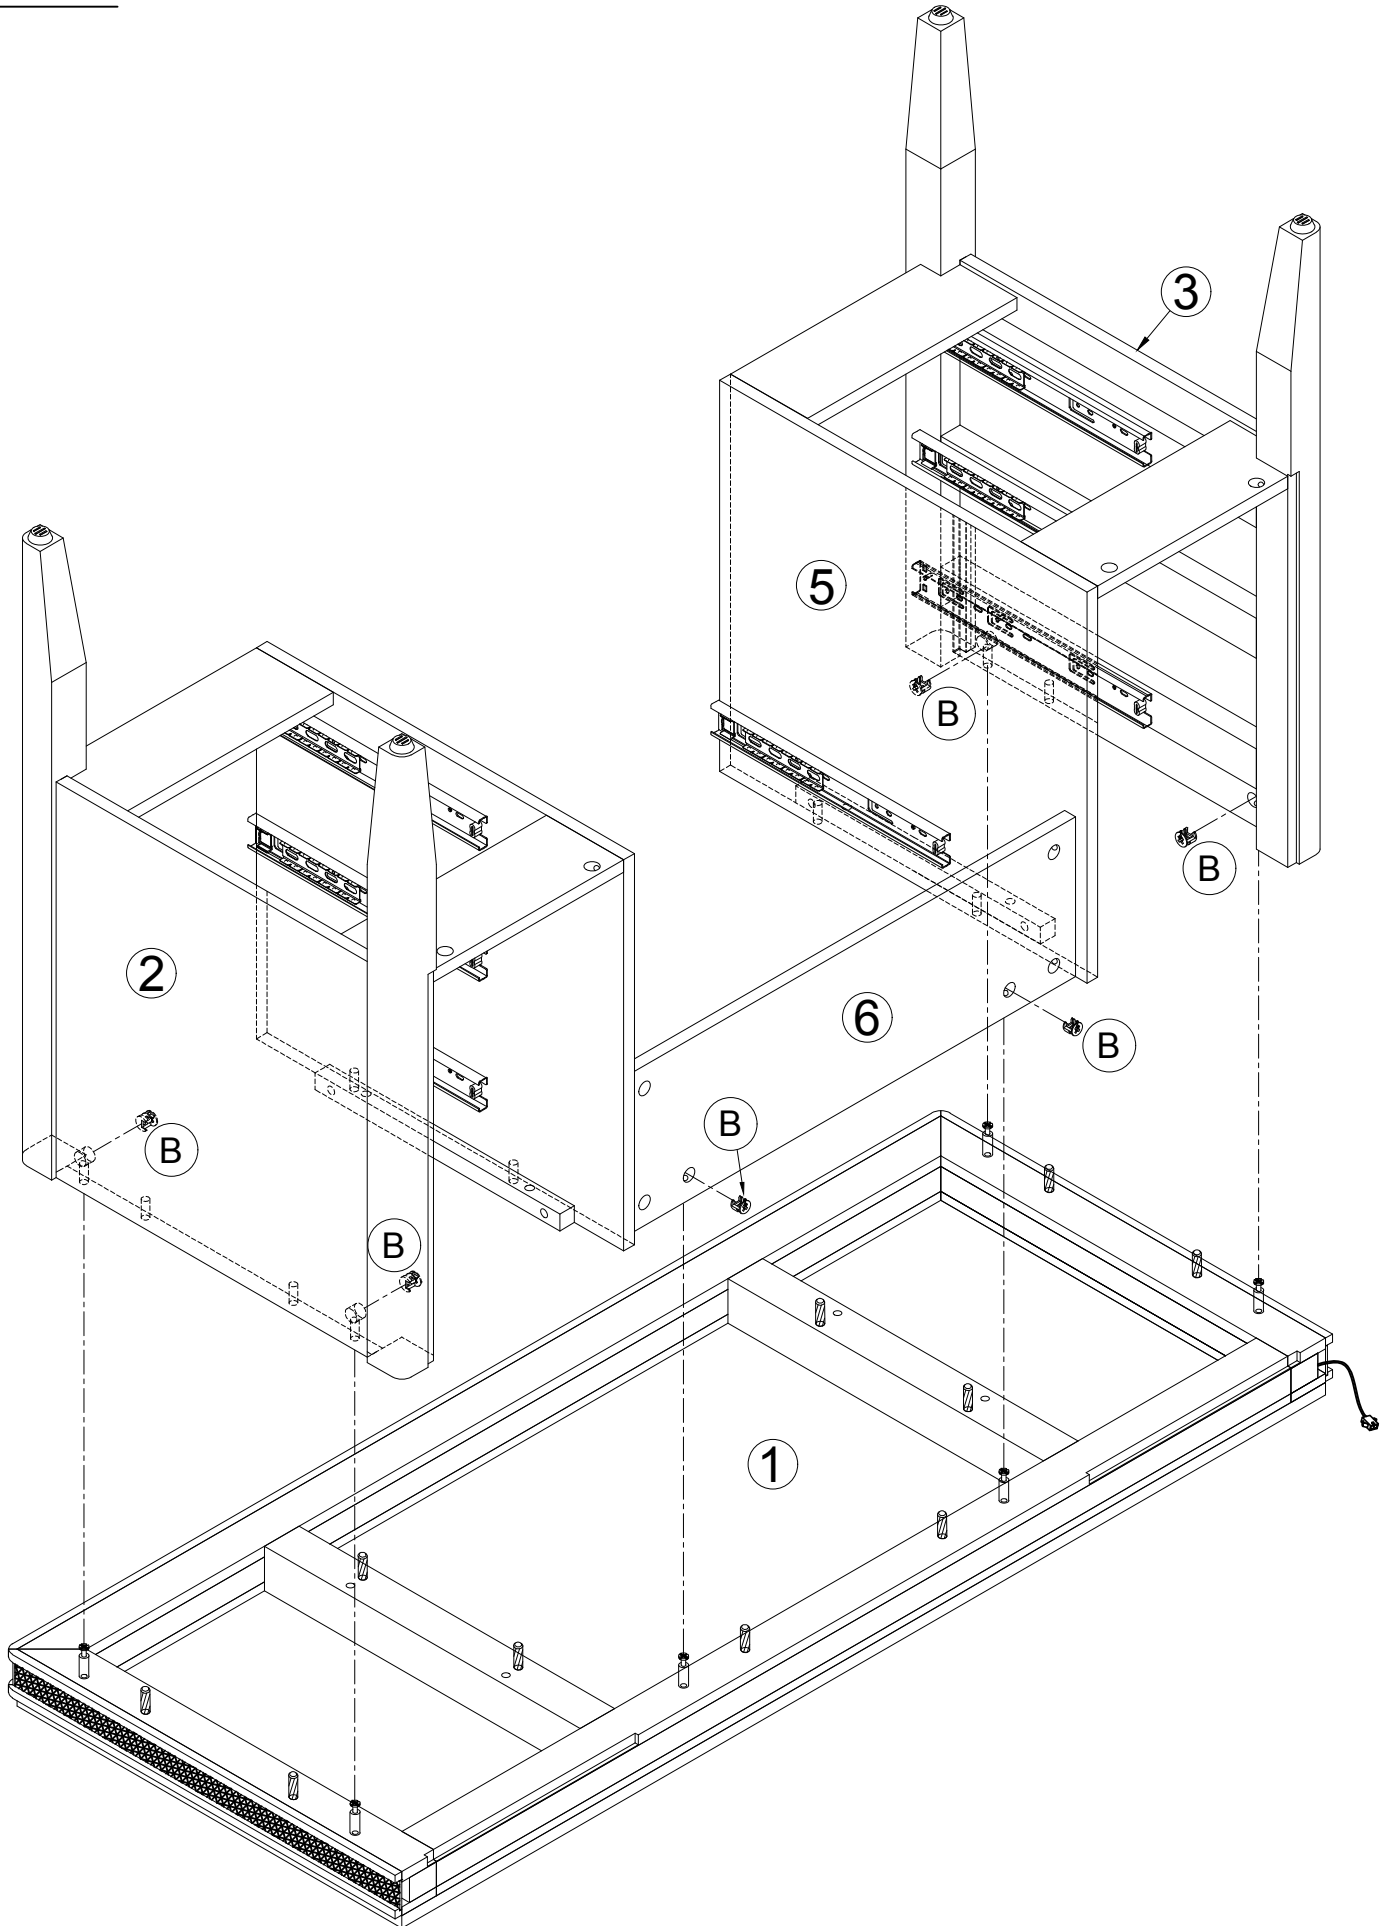STEP 15




B




6PCS


ASSEMBLY INSTRUCTIONS

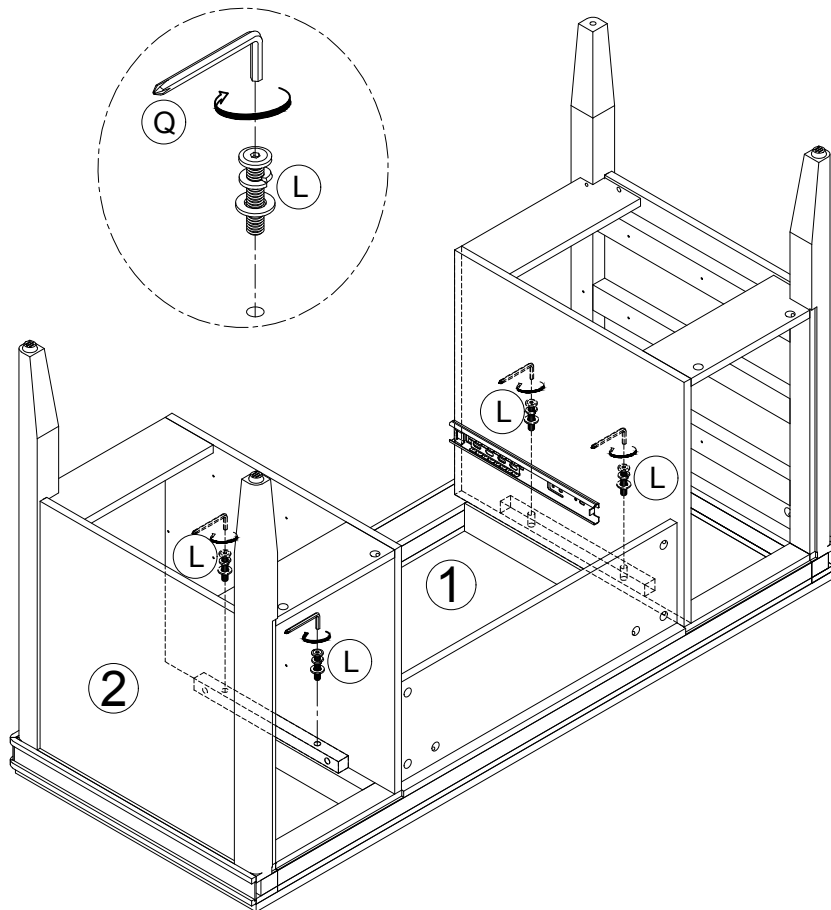STEP 16




L		4PCS
Q		1PC

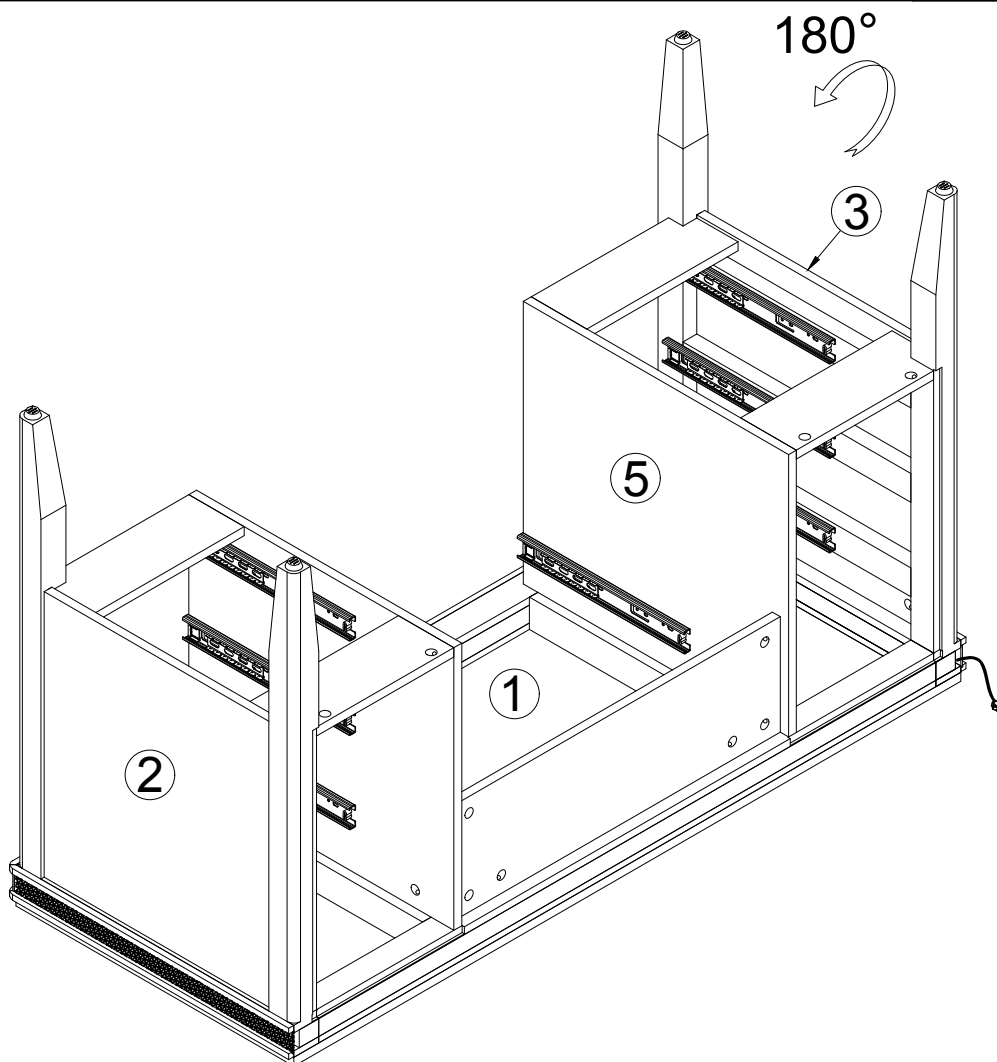STEP 17




ASSEMBLY INSTRUCTIONS

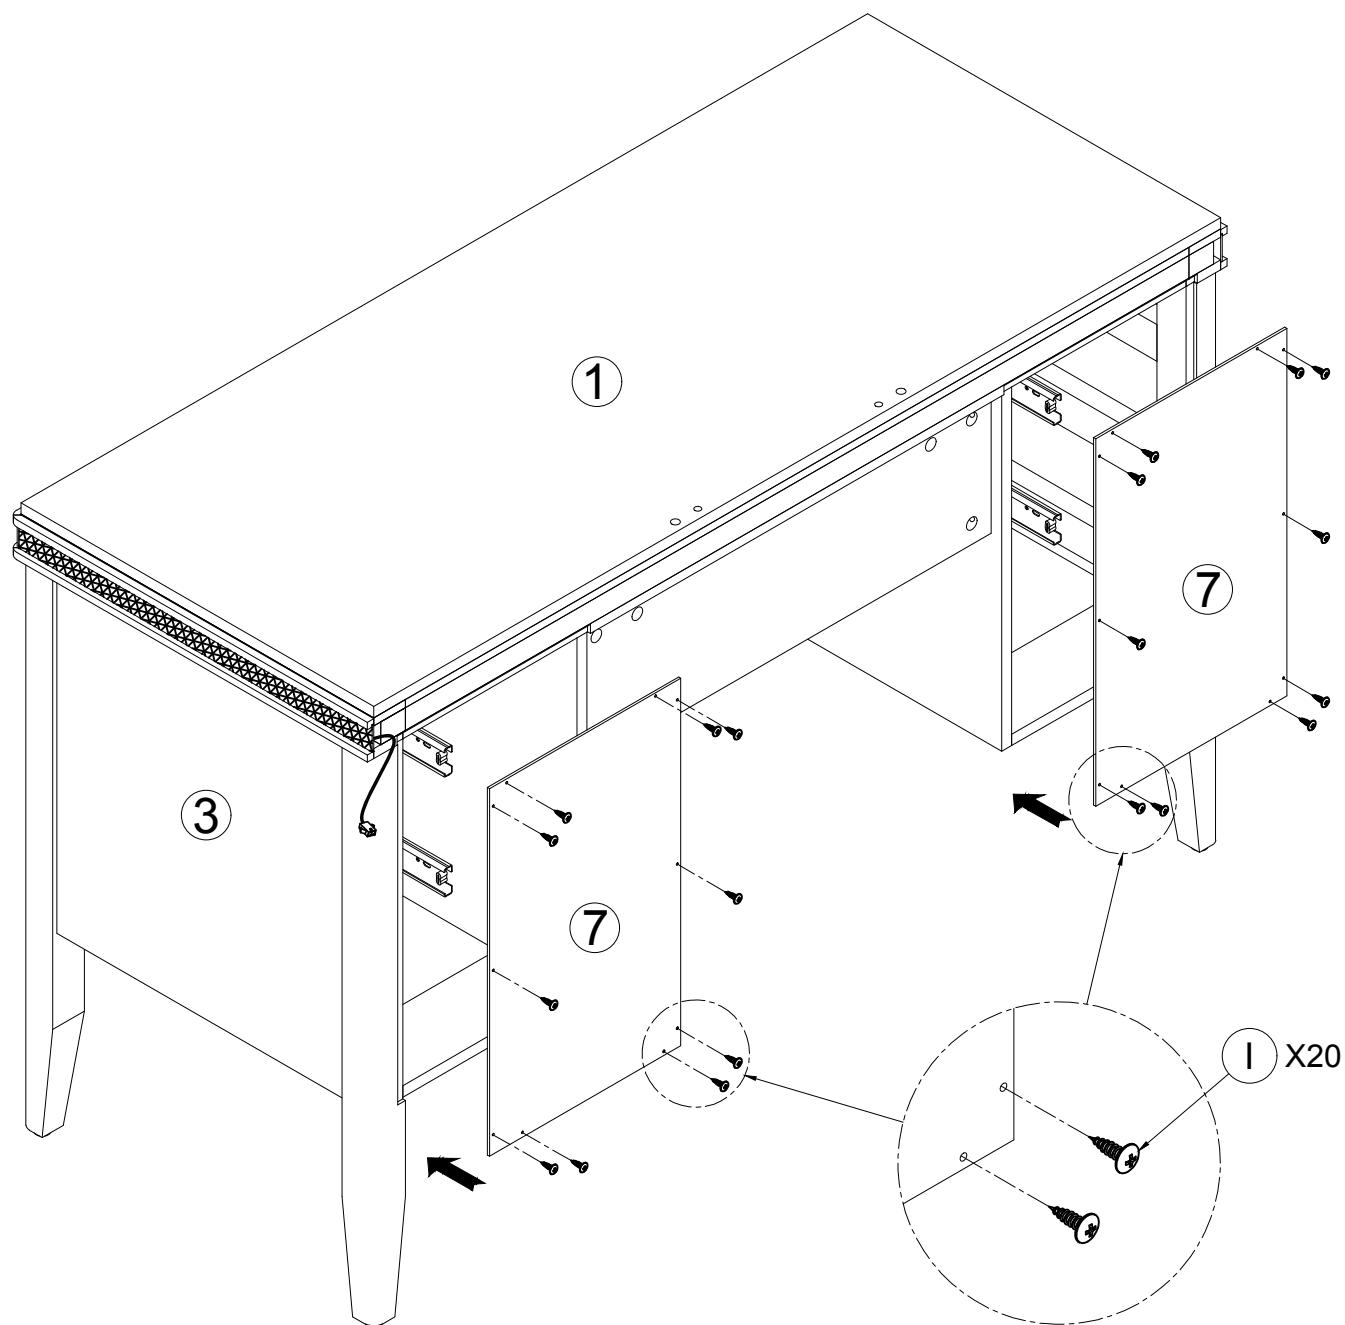
STEP 18




ASSEMBLY INSTRUCTIONS


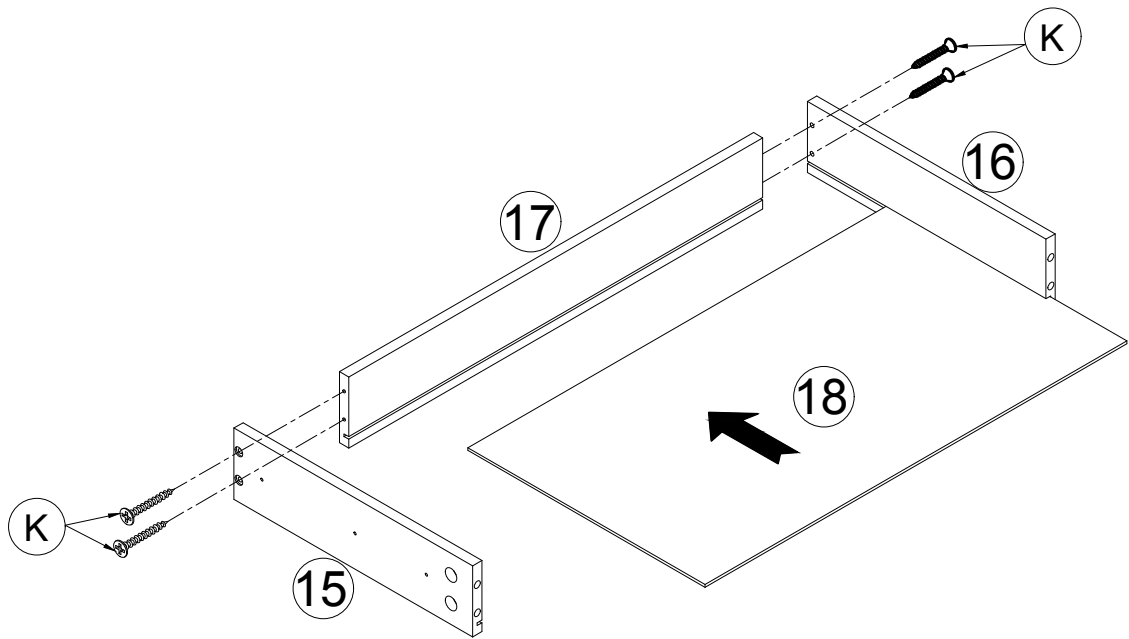

STEP 19



K		4PCS
---	---	------

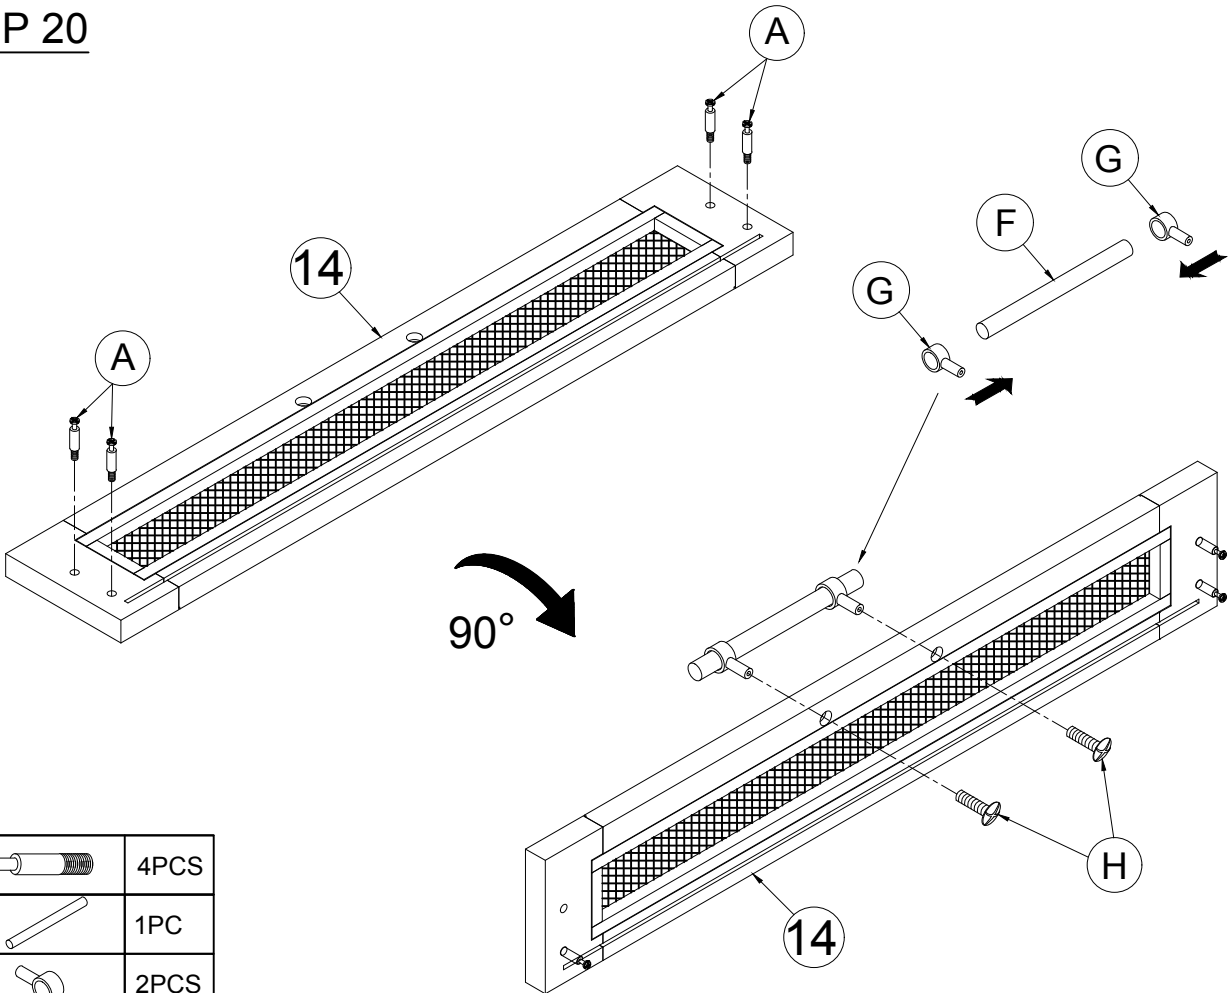
STEP 20



A		4PCS
F		1PC
G		2PCS
H		2PCS


ASSEMBLY INSTRUCTIONS

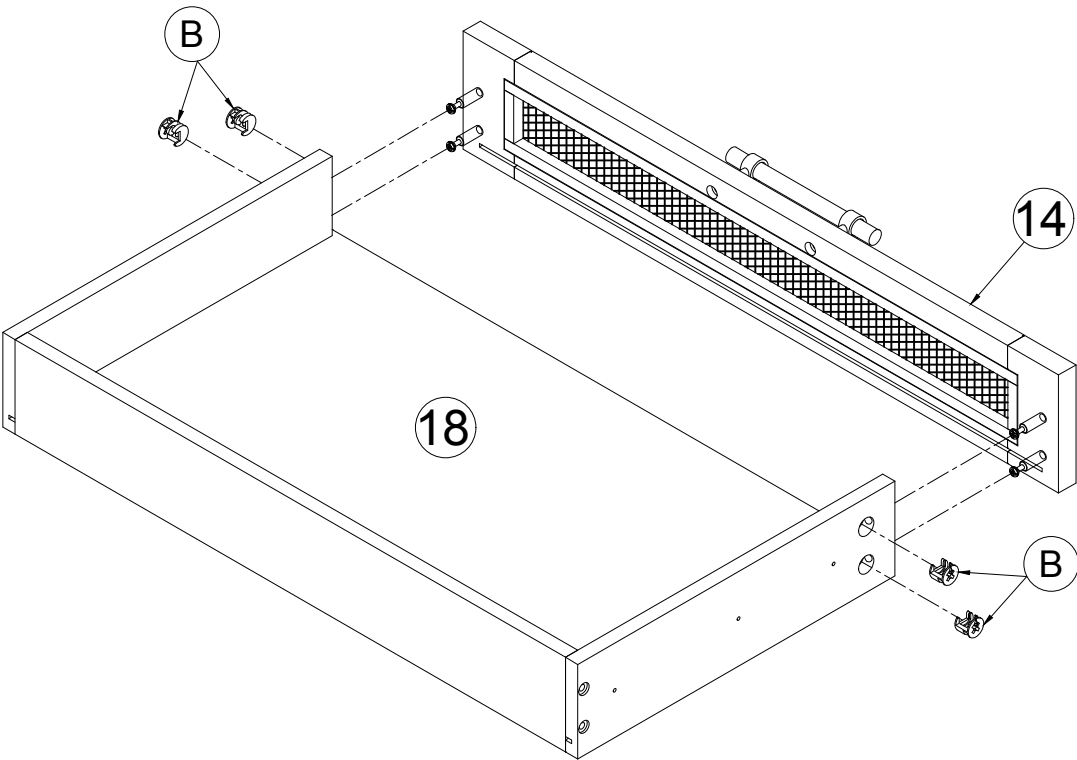STEP 21



B		4PCS
---	---	------

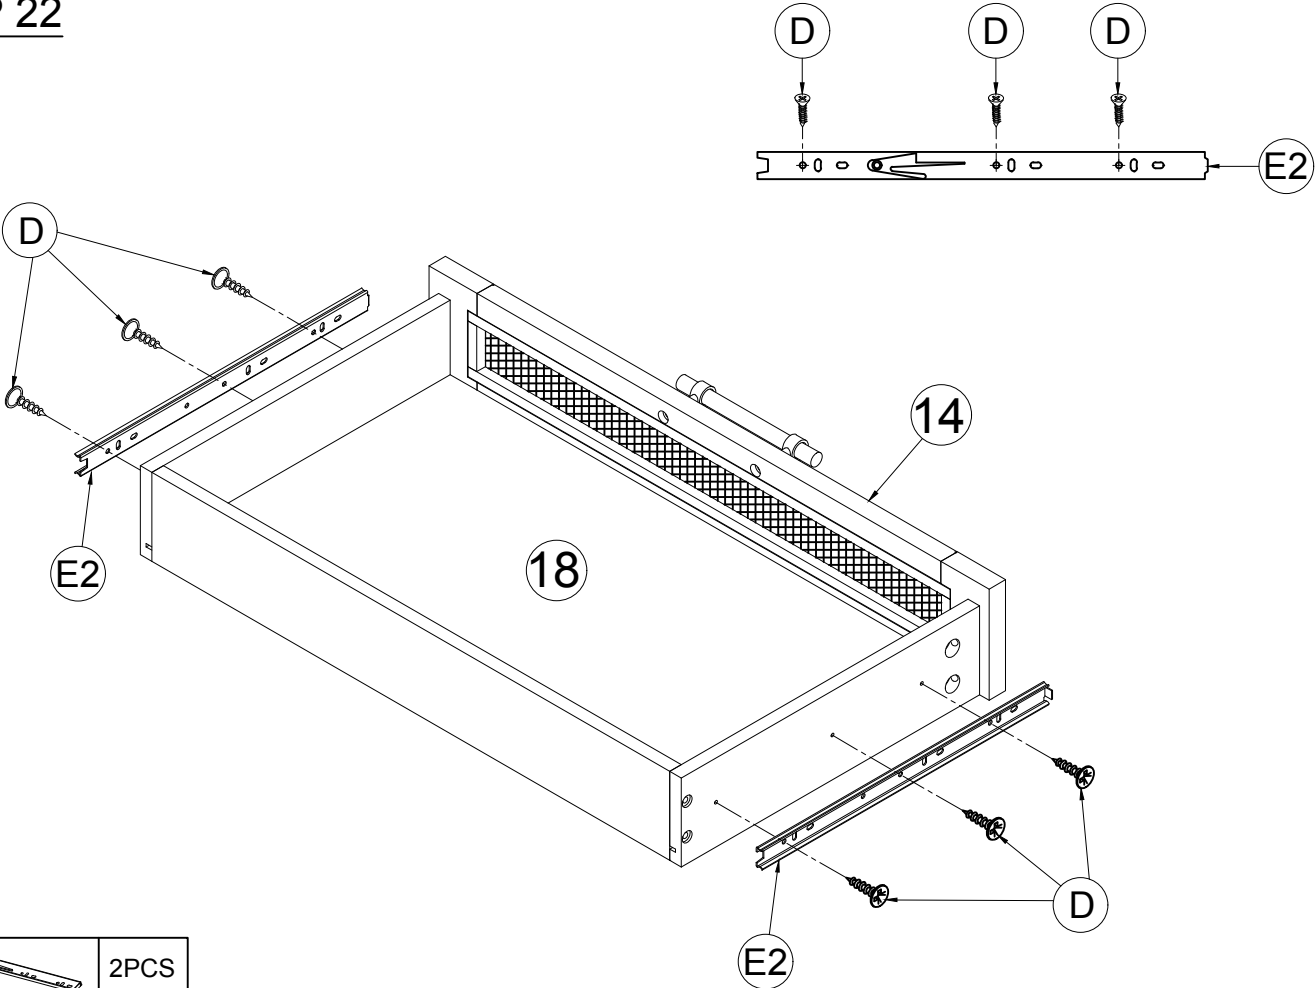
STEP 22




E2		2PCS
D		6PCS


ASSEMBLY INSTRUCTIONS

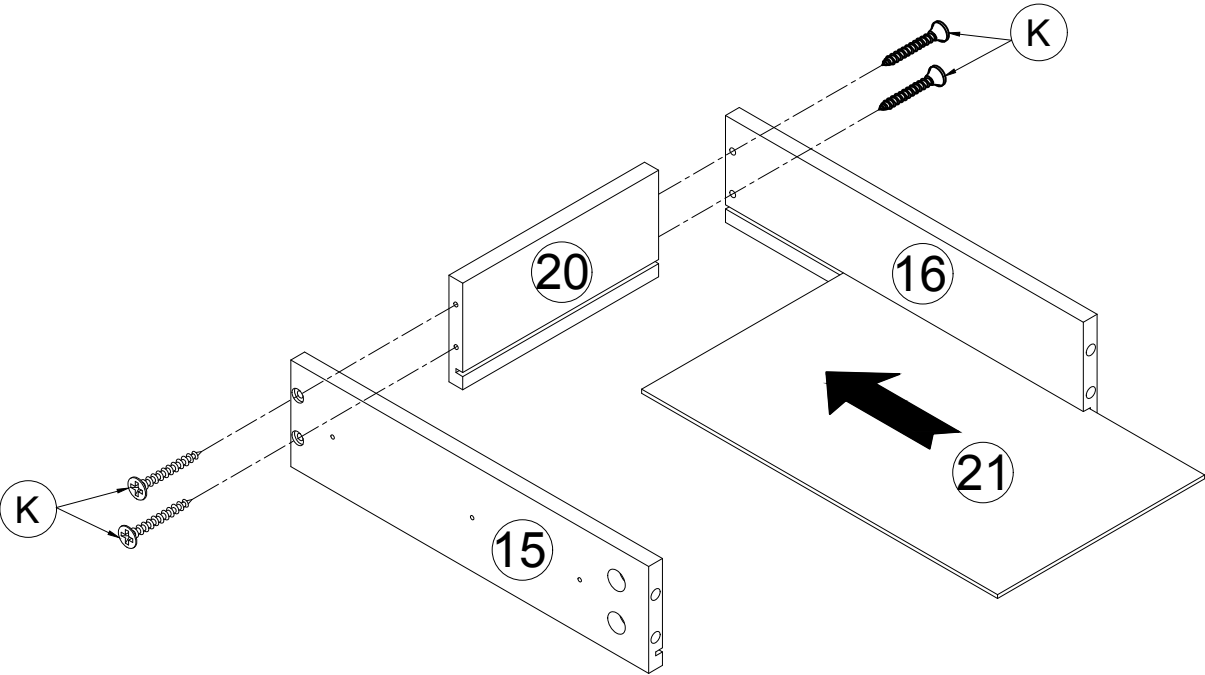
STEP 23 x6 Set



K		24PCS
---	---	-------

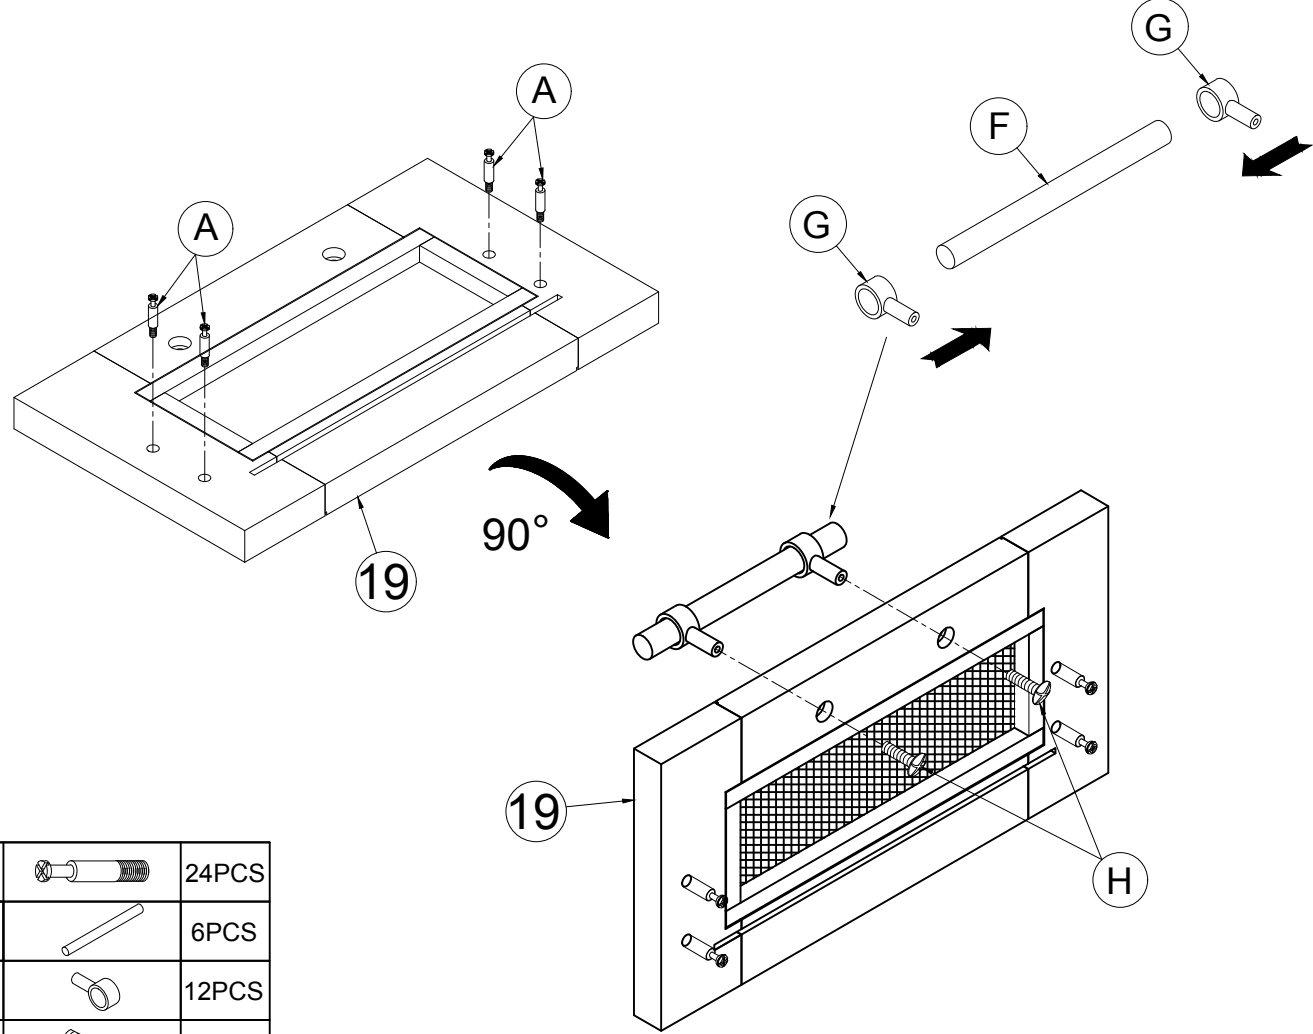
STEP 24 x6 Set



A		24PCS
F		6PCS
G		12PCS
H		12PCS


ASSEMBLY INSTRUCTIONS

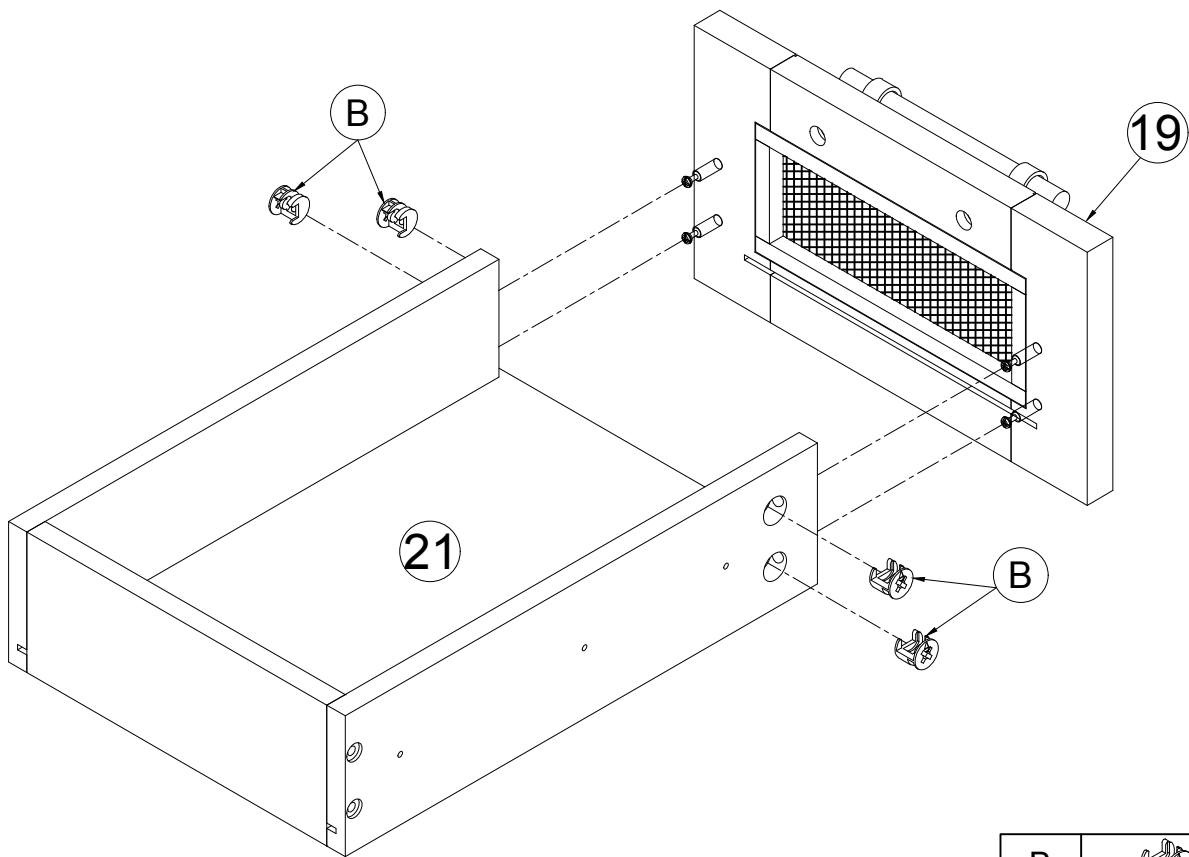STEP 25 x6 Set



B		24PCS
---	---	-------


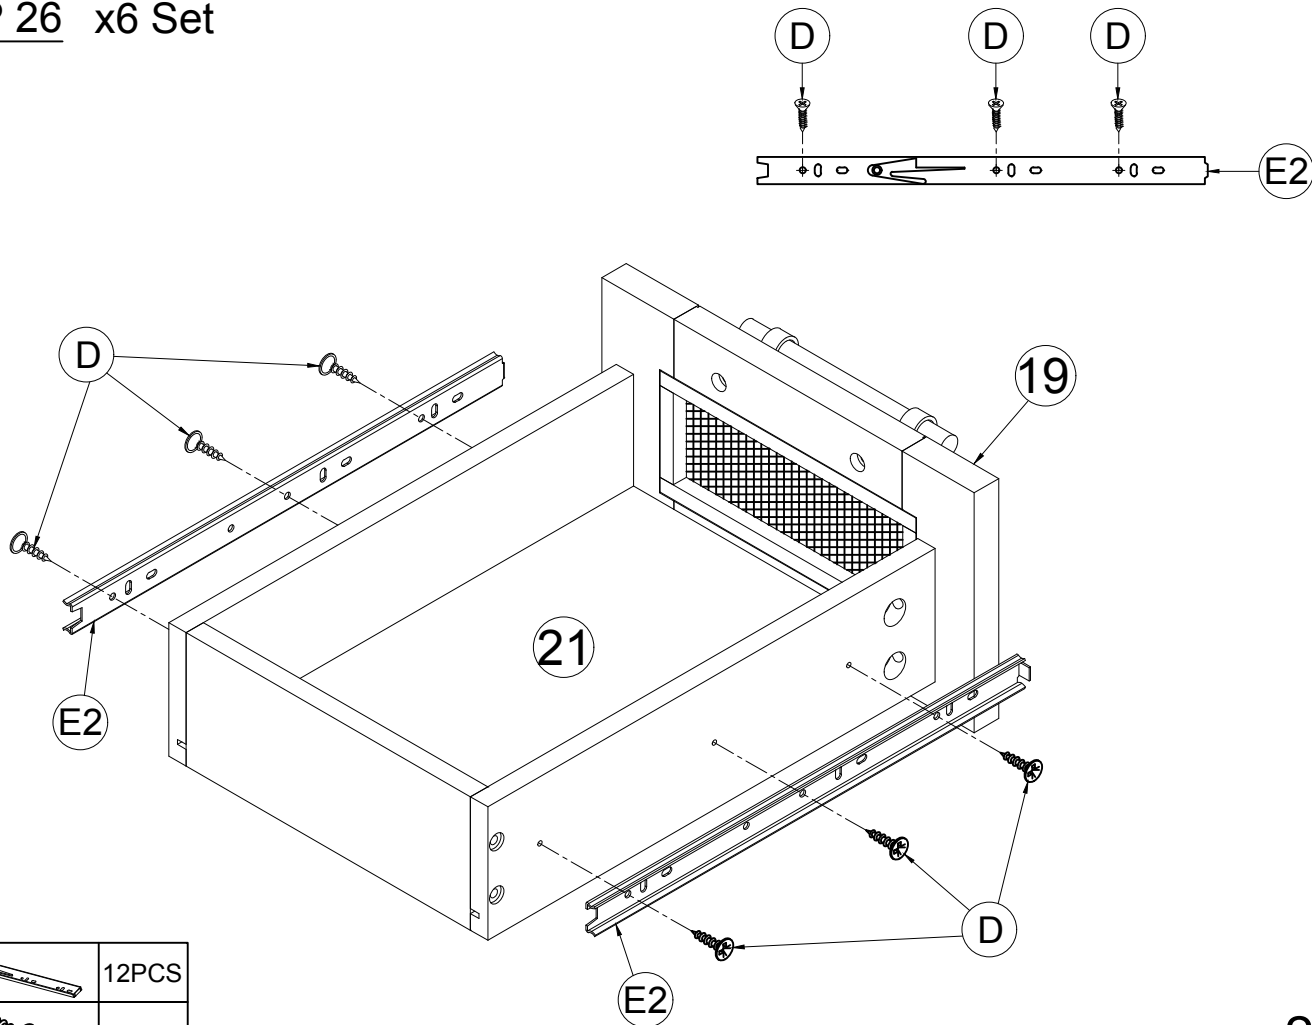
STEP 26 x6 Set



E2		12PCS
D		36PCS

ASSEMBLY INSTRUCTIONS

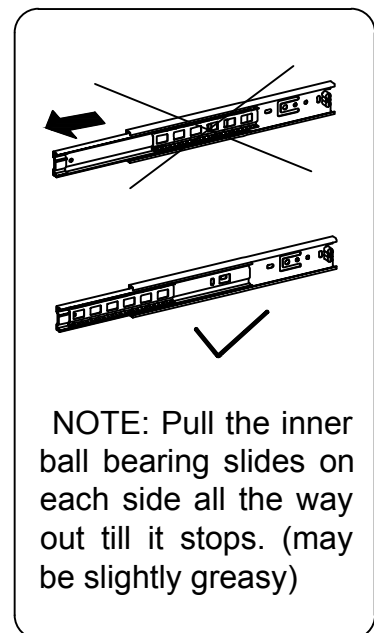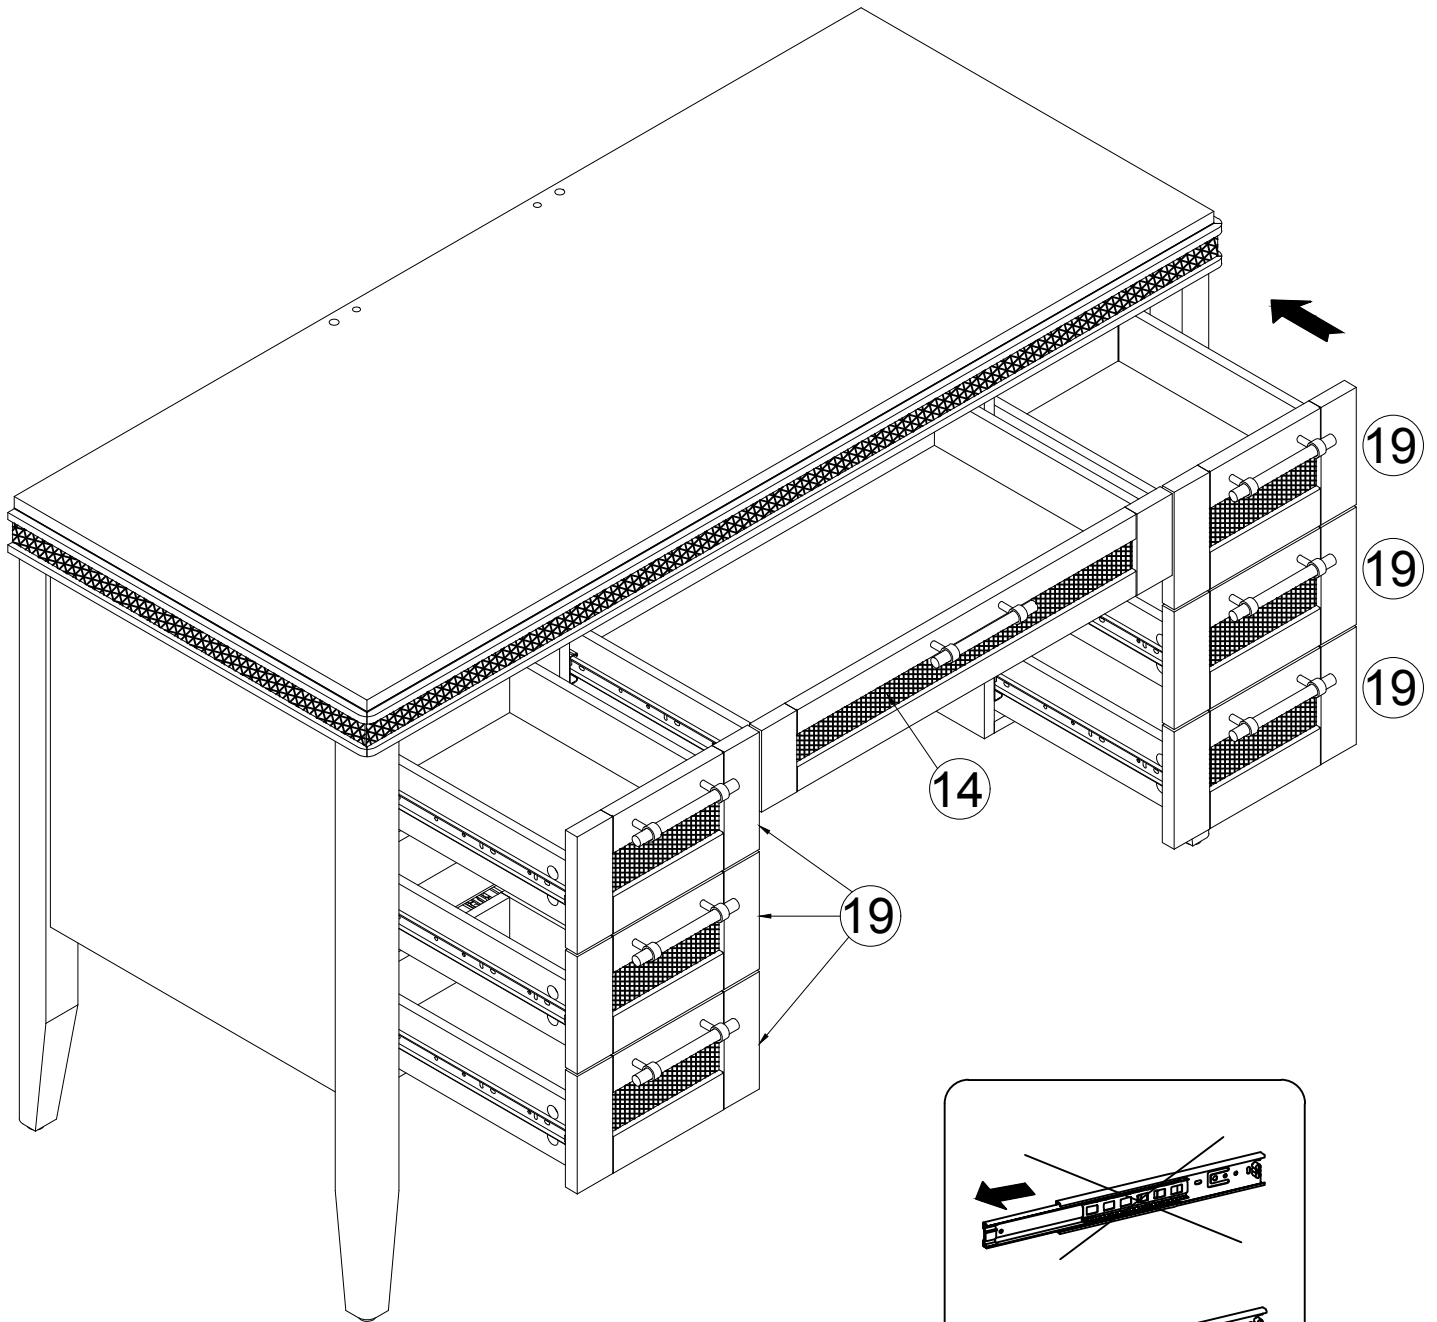
STEP 27



NOTE: Pull the inner ball bearing slides on each side all the way out till it stops. (may be slightly greasy)

ASSEMBLY INSTRUCTIONS

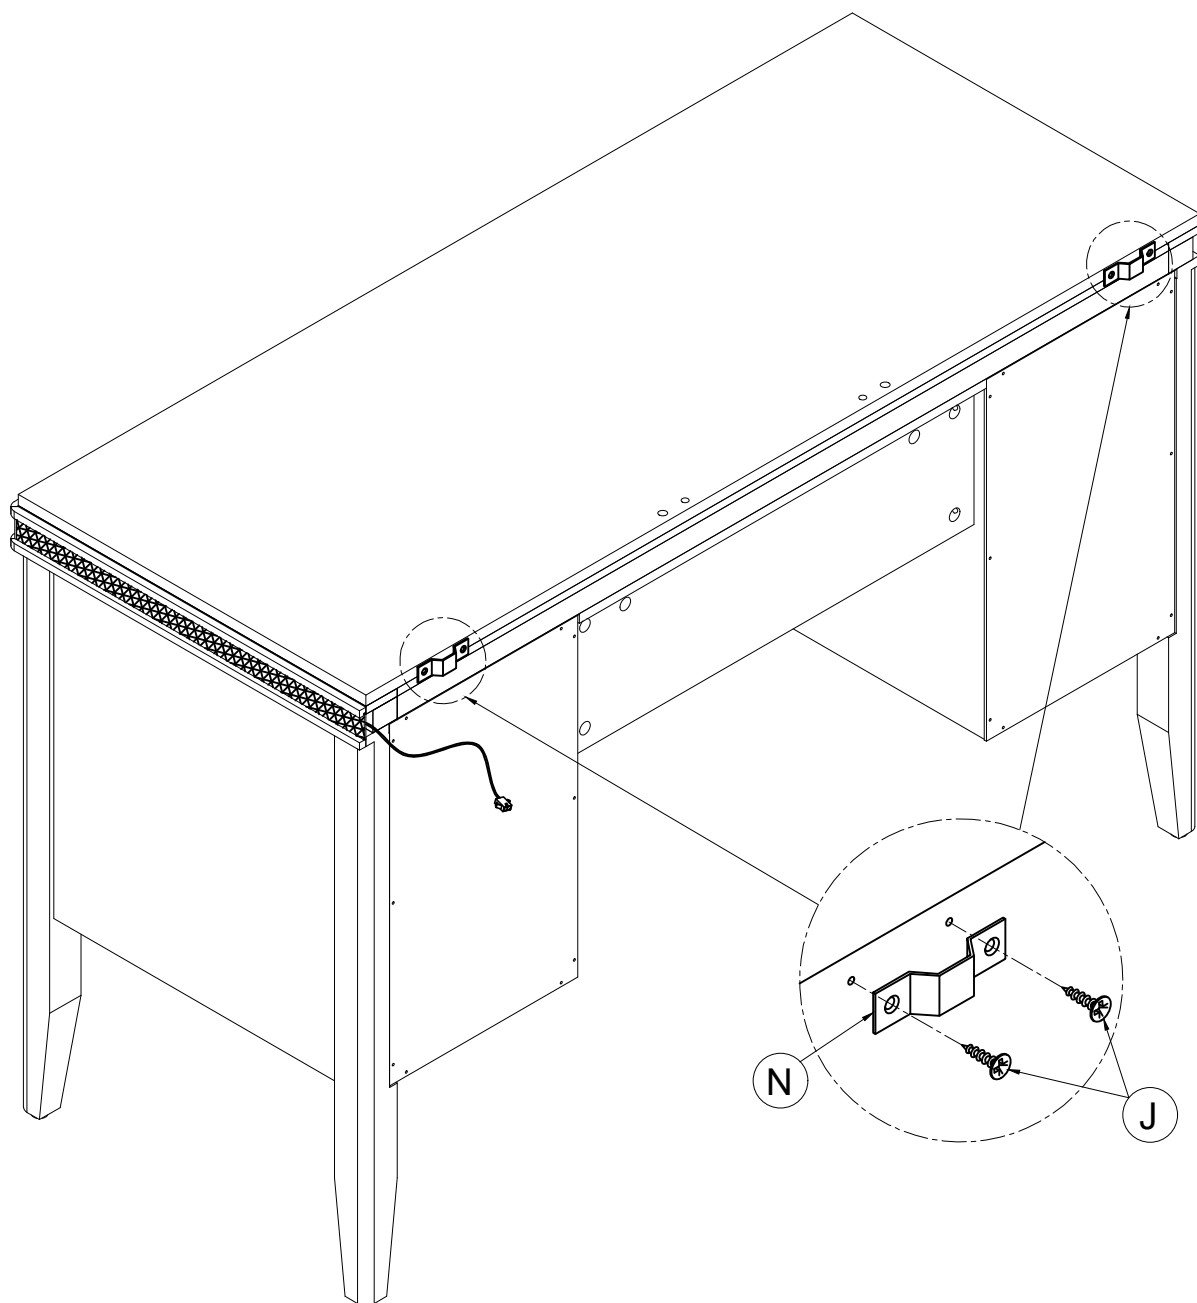
STEP 28




N		2PCS
J		4PCS

ASSEMBLY INSTRUCTIONS

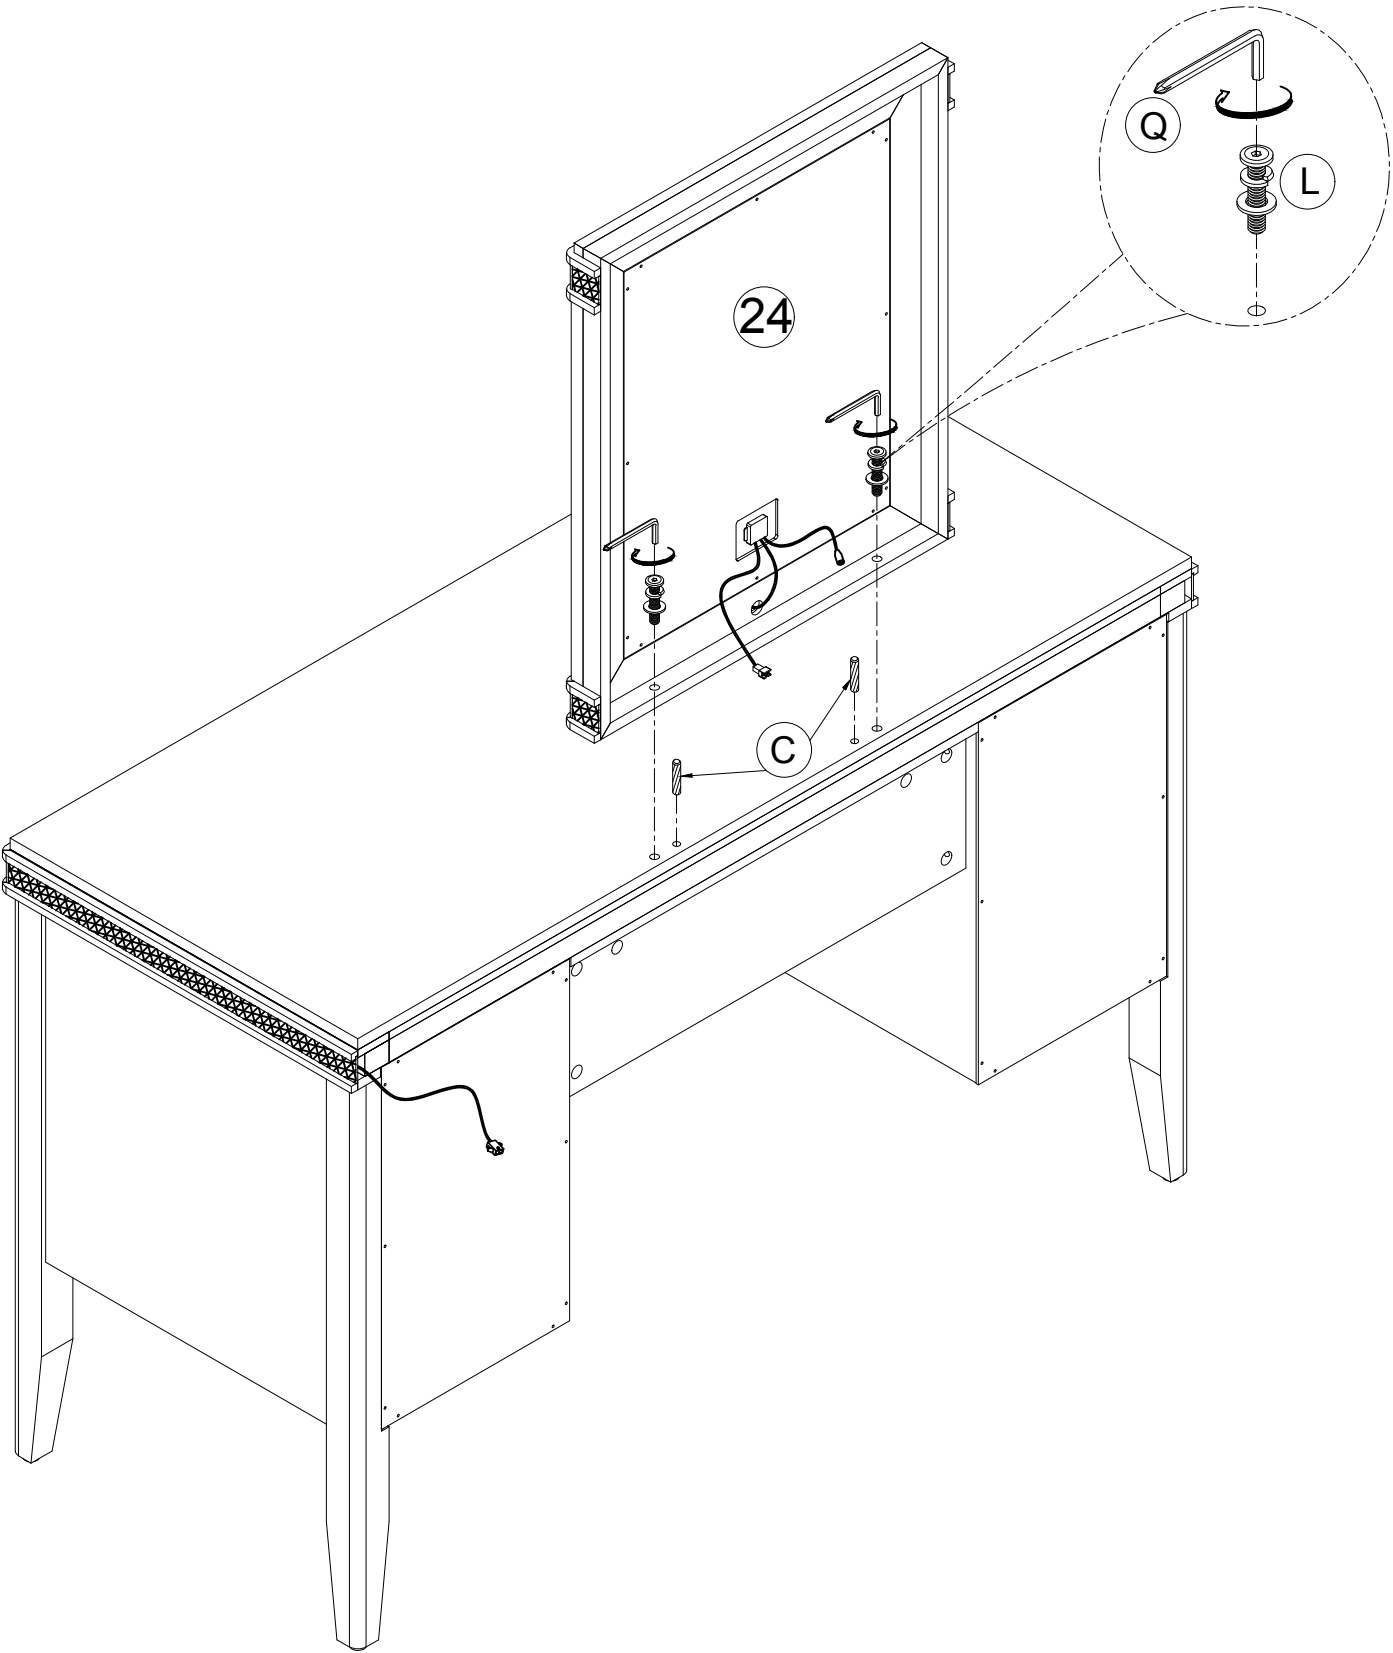
STEP 29




C		2PCS
L		2PCS
Q		1PC

ASSEMBLY INSTRUCTIONS

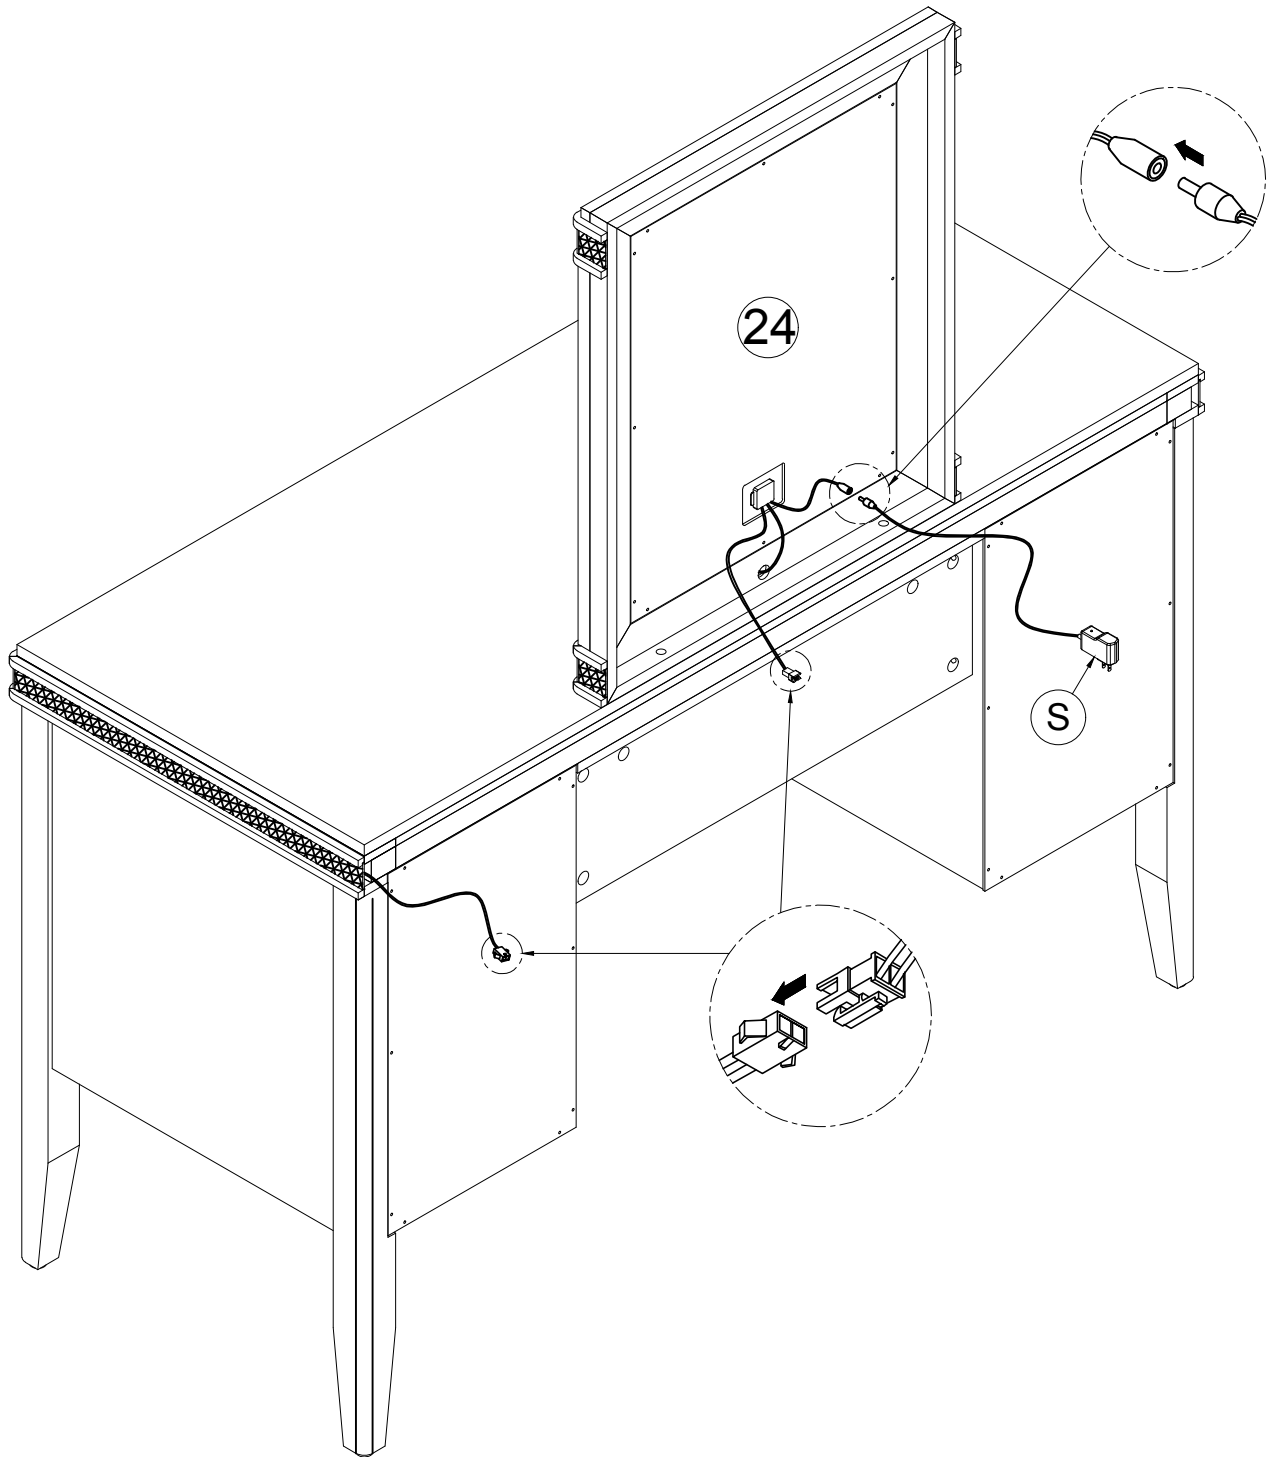STEP 30




S



1PC

ASSEMBLY INSTRUCTIONS

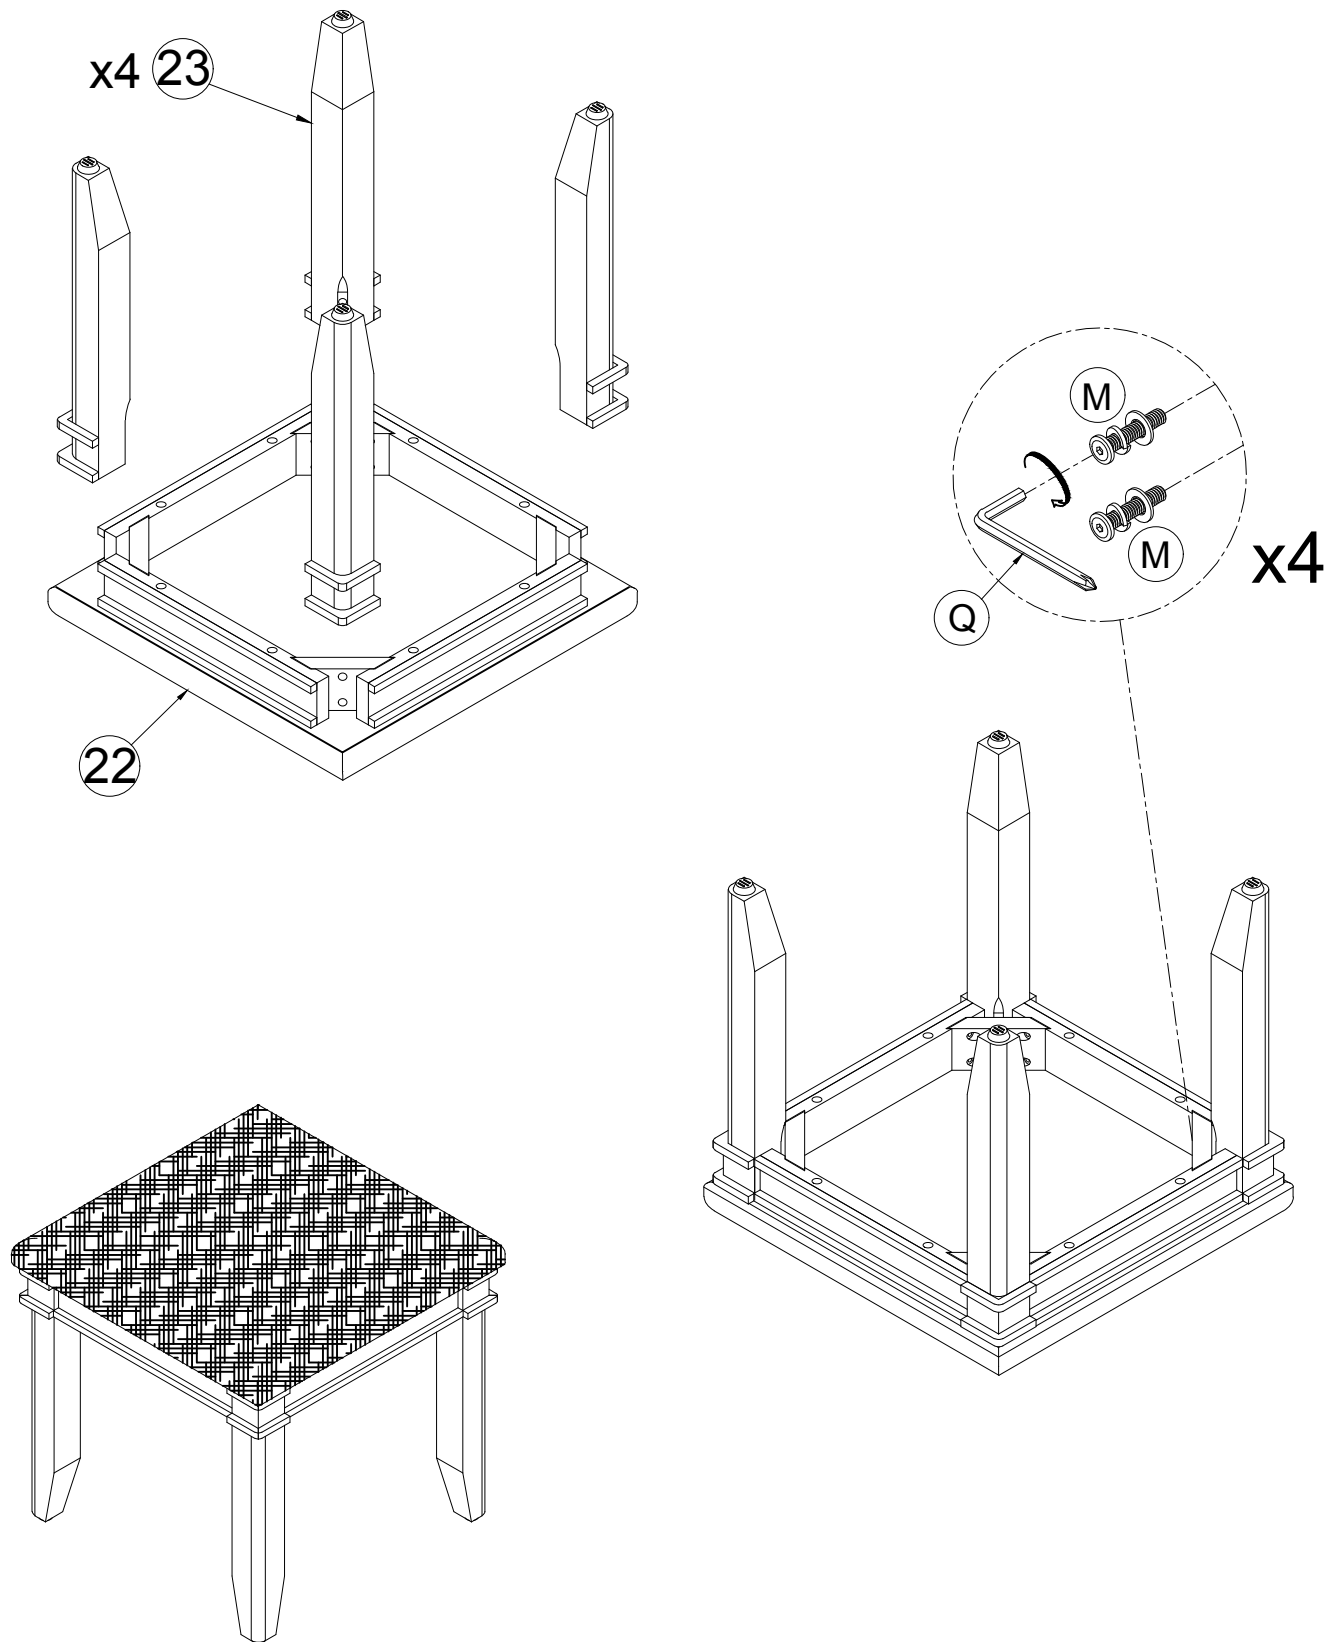
STEP 31



M		8PCS
Q		1PC

ASSEMBLY INSTRUCTIONS

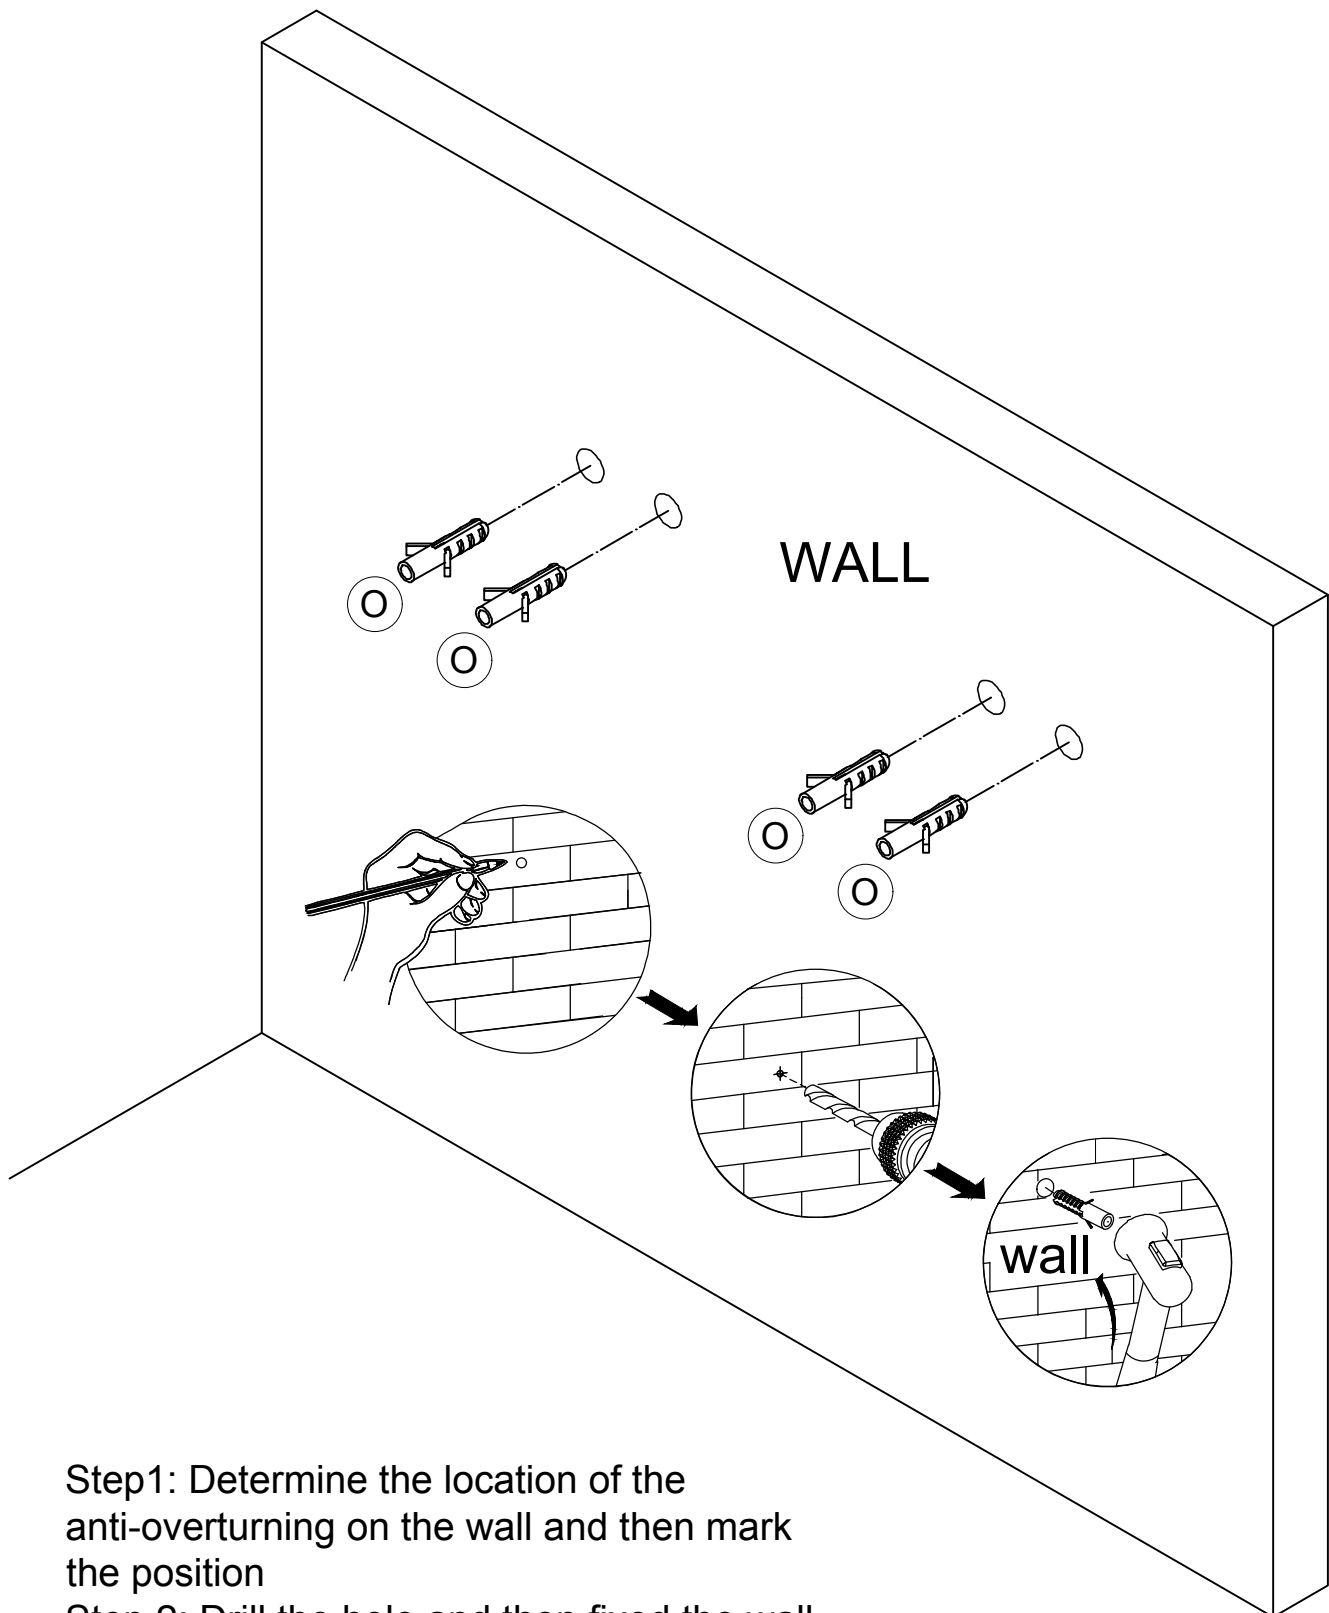STEP 32




Step1: Determine the location of the anti-overturning on the wall and then mark the position

Step 2: Drill the hole and then fixed the wall plug (O) on the wall

ASSEMBLY INSTRUCTIONS

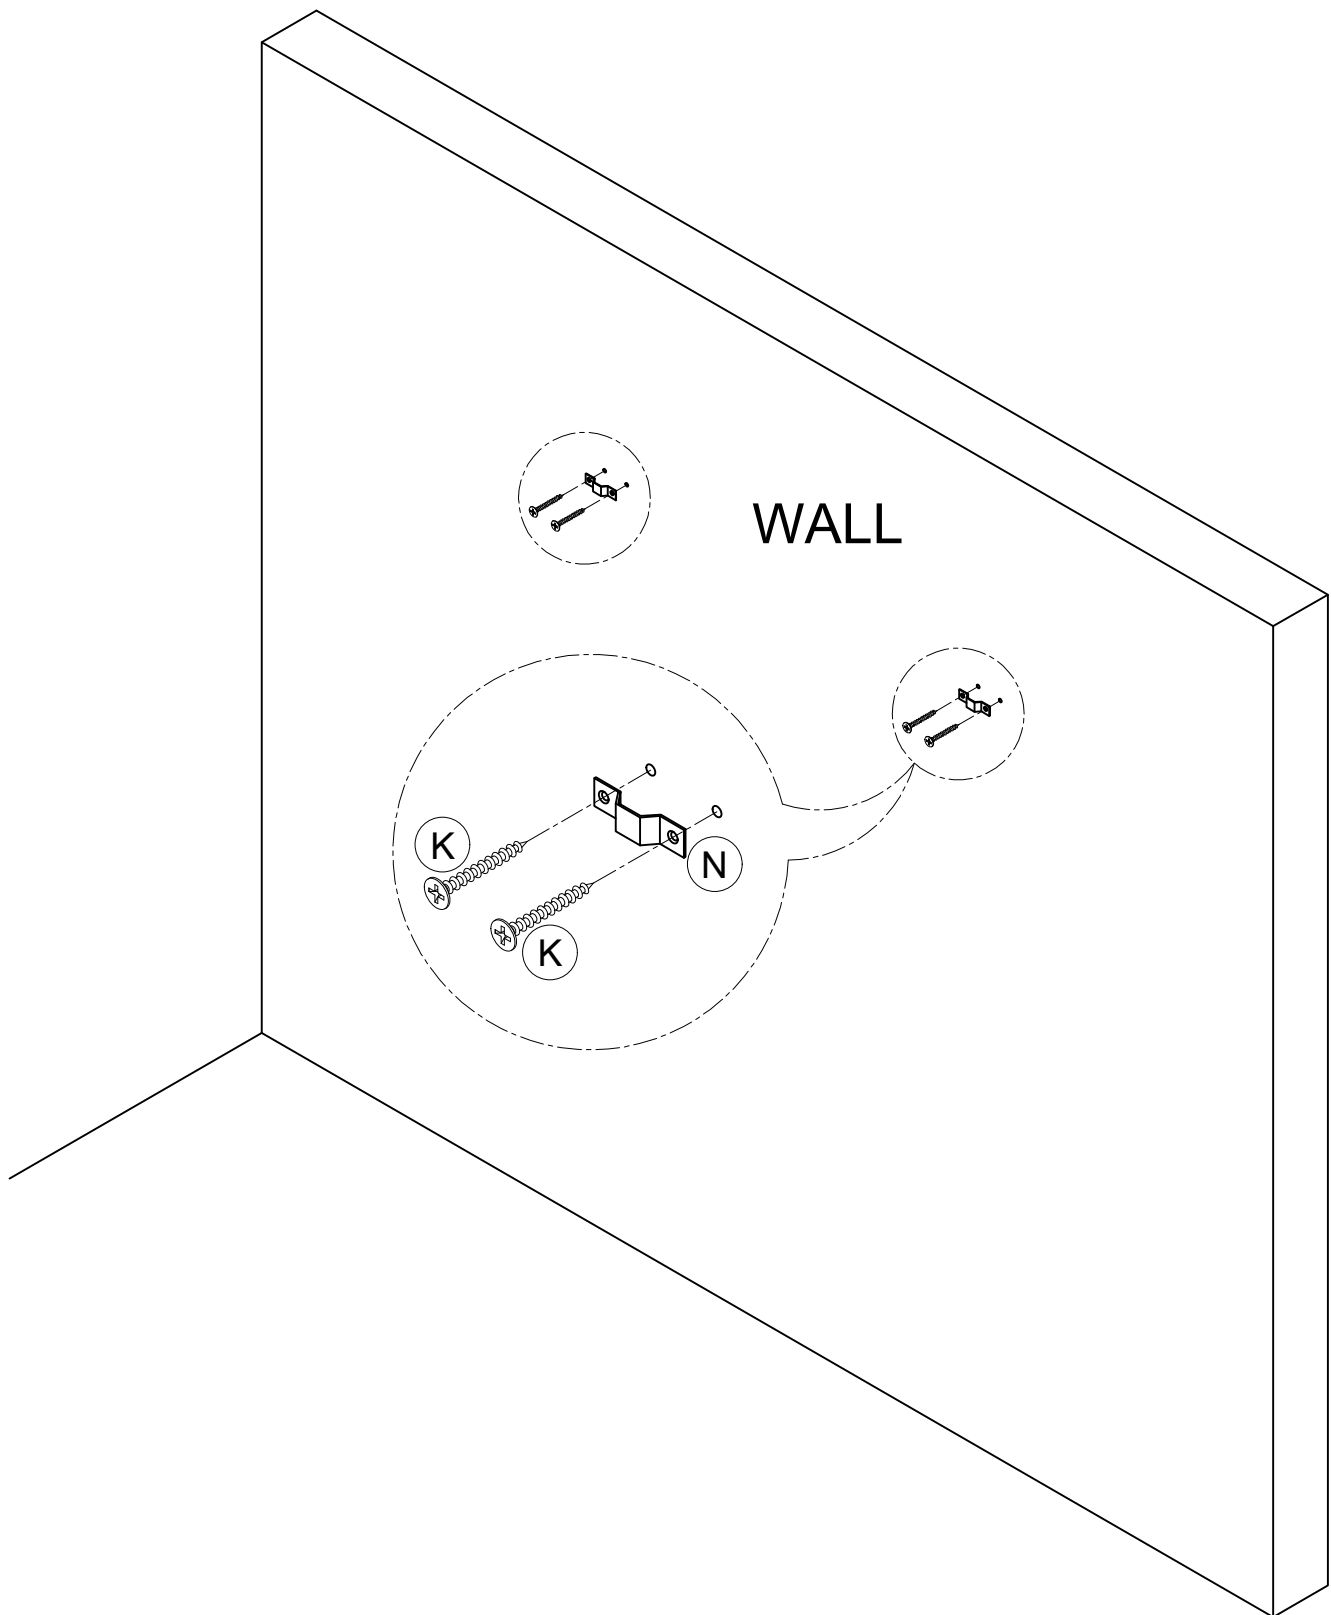STEP 33



Step 3: use screw (**K**) to fix (**N**) on the wall

N		2PCS
K		4PCS

ASSEMBLY INSTRUCTIONS

STEP 34

