


Assembly Instruction

———— CBN164 ————

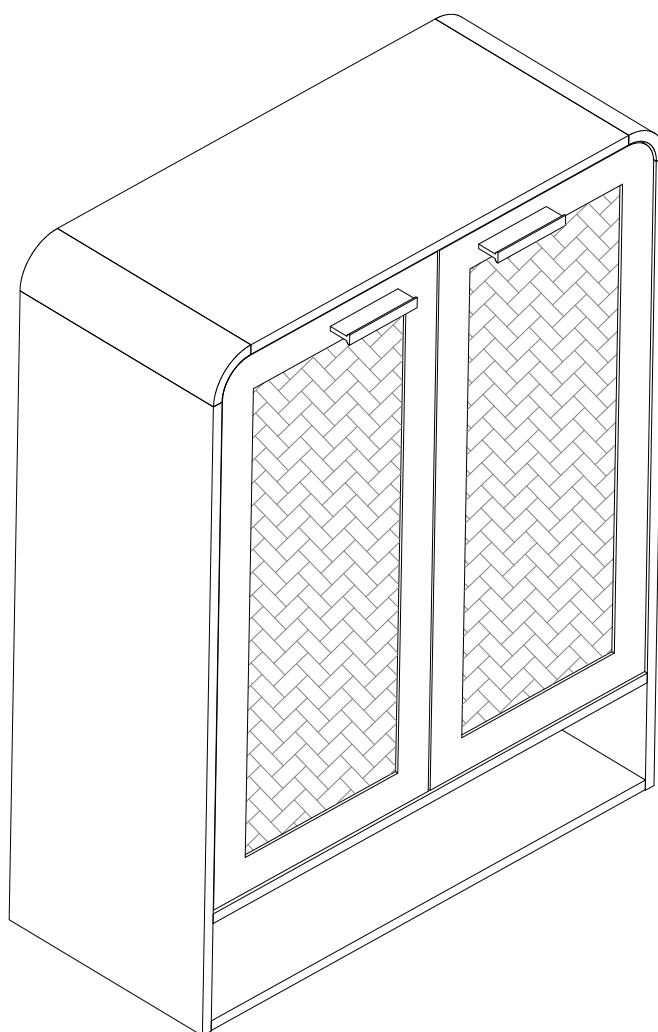

General Guidelines

- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.


Notes

- The product is intended for indoor use only. The product must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to product may occur if products are used outside of their intended purposes and/or if products have been changed/modified from their original design. The seller does not assume any responsibility or liability with respect to any injury/damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface and do not place the unwrapped product directly on the ground to avoid product damage.
- Please do not stand or sit on the wooden boards.
- Please wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Please match the corresponding part and fitting based on the part number in the manual.
- If the part does not match with the fitting, please check the piece as specified in this manual.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.
- Periodically inspect screw tightness while the product is in use. If necessary, retighten to ensure structural integrity.
- If you accidentally spill water or another liquid on the surface, immediately wipe clean with a dry towel.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.
- Please place this item on level, solid ground during use.





Warnings

- During assembly, keep all small parts out of the reach of children. It may be fatal if swallowed or inhaled.
- Children should not climb or play on the product in order to avoid tipping over the furniture and causing serious injury.
- To avoid the potential dangers of suffocation, please keep all parts and packaging (film, plastic bags, foam, etc.) away from babies and children.
- Keep sharp objects and corrosive items away from the product to avoid any damage or injury.
- Do not shake or move violently during use to avoid tipping over the product.

Parts List (EN)





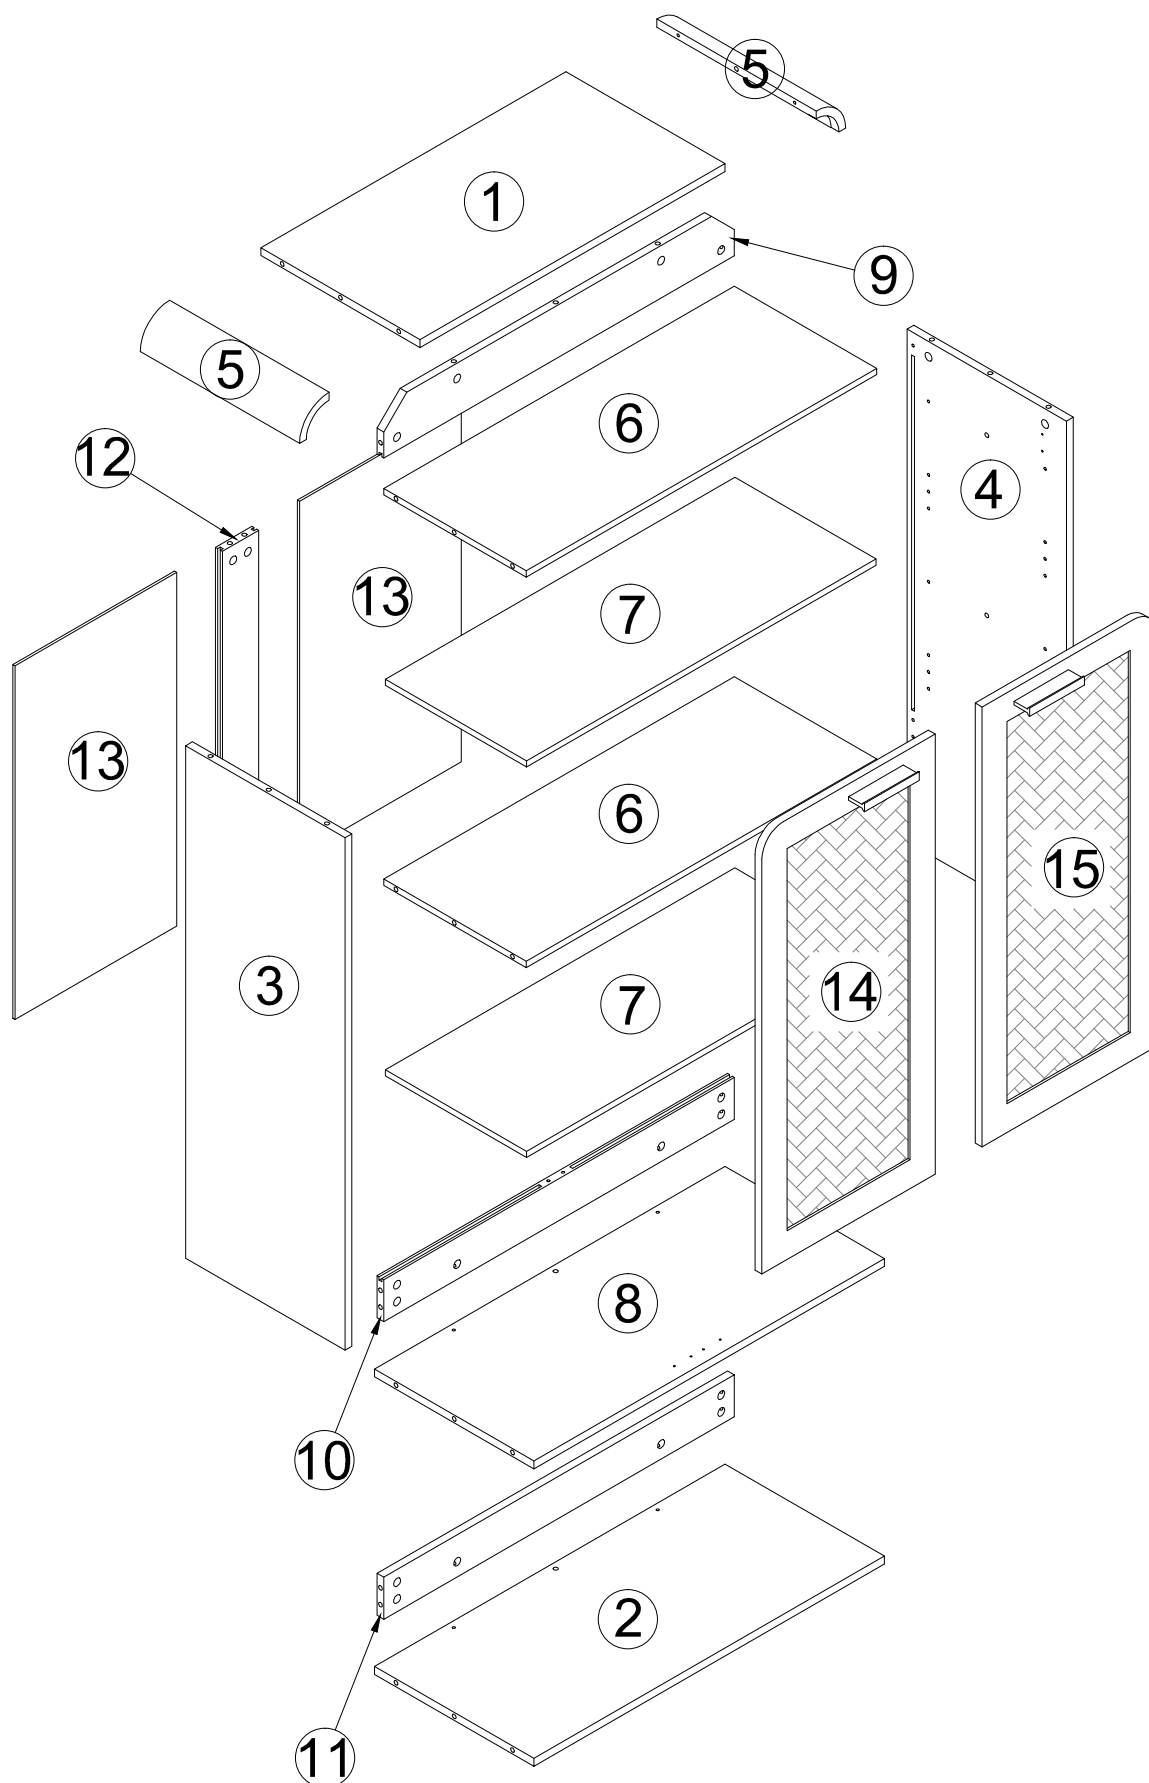











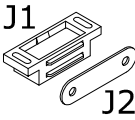




Parts List (EN)

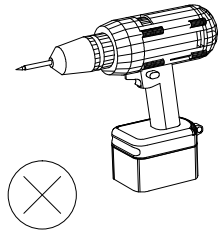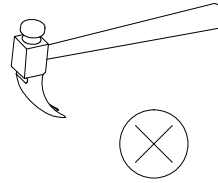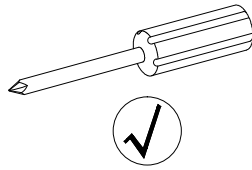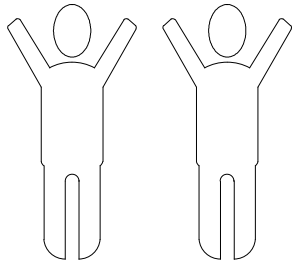


1 1PCS	2 1PCS	3 1PCS	4 1PCS
5 2PCS	6 2PCS	7 2PCS	8 1PCS
9 1PCS	10 1PCS	11 1PCS	12 1PCS
13 2PCS	14 1PCS	15 1PCS	

Parts List (EN)

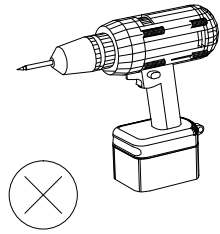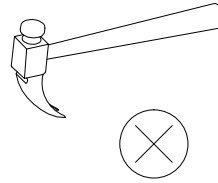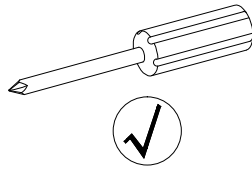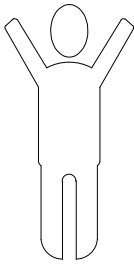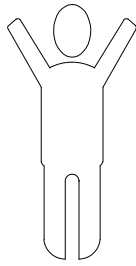


No. A Quantity:44+3 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:44+3 Pcs Cam φ15 	No. C Quantity:36+3 Pcs Sticker Ø20 	No. D Quantity:15+1 Pcs Dowel 8*30mm 
No. E Quantity:4 Pcs Hinge 	No. F Quantity:40+3 Pcs Screw M3.5*14mm 	No. G Quantity:2 Pcs Handle 	No. H Quantity:4+1 Pcs Screw M4*18mm 
No. I Quantity:4+1 Pcs Foot Pad Ø15 	No. J Quantity:4 Sets Magnetic Door Catcher 	No. K Quantity:8 Pcs Shelf Support M5*15mm 	No. L Quantity:1 Pcs Screwdriver 
No. M Quantity:8 Sets Plastic Wedge 	No. N Quantity:1 Sets Anti-falling Parts 		

Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

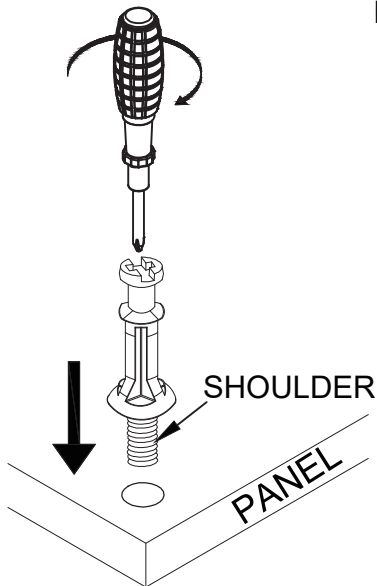

Place Cam-bolt on pre-drilled hole and screw in vertically

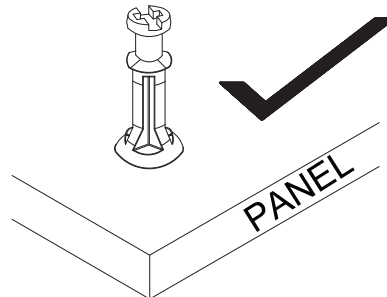


Shoulder is flushed (on the same level) with the panel.

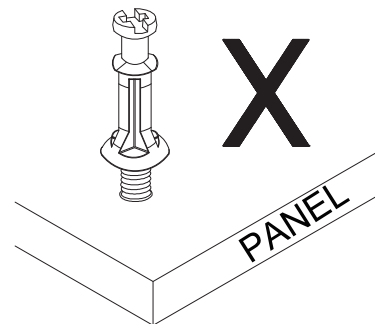

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.


INSERTING CAM-LOCK

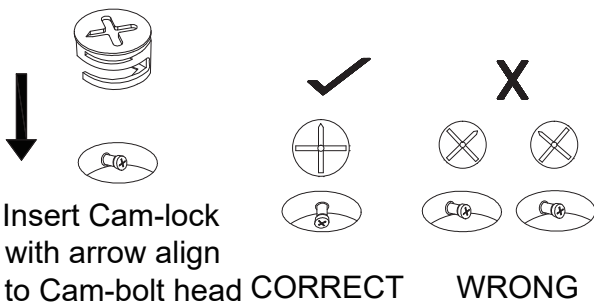

Insert Cam-lock with arrow align to Cam-bolt head **CORRECT** **WRONG**







Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK

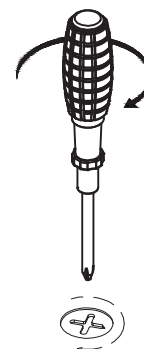






Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

STEP 1

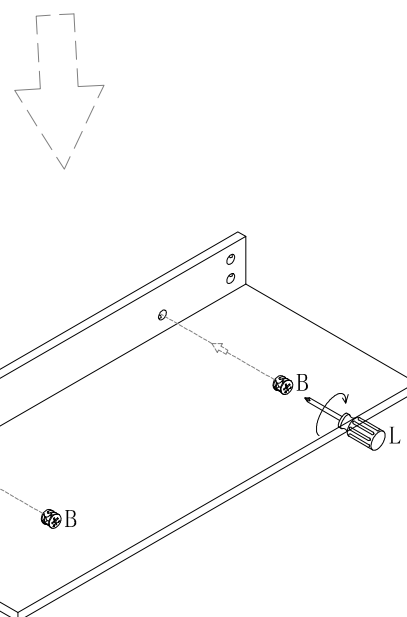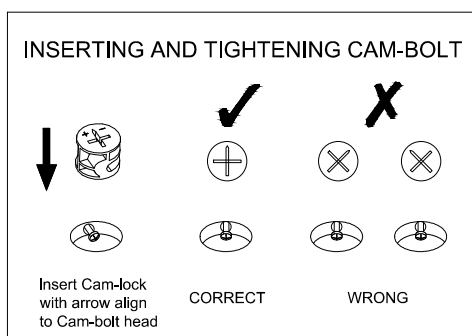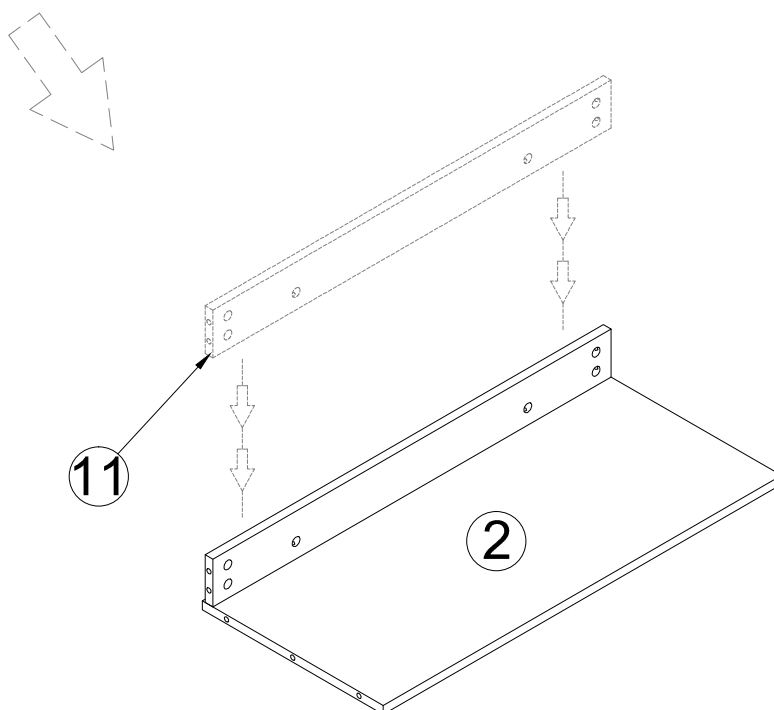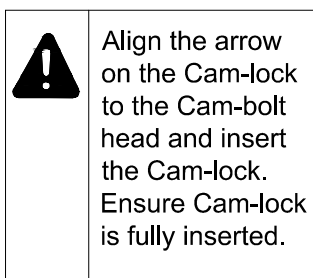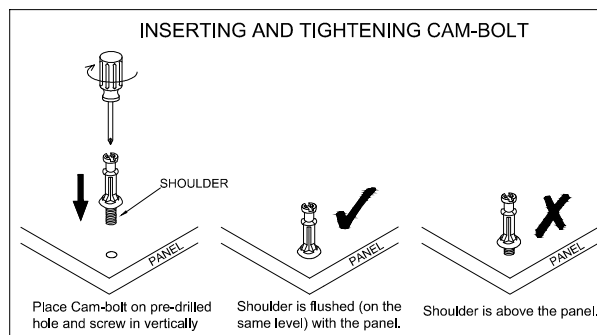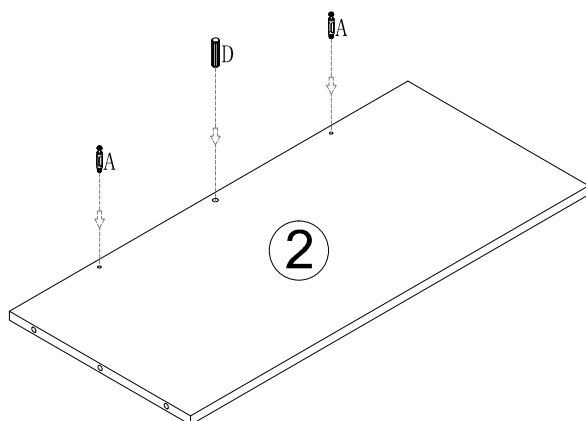


	A×2PCS
	B×2PCS
	D×1PCS







STEP 2

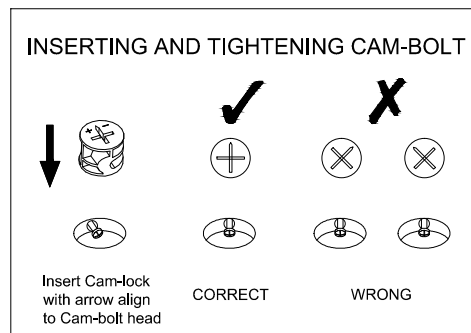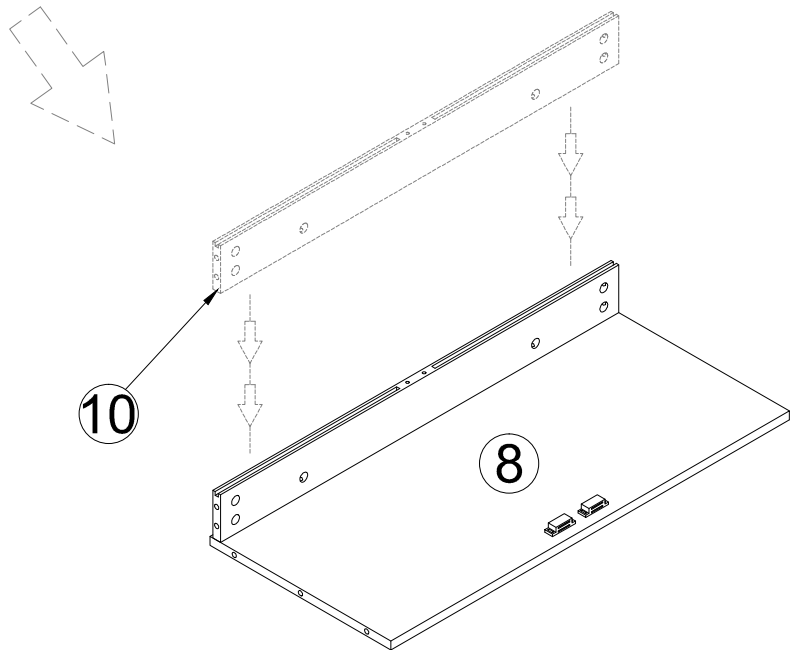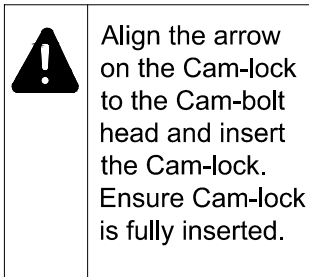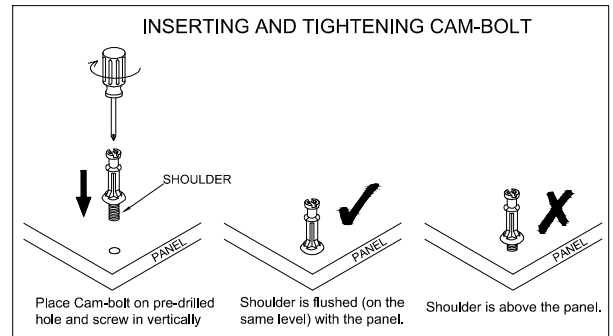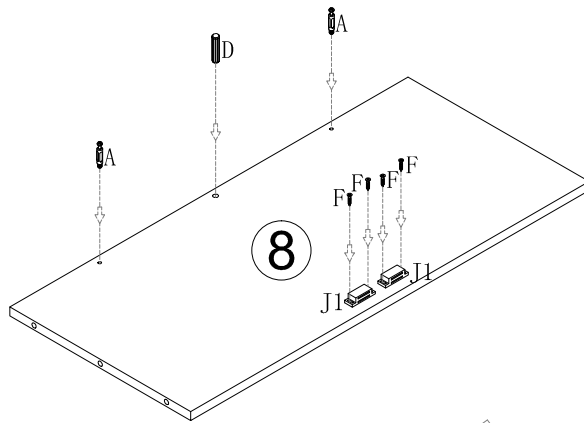

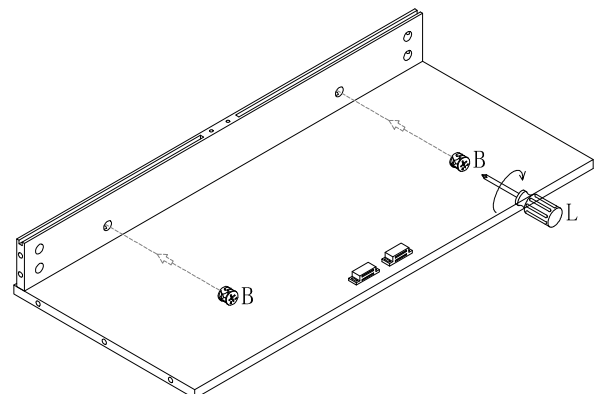

	A×2PCS
	B×2PCS
	D×1PCS
	F×4PCS
	J1×2PCS

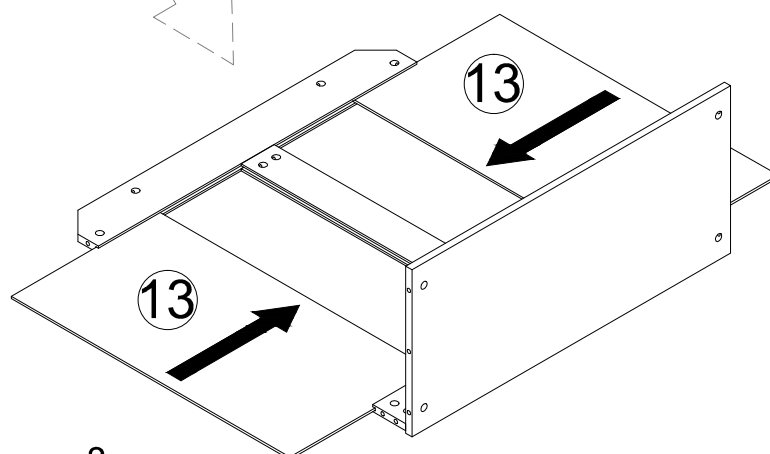
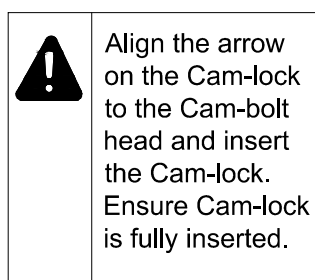
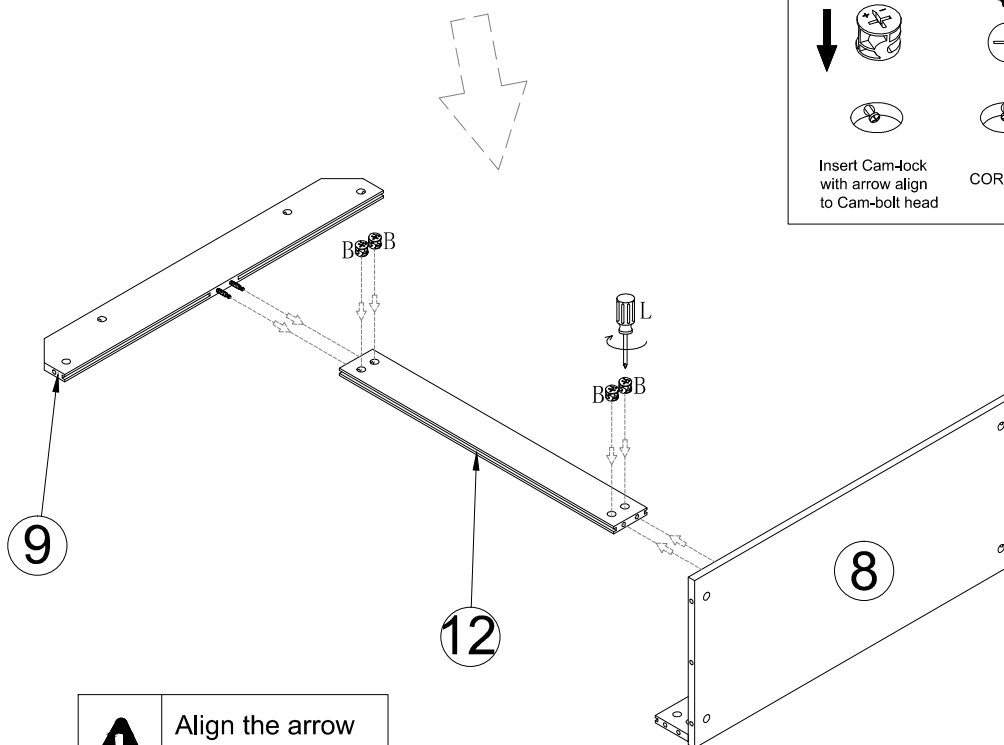
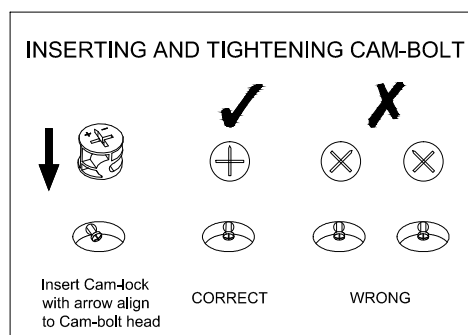
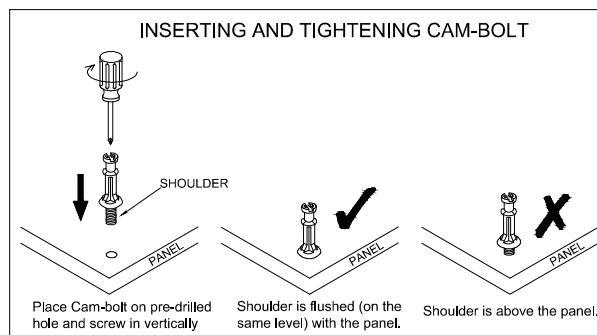
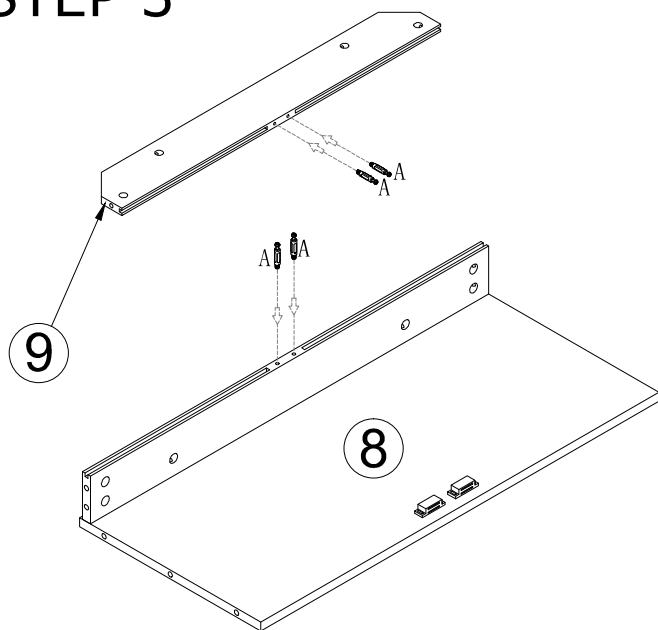


STEP 3




	A×4PCS
	B×4PCS

STEP 4

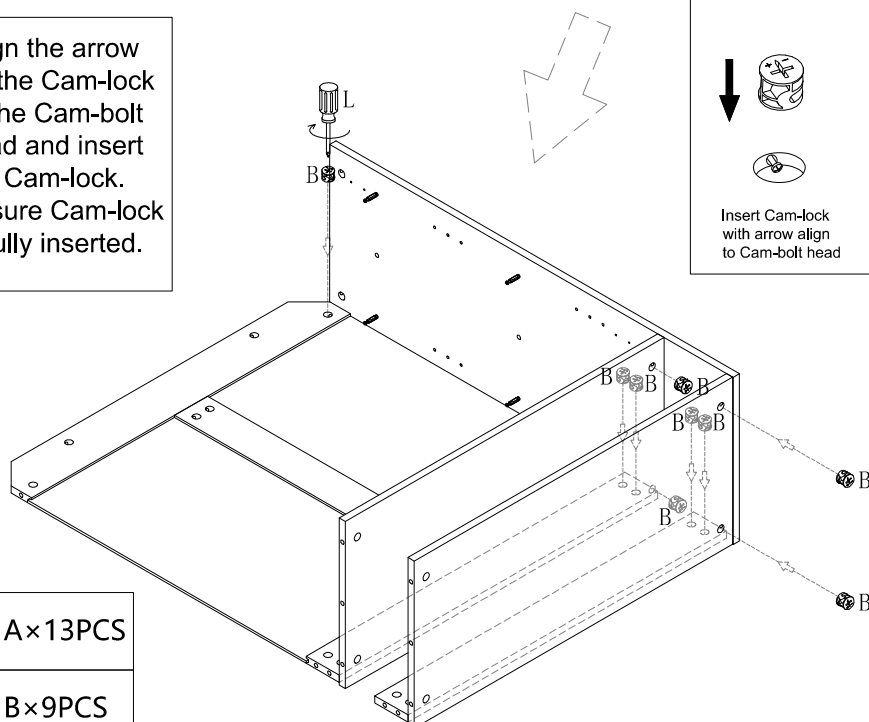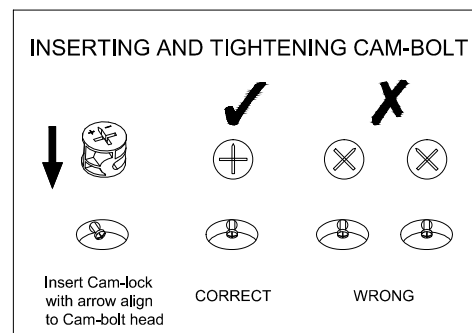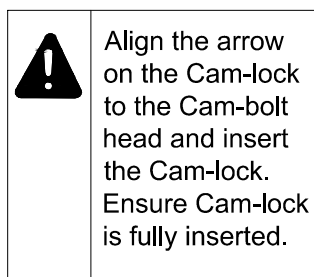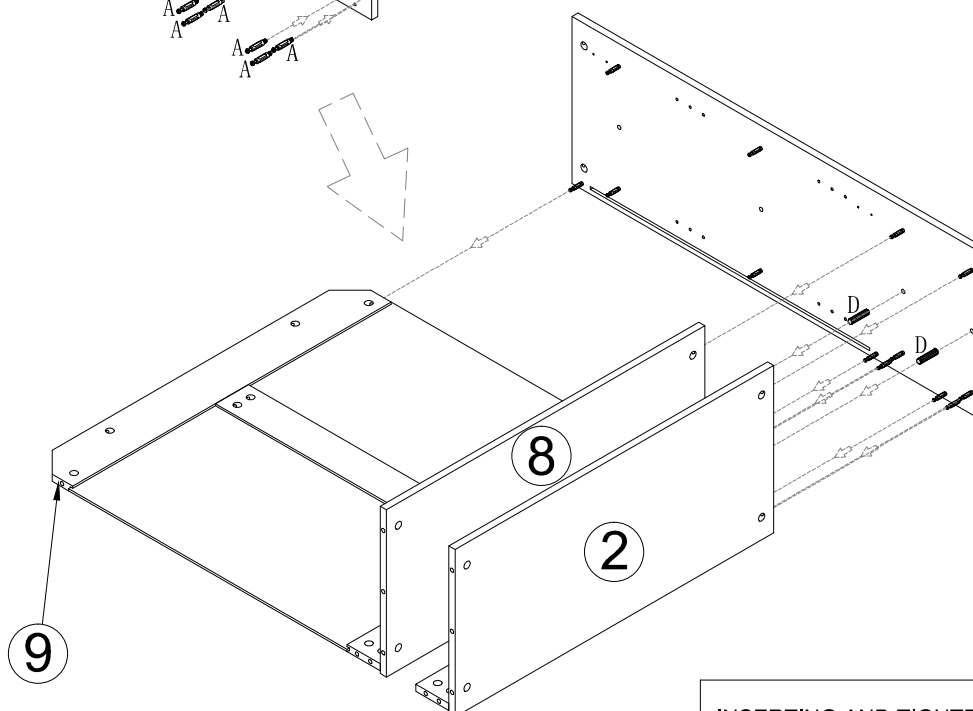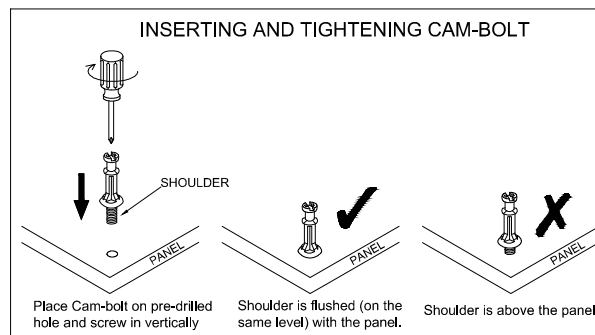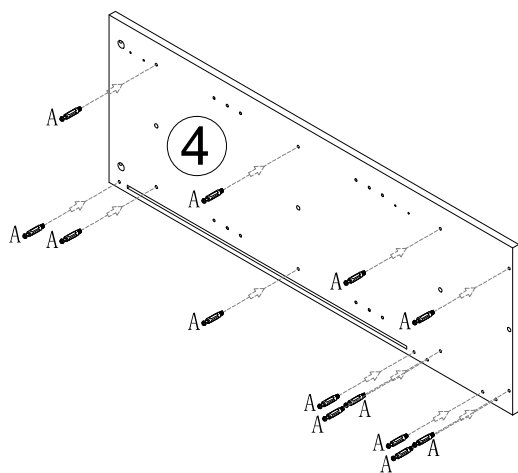


	A×13PCS
	B×9PCS
	D×4PCS

STEP 5

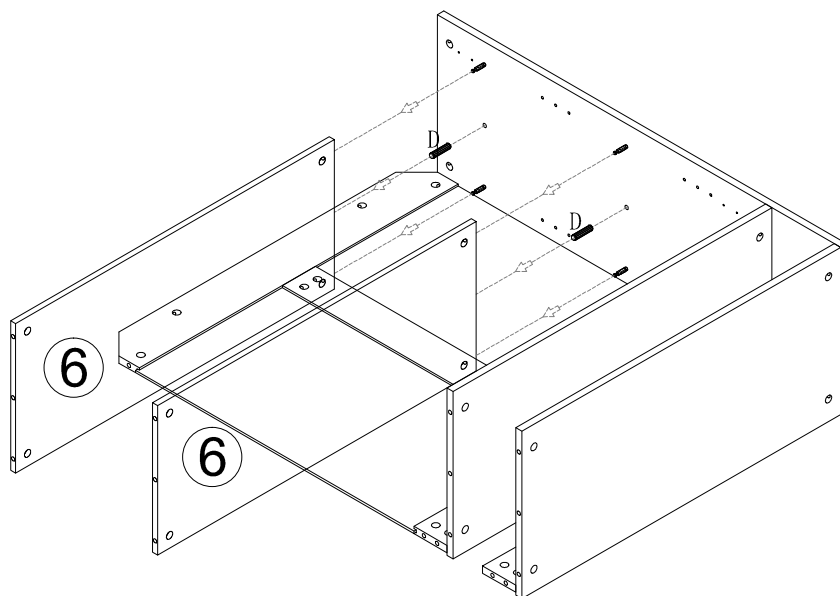

INSERTING AND TIGHTENING CAM-BOLT

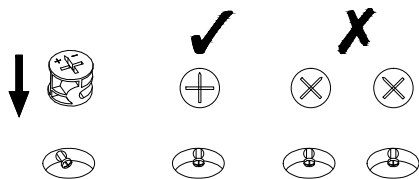


Insert Cam-lock
with arrow align
to Cam-bolt head

CORRECT


WRONG



Align the arrow
on the Cam-lock
to the Cam-bolt
head and insert
the Cam-lock.
Ensure Cam-lock
is fully inserted.



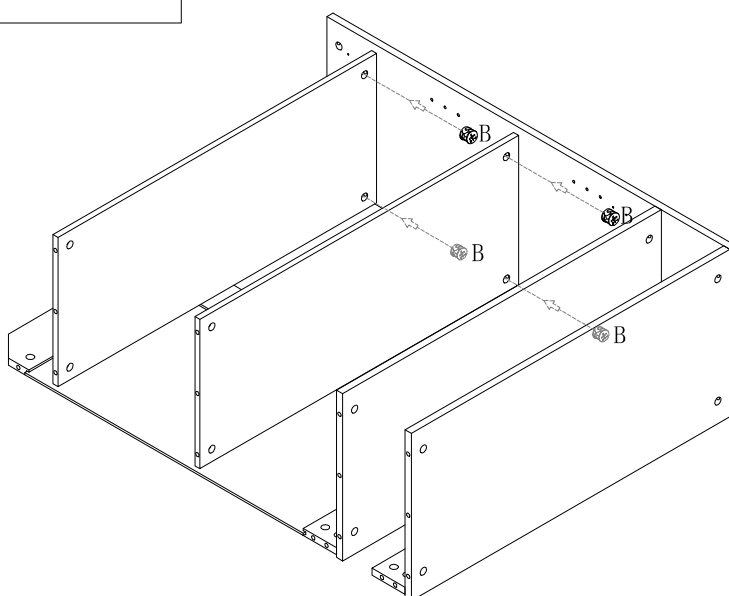


B×4PCS








D×2PCS

STEP 6

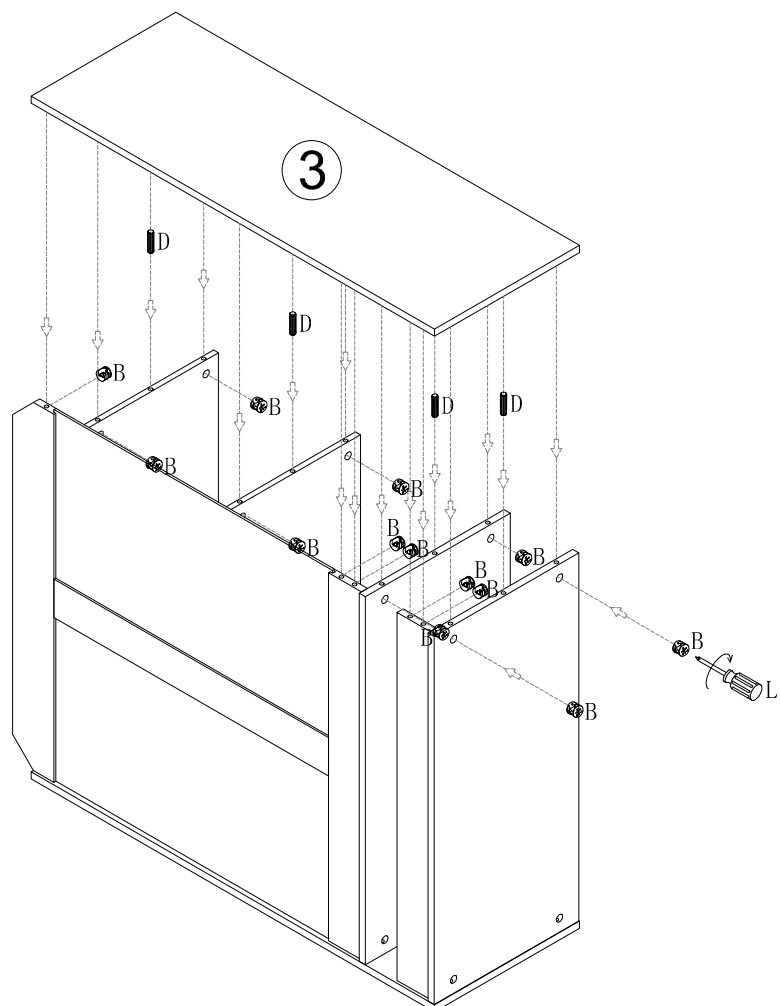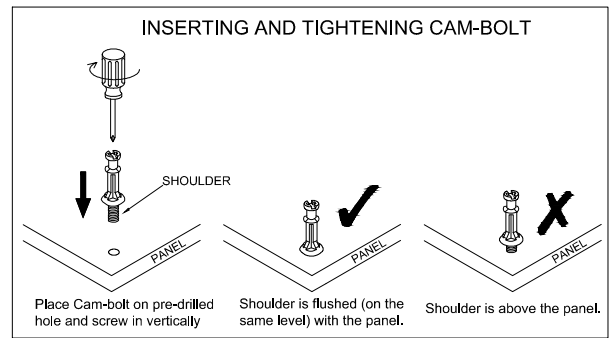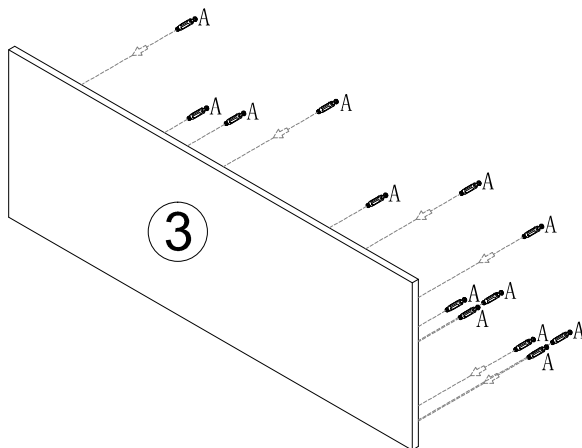


	A×13PCS
	B×13PCS
	D×4PCS
	L×4PCS






STEP 7

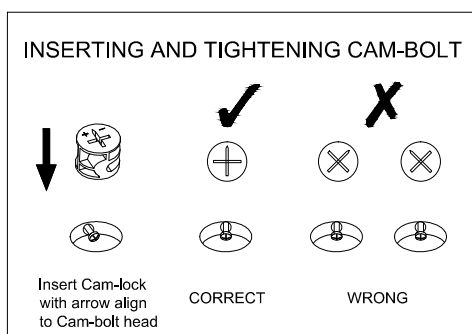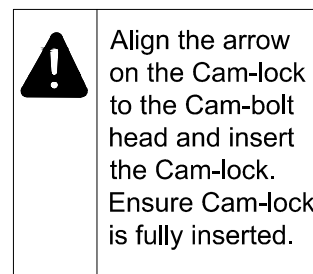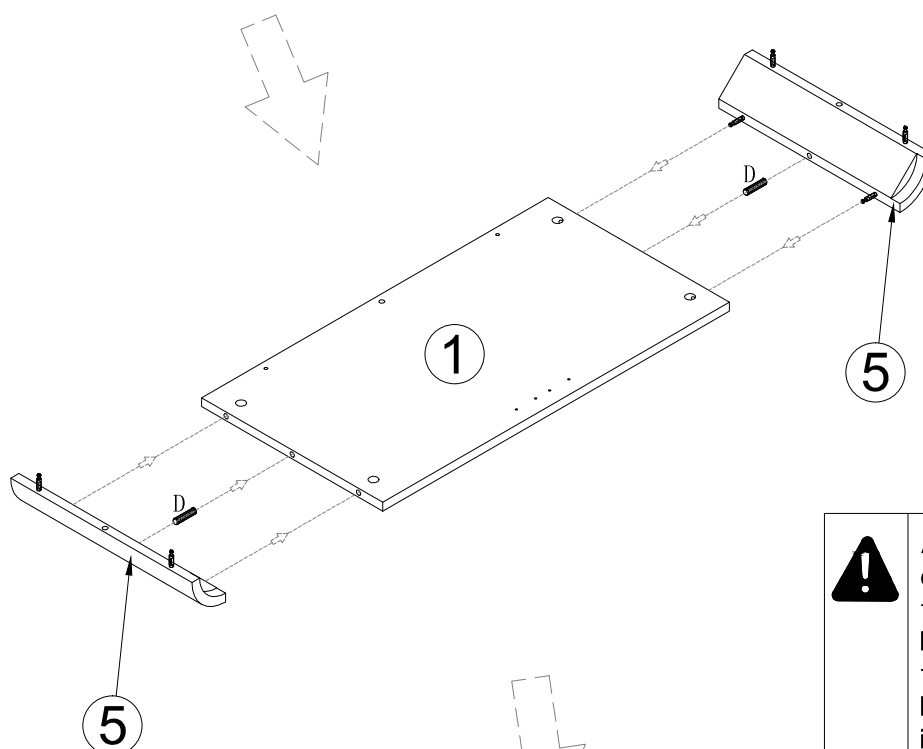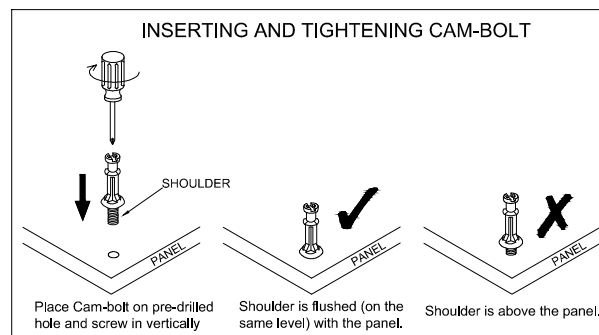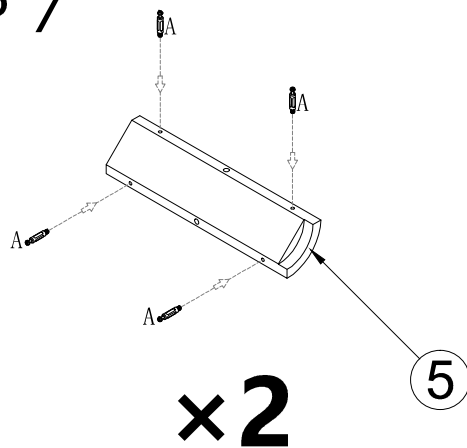

	A×8PCS
	B×4PCS
	D×2PCS

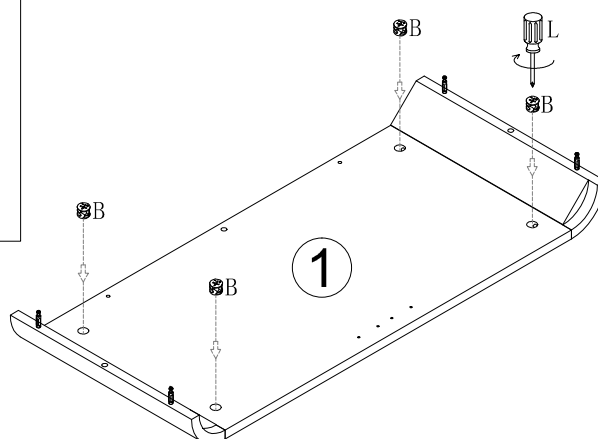




STEP 8

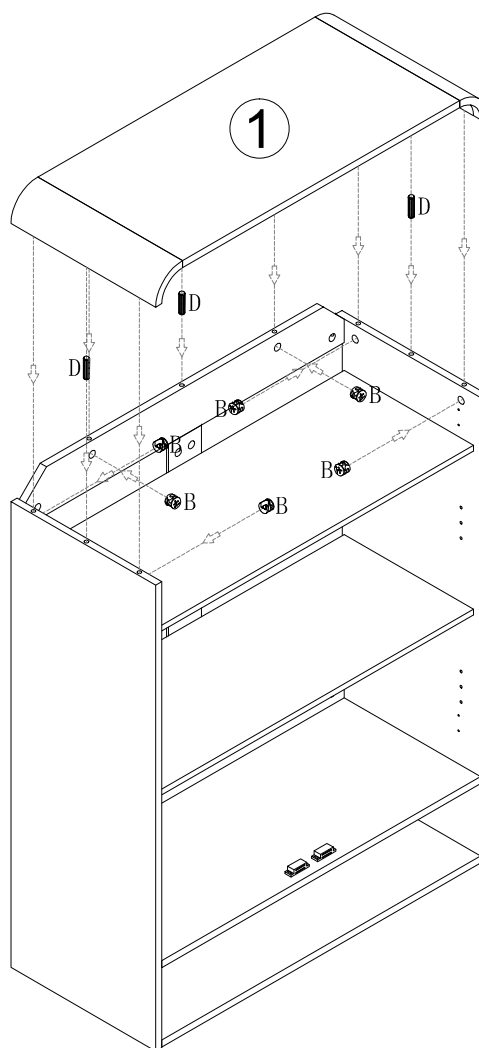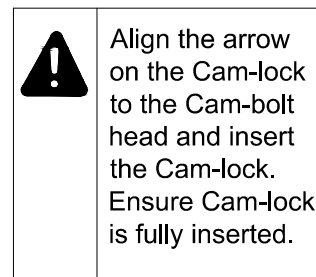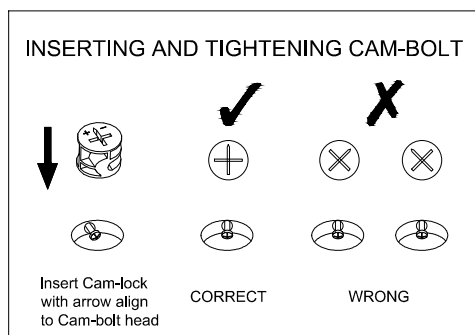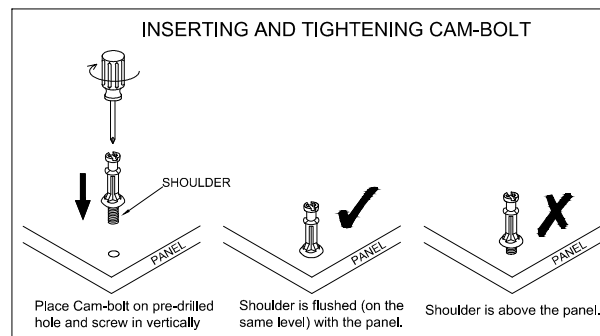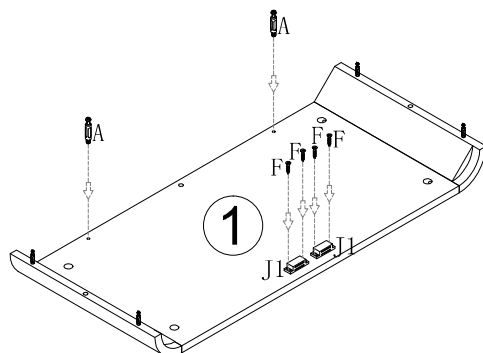


	A×2PCS
	B×6PCS
	D×3PCS
	F×4PCS
	J1×2PCS

STEP 9

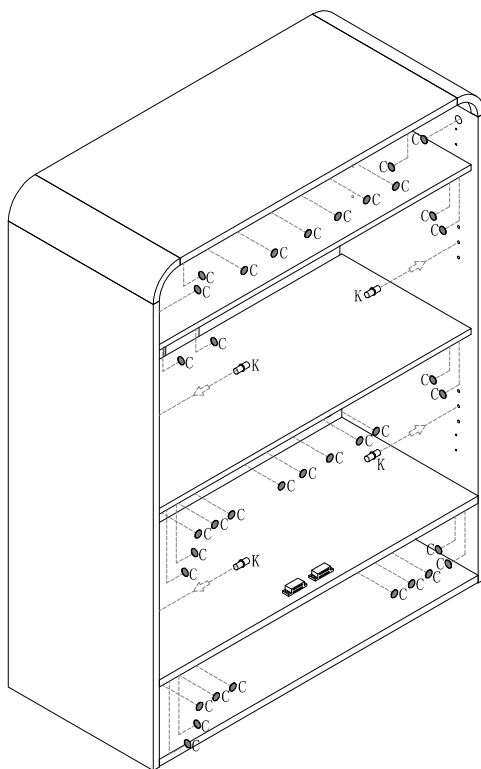

	C×36PCS
	K×8PCS


STEP 10

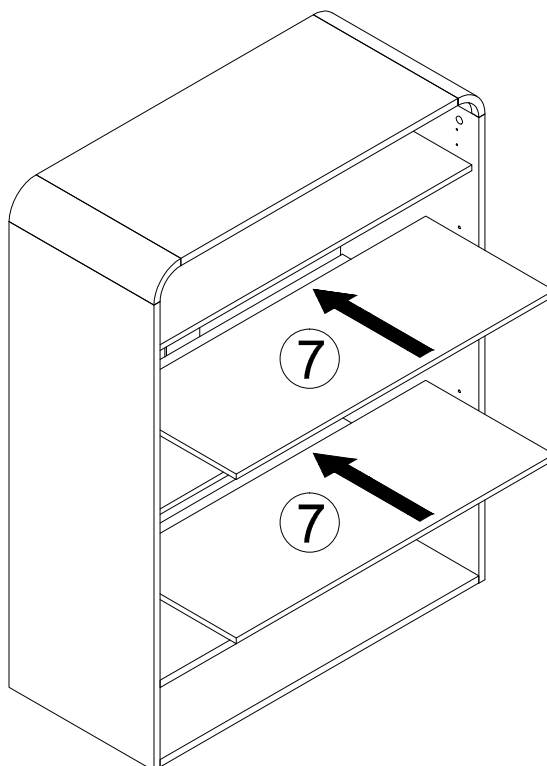





If you encounter the following situation, please follow the steps to correct it.

- 1.The function of the front screw is to adjust the size of the gap between the door and the side panel.
- 2.The function of the rear screw is to adjust the distance between the front and rear of the door.

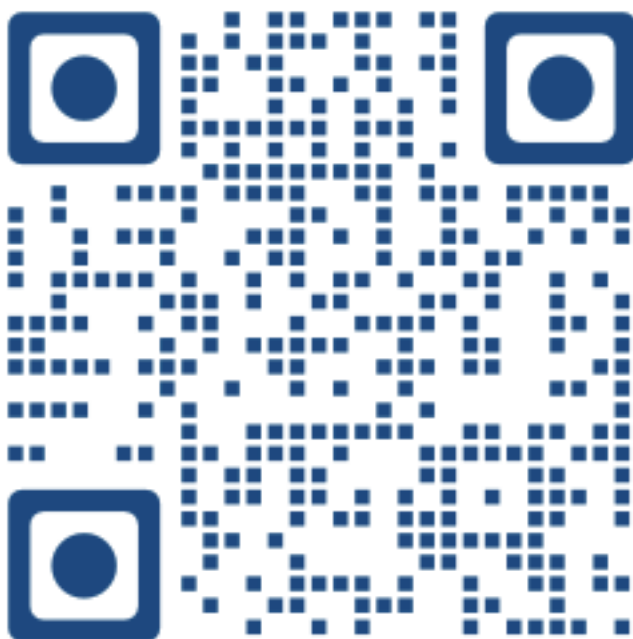



Scan the QR code to get the hinge video installation method

11-A. When the door panel is higher than the side panel.

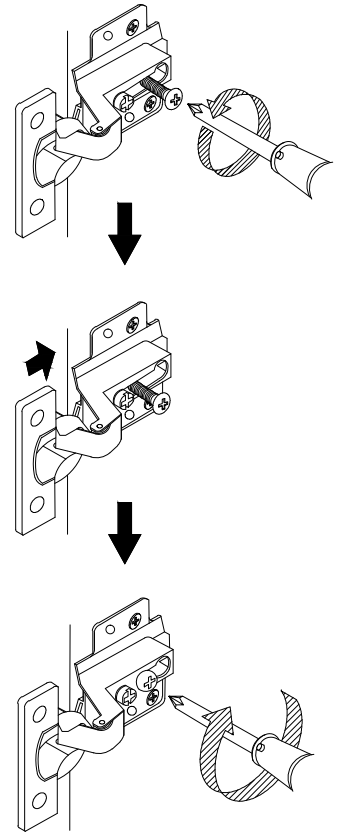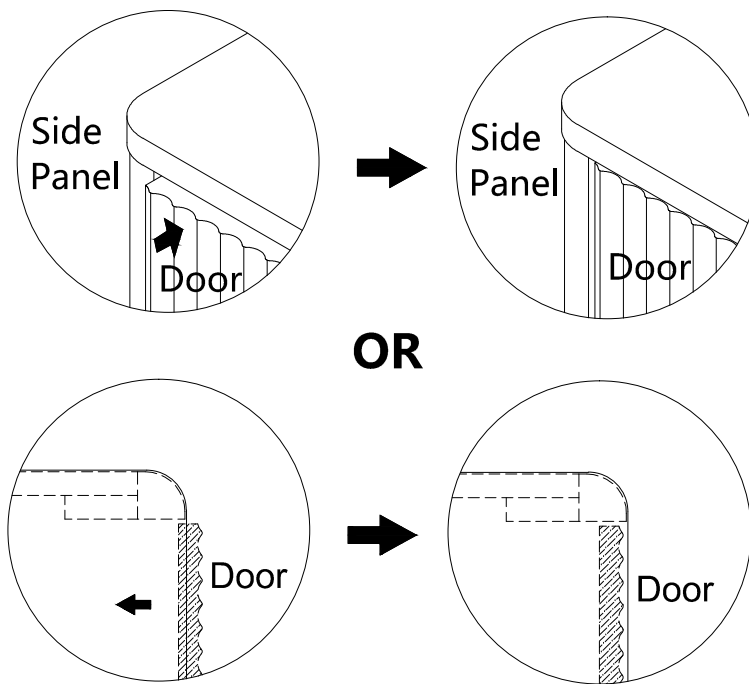



If the gap is too big between side panel and door or the door is over the edge of side panel, loose the back screw as shown, then move in the door with hinge and tighten the back screw as shown when the gap is just well.

11-B. When the door panel is lower than the side panel, an indentation occurs.

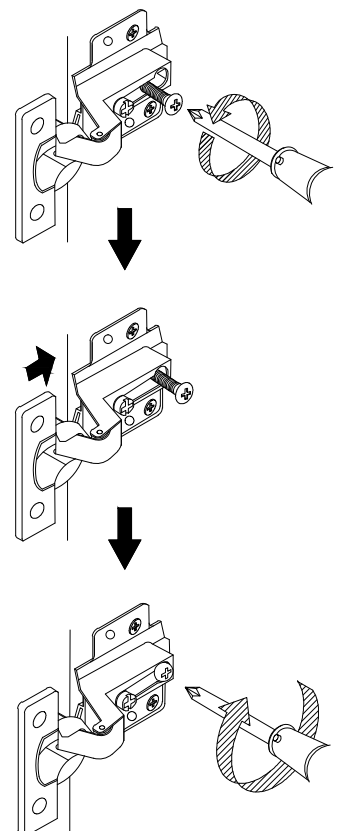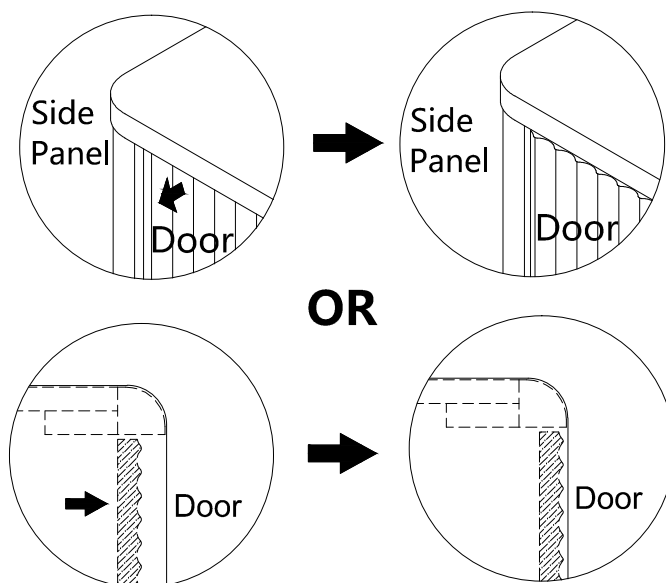



If the gap is too small between side panel and door or the door sank in side panel, loose the back screw as shown, then move out the door with hinge and tighten the back screw as shown when the gap is just well.

11-C

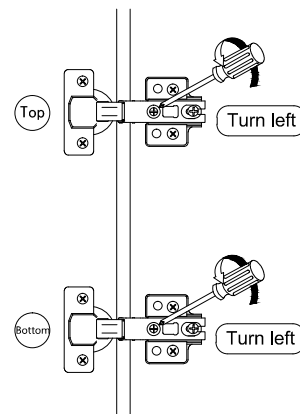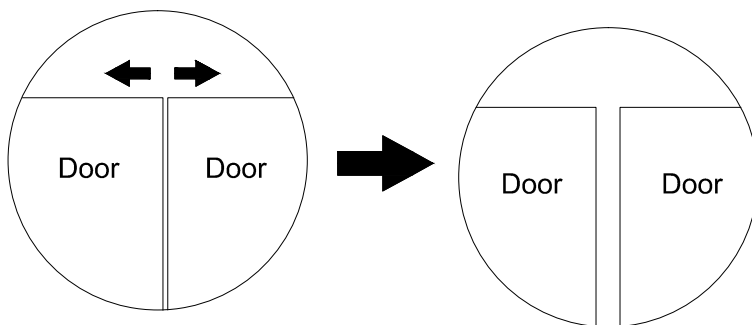



If the gap between the two doors is too small, follow the diagram.

11-D

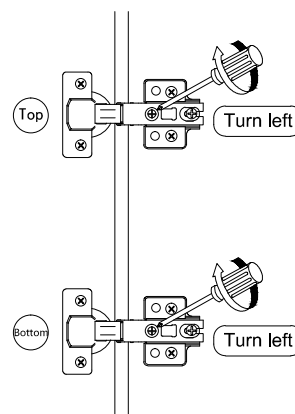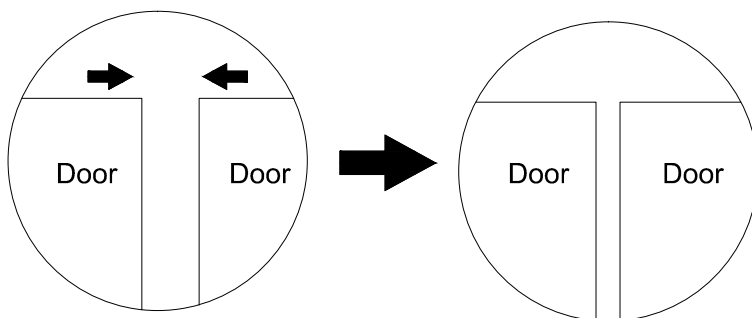



If the gap between the two doors is too large, follow the diagram.

11-E

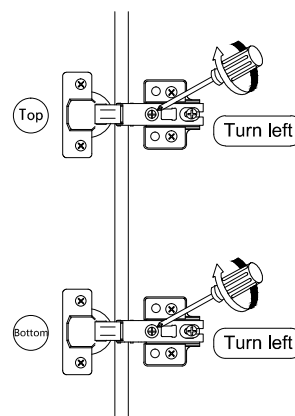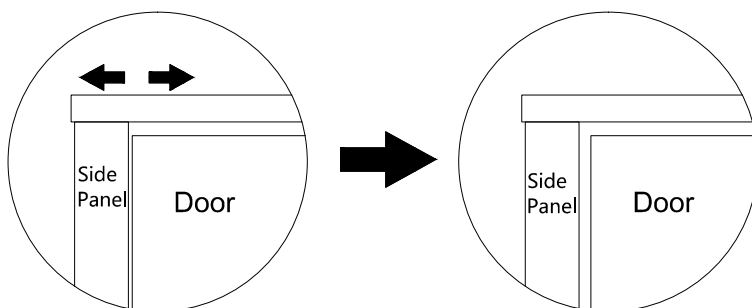



If the gap between the door and the side panel is too small, loose the front screw as shown.

11-F

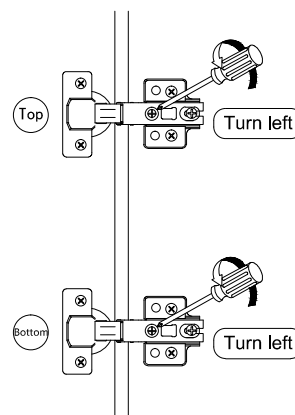
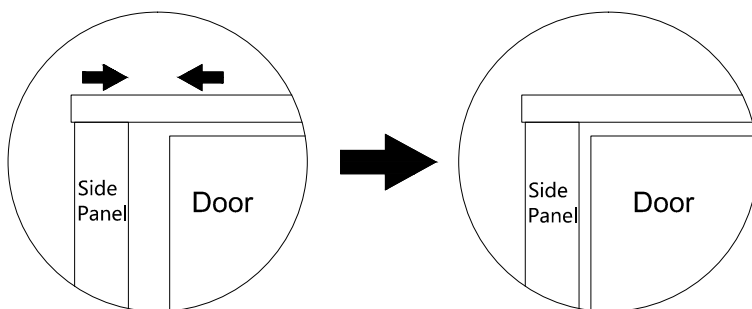


If the gap between the door and the side panel is too large, tighten the front screw as shown.




11-G. When door is leaning

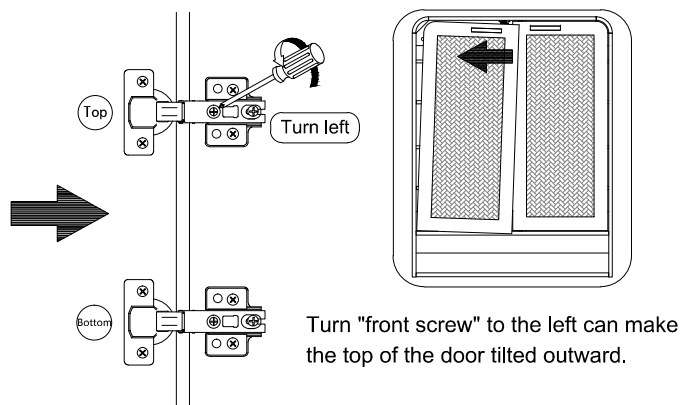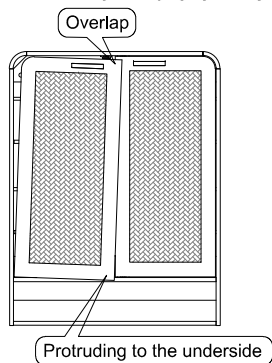

11-H. When door is leaning

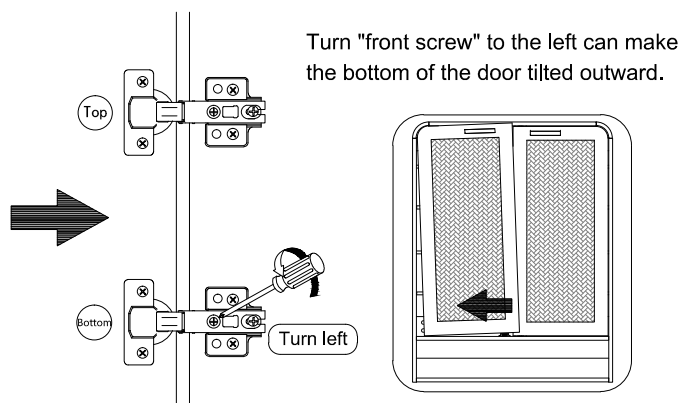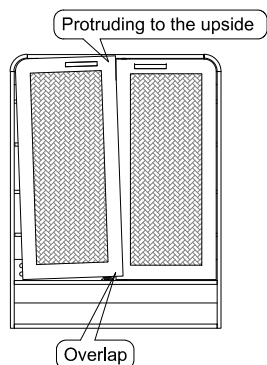


11-I. When the door is higher on fop

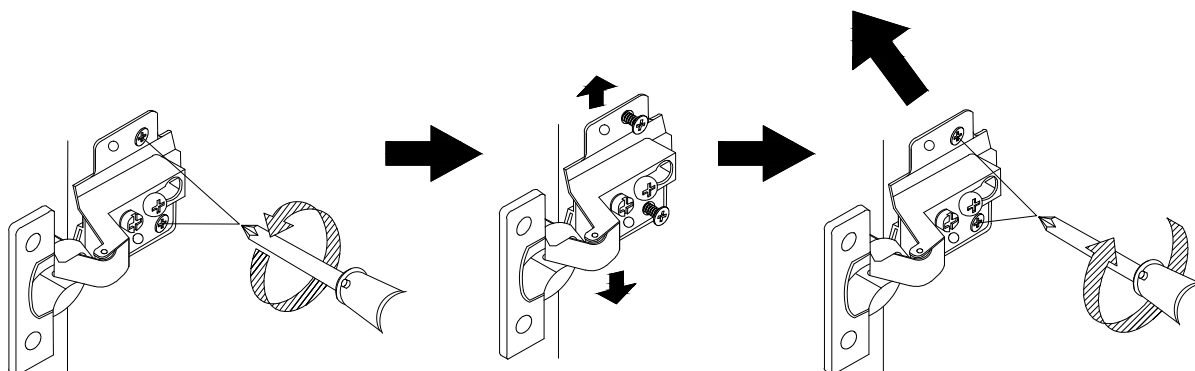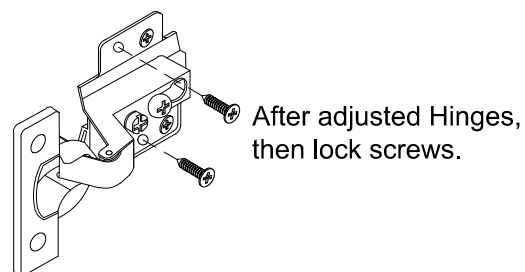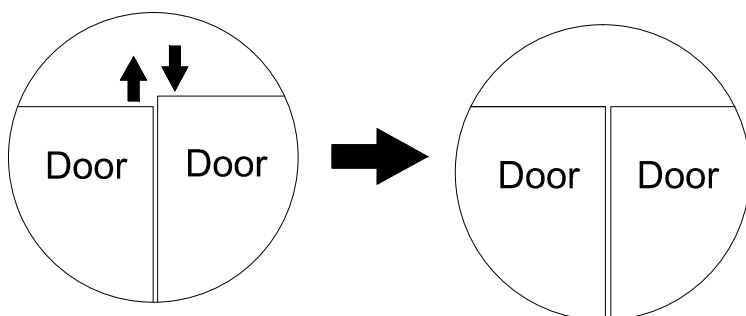


If the doors are not in same level, losse the back screws on wing, then adjust the door up and down, tighten the screws when both doors are in same level.
Screw front two screws on wing when all are in place.



STEP 12

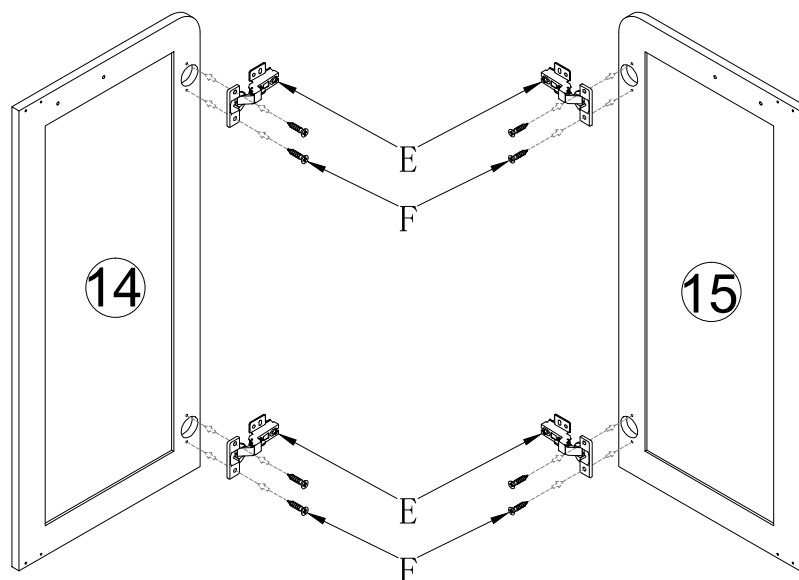


Before installing the door panels, please study and read the following steps. For possible problems, we have given some suggestions to solve the problems you encounter.

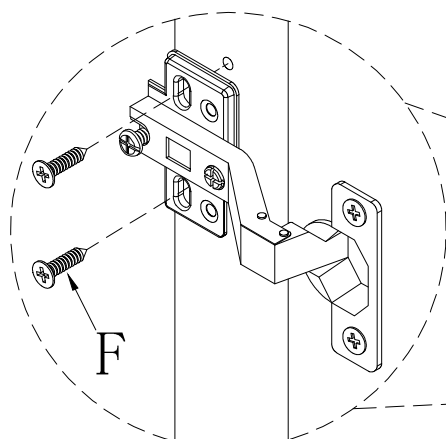

x4


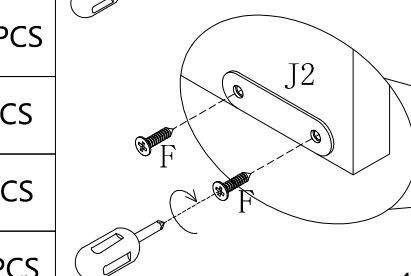
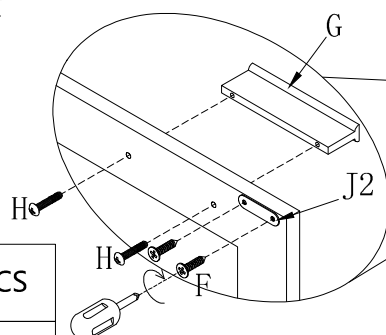


	E×4PCS
	F×24PCS
	G×2PCS
	H×4PCS
	J2×4PCS

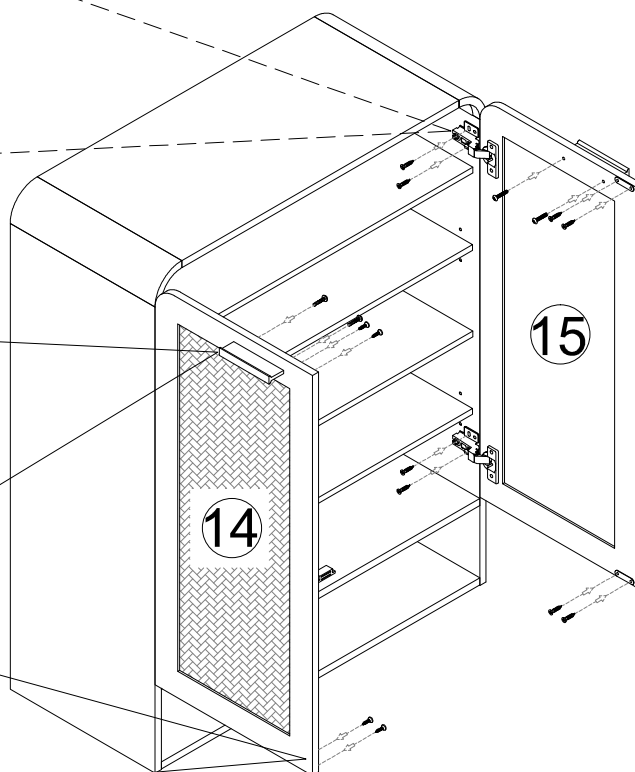

Install the "E" hinge doors on both sides of the cabinet.

STEP 13

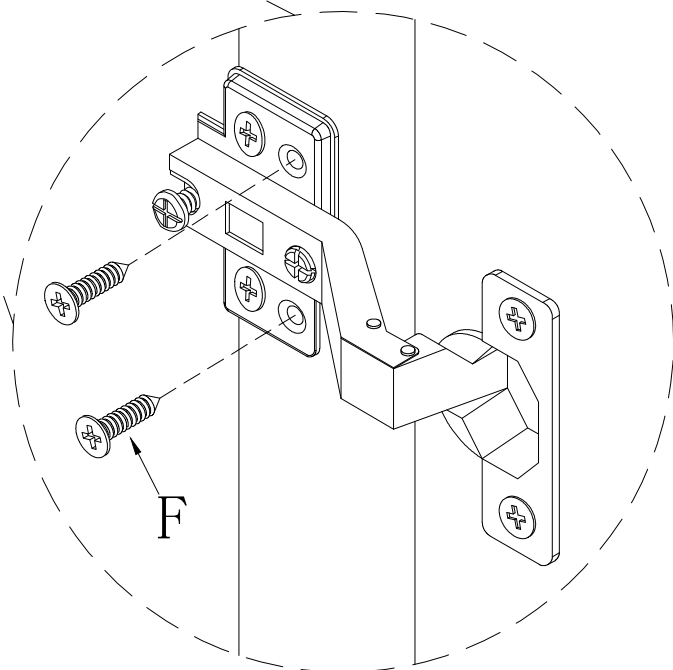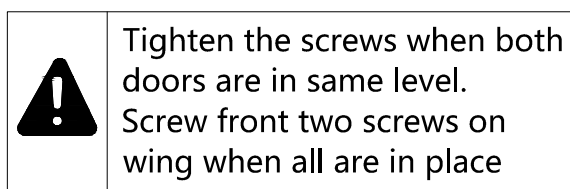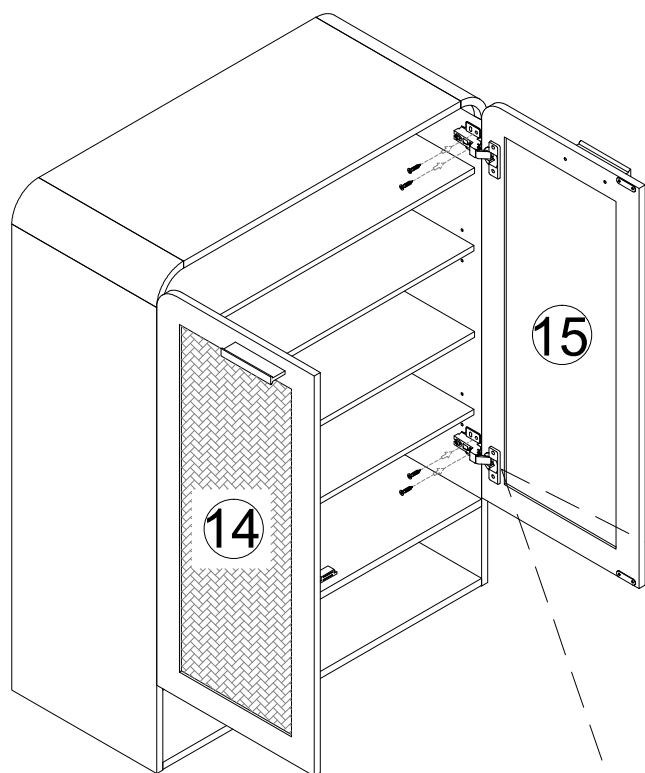


NOTE:

If there is a large gap in the installation of the door, you can return to page 14 or page 17 to view the installation video and installation tutorial.

x4




STEP 14

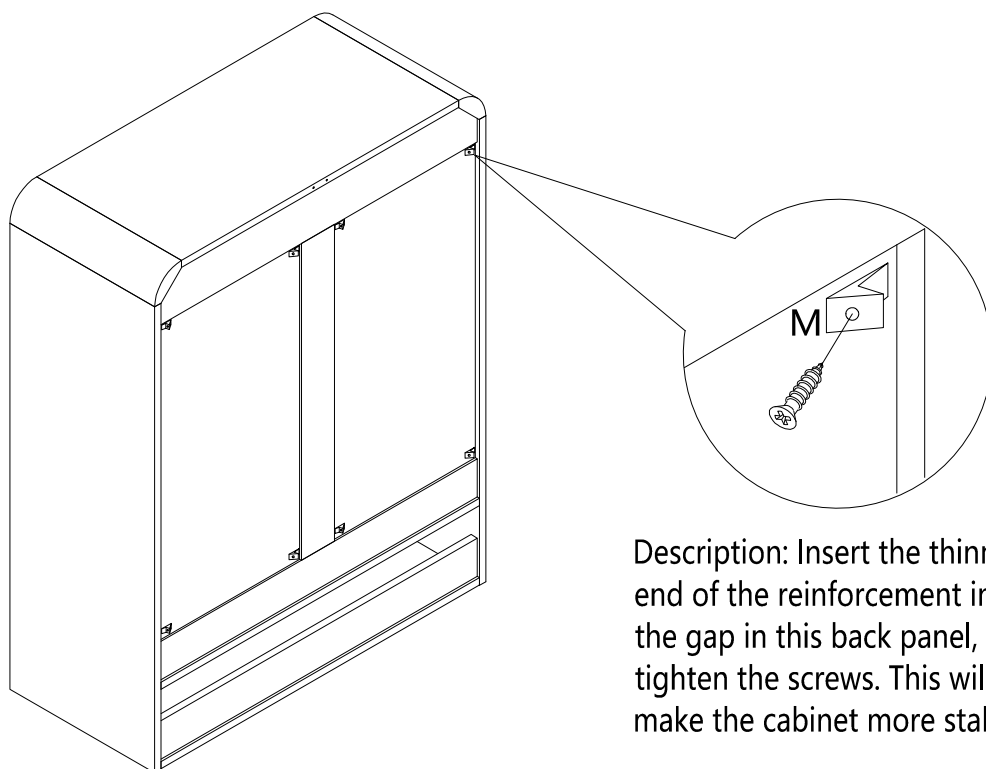

Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.





STEP 15

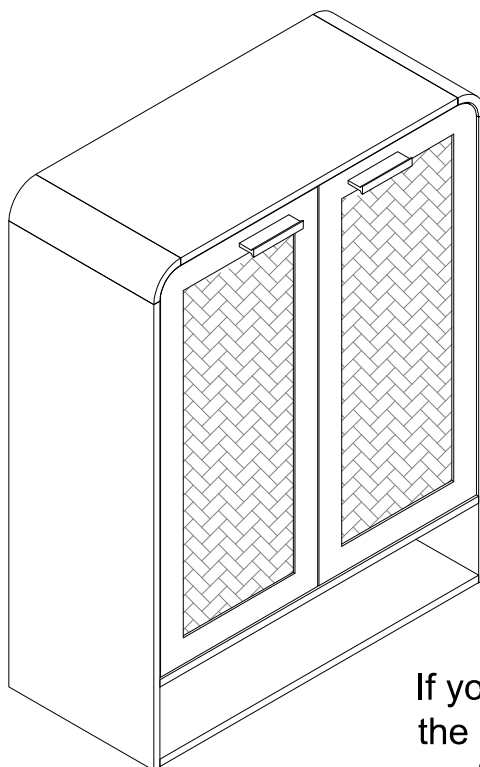

If you have any questions about the use of the fireplace, you can contact our after-sales email at any time. We are here to serve you at any time.

STEP 16

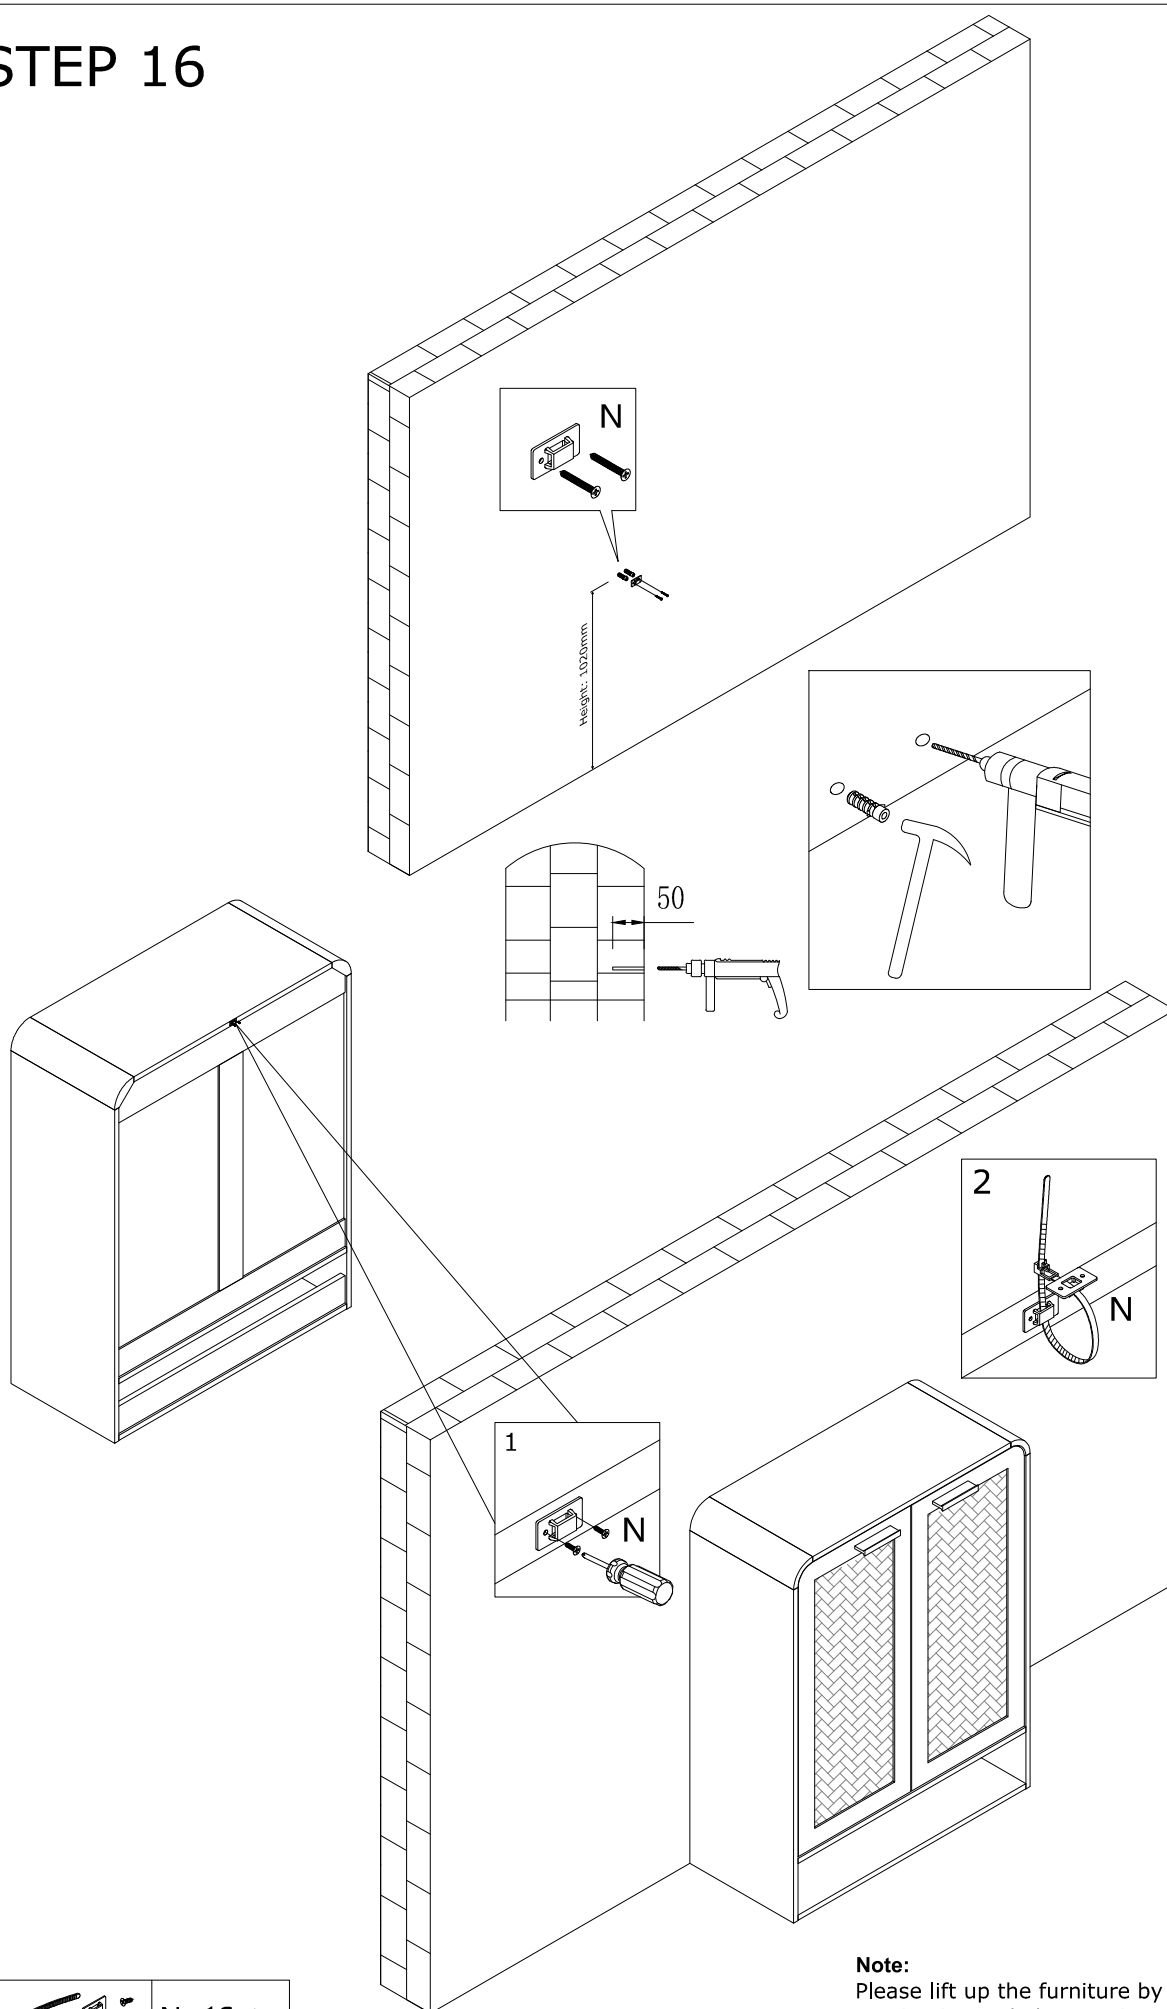

Note:
Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.