

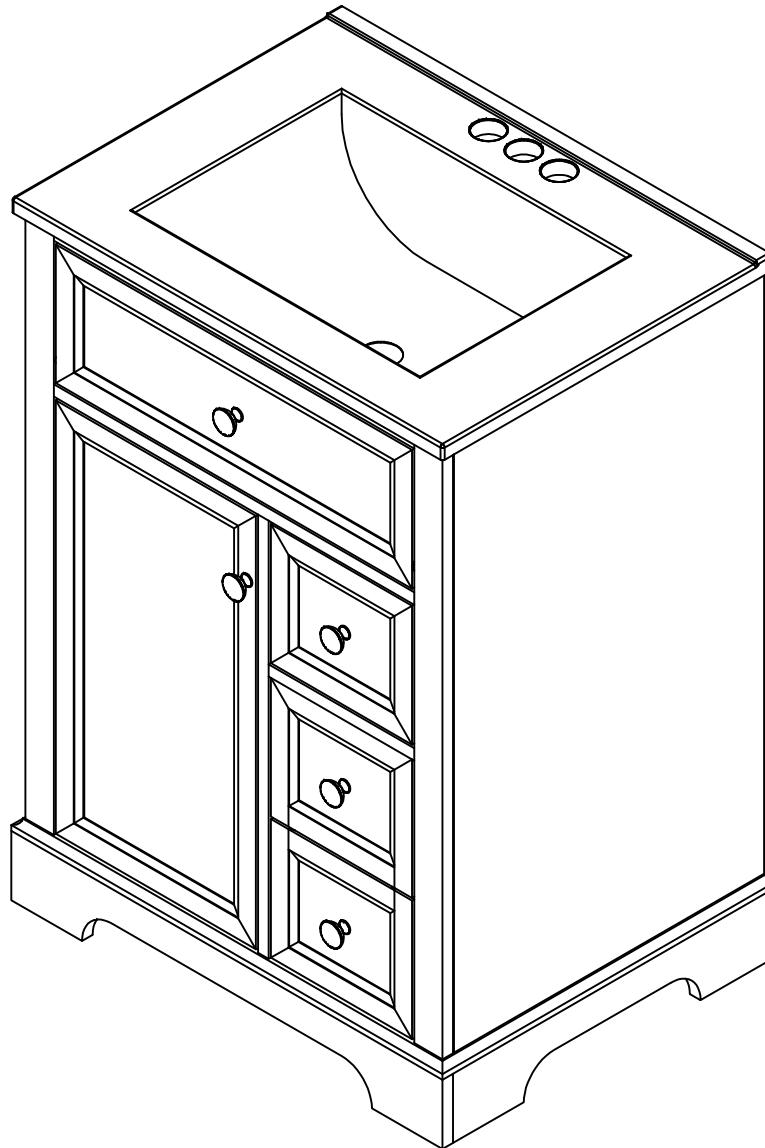


N725P375495
ASSEMBLY INSTRUCTIONS
24 INCHES BATH VANITY (COMBO)

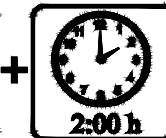


Thank you for purchasing this quality product. Be sure to check all parts material carefully for small parts which may have come loose inside carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present, "DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

- * Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
- * Please assemble on a clean soft surface to avoid damage.

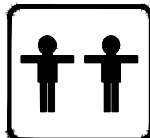

Tools Required



(Not Included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation

Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.







. Please do not over tighten screws or bolts until the assembly is completed.

. Keep children and animal away from the work area, small parts could choke if swallowed.


. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


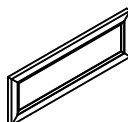

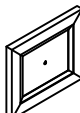
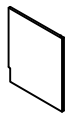
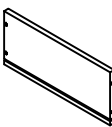

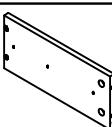
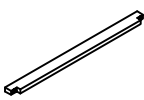

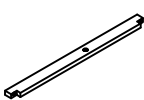
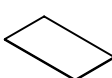

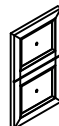
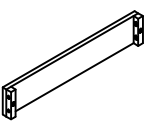
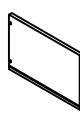

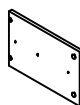
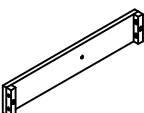
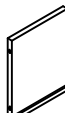
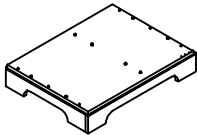


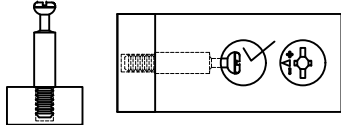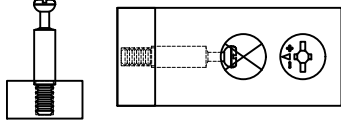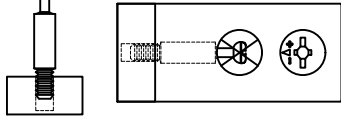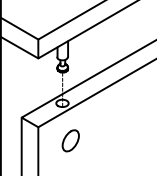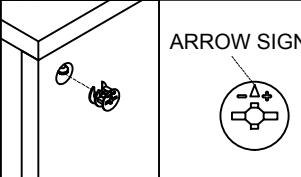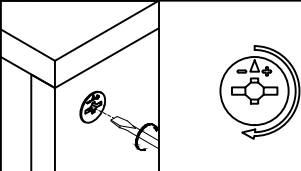


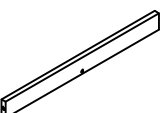

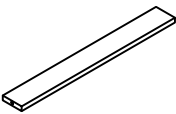
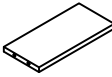
Cam Lock Assembly Instructions

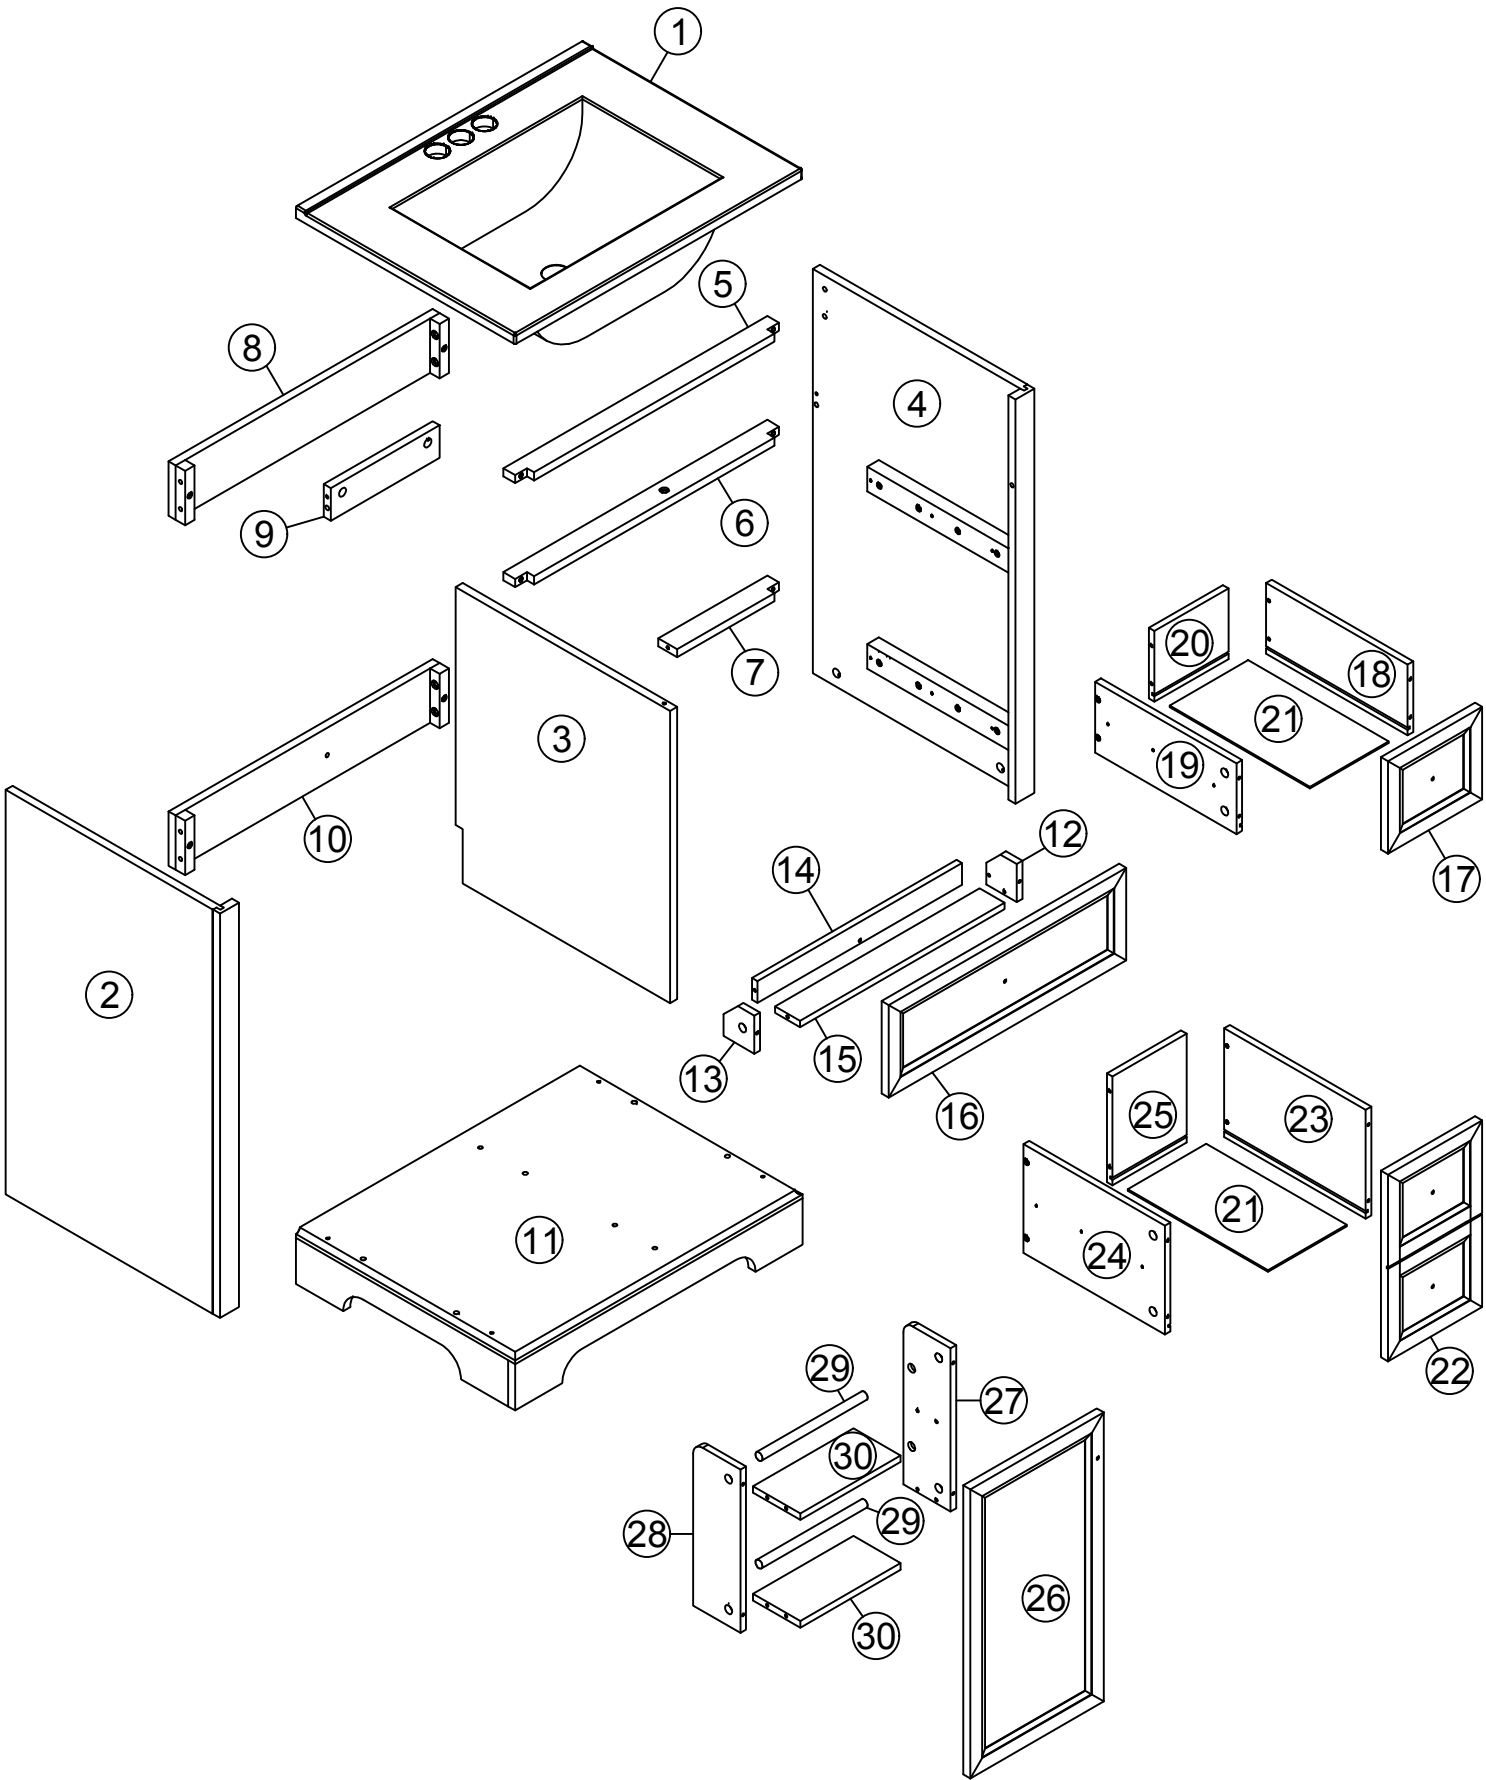	Insert Cam Bolt into hole as shown in diagram A.
	Make sure not to insert the Cam Bolt. Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>













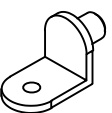








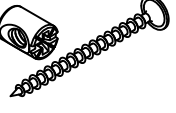

PRODUCT DETAILS

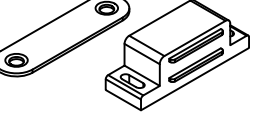

PARTS LIST

①	SINK (LAVABO)		1PC	①6	FLIP-OFF DRAWER FRONT		1PC
②	LEFT BOARD		1PC	①7	DRAWER FACE 1		1PC
③	CENTER BOARD		1PC	①8	RIGHT DRAWER SIDE 1		1PC
④	RIGHT BOARD		1PC	①9	LEFT DRAWER SIDE 1		1PC
⑤	FRONT HORIZONTAL BAR 1		1PC	②0	BACK DRAWER SIDE 1		1PC
⑥	FRONT HORIZONTAL BAR 2		1PC	②1	BOTTOM DRAWER		2PCS
⑦	FRONT HORIZONTAL BAR 3		1PC	②2	DRAWER FACE 2		1PC
⑧	BACK HORIZONTAL BAR 1		1PC	②3	RIGHT DRAWER SIDE 2		1PC
⑨	BACK HORIZONTAL BAR 2		1PC	②4	LEFT DRAWER SIDE 2		1PC
⑩	BACK HORIZONTAL BAR 3		1PC	②5	BACK DRAWER SIDE 2		1PC
⑪	BOTTOM FRAME		1PC	②6	DOOR FACE		1PC
⑫	RIGHT-TURN DRAWER SIDE		1PC	②7	RIGHT DOOR SIDE		1PC
⑬	LEFT-TURN DRAWER SIDE		1PC	②8	LEFT DOOR SIDE		1PC
⑭	BACK BOARD OF FLIP-UP DRAWER		1PC	②9	ROUND WOODEN DOOR		2PCS
⑮	FLIP-UP DRAWER BOTTOM		1PC	③0	SHELVES DOORS		2PCS


HARDWARE LIST




Ⓐ	A1 : D300MM 	4SETS	Ⓚ	M6*30MM 	14PCS
	A2 : D300MM 				
Ⓑ	3.5*12MM 	16PCS	Ⓛ	M4*20MM HANDLE 	5SETS
Ⓒ	Ø 8 * 30MM 	12PCS	Ⓜ	M4*50MM 	8SETS
Ⓓ	Ø5*35MM 	30PCS	Ⓝ	STAY ARM 	1PC
Ⓔ	Ø 15*10MM 	30PCS	Ⓞ	L4*58MM 	1PC
Ⓕ	M6*50MM 	4SETS	Ⓟ	L 15MM 	2PCS
Ⓖ	HINGES 	2PCS	Ⓠ	3.5*10MM 	24PCS
Ⓗ	L 45MM 	2SETS	Ⓡ	     	2SETS
Ⓙ	3.5*12MM 	10PCS			

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




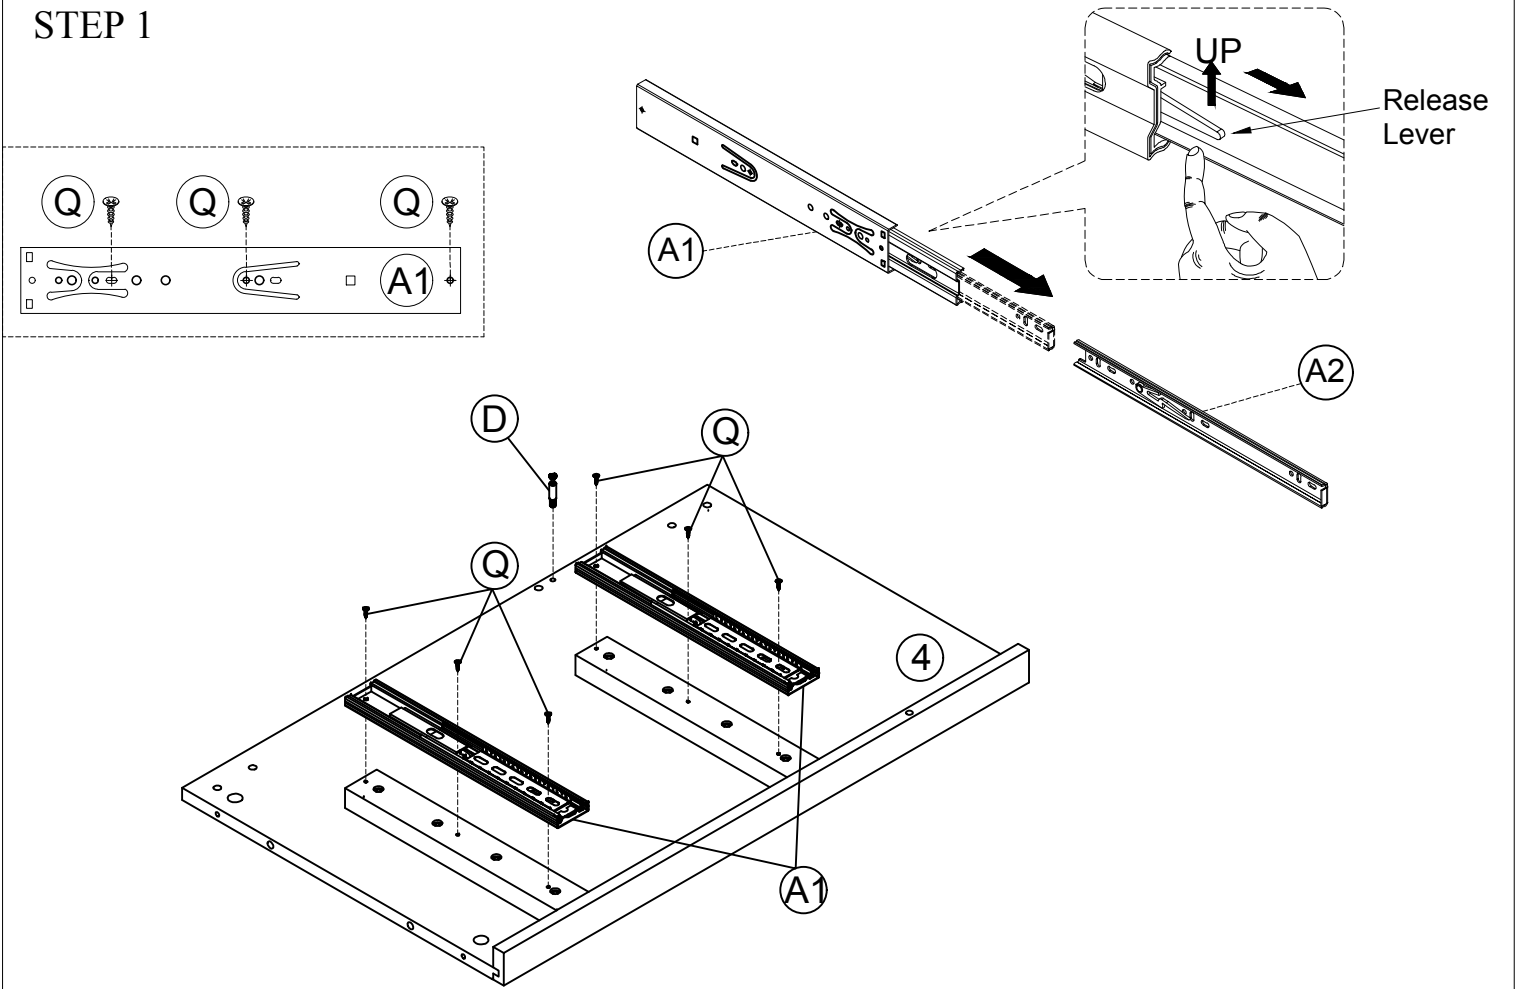


STEP 1




		(Q)	3.5*10MM		6PCS
(A)	A1 : D300MM		2PCS	(D)	Ø5*35MM
					1PC

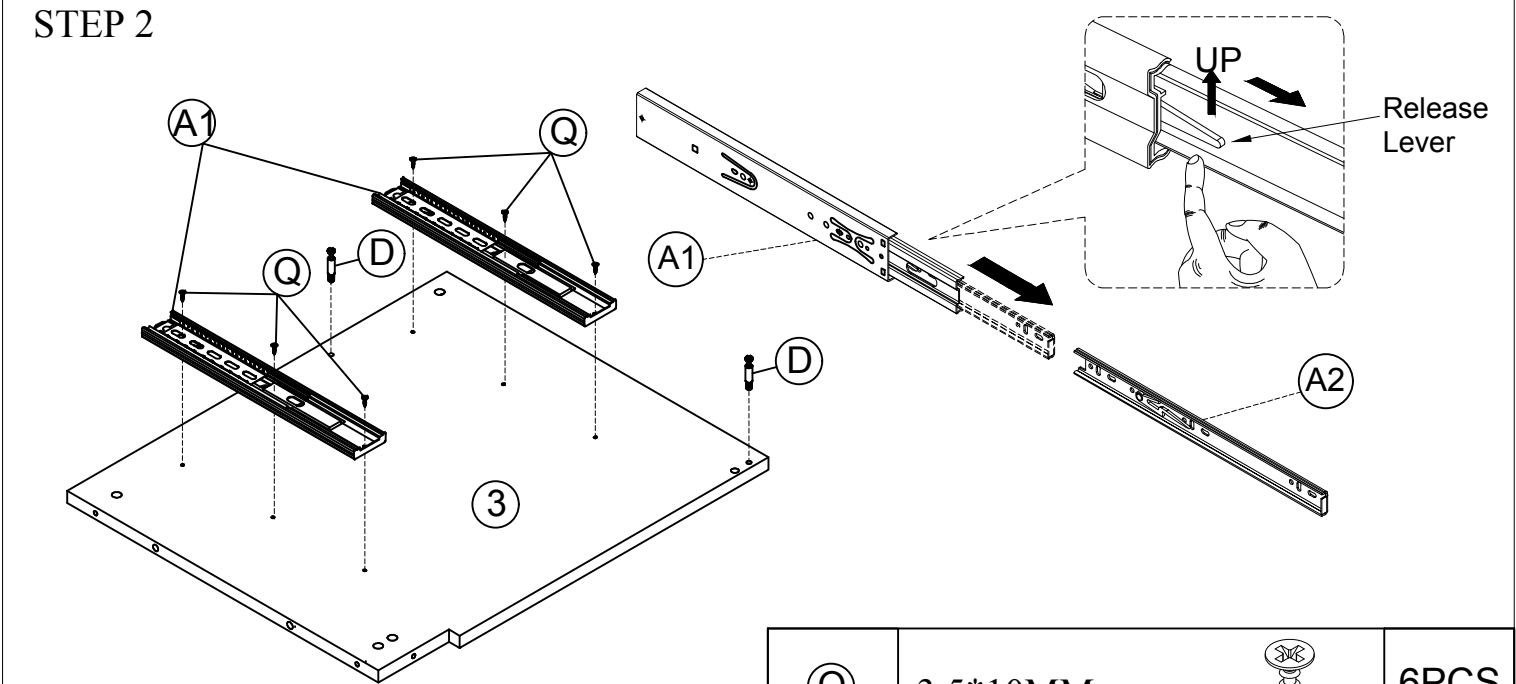

STEP 2




		(Q)	3.5*10MM		6PCS
(A)	A1 : D300MM		2PCS	(D)	Ø5*35MM
					2PCS

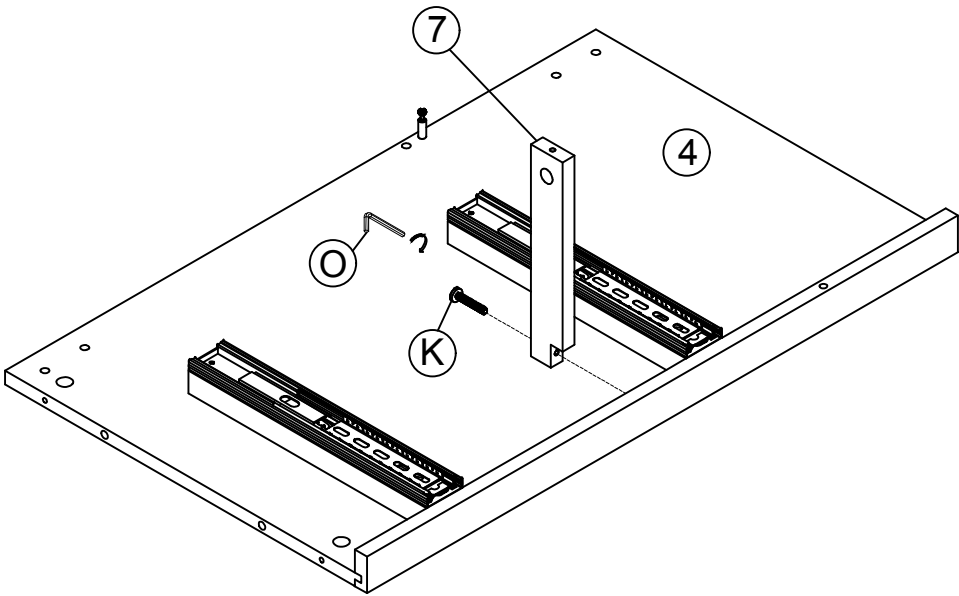



STEP 3

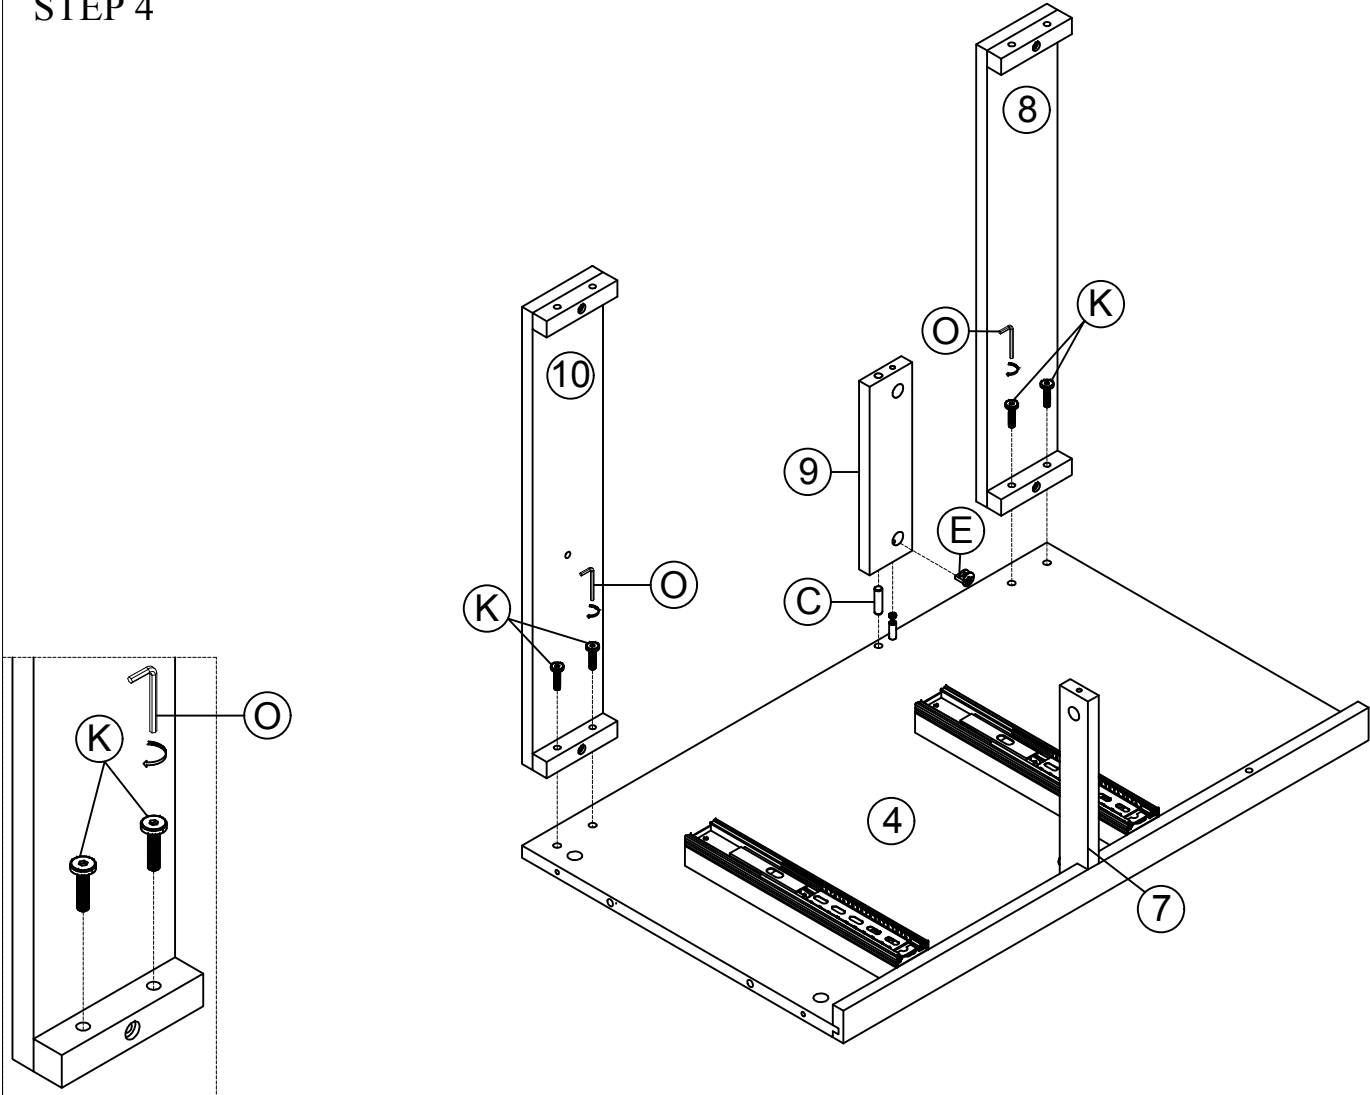


(K)	M6*30MM		1PC	(O)	L4*58MM		1PC
-----	---------	---	-----	-----	---------	---	-----

STEP 4




(C)	Ø 8 * 30MM		1PC	(E)	Ø 15*10MM		1PC
(K)	M6*30MM		4PCS	(O)	L4*58MM		1PC

STEP 5

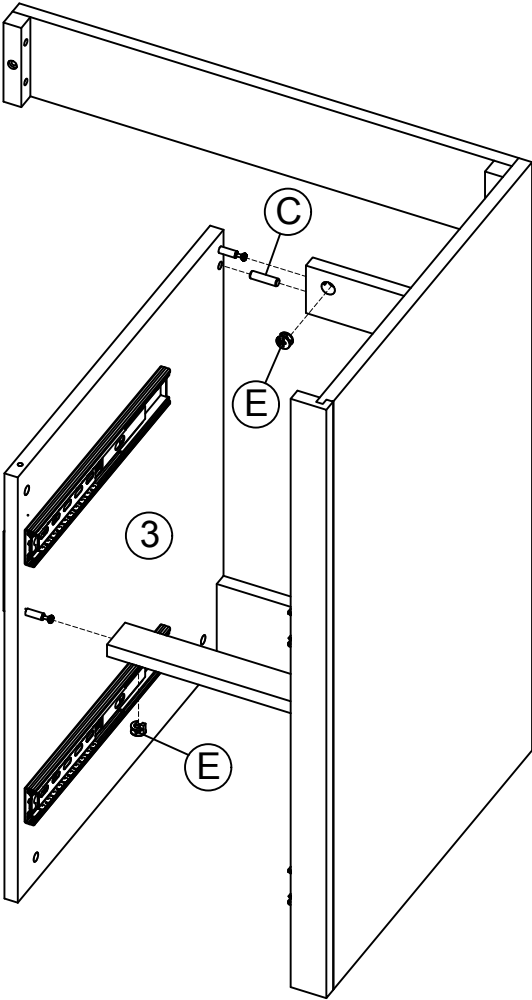


Ⓒ	Ø 8 * 30MM		1PC	Ⓔ	Ø 15*10MM		2PCS
---	------------	--	-----	---	-----------	--	------

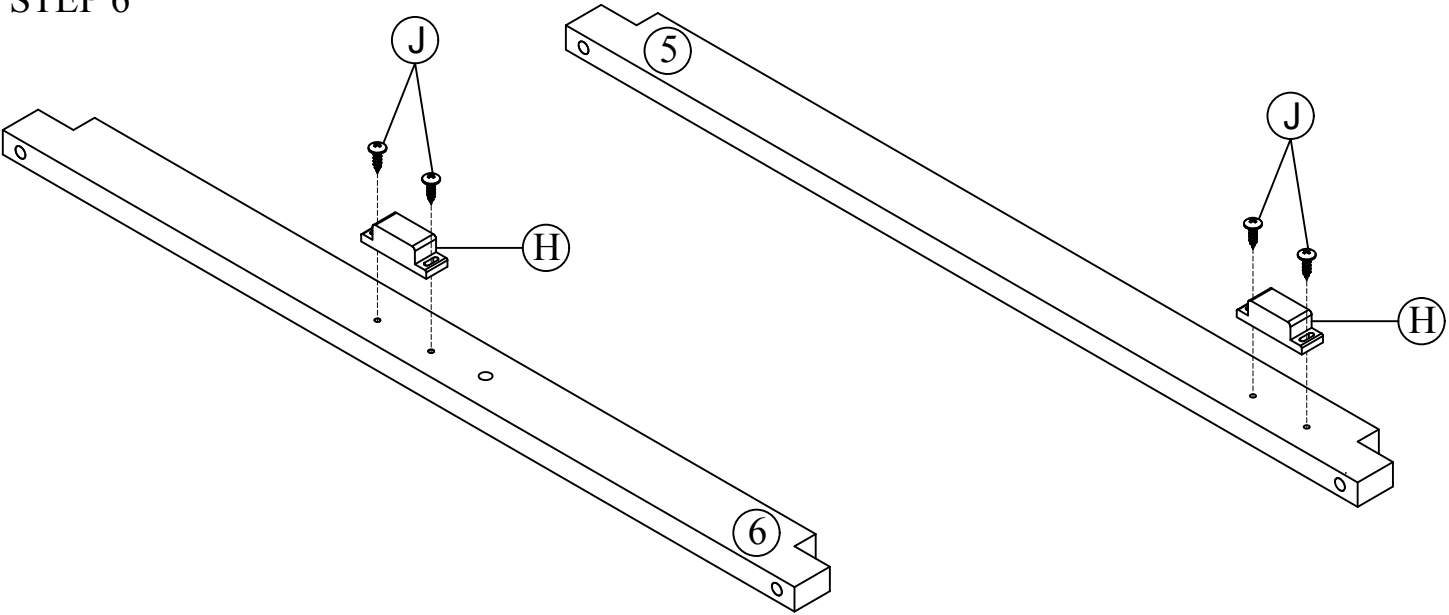

STEP 6




Ⓙ	3.5*12MM		4PCS	ⓓ	L45MM		2PCS
---	----------	--	------	---	-------	--	------

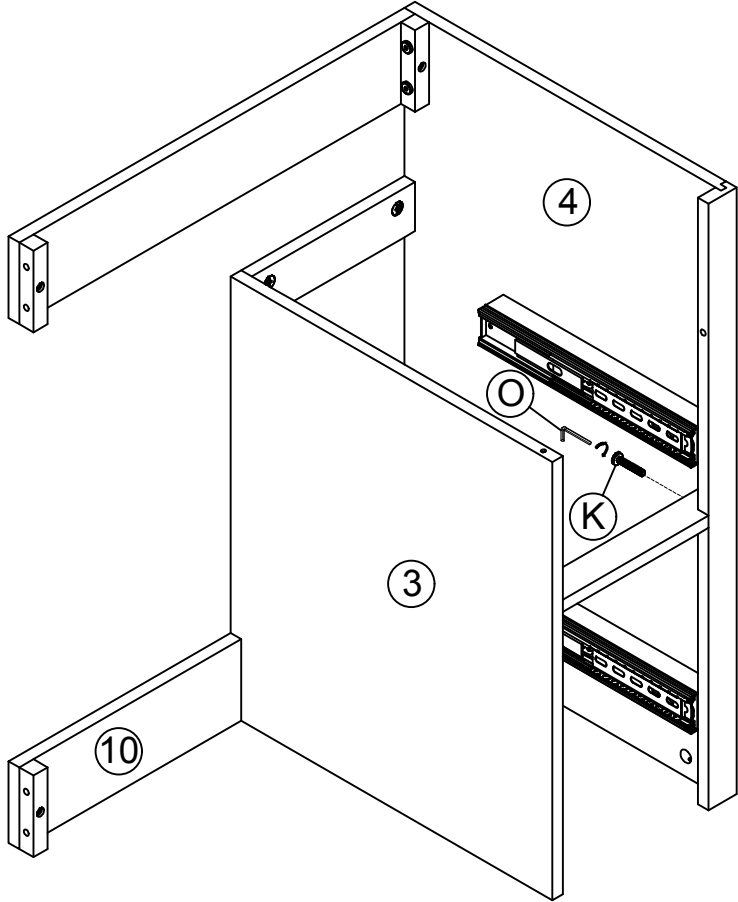
STEP 7




Ⓚ	M6*30MM		1PC	Ⓞ	L4*58MM		1PC
---	---------	---	-----	---	---------	---	-----

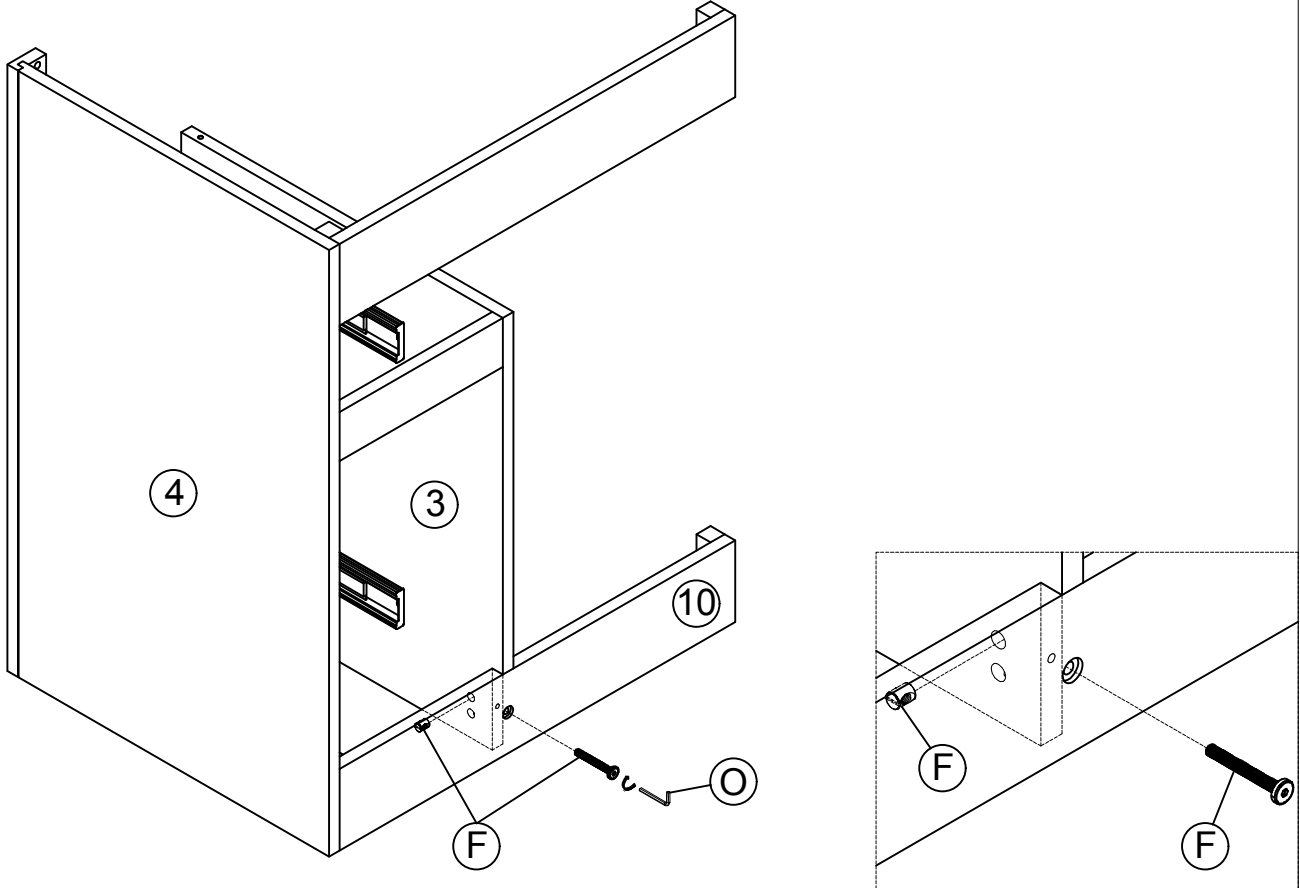

STEP 8




ⓕ	M6*50MM		1SET	Ⓞ	L4*58MM		1PC
---	---------	---	------	---	---------	---	-----

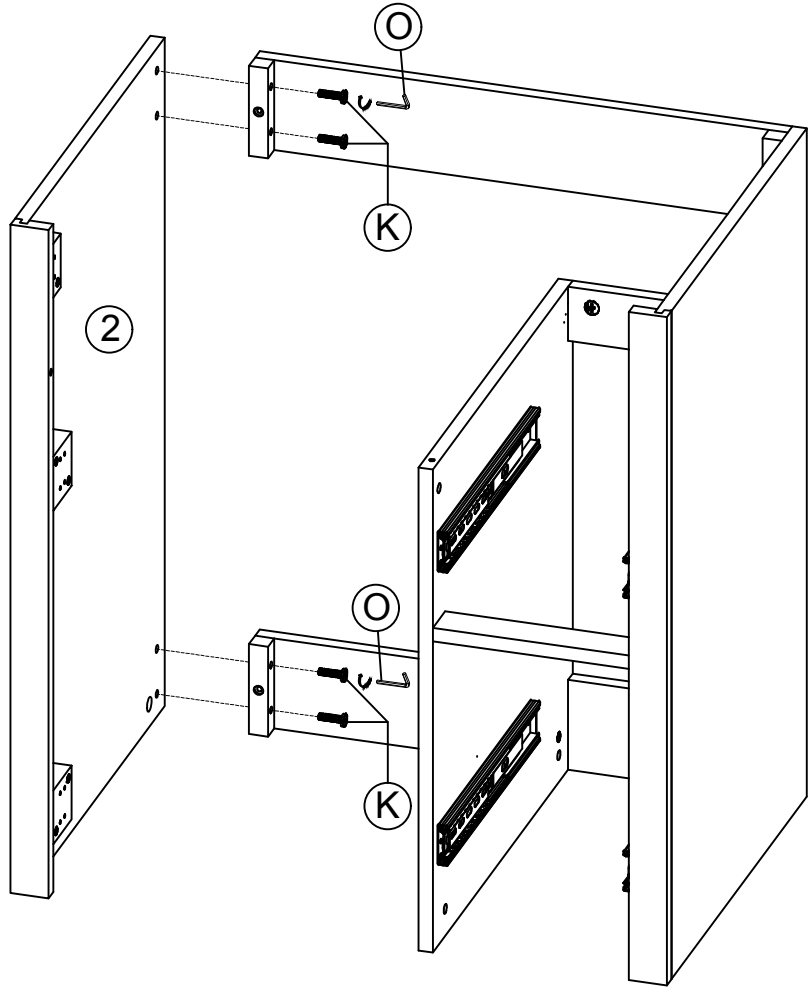


STEP 9




Ⓚ	M6*30MM		4PCS	⓪	L4*58MM		1PC
---	---------	---	------	---	---------	---	-----

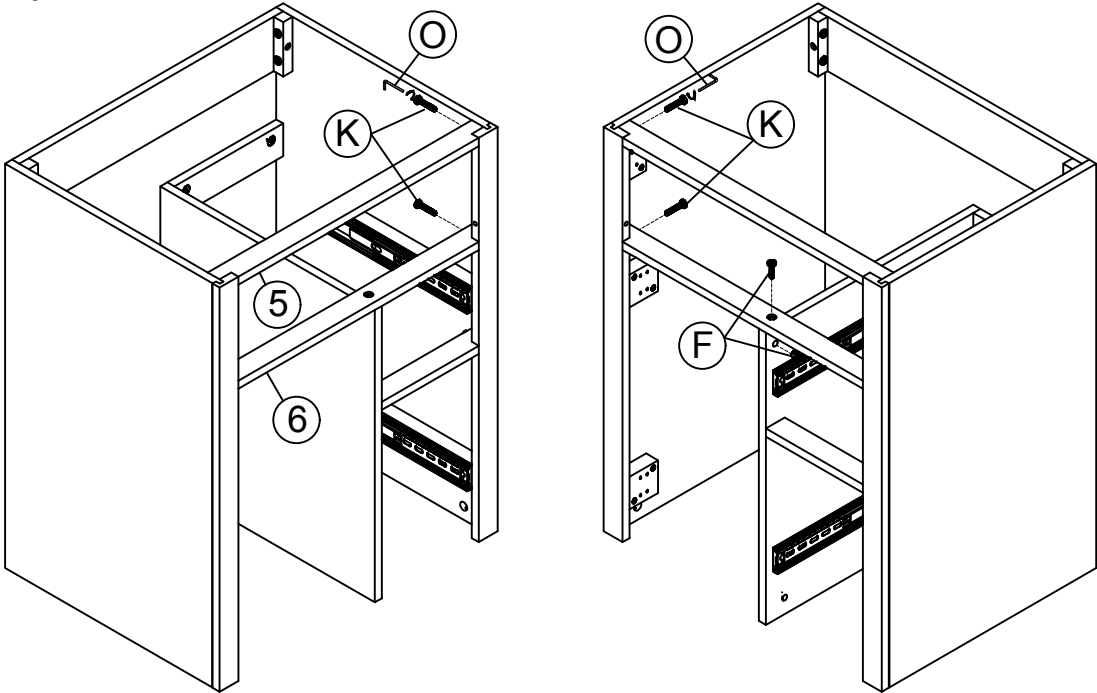
STEP 10



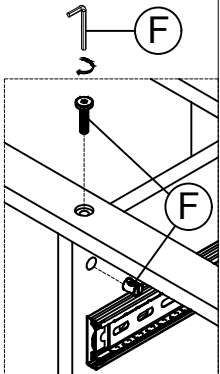

ⓕ	M6*50MM		1SET	Ⓚ	M6*30MM		4PCS	⓪	L4*58MM		1PC
---	---------	---	------	---	---------	---	------	---	---------	---	-----




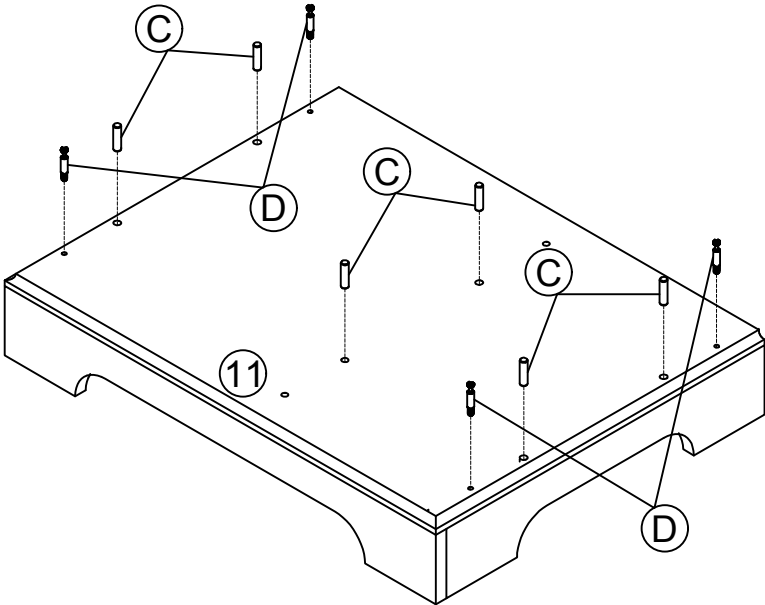


STEP 11




Ⓒ	Ø 8 * 30MM		6PCS	Ⓓ	Ø5*35MM		4PCS
---	------------	---	------	---	---------	---	------

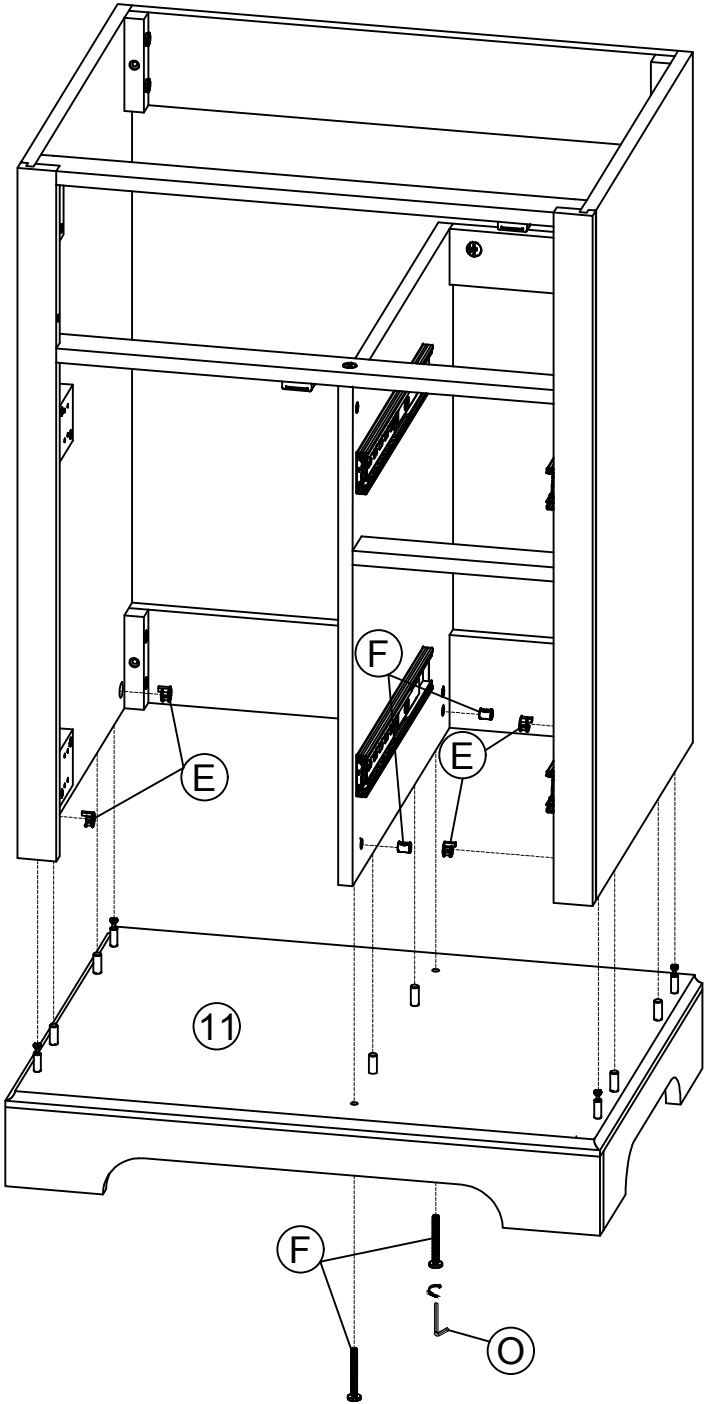

STEP 12




Ⓔ	Ø 15*10MM		4PCS
Ⓕ	M6*50MM		2SETS
⓪	L4*58MM		1PC

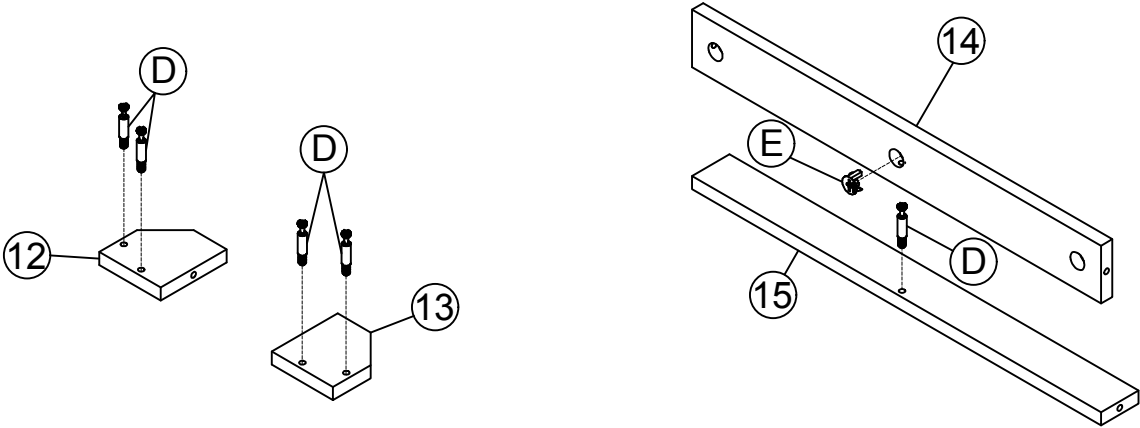STEP 13




Ⓓ	Ø5*35MM		5PCS	Ⓔ	Ø 15*10MM		1PC
---	---------	---	------	---	-----------	---	-----

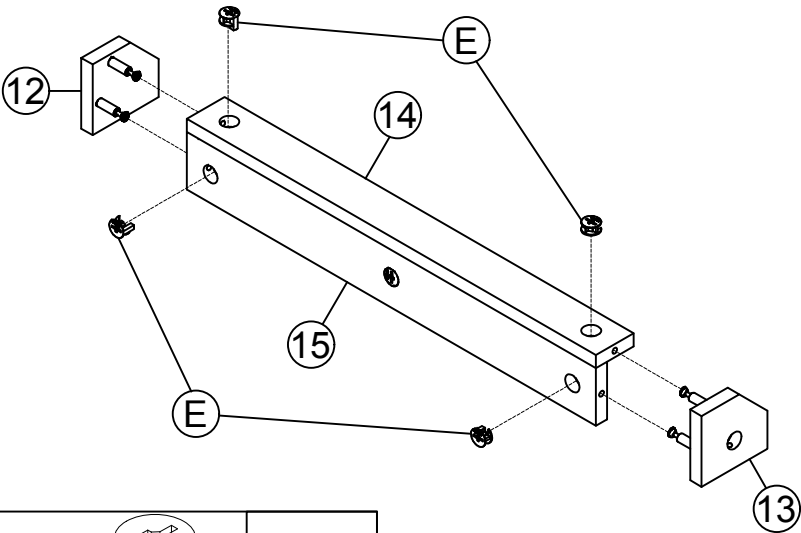


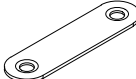
STEP 14





Ⓔ	Ø 15*10MM		4PCS
---	-----------	---	------

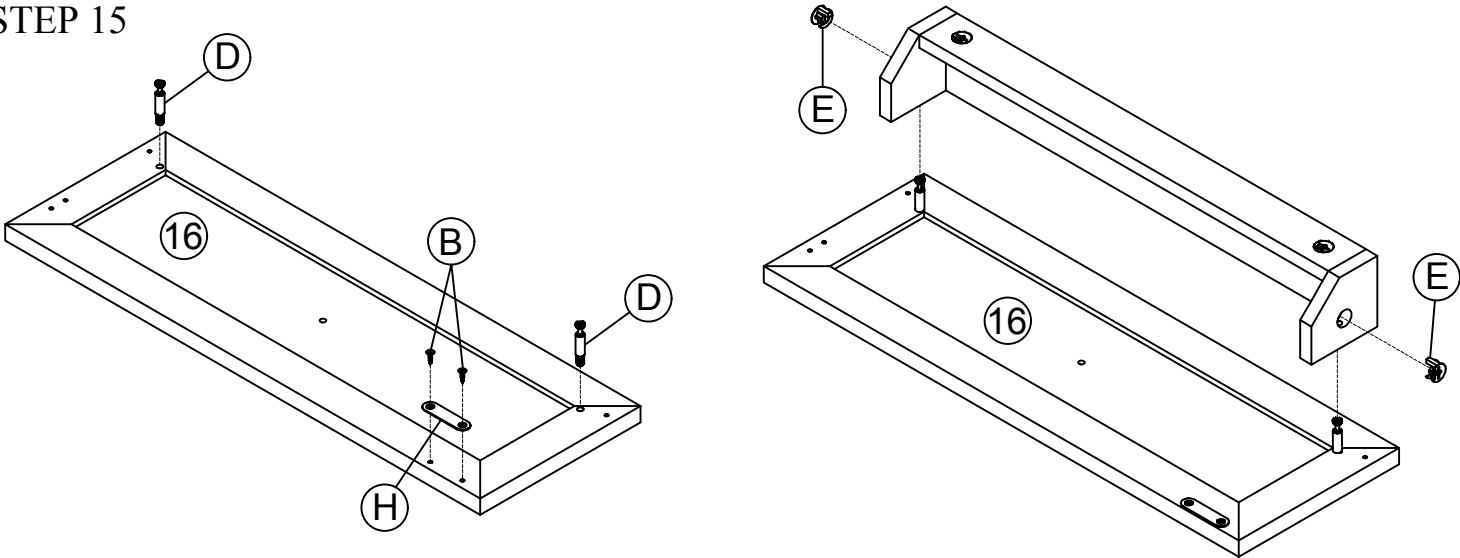STEP 15





Ⓑ	3.5*12MM		2PCS	Ⓔ	Ø 15*10MM		2PCS
Ⓓ	Ø5*35MM		2PCS	Ⓕ	L 45MM		1PC

STEP 16

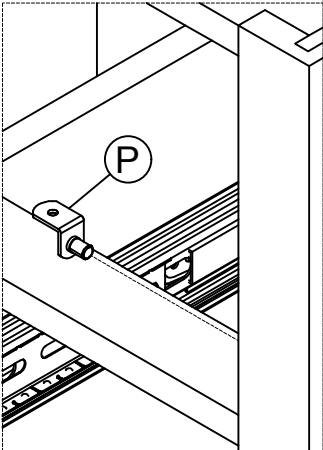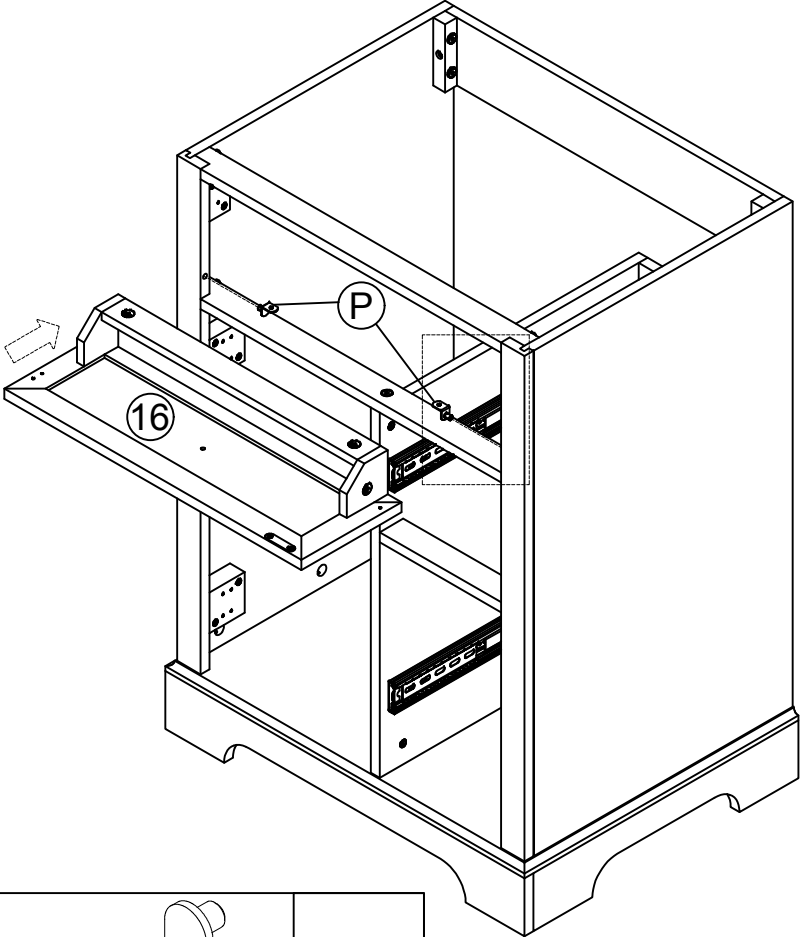



<p>Ⓟ</p>	<p>L 15MM</p>		<p>2PCS</p>
----------	---------------	--	-------------



STEP 17

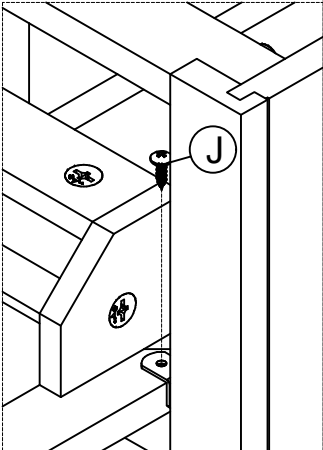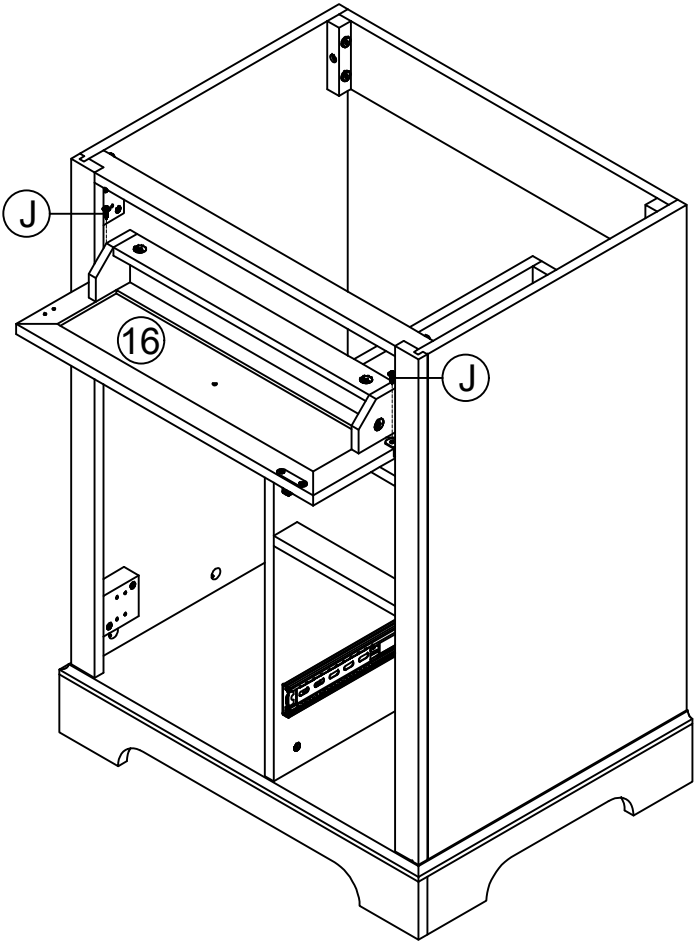




<p>Ⓟ</p>	<p>3.5*12MM</p>		<p>2PCS</p>
----------	-----------------	---	-------------



STEP 18

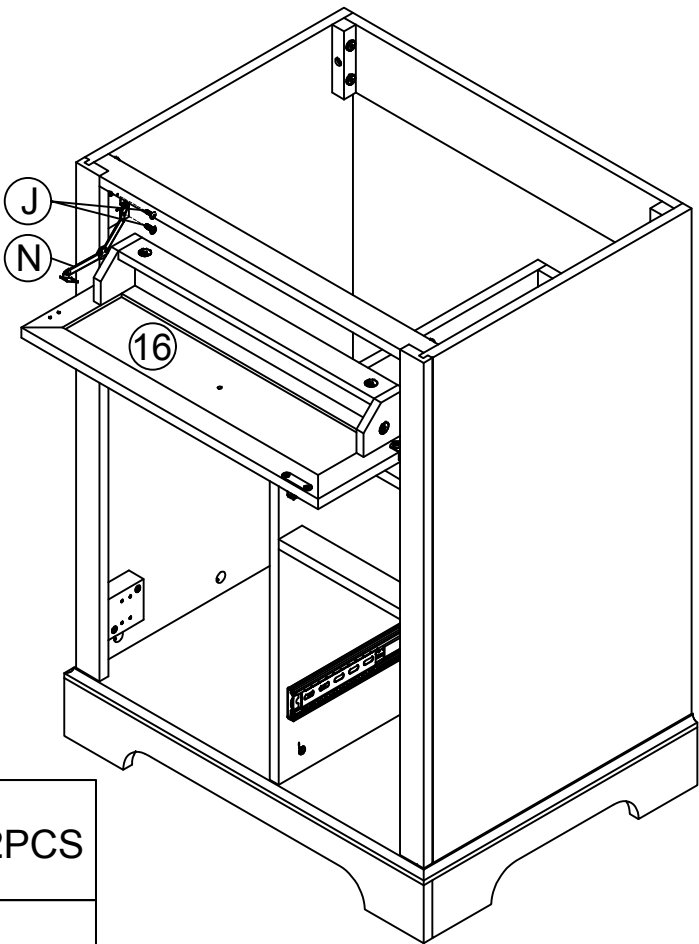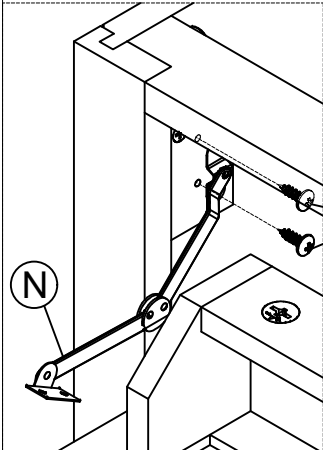


J	3.5*12MM		2PCS
N	STAY ARM		1PC


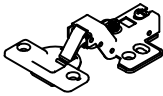

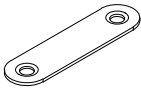
STEP 19

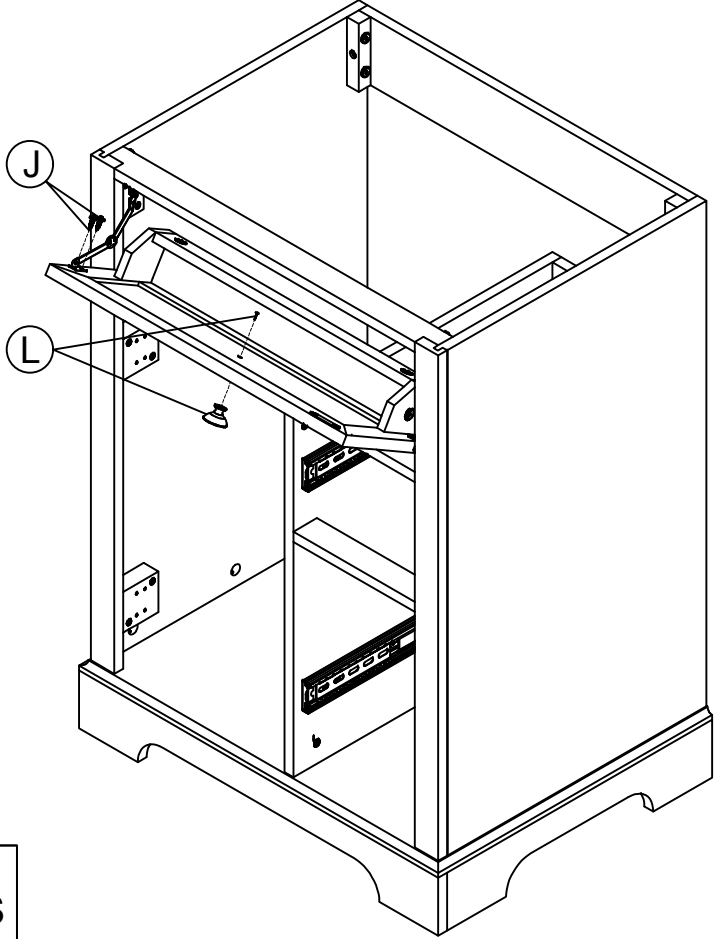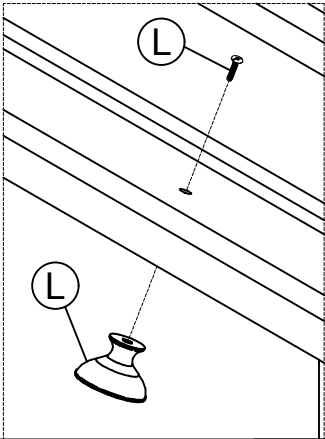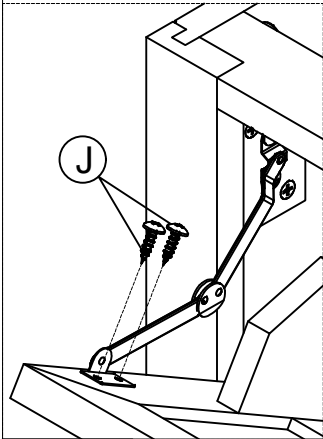


J	3.5*12MM		2PCS
L	M4*20MM HANDLE		1SET

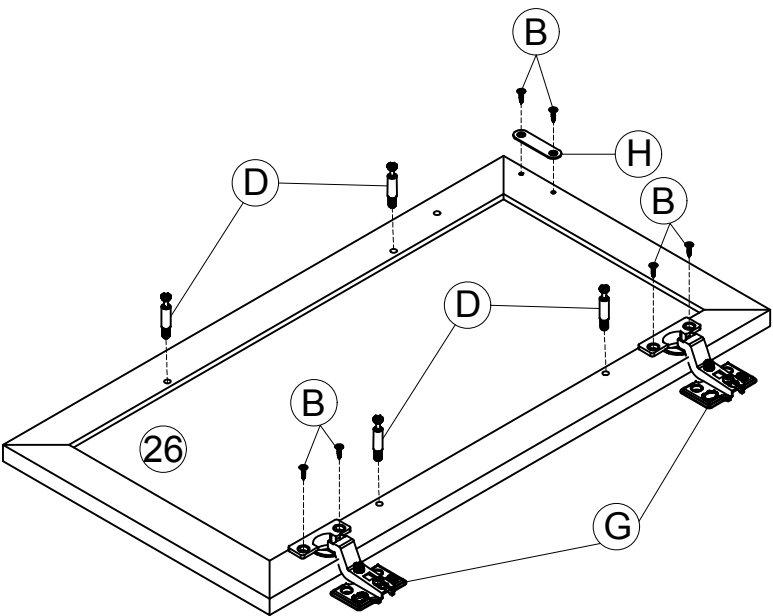


STEP 20




B	3.5*10MM		6PCS	G	HINGES		2PCS
D	Ø5*35MM		4PCS	H	L 45MM		1PC

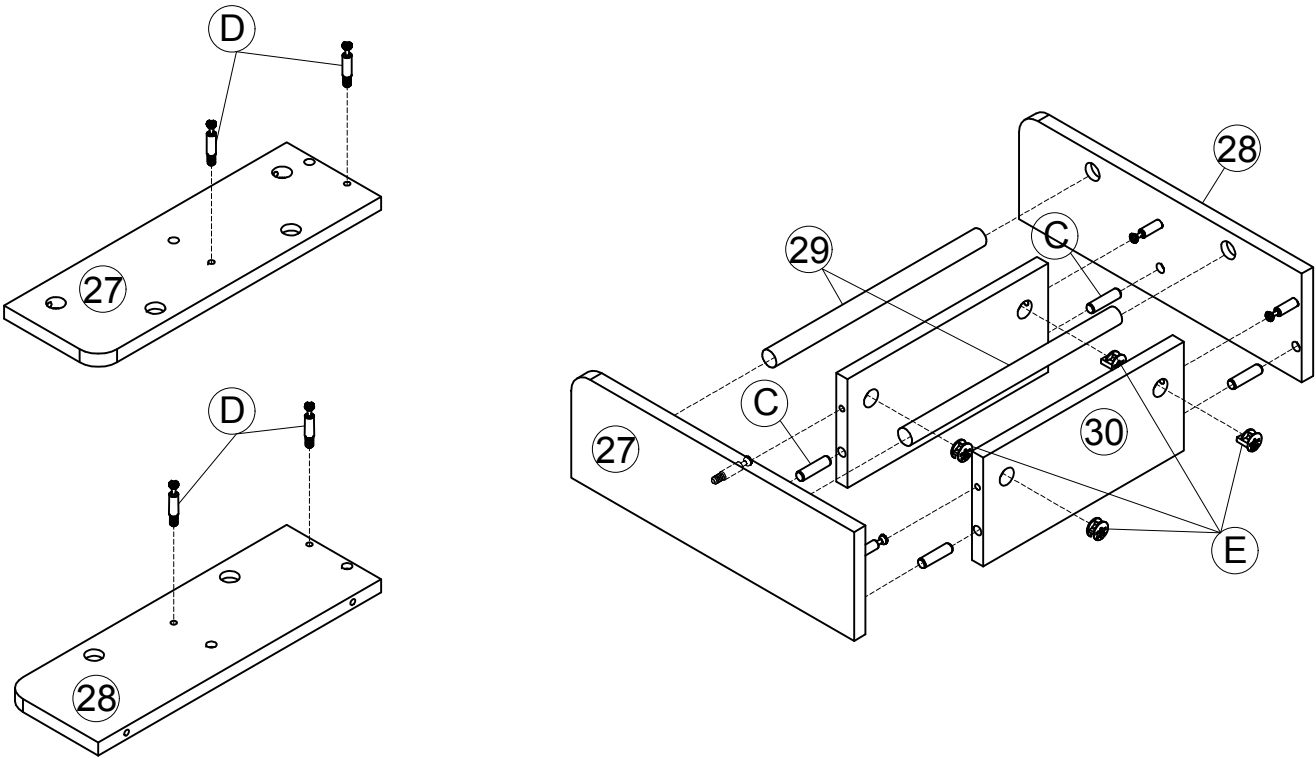STEP 21



C	Ø 8 * 30MM		4PCS	E	Ø 15*10MM		4PCS
D	Ø5*35MM		4PCS				






STEP 22

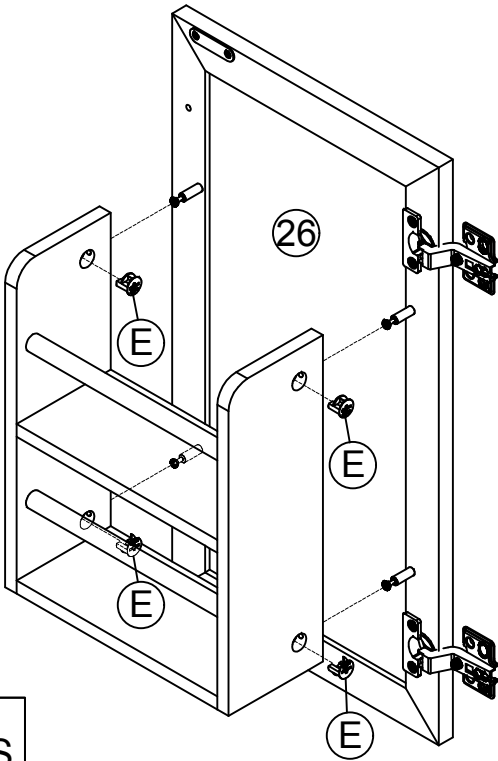

(E)	Ø 15*10MM		4PCS
-----	-----------	---	------



STEP 23

Three-way adjustable hinge for perfectly aligned doors
1.TO ADJUST DOOR FORWARD OR BACKWARD.
2.TO ADJUST DOOR TO RIGHT ORTO LEFT.
3.TO ADJUST DOOR UP OR DOWN.

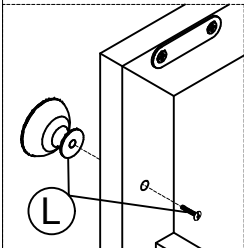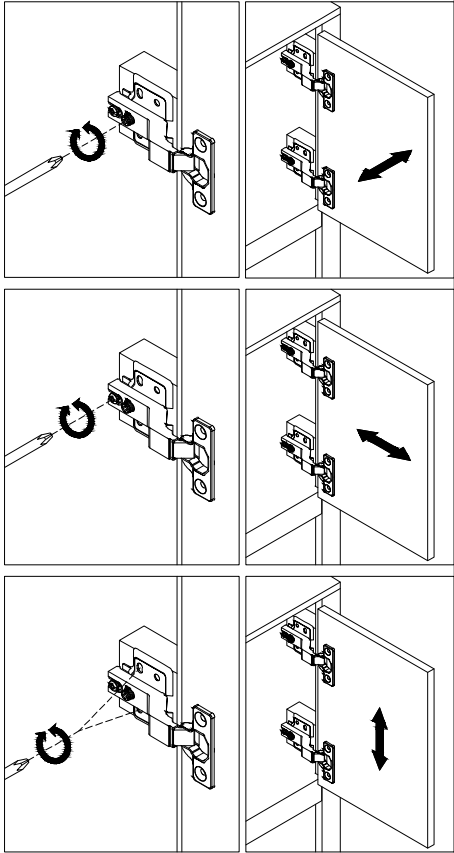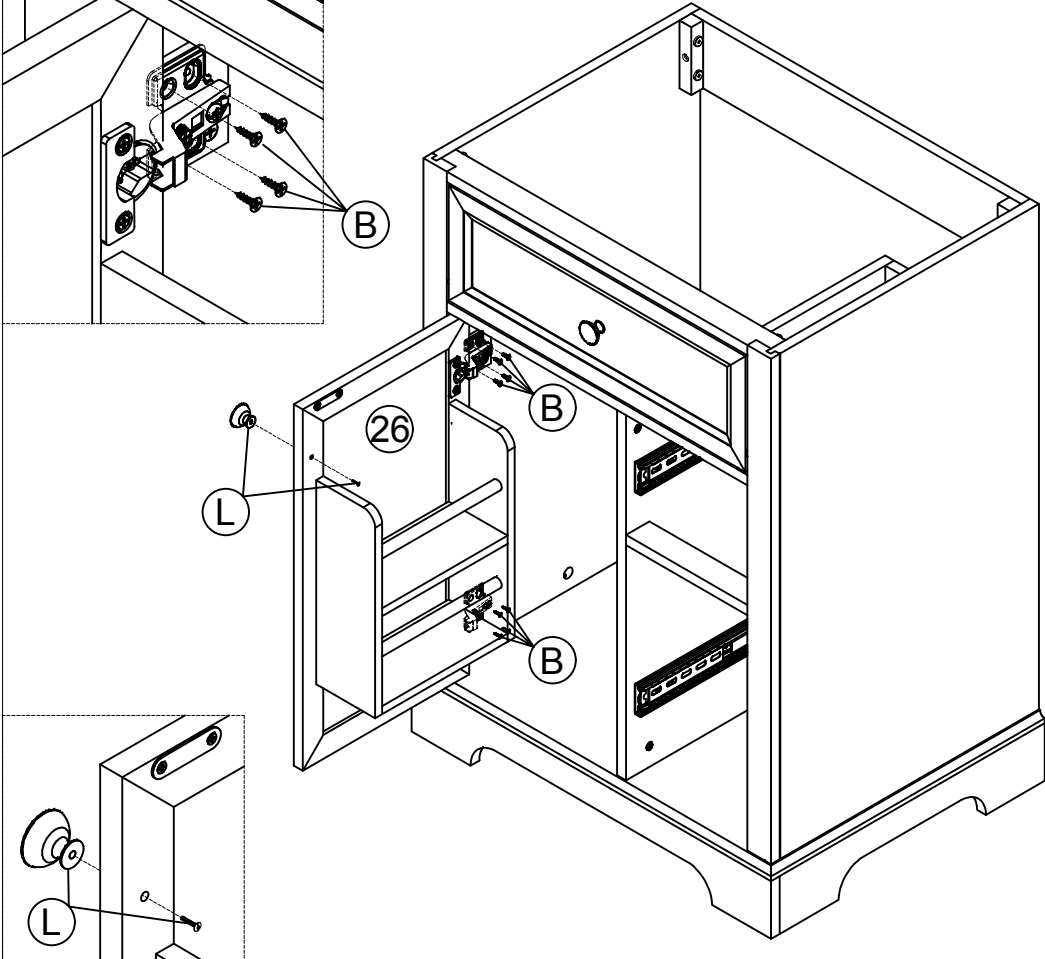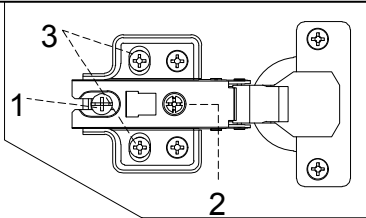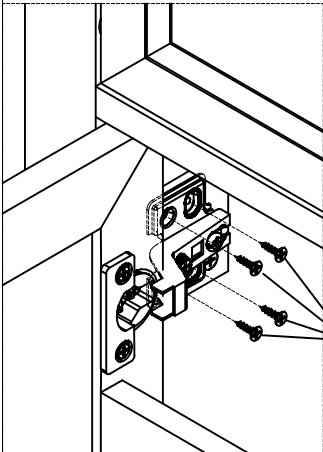



(B)	3.5*12MM		8PCS	(L)	M4*20MM HANDLE		1SET
-----	----------	---	------	-----	-------------------	---	------

STEP 24

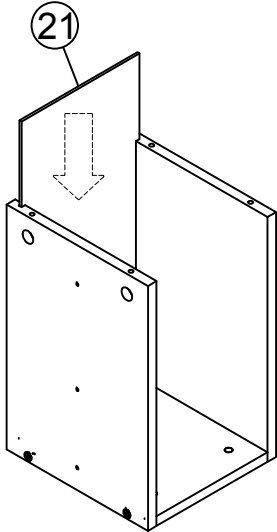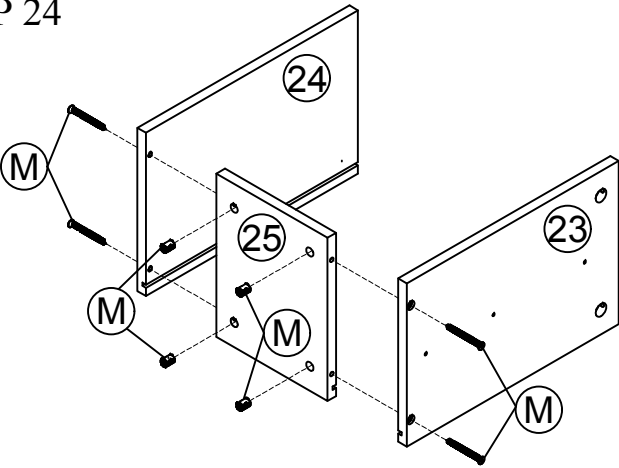

(M)	M4*50MM		4SETS
-----	---------	---	-------




STEP 25

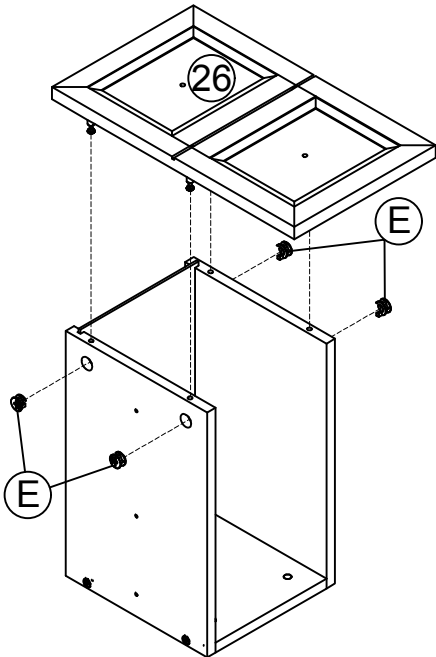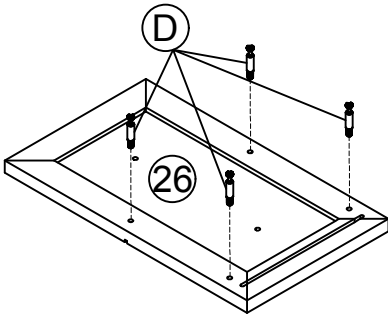


(D)	Ø5*35MM		4PCS
-----	---------	---	------

(E)	Ø 15*10MM		4PCS
-----	-----------	---	------



STEP 26

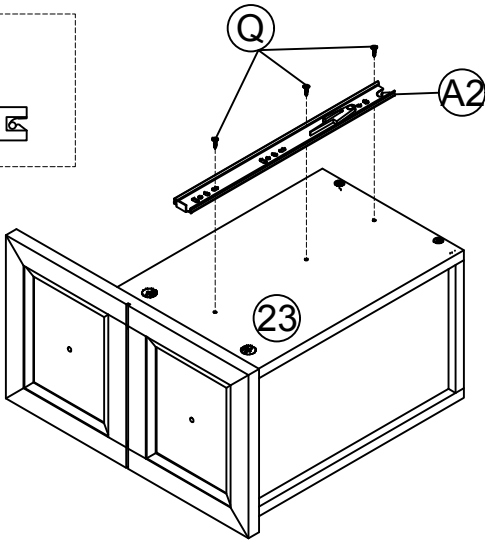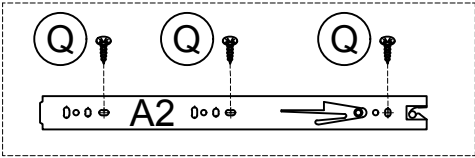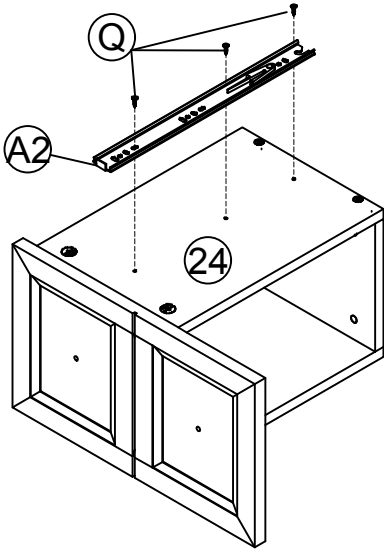

(A)	A2 : D300MM		2PCS
-----	-------------	---	------



(Q)	3.5*10MM		6PCS
-----	----------	---	------

STEP 27

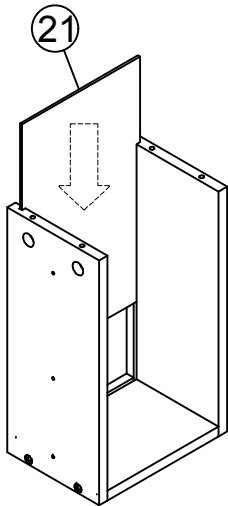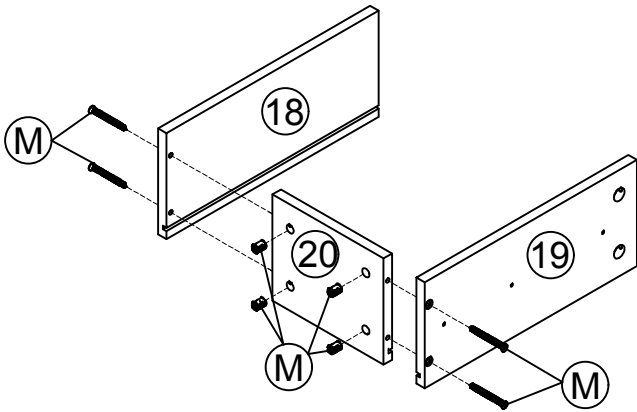




(M)	M4*50MM		4SETS
-----	---------	--	-------

STEP 28

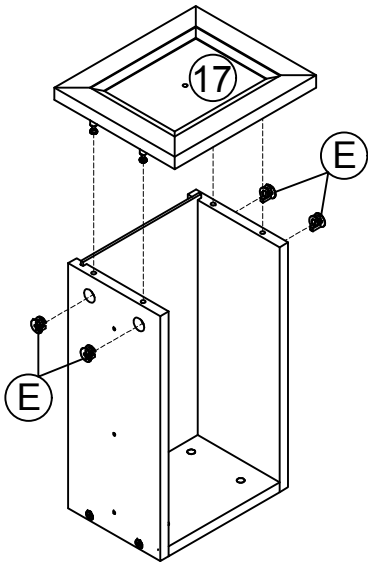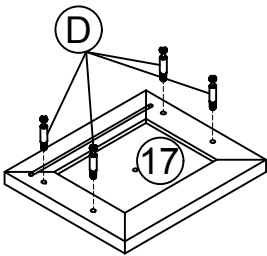





(D)	Ø5*35MM		4PCS	(E)	Ø 15*10MM		4PCS
-----	---------	--	------	-----	-----------	--	------

STEP 29

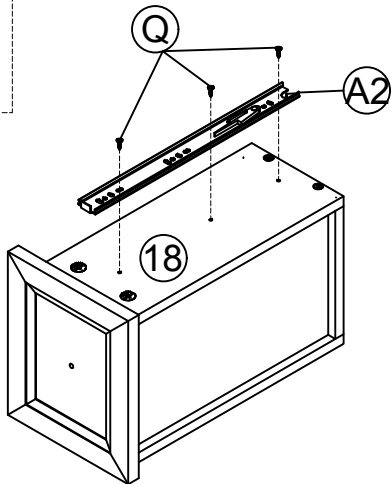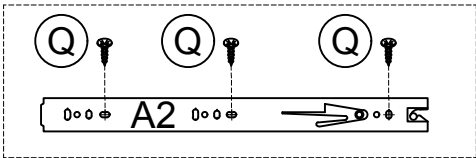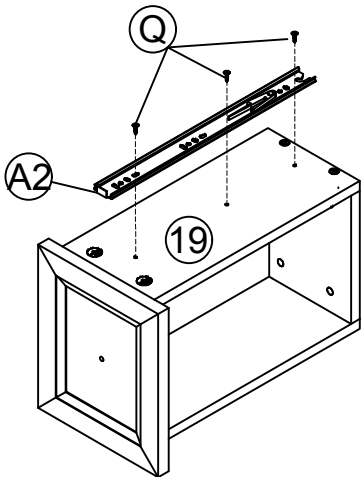



(A)	A2 : D300MM		2PCS	(Q)	3.5*10MM		6PCS
-----	-------------	--	------	-----	----------	--	------

STEP 30

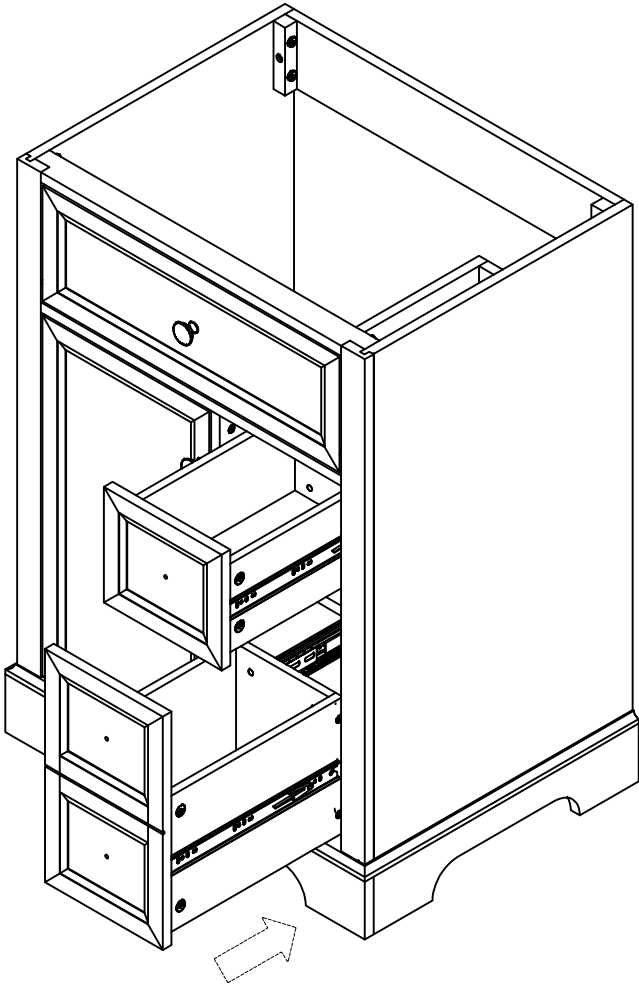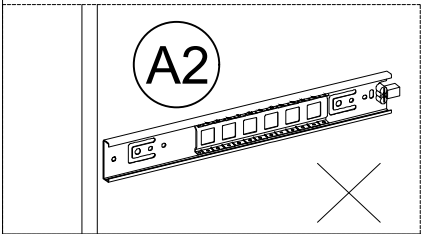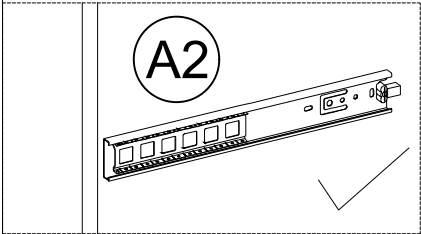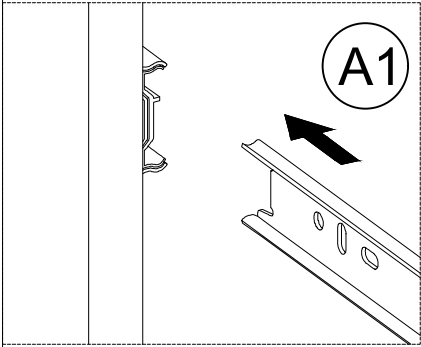


STEP 31

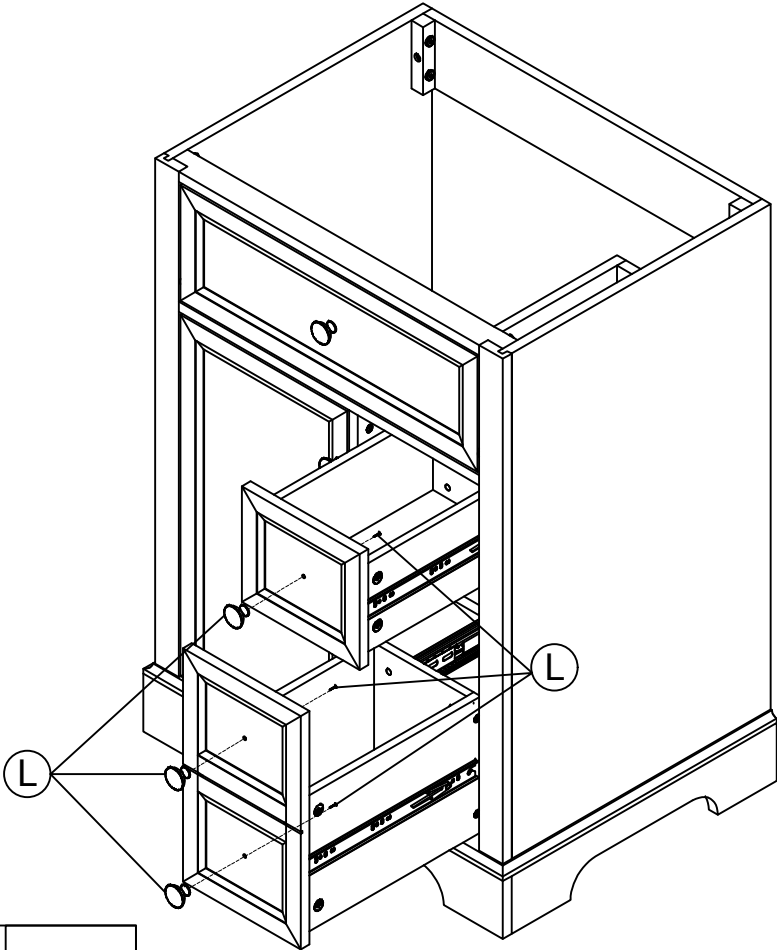


(L)	M4*20MM HANDLE		3SETS
-----	-------------------	---	-------

STEP 32


To install the Top (1) to the vanity (2).
Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.

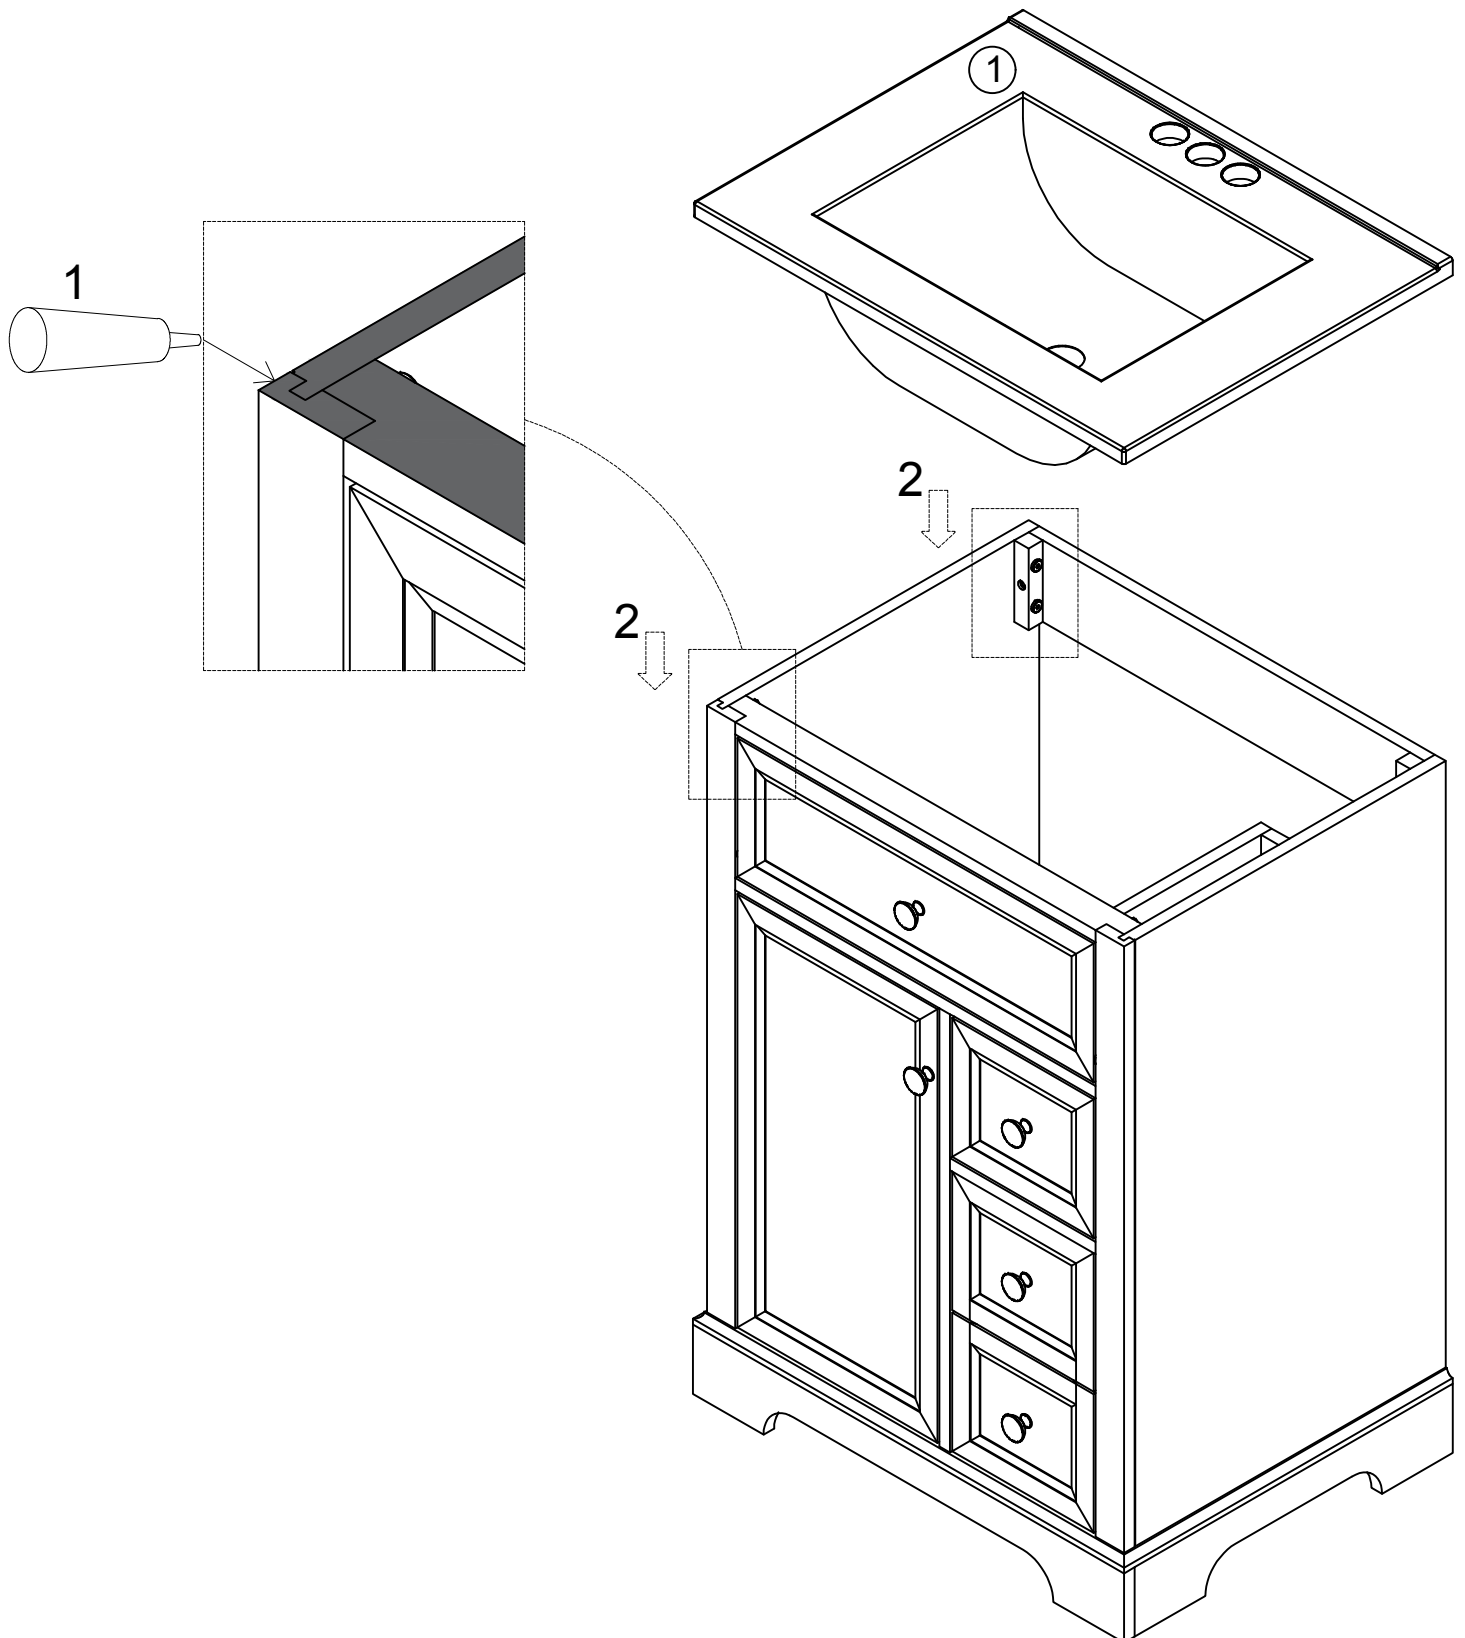

STEP 33

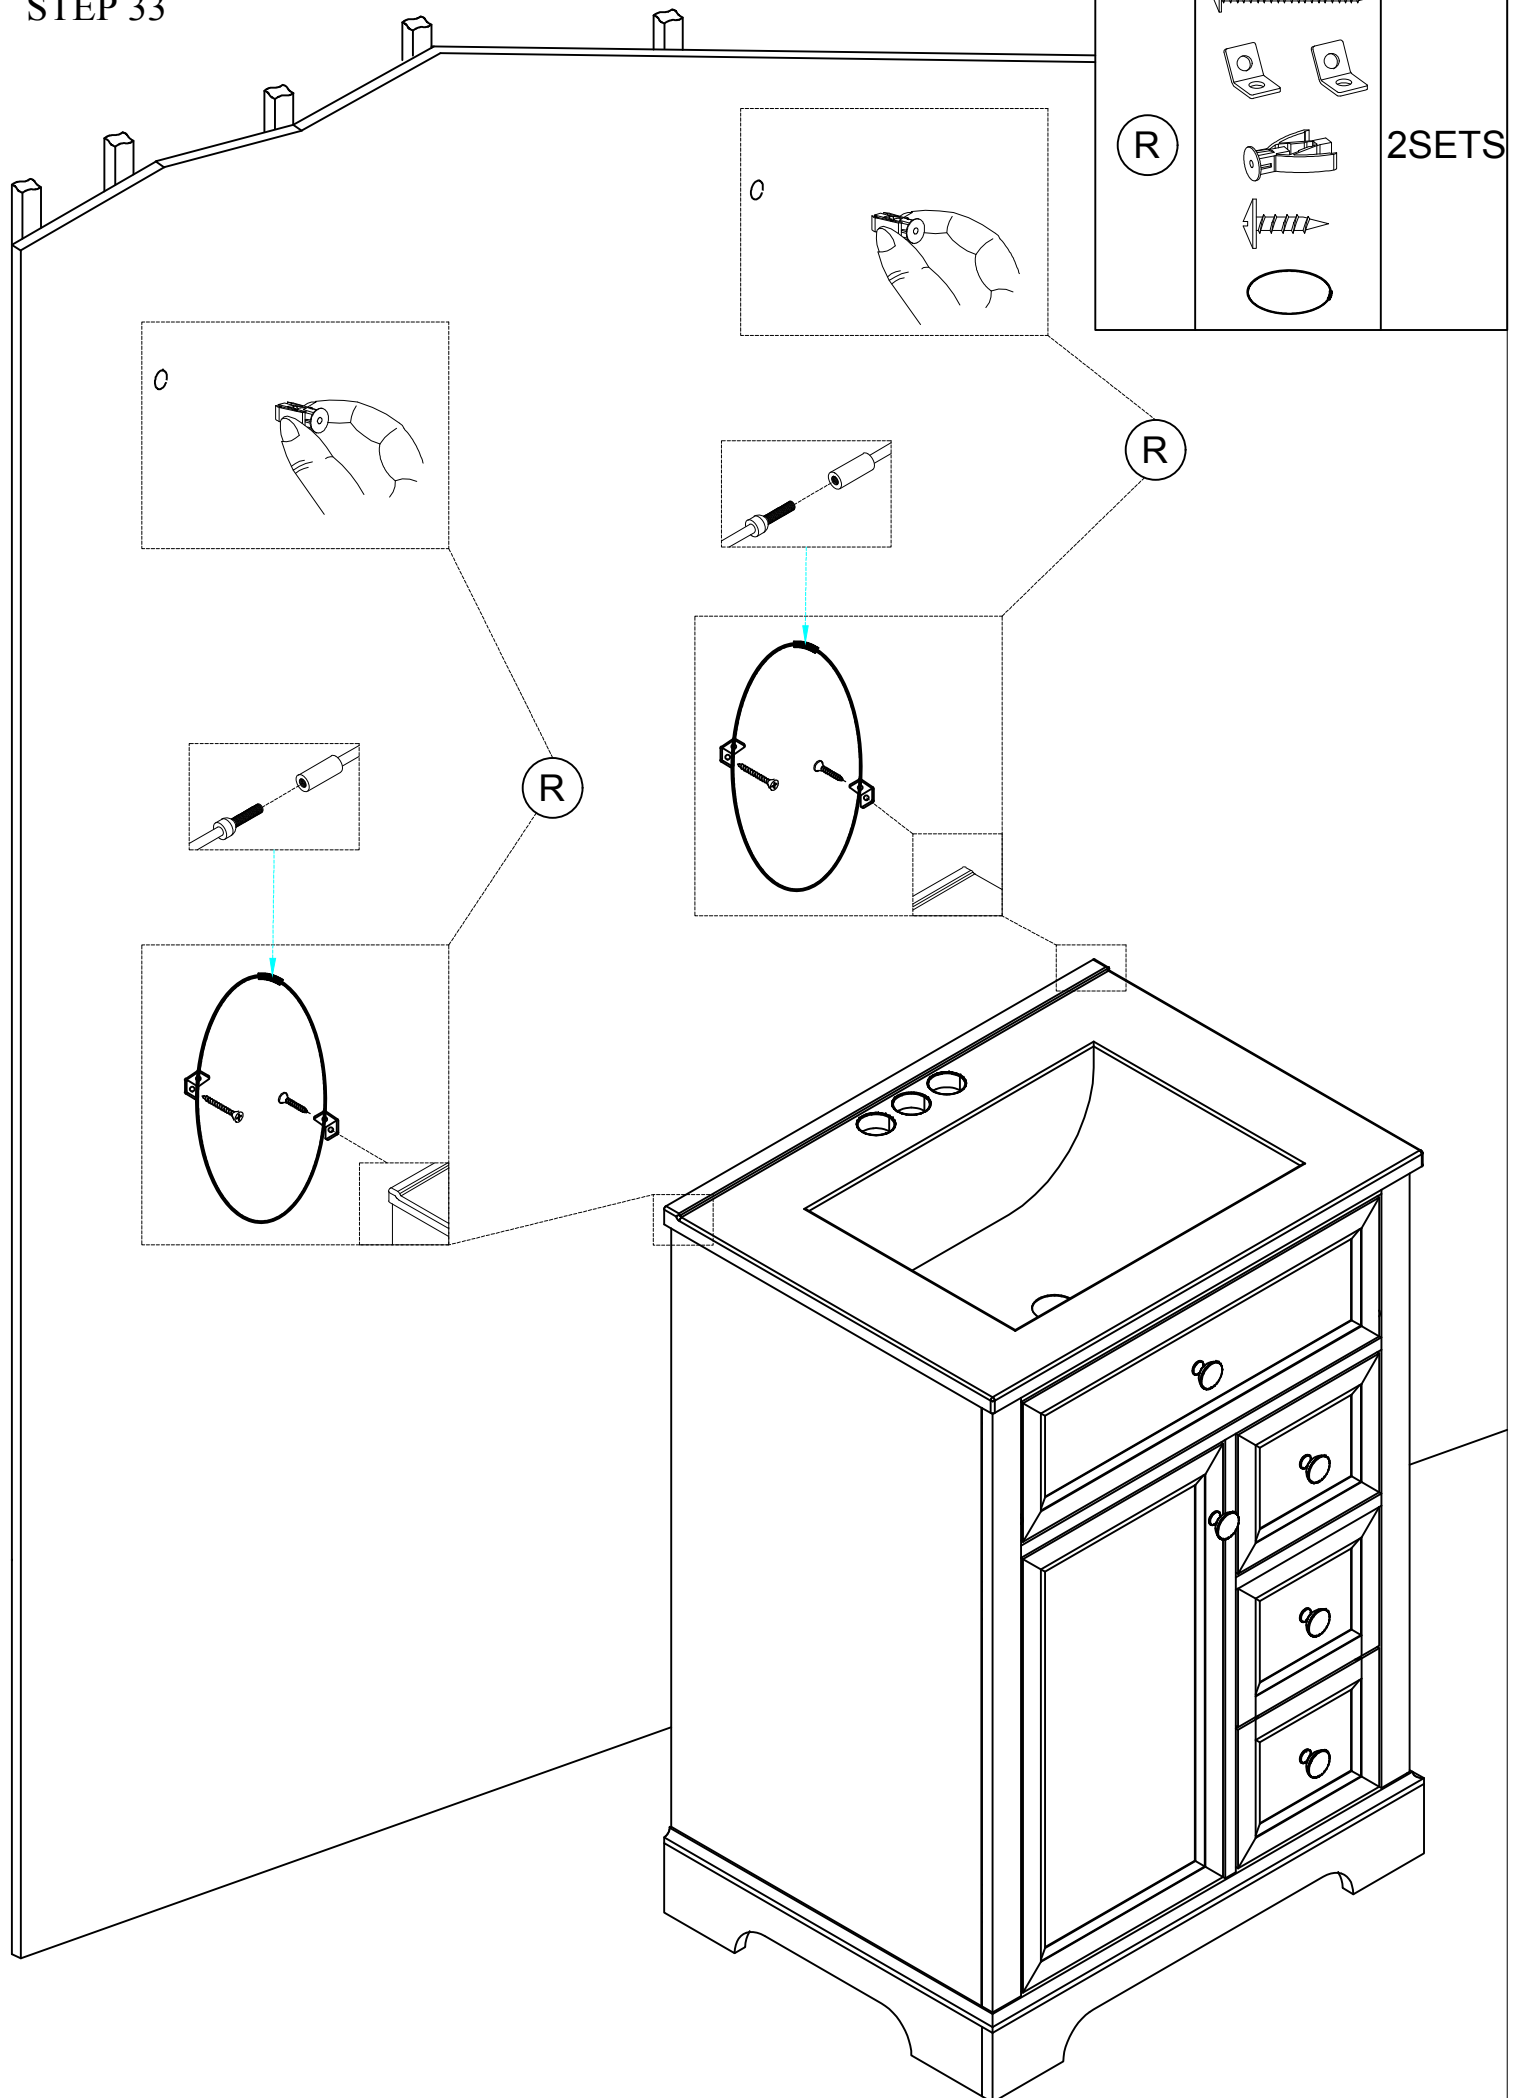

HINGE ADJUSTMENTS

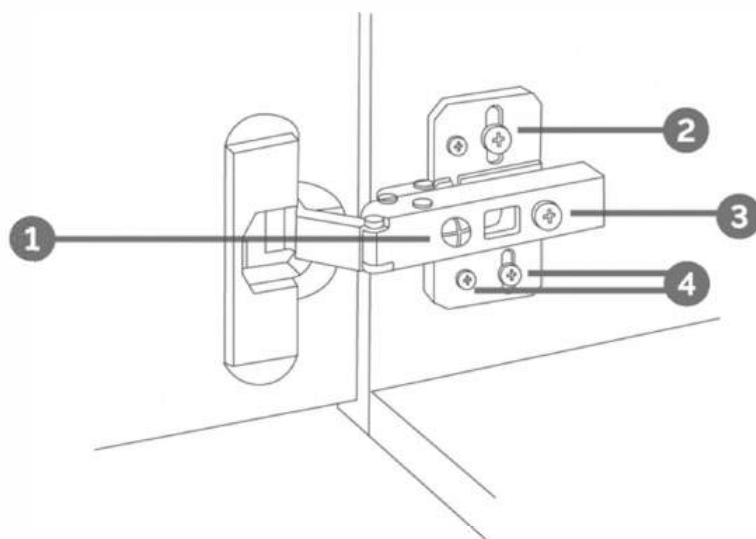


1 Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

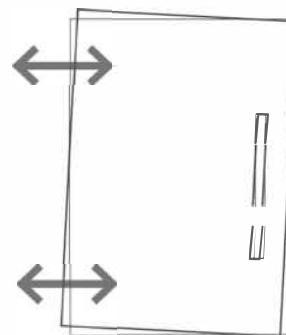


2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

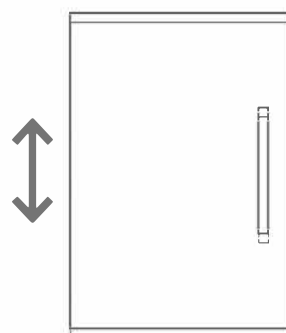

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

