






N843P254845W

Product manual

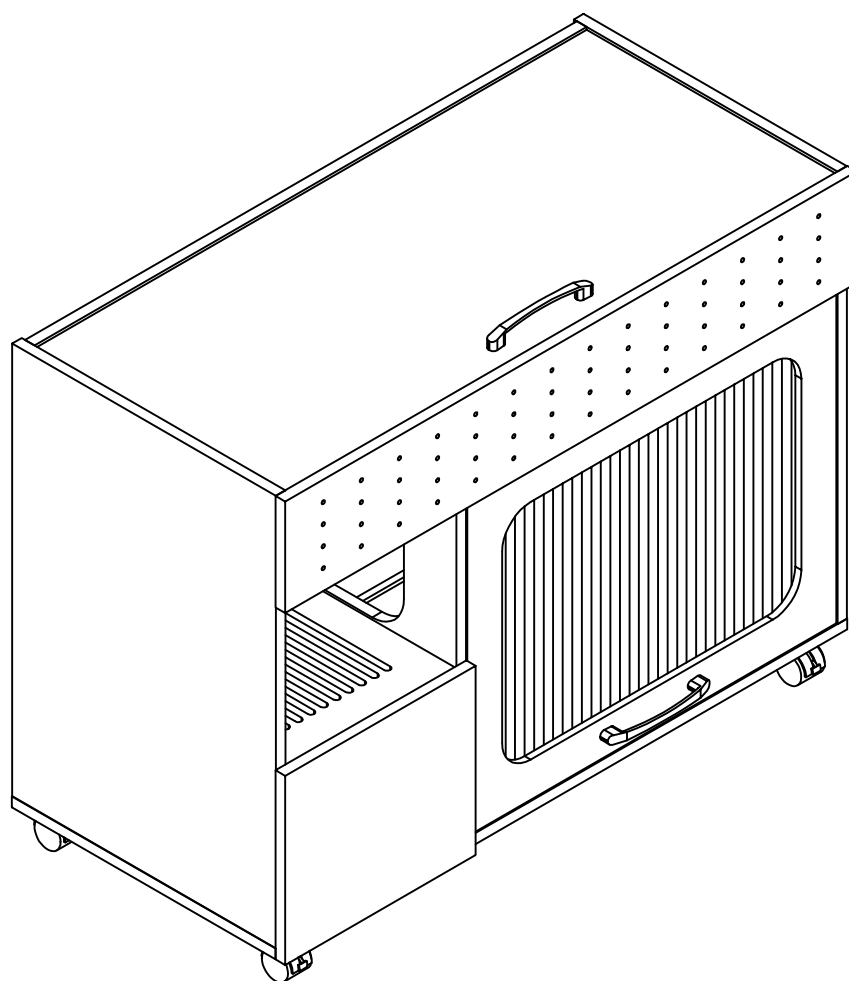

Importeur	Decobus Handel GmbH
Adresse	Innungsstraße 9, 21244 Buchholz, Deutschland
URL	https://www.decobusgroup.de
Hersteller	Sichuan Subei E-commerce Co., Ltd
Adresse	Floor 3, Room 301, Building B1, Minghu Science and Technology Park, No. 99, Chenke Street, in the middle of Chenxi Avenue, Chongzhou City, Chengdu
Email/URL	lvnawang2010@126.com
EC REP	Decobus Handel GmbH Innungsstraße 9, 21244 Buchholz, Deutschland https://www.decobusgroup.de

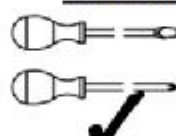 2PERS	 45 MIN	Tool Required Not Provided  
---	--	---



Warning: Please read these instructions fully before starting assembly. Check you have all the components and tools listed on pages. Keep the instructions for later reference. Parts of the assembly will be easier with 2 people. Seek professional assistance if necessary.


Warning: Please place all parts on a flat surface. Place a soft blanket or similar underneath to protect against scratches or stains. Avoid dragging or sliding components across the floor.

Warning: Regularly check all fittings and fastenings to ensure they are secure and to prevent accidents. If any parts are missing, broken, damaged, or worn, discontinue use of the product until repairs have been made using factory authorized parts.













Warning: Do not allow children to climb on the furniture as this may result in tipping and serious personal injury. Assemble the furniture away from the reach of children.

Warning: Do not place furniture close to fire sources or high-temperature objects to avoid the risk of fire. Do not place furniture in damp environments to prevent material damage.


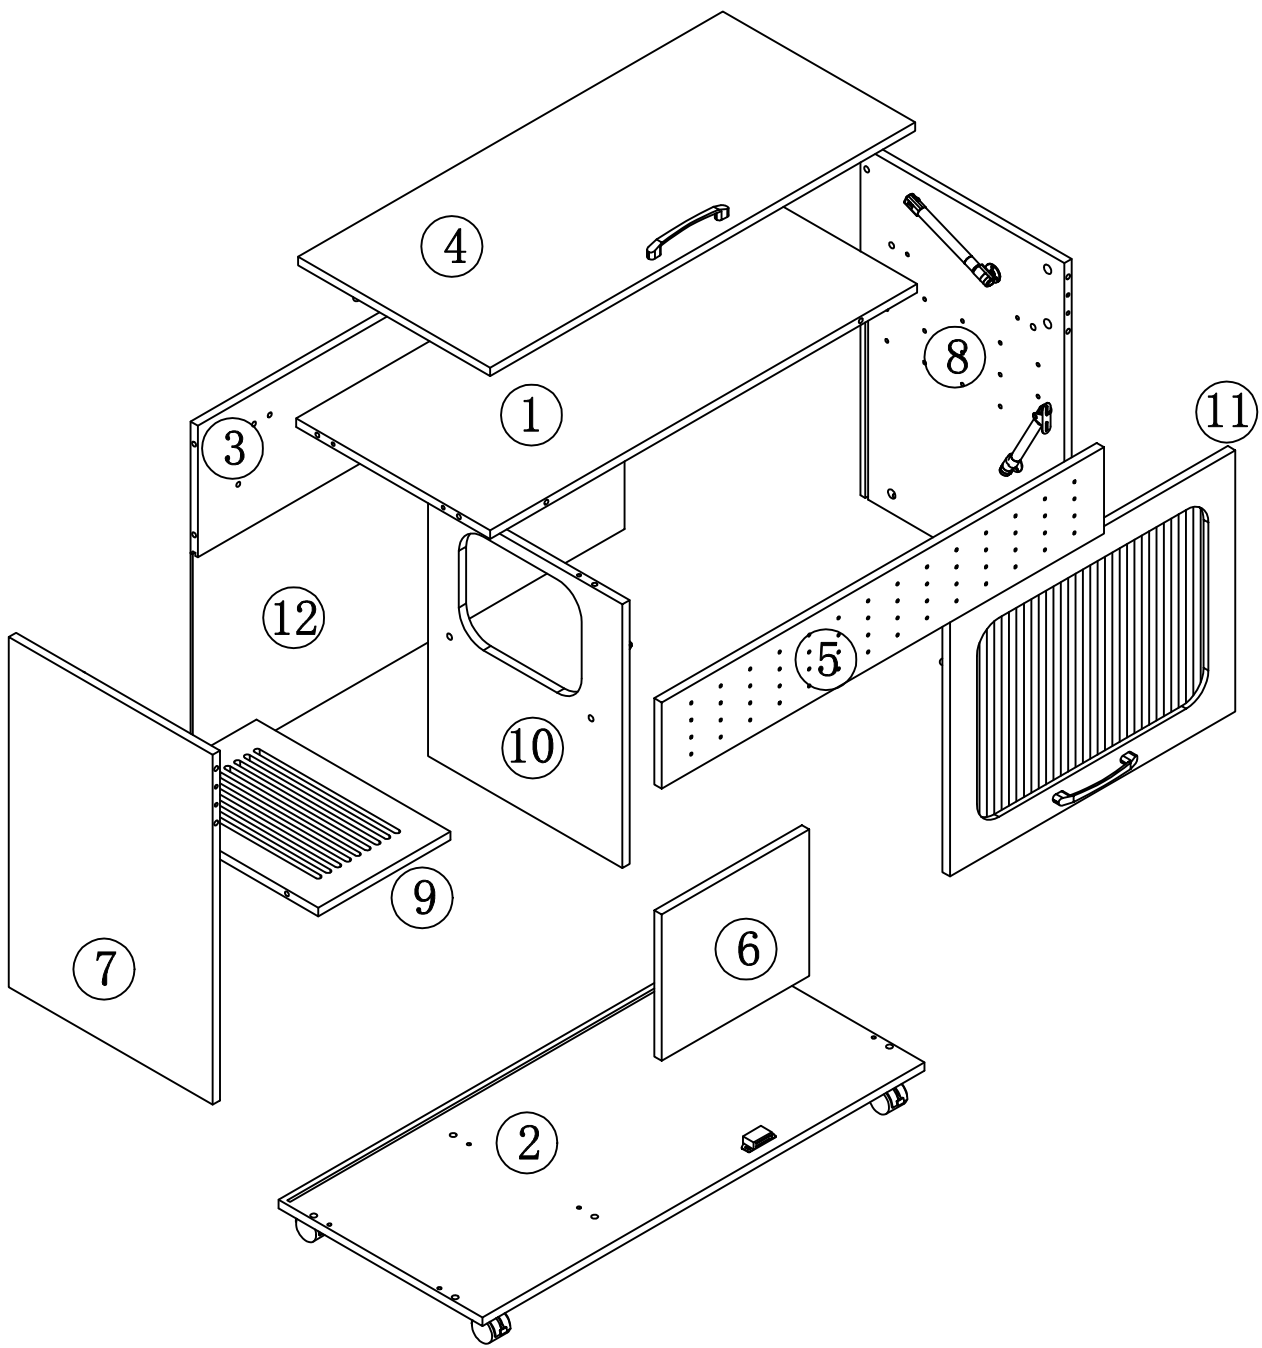








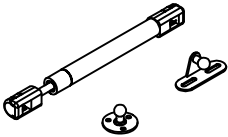



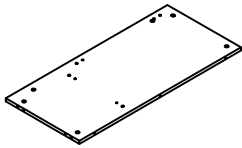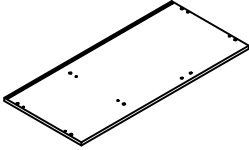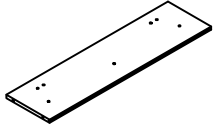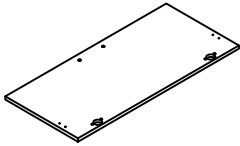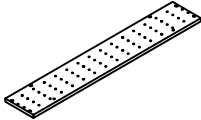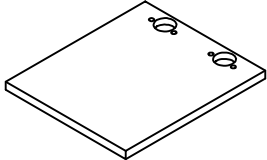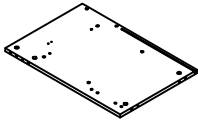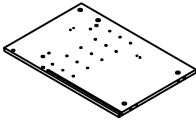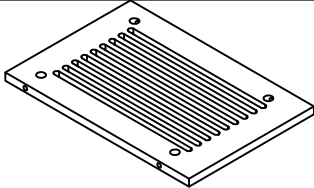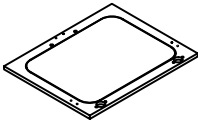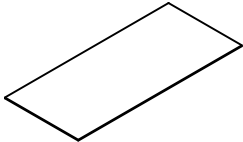

Warning: Clean furniture with a damp cloth or alcohol, avoid using cleaning agents containing corrosive chemicals.

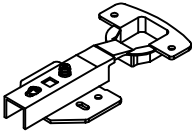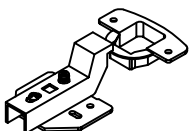


Parts List for
N843P254845W



		
①x1pc	②x1pc	③x1pc
		
④x1pc	⑤x1pc	⑥x2pcs
		
⑦x1pc	⑧x1pc	⑨x1pc
		
⑩x1pc	⑪x1pc	⑫x1pc

Hardware List for
N843P254845W


		 M6*40mm	 Φ15*12mm	 Φ6*30mm
Ⓐ x2pcs	Ⓑ x4pcs	Ⓒ x26pcs	Ⓓ x26pcs	Ⓔ x16pcs
 M6*18			 M3.5*14mm	 H57mm
Ⓕ x2pcs	Ⓖ x1pc	Ⓗ x3pcs	Ⓘ x82pcs	Ⓙ x4pcs
	 128	 M4*16mm	 Φ20mm	
Ⓚ x4pcs	Ⓛ x2pcs	Ⓜ x4pcs	Ⓝ x30pcs	Ⓟ x6pcs
				
Ⓟ x1pc				

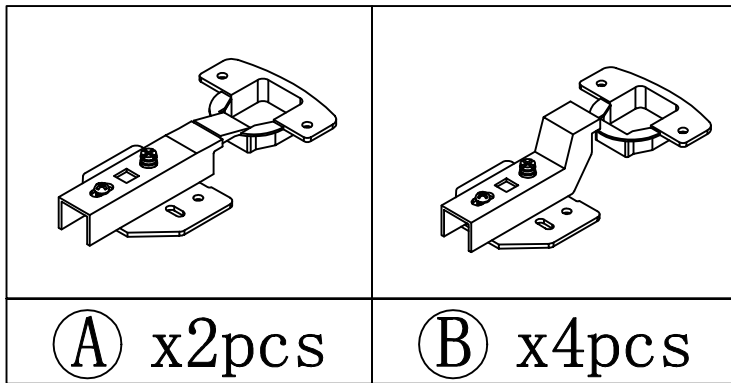

NOTE-1: Please note that the shapes of fittings A and B are similar. Please install according to the instructions and distinguish them!

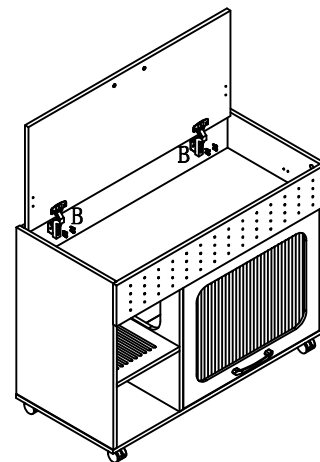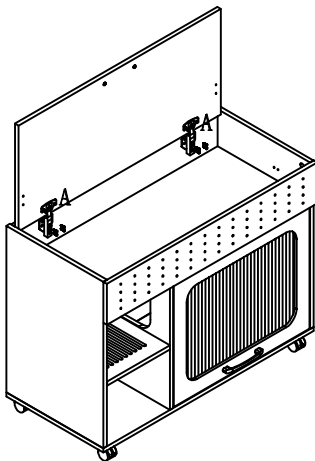


NOTE-2: Please note that this product contains multiple fittings. When attaching door panels and side panels, be sure to: Use Type A. Using the wrong fitting may result in damage to the plate parts

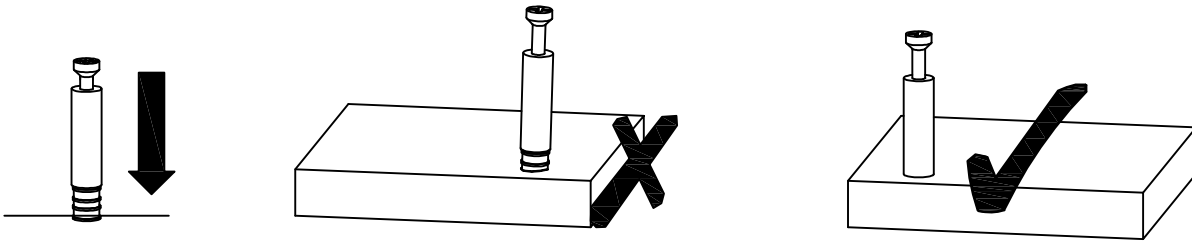

NOTE-3:

QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten

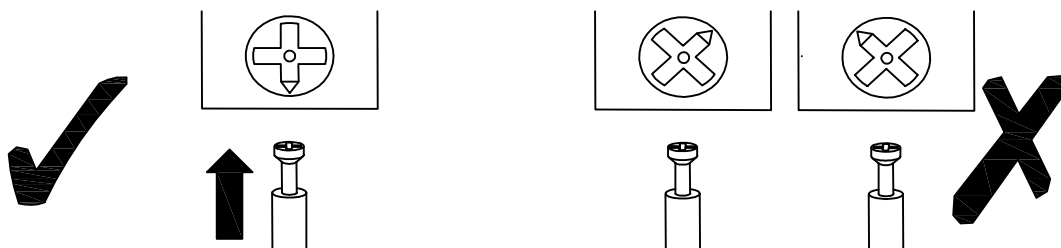


NOTE-4:


CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

NOTE-5:


Quickfit head should be in the centre of the cam lock when the two panels are joined.
Camlock should be inserted before quickfit.

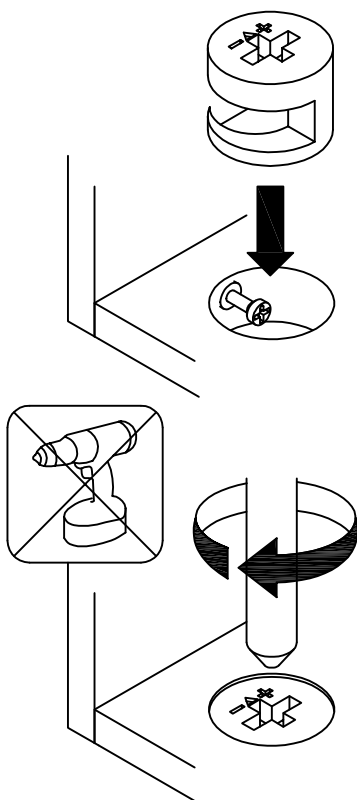


Step 1

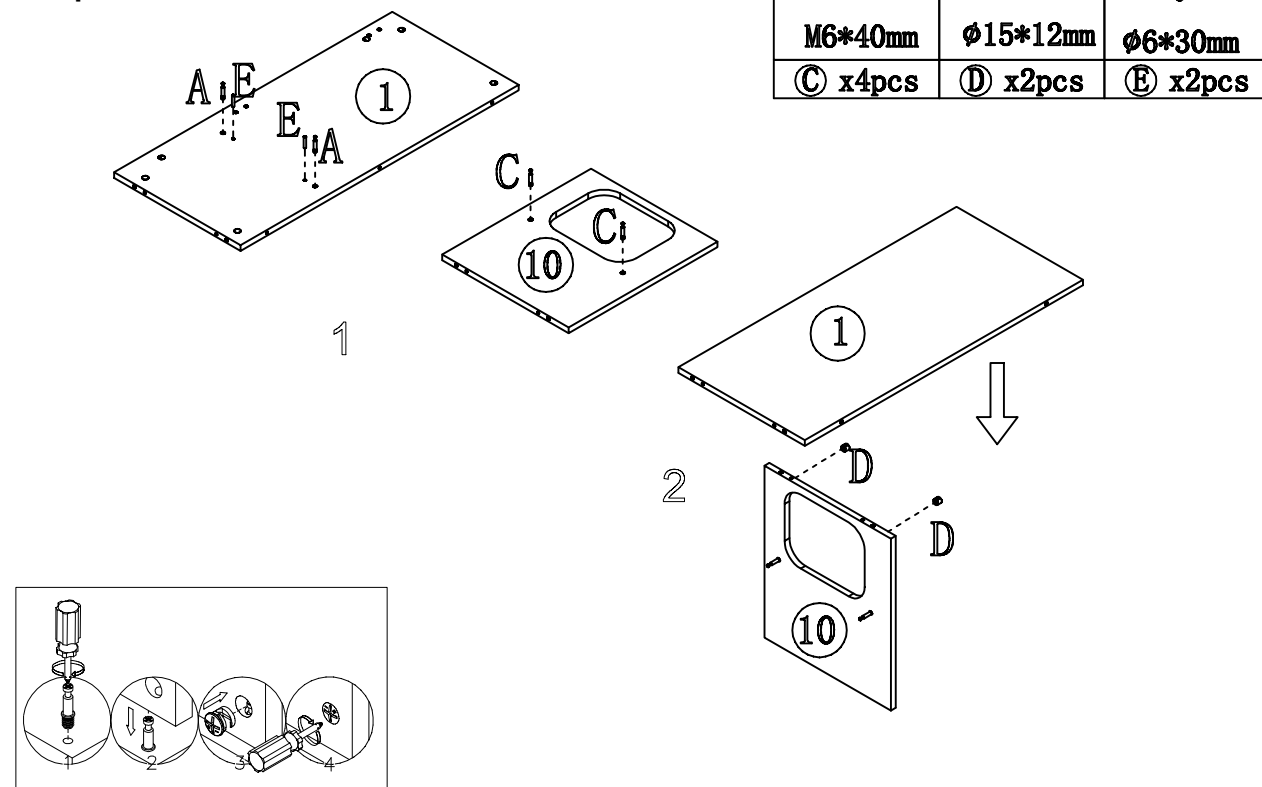

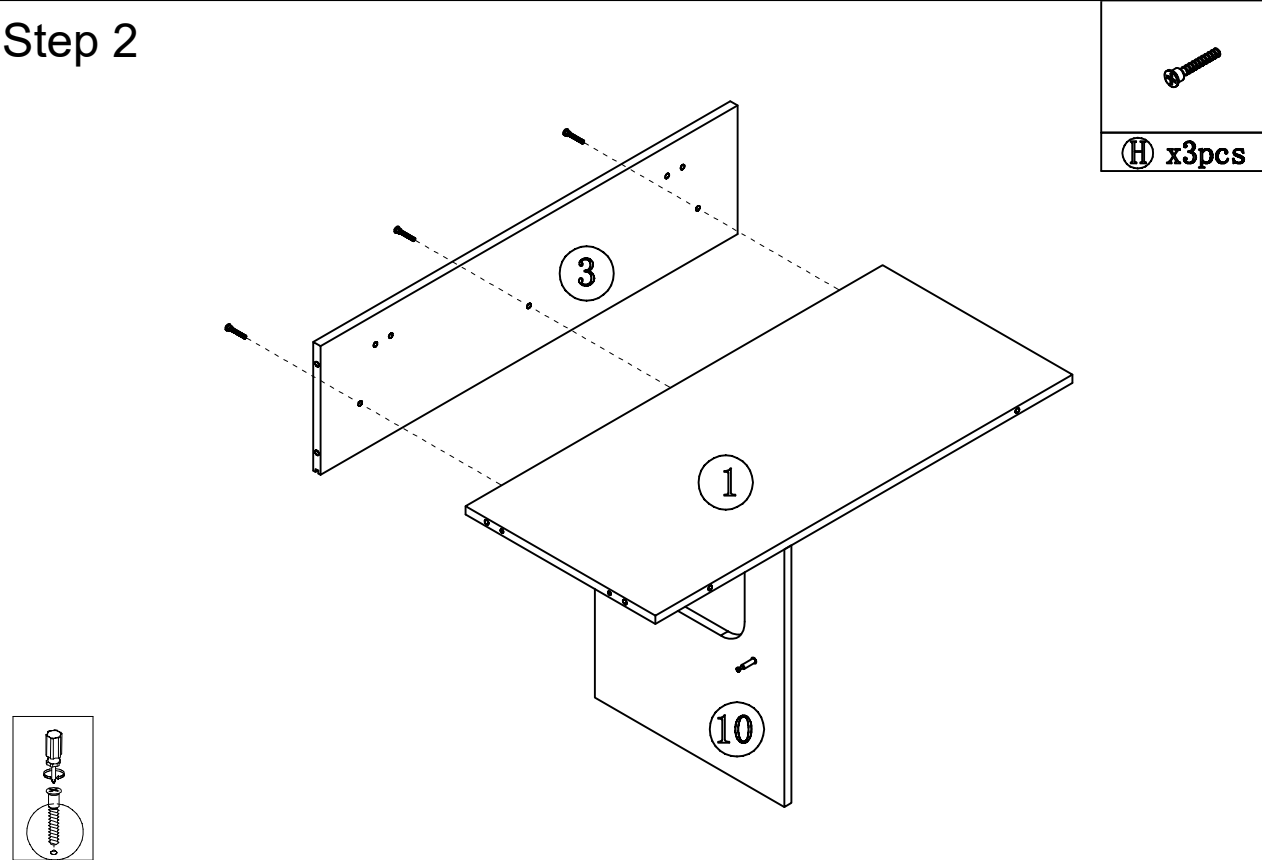


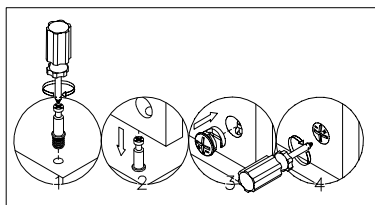
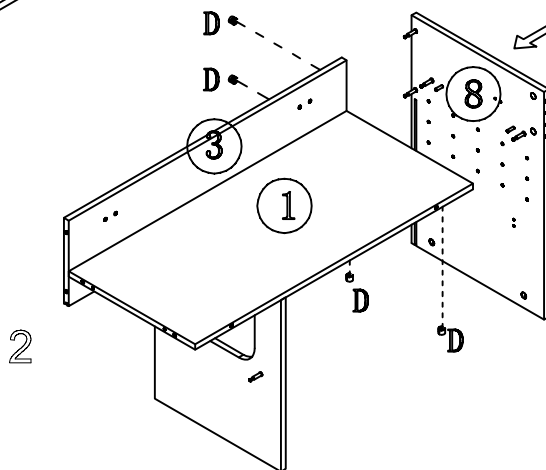
Step 2

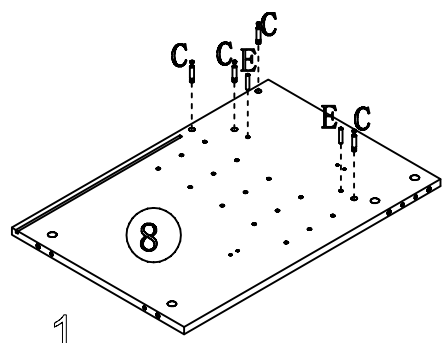


Step 3




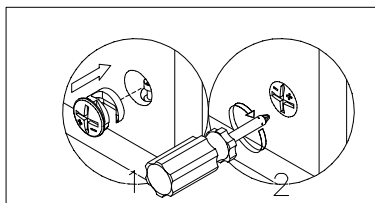
		
M6*40mm	φ15*12mm	φ6*30mm
Ⓒ x4pcs	Ⓓ x4pcs	Ⓔ x2pcs




Step 4

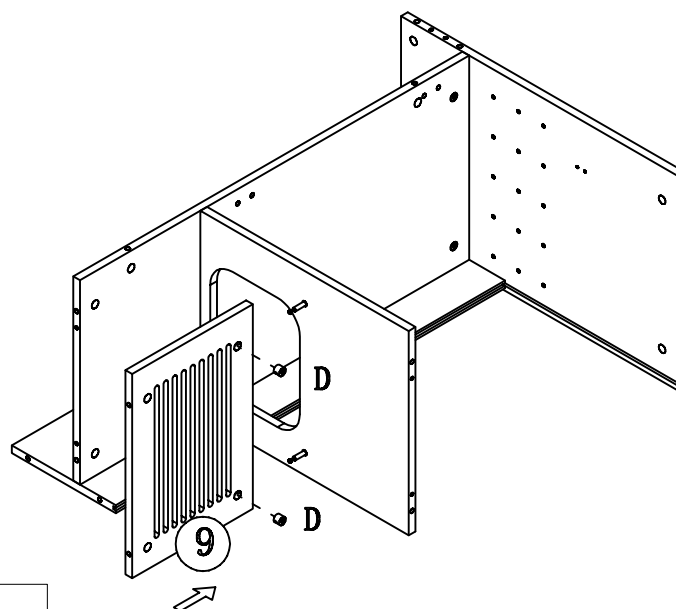



φ15*12mm
Ⓓ x2pcs




Step 5

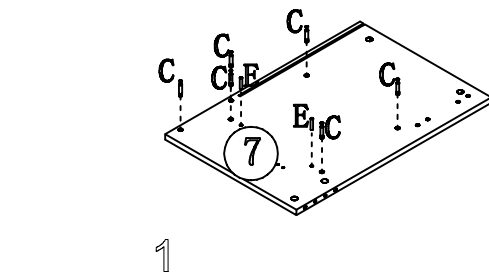

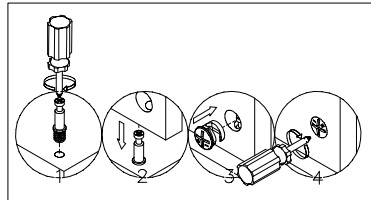


1

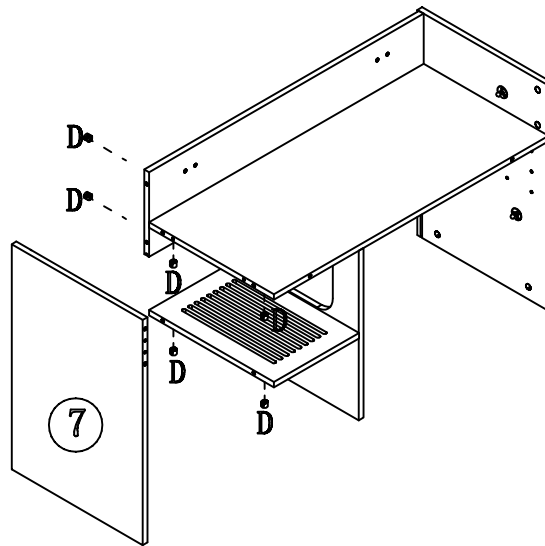


2




		
M6*40mm	φ15*12mm	φ6*30mm
Ⓒ x6pcs	Ⓓ x6pcs	Ⓔ x2pcs


Step 6

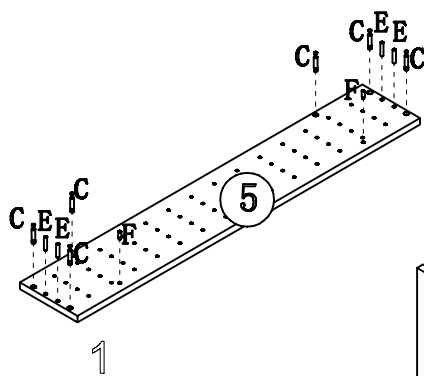



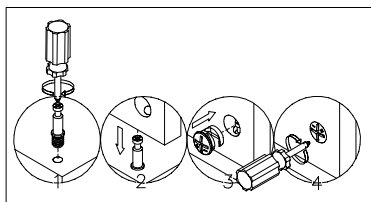

1

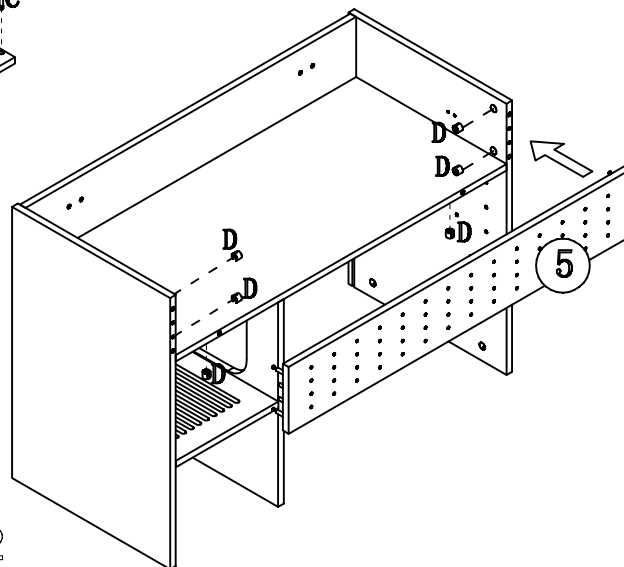


2







			
M6*40mm	φ15*12mm	φ6*30mm	M6*18
Ⓒ x6pcs	Ⓓ x6pcs	Ⓔ x4pcs	Ⓕ x2pcs


Step 7

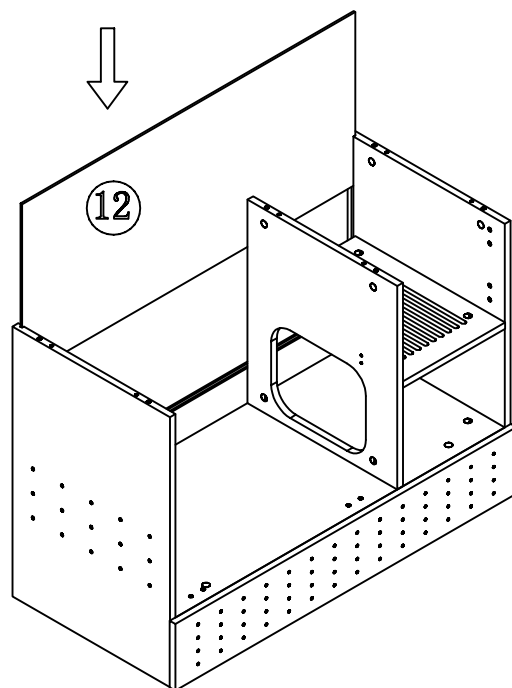

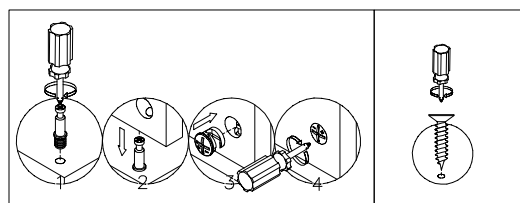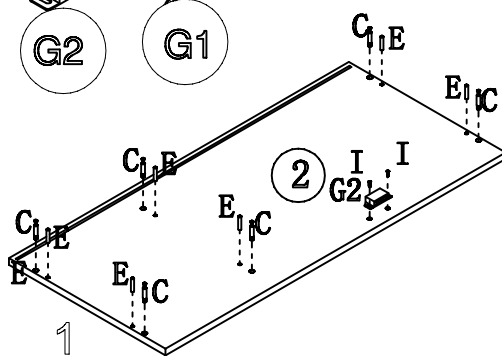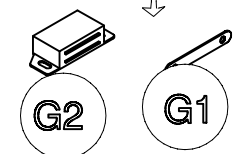

Step 8


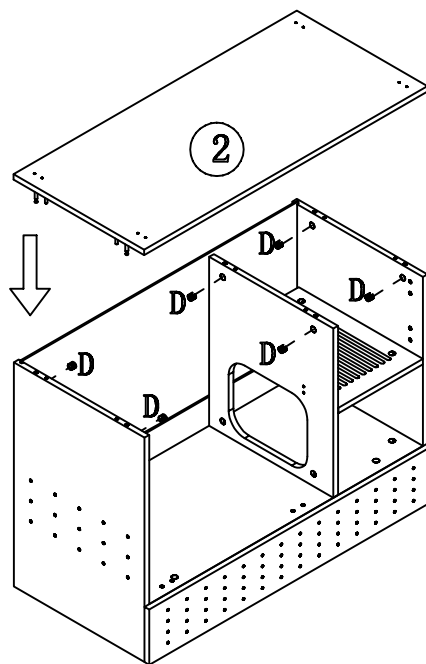


M3.5*14mm	M6*40mm	Ø15*12mm	Ø6*30mm	
Ⓒ x1pc	Ⓘ x2pcs	Ⓒ x6pcs	Ⓓ x6pcs	Ⓔ x6pcs









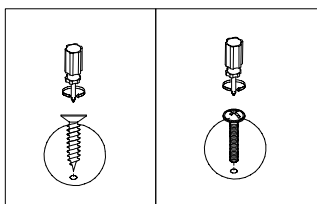
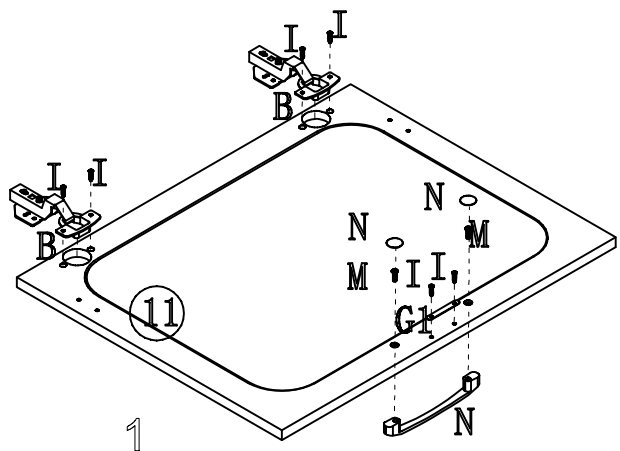
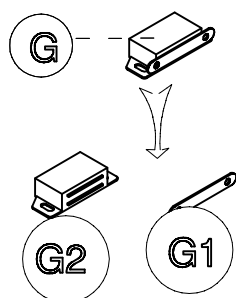
Step 9

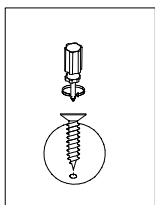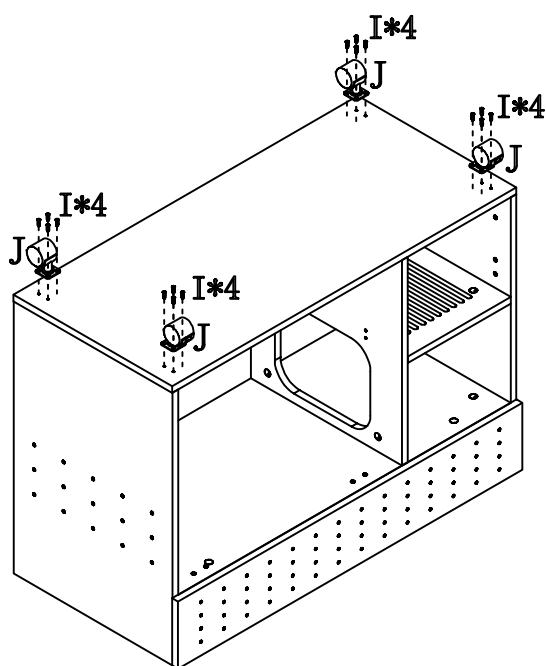
	
M3. 5*14mm	H57mm
Ⓘ x16pcs	ⓙ x4pcs



Step 10


					
Ⓑ x2pcs	Ⓖ x1pc	M3. 5*14mm	128	M4*16mm	∅20mm
Ⓑ x2pcs	Ⓖ x1pc	Ⓘ x6pcs	Ⓛ x1pc	Ⓜ x2pcs	Ⓝ x2pcs



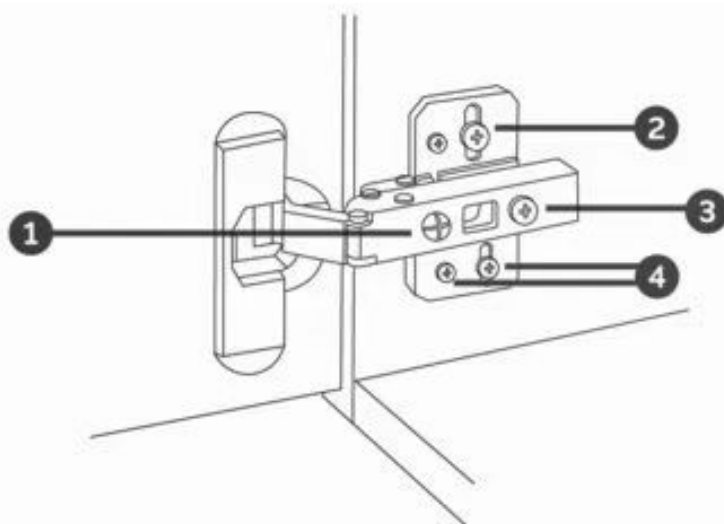


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

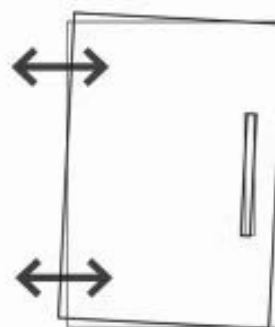

② ④ Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

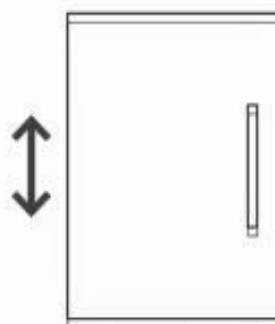

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet





Step 11







M3. 5*14mm




① x8pcs

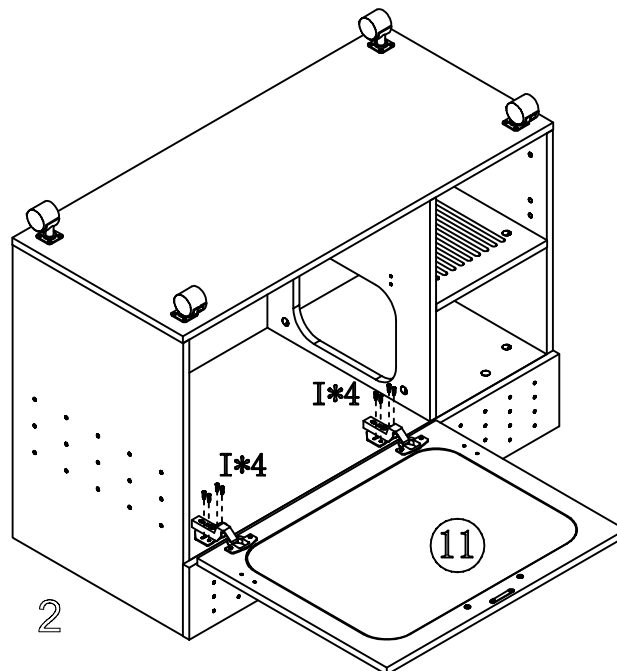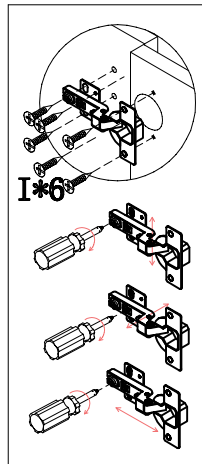



Step 12

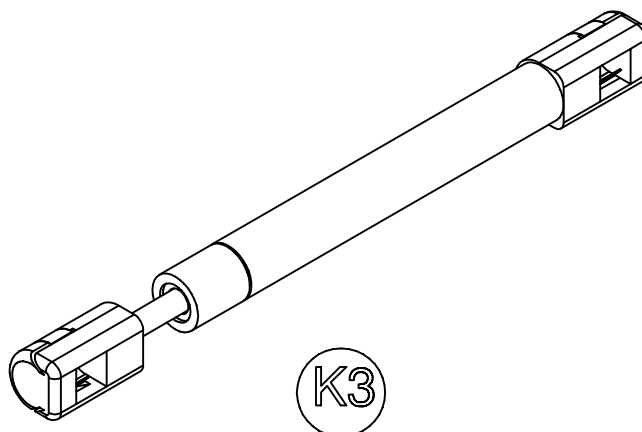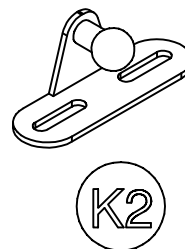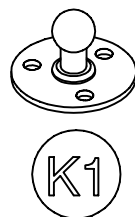
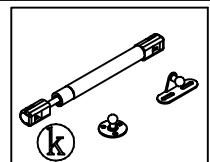


Step 13

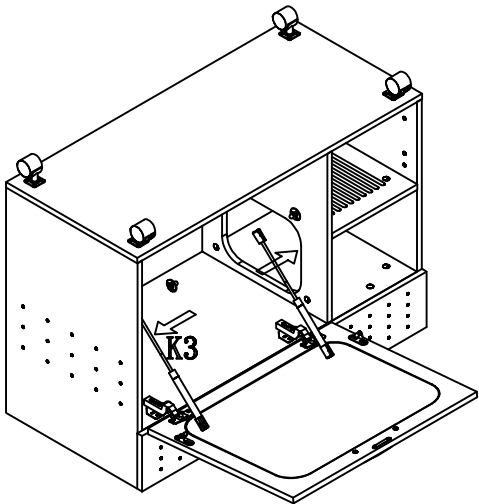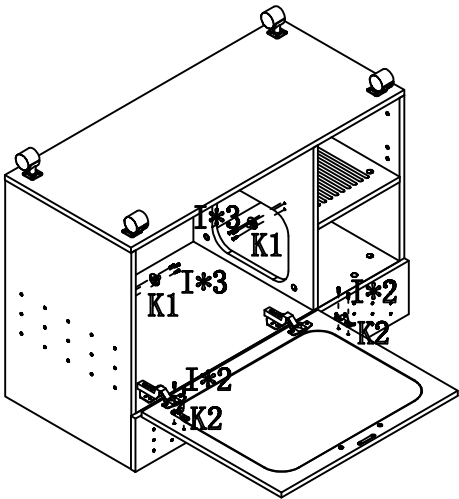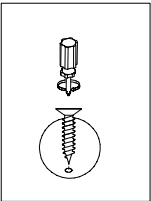





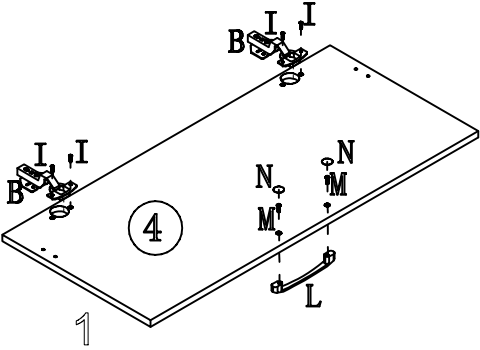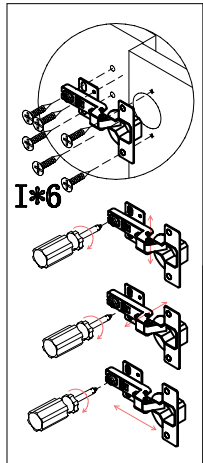

 K1	 M3. 5*14mm
K x2pcs	I x10pcs

Step 14


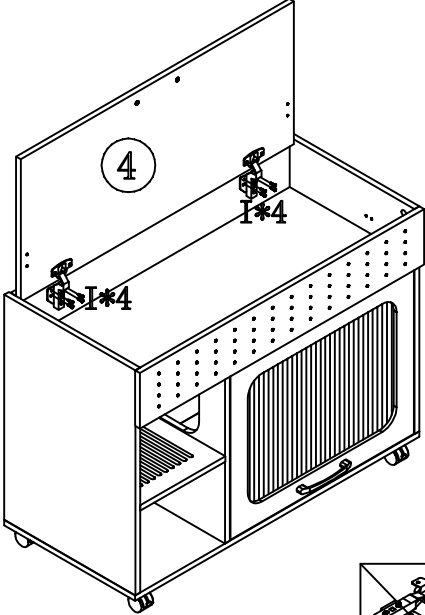





2





 B	 M3. 5*14mm	 128	 M4*16mm	 Ø20mm
B x2pcs	I x12pcs	L x1pc	M x2pcs	N x2pcs





Step 15

	
M3. 5*14mm	
Ⓚ x2pcs	Ⓢ x10pcs

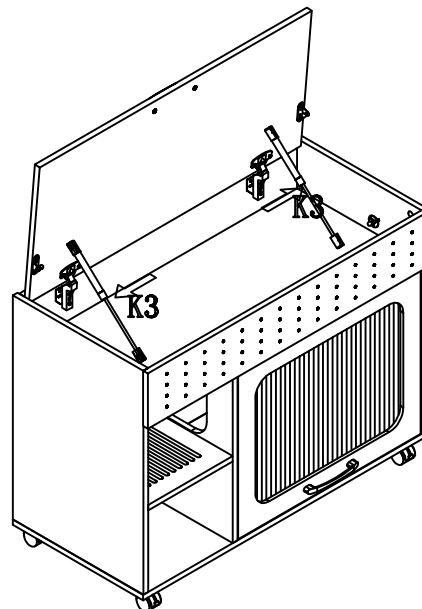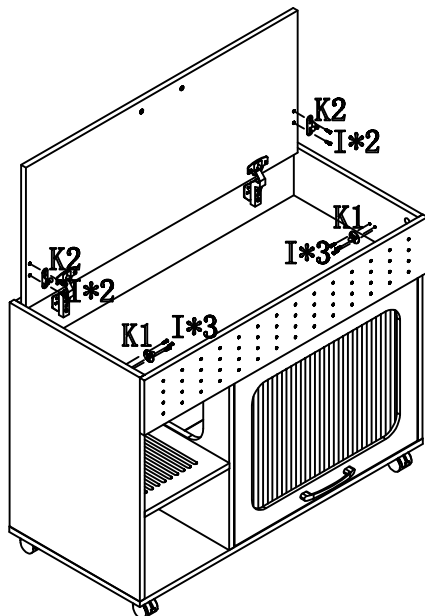
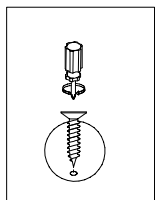




Step 16

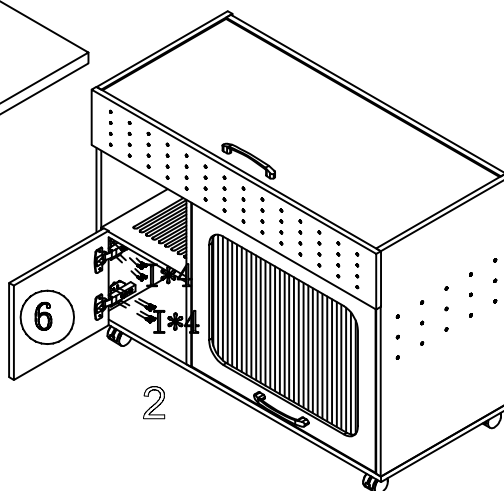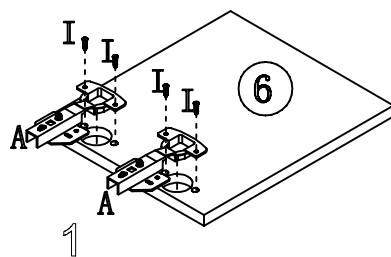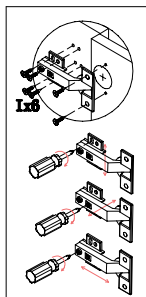	
M3. 5*14mm	
Ⓐ x2pcs	Ⓢ x12pcs

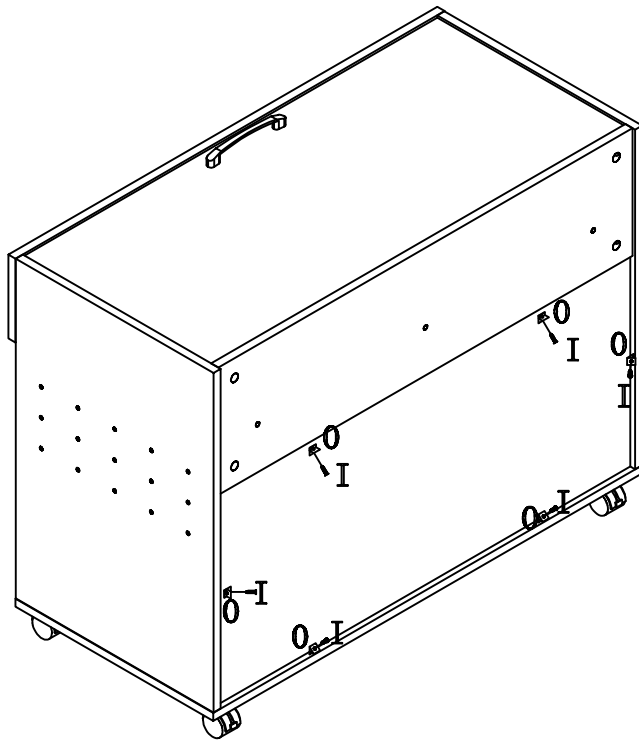
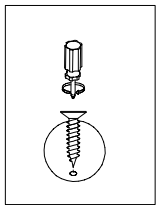



Step 17



	
① x6pcs	M3. 5*14mm
	① x6pcs

Step 18

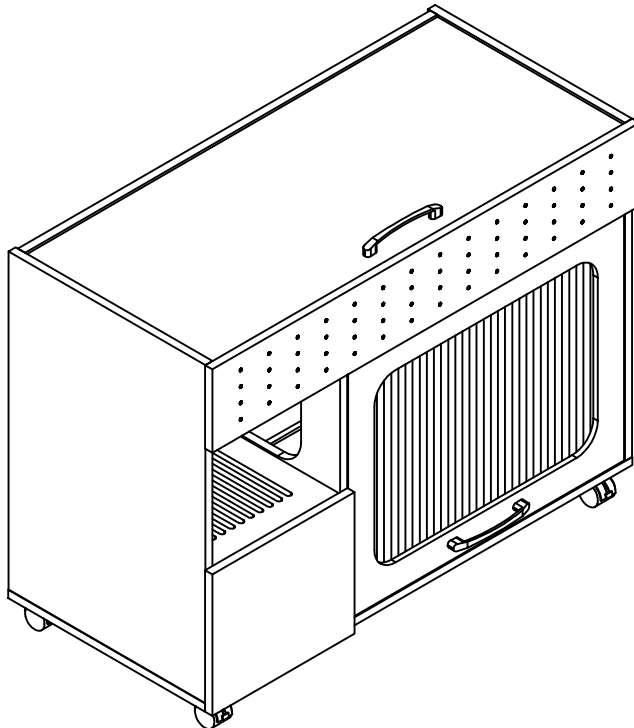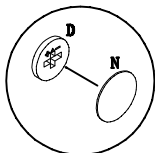


Nx26pcs

After installing the product, stick the number N on the perforated position