


# Assembly Instructions

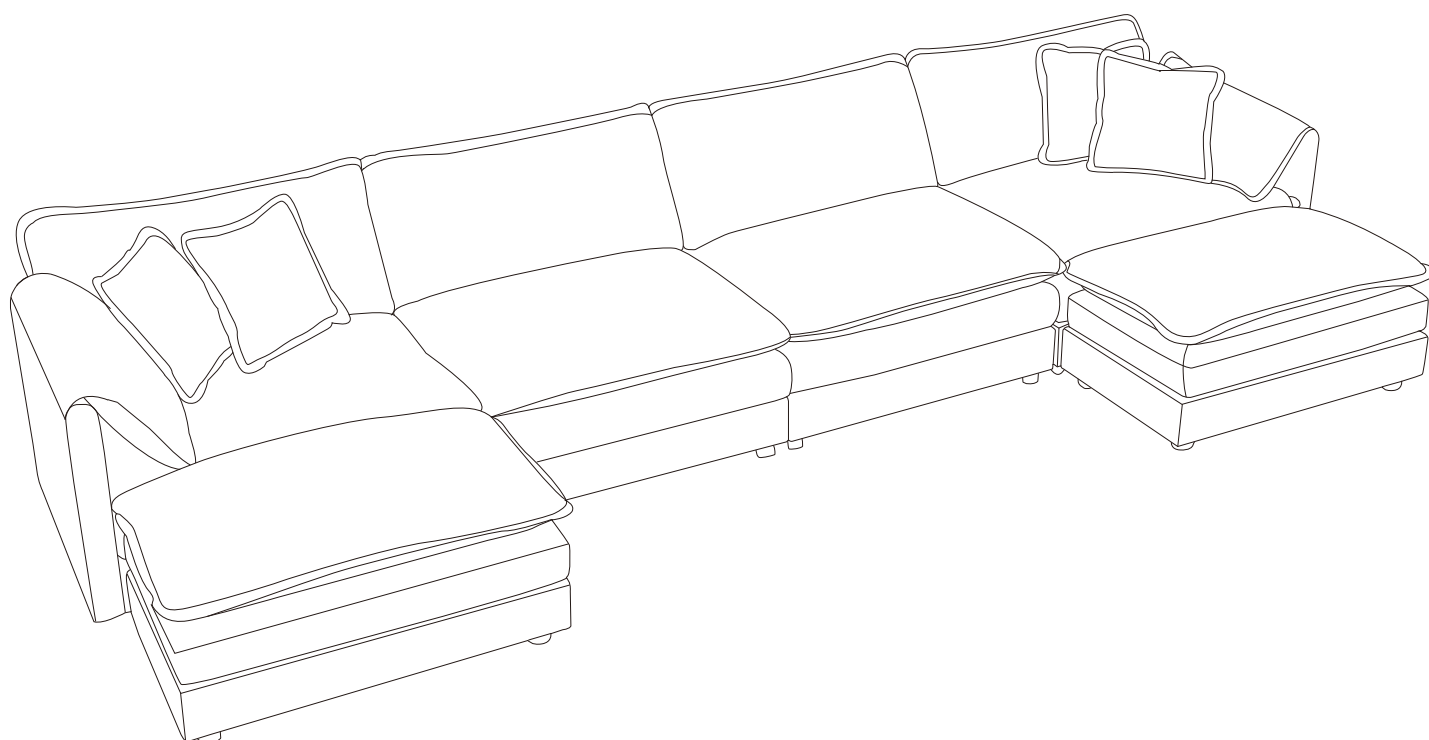



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

Thanks for your purchase. Before assembling, please follow the instructions to check if all the spare parts and screws are intact.



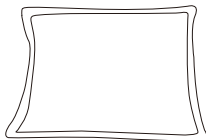

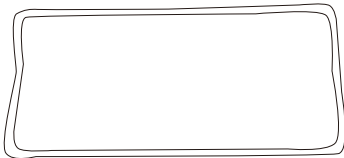
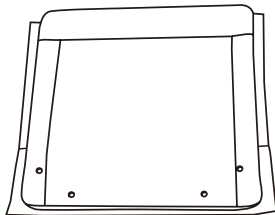




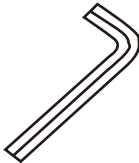

- Considering the size and weight of the sofa, we recommend two adults to assemble the sofa, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 30 minutes.
- Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed in a safe and environmentally friendly way.
- Keep all components and packaging out of reach of children or animals to avoid the risk of choking or suffocation.
- Please do not take off the cover, and do not wash.

Your cushions come vacuum packed and sealed for shipping. To restore the cushion's original shape, follow the steps below.

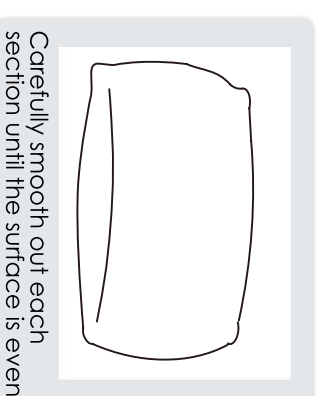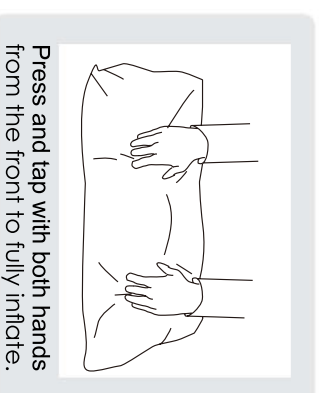



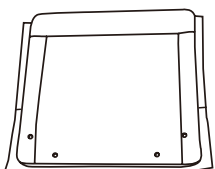


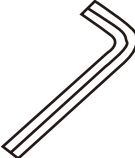



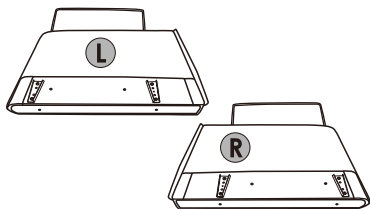


After packing up, place them in somewhere dry and ventilated. After about 72-96 hours. It can be restored to the best use condition.

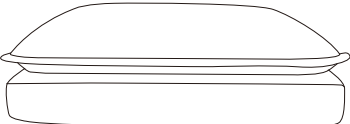


# Components List sku:W3163P365681/W3163P365693/W3163P365714/W3163P365729

<b>A</b> armrests  X2	<b>B</b> seat frame  X1	<b>C</b> pillow  X1
<b>D</b> seat cushion  X1	<b>E</b> back cushion  X1	<b>F</b> back frame  X1
<b>G</b> screws  M8*35MM X4	<b>H</b> armrest pillow  X2	<b>I</b> screws  M8*45MM X8
<b>J</b> chair legs  X8	<b>K</b> allen wrench  X1	<b>M</b> pads  X12
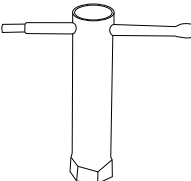
## Components List sku:W3163P365686/W3163P365698/W3163P365717/W3163P365730

<b>D</b> seat cushion  X1	<b>B</b> seat frame  X1	<b>C</b> pillow  X1
<b>E</b> back cushion  X1	<b>F</b> back frame  X1	<b>J</b> chair legs  X4
<b>G</b> M8*35MM  X4	<b>K</b> allen wrench  X1	<b>M</b> pads  X12
<b>N</b> double-sided screws  M8*60MM X4	<b>O</b> nuts  X8	<b>P</b> socket wrench  X1


## Components List sku:W3163P365691/W3163P365703/W3163P365720/W3163P365732

<b>N</b> seat frame  X1	<b>O</b> seat cushion  X1	<b>J</b> chair legs  X4
--	--	--

## Assembly Instructions


### STEP 1

Screw chair legs J into the hole at the bottom of armrest A

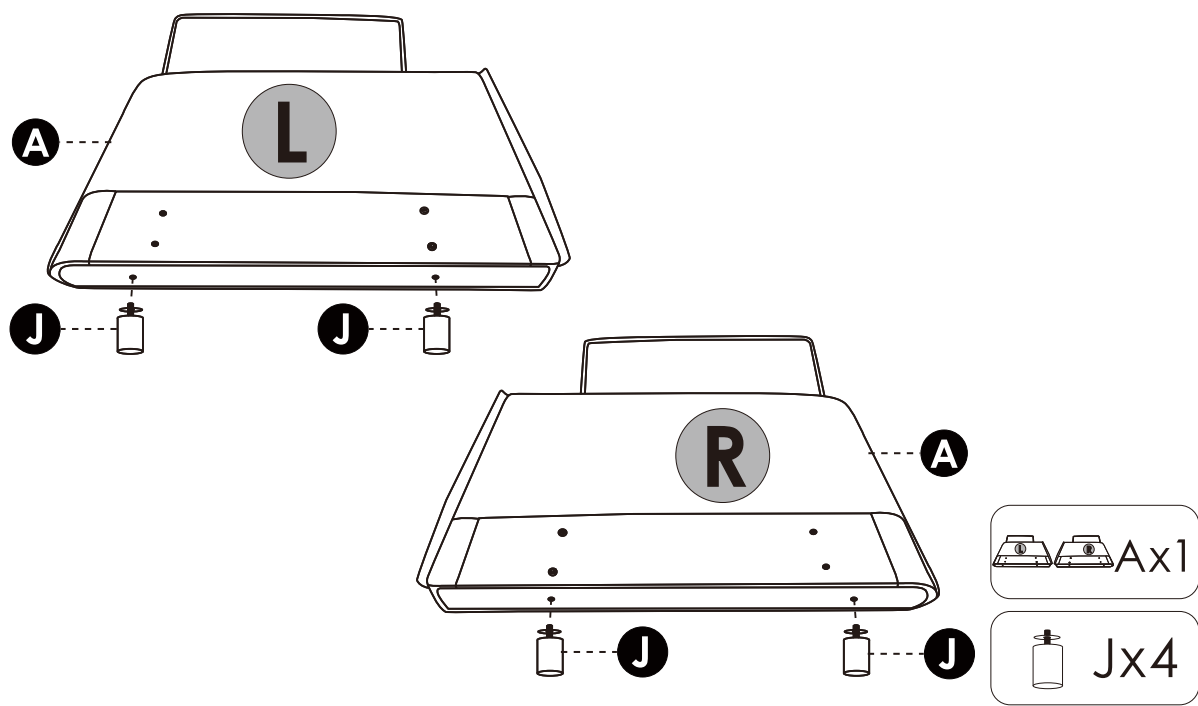


### STEP 2

Turn the seat frame sideways, and screw chair legs J to the hole at the bottom.

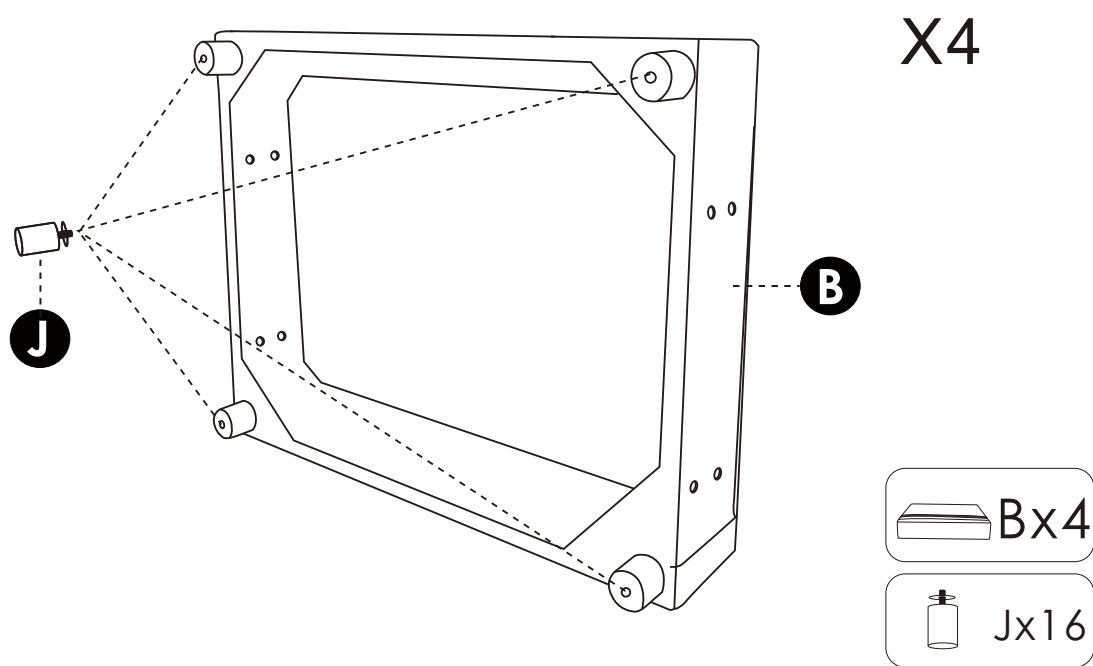

### STEP3

Align the back frame with seat frame and tighten them with screws

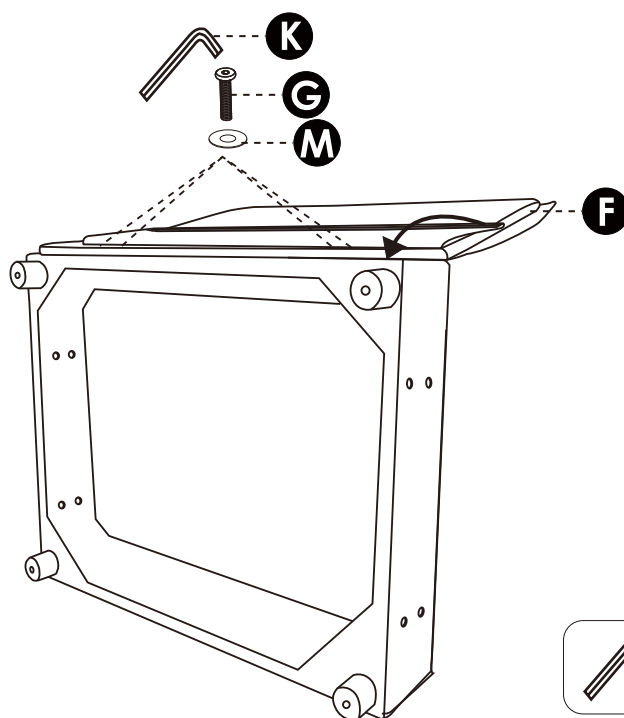

Mx16


Fx4



Gx16

### STEP4

Connect the seat frame with double-sided screws and install in pads and nuts.

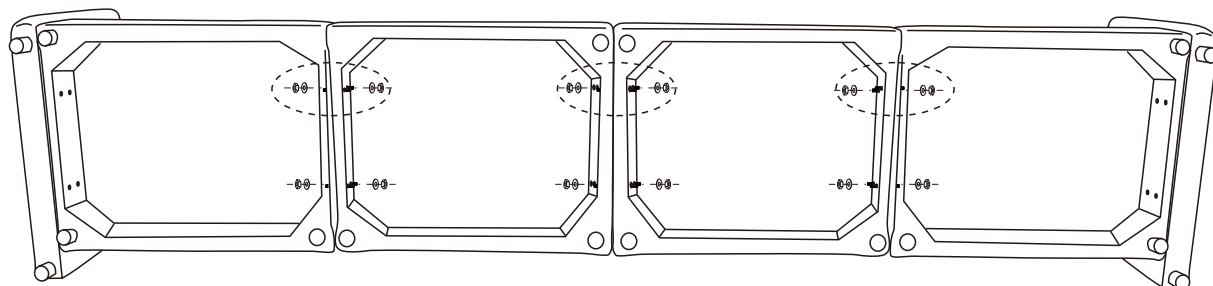

Mx12

Mx12




Ox12



**P**



## STEP 5

Connect the seat frame with double-sided screws and install in pads and nuts.

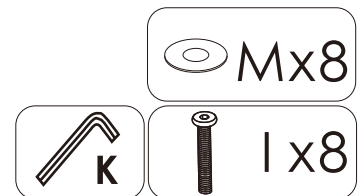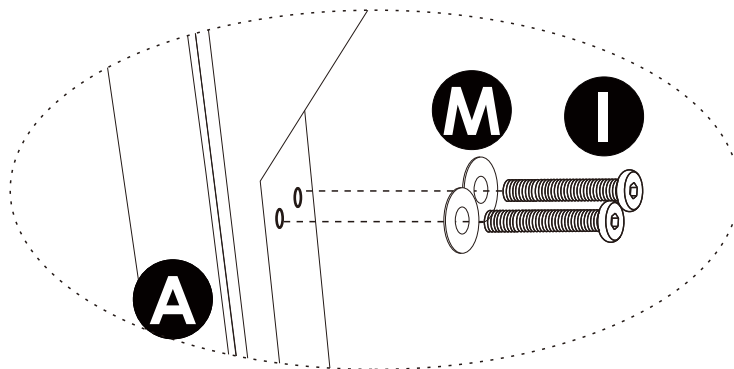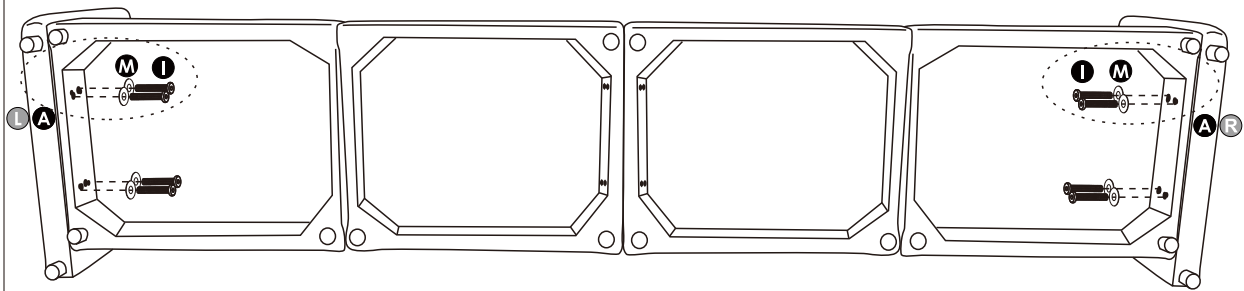


## STEP 6

Put the seat cushion D, back cushion E and pillow C in order then make them flat.

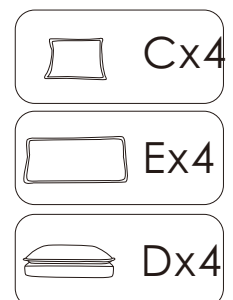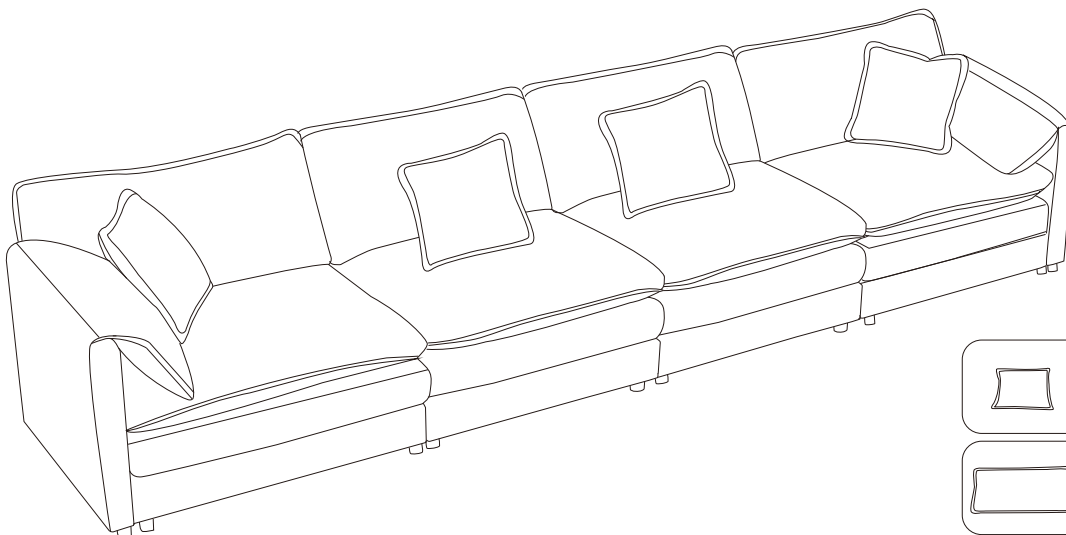


## STEP7

Connect the seat frame with double-sided screws and install in pads and nuts.

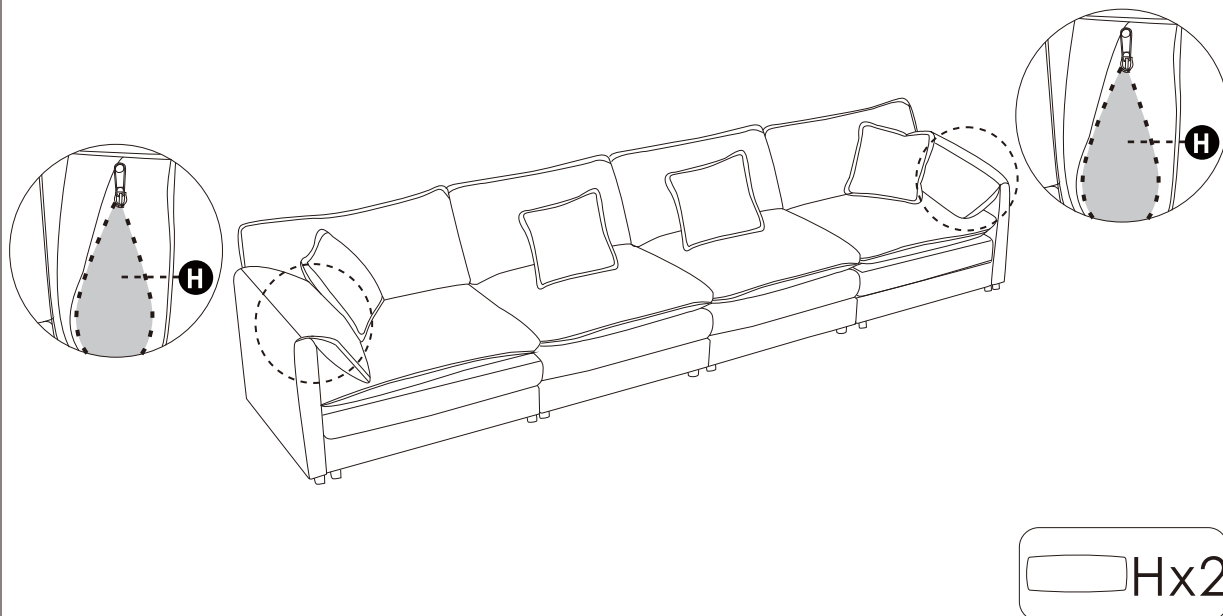

## STEP8


Turn the armrest bag inside the chair, make it flat, and the installation is complete.

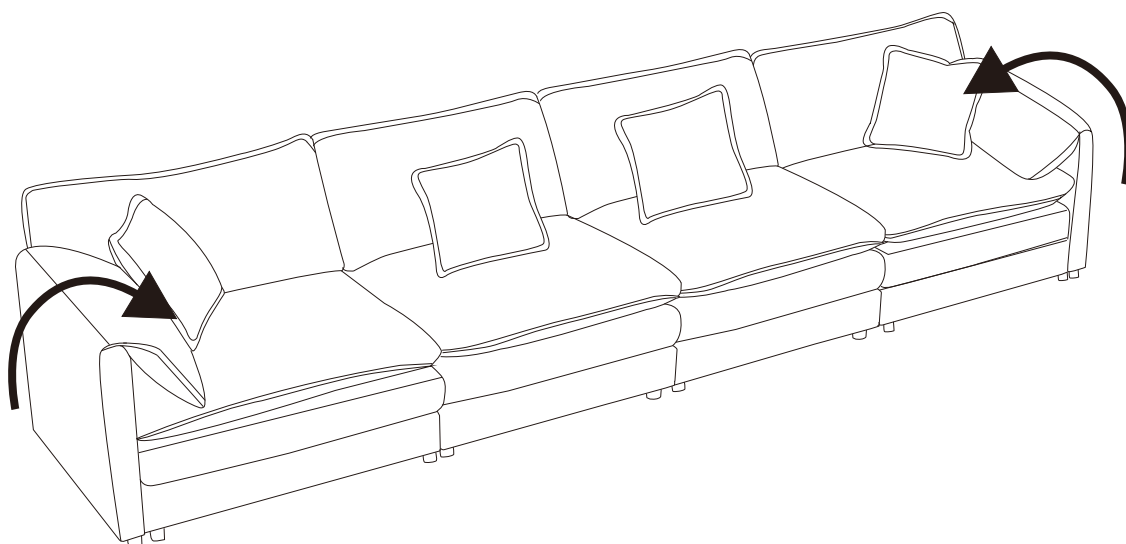




## STEP9

Turn the seat frame sideways, screw chair legs J into the hole at the bottom

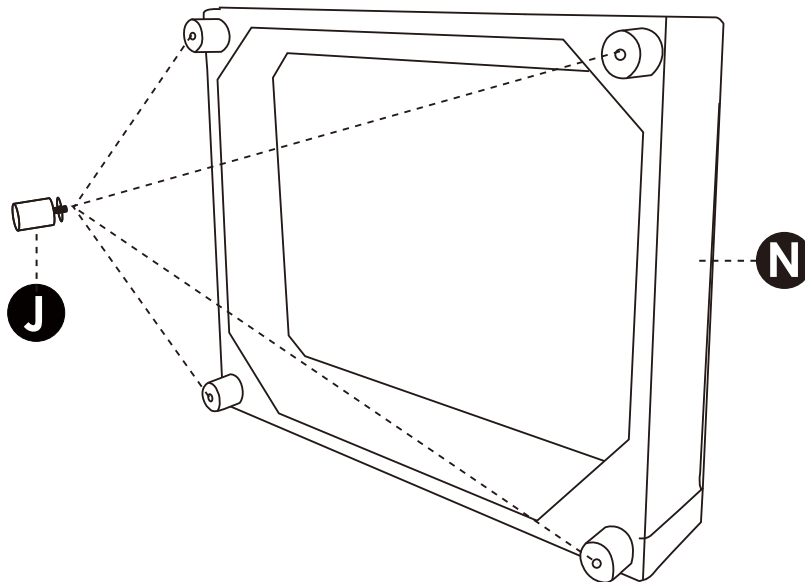

## STEP10

Put the seat cushion B, then make them flat, and the installation is complete.

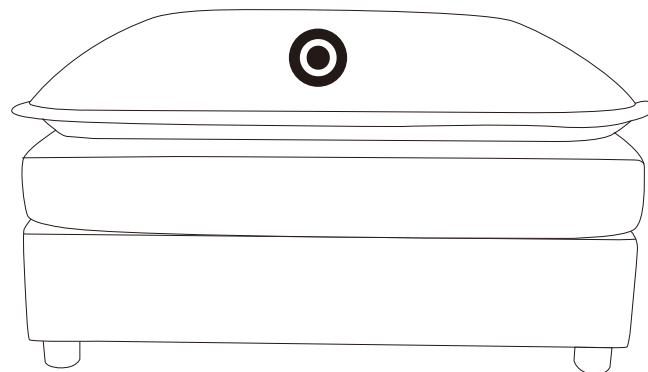

Installation completed

