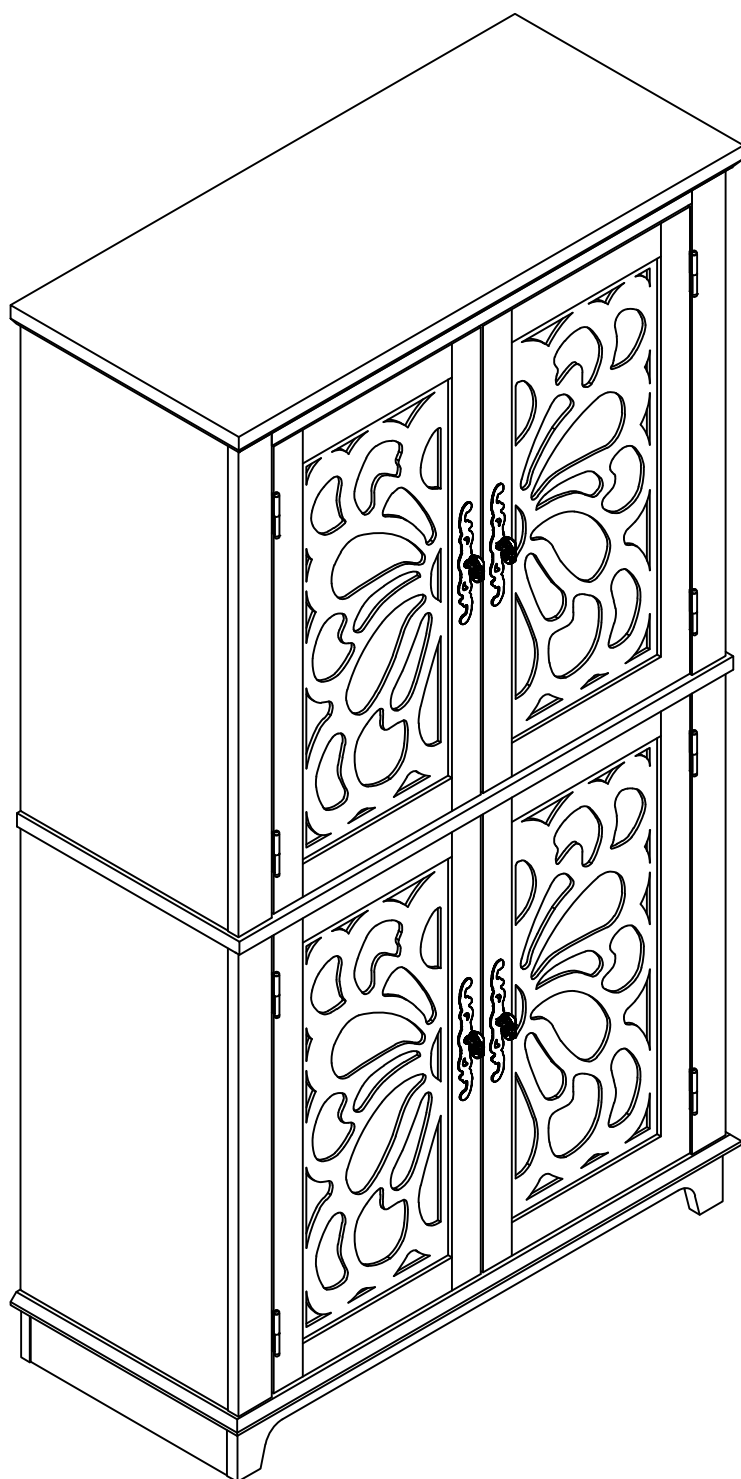



Assembly Instruction

Item: GMG01











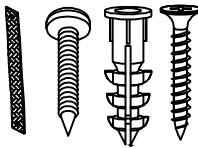


MADE IN CHINA

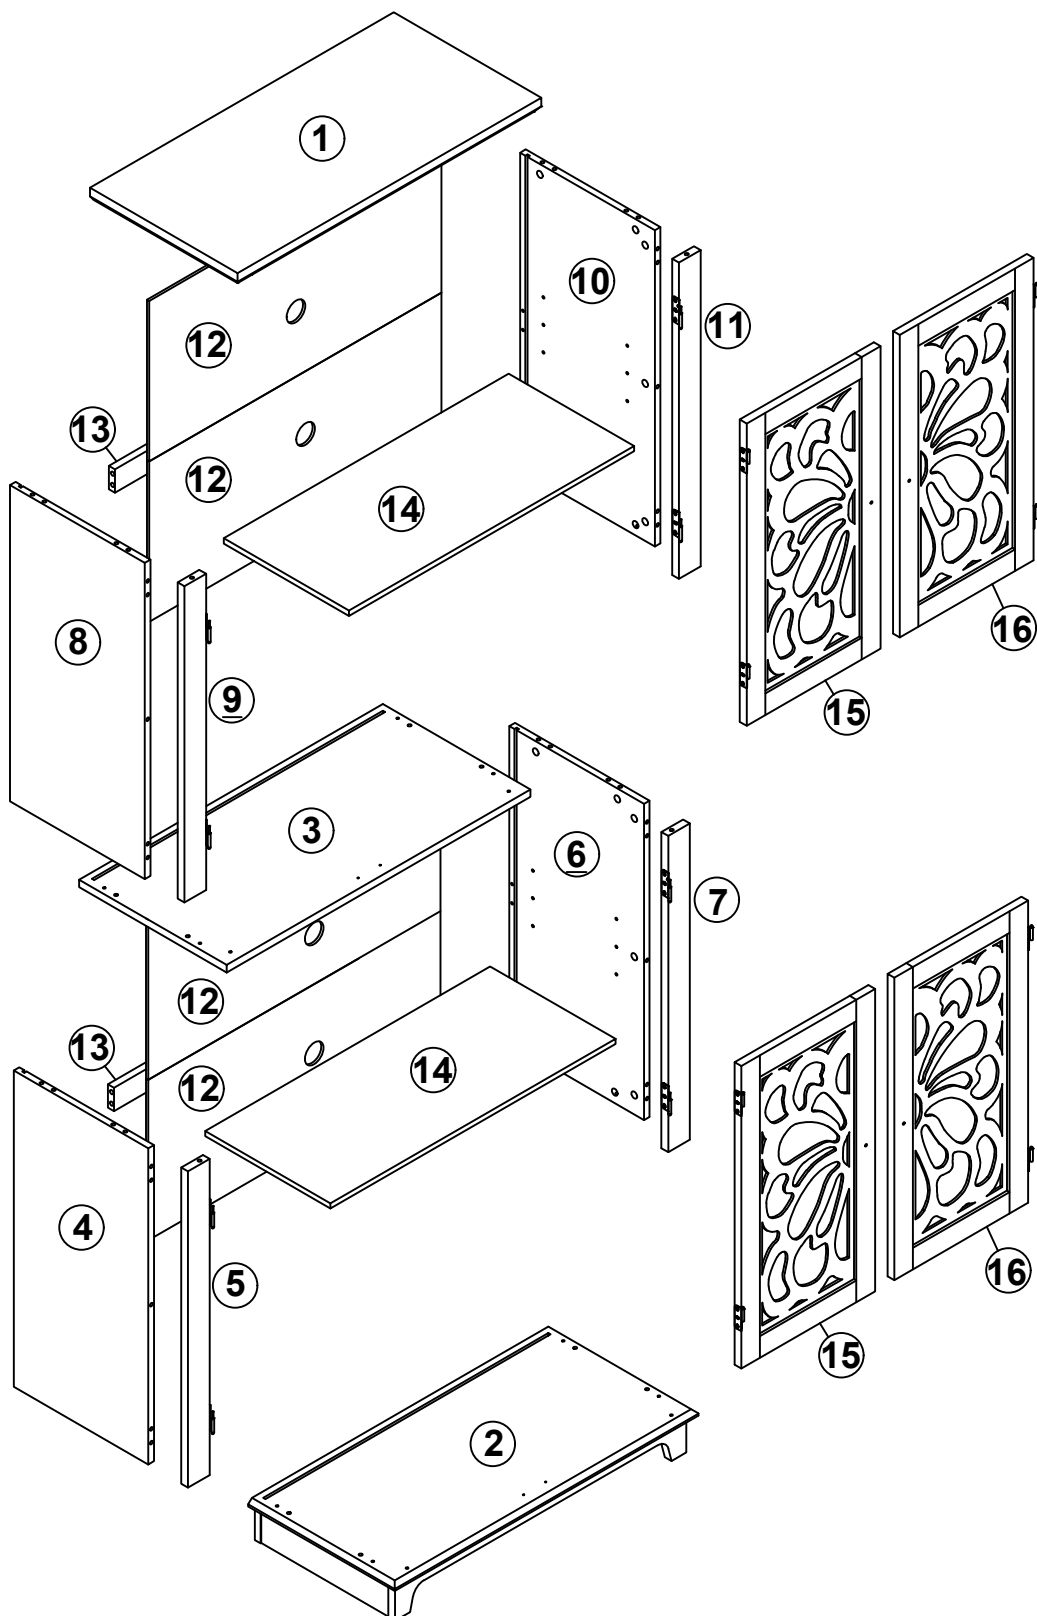ASSEMBLY INSTRUCTION




HARDWARE

<p>A x 44+2spare</p>  <p>Ø6 x 32mm</p>	<p>B x 44+2spare</p>  <p>Ø15 x 10mm</p>	<p>C x 24+2spare</p>  <p>Ø8*30mm</p>	<p>D x 16+2spare</p>  <p>Ø3*18mm</p>
<p>E x 46</p>  <p>Ø20mm</p>	<p>F x 4</p>  <p>175*25mm</p>	<p>H x 4</p>  <p>M4*25mm</p>	<p>I x 4</p>  <p>71*15*12 mm</p>
<p>J x 8+1spare</p> 	<p>K x 8+1spare</p> 	<p>L x 2</p> 	


ASSEMBLY INSTRUCTION

Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

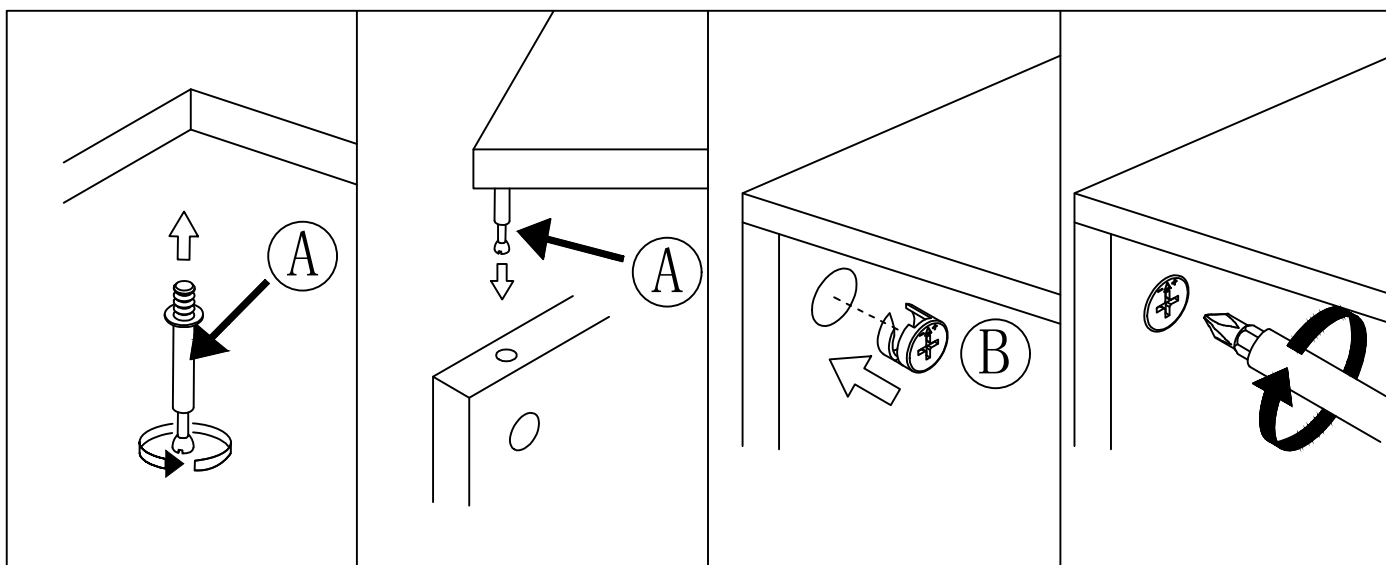


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

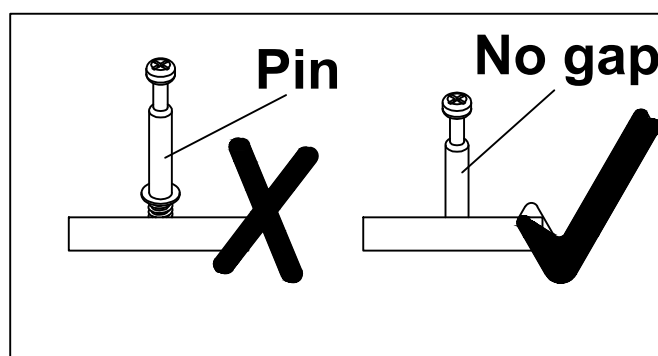




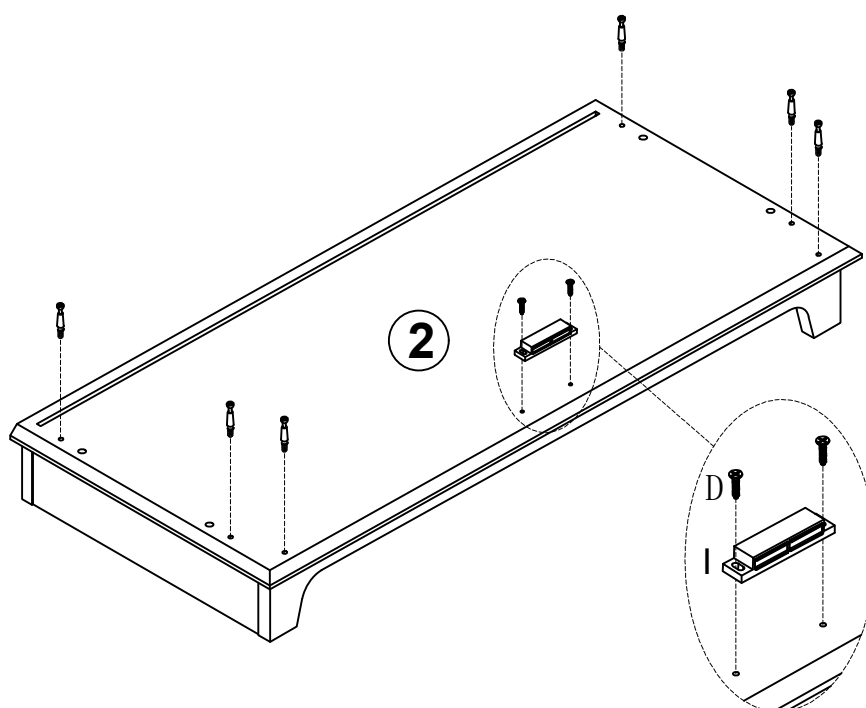
ASSEMBLY INSTRUCTION

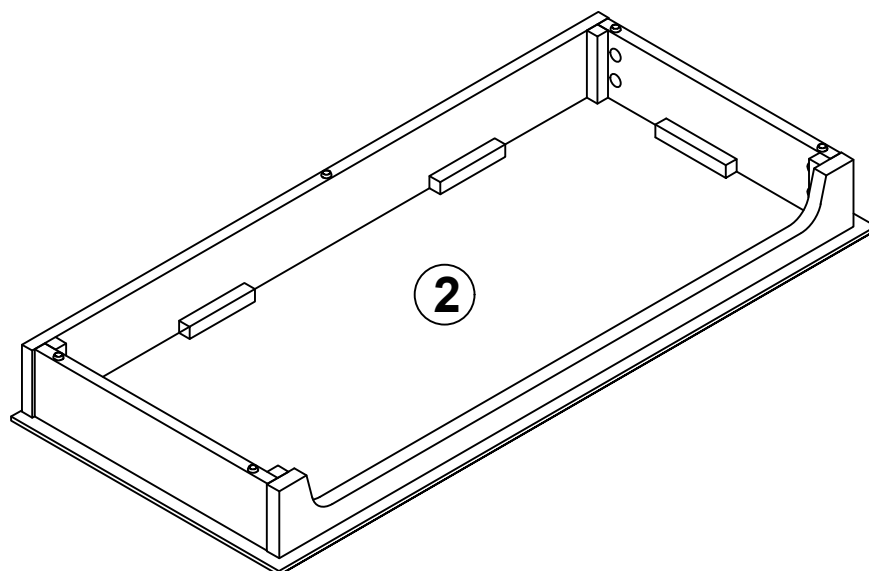STEP 1






STEP 2


A:		6PCS
D:		2PCS
I:		1PCS



ASSEMBLY INSTRUCTION




STEP 3

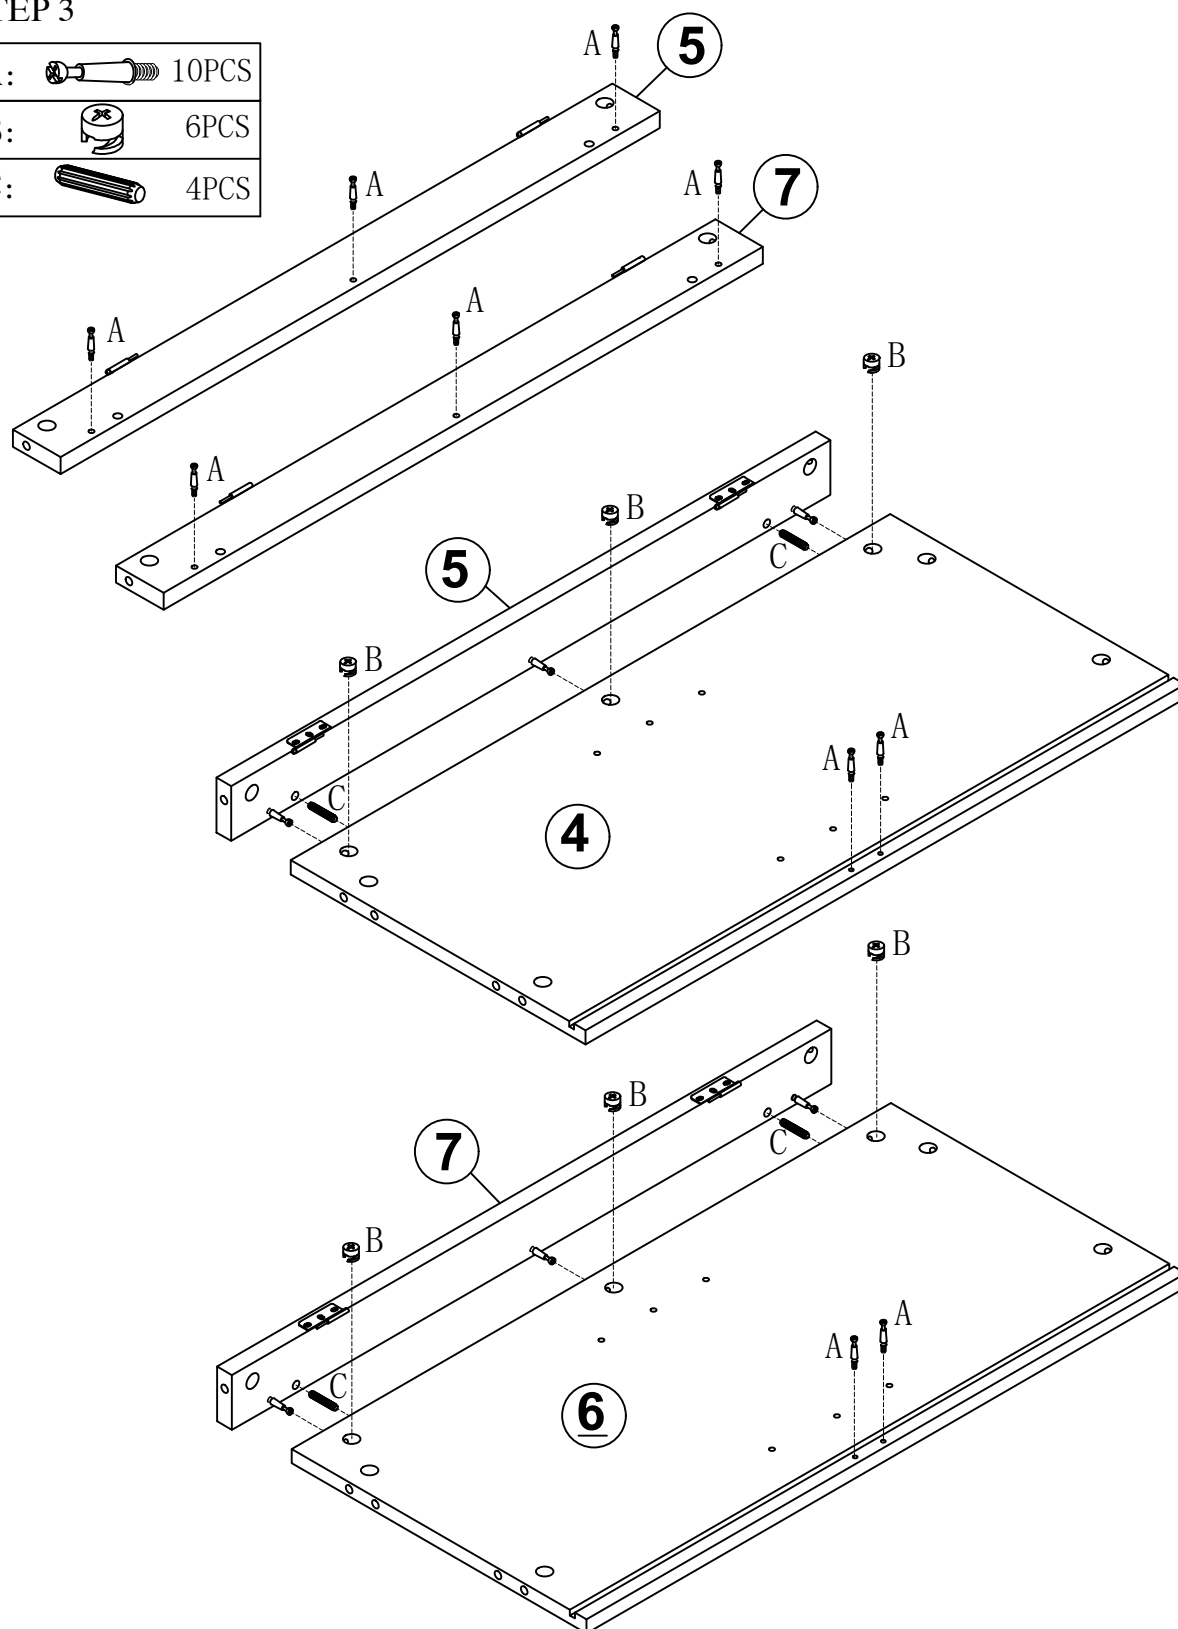
A:		10PCS
B:		6PCS
C:		4PCS



ASSEMBLY INSTRUCTION

STEP 4


A:		10PCS
B:		6PCS
C:		4PCS

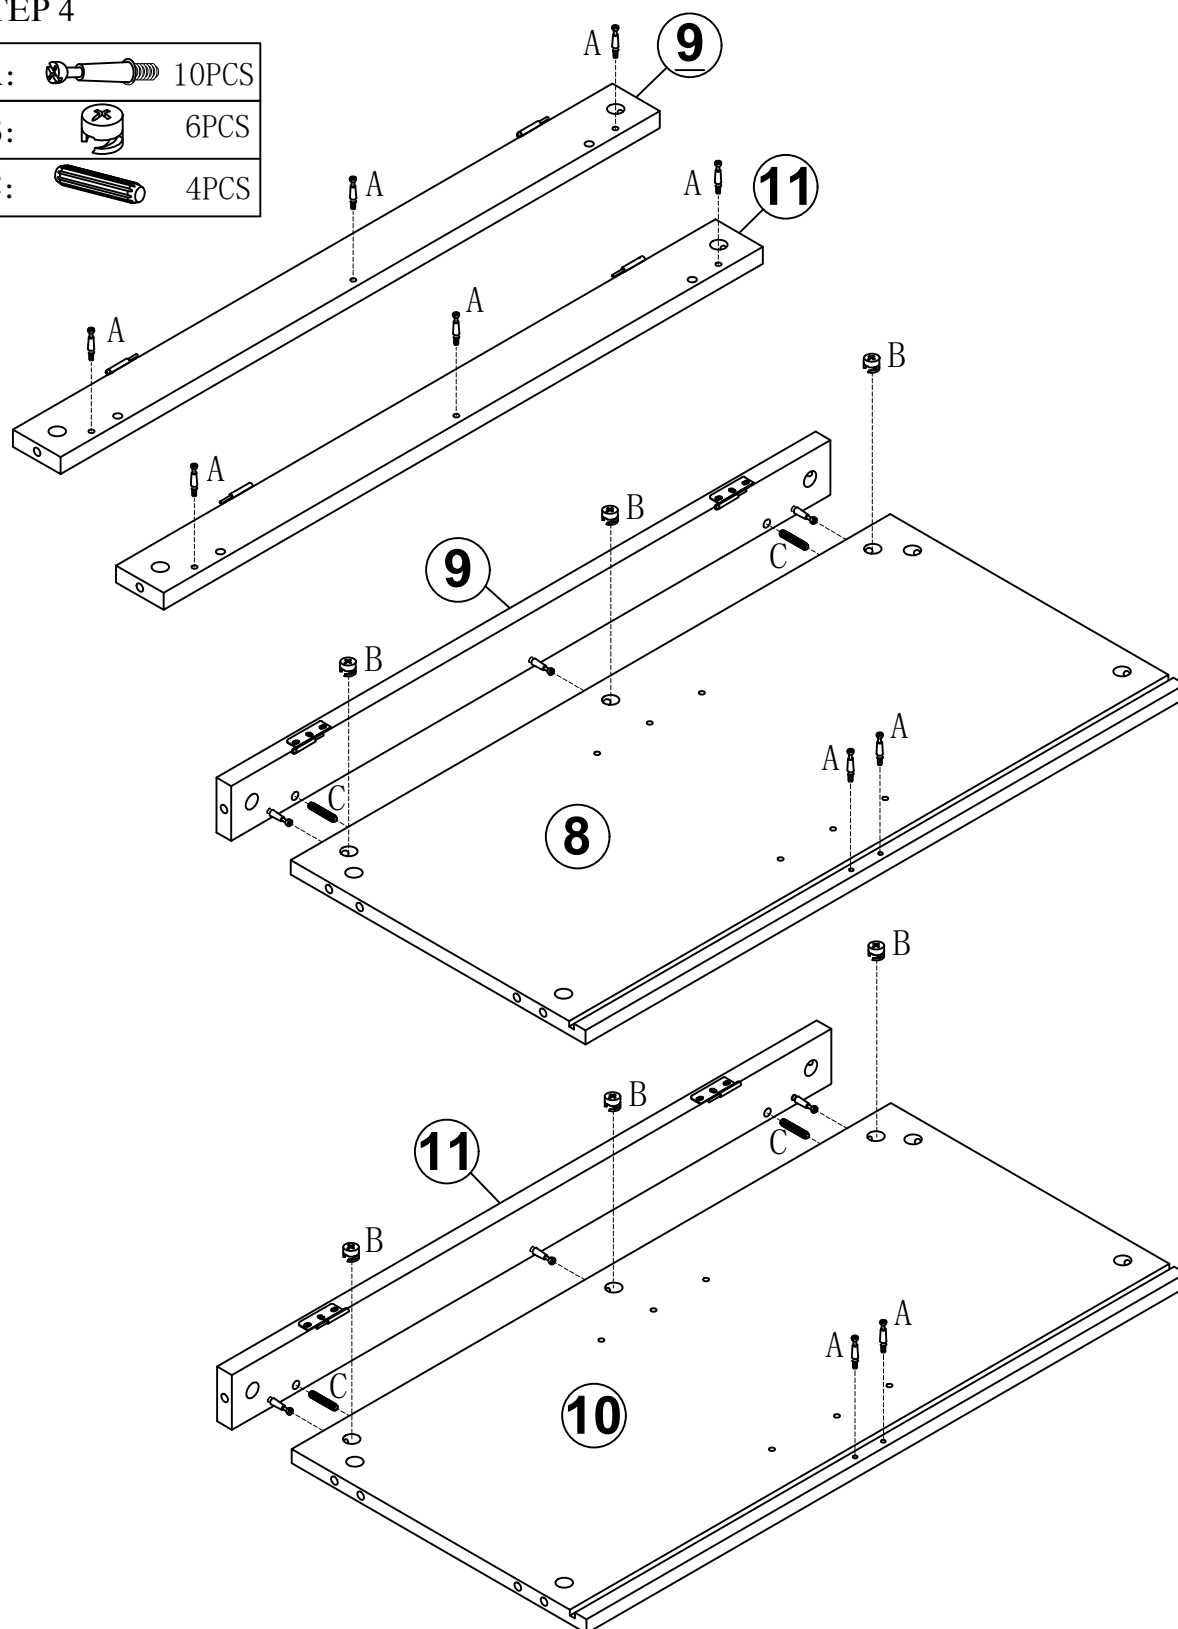

ASSEMBLY INSTRUCTION



STEP 5

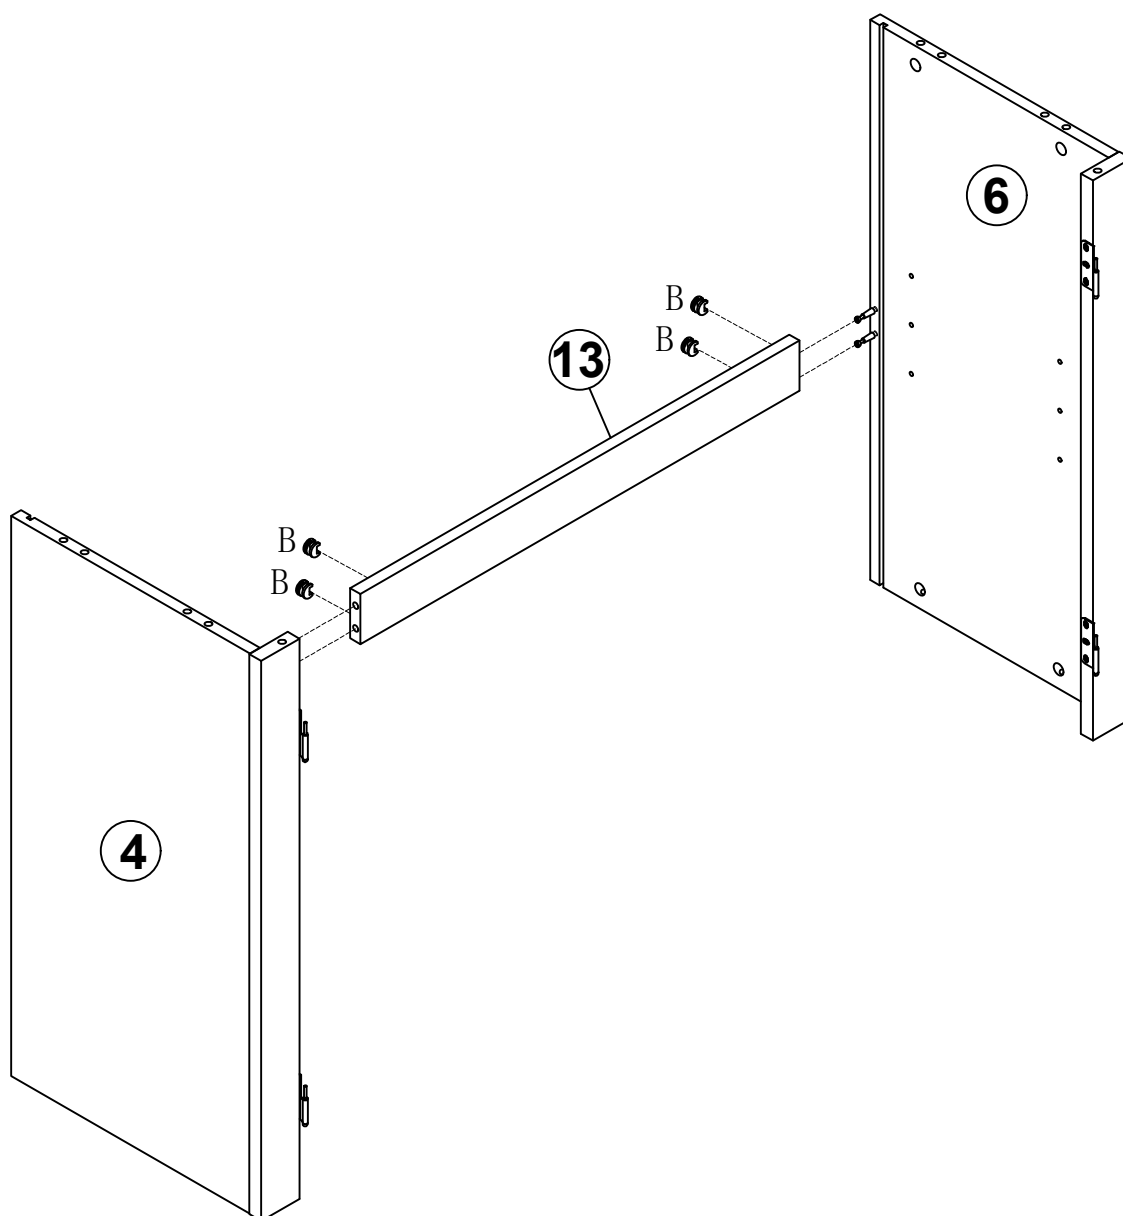
B:  4PCS



ASSEMBLY INSTRUCTION


STEP 6

B:		6PCS
C:		4PCS

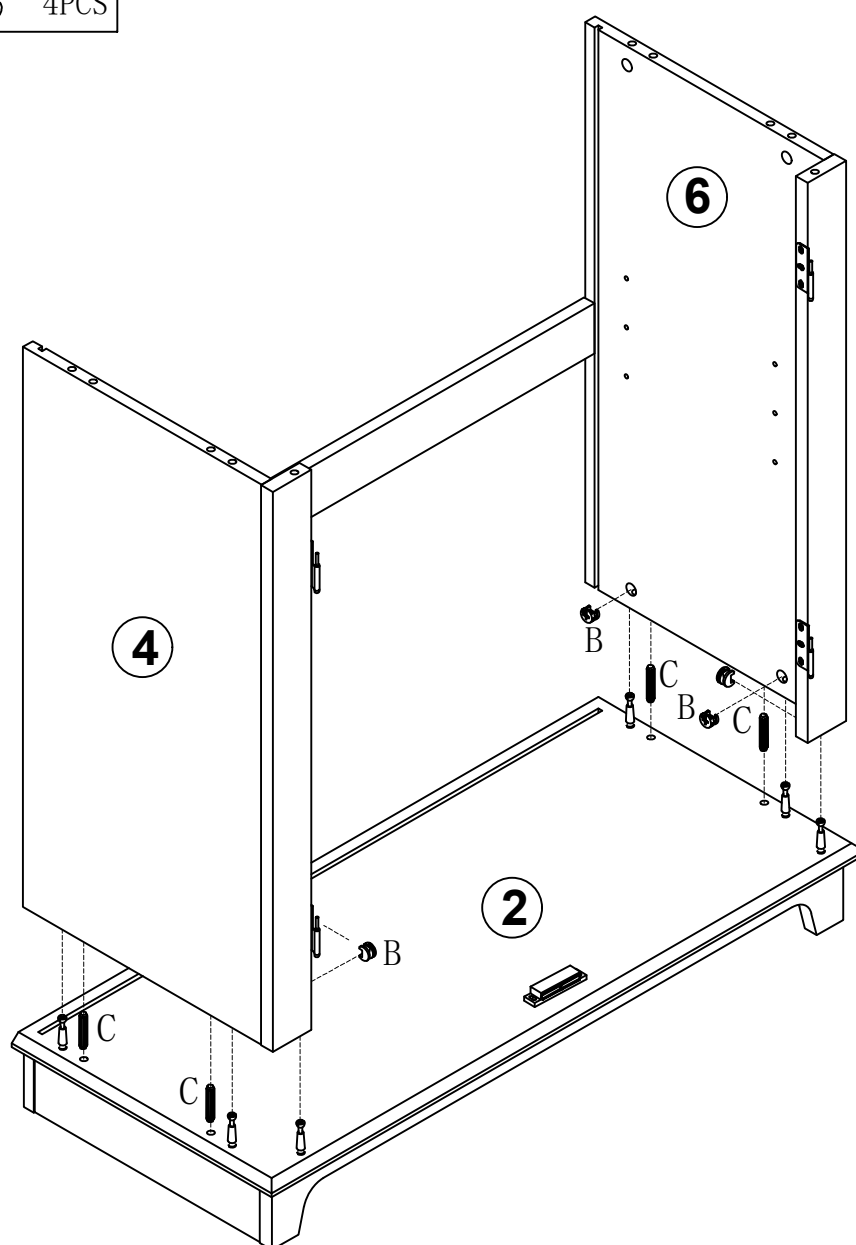



ASSEMBLY INSTRUCTION

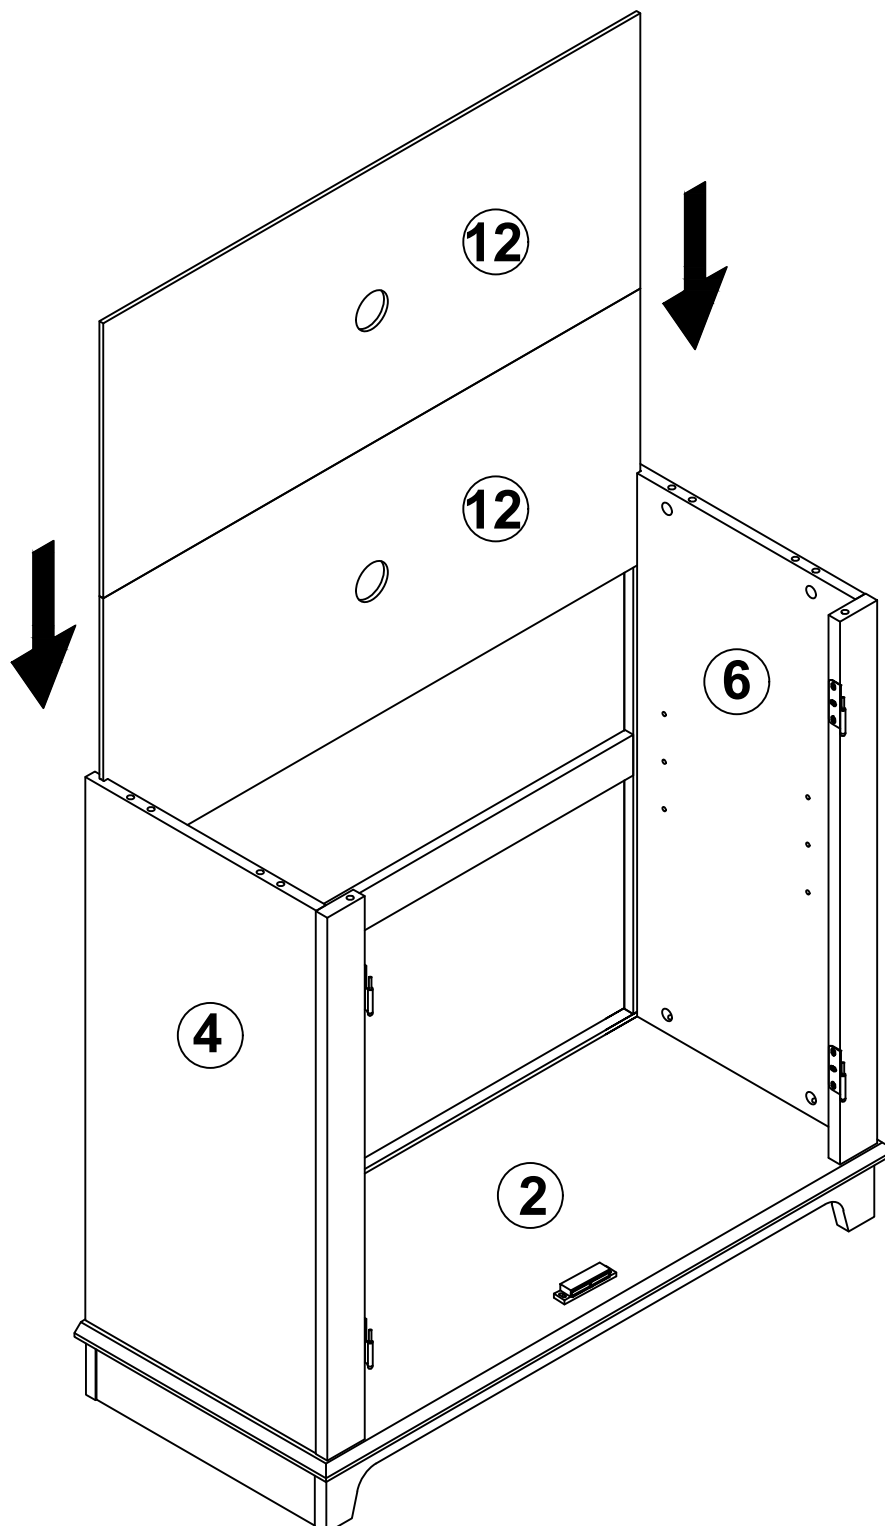
STEP 7



ASSEMBLY INSTRUCTION


STEP 8

F:		4PCS
H:		4PCS

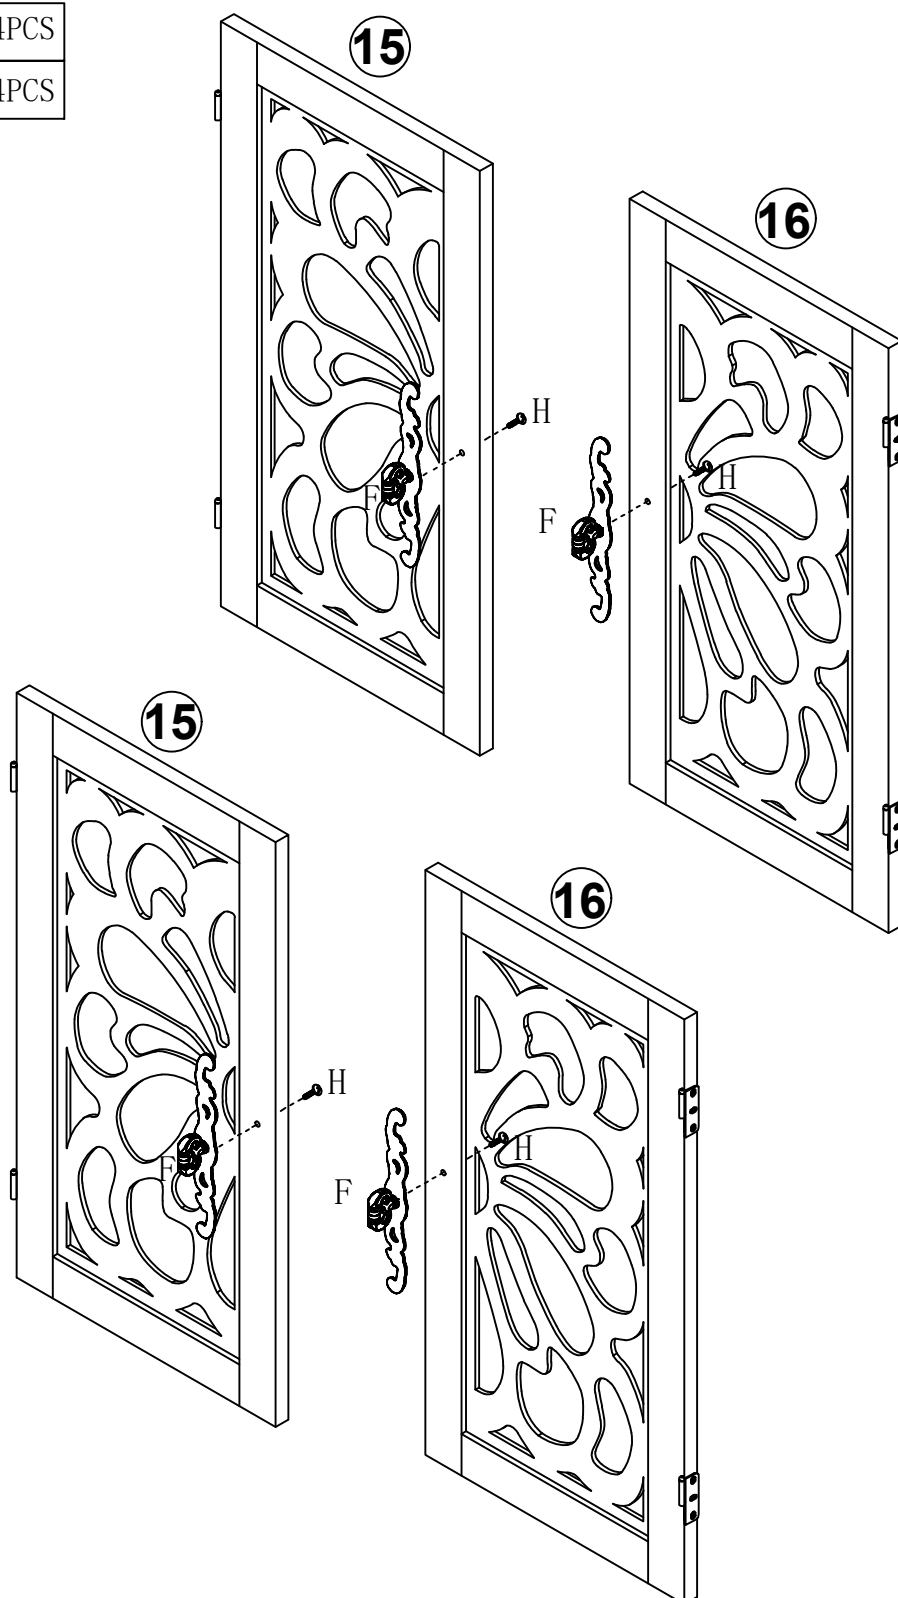




ASSEMBLY INSTRUCTION


STEP 9

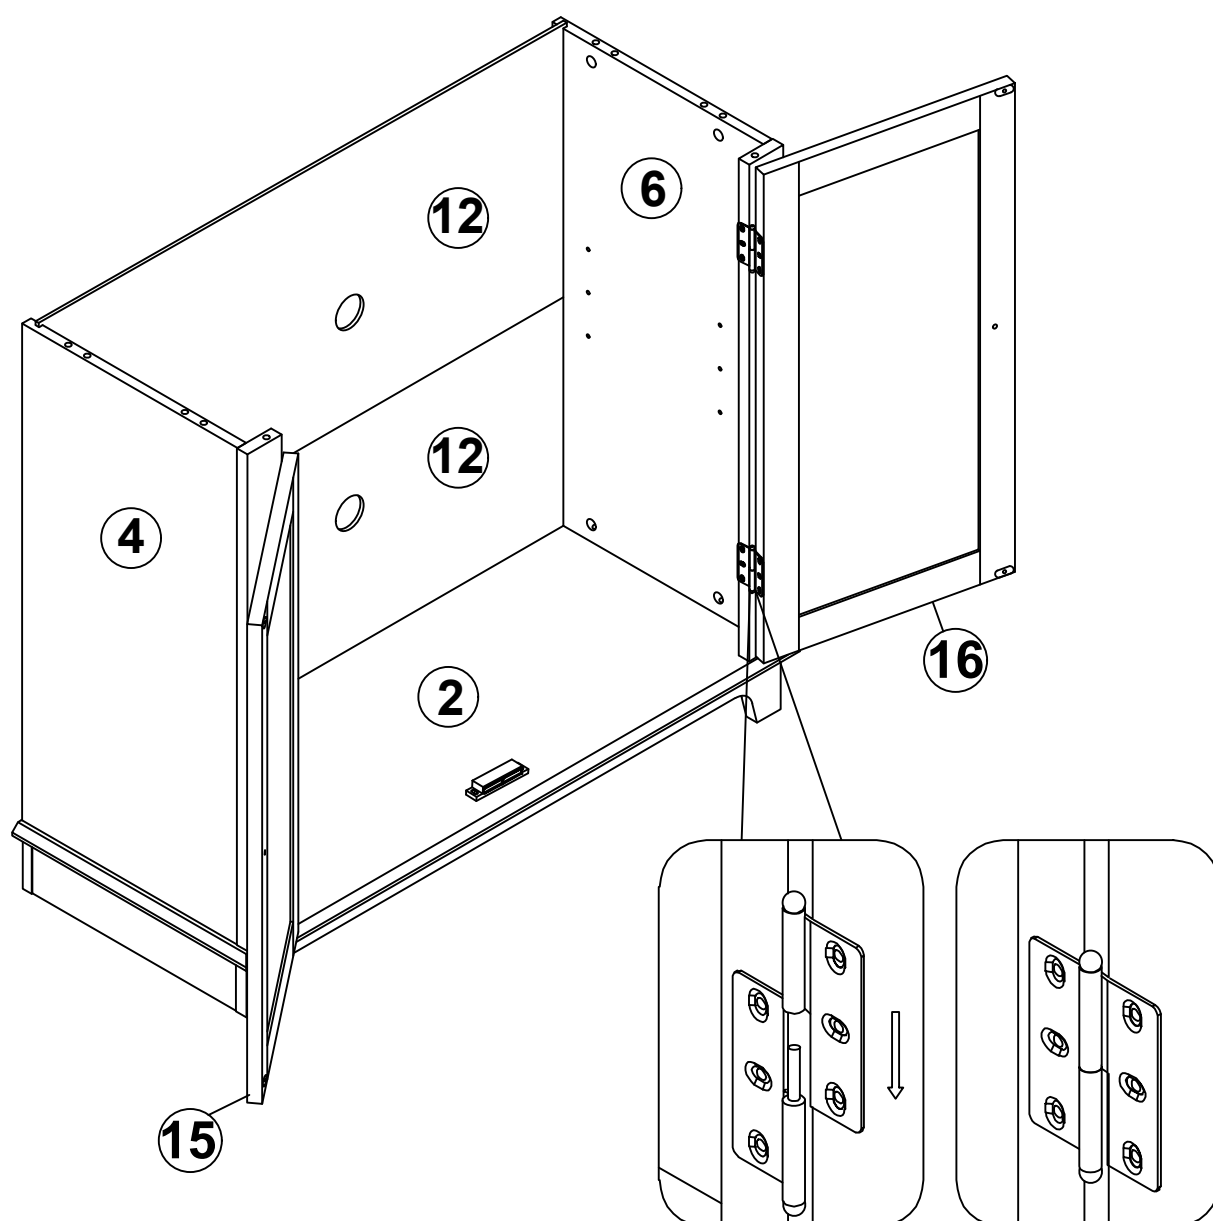

ASSEMBLY INSTRUCTION



STEP 10

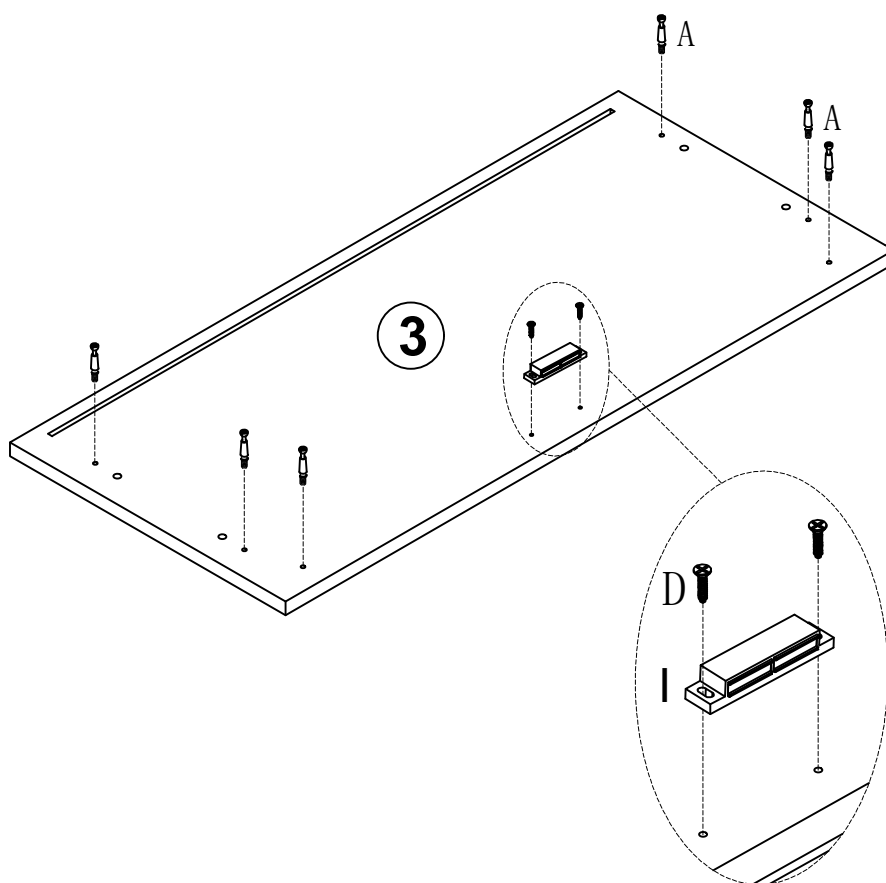
A:		6PCS
D:		2PCS
I:		1PCS



ASSEMBLY INSTRUCTION


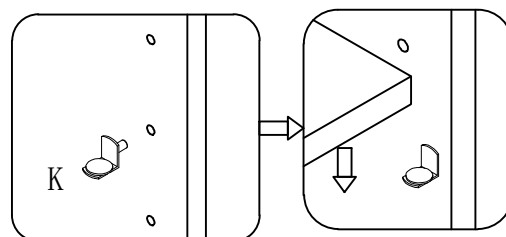
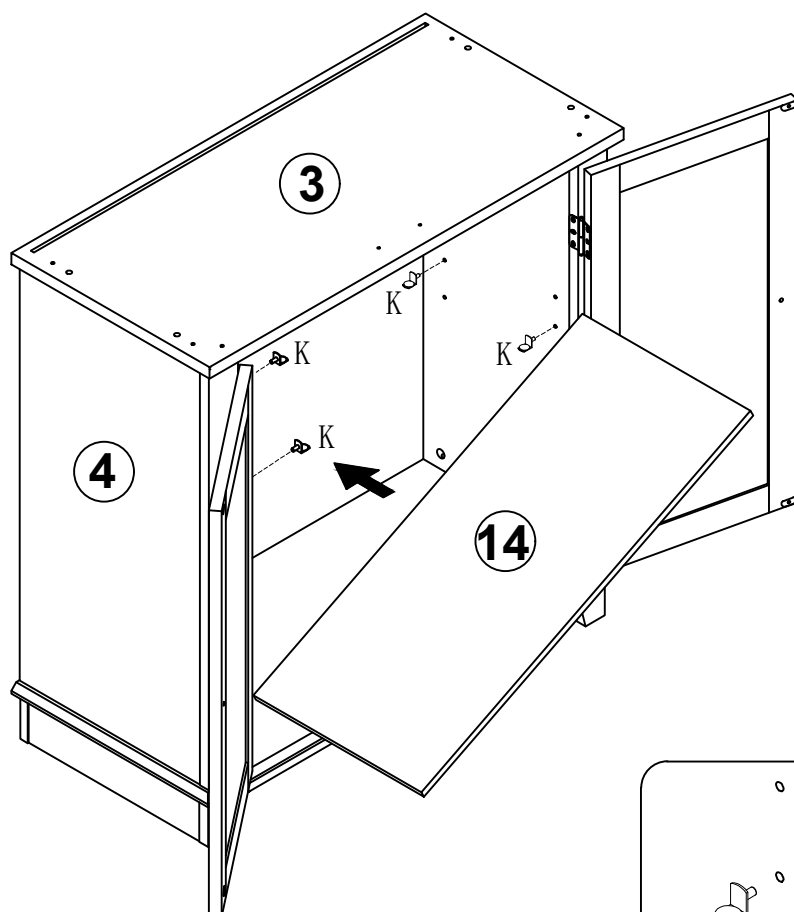
STEP 11

B:		6PCS
C:		4PCS

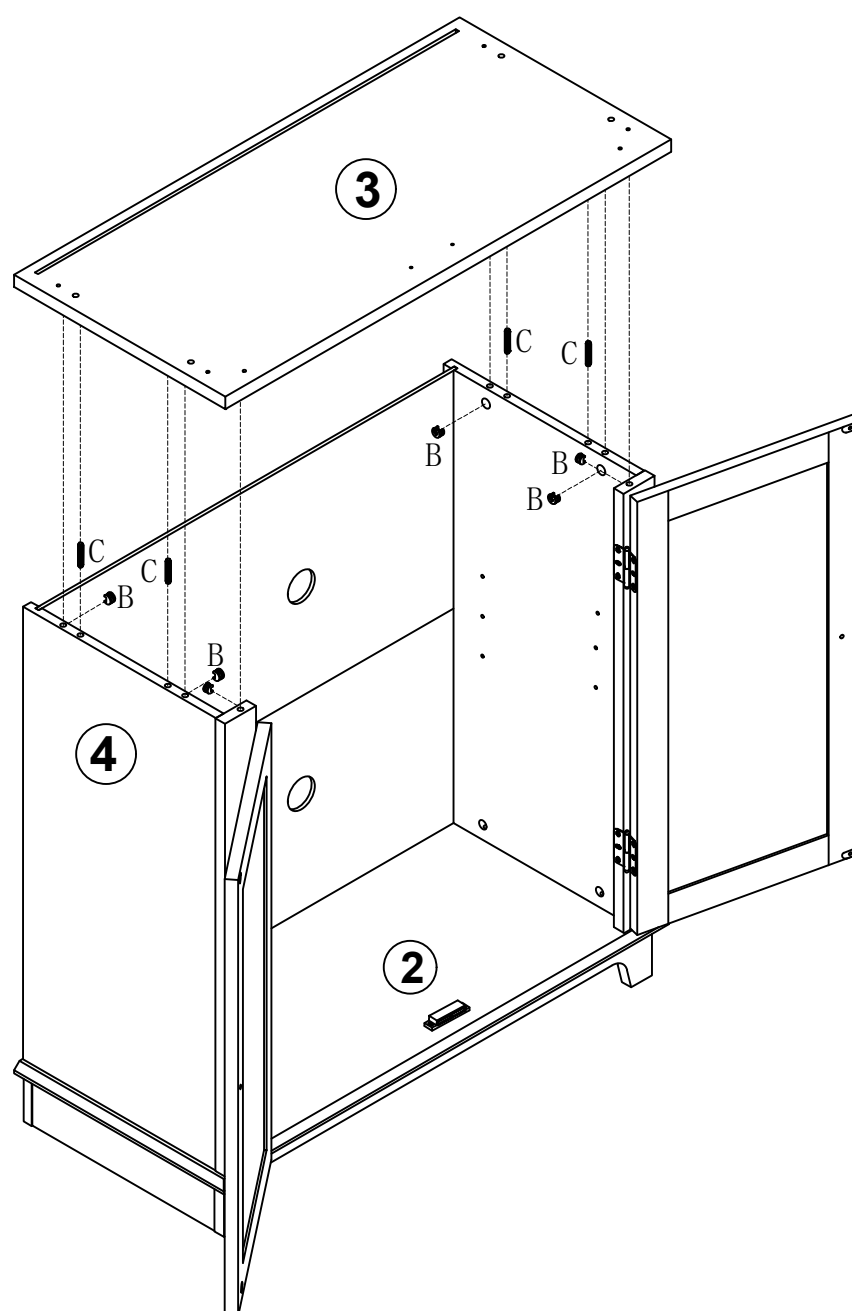




ASSEMBLY INSTRUCTION


STEP 12

K:  4PCS

ASSEMBLY INSTRUCTION

STEP 13


A:		6PCS
D:		2PCS
I:		1PCS

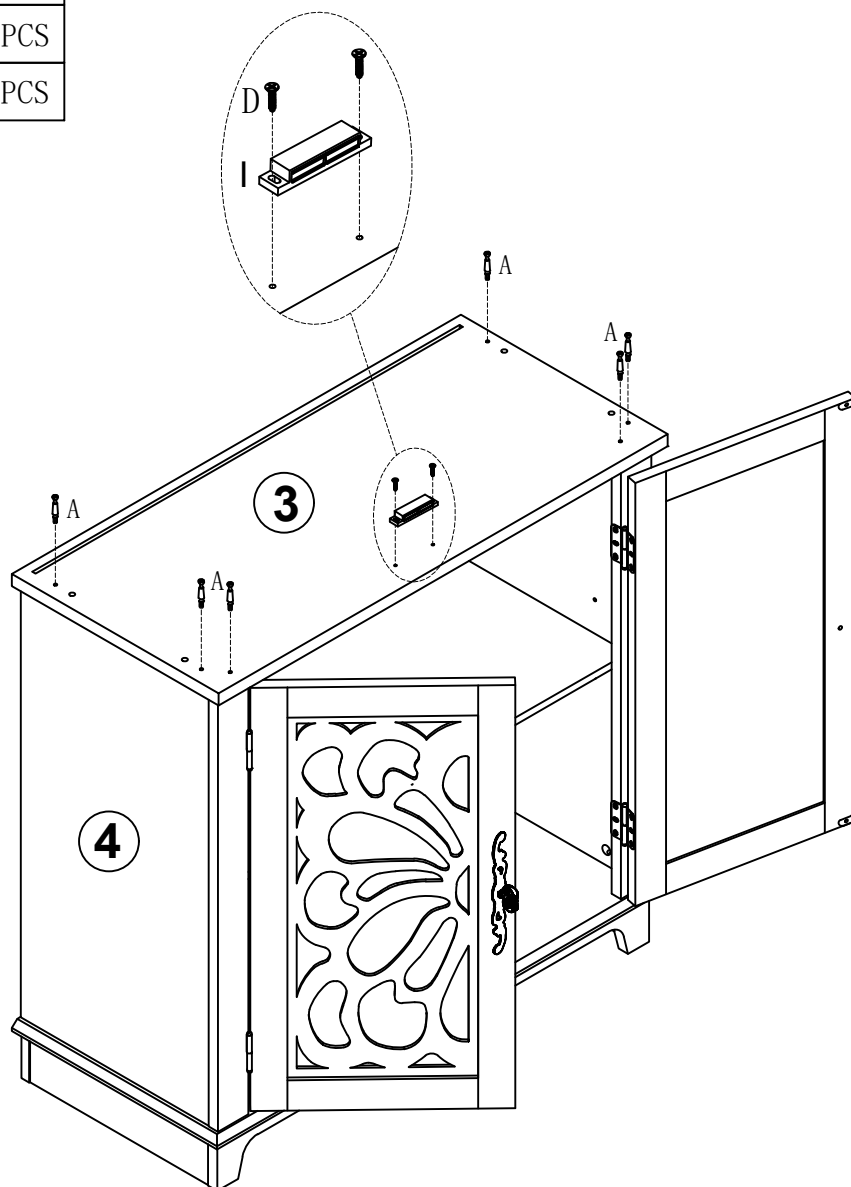

ASSEMBLY INSTRUCTION



STEP 14

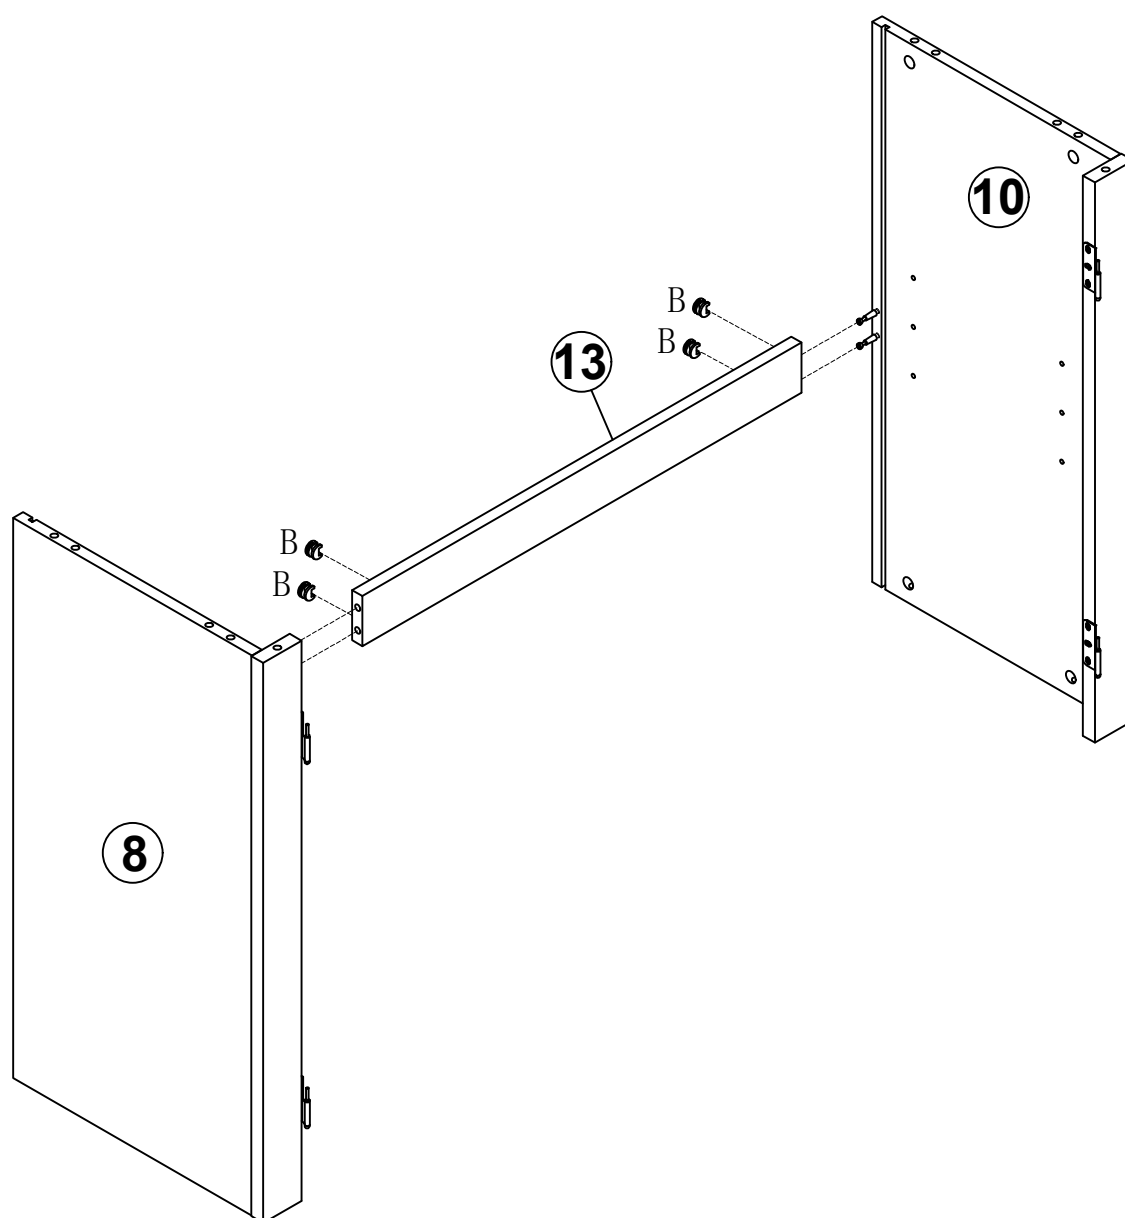
B:  4PCS



ASSEMBLY INSTRUCTION


STEP 15

B:		6PCS
C:		4PCS

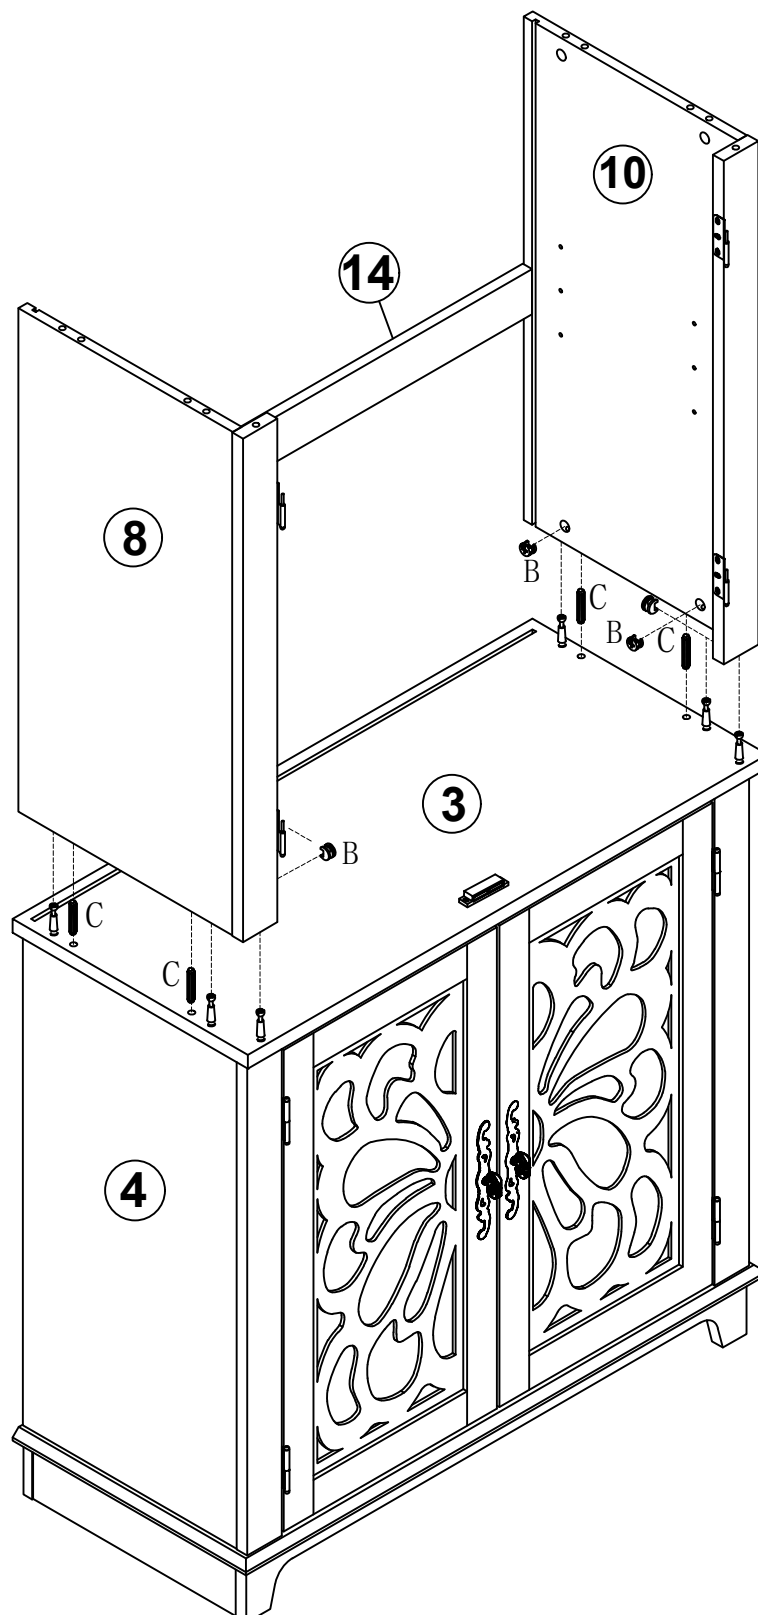


ASSEMBLY INSTRUCTION

STEP 16

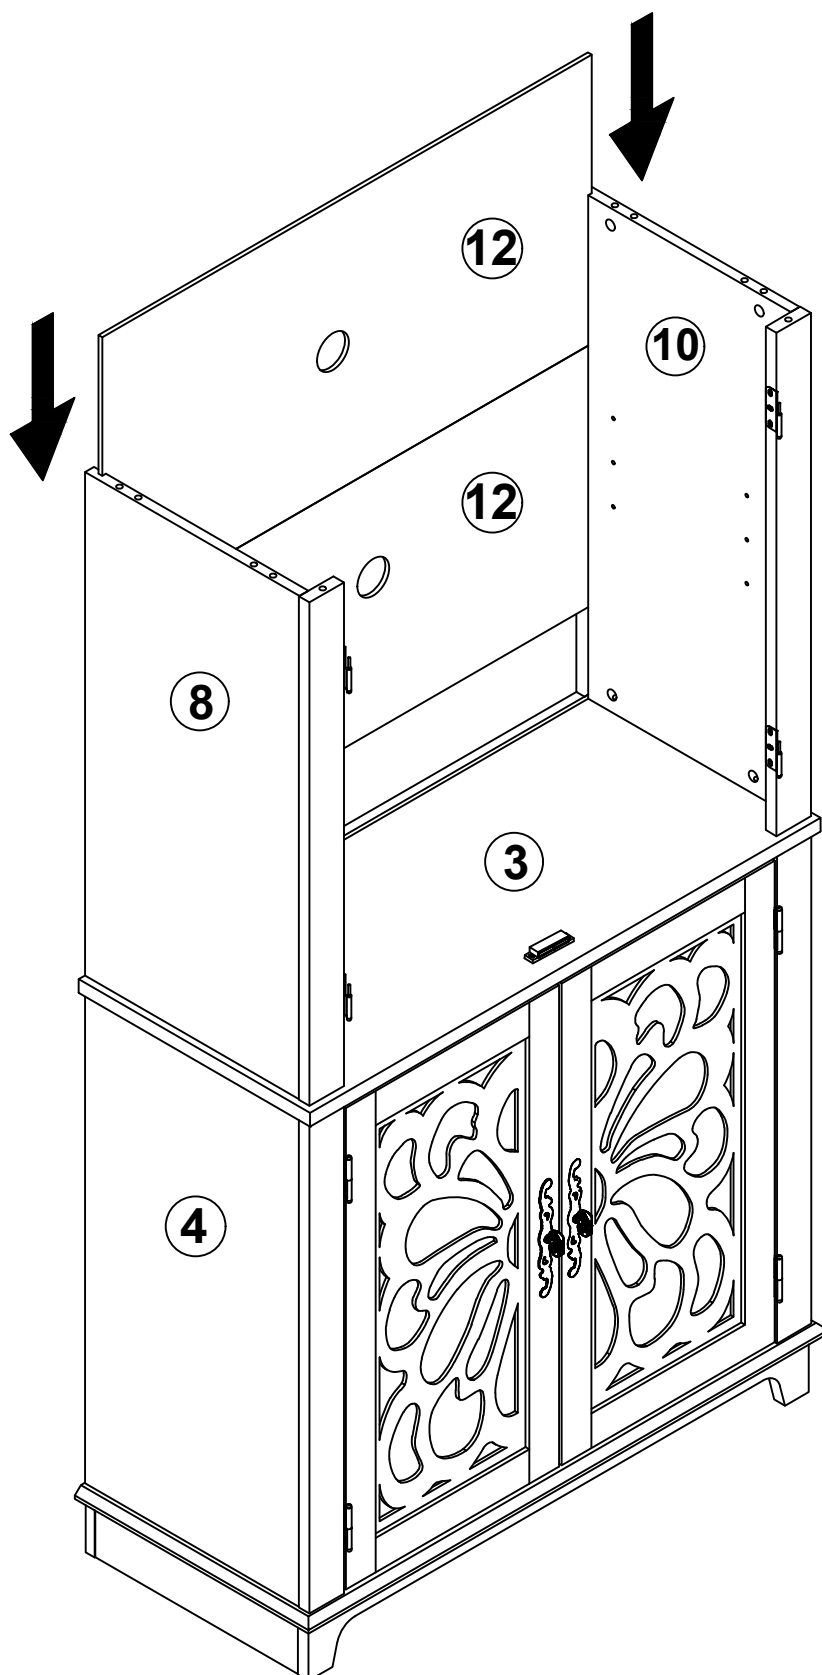




ASSEMBLY INSTRUCTION


STEP 17

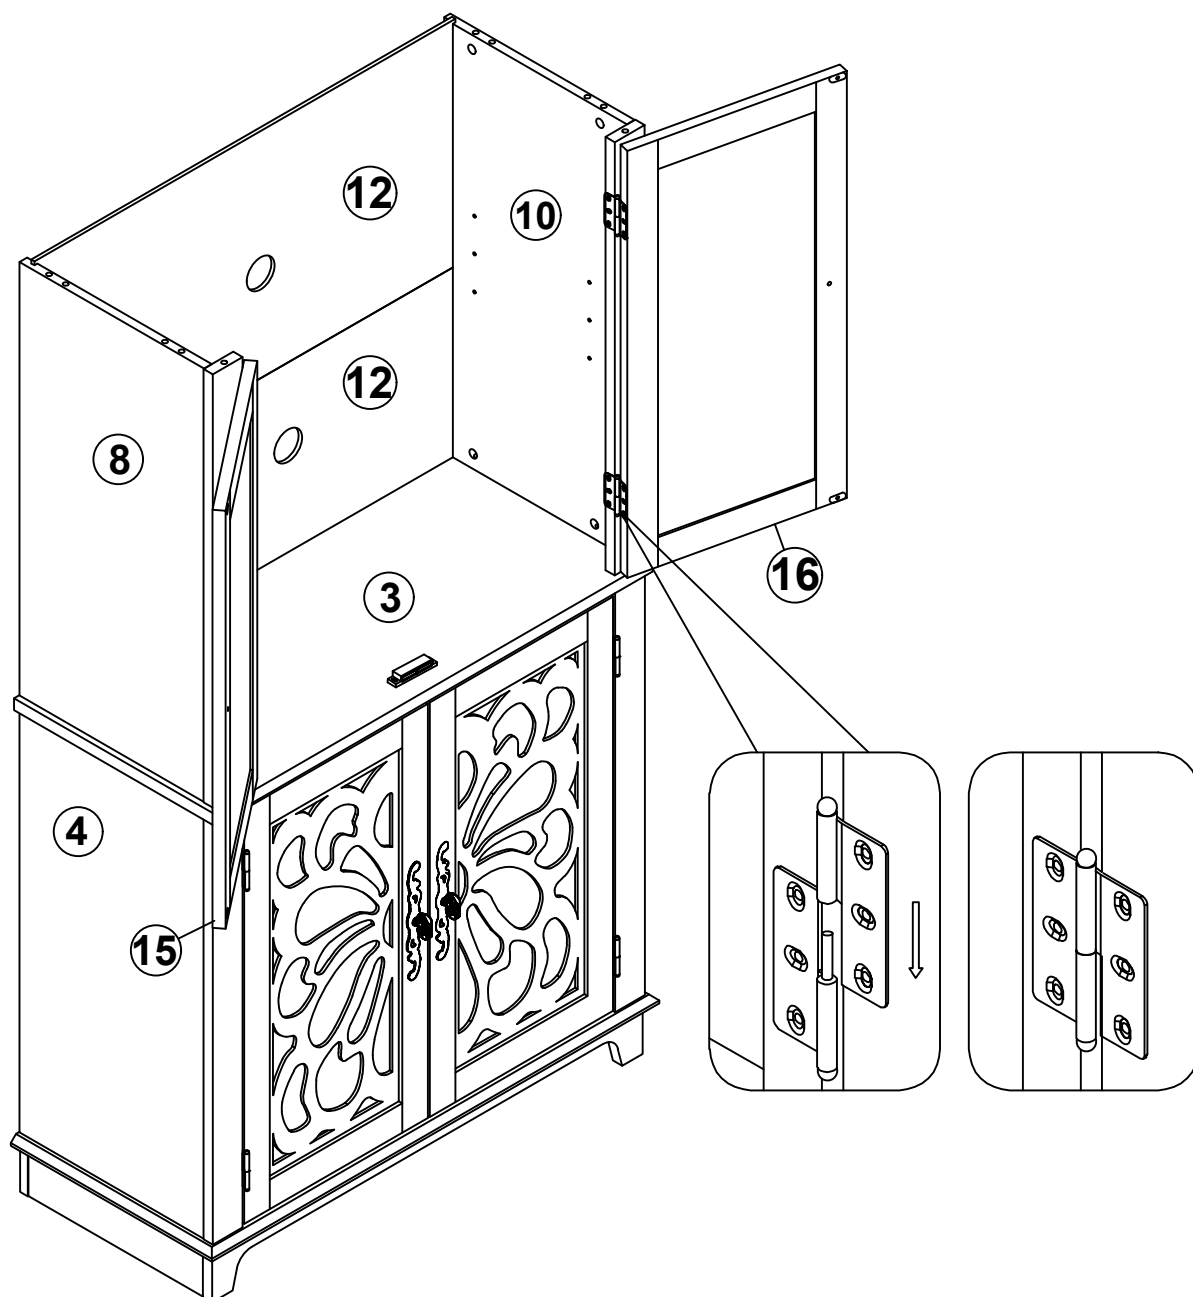

ASSEMBLY INSTRUCTION



STEP 18

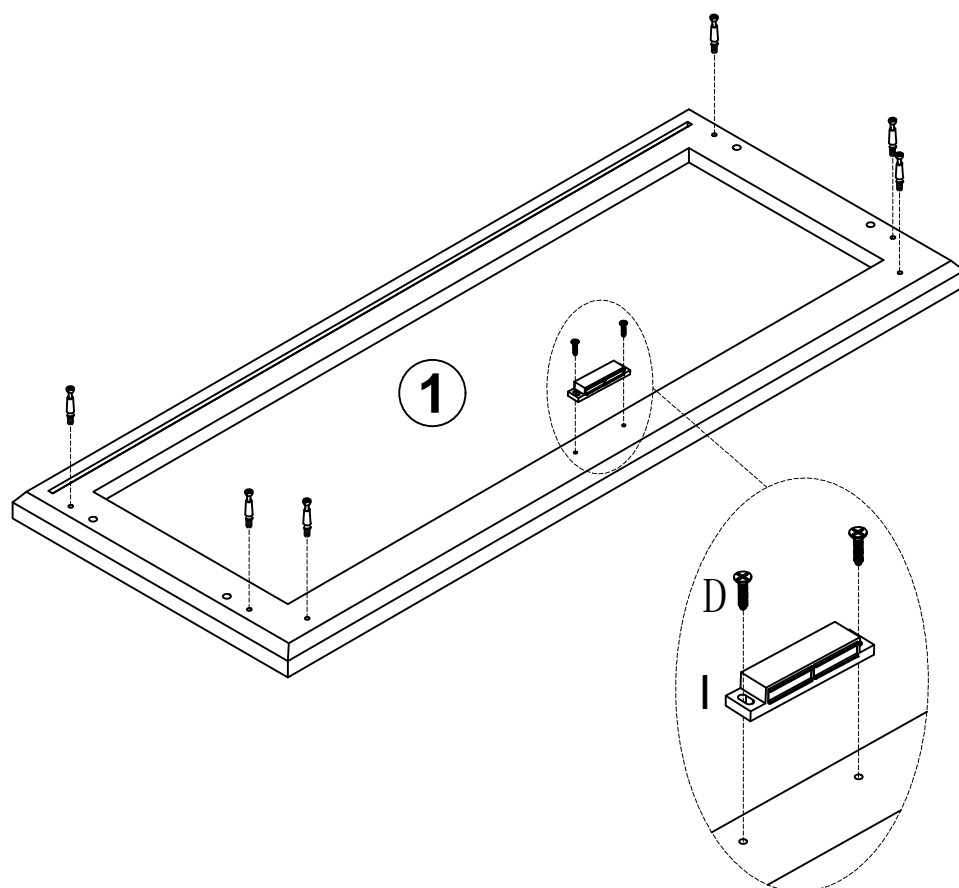
A:		6PCS
D:		2PCS
I:		1PCS



ASSEMBLY INSTRUCTION


STEP 19


B:		6PCS
C:		4PCS

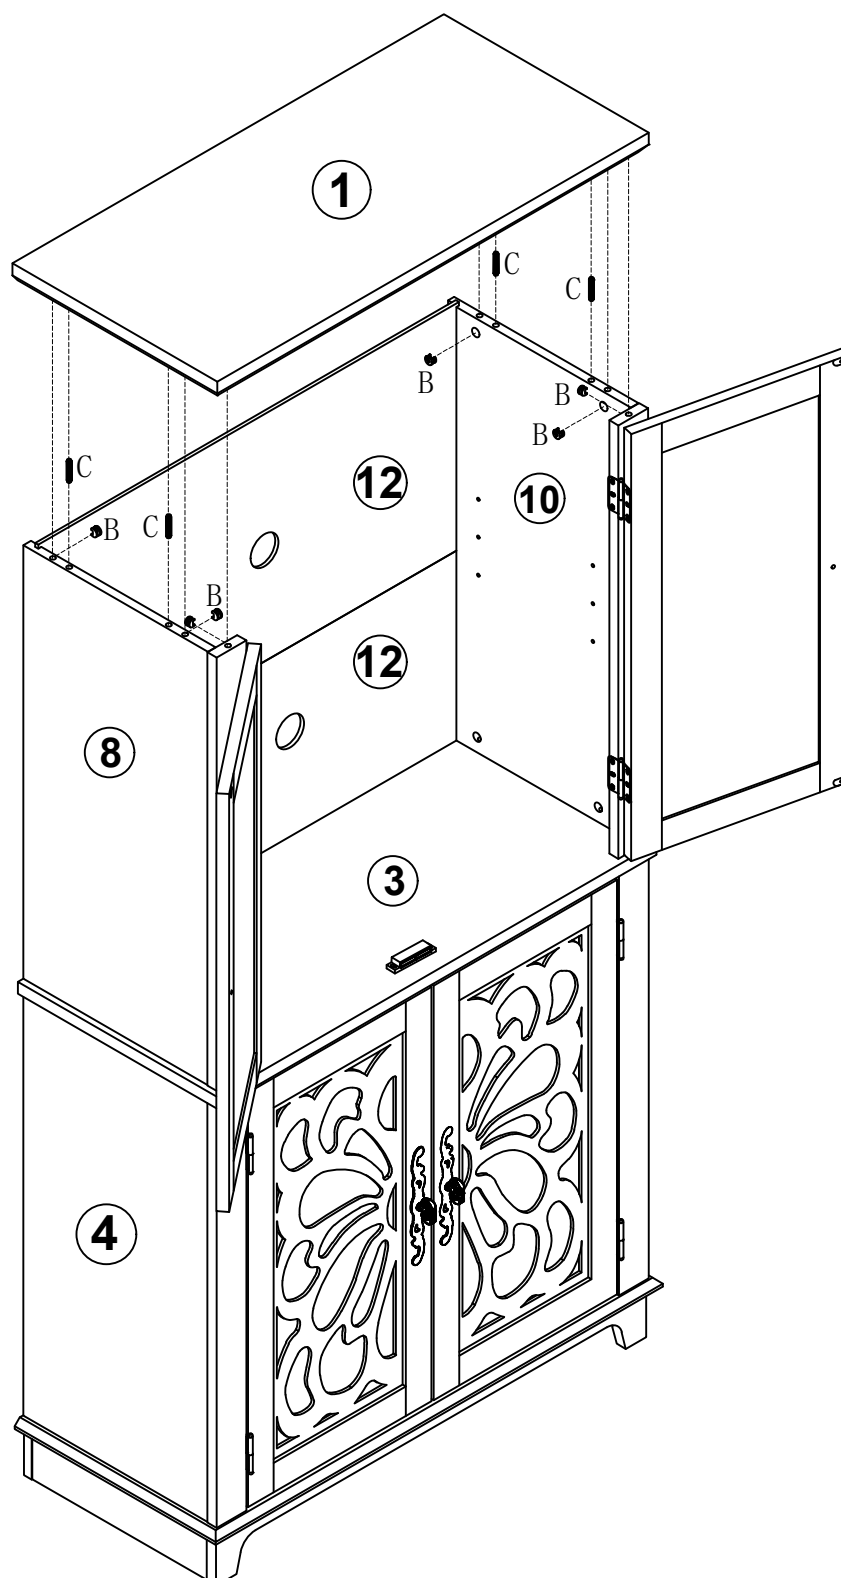

ASSEMBLY INSTRUCTION


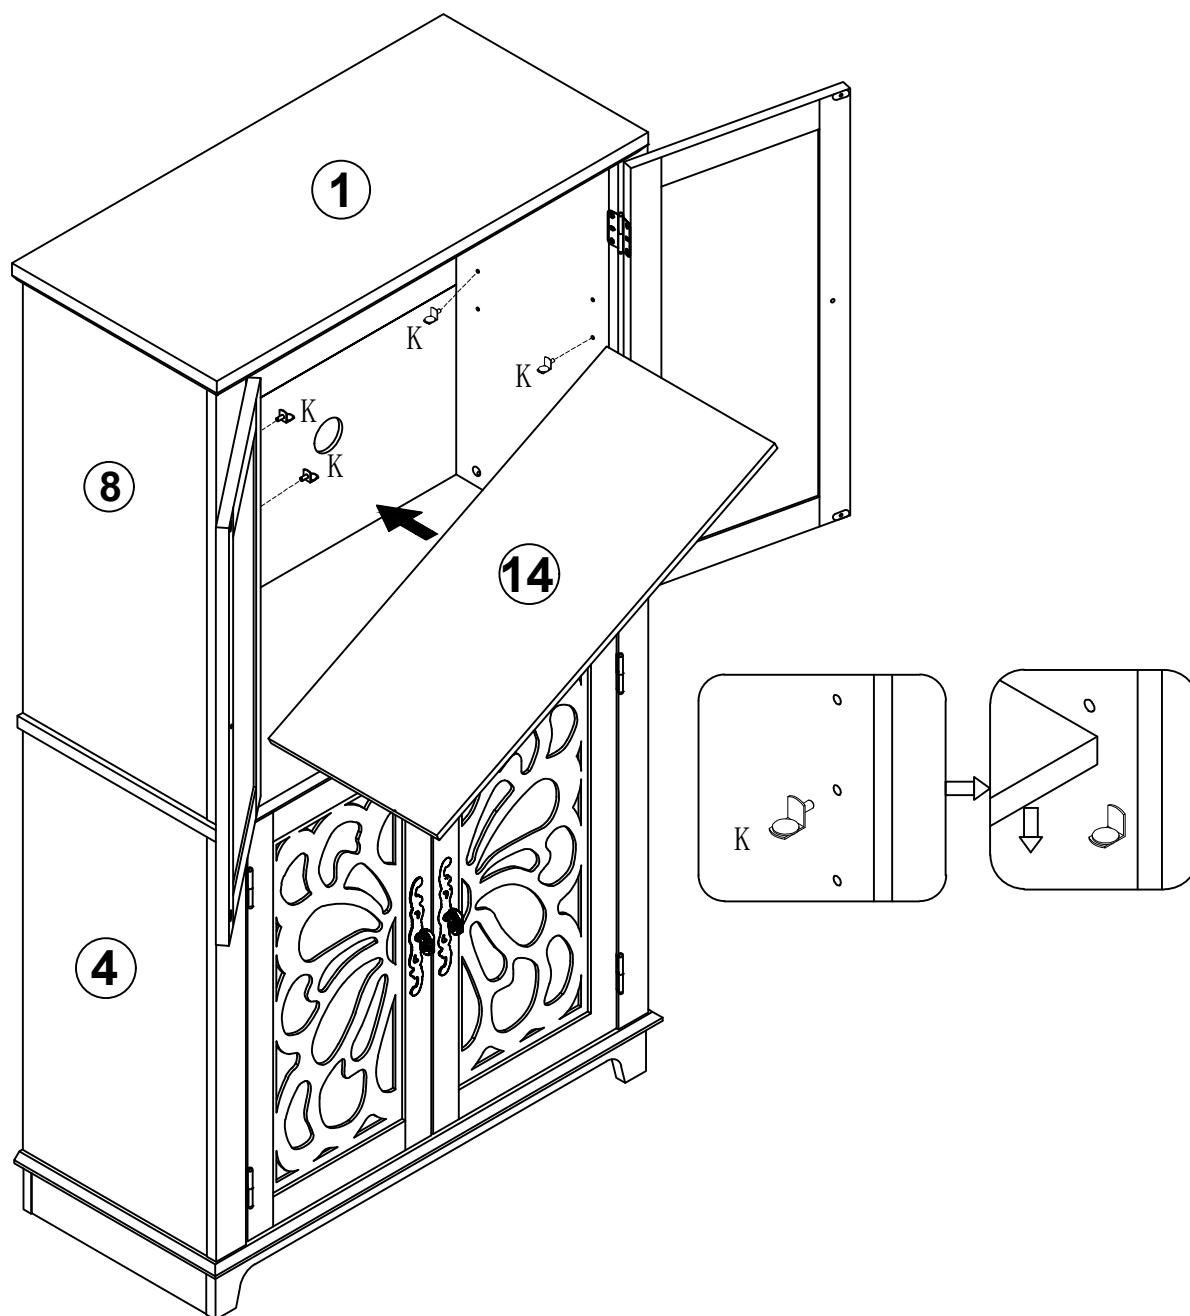
STEP 20

E:  46PCS

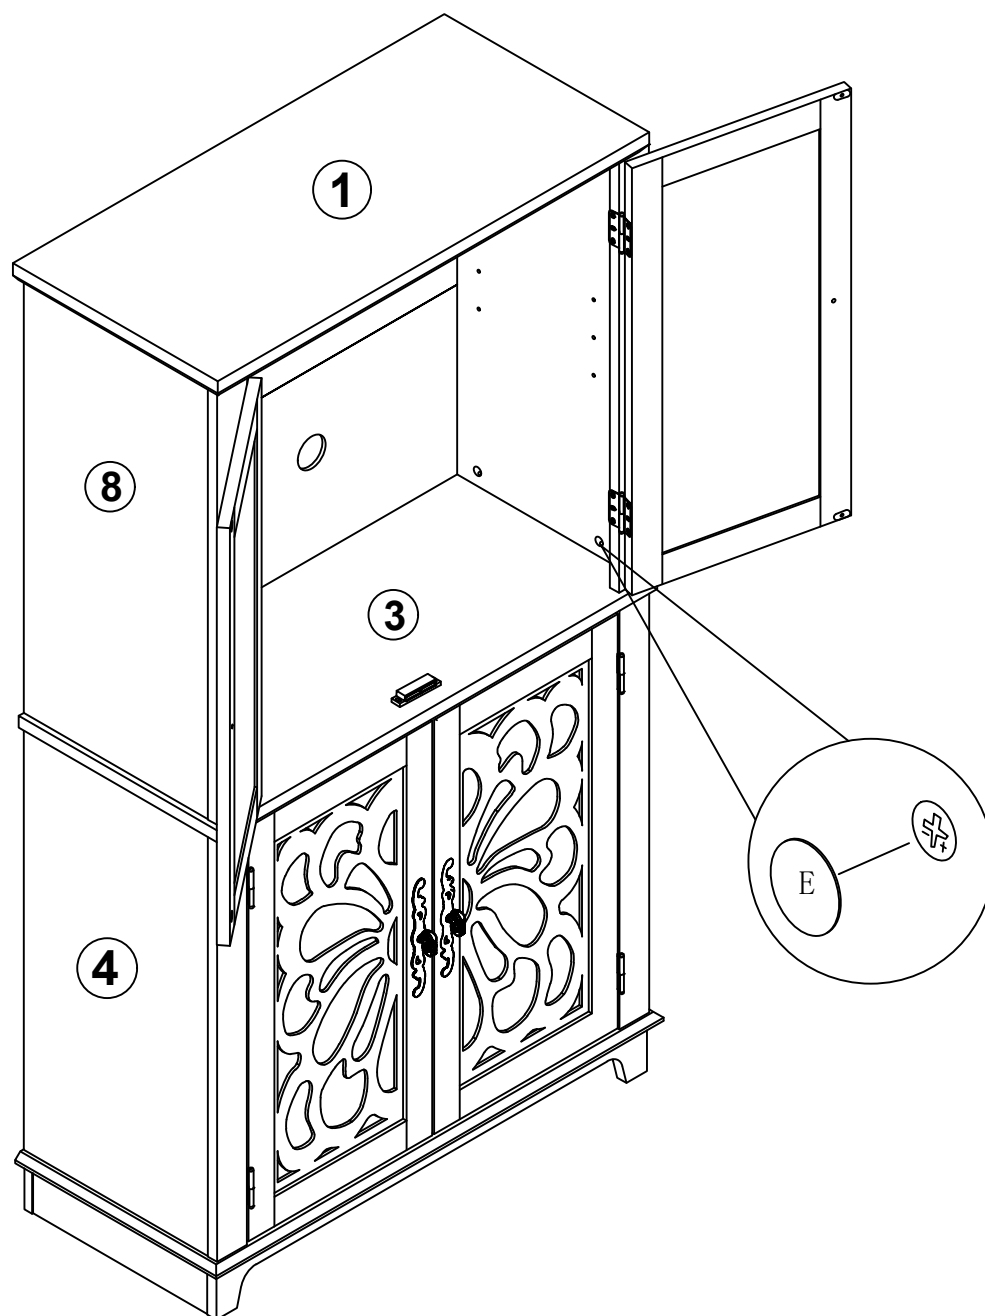



ASSEMBLY INSTRUCTION


STEP 21

K:  4PCS

ASSEMBLY INSTRUCTION

STEP 22



D:		8PCS
J:		8PCS

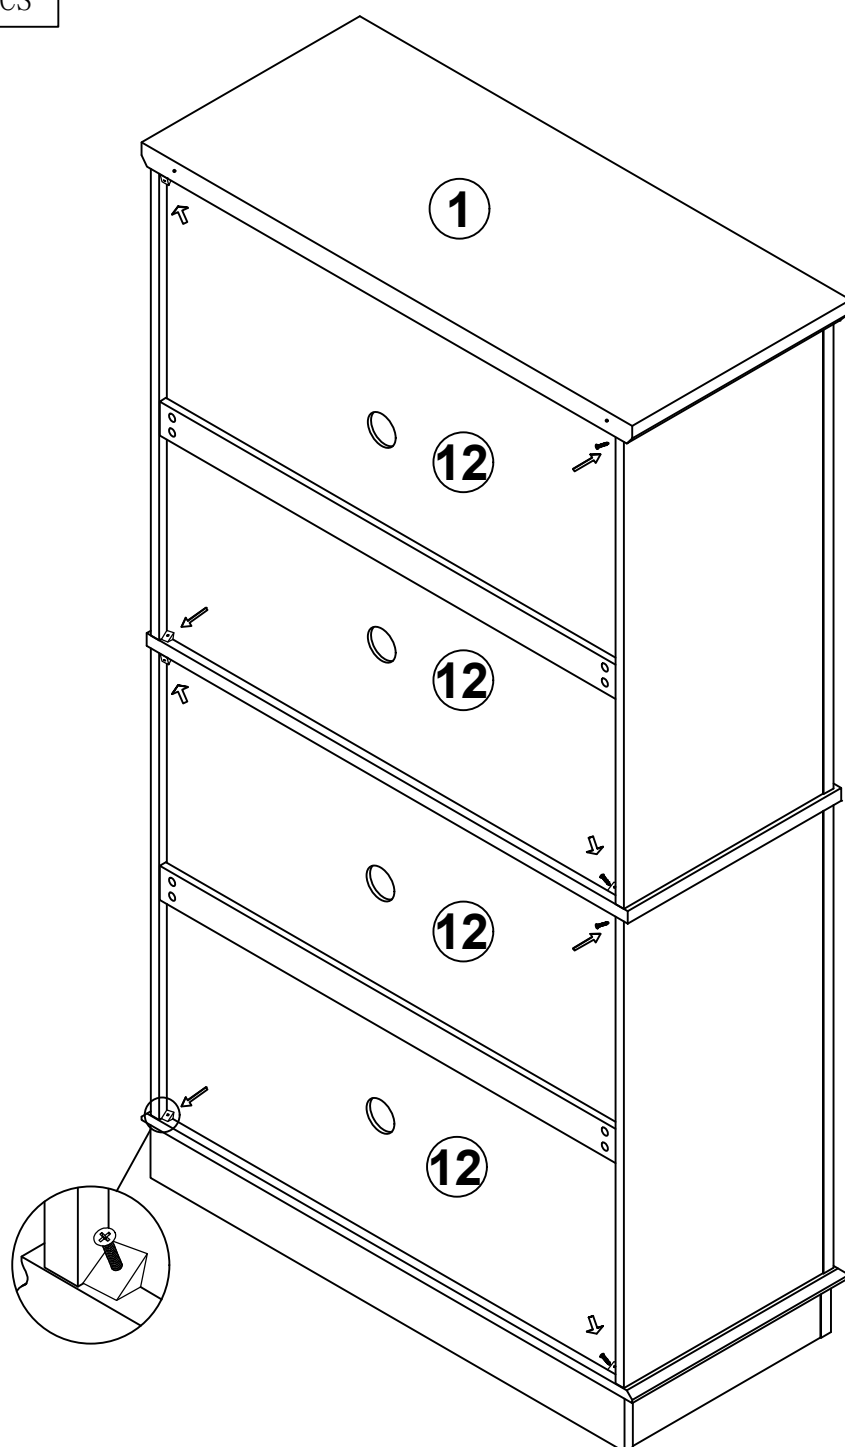

ASSEMBLY INSTRUCTION

STEP 23

L x 2

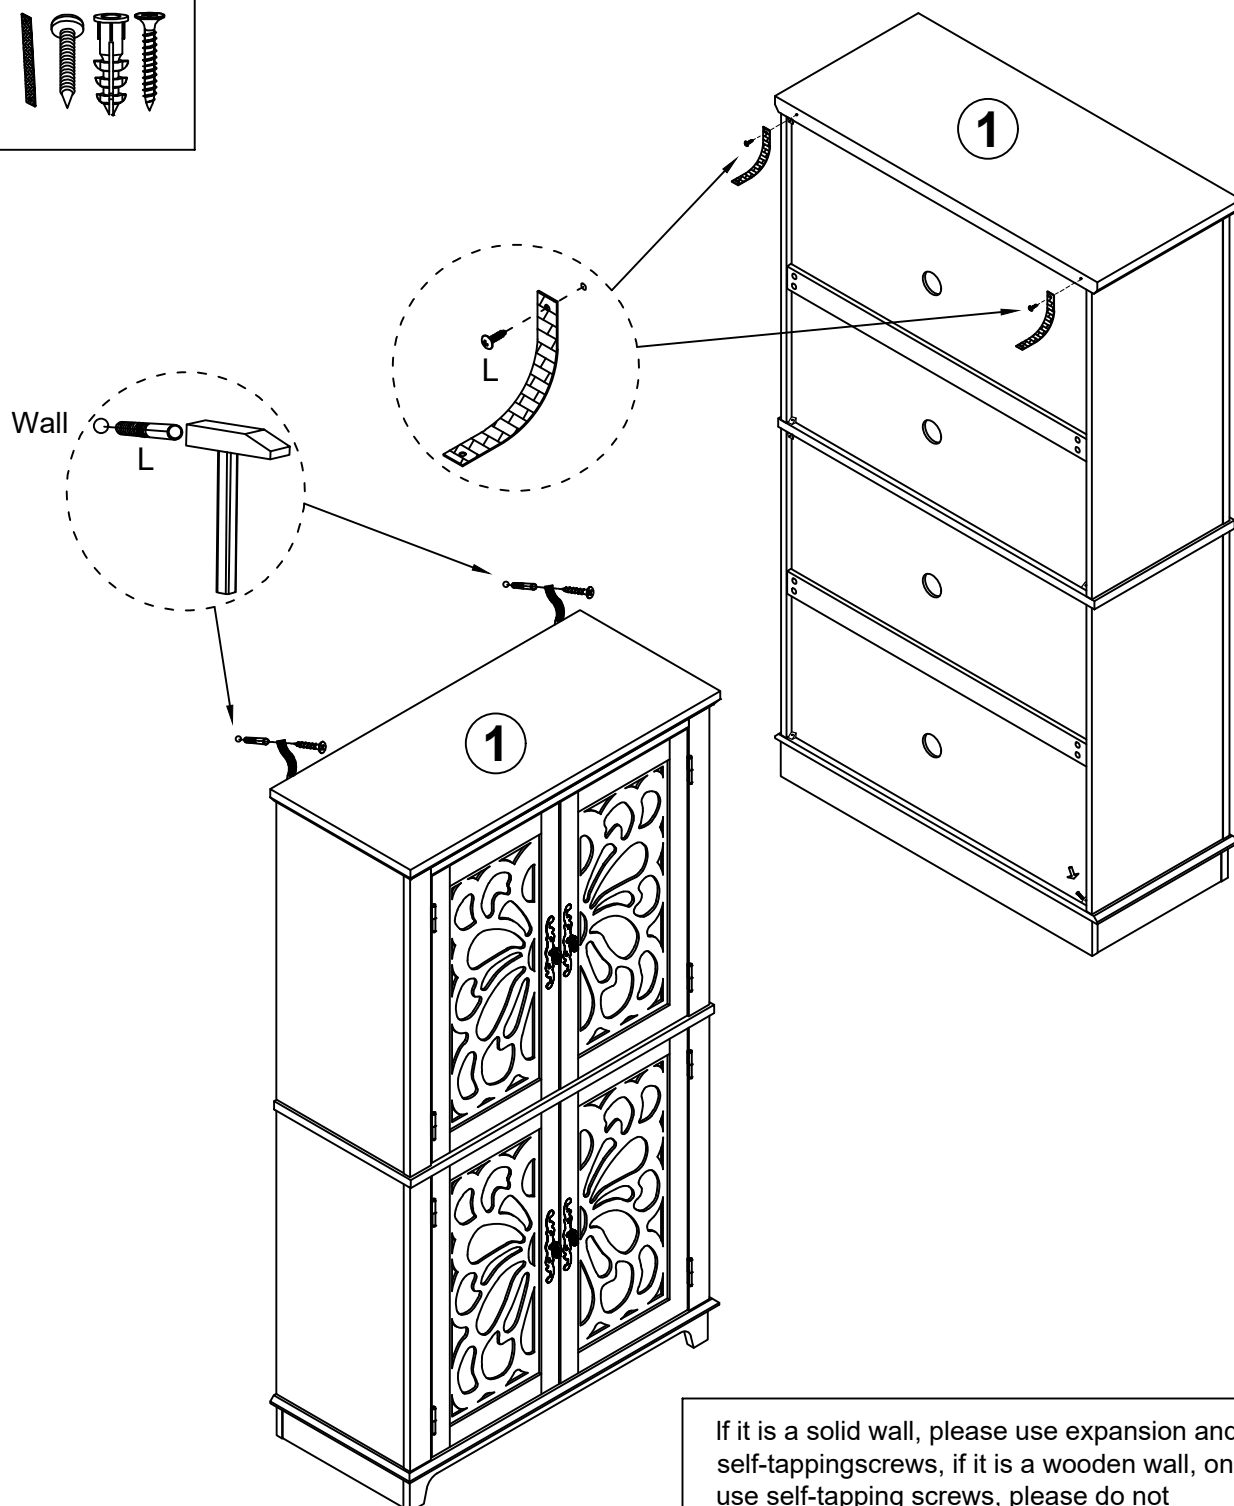

If it is a solid wall, please use expansion and self-tapping screws, if it is a wooden wall, only use self-tapping screws, please do not overtighten the screws