



# Assembly Instruction

Item: GMB02

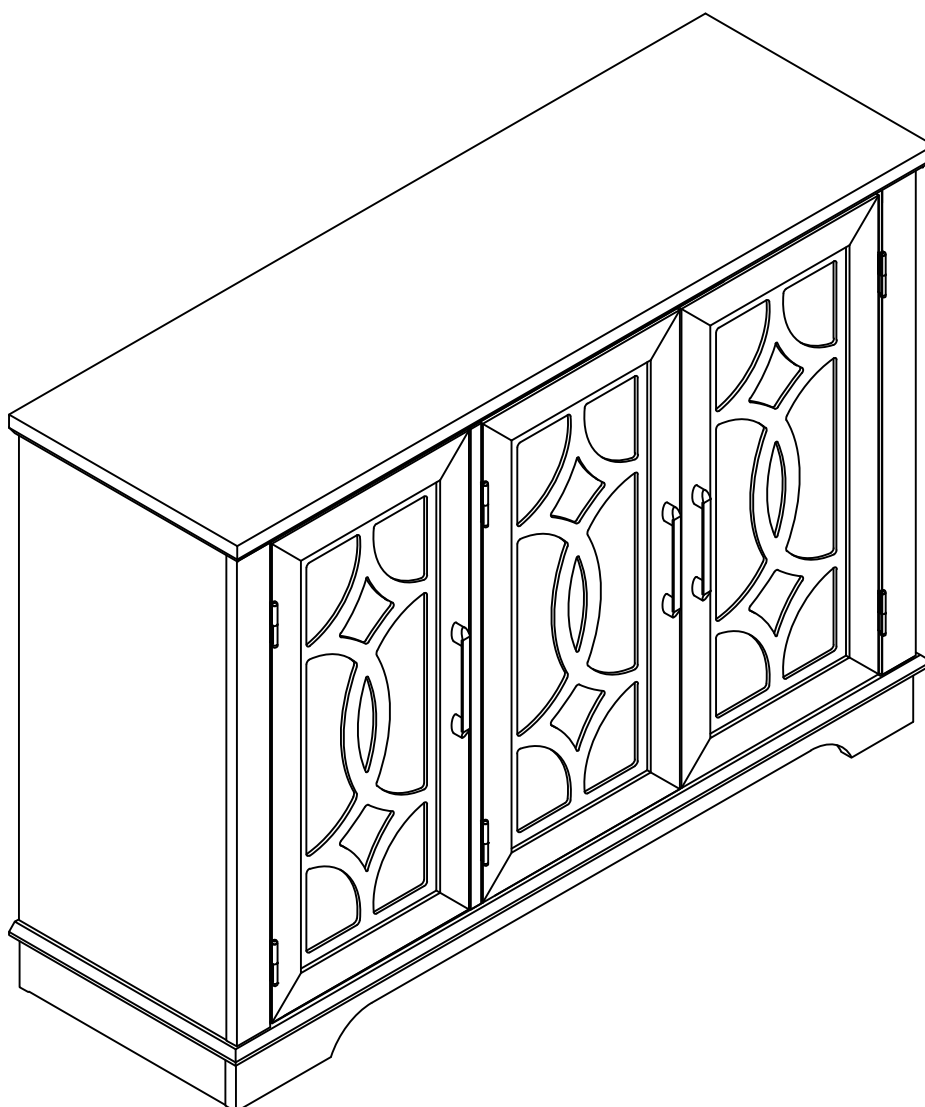


MADE IN CHINA

## ASSEMBLY INSTRUCTION

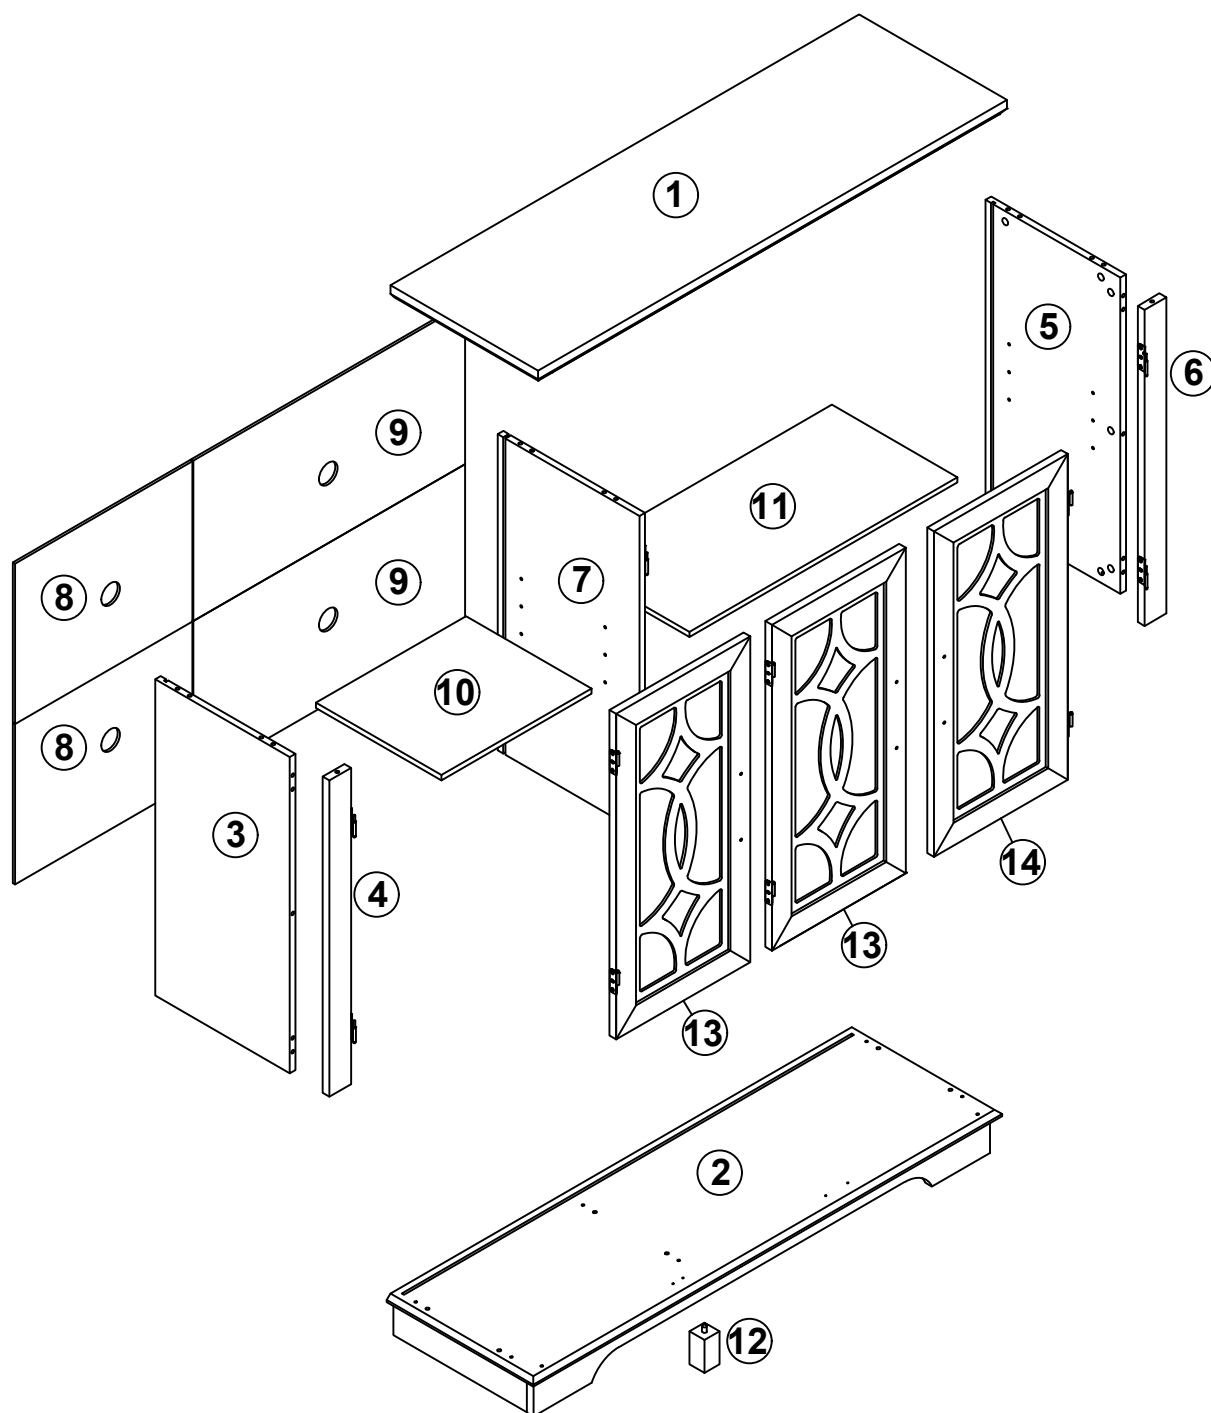

# HARDWARE

A x 22+2spare




Ø6 x 32mm

B x 22+2spare




Ø15 x 10mm

C x 16+2spare




Ø8\*30mm

D x 20+2spare



Ø3\*18mm

E x 2

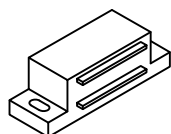


45\*14\*14 mm

F x 3




128\*20mm

G x 6+1spare




M4\*22mm

H x 2




71\*15\*12 mm

I x 12+1spare



J x 8+1spare

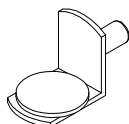


K x 24



Ø20mm


L x 2

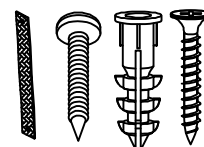


## ASSEMBLY INSTRUCTION

## Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

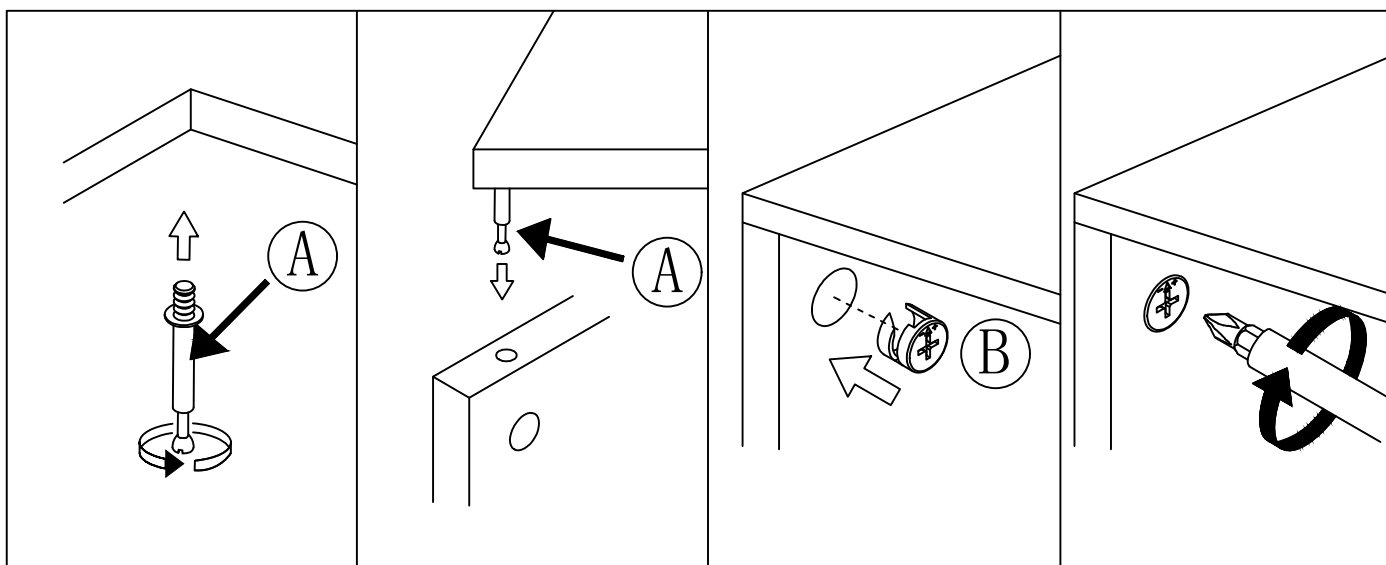


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

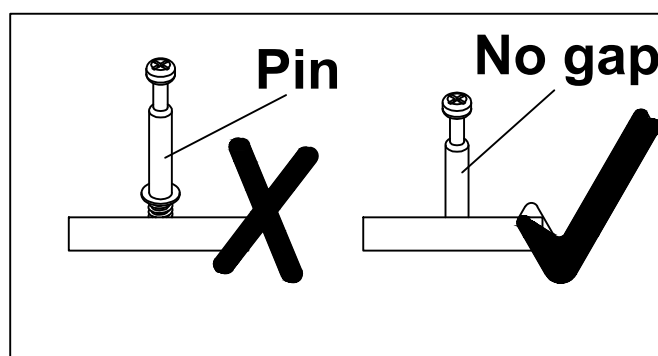



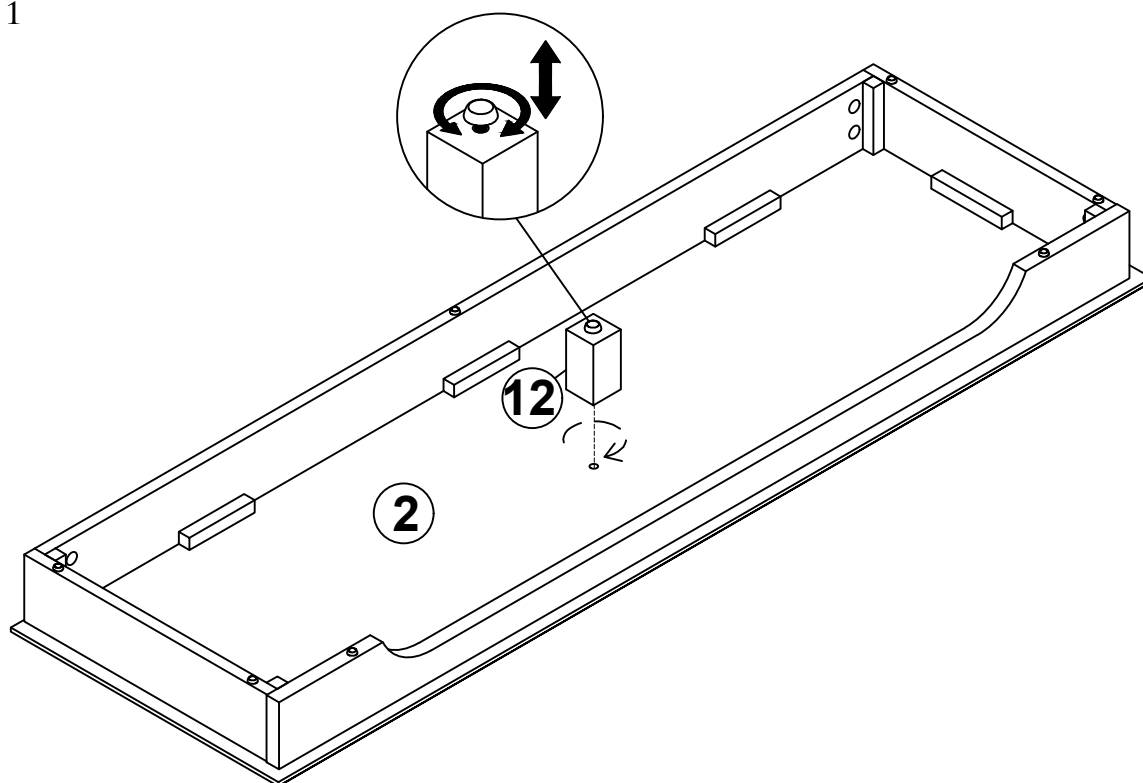


## ASSEMBLY INSTRUCTION

## STEP 1






## STEP 2

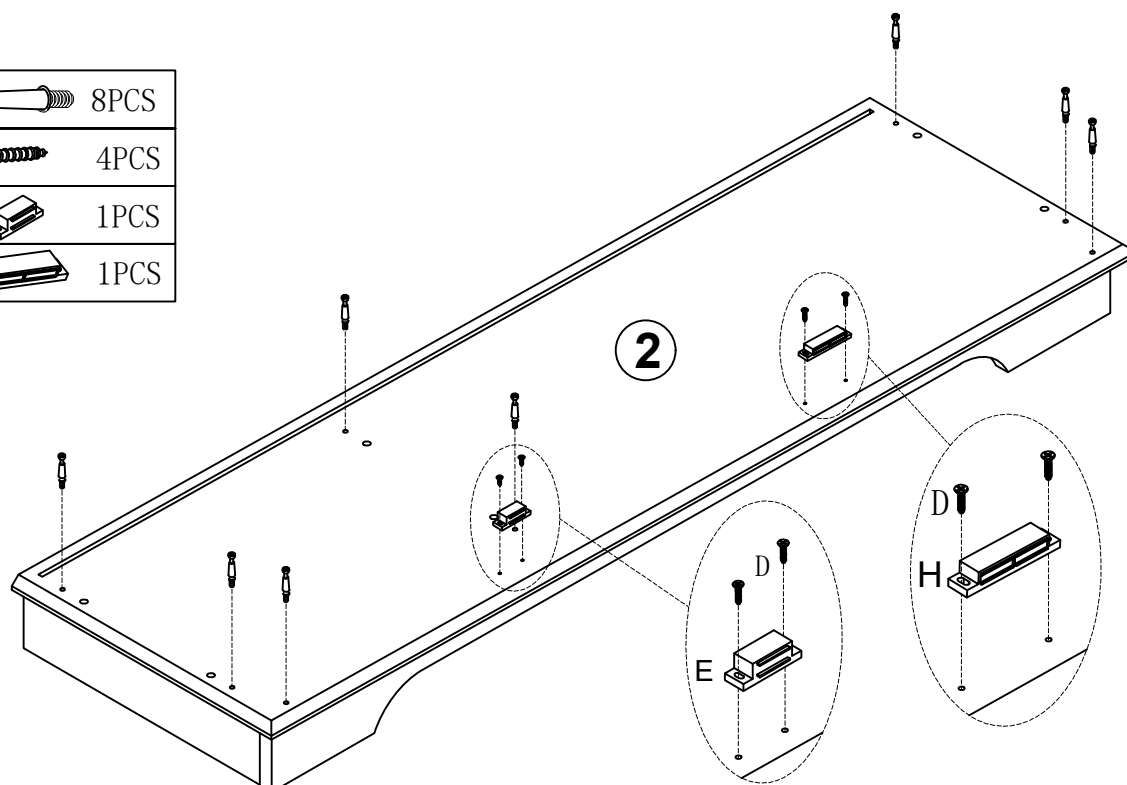
A:		8PCS
D:		4PCS
E:		1PCS
H:		1PCS



## ASSEMBLY INSTRUCTION



## STEP 3

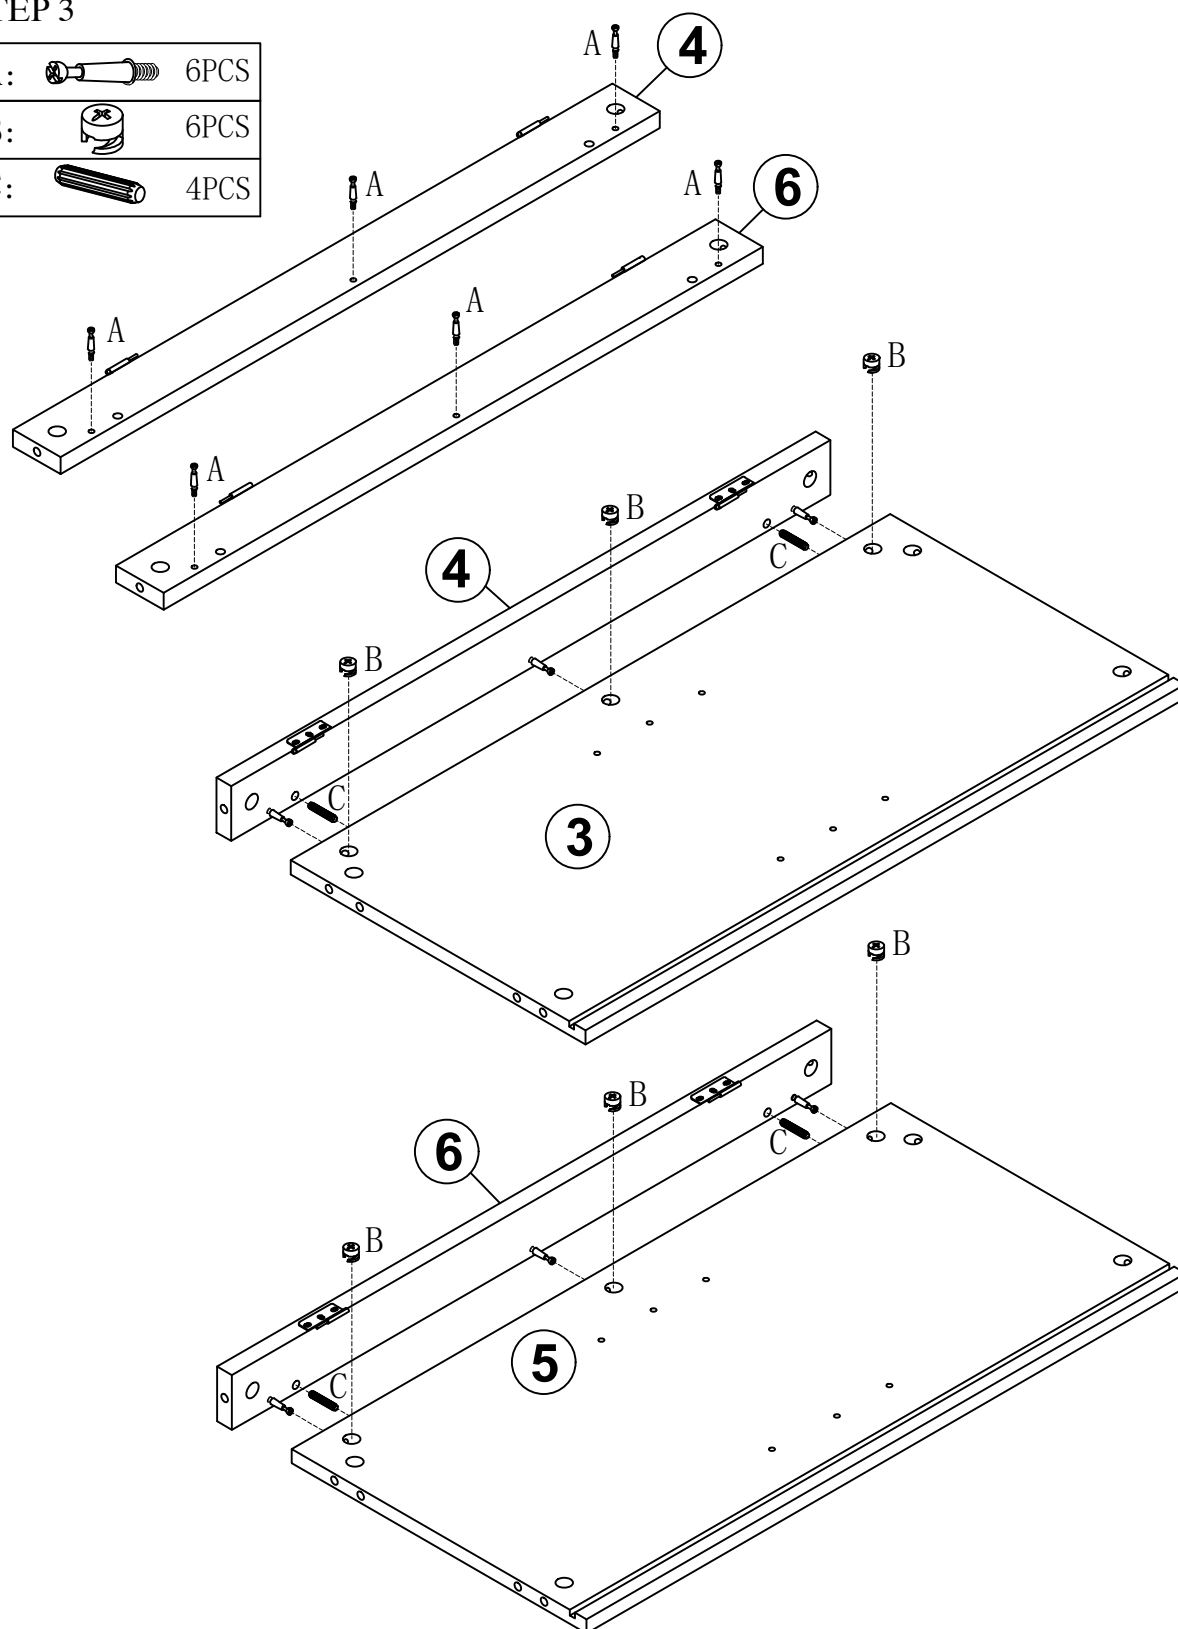
A:		6PCS
B:		6PCS
C:		4PCS



## ASSEMBLY INSTRUCTION


## STEP 4

B:		8PCS
C:		6PCS

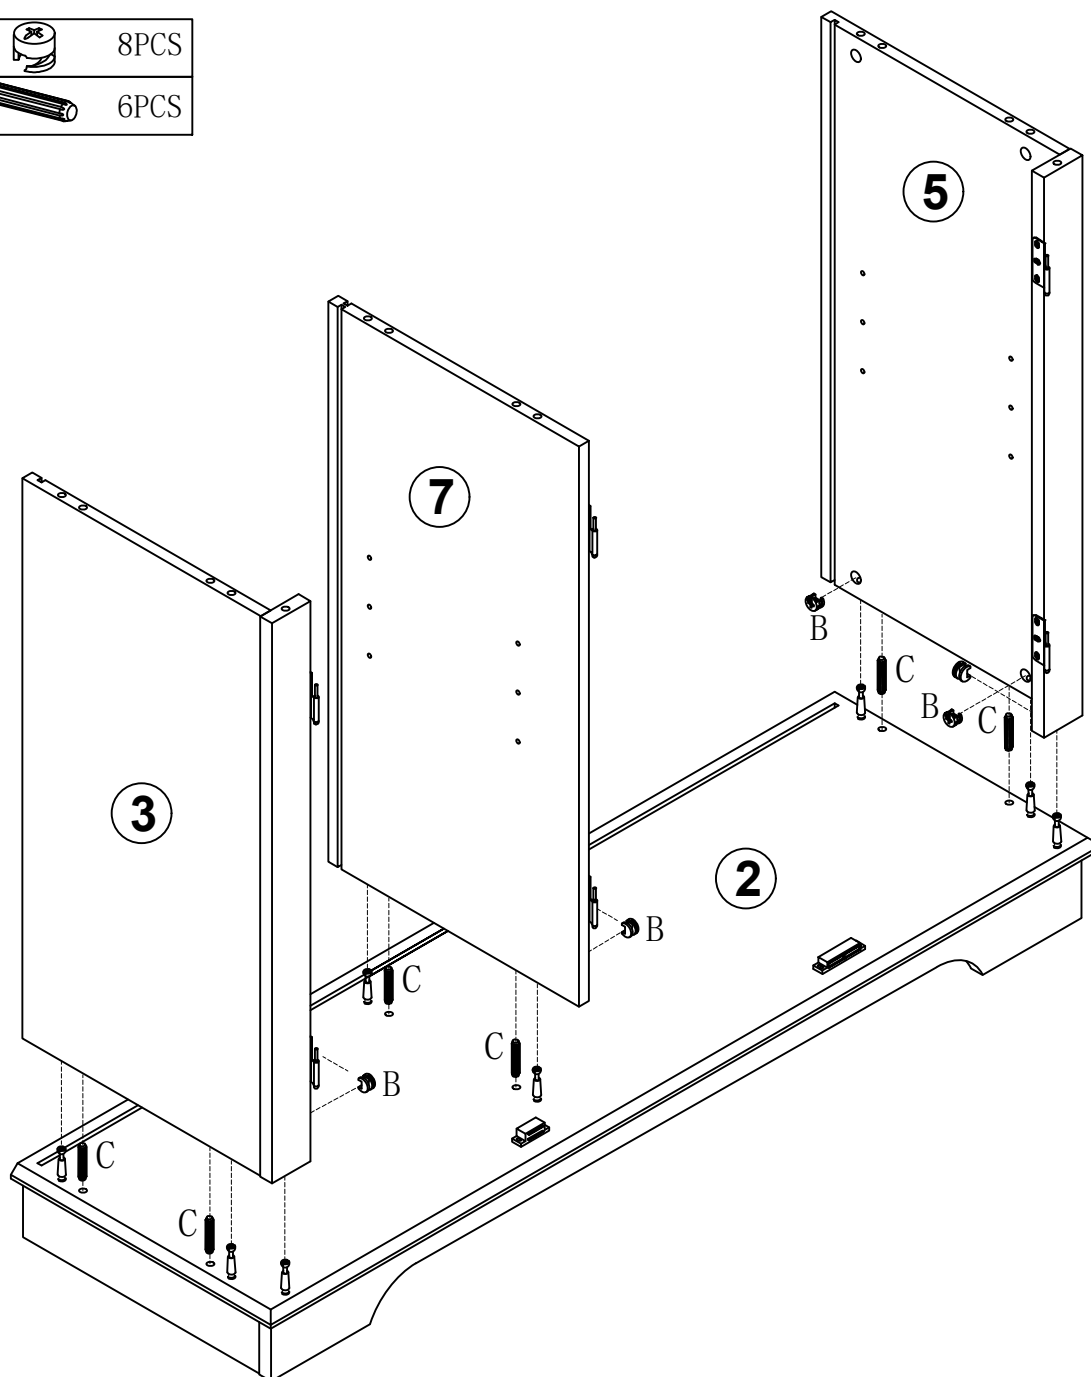

## ASSEMBLY INSTRUCTION

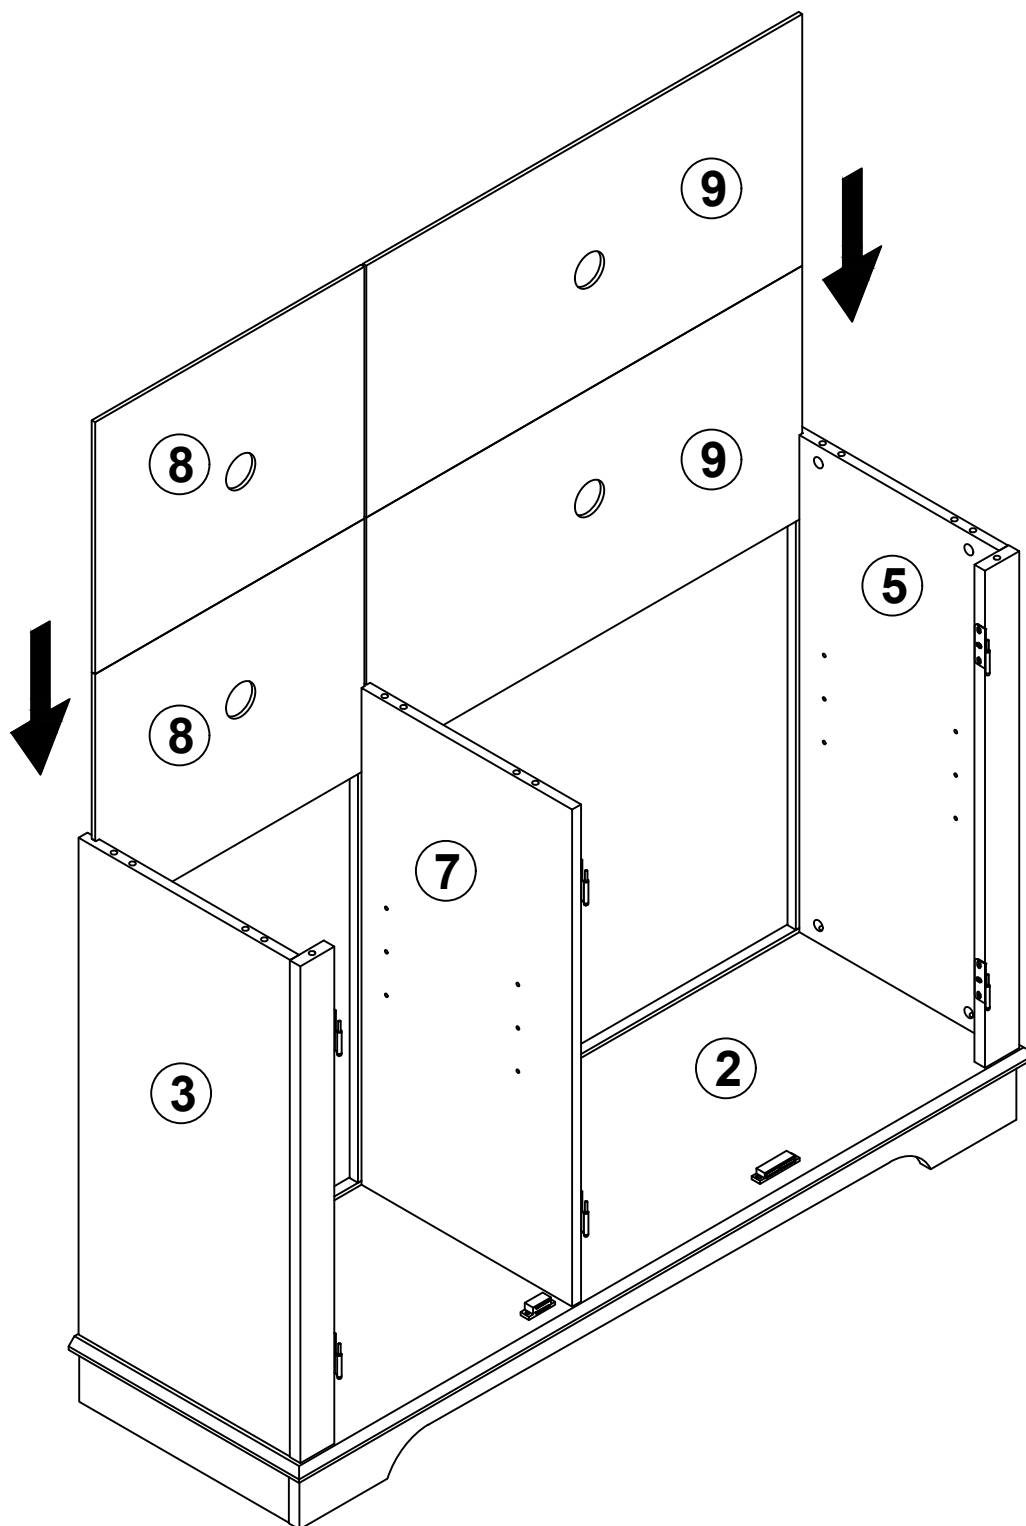

### STEP 5






## ASSEMBLY INSTRUCTION


## STEP 6

F:		3PCS
G:		6PCS

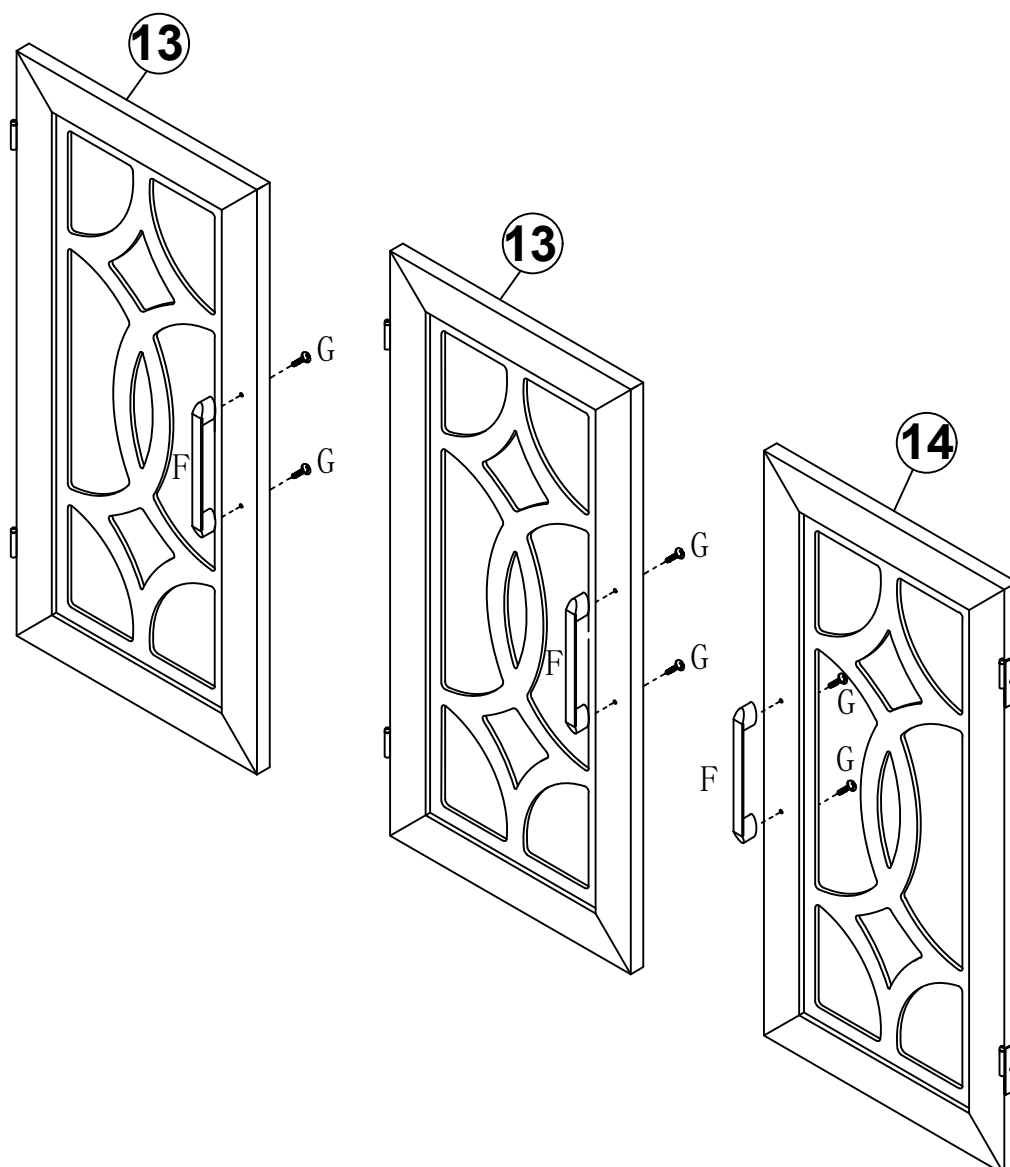



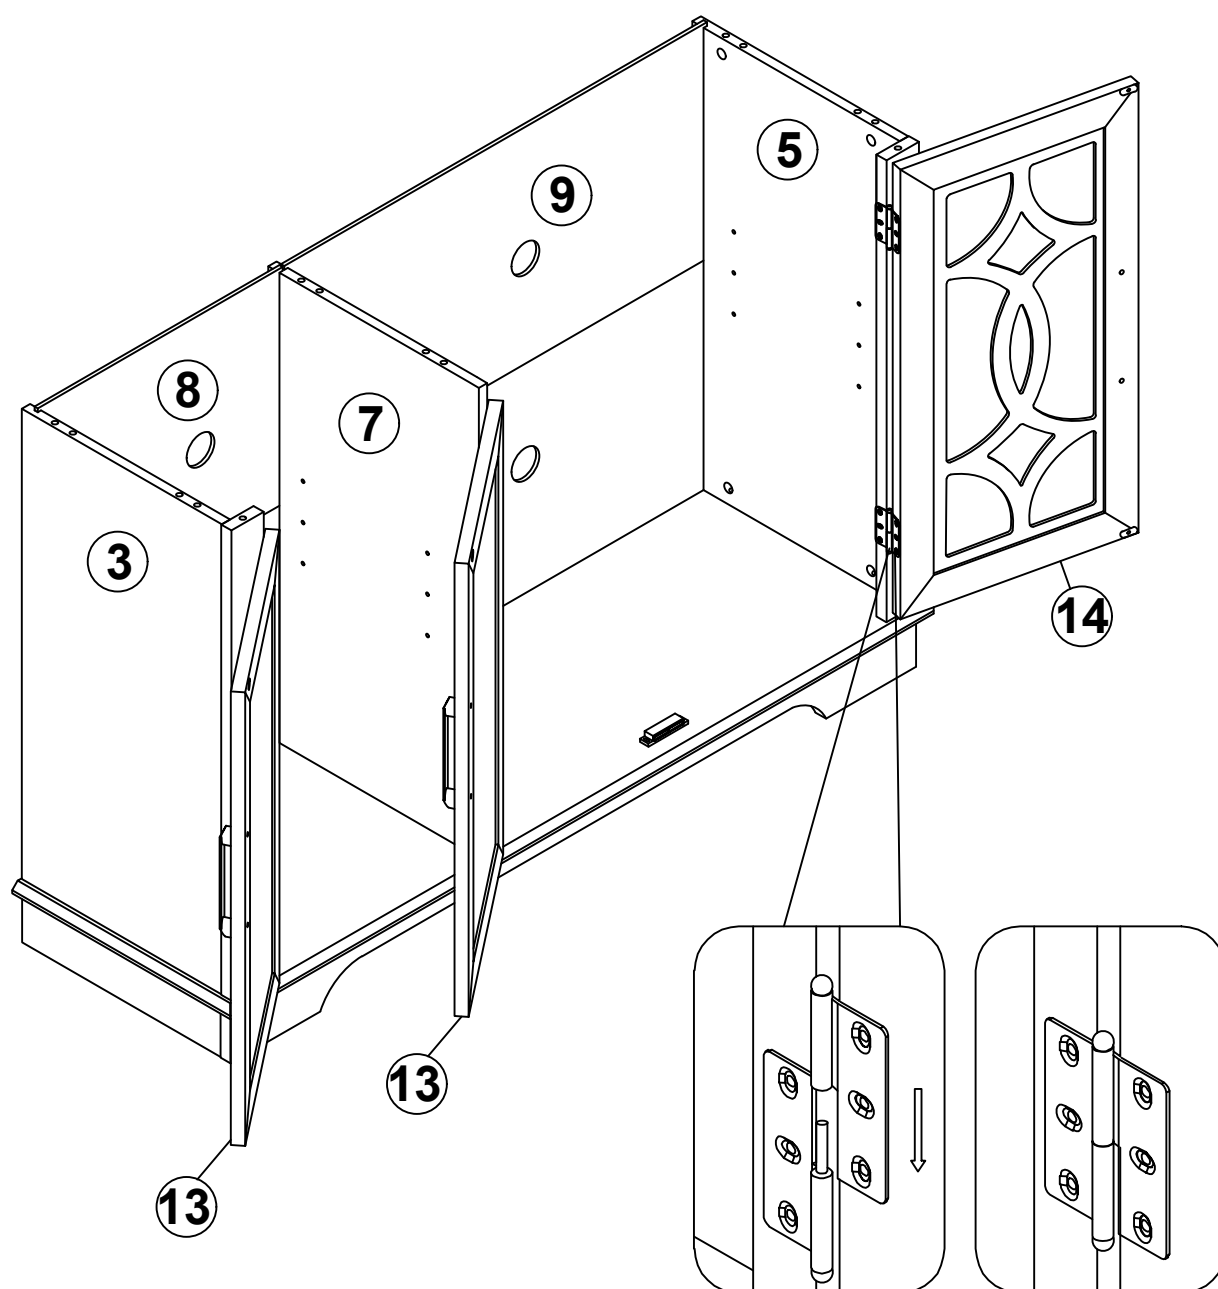

# ASSEMBLY INSTRUCTION


## STEP 7



## ASSEMBLY INSTRUCTION



## STEP 8

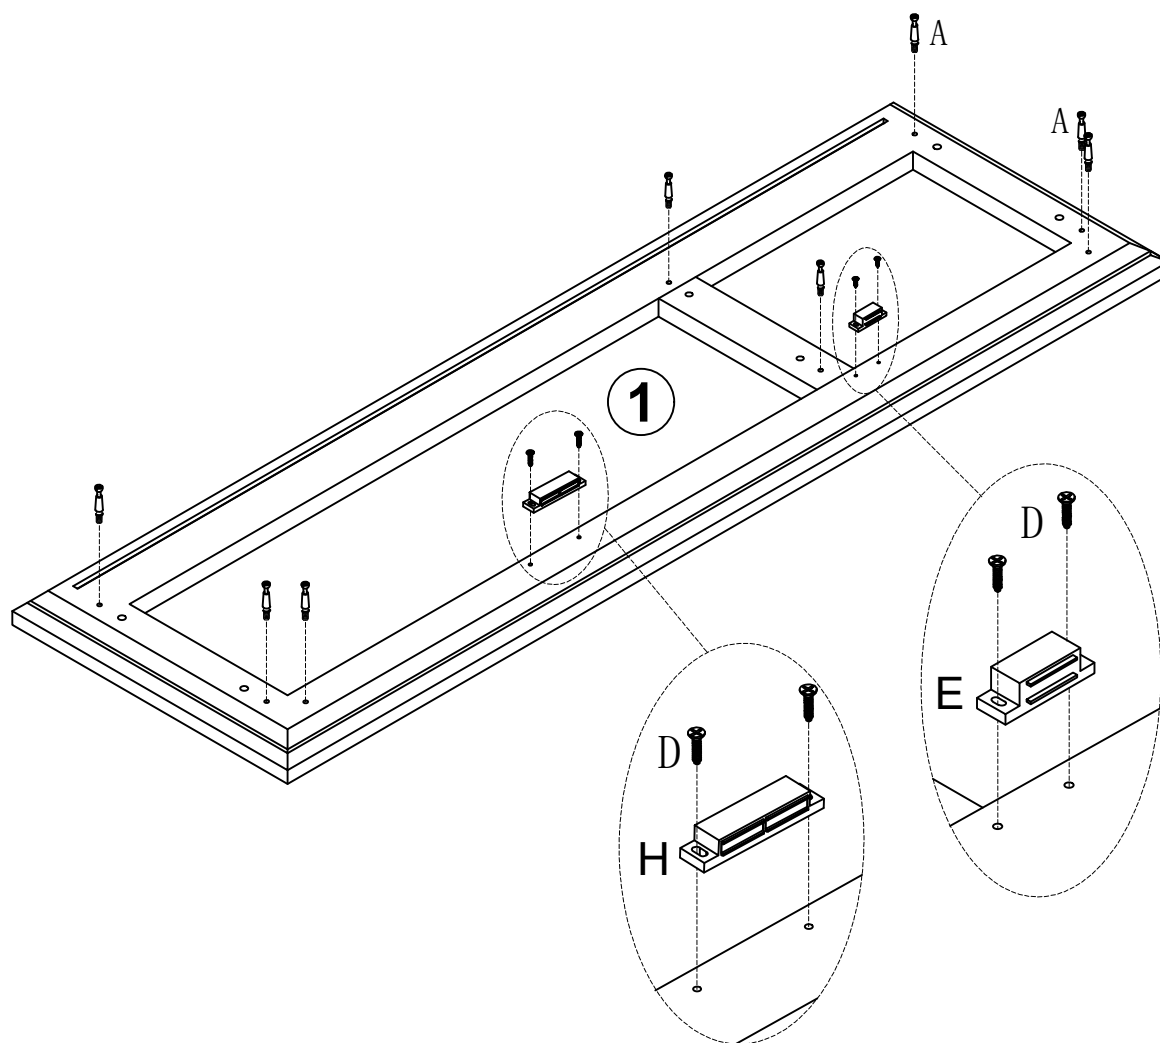
A:		8PCS
D:		4PCS
E:		1PCS
H:		1PCS



## ASSEMBLY INSTRUCTION


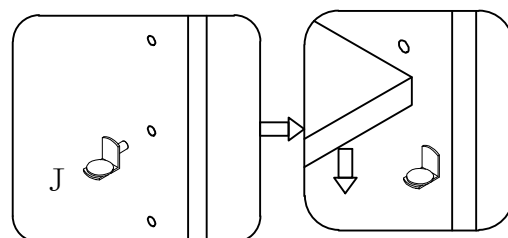
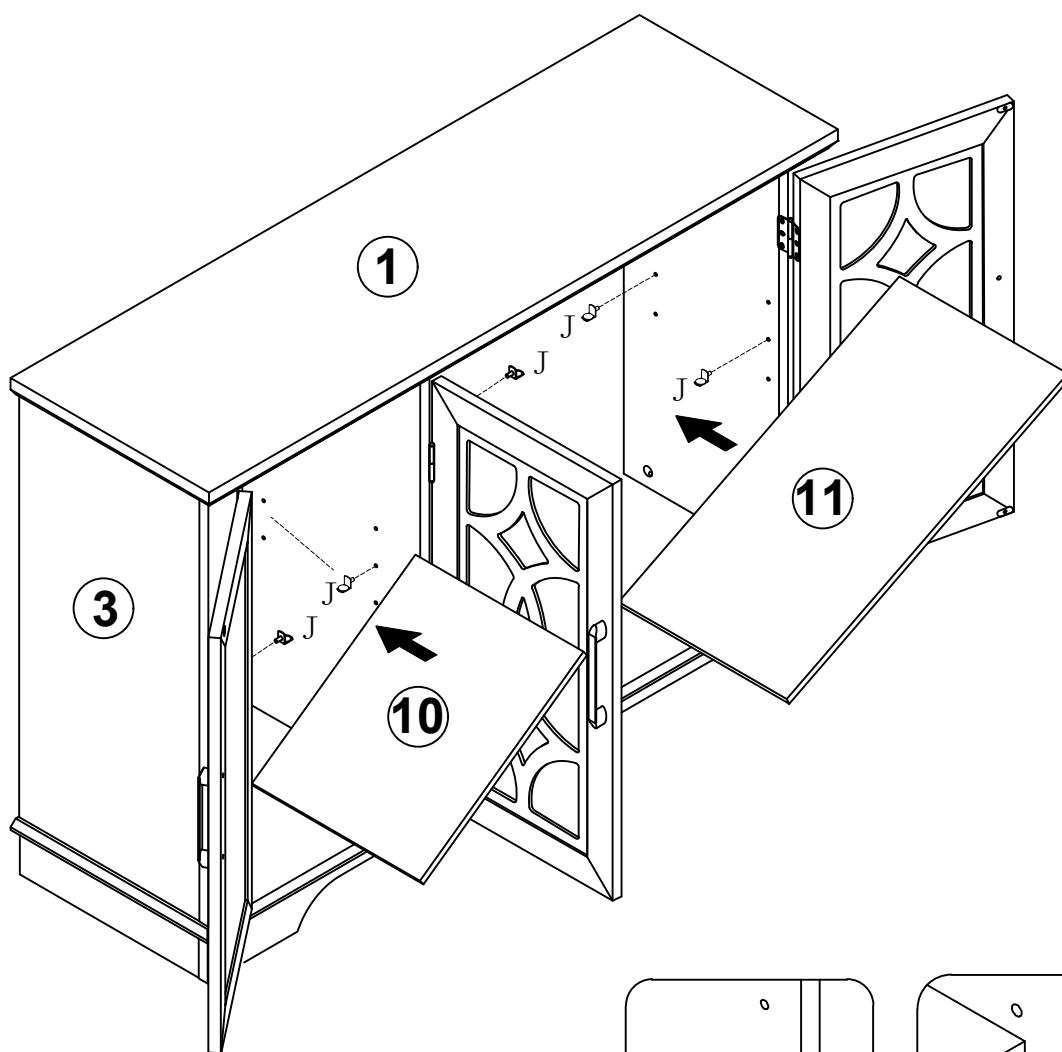
## STEP 9

B:		8PCS
C:		6PCS

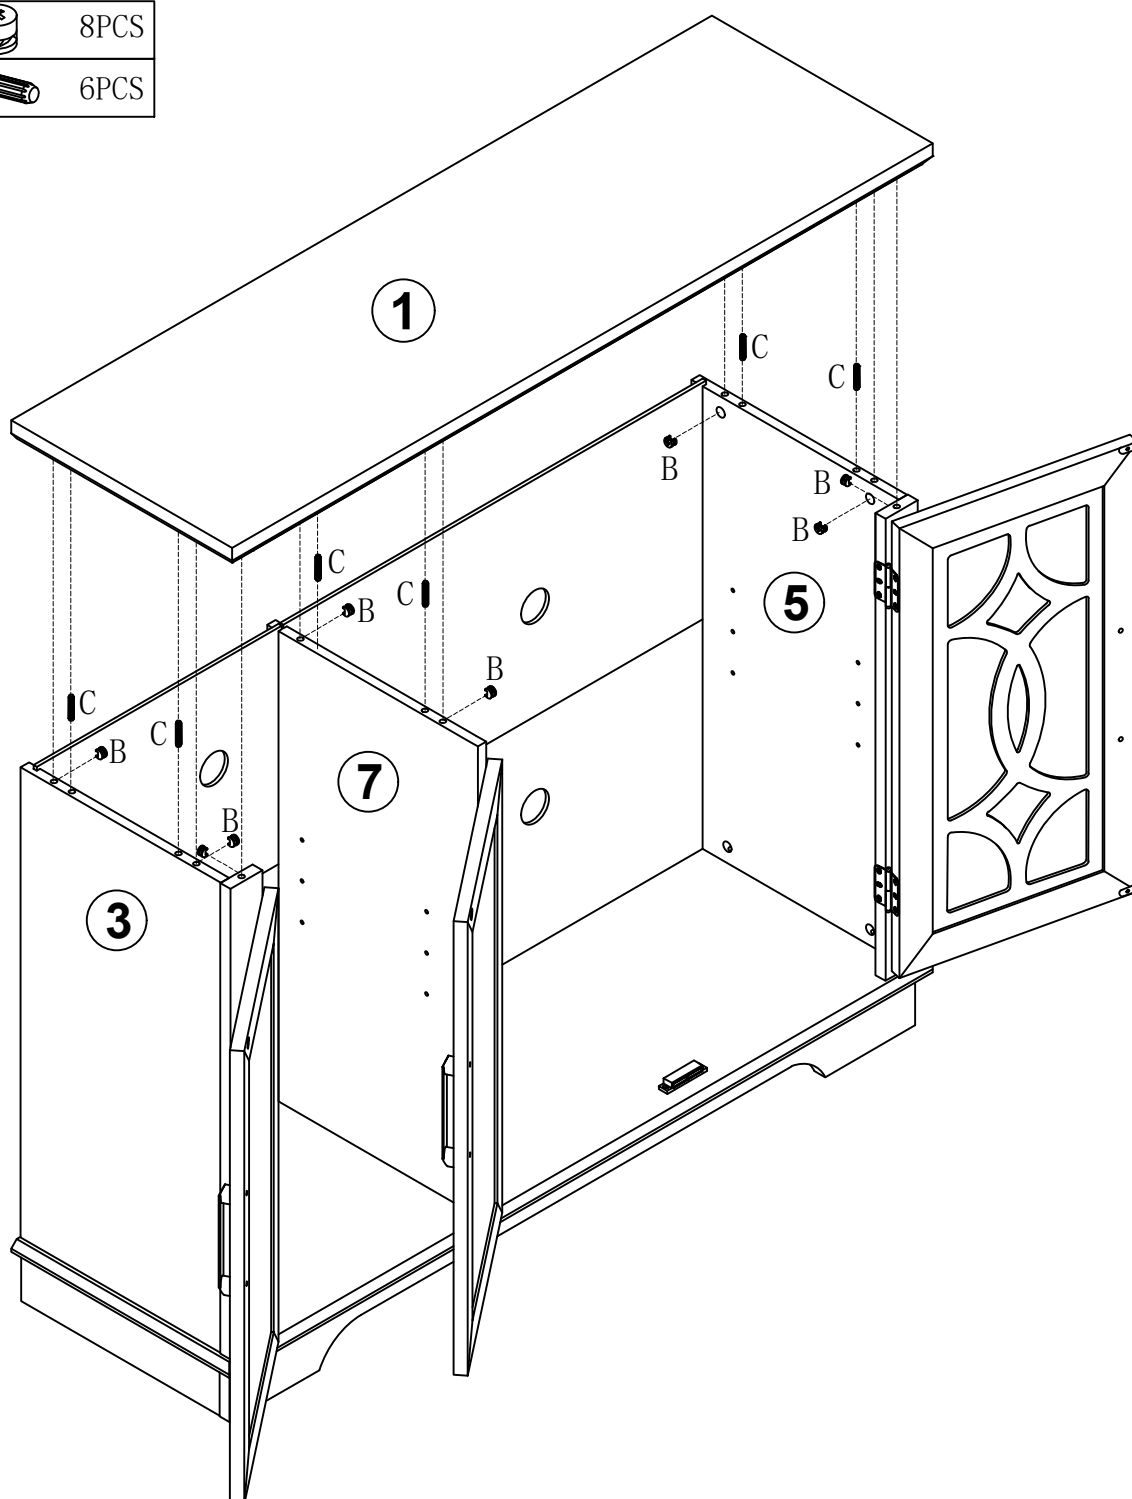

## ASSEMBLY INSTRUCTION


## STEP 10

J:  8PCS

## ASSEMBLY INSTRUCTION



### STEP 11


K: ○ 22PCS

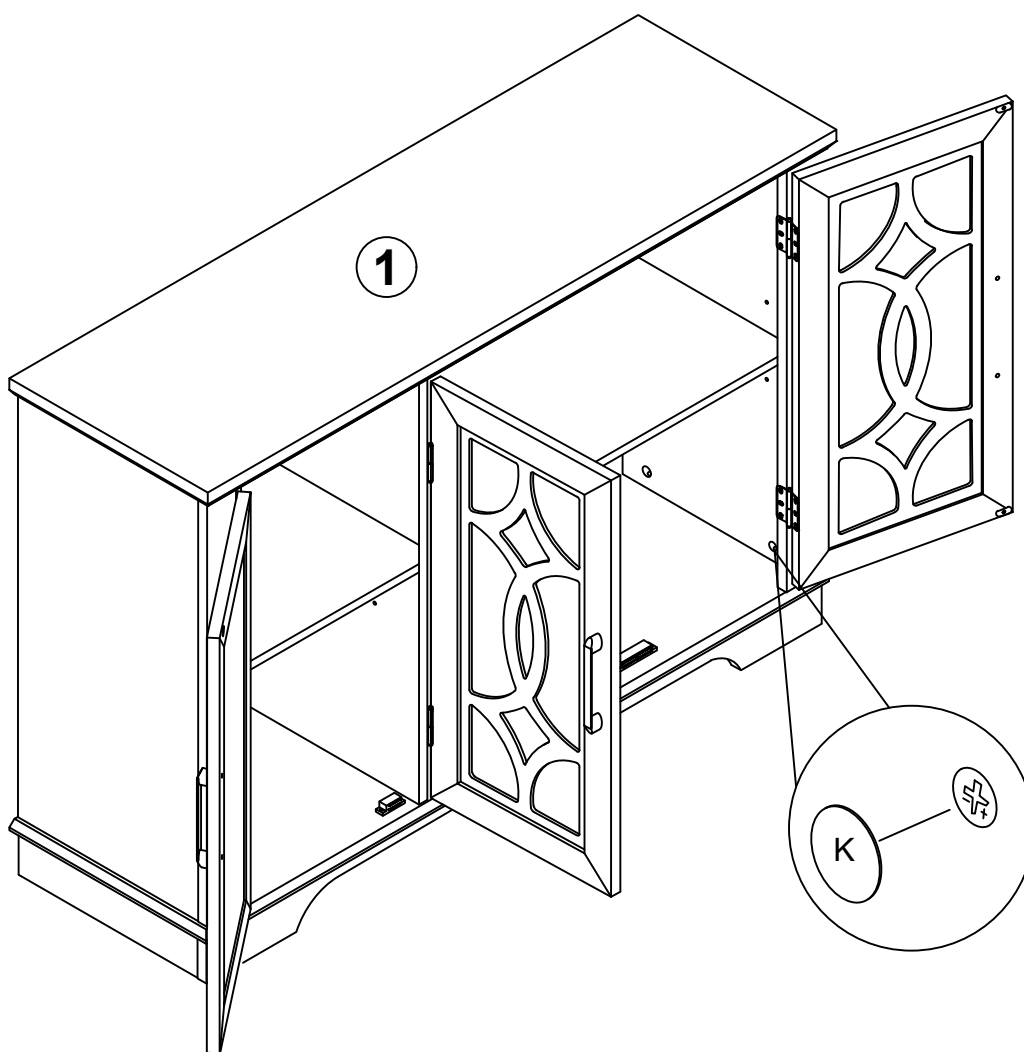

## ASSEMBLY INSTRUCTION

## STEP 12



D:		12PCS
I:		12PCS

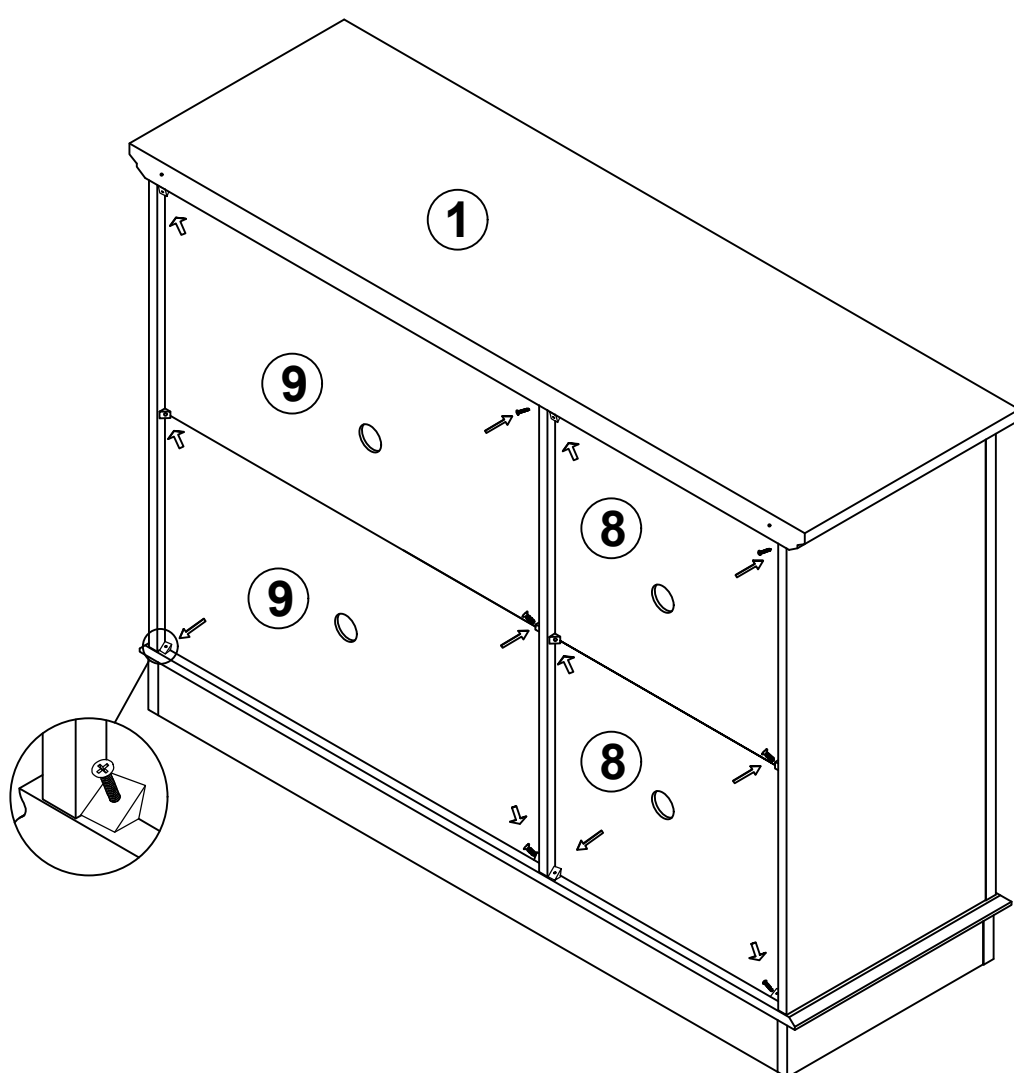

# ASSEMBLY INSTRUCTION

## STEP 13

L x 2

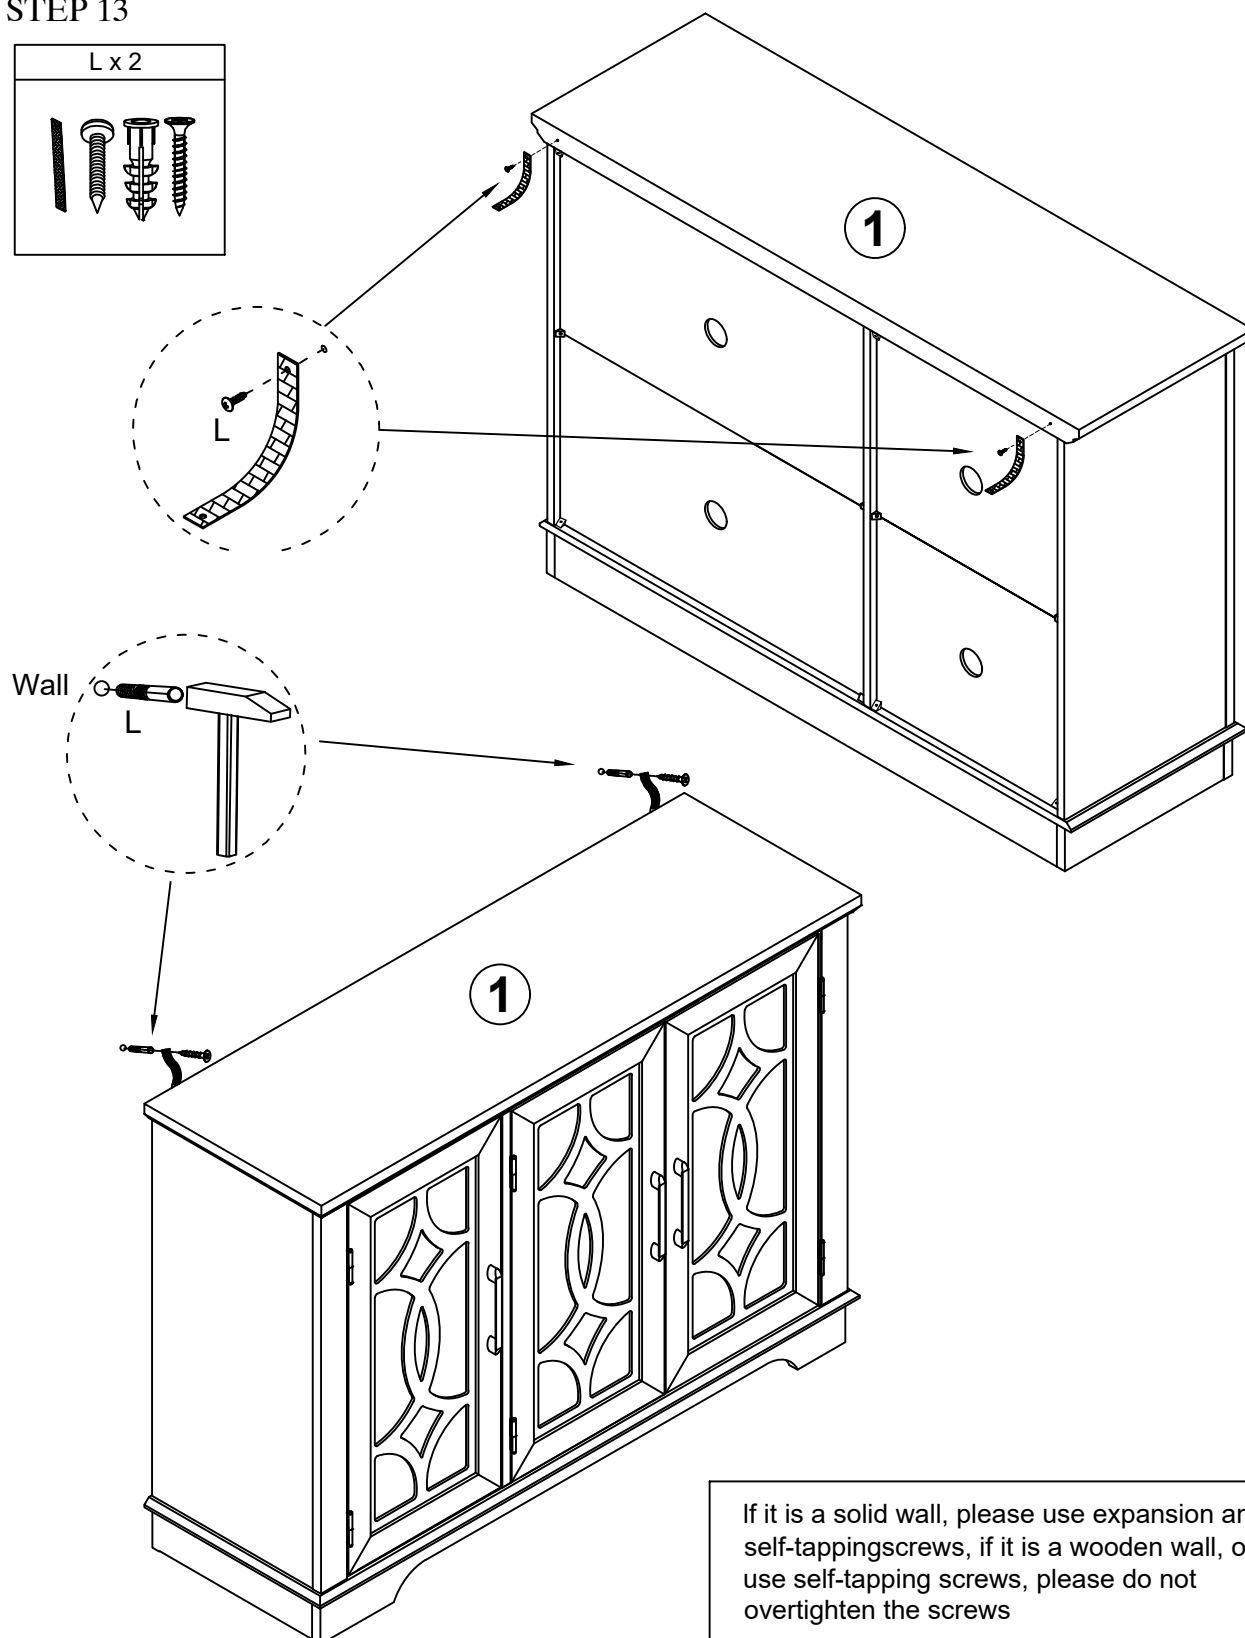

If it is a solid wall, please use expansion and self-tappingscrews, if it is a wooden wall, only use self-tapping screws, please do not overtighten the screws