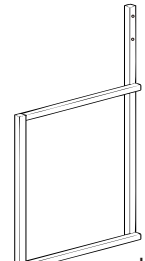
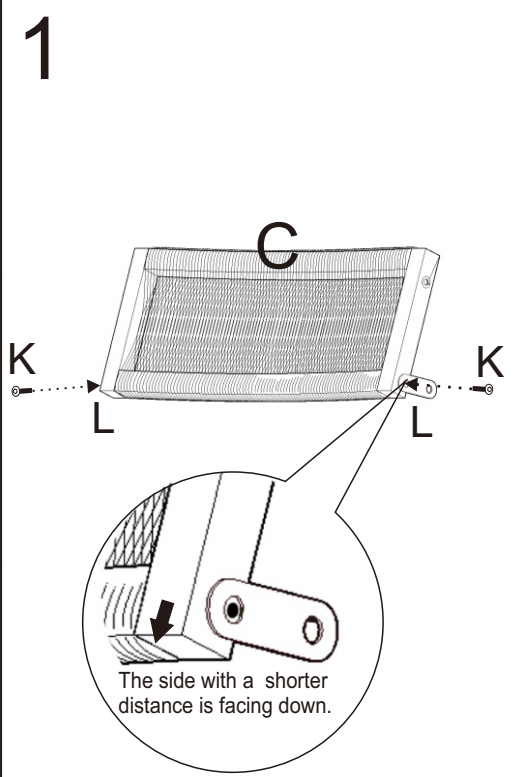



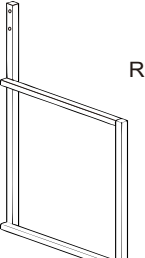

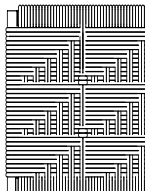

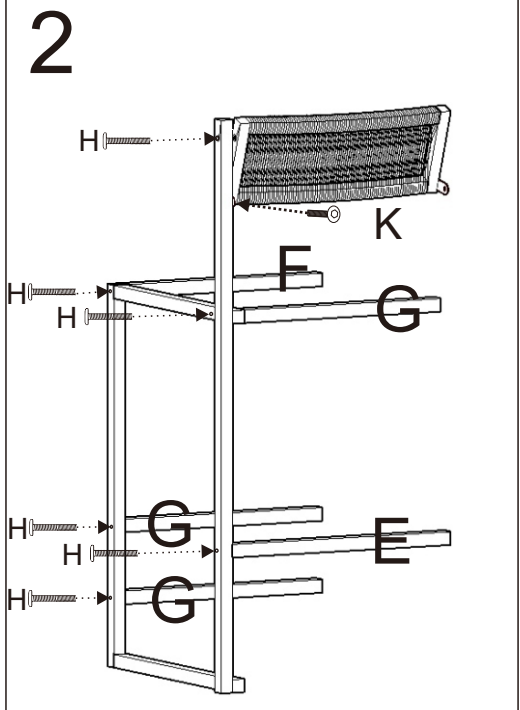









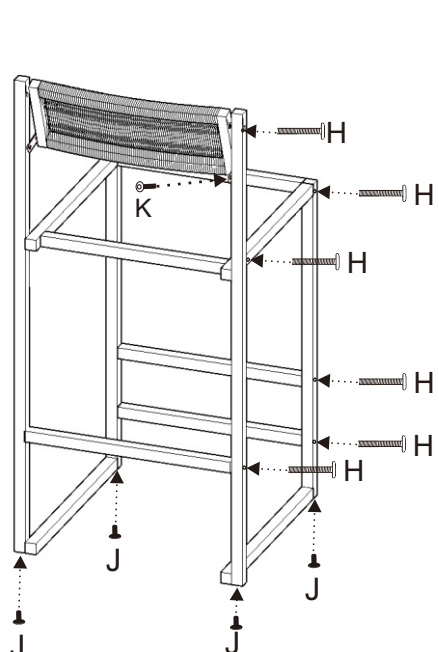














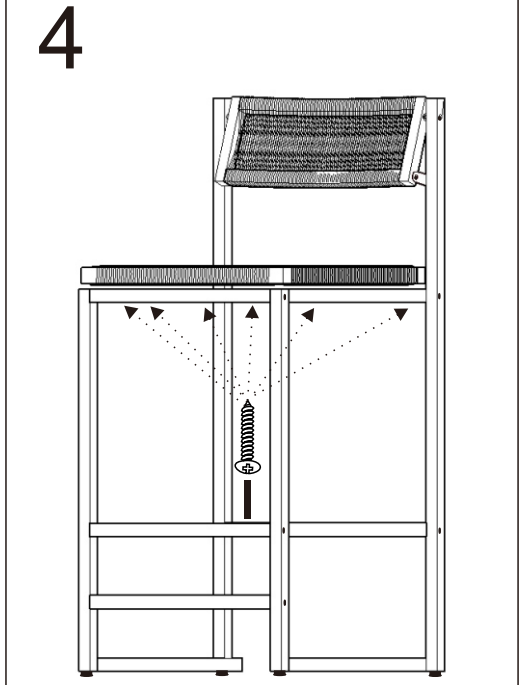





ASSEMBLY INSTRUCTION

A		LEFT	X1	<div>1</div> <div></div> <div><table><tr><td>K</td><td></td><td>M6X16mm/0.63in</td><td>2</td></tr></table></div>	K		M6X16mm/0.63in	2								
K		M6X16mm/0.63in	2													
B		RIGHT	X1													
C			X1													
D			X1													
E		38CM/14.96in	X1	<div>2</div> <div></div> <div><table><tr><td>H</td><td></td><td>M6X35mm/1.38in</td><td>6</td></tr><tr><td>K</td><td></td><td>M6X16mm/0.63in</td><td>1</td></tr></table></div>	H		M6X35mm/1.38in	6	K		M6X16mm/0.63in	1				
H		M6X35mm/1.38in	6													
K		M6X16mm/0.63in	1													
F		34CM/14.39in	X1													
G		34CM/14.39in	X3													
H		M6X35mm/1.38in	X12	<div>3</div> <div></div> <div><table><tr><td>H</td><td></td><td>M6X35mm/1.38in</td><td>6</td></tr><tr><td>K</td><td></td><td>M6X16mm/0.63in</td><td>1</td></tr><tr><td>J</td><td></td><td>M6X20MM/0.79in</td><td>4</td></tr></table></div>	H		M6X35mm/1.38in	6	K		M6X16mm/0.63in	1	J		M6X20MM/0.79in	4
H		M6X35mm/1.38in	6													
K		M6X16mm/0.63in	1													
J		M6X20MM/0.79in	4													
I		M4X40mm/1.57in	X6													
J		M6X20MM/0.79in	X4													
K		M6X16mm/0.63in	X4													
L			X2													
M			X1													
				<div>4</div> <div></div> <div><table><tr><td>I</td><td></td><td>M4X40mm/1.57in</td><td>6</td></tr></table></div>	I		M4X40mm/1.57in	6								
I		M4X40mm/1.57in	6													

NOTE: There are no screw holes in seat D, seat D is made by wooden frame, please pass through the holes in metal frame with self-tapping screws (part I), then secure seat D by tightening self-tapping screws (part I).