

Fine Furniture for every stage of life

225081KE(B1-B3)
Eastern King Bed

### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

### **PARTS IDENTIFICATION**

#### B1 (BOX 1)

Α	HEADBOARD PANEL		1PC		
В	LEFT HEADBOARD LEG		1PC		
С	RIGHT HEADBOARD LEG		1PC		
D	HEADBOARD BOTTOM RAIL		1PC		
<b>B2</b>	B2 (BOX 2)				
E	FOOTBOARD		1PC		
B3 (BOX 3)					
F	BED RAIL		2PCS		
G	BED SLAT		4PCS		
Н	BED SLAT SUPPORT WITH LEVELER		8PCS		
НВ	225081KE(B1) FROM BOX 1 HEADBOARD COMPLETE		1PC		
E	225081KE(B2) FROM BOX 2 FOOTBOARD		1PC		

#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

**FLAT HEAD SCREW** 

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

### **HARDWARE IDENTIFICATION**

#### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 225081KE (B1)

1	BOLT (5/16" x 38mm - BLK)	10PCS
2	LOCK WASHER (5/16" - BLK)	10PCS
3	FLAT WASHER (5/16" x 19mm - BLK)	10PCS
4	ALLEN WRENCH (74 x 30 x 4mm - BLK)	1PC

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 225081KE (B3)

3	(4 x 32mm - BLK)	01 00
6	THREADED BOLT (5/16" x 75mm - BLK)	8PCS
7	U-SQUARE WASHER (25 x 15 x 2mm - BLK)	8PCS
8	HEX NUT (5/16" x 17mm - BLK)	8PCS
9	WRENCH (13mm - BLK)	1PC

#### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

8PCS


## COASTER

### **ASSEMBLY INSTRUCTIONS**

### STEP 1

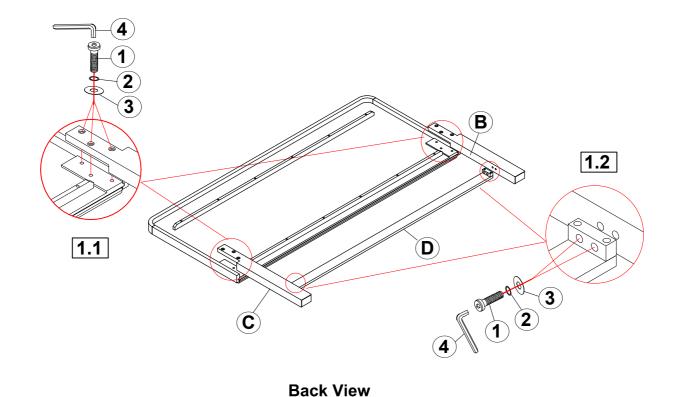


### STEP 2

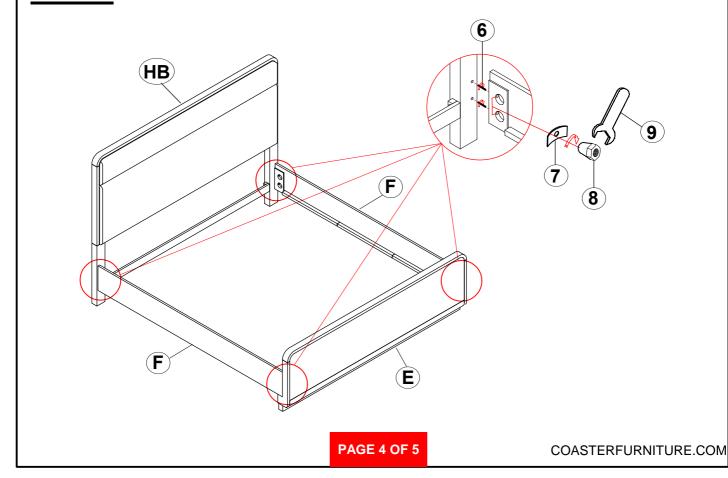




### **ASSEMBLY INSTRUCTIONS**

### STEP 3

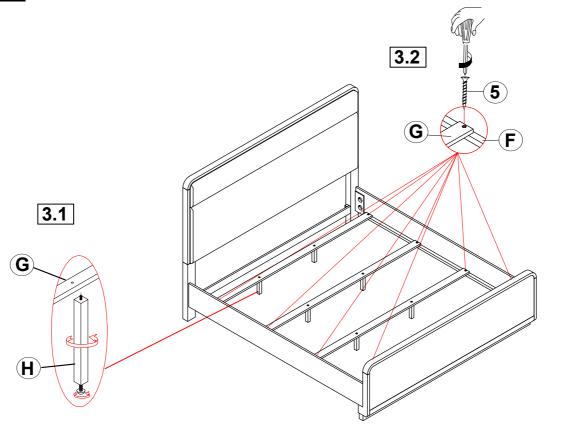

## STEP 4 COMPLETE

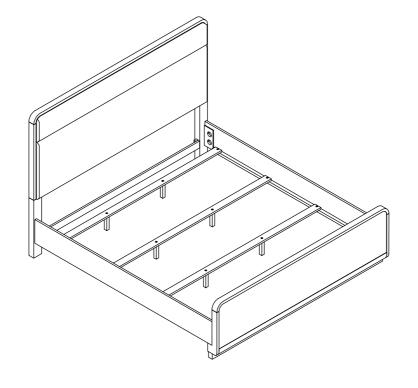


PAGE 5 OF 5

COASTERFURNITURE.COM



Inner Size: 76.75"W x 81.00"D

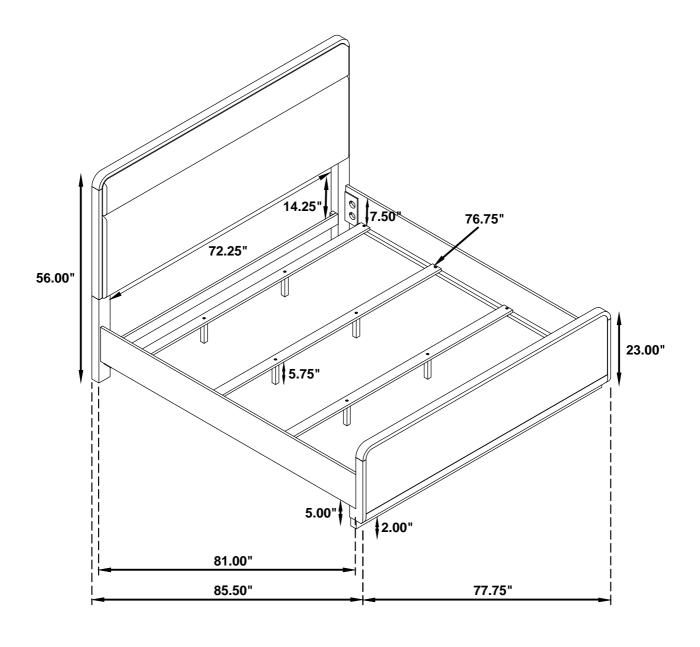





Fine Furniture for every stage of life

225082 Nightstand



## ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

#### **WARNING**

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.


Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

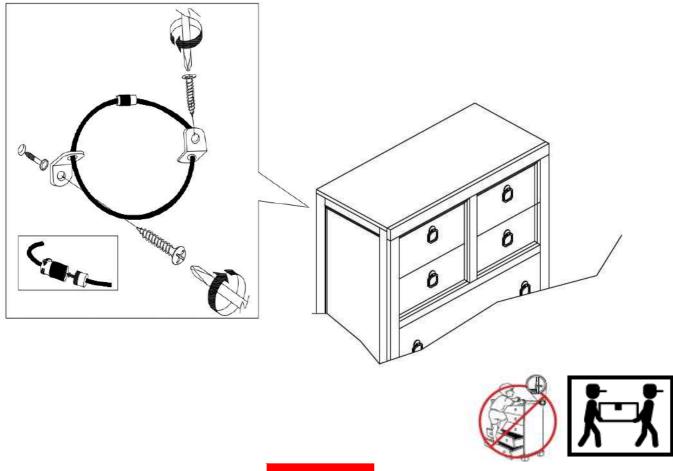



Inner Size of Drawer : 20.50"W x 12.75"D x 6.00"H x 0.25"T

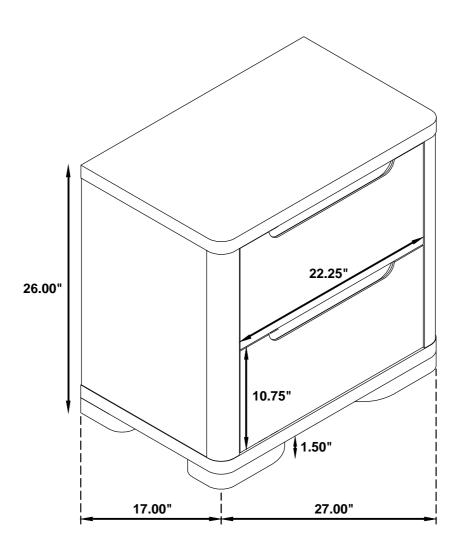





Fine Furniture for every stage of life

**225083** *Dresser* 

#### **ASSEMBLY INSTRUCTIONS**




#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

### **PARTS IDENTIFICATION**


A DRESSER




1PC

### ASSEMBLY INSTRUCTIONS

### STEP 1

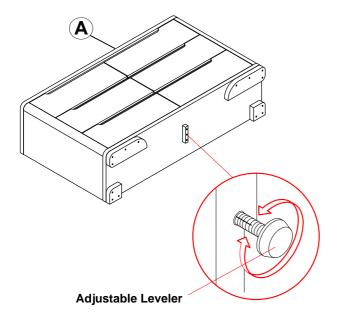

## STEP 2 COMPLETE

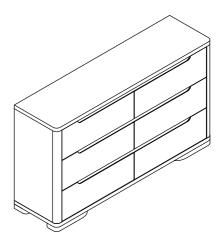



COASTERFURNITURE.COM



COASTERFURNITURE.COM

## ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

#### **WARNING**

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

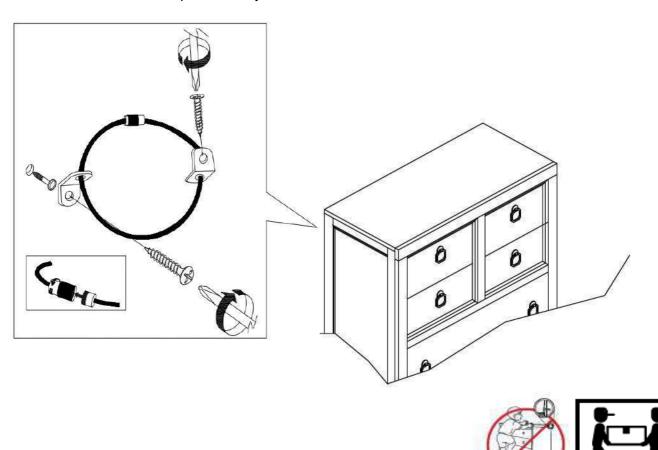


PAGE 3 OF 3



Inner Size of Drawer: 28.50"W x 12.75"D x 7.00"H x 0.25"T

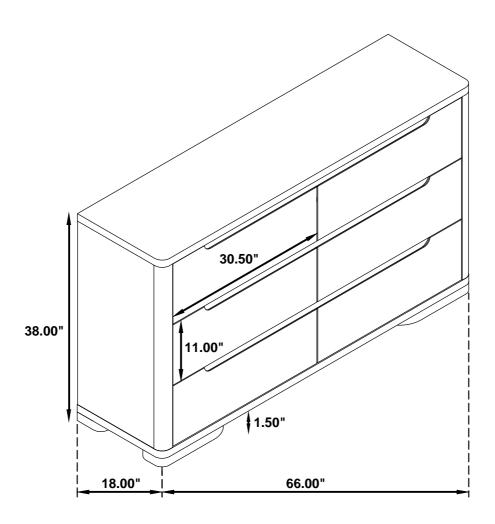



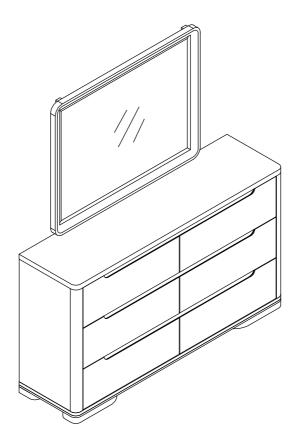

Fine Furniture for every stage of life

225084 *Mirror* 

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

1. Remove hardware from box and sort by size.

(PACKED WITH DRESSER)


(74 x 30 x 4mm - BLK)

- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

### **PARTS IDENTIFICATION**

A MIRROR

1PC

B DRESSER
FROM BOX ITEM 225083

1PC

2PCS


### **HARDWARE IDENTIFICATION**

1	BOLT (1/4" x 32mm - BLK)	6PCS
2	LOCK WASHER (1/4" - BLK)	6PCS
3	FLAT WASHER (1/4" x 19mm - BLK)	6PCS
4	ALLEN WRENCH	1PC


# ITEM: 225084 ASSEMBLY INSTRUCTIONS



### STEP 1

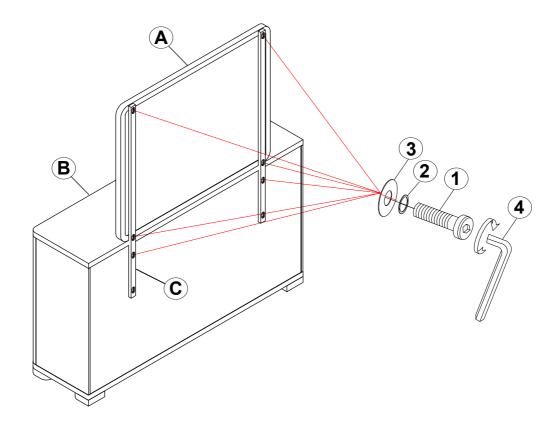


## STEP 2 COMPLETE

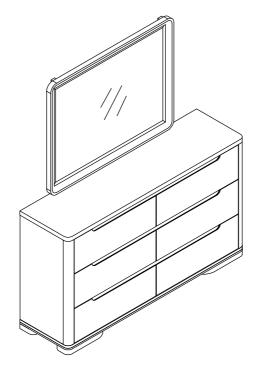





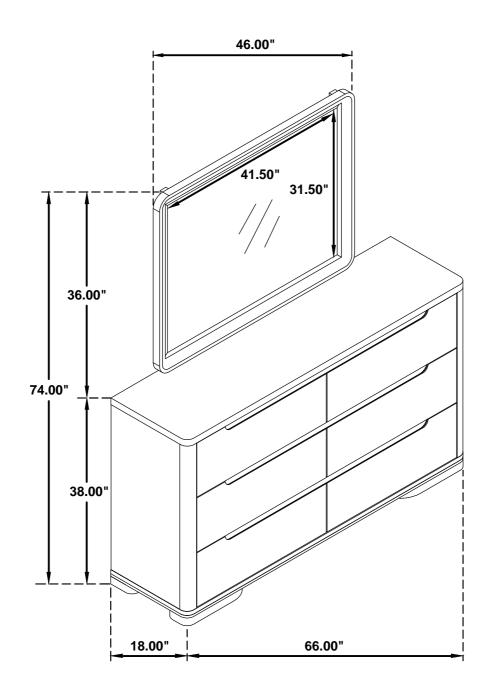





Fine Furniture for every stage of life

225085 Chest



## ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

#### **WARNING**

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

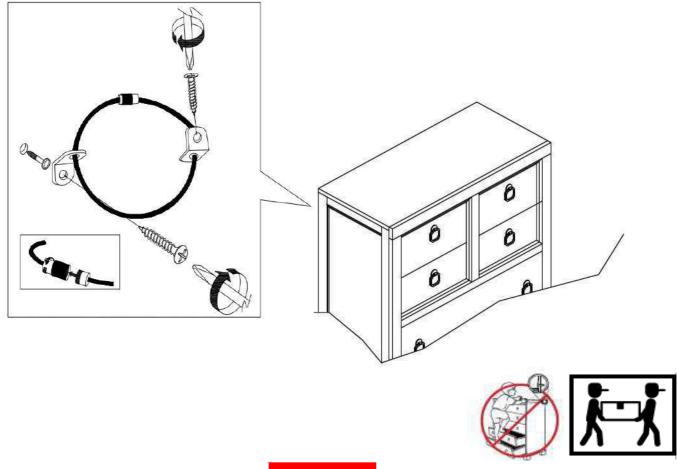



Inner Size of Drawer : 31.50"W x 12.75"D x 5.25"H x 0.25"T

