



installation manual

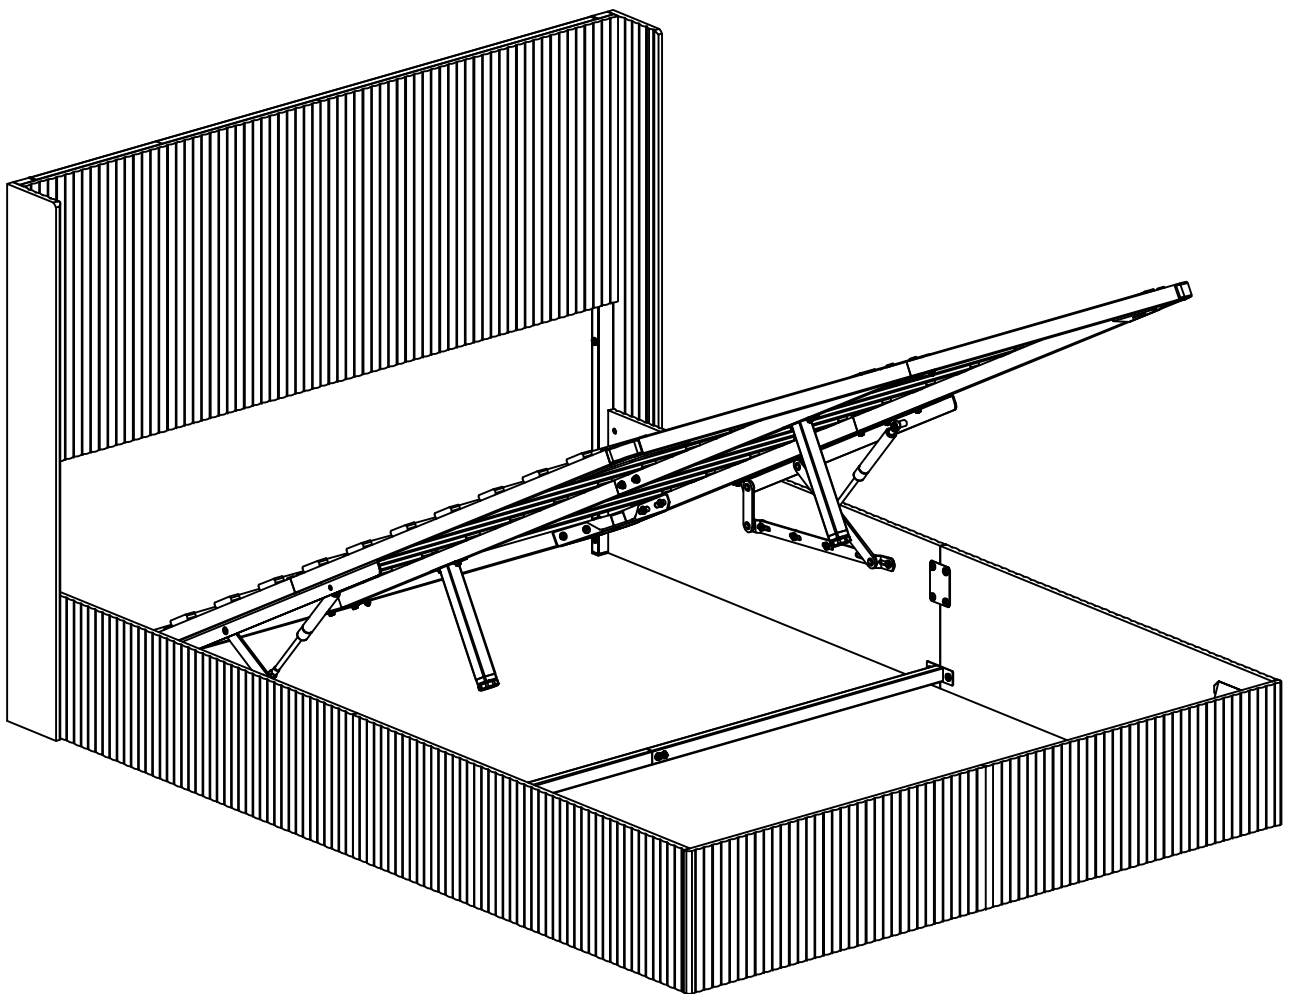


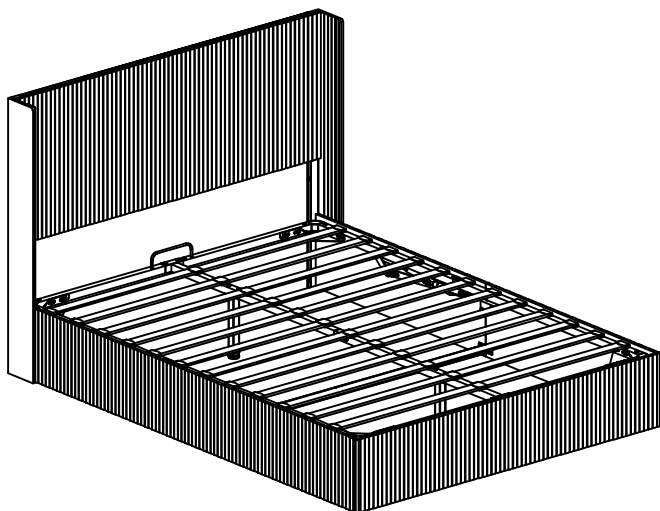















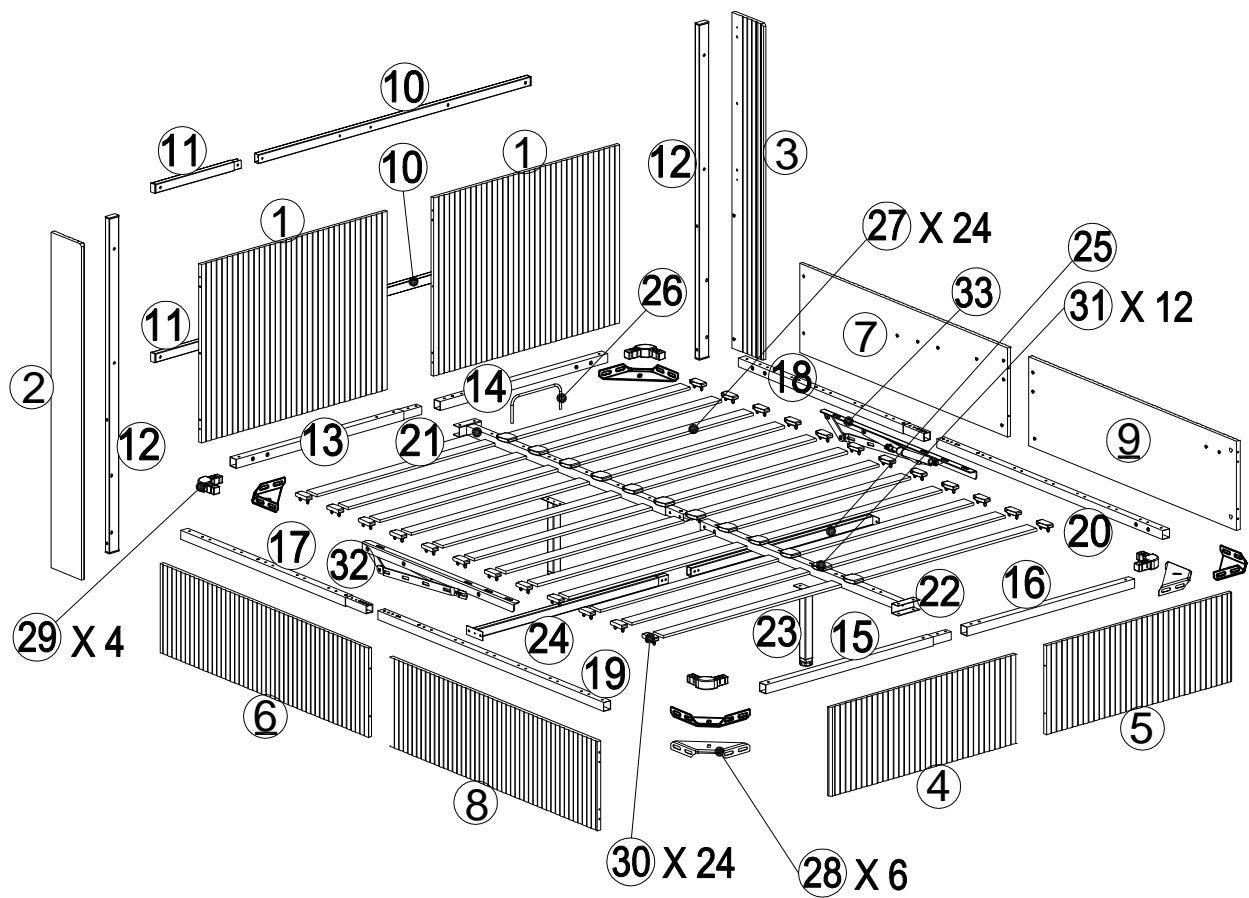



















TIPS

1. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
2. insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws cannot target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
3. 2 people are recommended to finish



















Components







Hardware


①  X 2	②  X 1	③  X 1	④  X 1
⑤  X 1	⑥  X 1	⑦  X 1	⑧  X 1
⑨  X 1	⑩  X 2	⑪  X 2	⑫  X 2
⑬  X 1	⑭  X 1	⑮  X 1	⑯  X 1
⑰  X 1	⑱  X 1	⑲  X 1	⑳  X 1
㉑  X 1	㉒  X 1	㉓  X 2	㉔  X 1
㉕  X 1	㉖  X 1	㉗  X 24	㉘  X 6
㉙  X 4	㉚  X 24+2	㉛  X 12+1	㉜  X 1
㉝  X 1	㉞  X 1		

Hardware

<p>A M6 x 50</p>  <p>X 8+1</p>	<p>B M6 x 40</p>  <p>X 20+2</p>	<p>C M6 x 30</p>  <p>X 18+2</p>	<p>D M6 x 15</p>  <p>X 8+1</p>
<p>E M6 x 12</p>  <p>X 56+3</p>	<p>F Ø25 x 2</p>  <p>X 8+1</p>	<p>G M6 x 6</p>  <p>X 22+2</p>	<p>H M6 x 35</p>  <p>X 10+1</p>
<p>J Ø5 x 60</p>  <p>X 2</p>	<p>K Ø15 x 9.5</p>  <p>X 14+1</p>	<p>L Ø9.8 x 10.5</p>  <p>X 4</p>	<p>M Ø6 x 30</p>  <p>X 17+2</p>
<p>N 12 x 100</p>  <p>X 16+2</p>	<p>P 84 x 60*1.5</p>  <p>X 4</p>	<p>R</p>  <p>X 1</p>	<p>S M4</p>  <p>X 1</p>
<p>T 10 / 13</p>  <p>X 1</p>	<p>U M8 x 6</p>  <p>X 4+1</p>		


01

J	K	M	R
Ø5 x 60	Ø15 x 9.5	Ø6 x 30	
 X2	 X4	 X7	X1

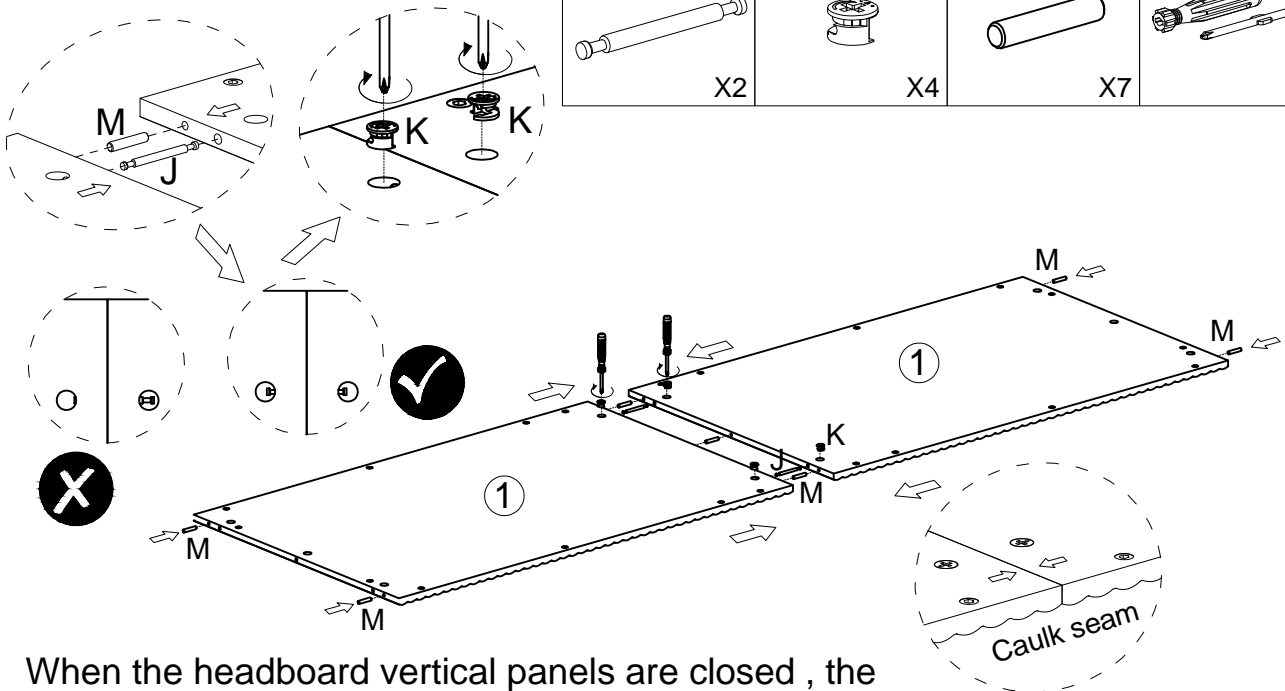




When the headboard vertical panels are closed , the distances on both sides of the double-headed part should be symmetrical . Place the three-in-one plate and lock the seams of the wooden panels clockwise at both ends .

02

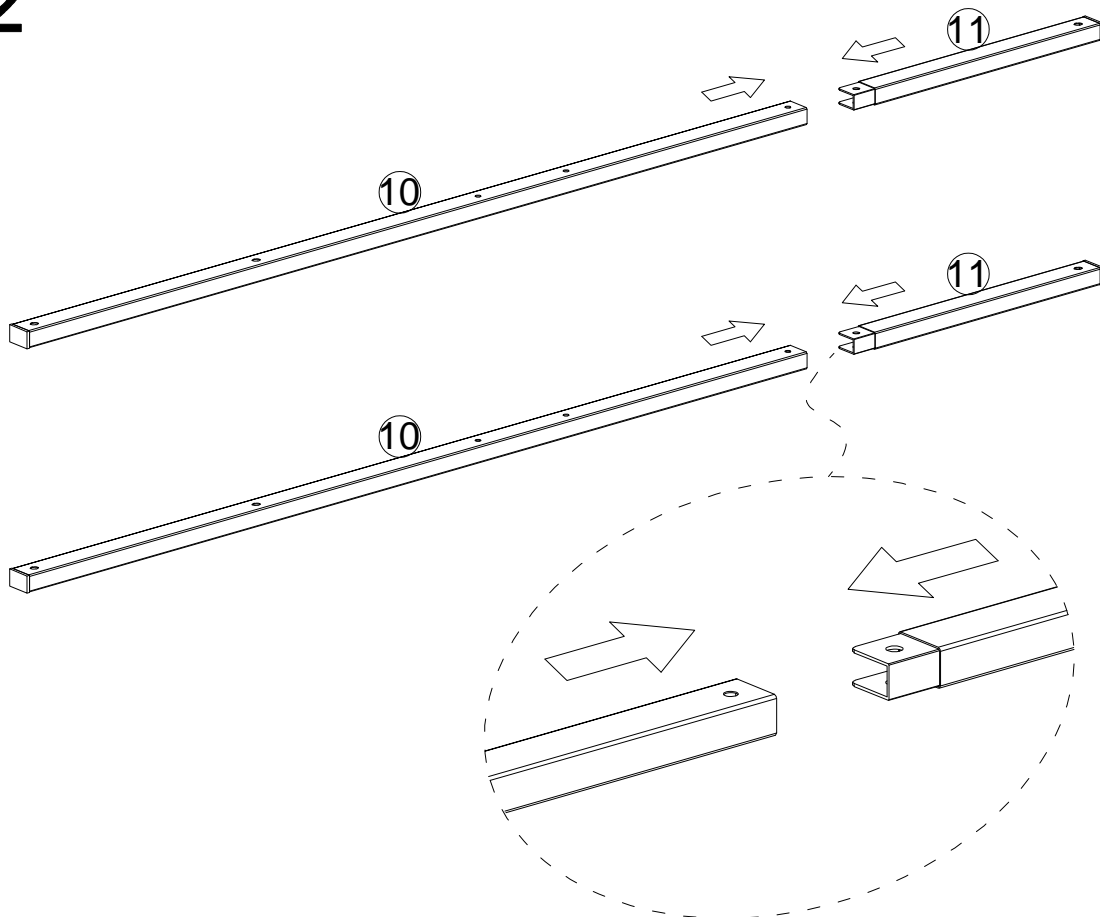





03

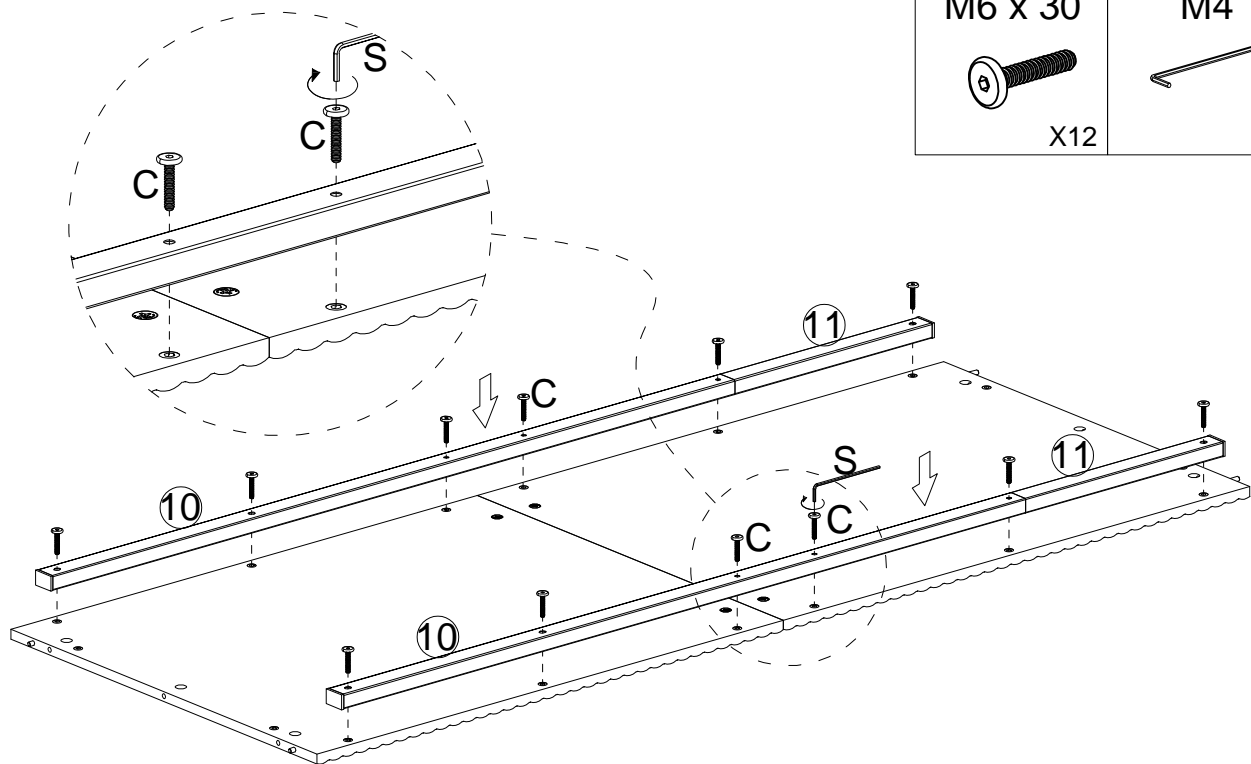



C	S
M6 x 30	M4
	
X12	X1


04

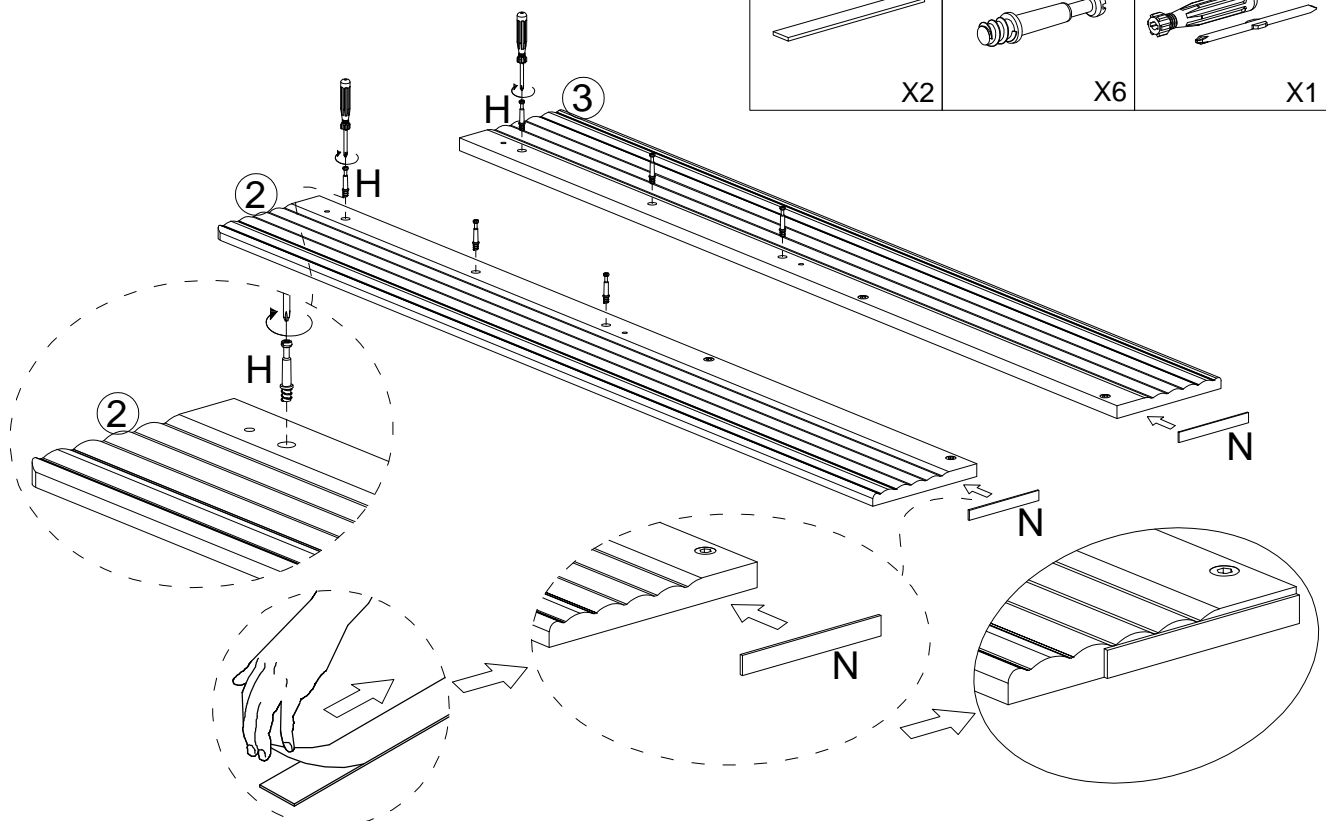



N	H	R
12 x 100	M6 x 35	
		
X2	X6	X1


05

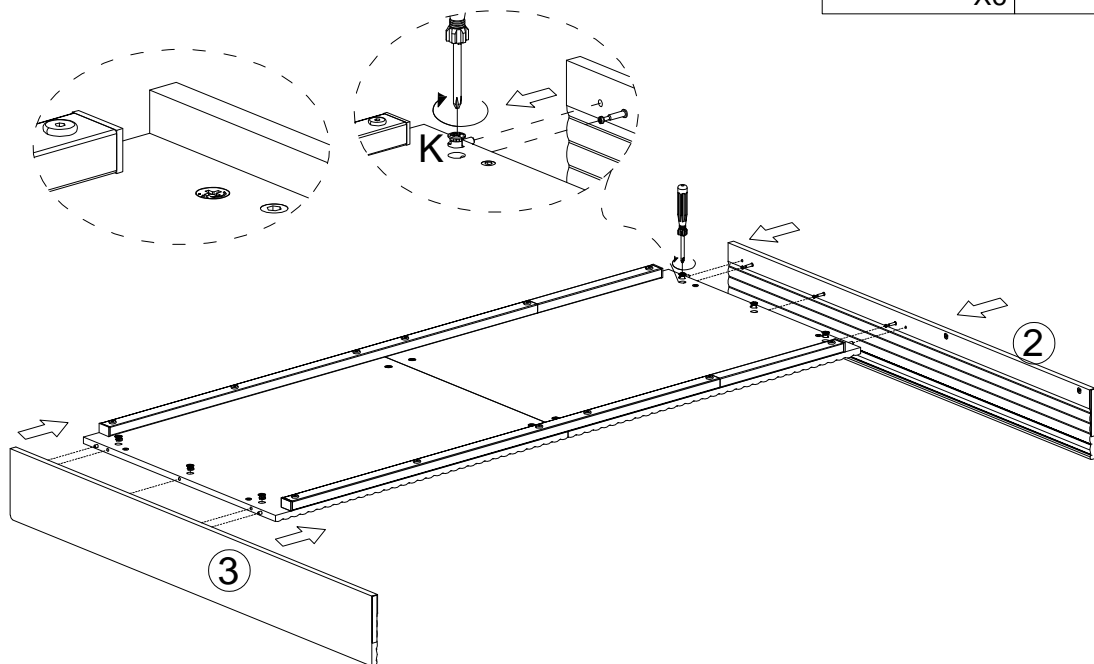K	R
Ø15 x 9.5  X6	 X1






06

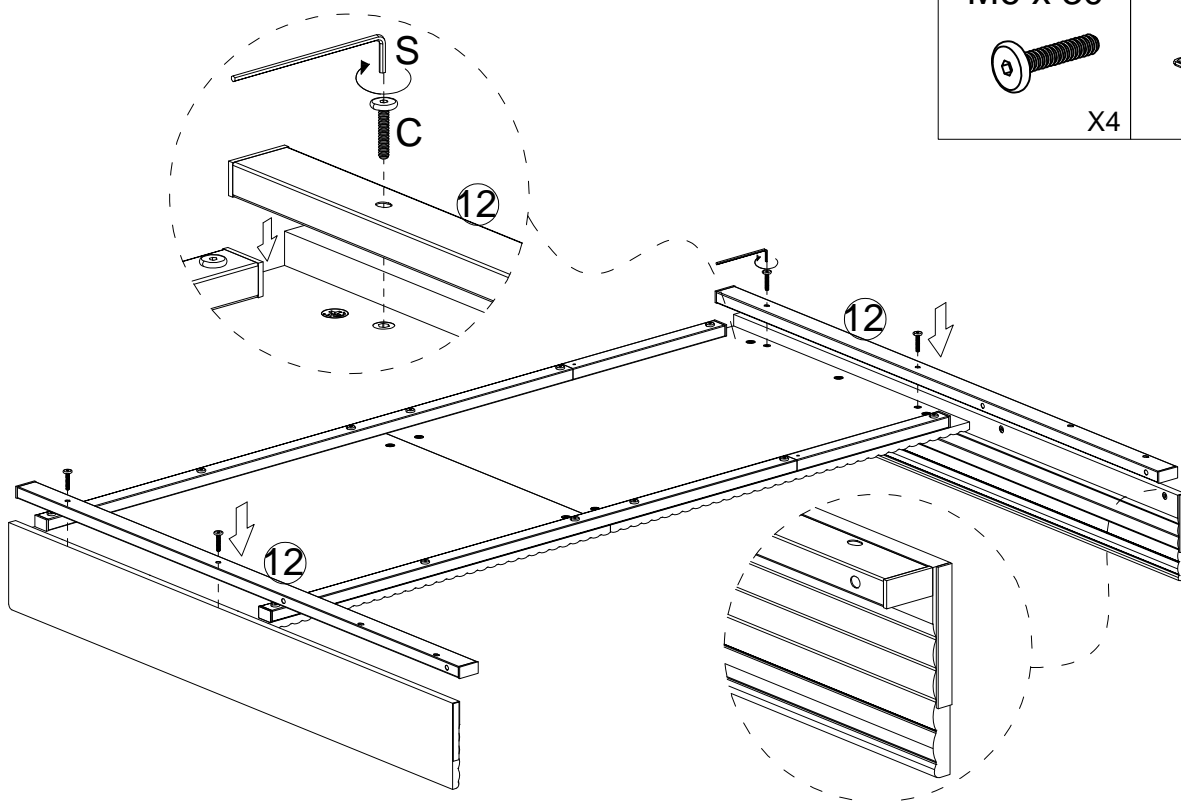C	S
M6 x 30  X4	M4  X1






07

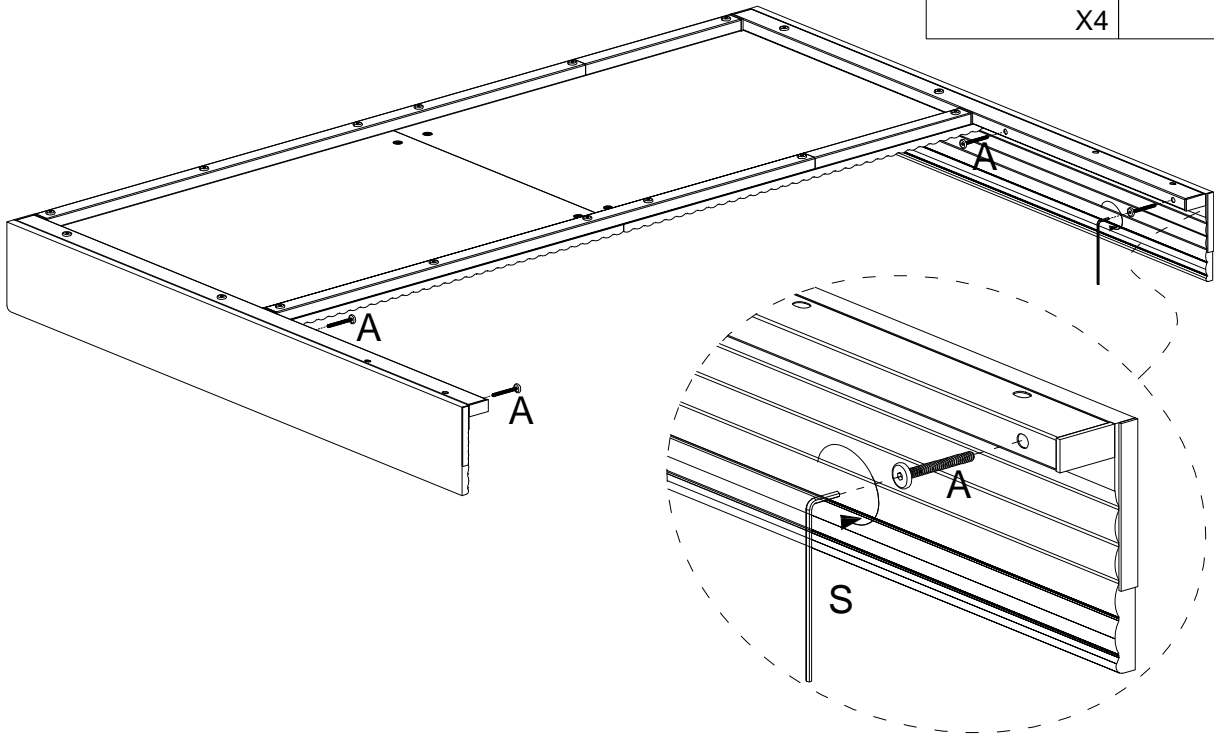A	S
M6 x 50	M4
	
X4	X1








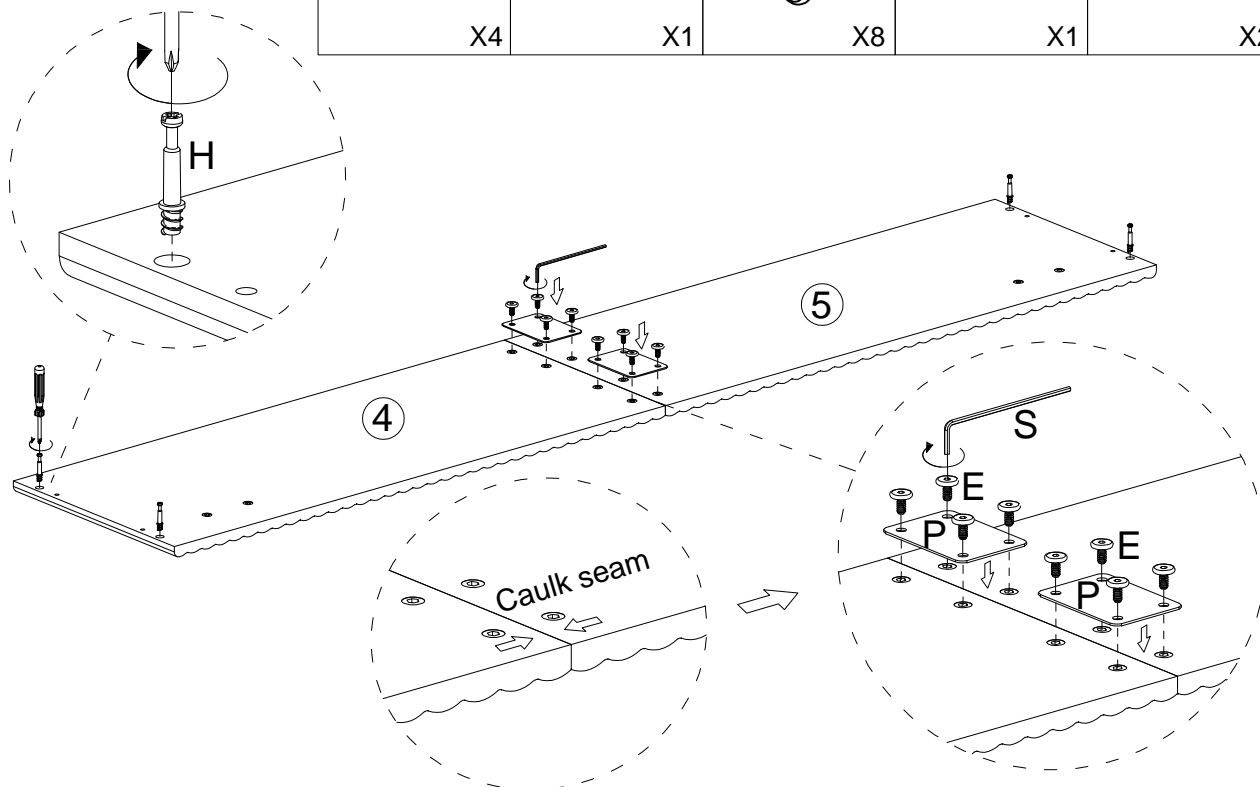
08

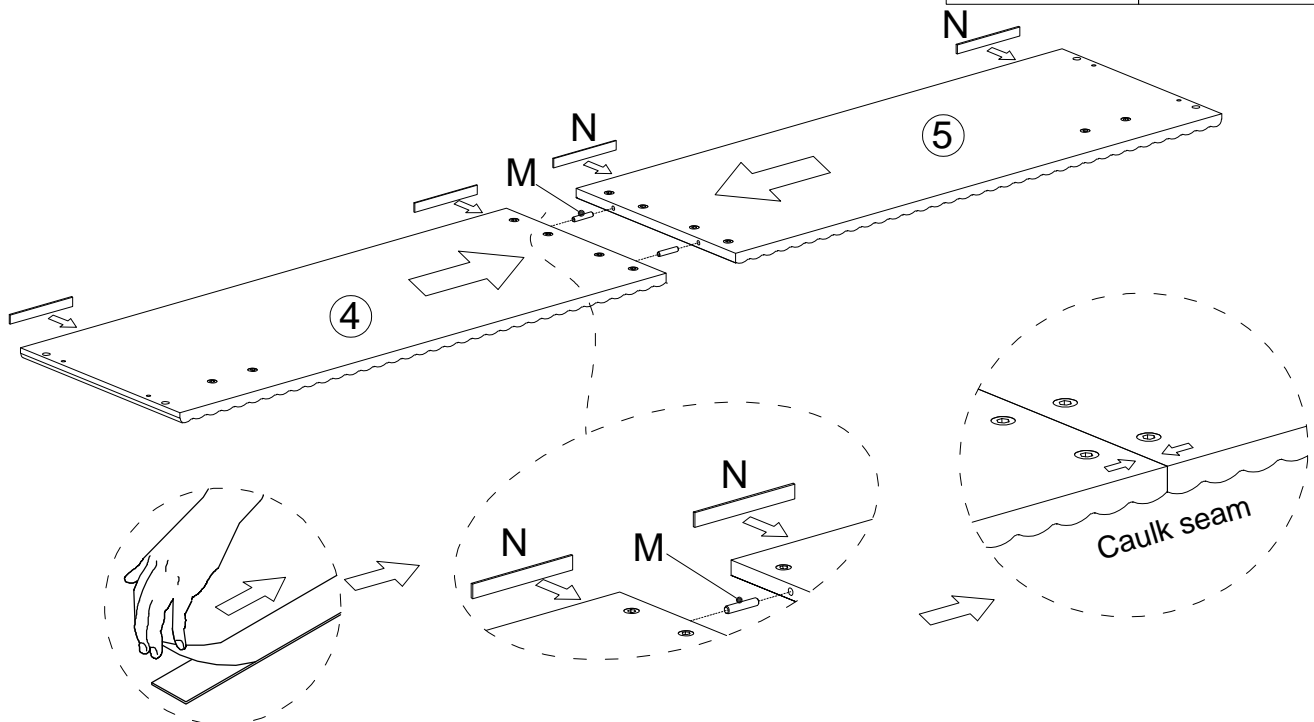N	M
12 x 100	Ø6 x 30
	
X4	X2






09

H	R	E	S	P
M6 x 35		M6 x 12	M4	84x60x1.5
				
X4	X1	X8	X1	X2







10

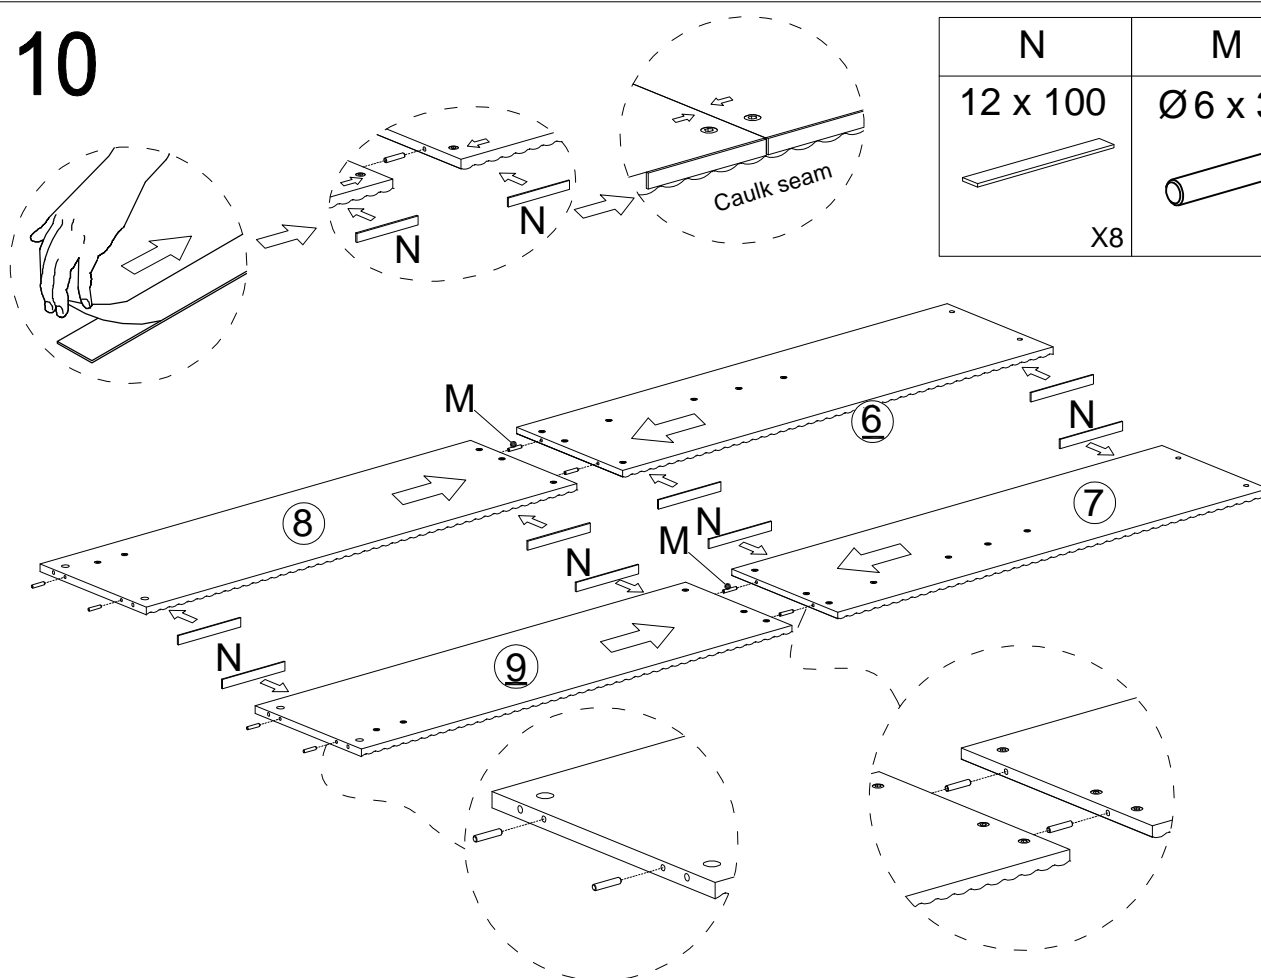
N	M
12 x 100	Ø6 x 30
	
X8	X8



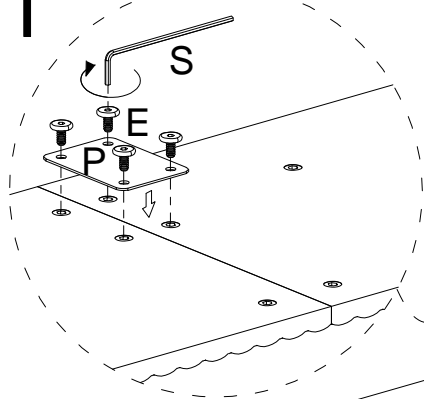




11

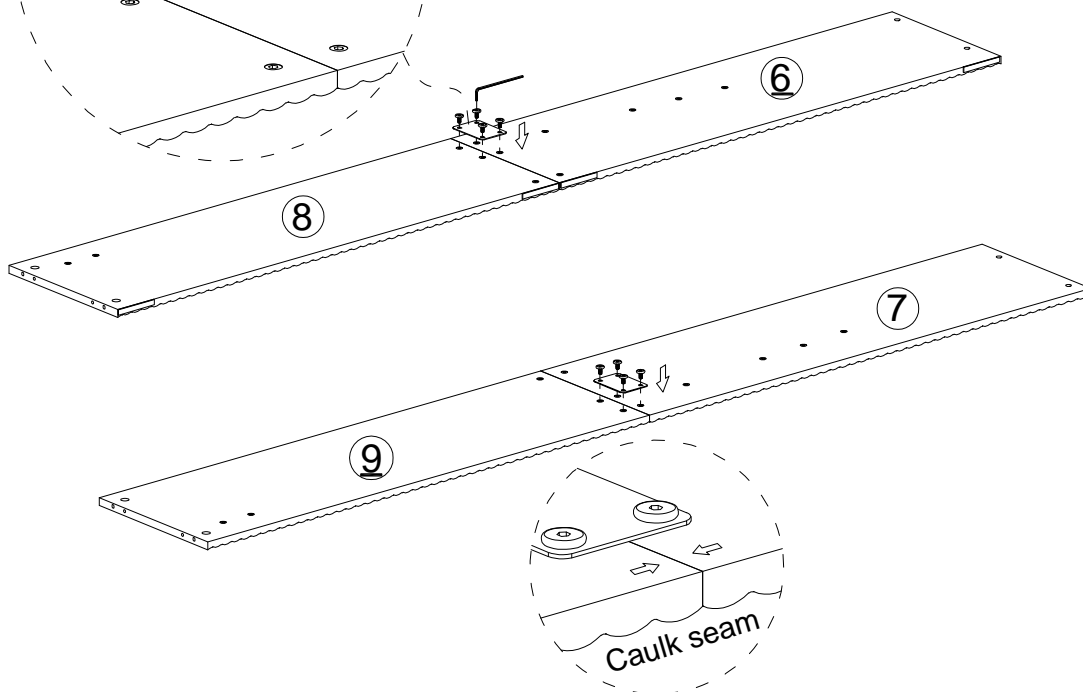


E	P	S
M6 x 12	84x60x1.5	M4
		
X8	X2	X1








12

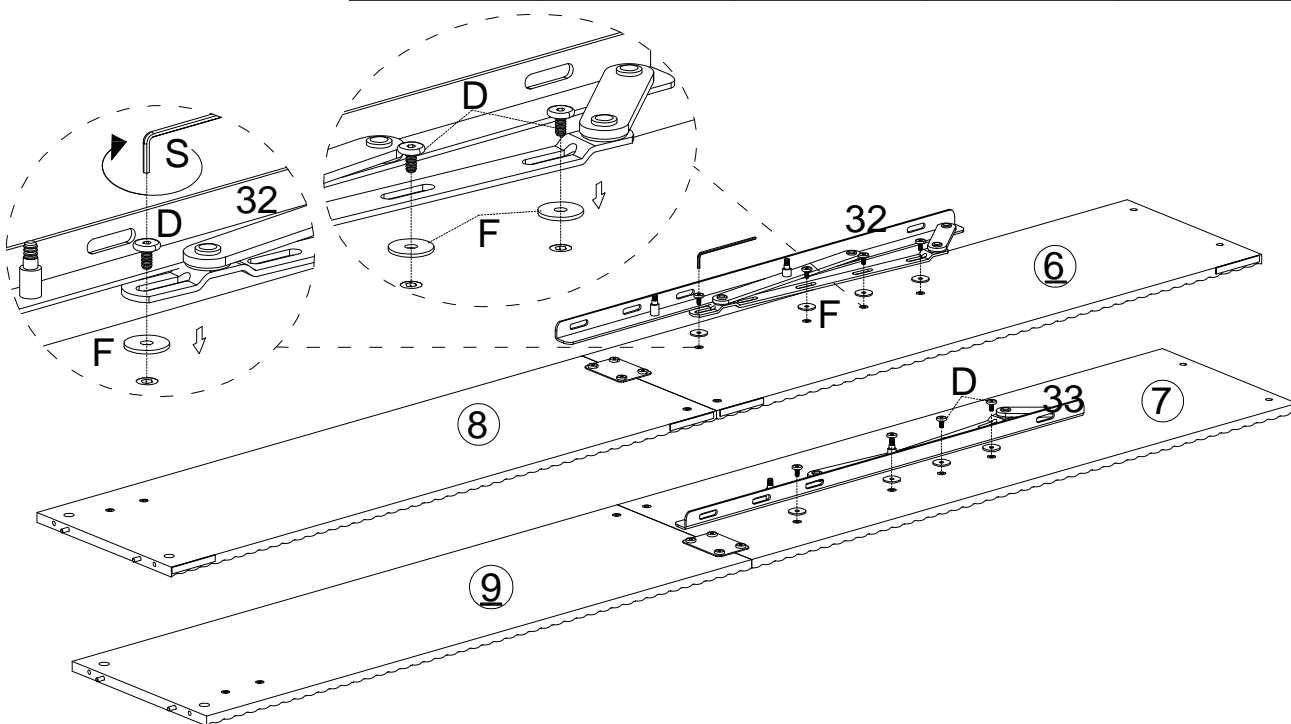32	33	D	F	S
L750	L750	M6 x 15	Ø25 x 2	M4
				
X1	X1	X8	X8	X1






13

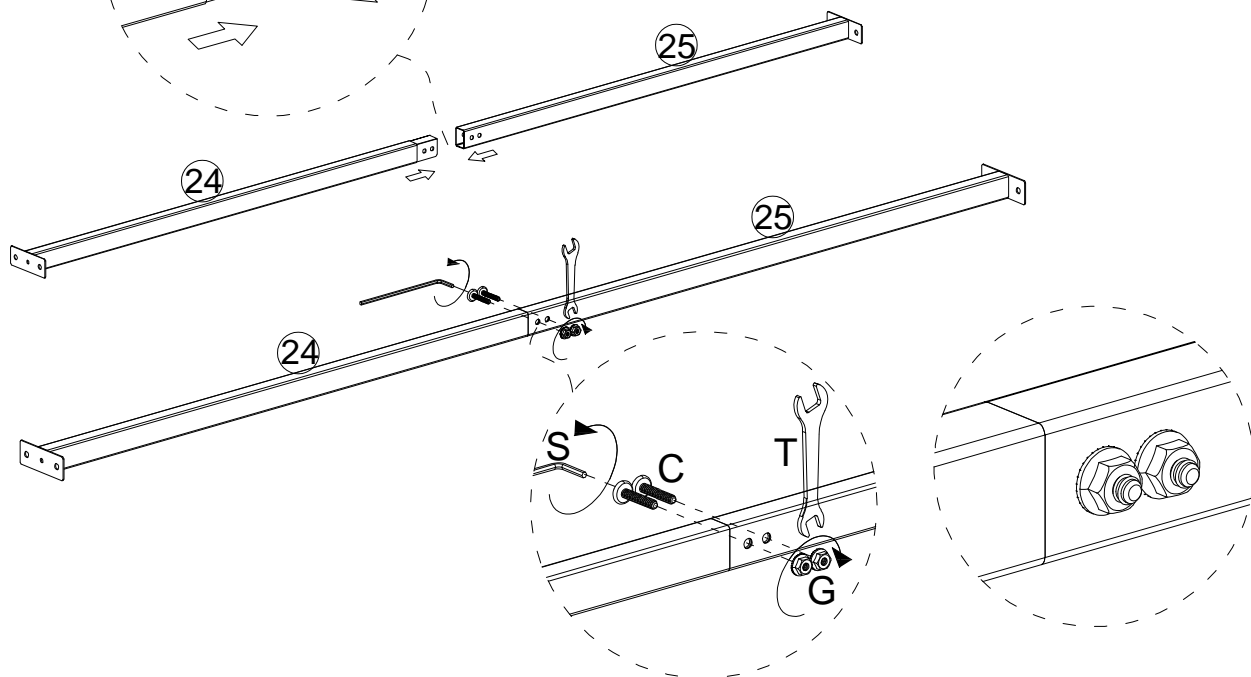C	G	S	T
M6 x 30 	M6 x 6 	M4 	
X2	X2	X1	X1




14


E	S
M6 x 12 	M4 
X2	X1

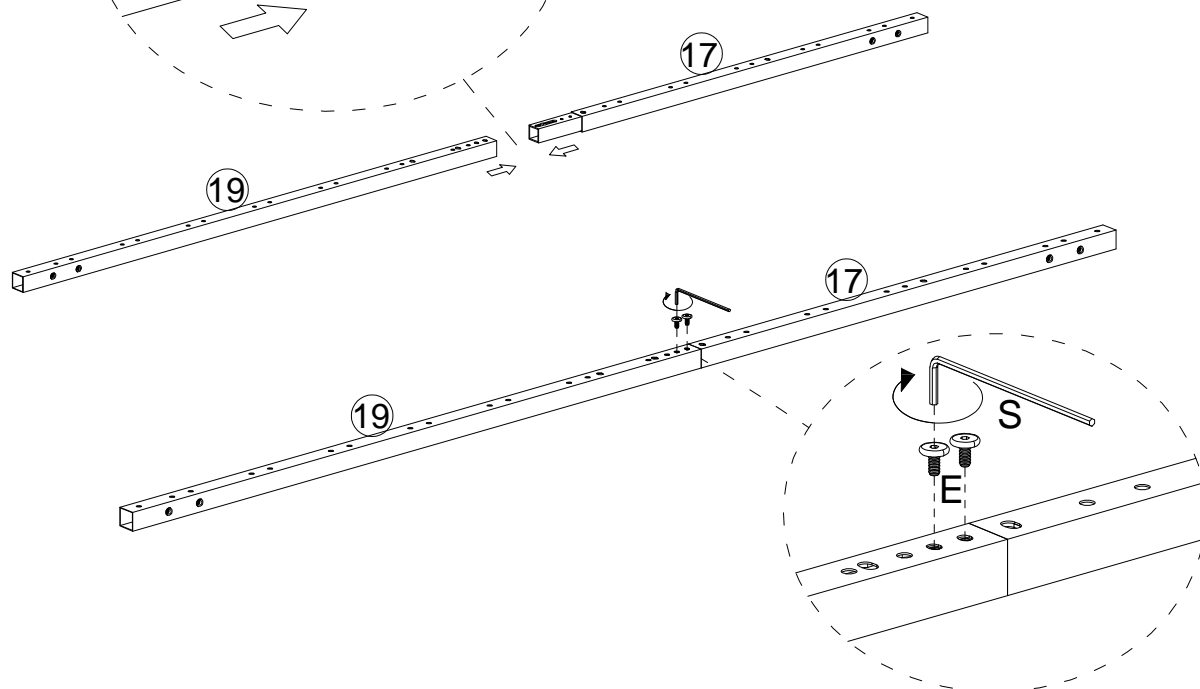


15

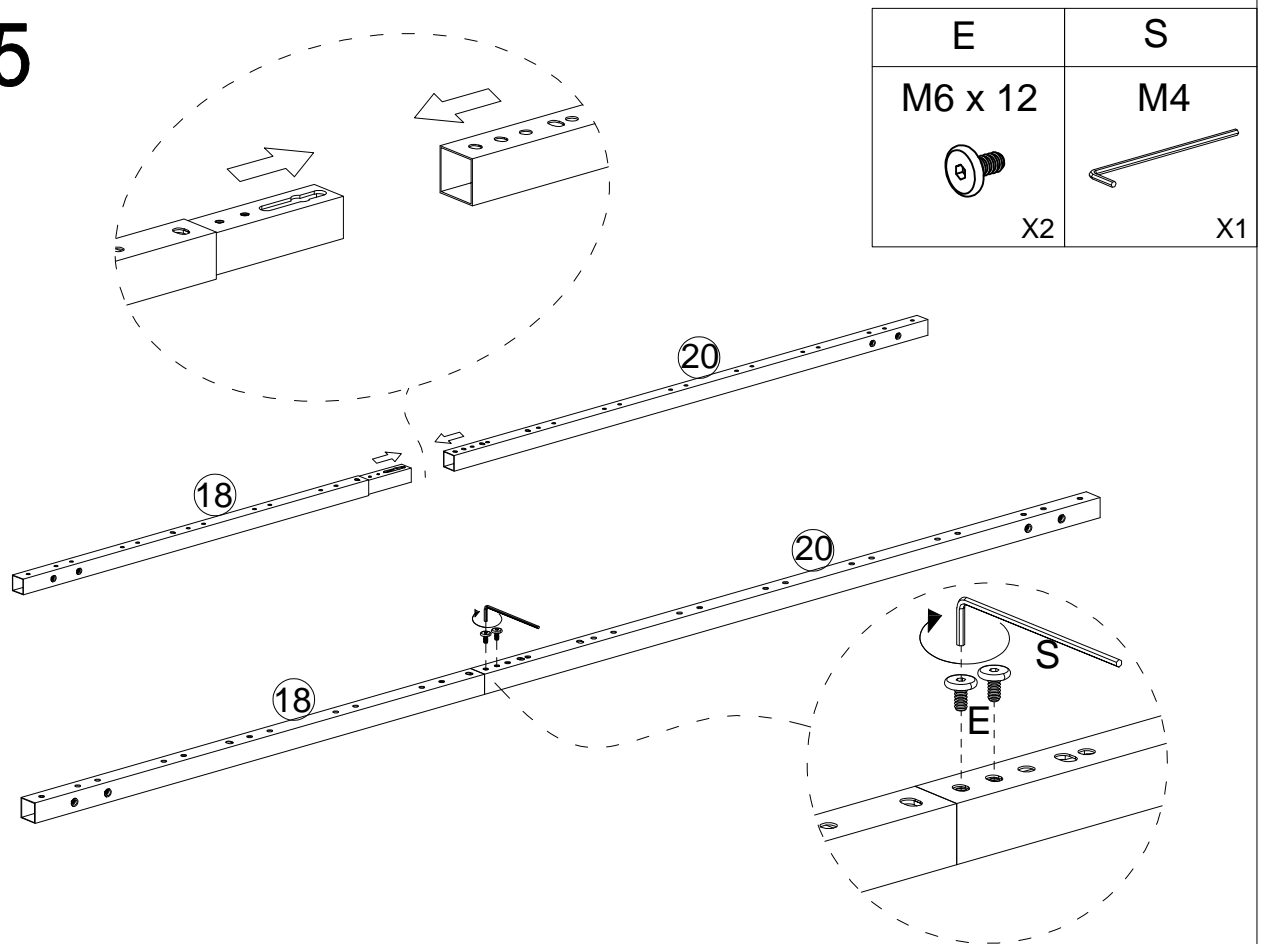



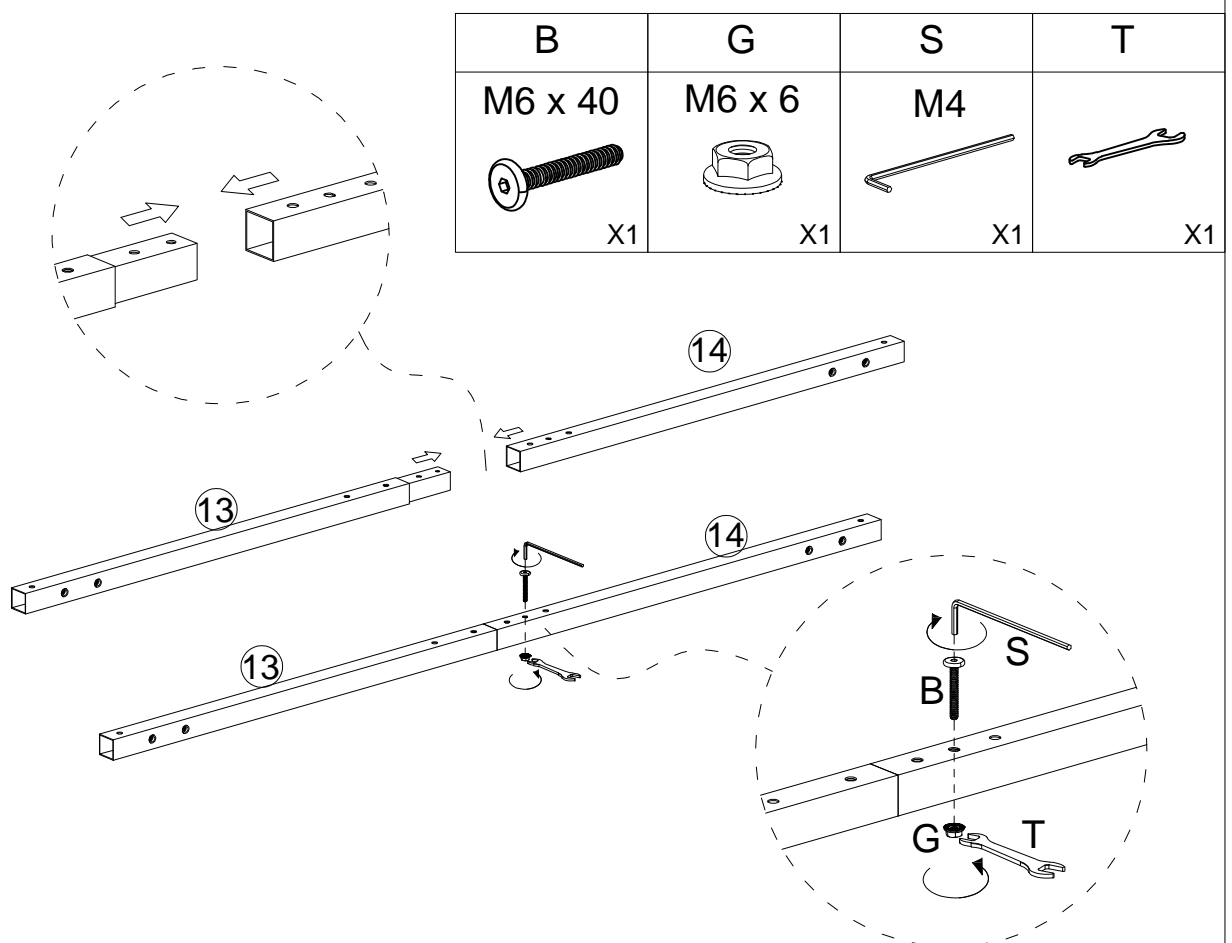


16

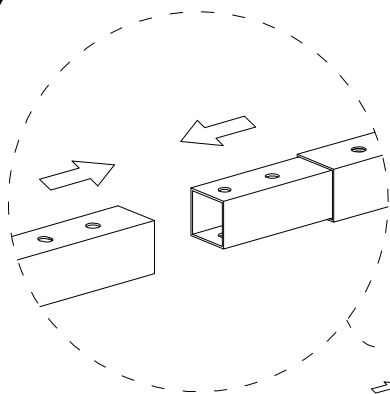


17





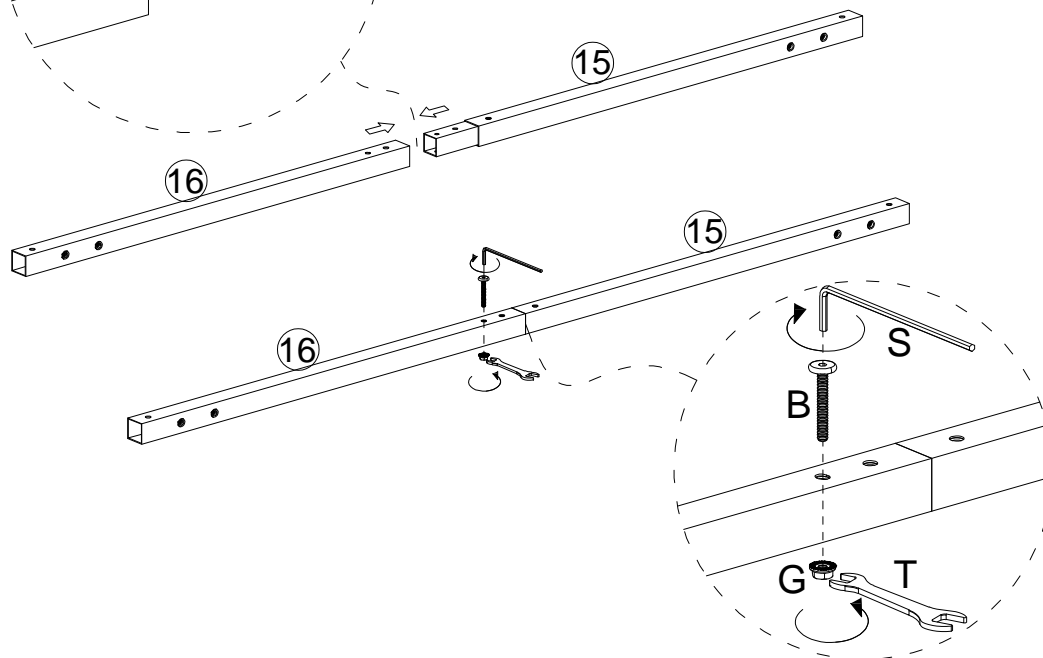


B	G	S	T
M6 x 40 	M6 x 6 	M4 	
X1	X1	X1	X1

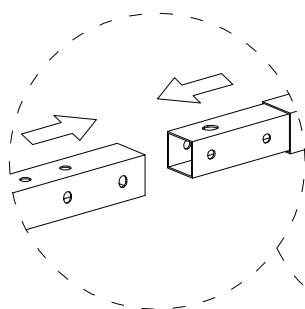


18



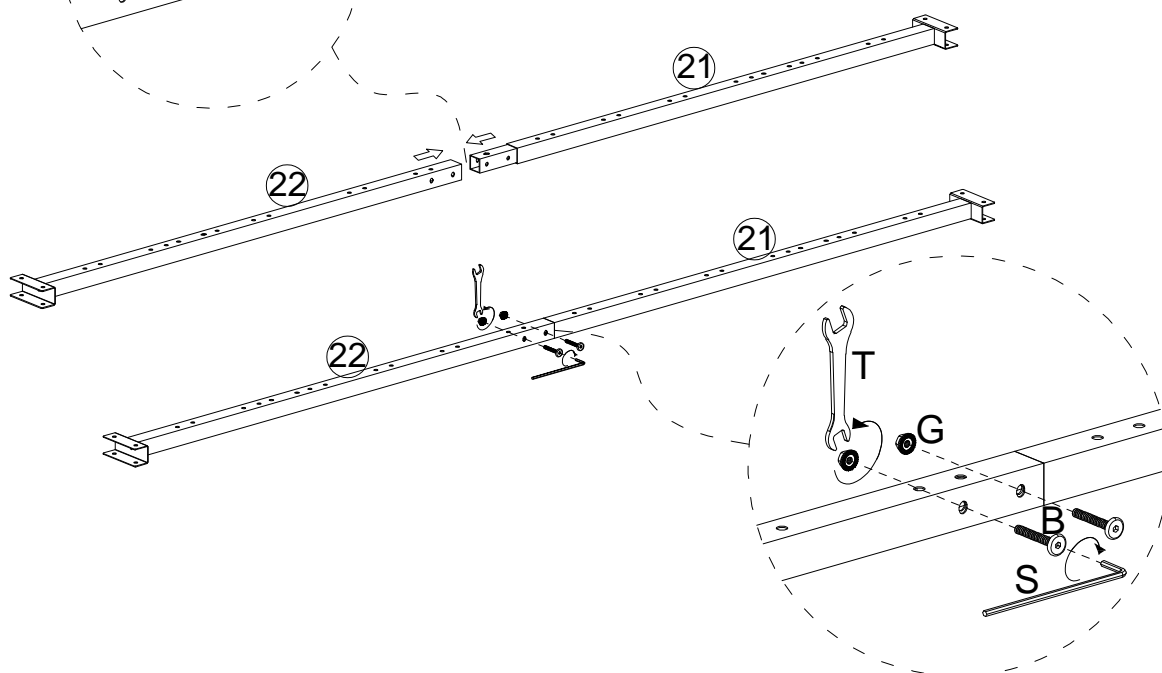


B	G	S	T
M6 x 40 	M6 x 6 	M4 	
X2	X2	X1	X1

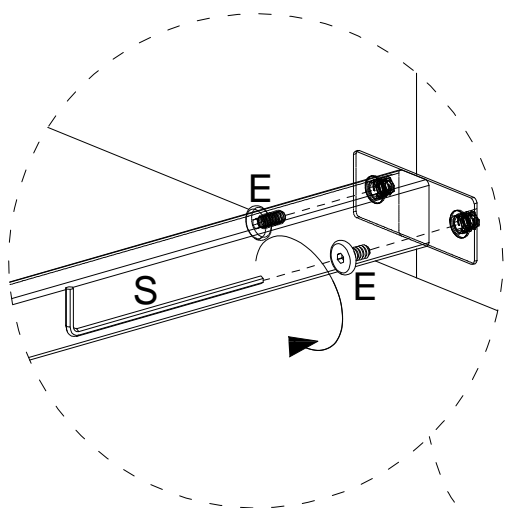


19






E	S
M6 x 12	M4
	
X4	X1

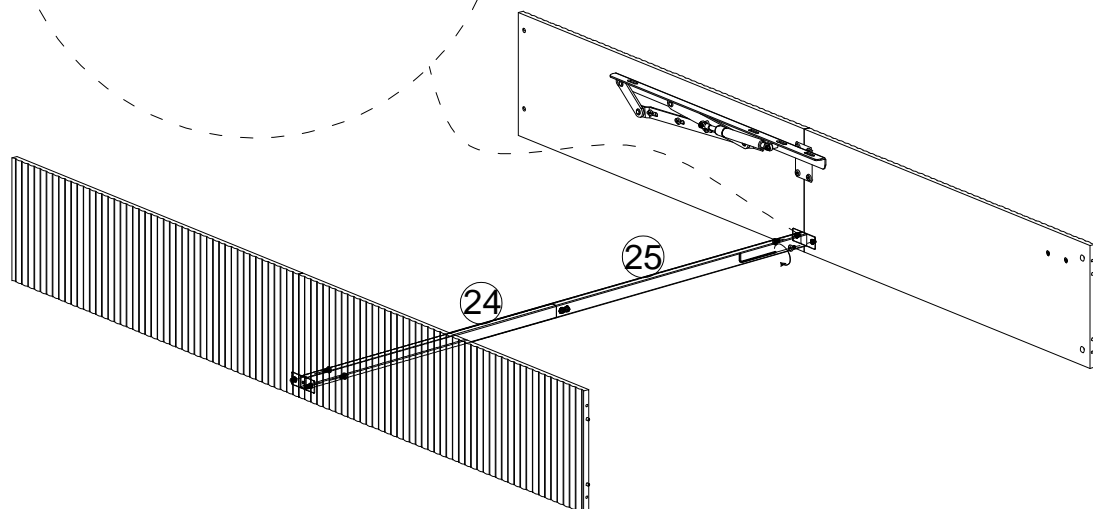

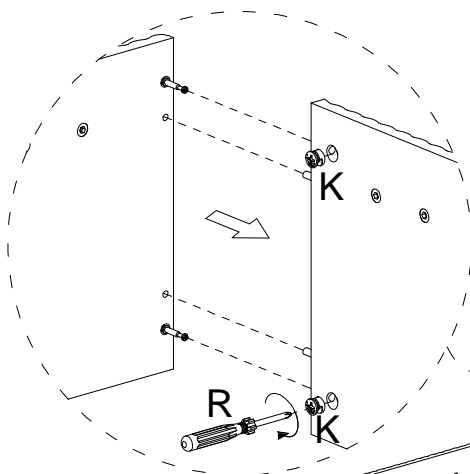


20




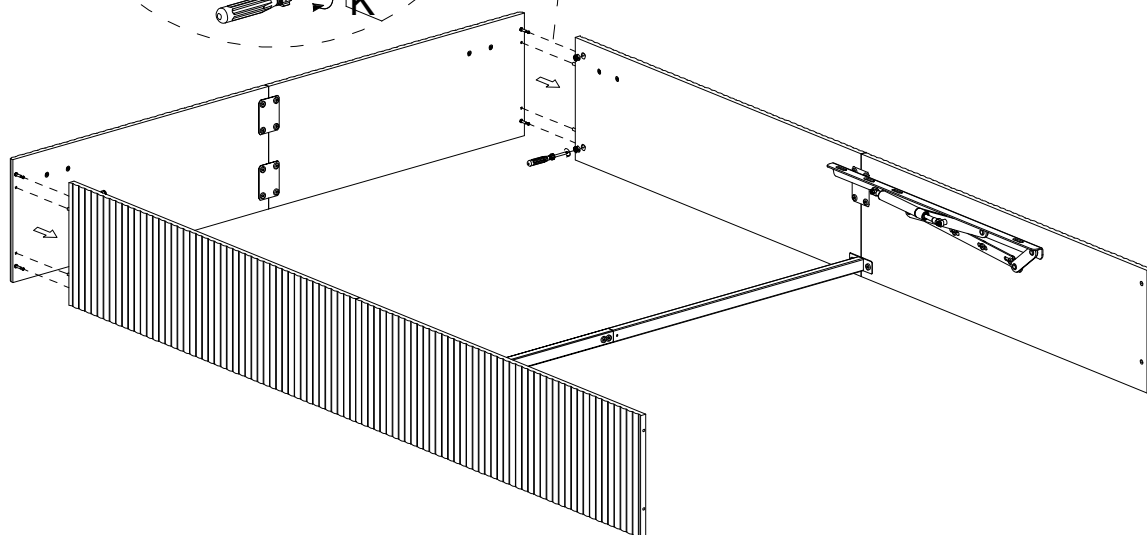K	R
Ø15 x 9.5	
	
X4	X1








21

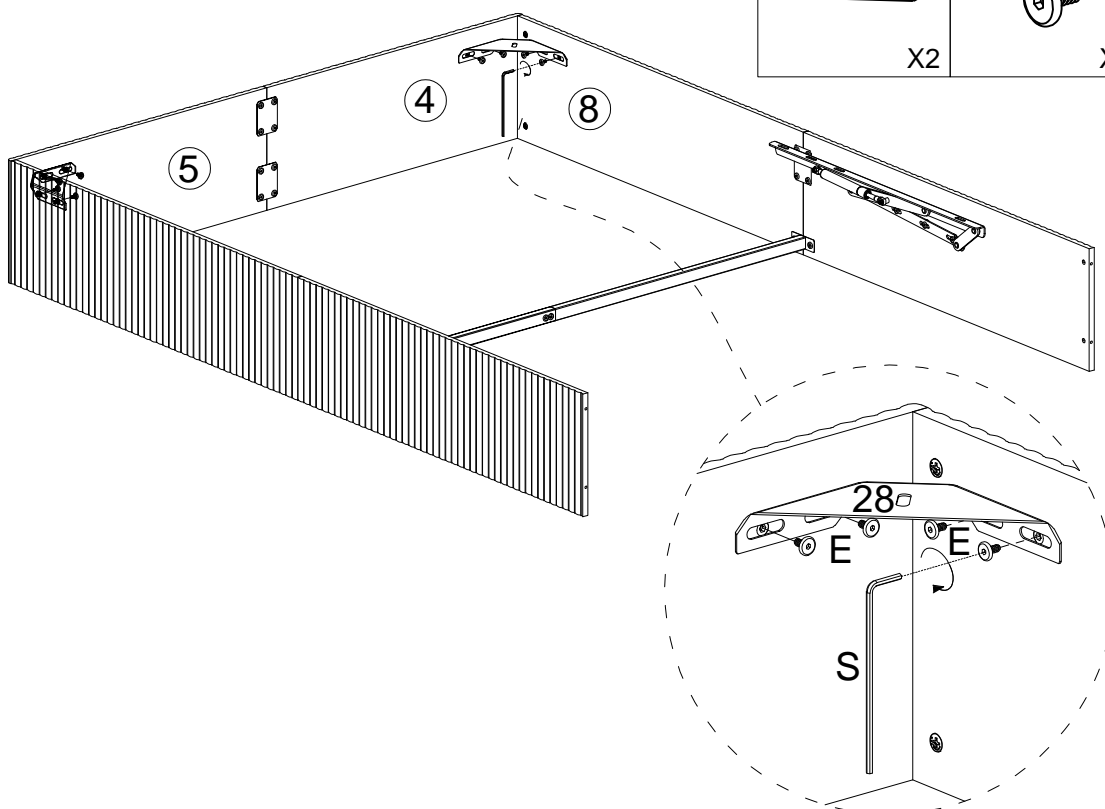28	E	S
	M6 x 12 	M4 
X2	X8	X1




22


A	L	R	S
M6 x 50 	Ø9.8x10.5 		M4 
X4	X4	X1	X1

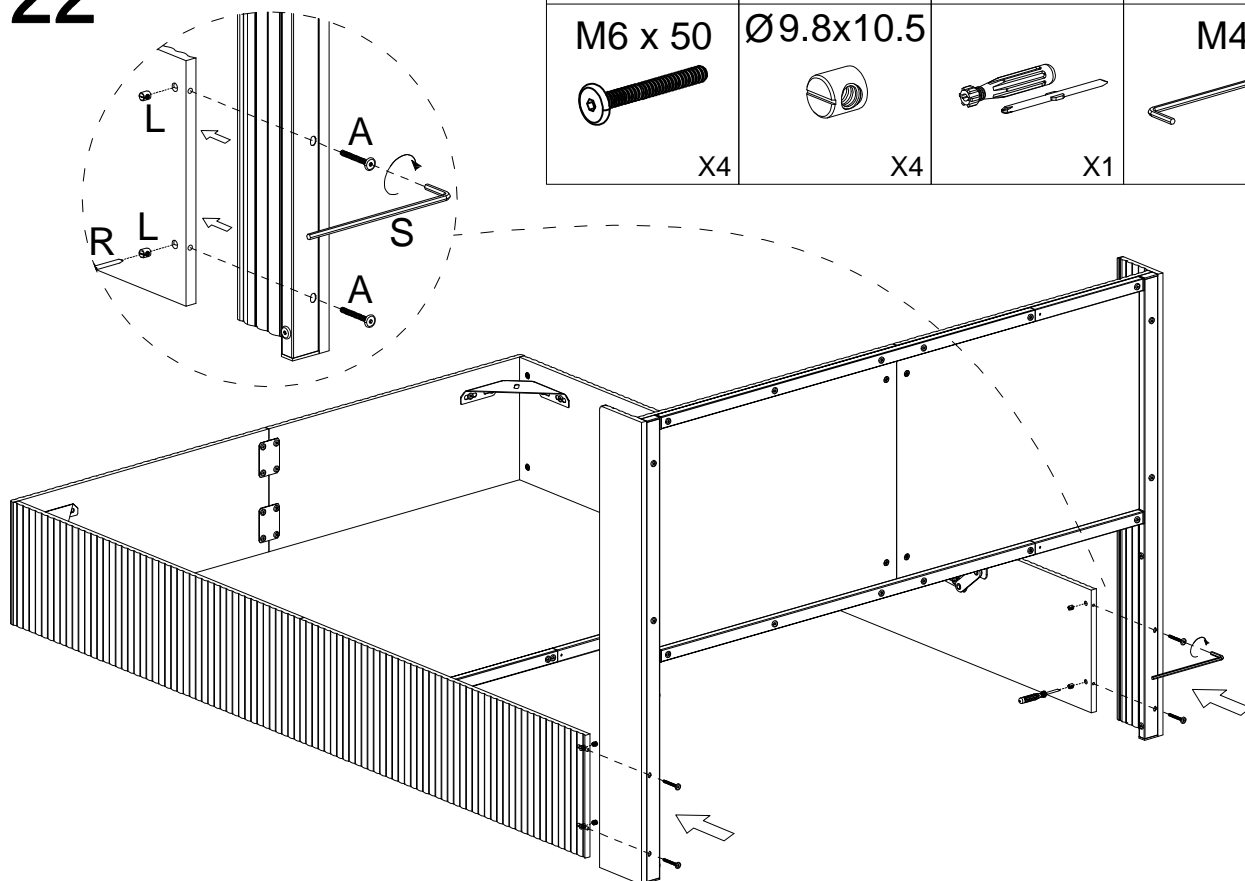






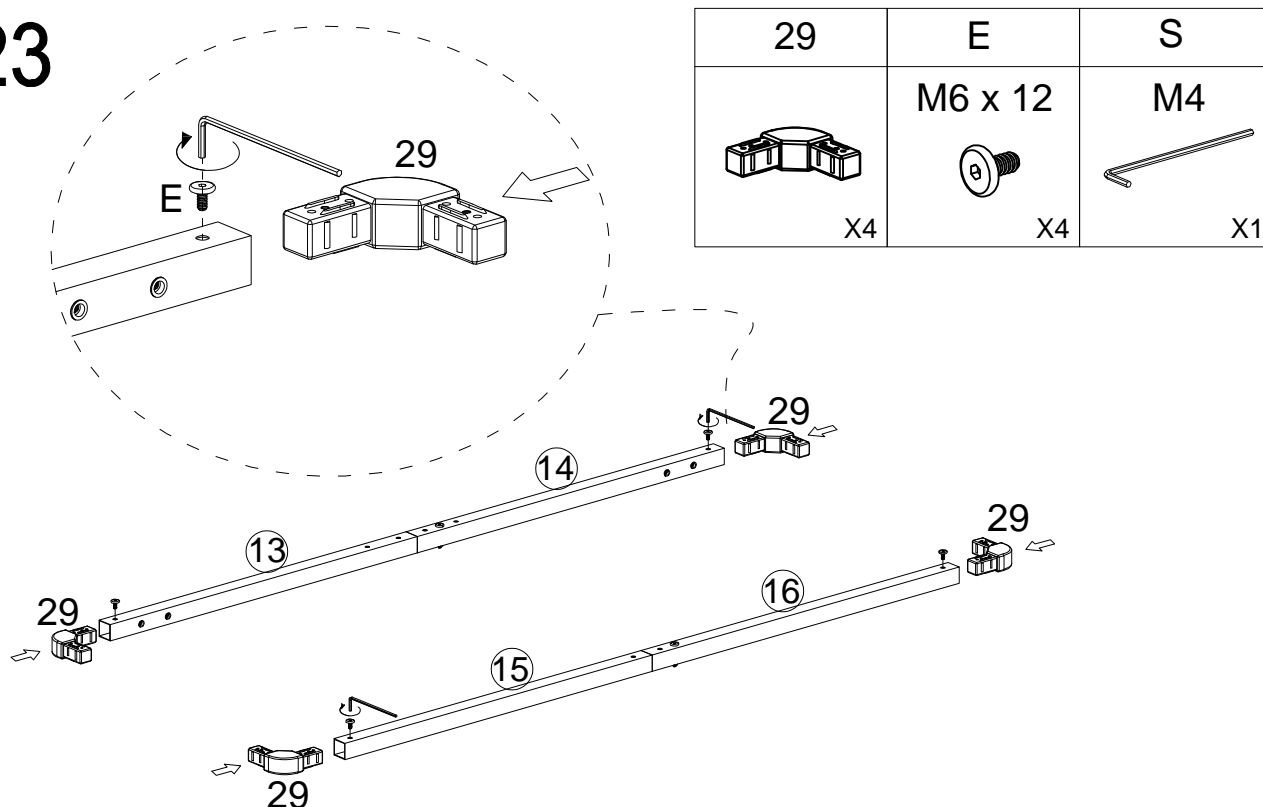23

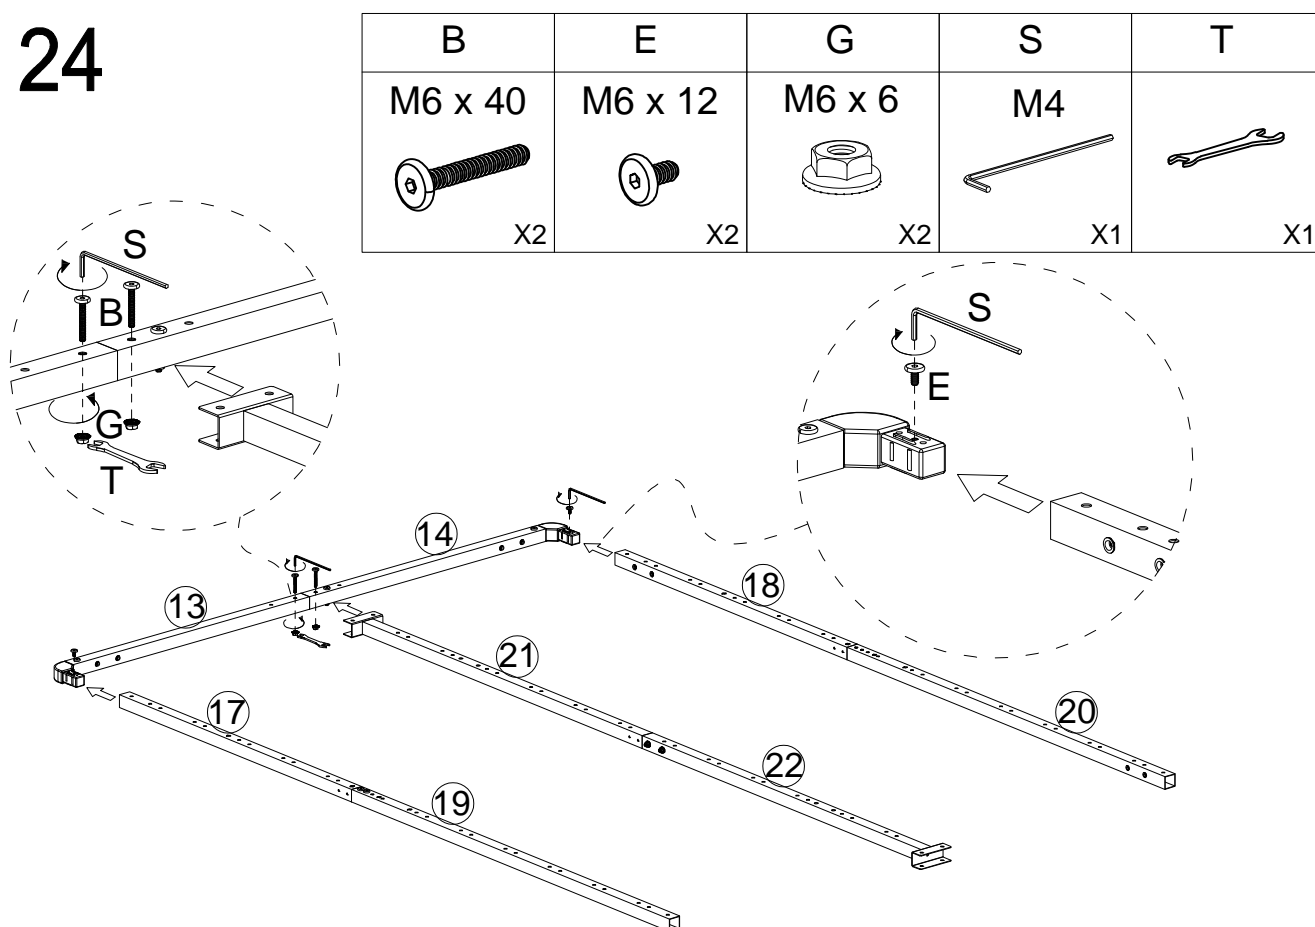


24






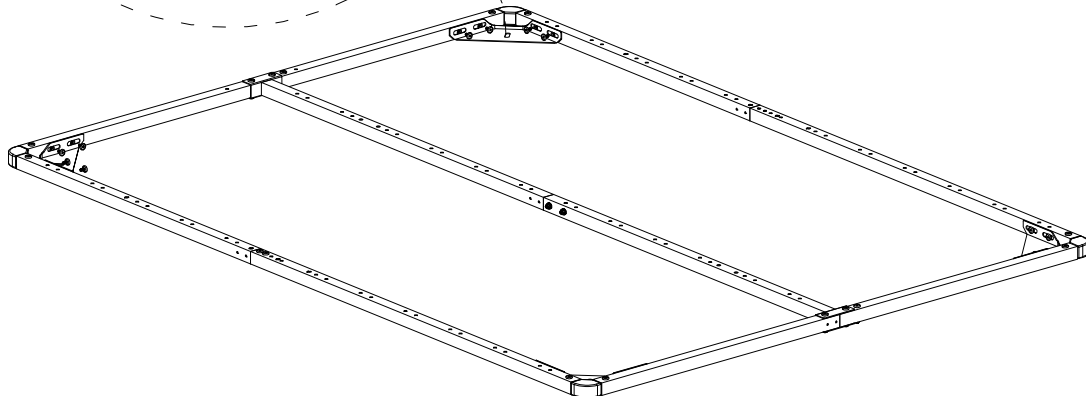
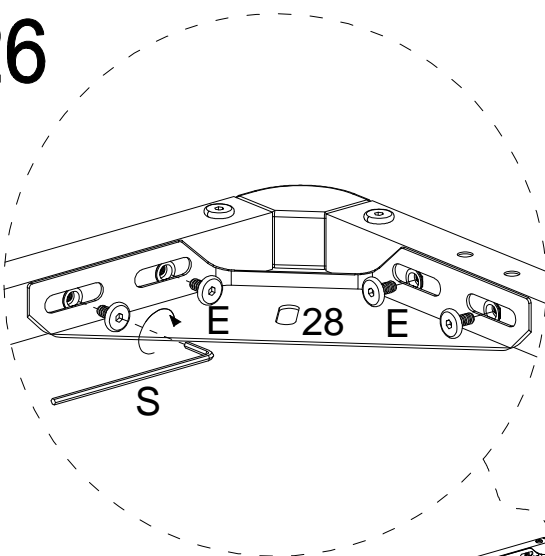
25

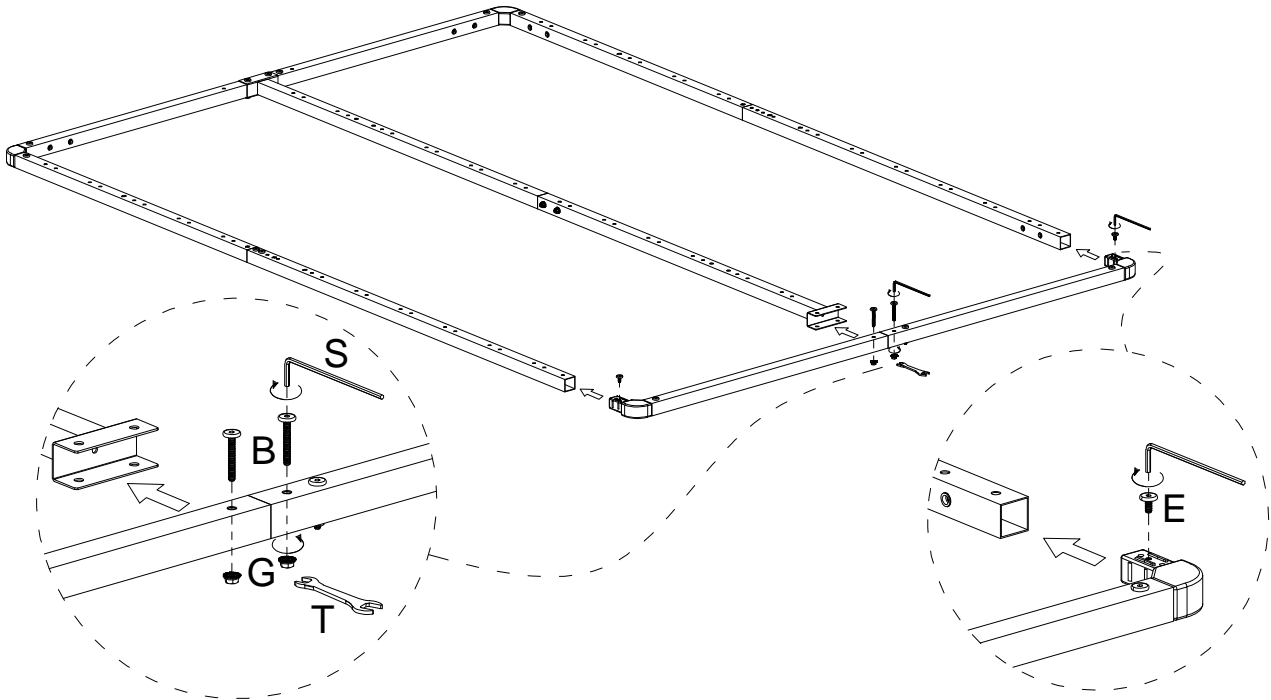B	E	G	S	T
M6 x 40	M6 x 12	M6 x 6	M4	
				
X2	X2	X2	X1	X1








26

E	28	S
M6 x 12		M4
		
X16	X4	X1








27

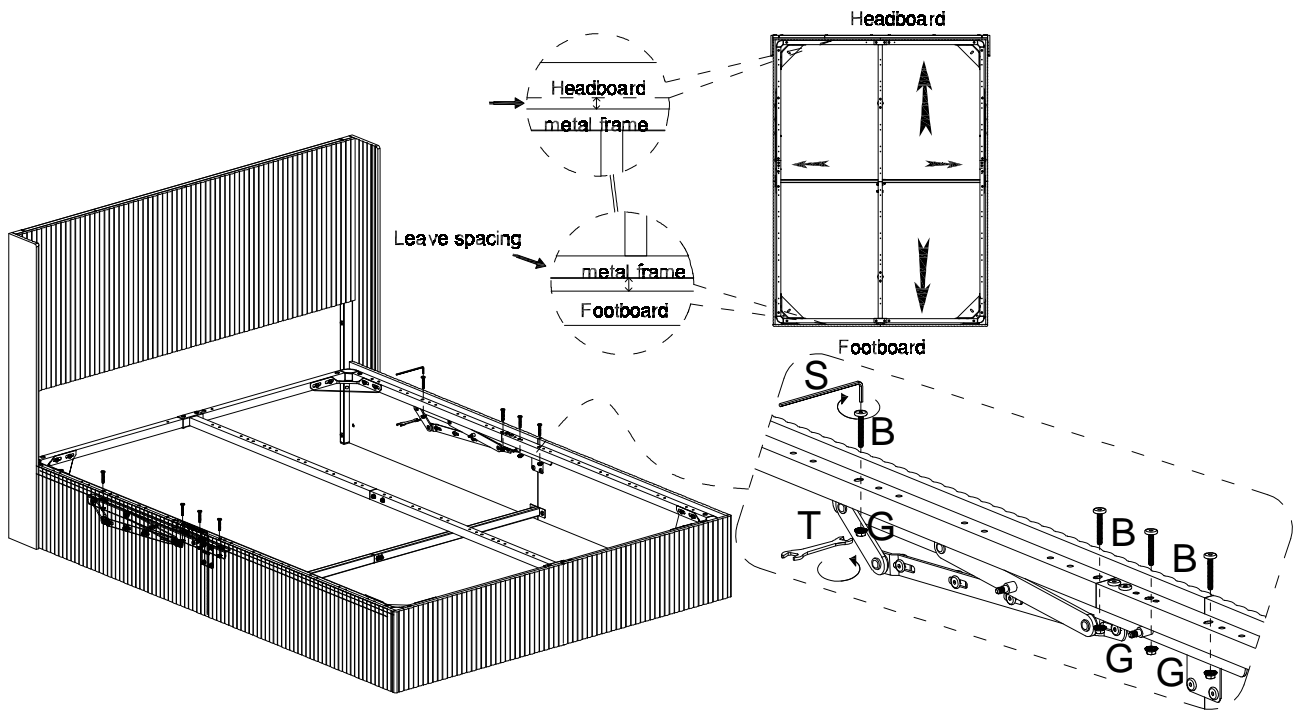B	G	S	T
M6 x 40	M6 x 6	M4	
			
X8	X8	X1	X1






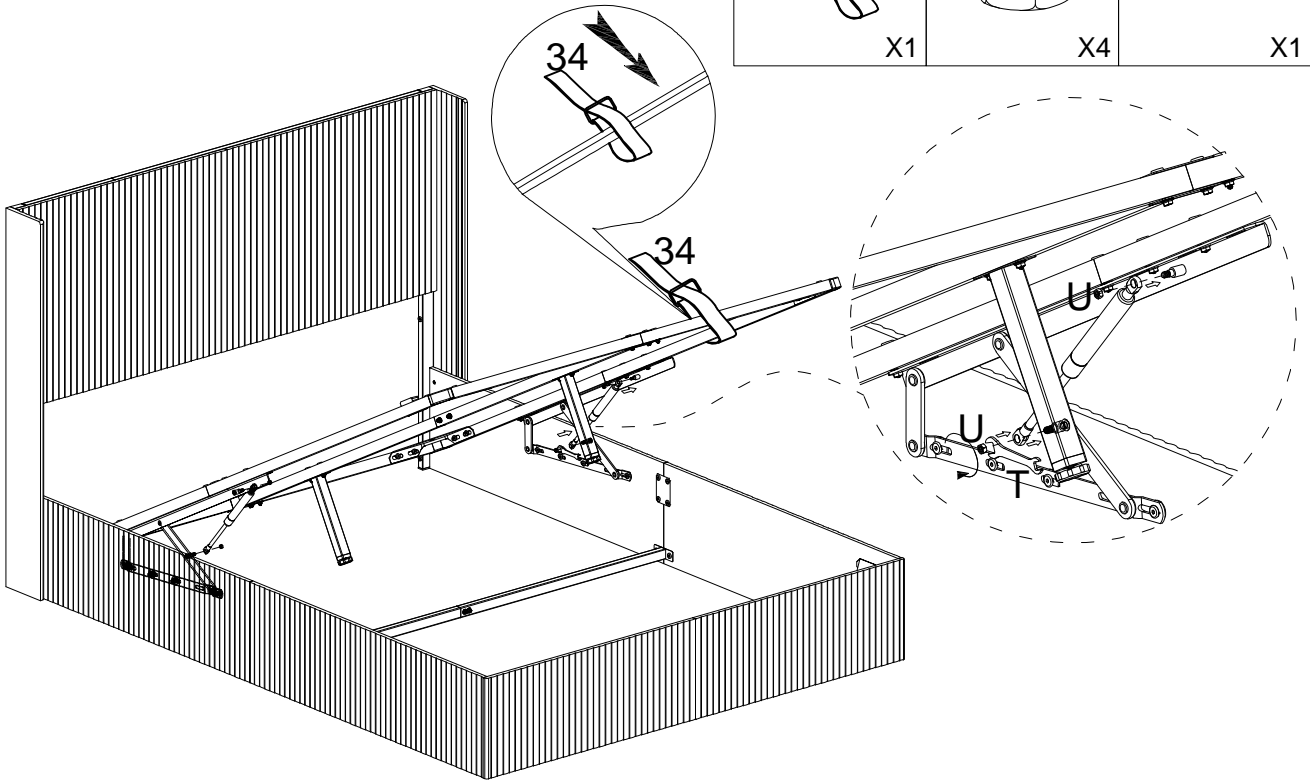
28

B	G	S	T
M6 x 40	M6 x 6	M4	
			
X4	X4	X1	X1

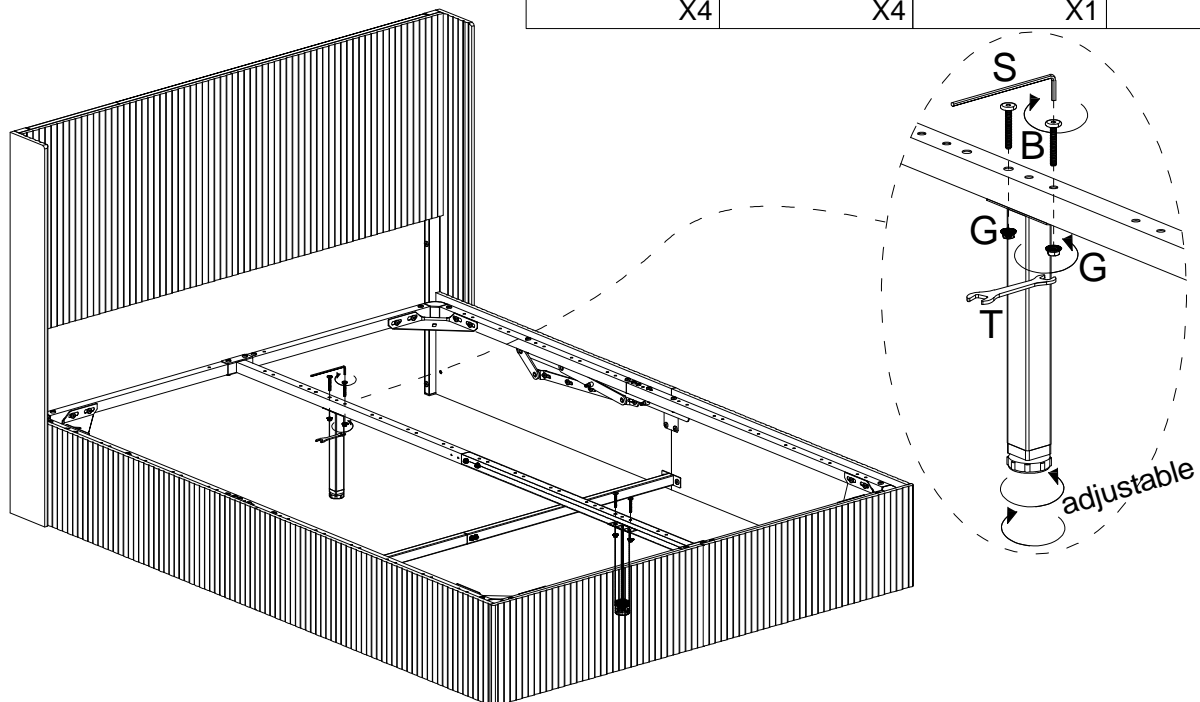




29

34	U	T
		
X1	X4	X1




30


30	31
	
X24	X12

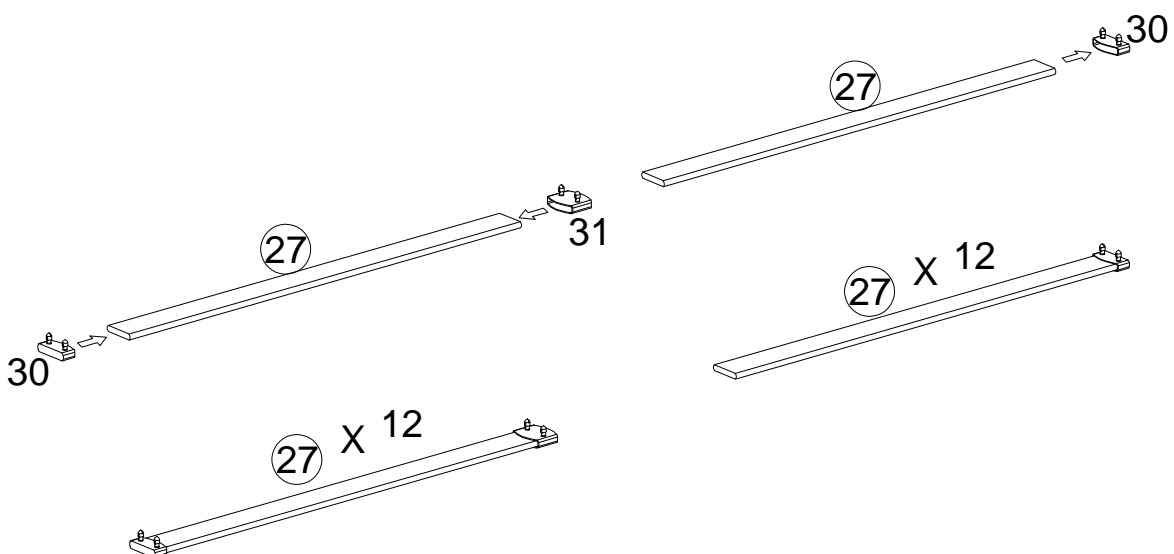


31

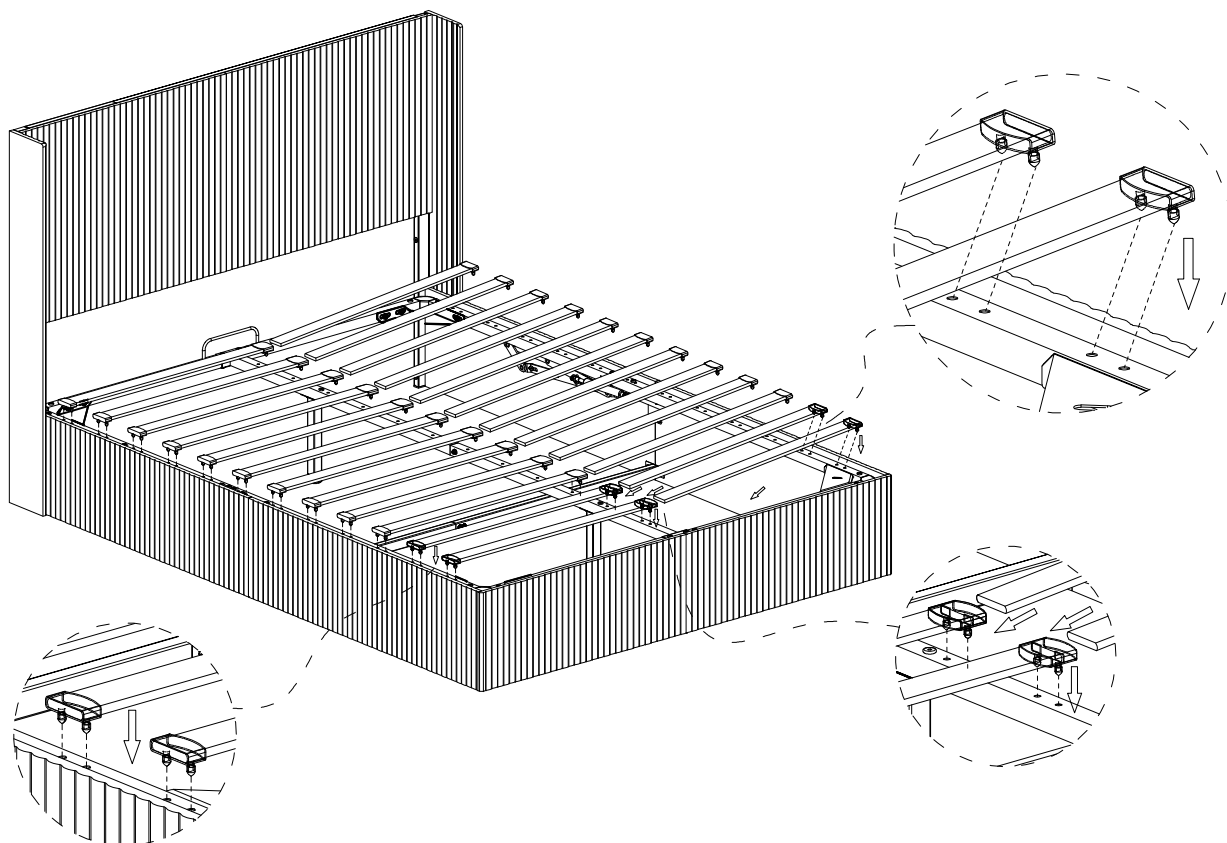

32

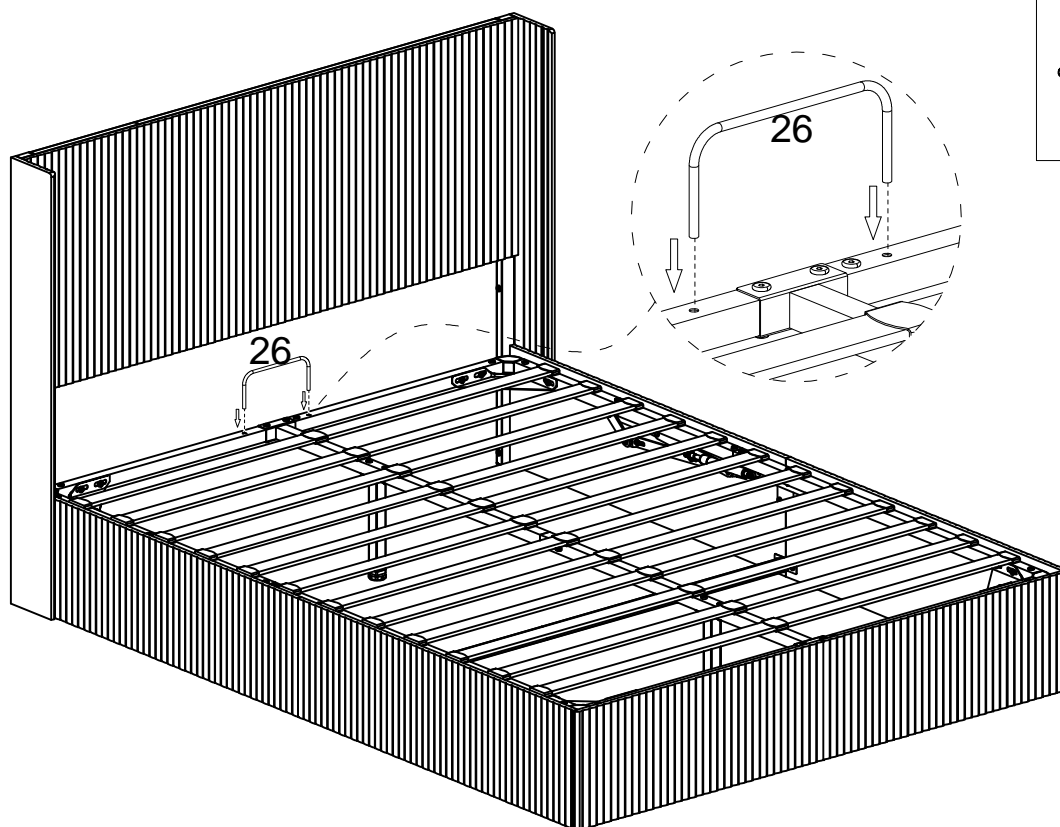

26



X1

After - sales service: 592204677@qq.com