


ASSEMBLY INSTRUCTIONS


FULL FLOOR BED

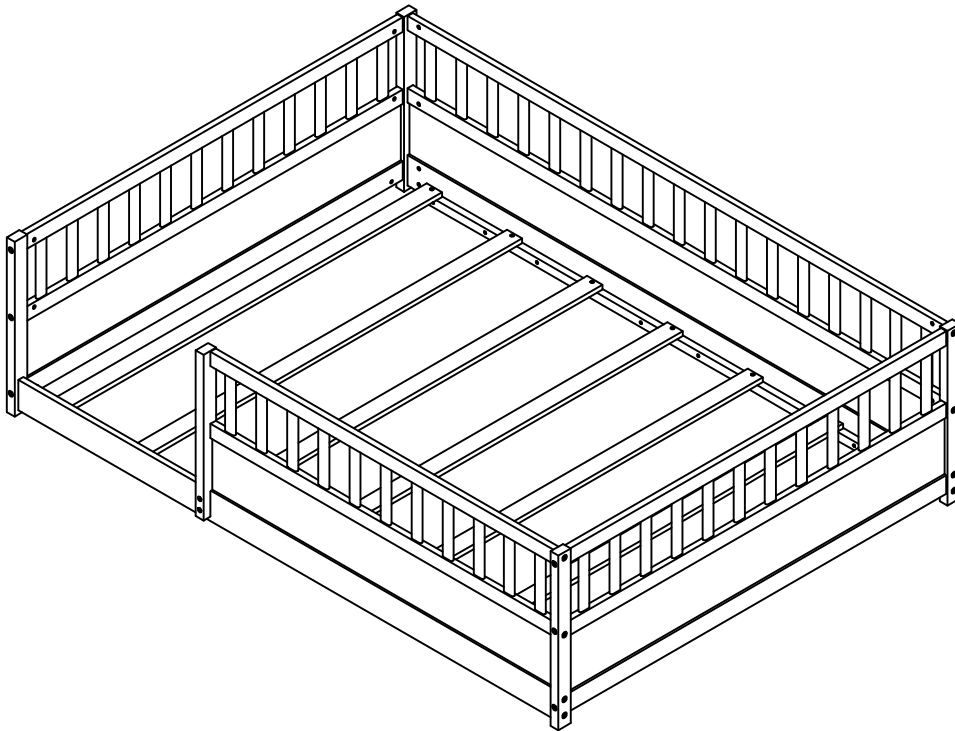







SWB028-F

Contact us: 13826959116@163.com




Detail View

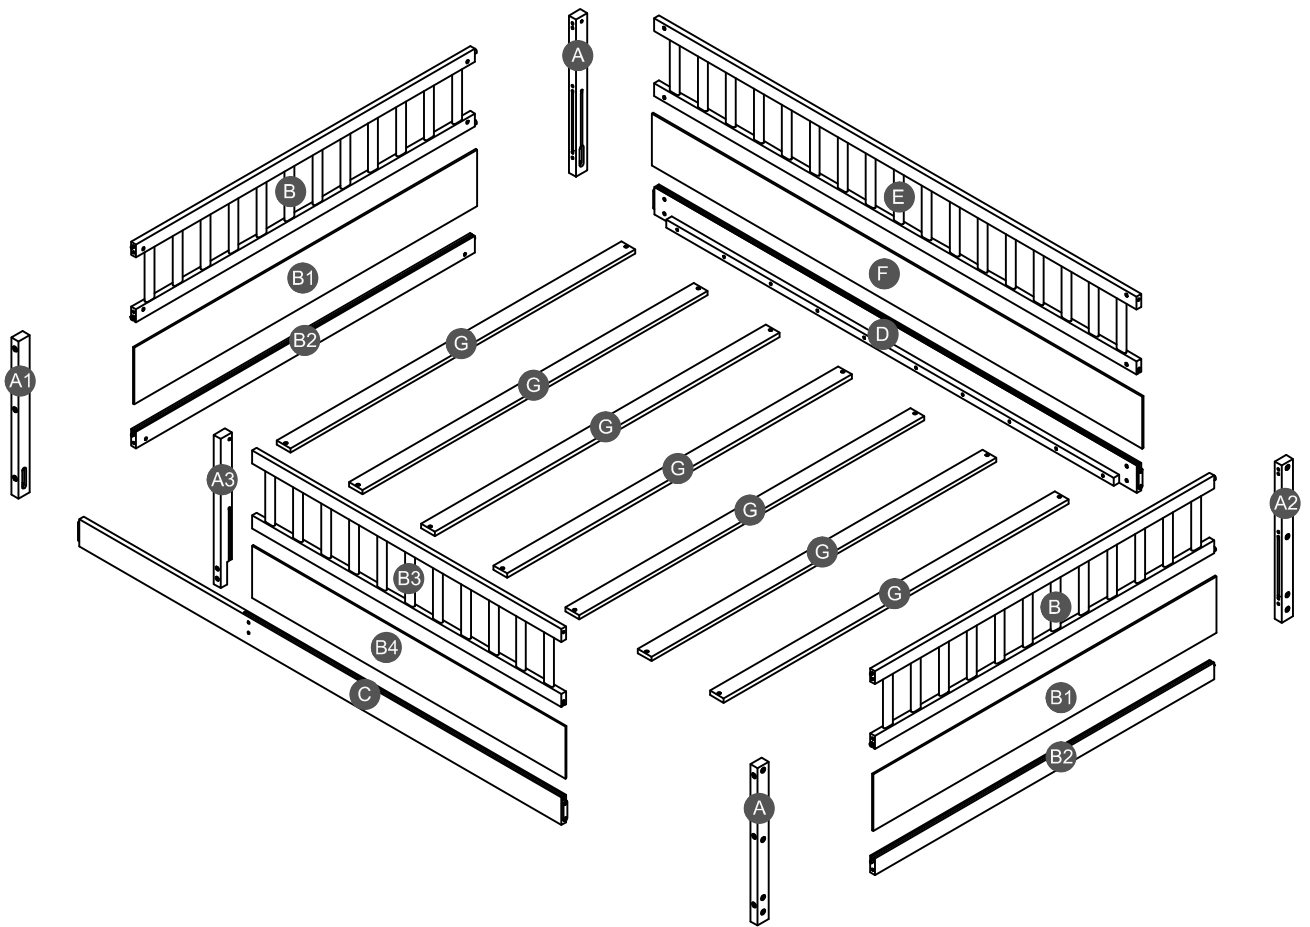


Part List

A  Leg (left back/right front) - 2pcs	A1  Leg (left front) - 1pc	A2  Leg (right back) - 1pc
A3  Support guard rail - 1pc	B  Frame HB/FB - 2pcs	B1  Side Panel HB/FB - 2pcs
B2  Lower horizontal bar HB/FB - 2pcs	B3  Guard rail (Front) - 1pc	B4  Side Panel (Front) - 1pc
C  Side rail (front) - 1pc	D  Side rail (back) - 1pc	E  Guard rail (back) - 1pc
F  Side Panel (back) - 1pc	G  Slat - 7pcs	

Hardware List


1  (Ø15)1/4"*80mm	2  (Ø12)1/4"*70mm	3  (Ø12)1/4"*35mm
Hex-Head bolts (26pcs)	Hex-Head bolts (2pcs)	Hex-Head bolts (2pcs)
4  1/4"*15 (9.5mm)	5  Ø4*30mm	6  (1/4")4.5*58mm
Horizontal-Hole bolts(28pcs)	Wood screws (14pcs)	Allen key (1pc)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

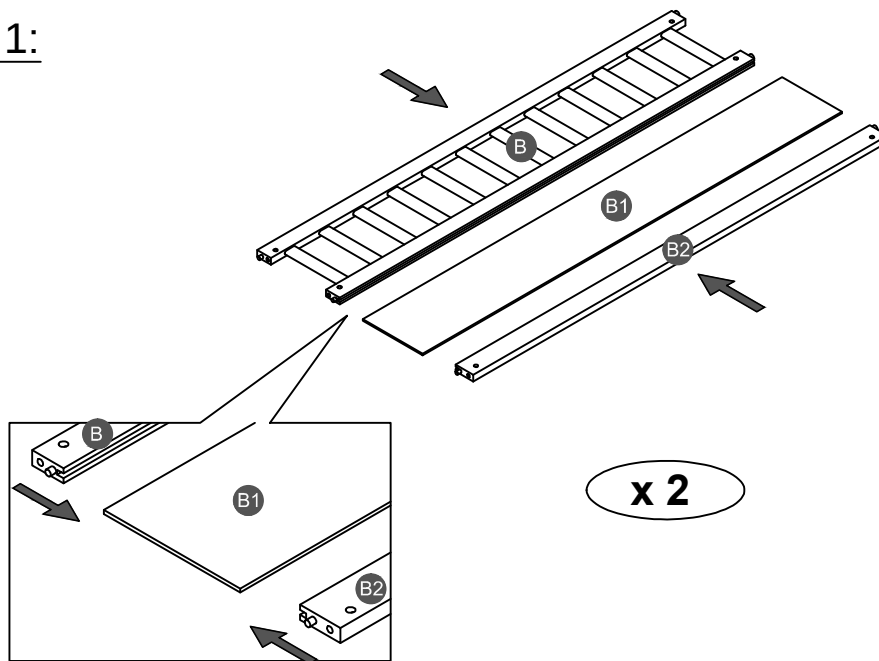


STEP 2:

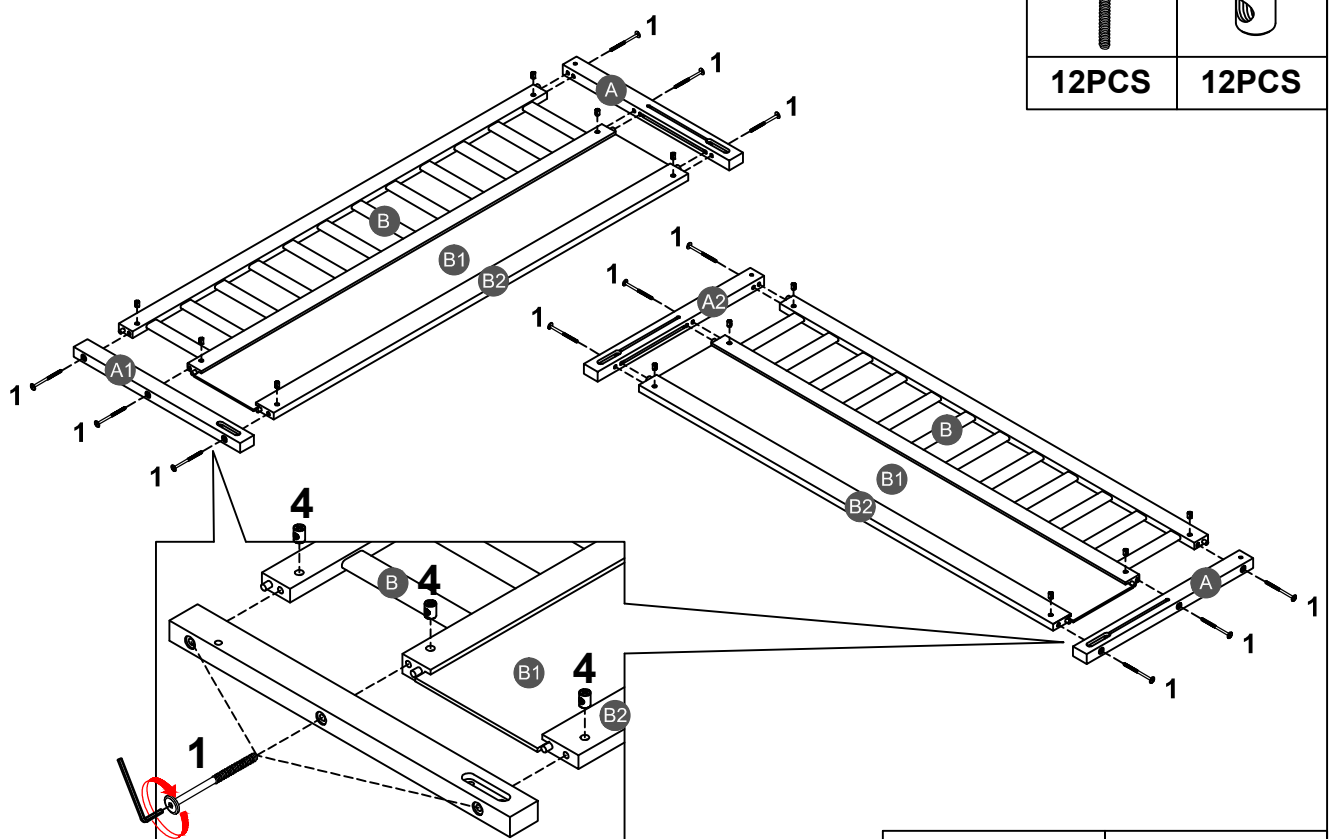


Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

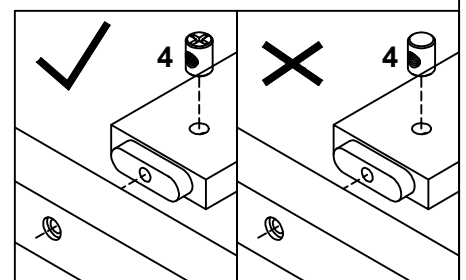


STEP 3:

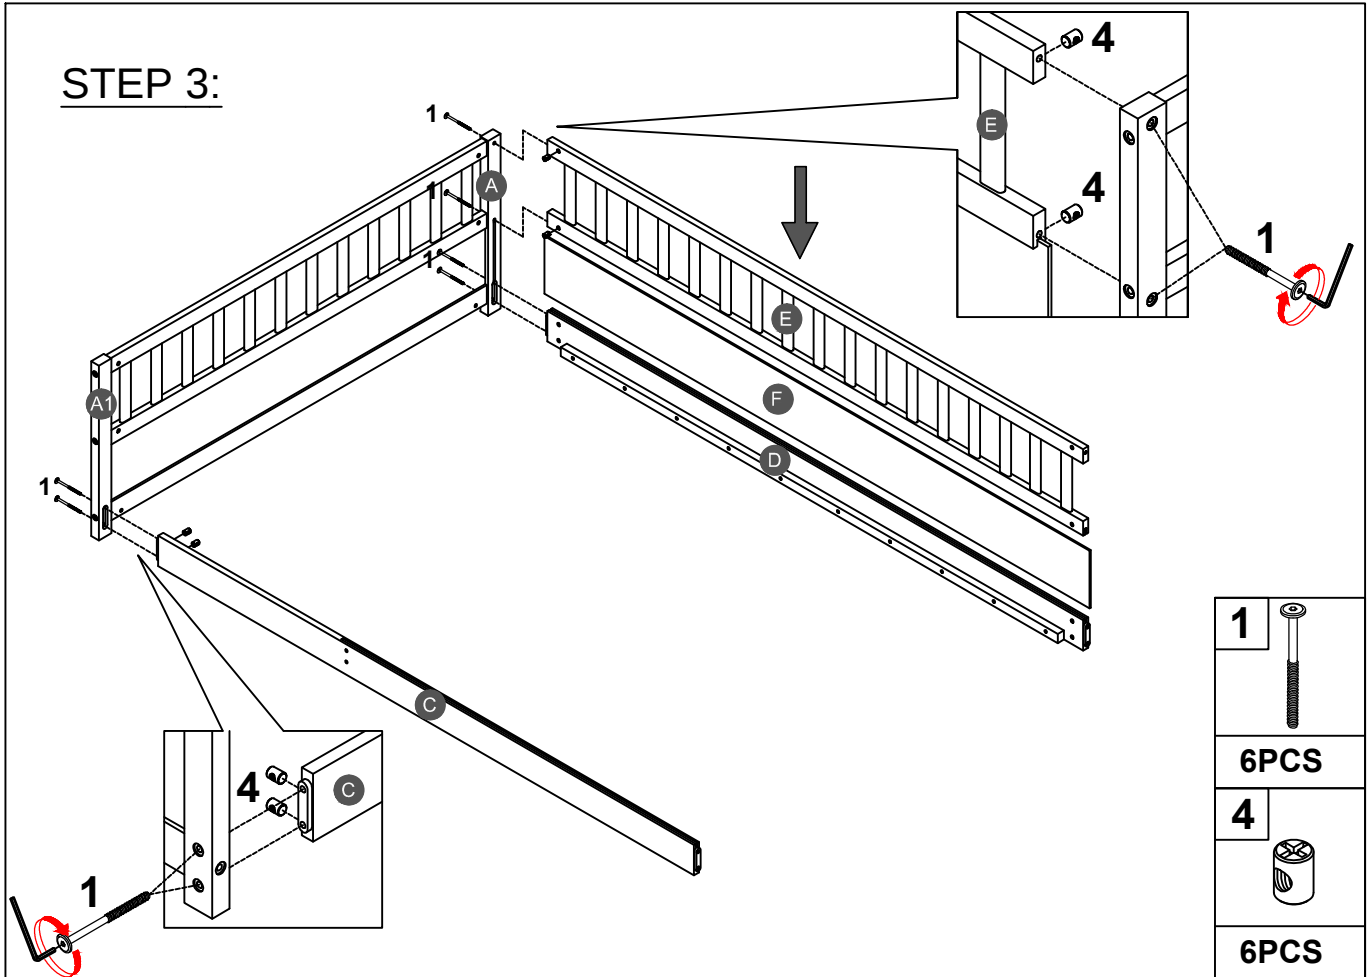

STEP 4:

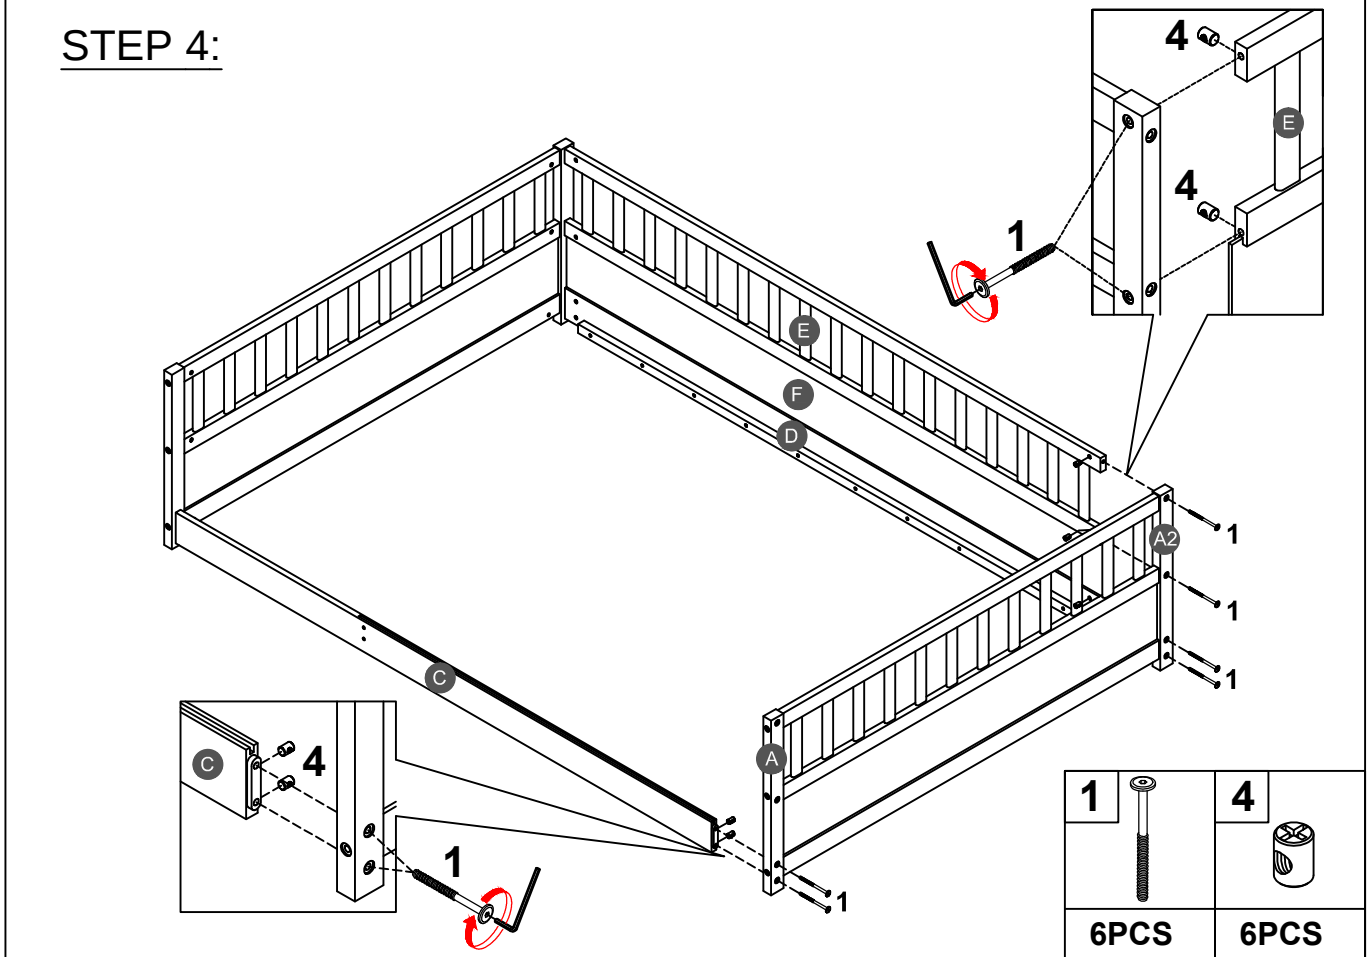


STEP 5:

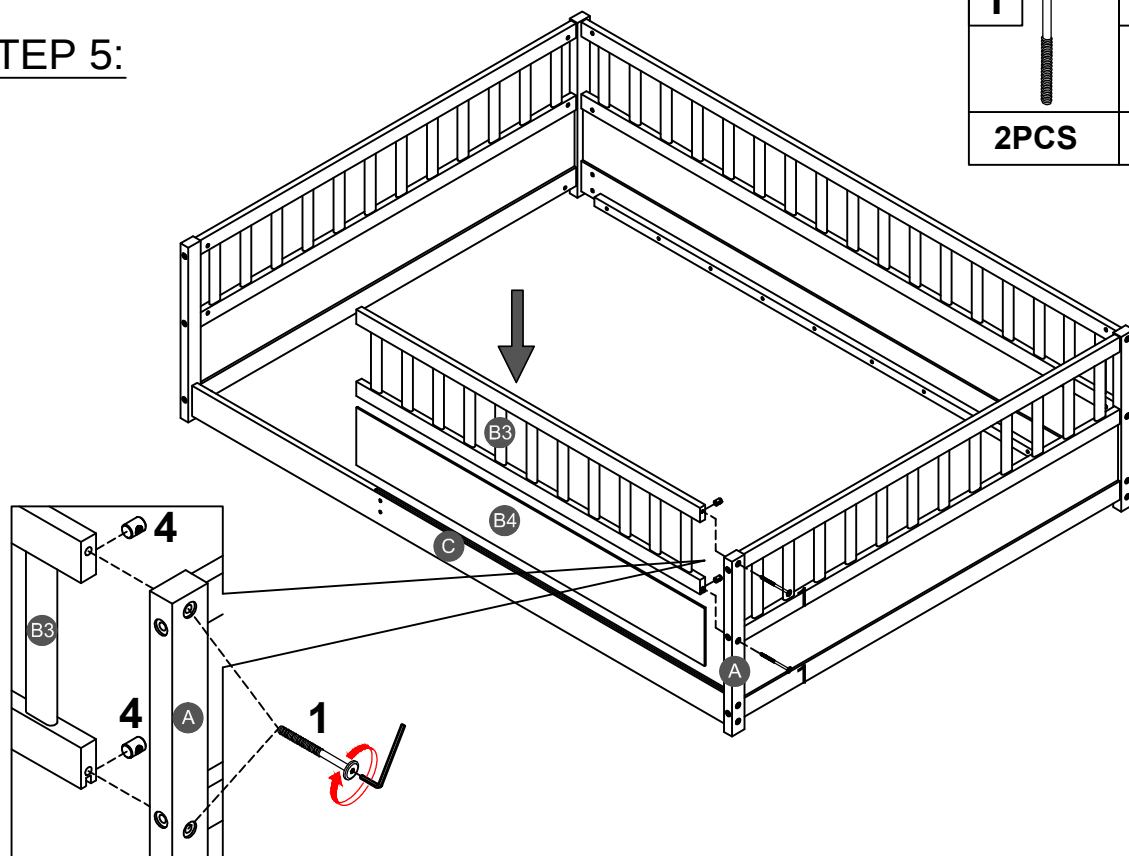


1		4	
2PCS		2PCS	

STEP 6:

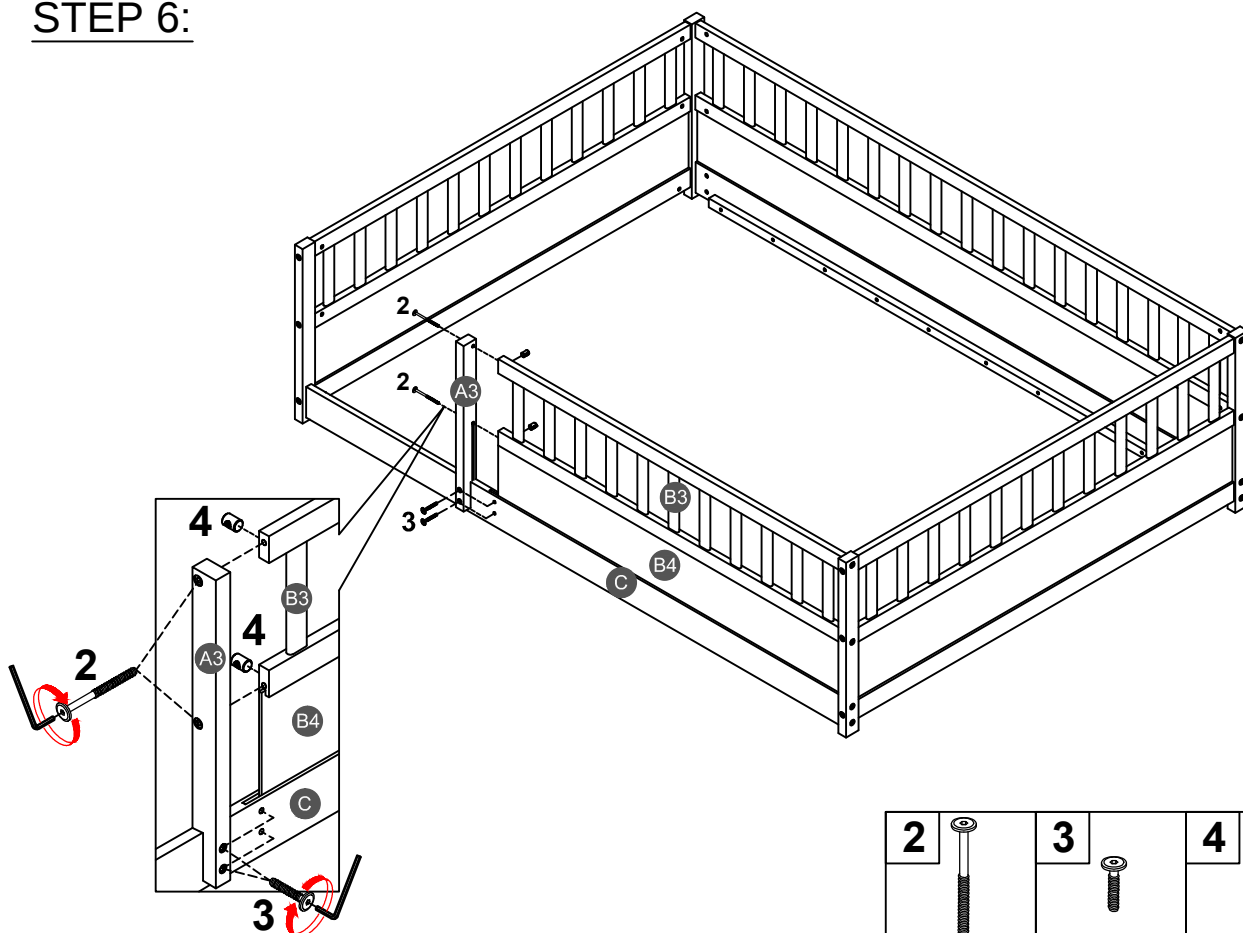

2		3		4	
2PCS		2PCS		2PCS	



STEP 7:

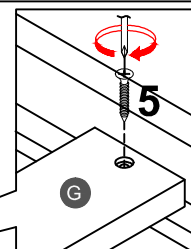

5



14PCS

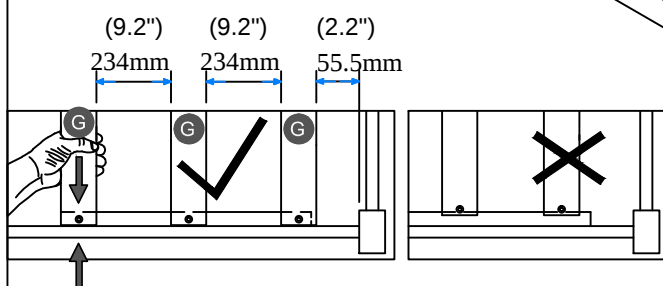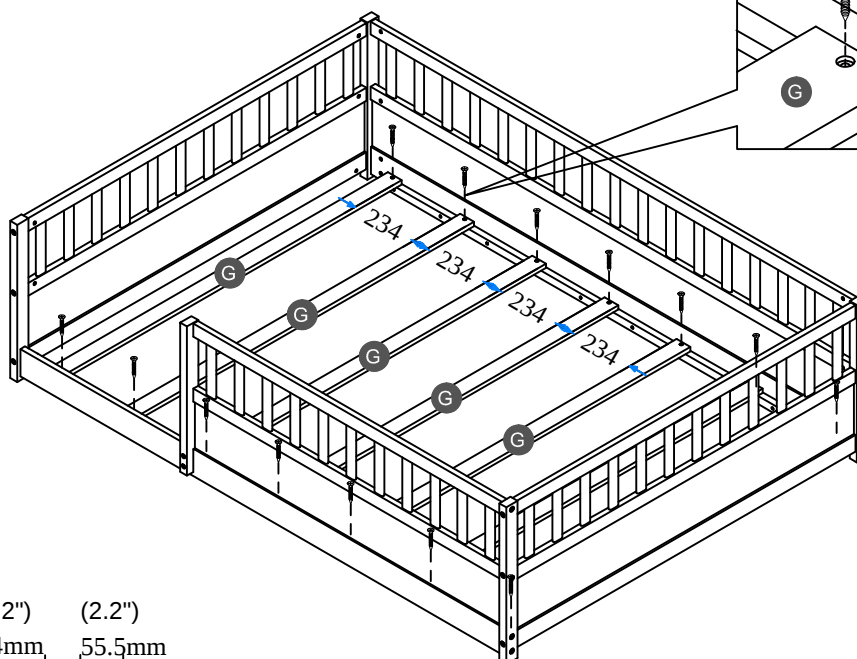

NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

