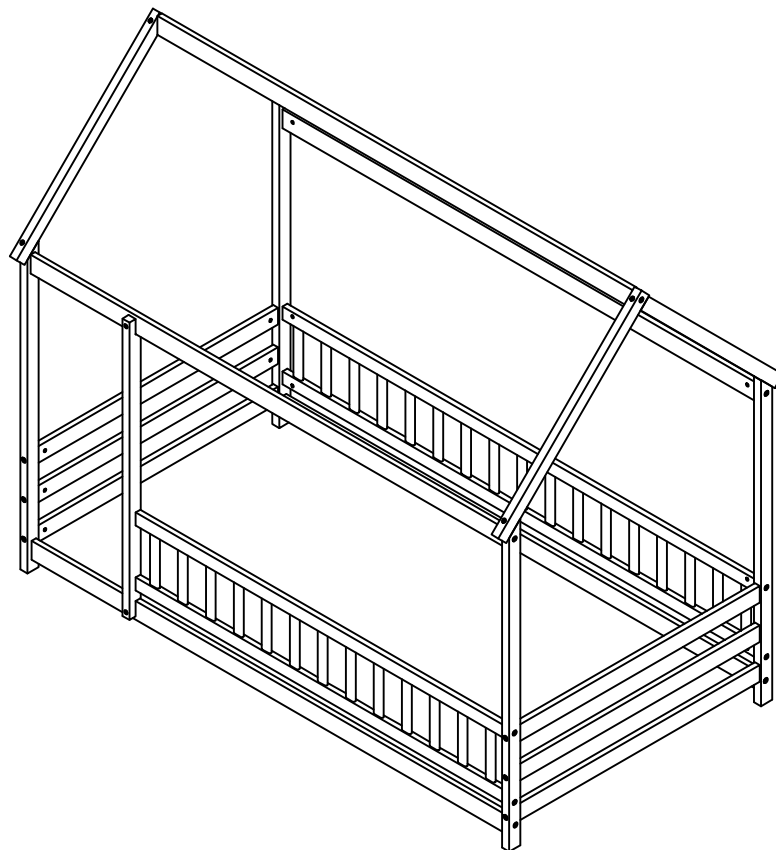


ASSEMBLY INSTRUCTIONS


TWIN HOUSE FLOOR BED














SWB027-T

Contact us: 13826959116@163.com

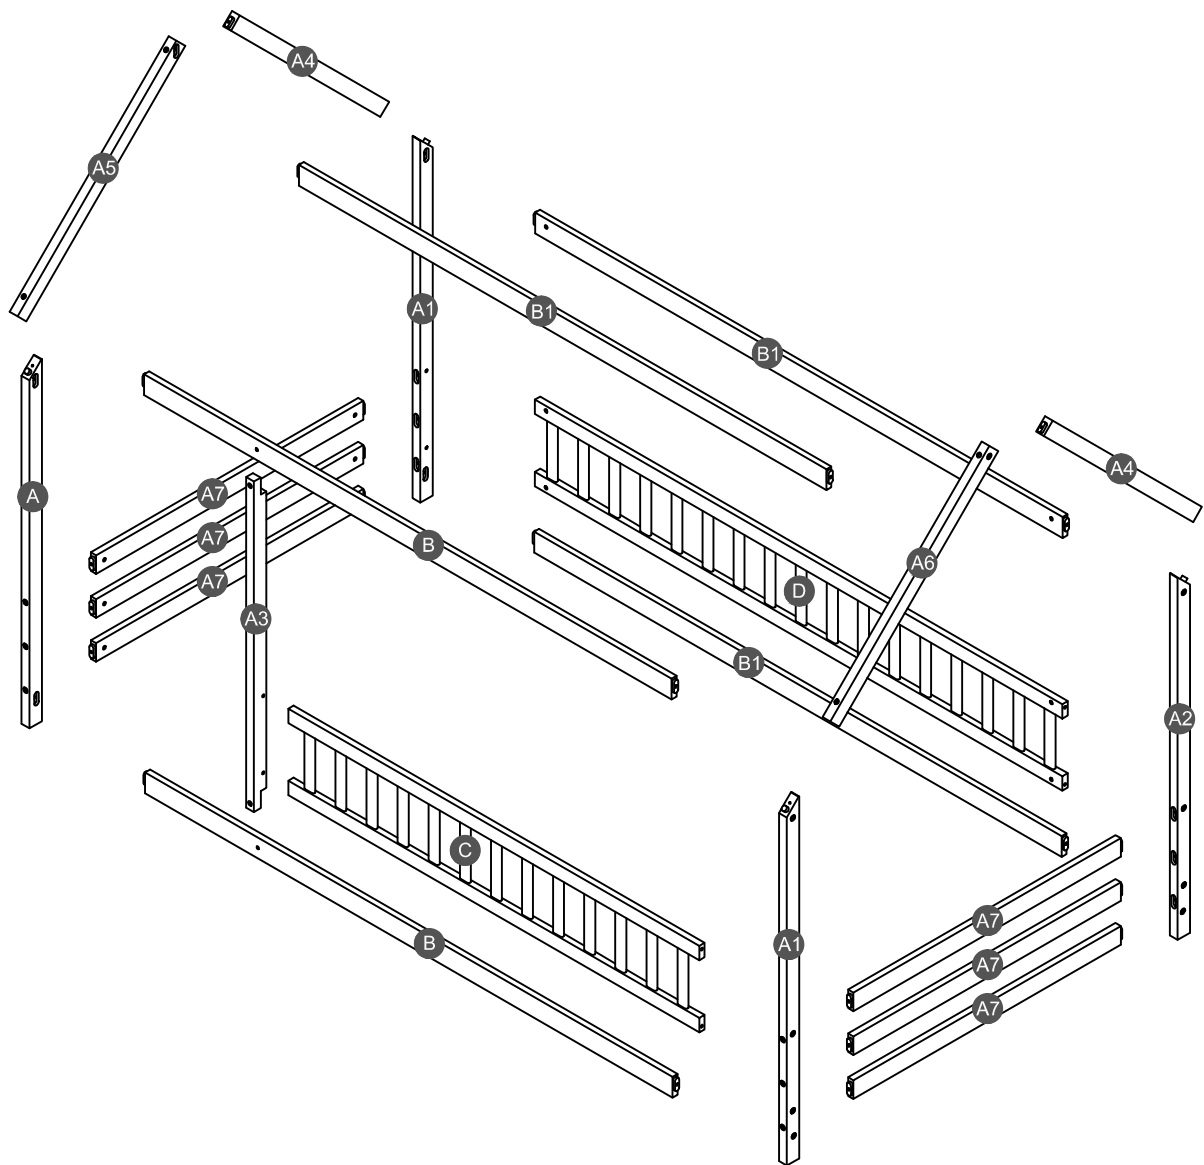
Detail View




Part List

A  Leg (Left front) - 1pc	A1  Leg (Left back/right front) - 2pcs	A2  Leg (Right back) - 1pc
A3  Vertical Guard rail (Front)	A4  Upper (Back) - 2pcs	A5  Upper (Left front) - 1pc
A6  Upper (Right front) - 1pc	A7  Horizontal bar HB/FB - 6pcs	B  Horizontal bar (Front) - 2pcs
B1  Horizontal bar (Back) - 3pcs	C  Guard rail (Front)	D  Guard rail (Back)

Hardware List

1  (Ø15)1/4"*80mm Hex-Head bolts (30pcs)	2  (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	3  (Ø12)1/4"*65mm Wood screw bolts (6pcs)
4  1/4"*15 (9.5mm) Horizontal-Hole bolts (30pcs)	5  (1/4")4.5*58mm Allen key (1pc)	


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

1		3		4	
6PCS		6PCS		6PCS	

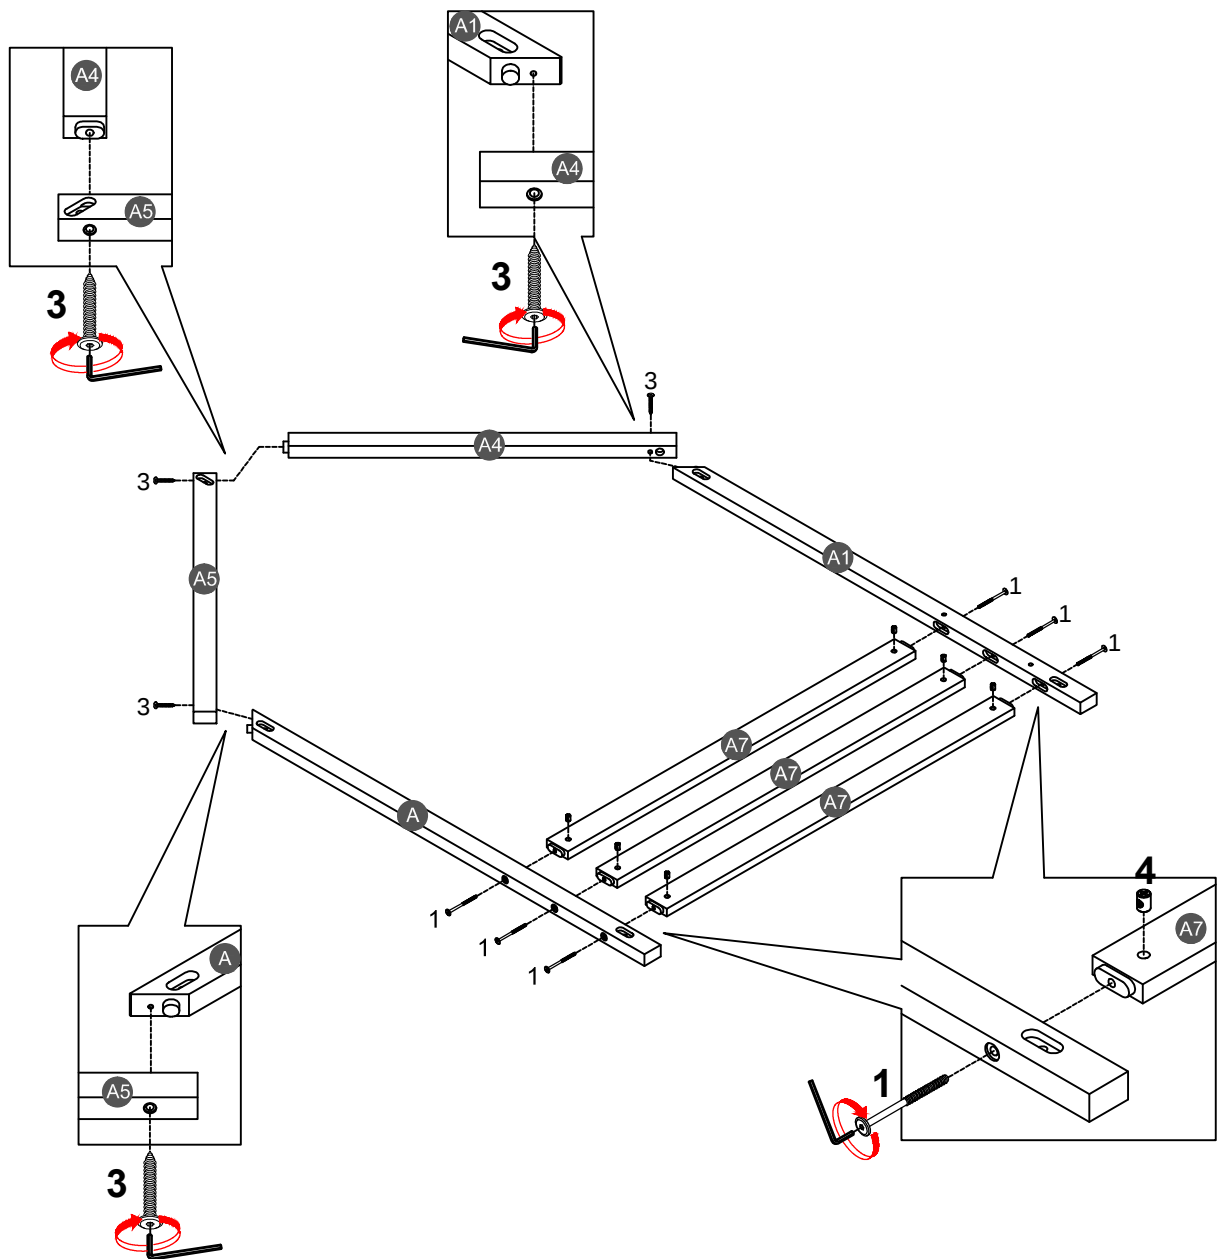


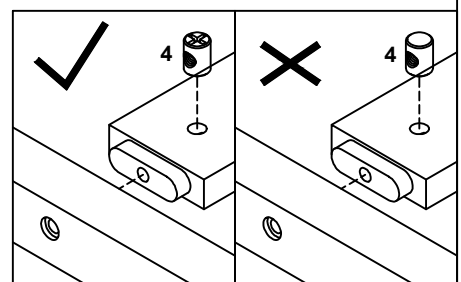Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened



STEP 2:


1		3		4	
6PCS		6PCS		6PCS	

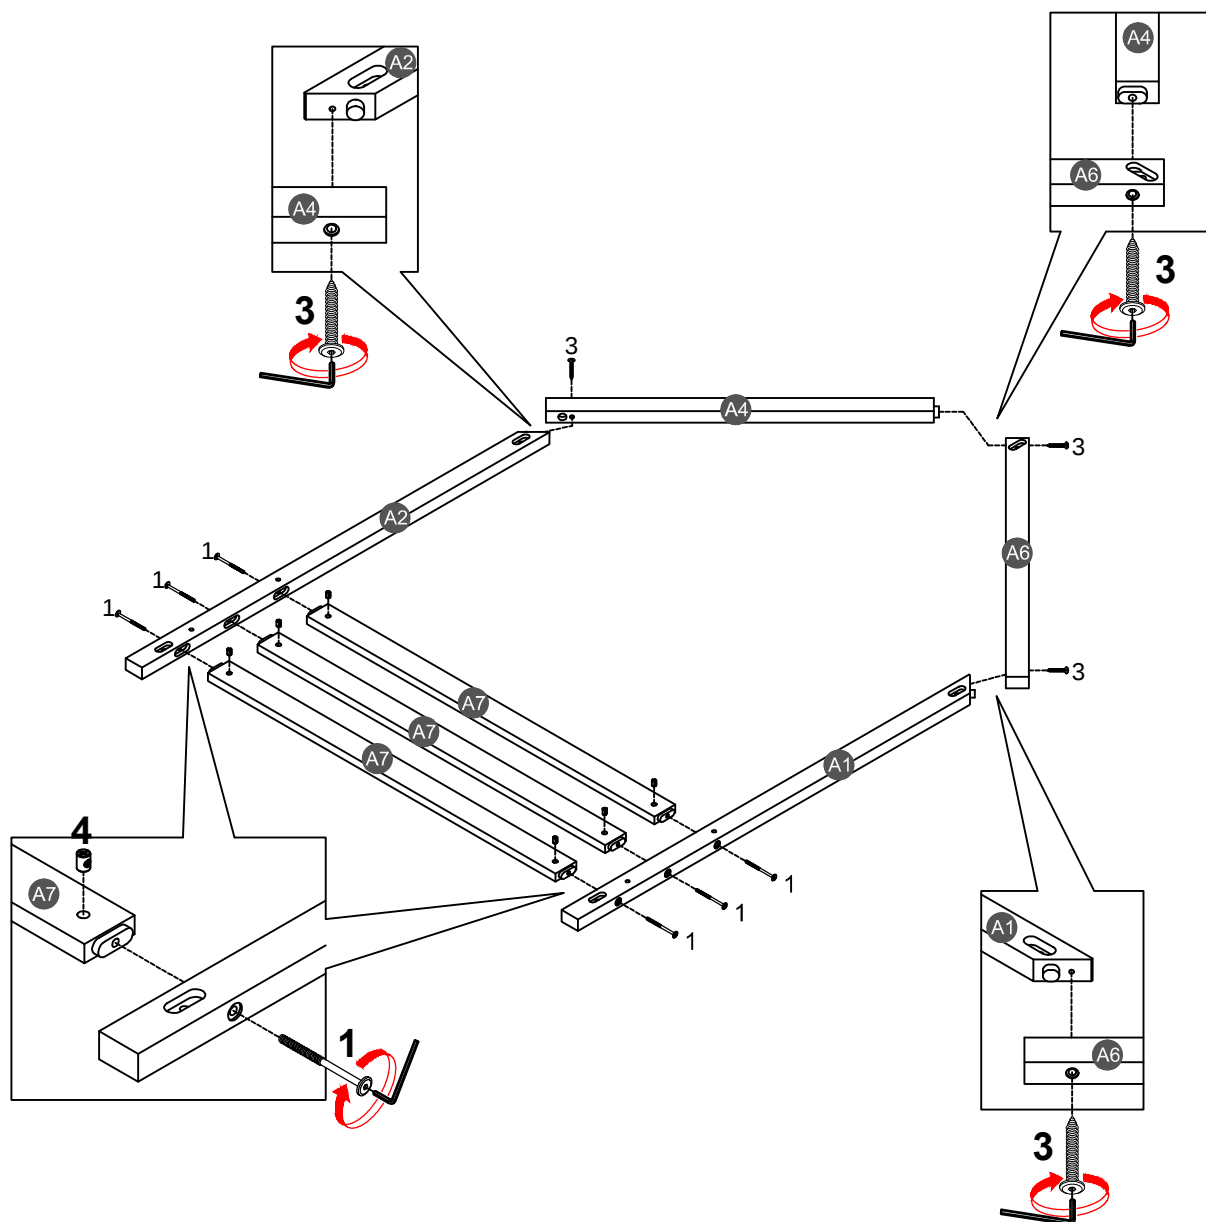

STEP 3:

1	4
	
14PCS	14PCS

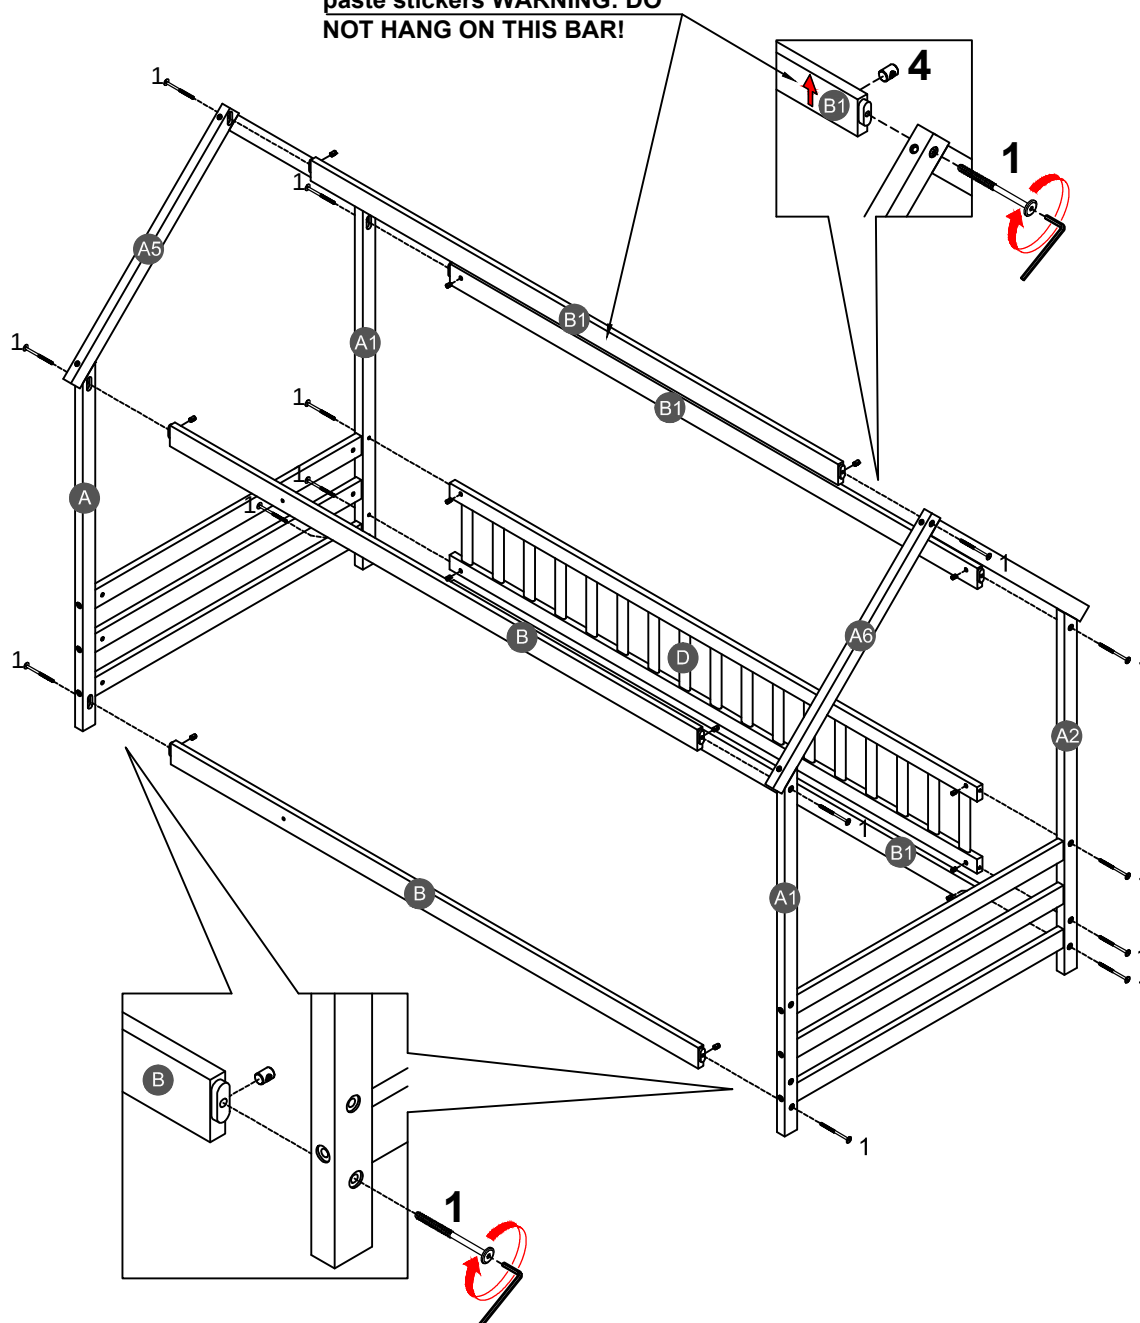**Remark: Upper horizontal
paste stickers WARNING: DO
NOT HANG ON THIS BAR!**



STEP 4:

1		2		4	
4PCS		2PCS		4PCS	

