






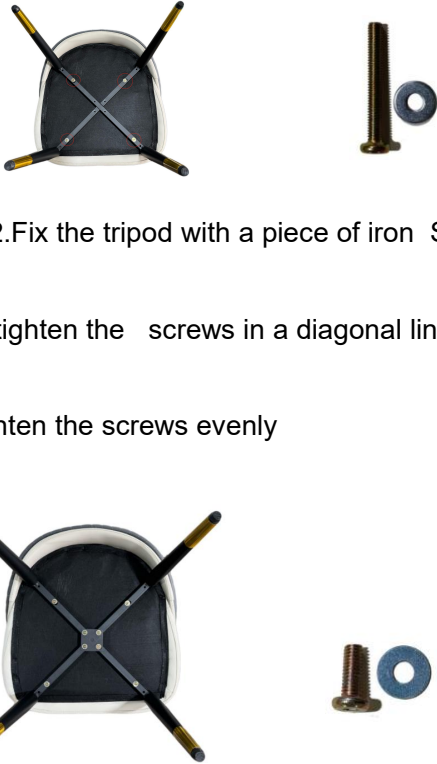



Installation

Hardware List		Hardware List	
 Seat	1	 Support leg	1
 Screws and washer 6*16	4	 Hexagonal screw tap	1
 Screws and washer 6*50	4	 Fixed iron sheet	1
<div>1</div> <div></div> <div>First, the stainless steel foot bayonet is spliced and aligned with the screw hole.</div>		<div>2</div> <div>1.First use the 6*50 screw to align the hole,do not tighten the screws</div> <div></div> <div>2.Fix the tripod with a piece of iron Screws 6*16 ,and tighten the screws in a diagonal line .Be careful to tighten the screws evenly</div> <div></div>	